

Assembly Instructions

Hardware List


6 PCS Machine Bolts(1-1/4")	3 PCS (1-1/4") Flat Head Wood Screws
4 PCS Wood Dowels (ø8x25mm)	8 PCS (3/4") Flat Head Wood Screws
2 PCS Keys For File Drawer Lock	2 PCS Metal Grommet

Parts List

A	PEDESTAL	1 PC	B	PEDESTAL	1 PC	C	BACK PANEL	1 PC
D	CROSS BAR	1 PC	E	DESK TOP	1 PC	F	DROP FRONT CENTER DRAWER	1 PC
G	STRETCHER	1 PC	<p>Notes: Need two people to assemble.</p> <p>IMPORTANT NOTE: Please keep all hardware parts out of the reach of children.</p>					


Instructions:

1. Move the pedestals (A) (B) to the desired location , insert and tighten **machine bolts (1-1/4")**(6 PCS) to connect backpanel (C) and stretcher (G) to the pedestals (A) (B).
2. Using a mallet, carefully insert center Cross Bar (D) to the pedestals (A) (B) , tighten with **(1-1/4") flat head wood screws**(2 PCS).

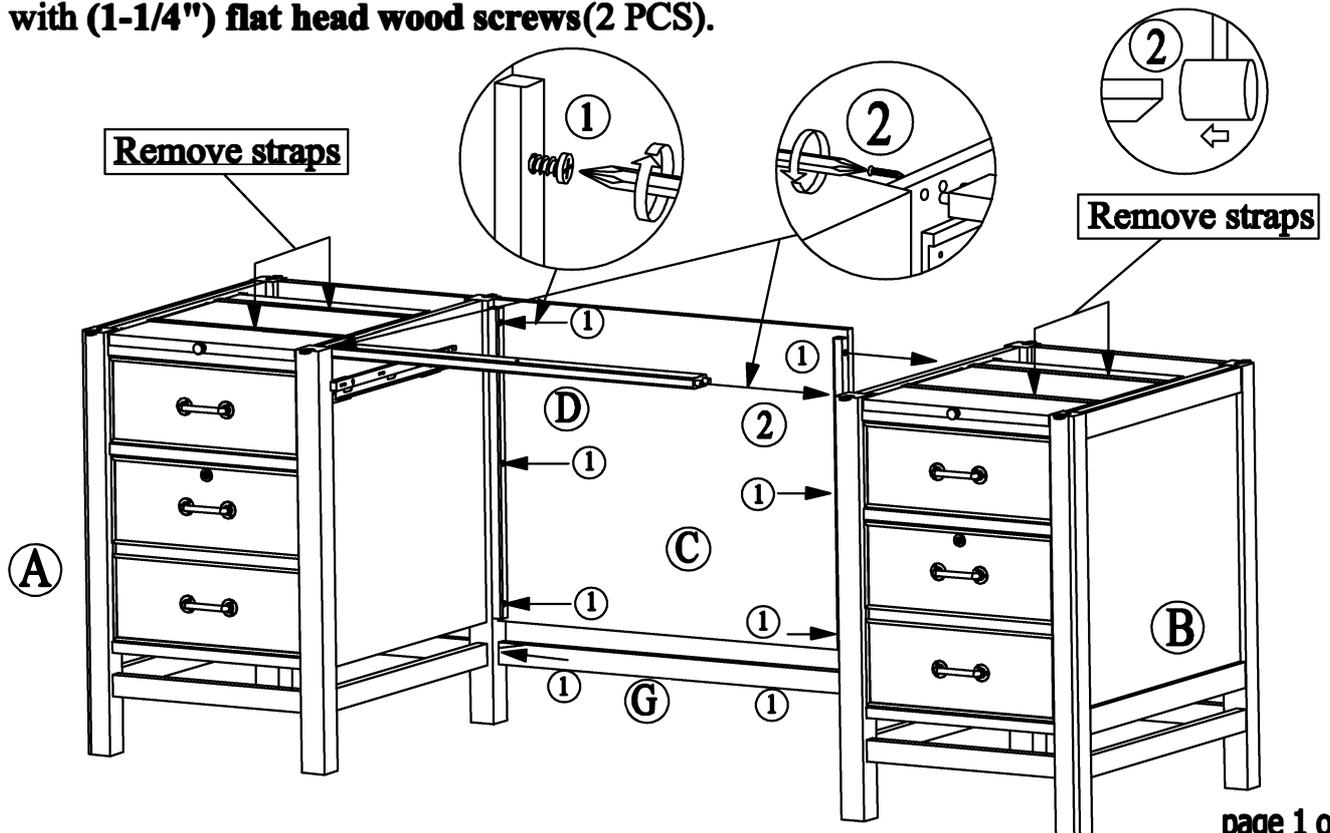


Assembly Instructions

3. Insert two wood dowels (4 PCS) in each pedestal (A) (B).
4. Loosen the screw to adjust metal figure 8 (8 PCS) of its direction of the panel and re-screw

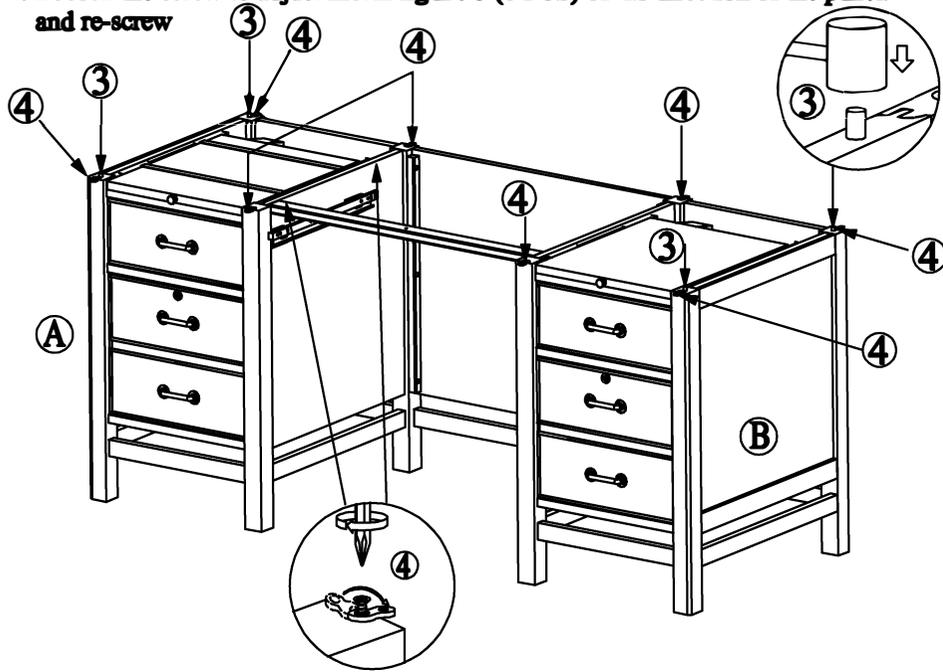

5. Insert (3/4") flat head wood screws (8 PCS) through metal figure 8 to connect desk top (E) and pedestals.
6. Use (1-1/4") flat head wood screws (1 PC) to connect cross bar (D) to desk top (E).

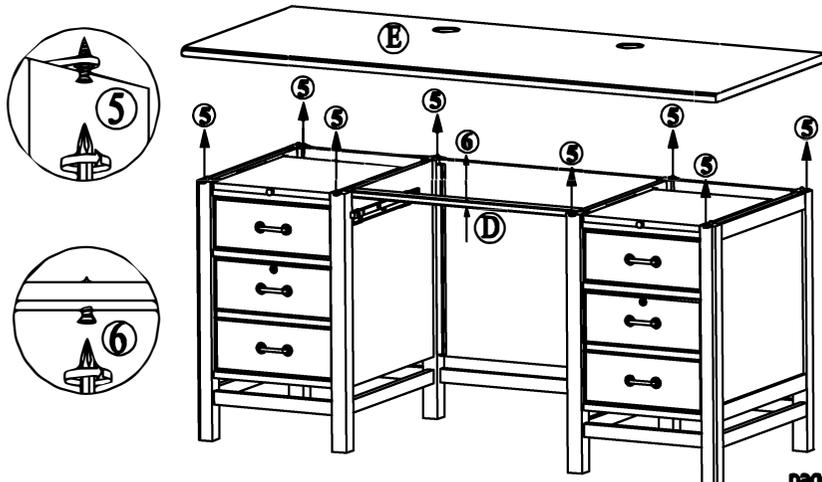


Assembly Instructions

7. Install the Drop Front center Drawer (F) to place.

Important:

(Be sure to move the ball bearing retainer all the way to the front of the glide and carefully slide the rails into the glides and ball bearing retainer.)

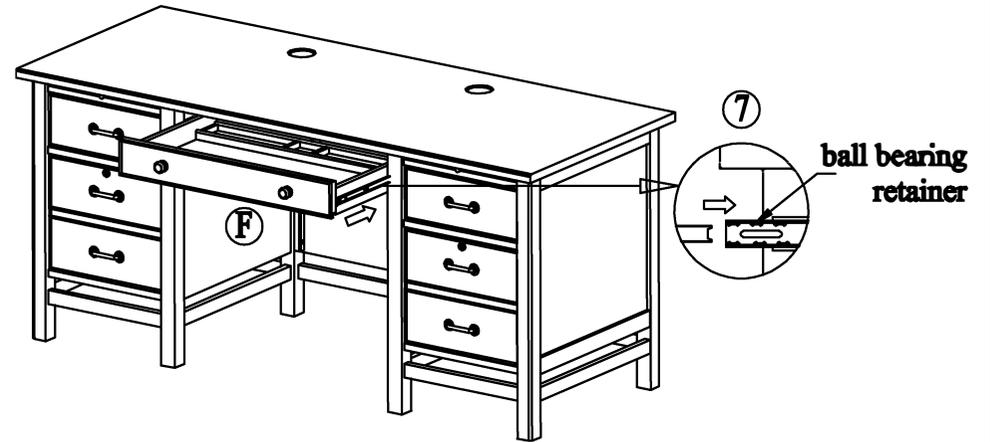

Assembly is now complete.