

Metal Garage


OWNER'S MANUAL /

Instructions for Assembly

Size 12 Ft x 20 Ft / 3.7 Mtr. x 6.1 Mtr. with

12 Ft x 6 Ft / 3.7 Mtr. x 1.8 Mtr. (Approx.) “ Extension Kits”

Ver: 3.0

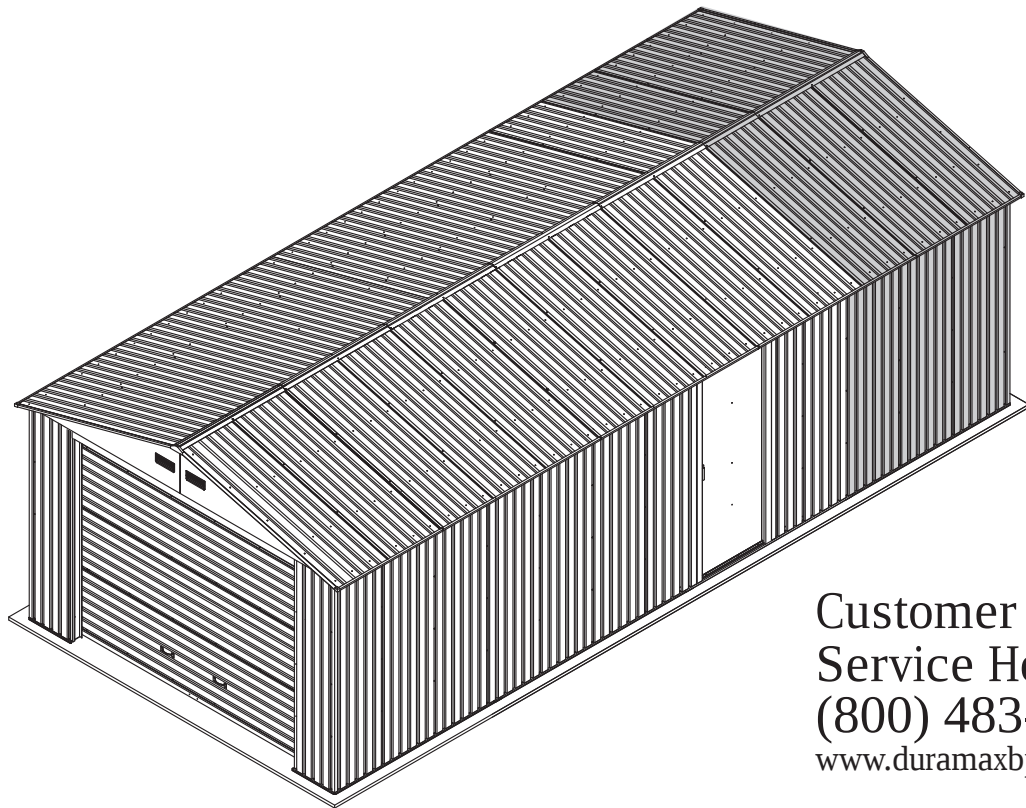

Customer
Service Hotline
(800) 483-4674
www.duramaxbp.com

- Tall Walk in Garages
- Quick and Easy Assembly
- Ridge Reinforced Walls
- Wide Single Front Shutter Door

PART 1

ASSEMBLING GARAGE WITH EXTENSION KIT

PART 2

ADDING EXTENSION KIT TO EXISTING GARAGE

Call us for any missing or damaged parts.
Do not return to the store.

Building Dimensions :

Building Dimensions :									
Approximate Size	Storage		Exterior Dimension				Interior Dimension		
	Area	Volume	Base Dimension		Roof Edge to Edge		Wall to Wall		
12 Ft x 6 Ft	62 7/8 Sq. Ft.	438 1/8 Cu.Ft.	inch		cm.		inch	cm.	
			Width	138 1/8	350	145	368.2	127 1/2	324
3.7 Mtr. x 1.8 Mtr.	5.8 Sq.Mtr.	12.4 Cu.Mtr.	Depth	71	180	71	180.2	71	180
			Height			102	259	83 5/8	212 .5

Note - Basic Garage dimensions are available in basic garage manual.

Duramax Garages Limited Ten Year Warranty

U.S. Polymer Inc. will send a replacement part free of charge, in the event of material defects and or workmanship for a period of ten years from the date of purchase.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of date of original purchase will be required before warranty service is rendered. In no event shall we pay the cost of flooring, labor, installation or any other costs related thereto.

This warranty only covers failures due to defects in material or workmanship which occurs during normal use and does not extend to color change arising due to normal weathering or to damage resulting from misuse or neglect, commercial use, failure to follow assembly instructions and the owner's manual (including proper anchoring of the shed), painting, forces of nature and other causes which is beyond our control.

Claims under this warranty must be made within the warranty period by calling 1-800-483-4674 or mail in a dated sales slip and clear photograph of the part to:

U.S. Polymers, Inc.
1057 S.Vail Ave Montebello,
CA 90640

We reserve the right to discontinue or change components. If a component has been discontinued or is not available,
U.S. Polymers, Inc. reserves the right to substitute a component of equal quality as may be compatible.

Limits and Exclusions

There are no express warranties except as listed above. The warrantor shall not be liable for incidental or consequential damages resulting from the use of this product, or arising out of any breach of this warranty. All express warranties are limited to the warranty period set forth above. Some states do not allow the exclusion or limitation on how long an implied warranty lasts, so the above limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or country to country.

IMPORTANT: USE HAND GLOVES TO PREVENT INJURY.

Parts List



Note: Check all parts prior to installation.

ITEM	CODE	QTY.
1	BC01	4
2	BC02	2
3	BC03	1
4	BC04	1
5	BC05	2
6	FS01	4
7	FS02	4
8	FS03	12
9	FS04	4
10	FS05	4
11	FS06	4
12	FS07	8
13	FS08	4
14	FS09	2
15	FS10	2
16	FS11	6
17	CS01	2
18	CS02	2
19	CS03	2
20	CS04	4
21	CS05	1
22	CS08	1
23	CS10	2
24	CS11	1
25	CS12	1
26	RS01	11
27	RS02	1
28	RS03	4
29	RS04	4
30	RS05	4
31	WS01	2
32	WS02	2
33	WS03	4
34	WS04	2
35	WS05	3
36	WS06	1
37	WS07	1
38	WS08	2
39	WS09	2
40	DF04	1
41	DF05	1
42	DF06	1
43	DF07	1
44	DS01	1
45	DS02	1
46	DS03	4
47	SD01	1
48	SD02	1
49	SD04	1
50	SD05	1
51	SD06	3
52	RF01	4
53	RF02	4
54	RF03	4
55	RF04	3
56	RF05	1
57	RF06	1
58	BS02	16
59	BS08	8
60	CS06	2
61	CS07	2
62	CS09	4

ITEM	CODE	QTY.
63	CS13	2
64	CS14	2
65	DF01	1
66	DF02	1
67	DF03	1
68	SD03	1
69	BS01	2
70	BS05	2
71	BS06	2
72	BS07	2
73	DP01	1
74	GP01	2
75	GP02	2
76	BS12	1
77	BS13	1
78	BS14	4
79	BS15	2
80	BS16	2
81	WP01	17
82	WP02	2
83	WP03	1
84	WP04	1
85	WP05	3
86	WP06	1
87	WP07	1
88	WP08	1
89	RP01	2
90	RP02	12
91	RP03	2
92	RP04	2
93	RP05	2
94	SP01	2
95	SP02	1
96	SP03	1
97	CP01	4
98	CP02	4
99	CP03	2
100	BS17	1

Tools You Will Need

Hand Gloves	8' Step Ladder
Cordless Drill - Philips Head	Adjustable pliers
Screw driver - Philips Head	Level - 3ft.
Carpenter's Square	Tape Measure
Eye Protector	
Plumb Line	


Note - Use screwdriver to separate out Nested profiles

IMPORTANT: USE HAND GLOVES TO PREVENT INJURY.


ACCESSORIES

ITEM	CODE	QTY.
1	BS	3
2	DH	3
3	TC	4
4	TS	2
5	FC	2
6	VC	4
7	PW	7 Slabs
8	PC	7 Slabs
9	WST	8 Mtr
10	S1	677
11	S2	369
12	S3	272
13	S8	27
14	S9	30
15	S14	32
16	STC	5.1Mtr
17	CU	2
18	DCBFP	2
19	FDH	2
20	GW	3
21	CW	5.0kg
22	DF08	1
23	DF09	1
24	DF10	1
25	BS18	1
26	F1	27
27	WBA	10
28	EDP1 (4.28 mtr.)	2
29	EDP2 (2.04 mtr.)	2
30	EDP3 (2.14 mtr.)	2

ACCESSORIES

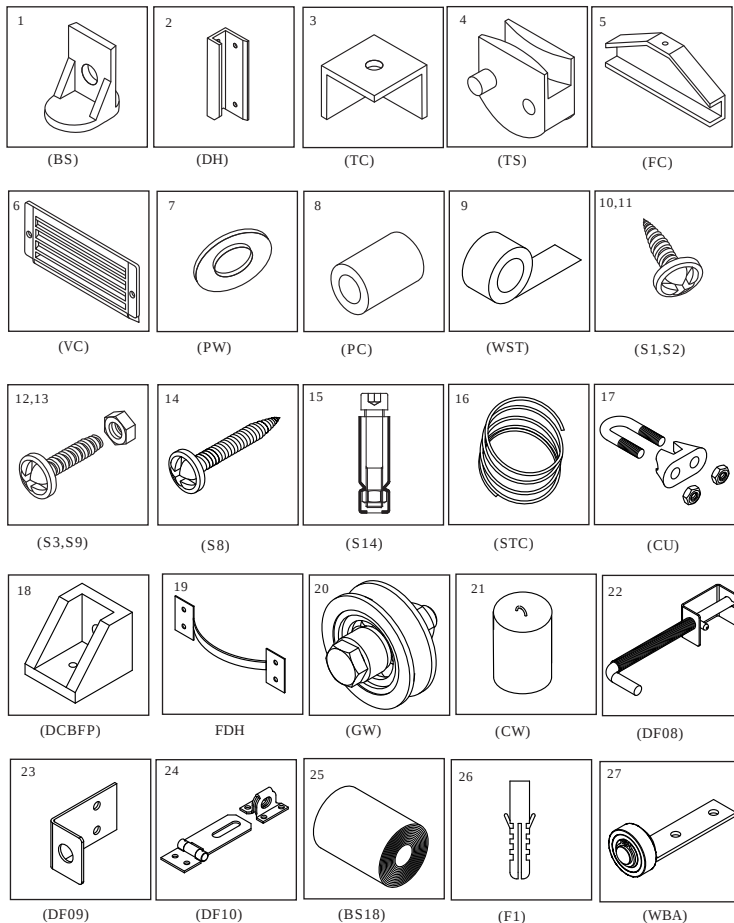


PROFILES

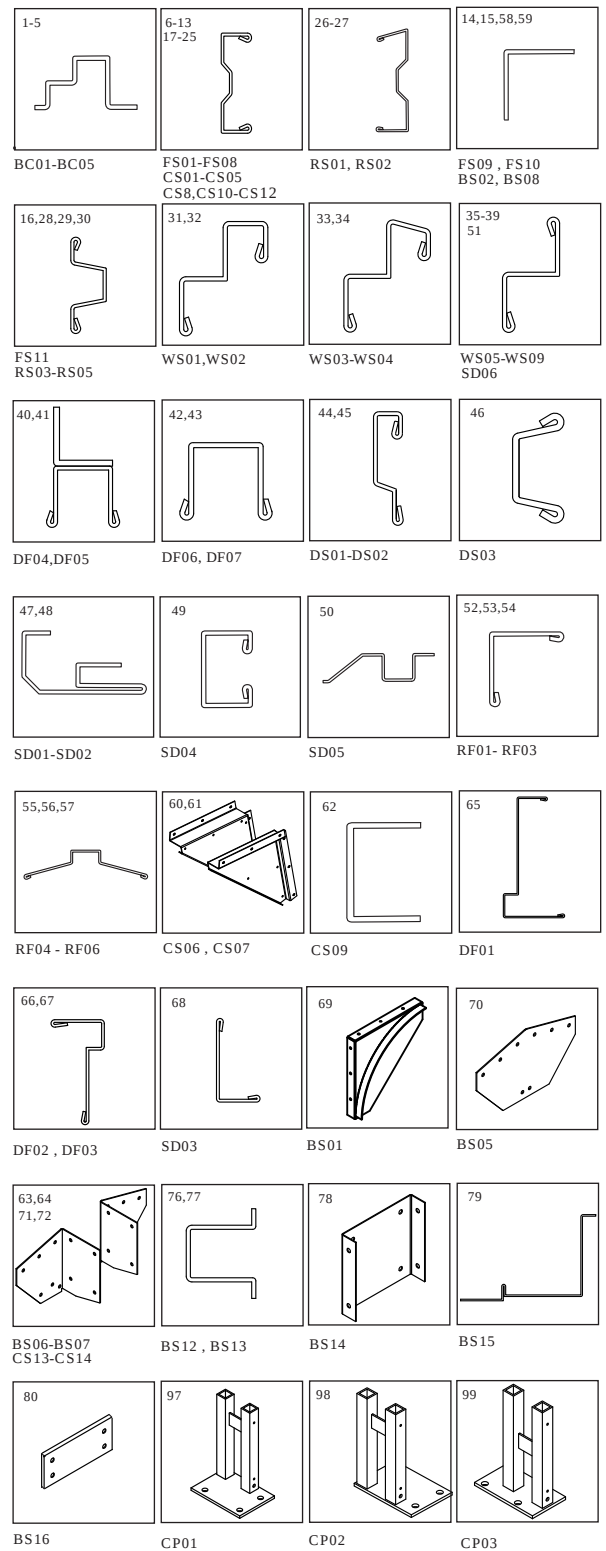

Note - Use screws with plastic washers on top of pre-painted surface only.

IMPORTANT: USE HAND GLOVES TO PREVENT INJURY.

One Extension Parts List




Note: Check all parts prior to installation.

ITEM	CODE	QTY.
1	EBC01	1
2	EBC02	1
3	CS01	2
4	CS02	2
5	CS03	2
6	CS04	4
7	CS05	1
8	CS08	1
9	CS10	2
10	CS11	1
11	CS12	1
12	ERS01	6
13	RS03	1
14	RS05	2
15	EWS01	1
16	EWS02	1
17	EWS03	1
18	EWS04	1
19	RF02	2
20	RF04	1
21	ERF04	1
22	BS02	8
23	CS06	2
24	CS07	2
25	CS09	4
26	CS13	2
27	CS14	2
28	WP01	6
29	RP02	3
30	RP06	3
31	CP03	2


ACCESSORIES

ITEM	CODE	QTY
1	S14	8
2	F1	6
3	PW	2 Slabs
4	PC	1 Slab
5	WST	2.5 Meter
6	S1	169
7	S2	128
8	S3	72
9	S8	6
10	S9	6

PROFILES

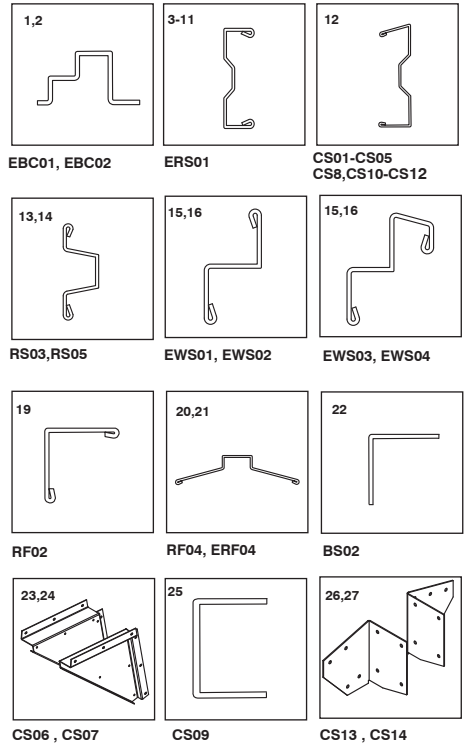

ACCESSORIES

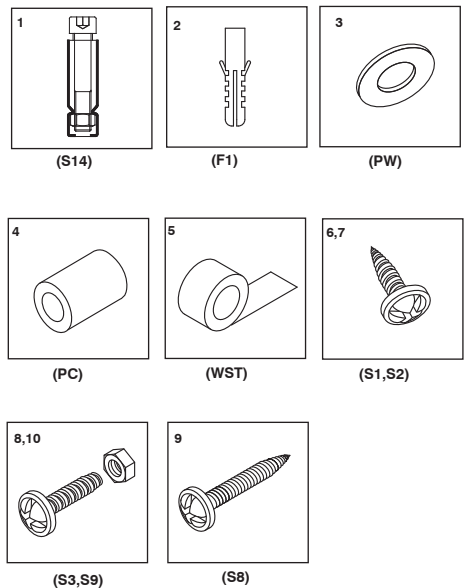

Note - Use screws with plastic washers on top of prepainted surface only.

IMPORTANT: USE HAND GLOVES TO PREVENT INJURY.


PART 1 : Assembling Garage with Extension Kit

A. Foundation, Column Stands & Base Channel

Note: It is important that these instructions are followed step by step.

Concrete Platform

The garage must be constructed on a solid base foundation. A concrete pad or a large size concrete patio stone squares is recommended for suitable floor base. Make sure it is firm and level and will allow drainage away from the site. The base foundation should be at least 4 inches(100mm)larger than the garage dimensions. Please refer to the front page of your owner's manual for the exterior dimensions of the garage. Manufacturer is not responsible for the choice and construction of the foundation

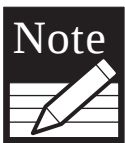

For a concrete pad base, prepare a level bed for a firm footing layer of crushed stone. The concrete pad should then be poured to a thickness of 4 inches (100mm) to 5 inches (125mm). Allow to dry thoroughly for at least 48 hours

Step - 1

Anchor Bolt Holes for Column Support



Use 12mm Concrete drill bit.

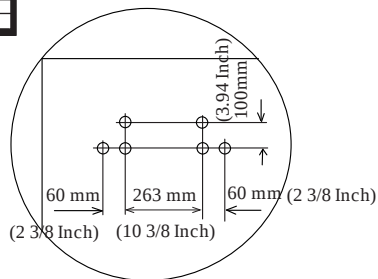


Fig.1

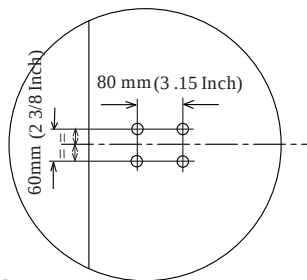


Fig.2

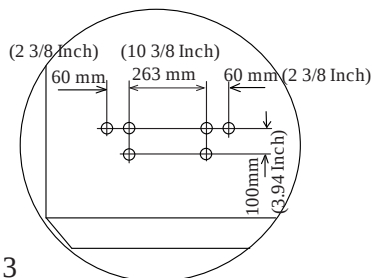


Fig.3


Parts Needed:

Code	Qty
BC01	4
BC02	2
BC03	1
BC04	1
BC05	2
CP01	4
CP02	4
CP03	2
S1	28
S8	27
S14	32
F1	27

Parts Needed for each extension:

Code	Qty
EBC01	1
EBC02	1
CP03	2
S1	8
S8	6
S14	8
F1	6

Back Side

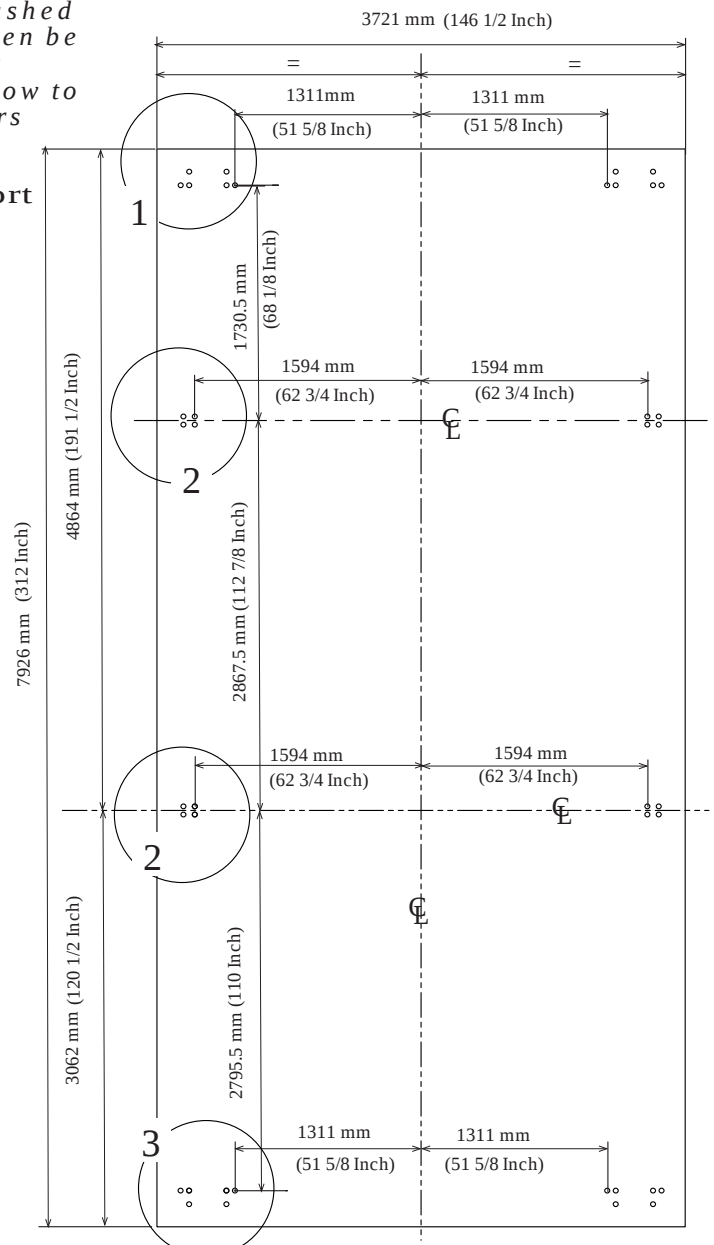

Front Side


IMPORTANT: USE HAND GLOVES TO PREVENT INJURY.

Step - 2

PVC Wall Plug Holes for Base Channel



Use 6 mm Concrete drill bit.

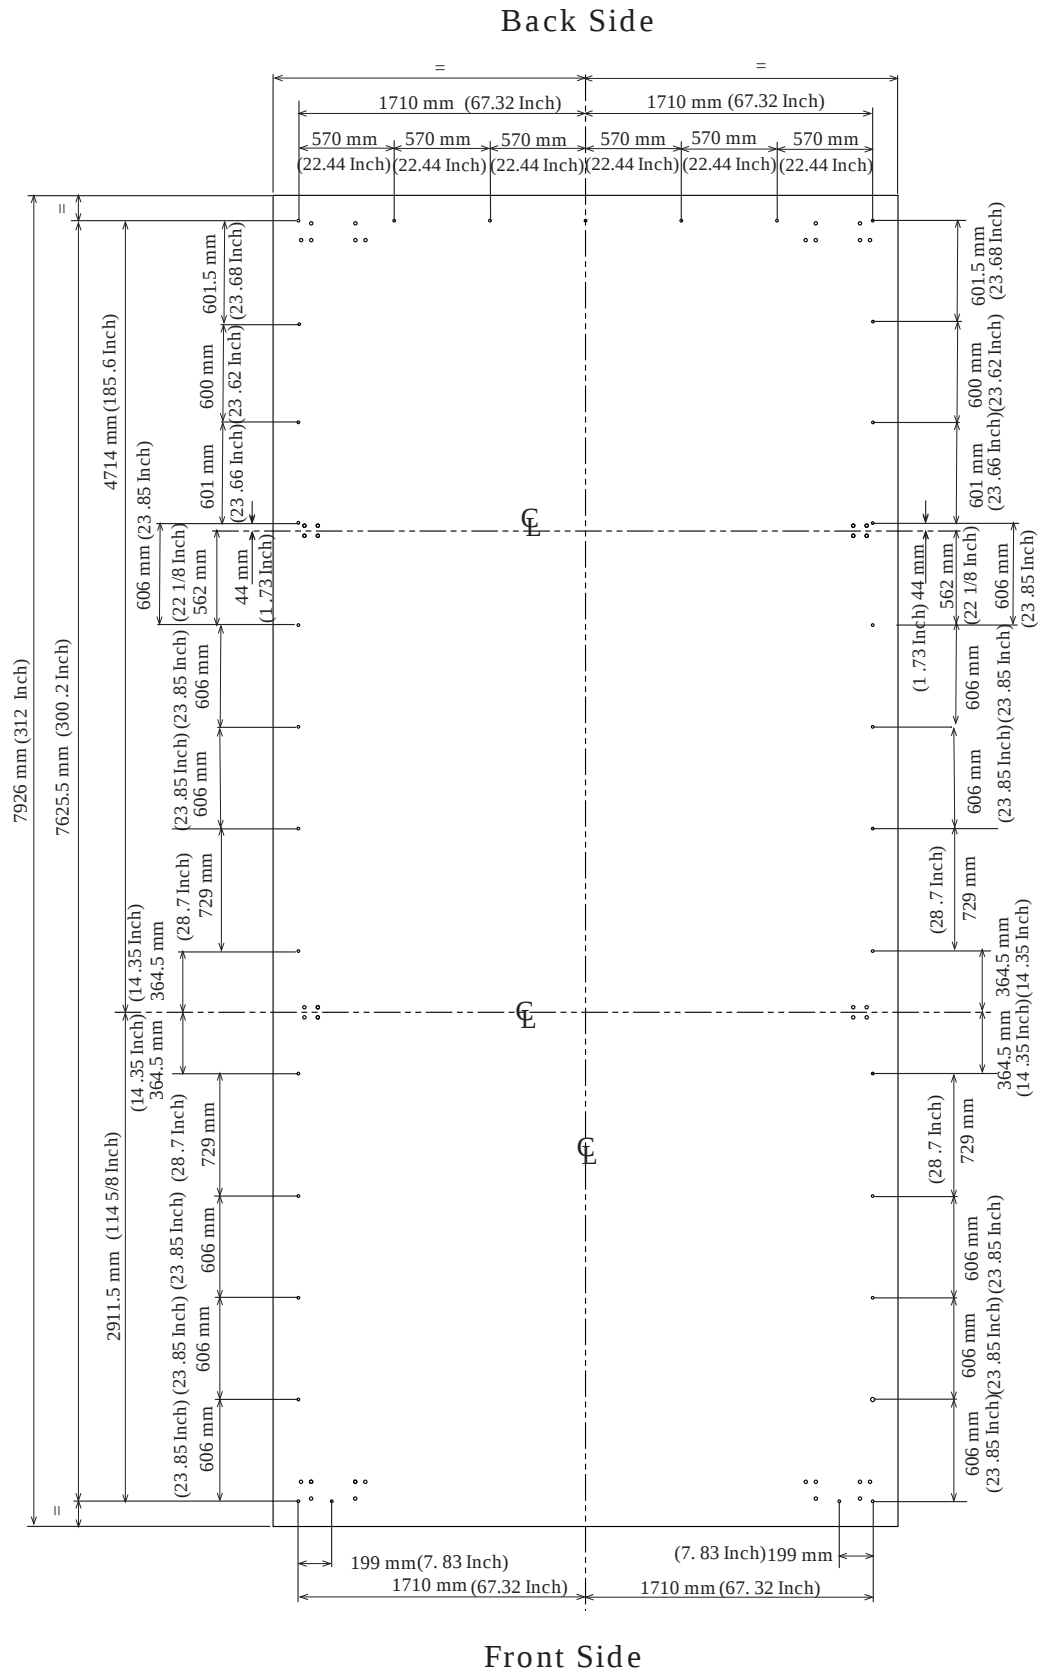

3

Details see Page1&2.




Front Side

Details see Page1&2.




IMPORTANT: USE HAND GLOVES TO PREVENT INJURY.


Step - 3

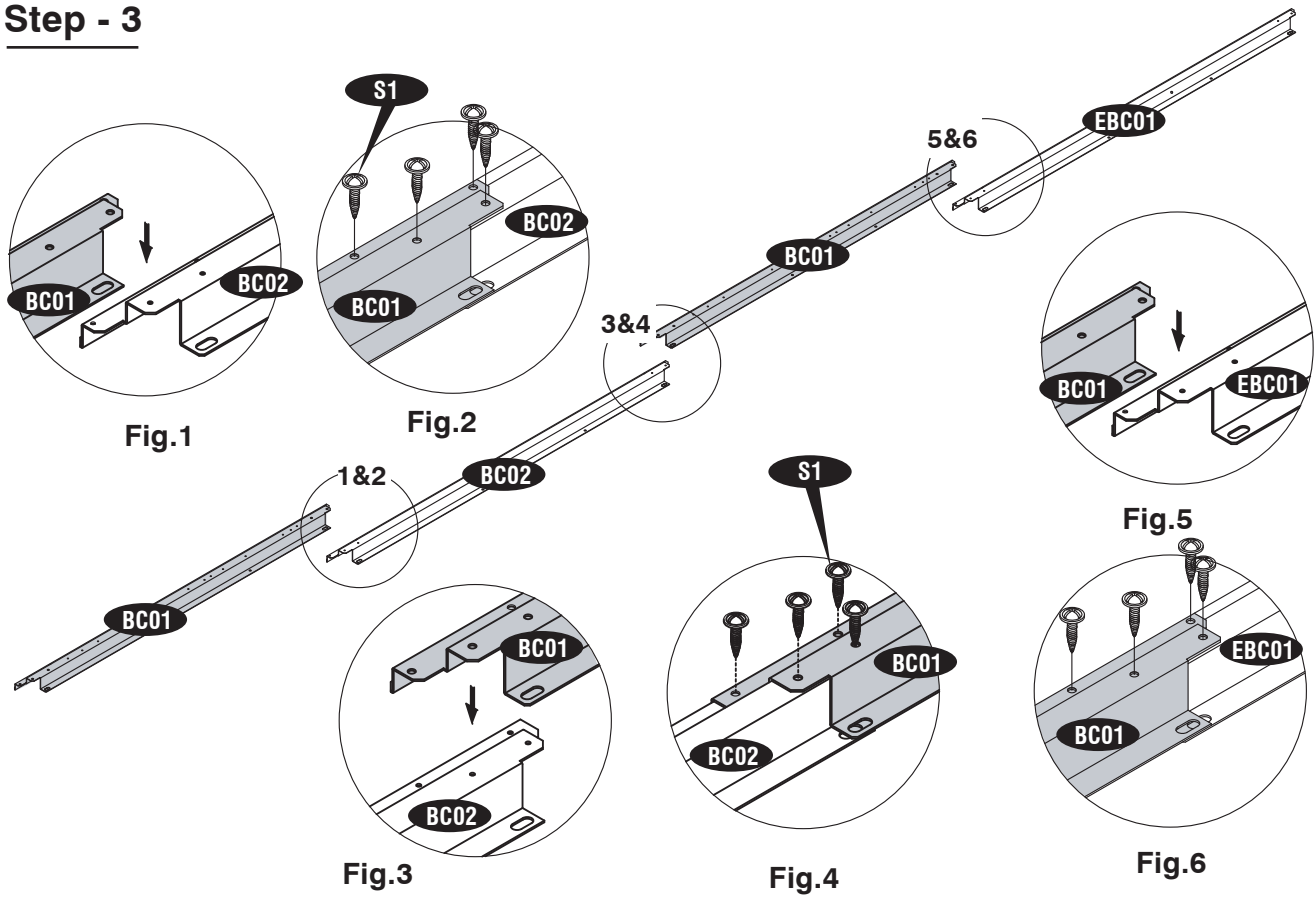


Step - 4

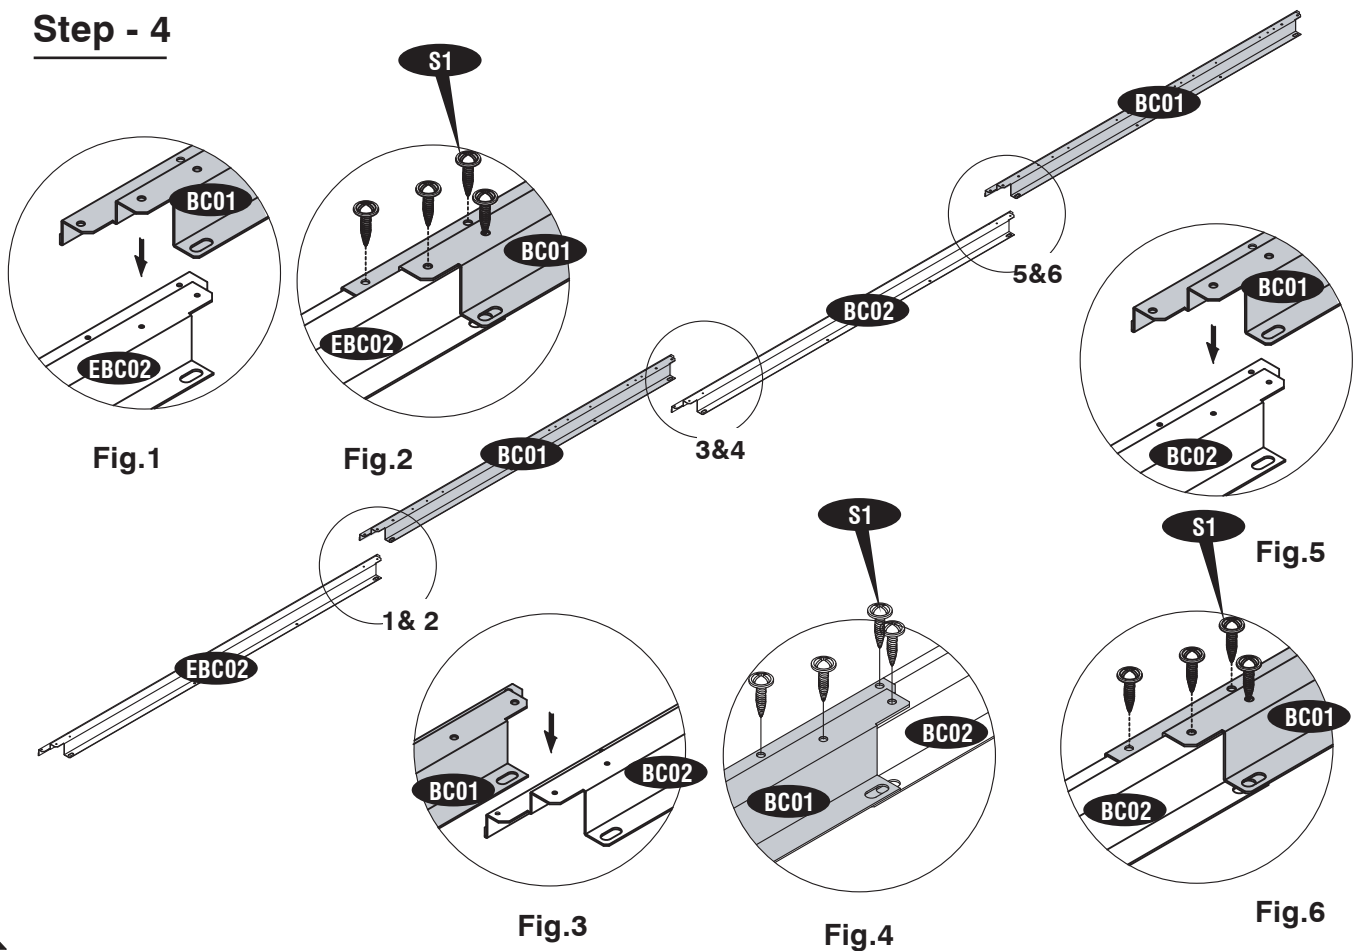


Step - 5

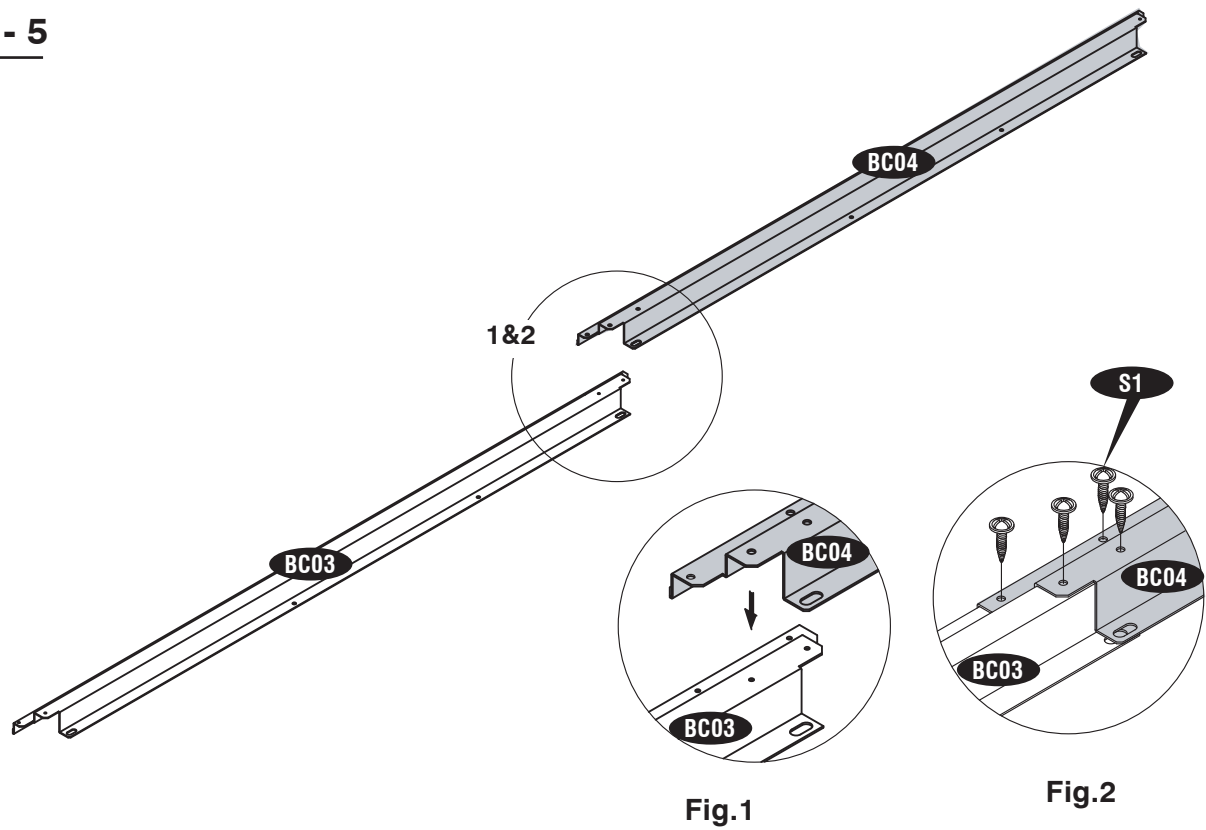


Step - 6

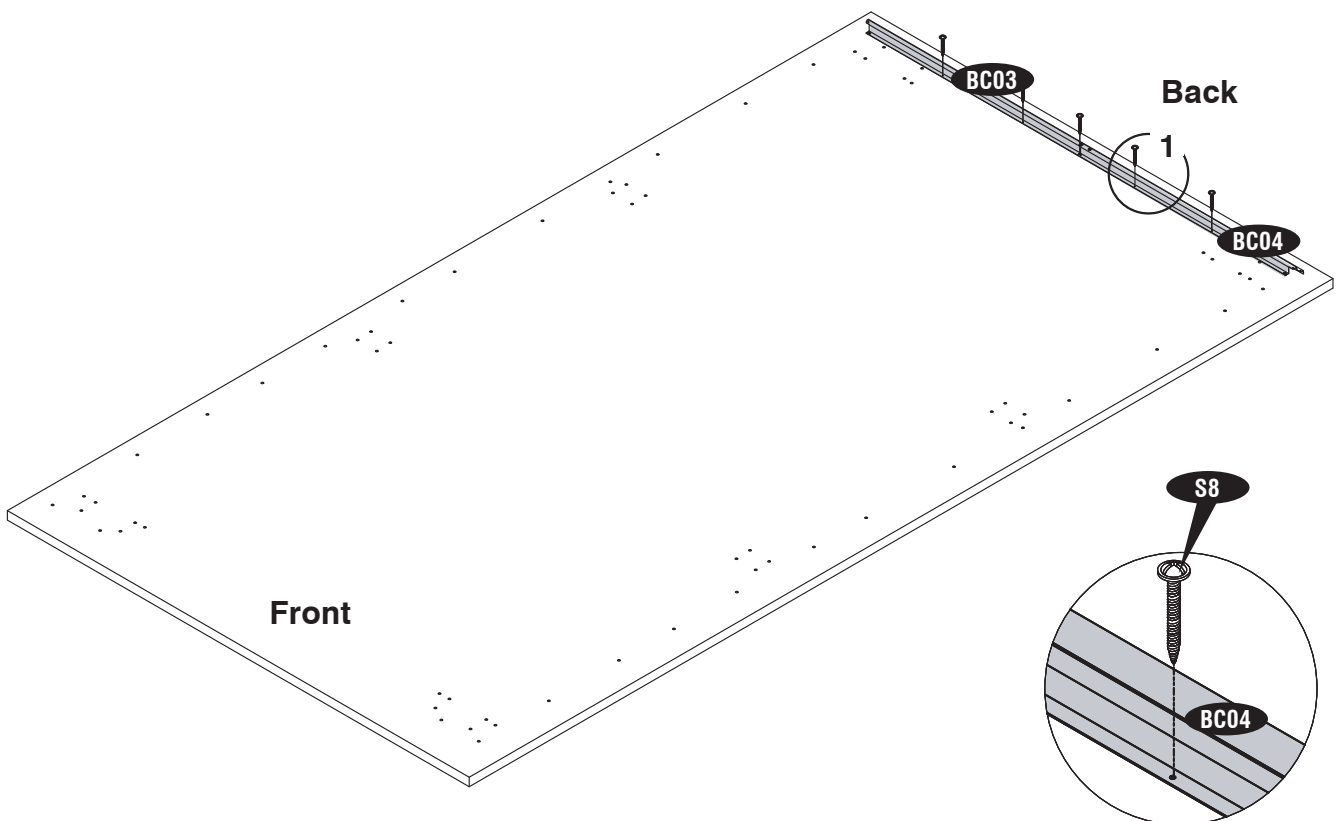


Step - 7

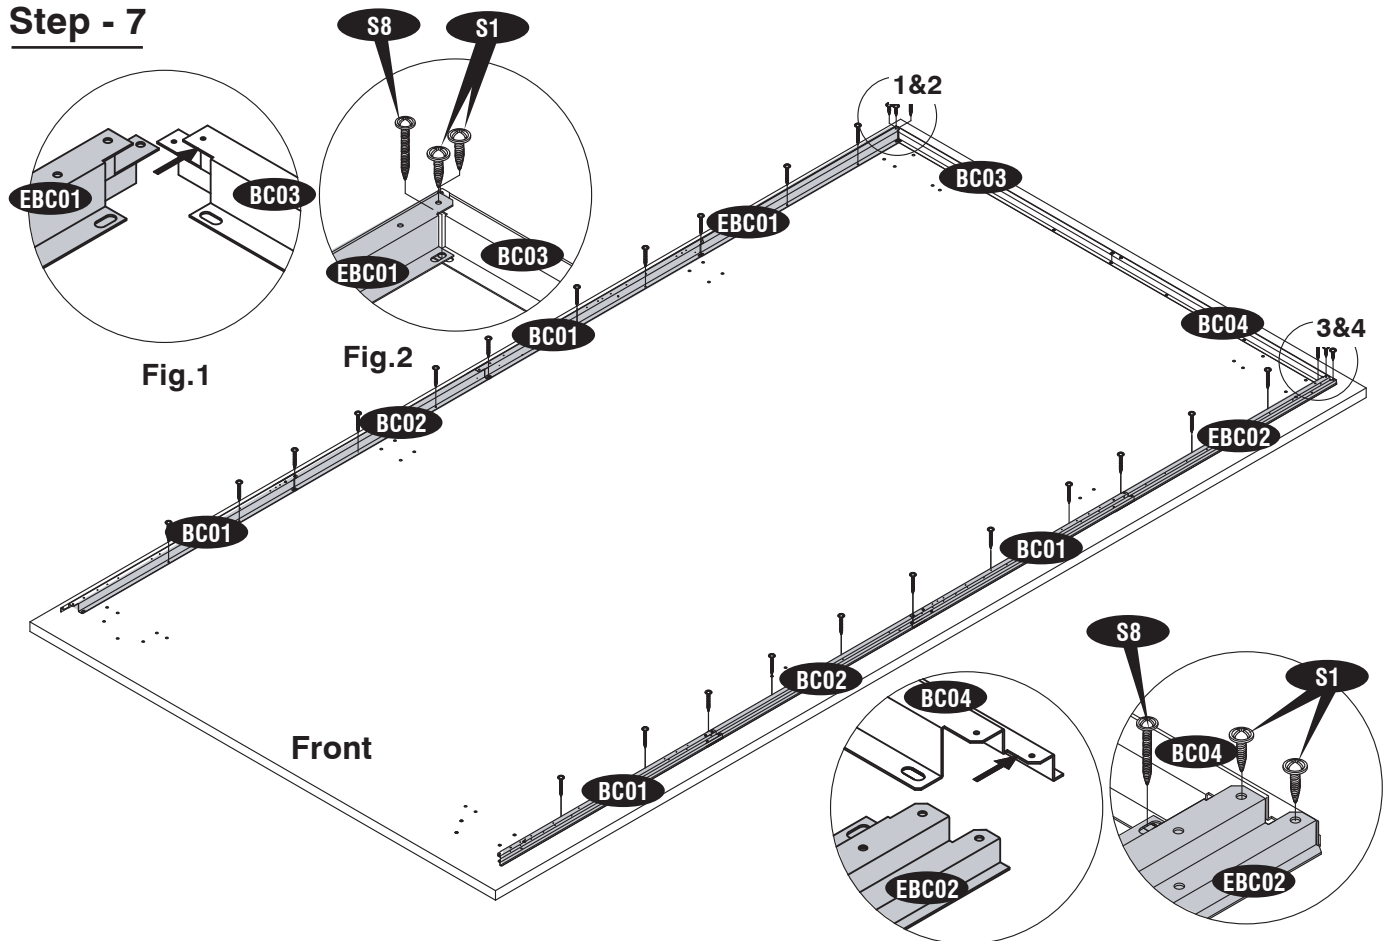

Step - 8

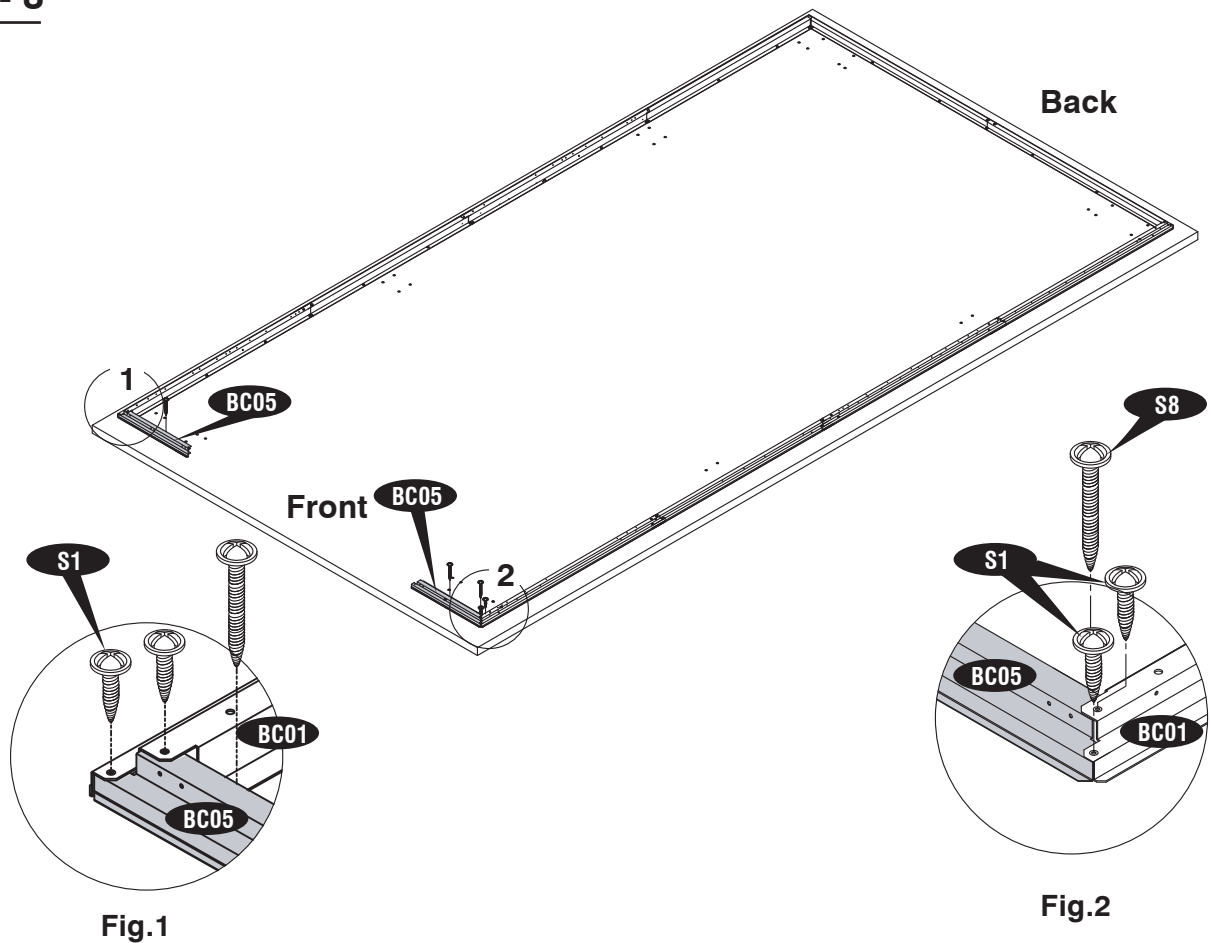


Step - 9

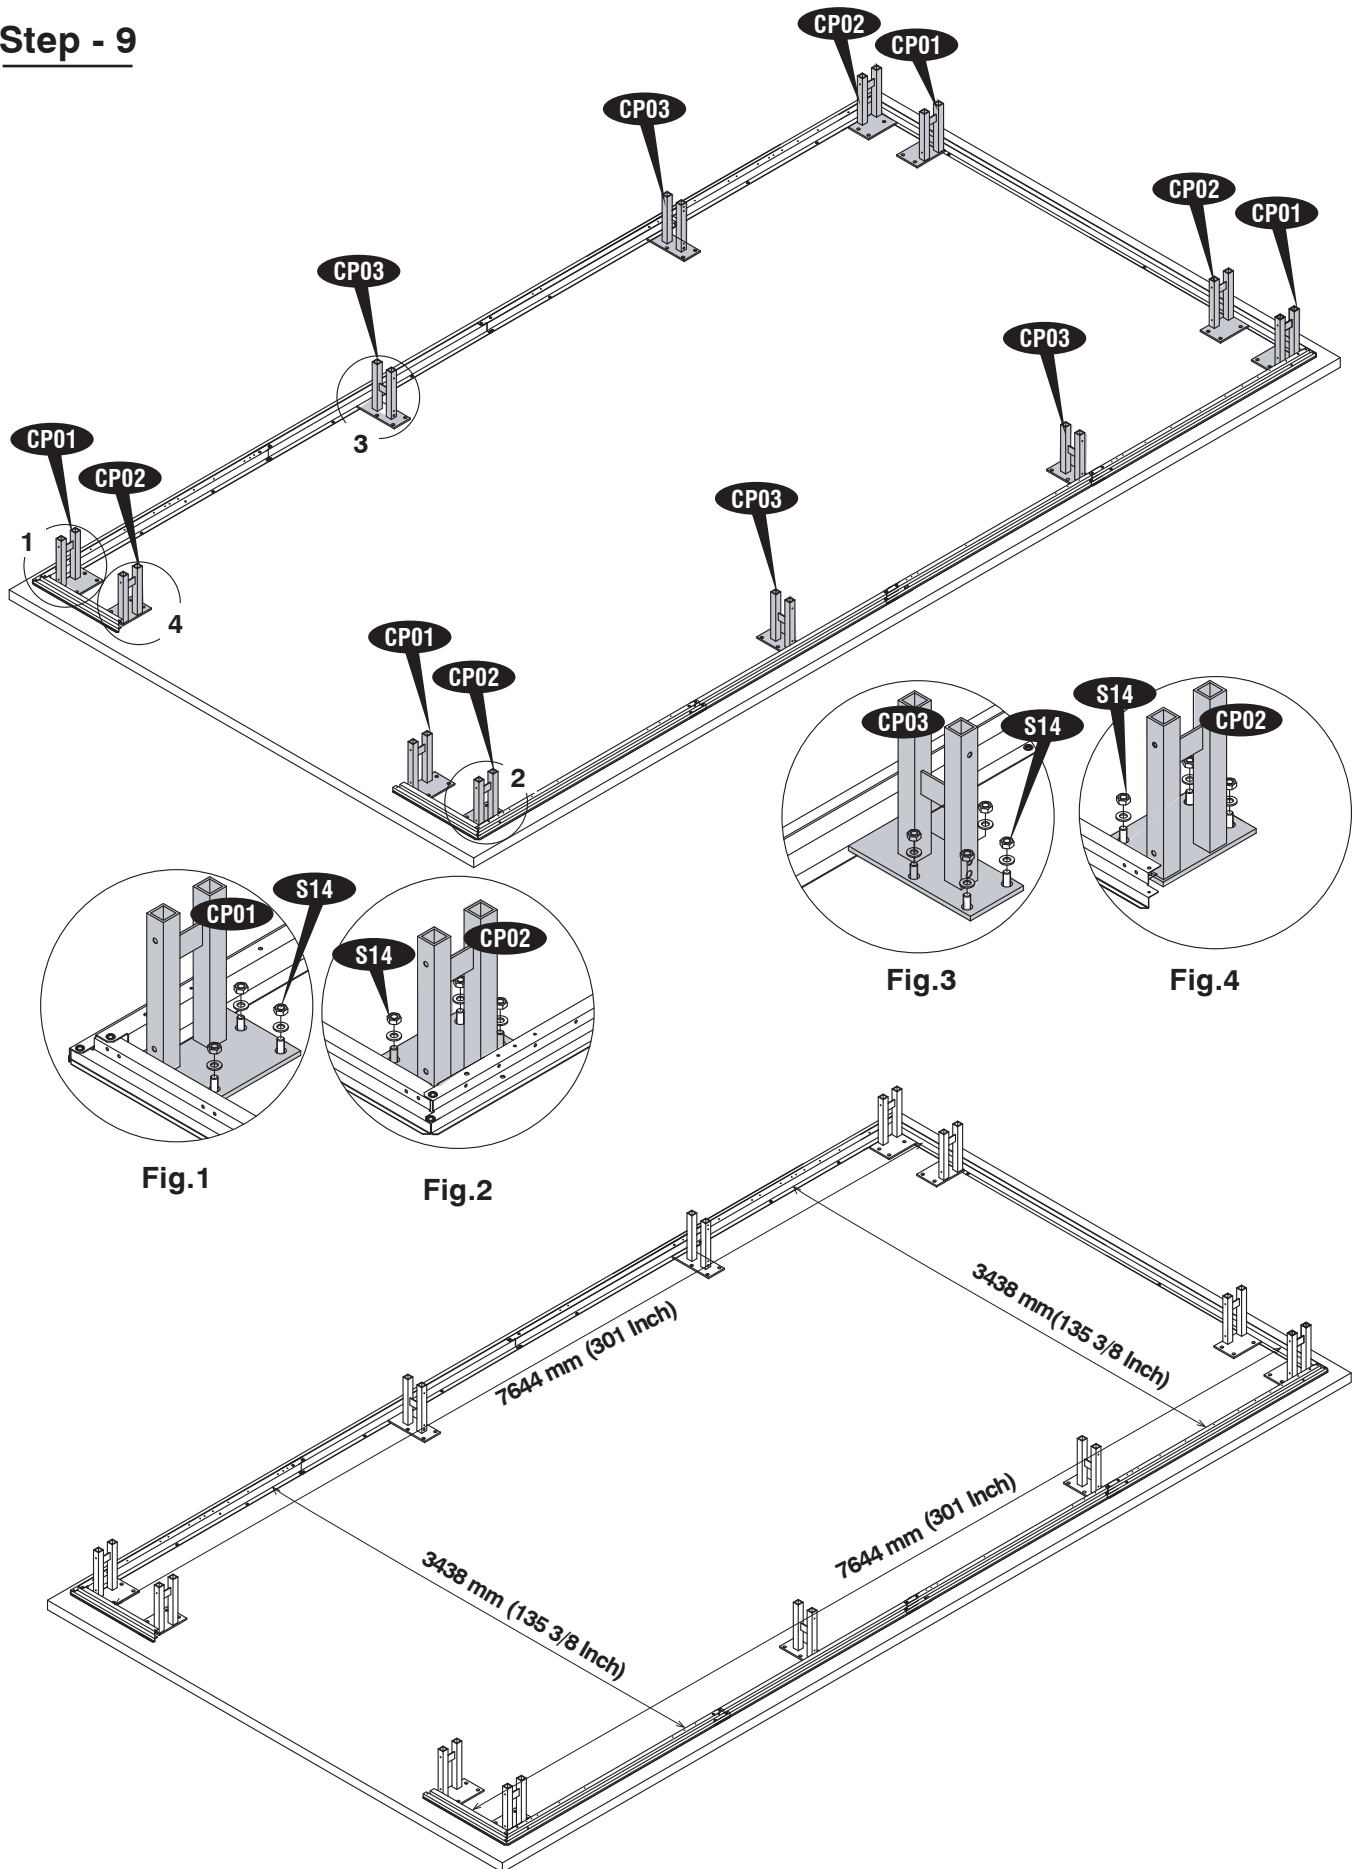

B. Front & Back Structure Assembly


Parts Needed:

Code	Qty	Code	Qty
FS01	4	DF04	1
FS02	4	DF05	1
FS03	12	BS01	2
FS04	4	BS02	8
FS05	4	BS05	2
FS06	4	BS06	2
FS07	8	BS07	2
FS08	4	BS08	8
FS09	2	BS14	4
FS10	2	WS01	2
FS11	6	WS02	2
DF01	1	WS08	2
		WS09	2
		BS18	1
		S1	97
		S2	199
		S3	6
		PW	5

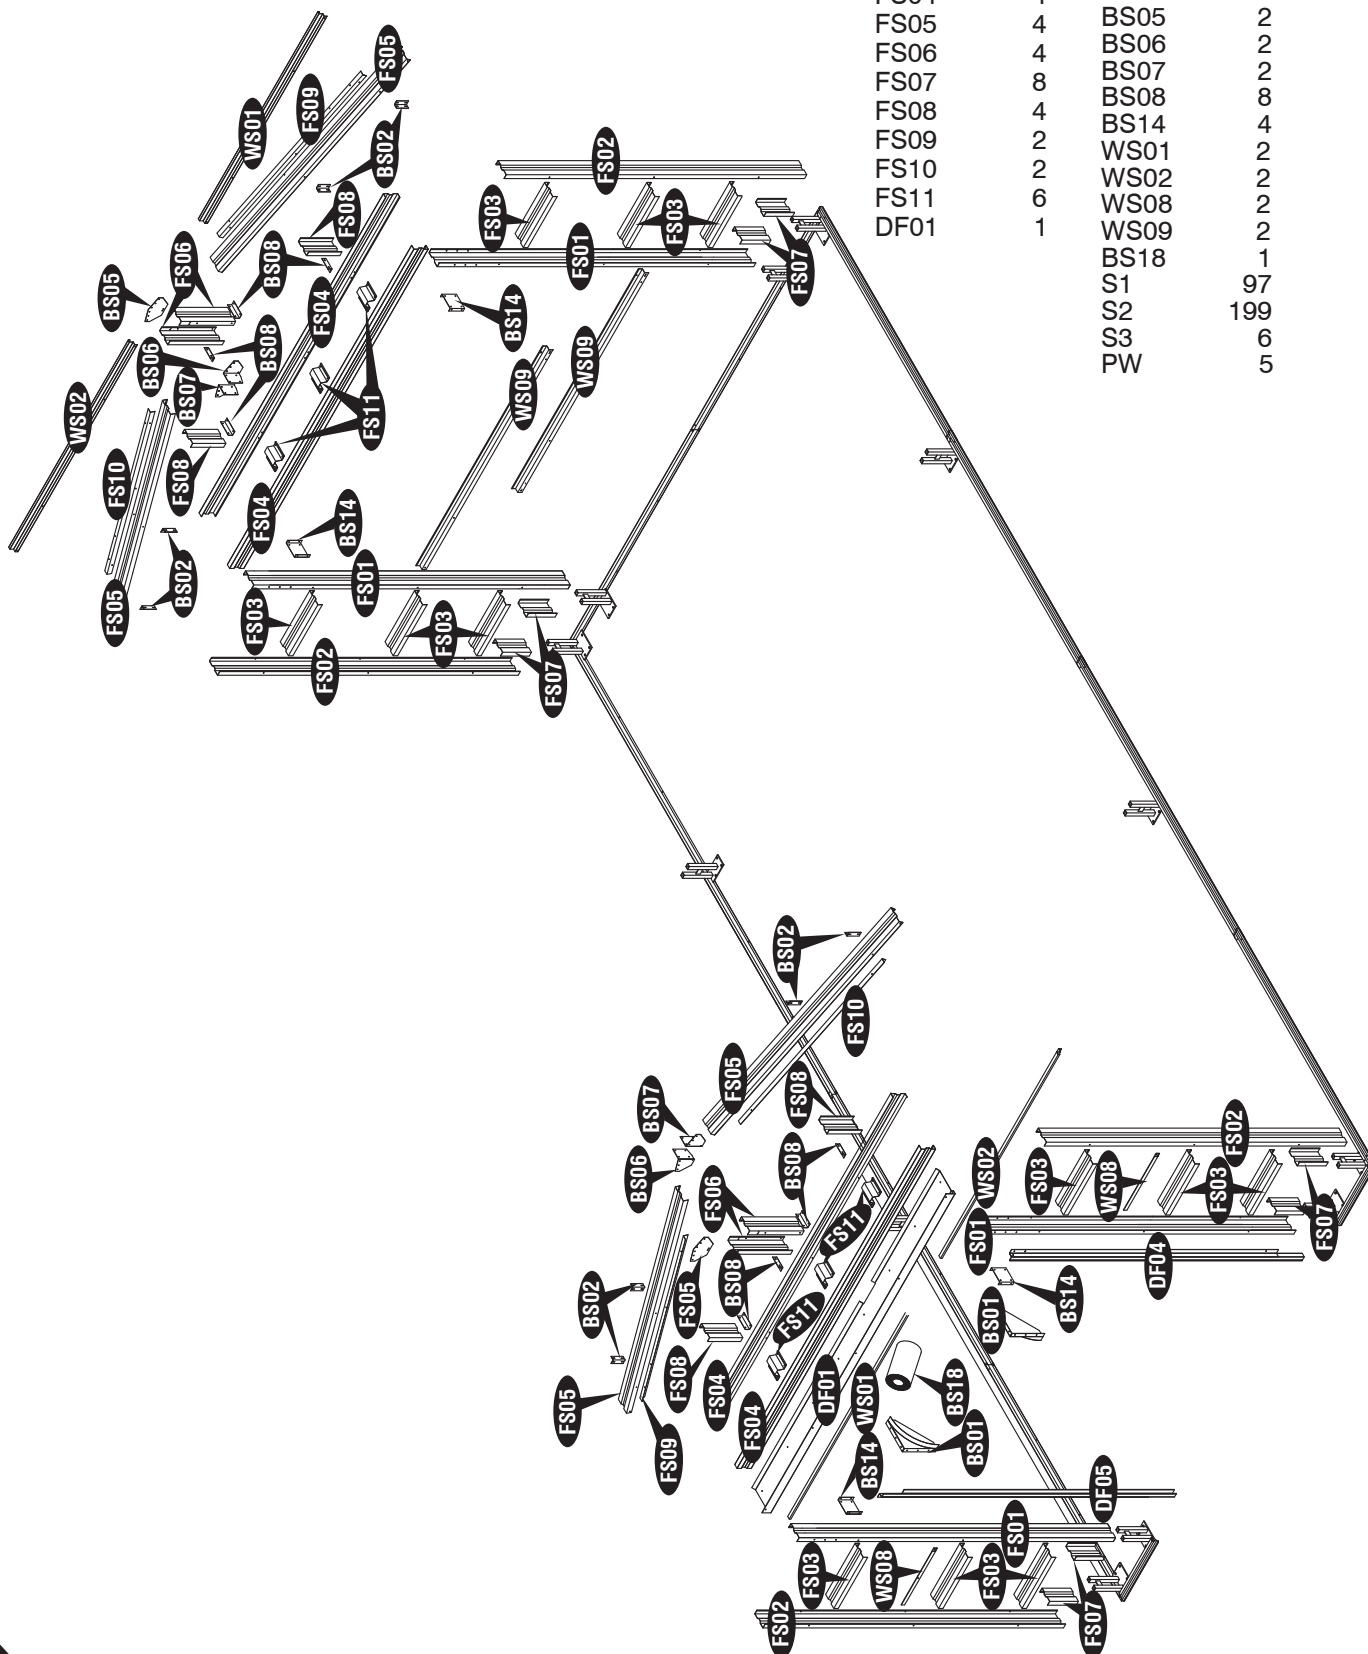


IMPORTANT: USE HAND GLOVES TO PREVENT INJURY.

Step - 1

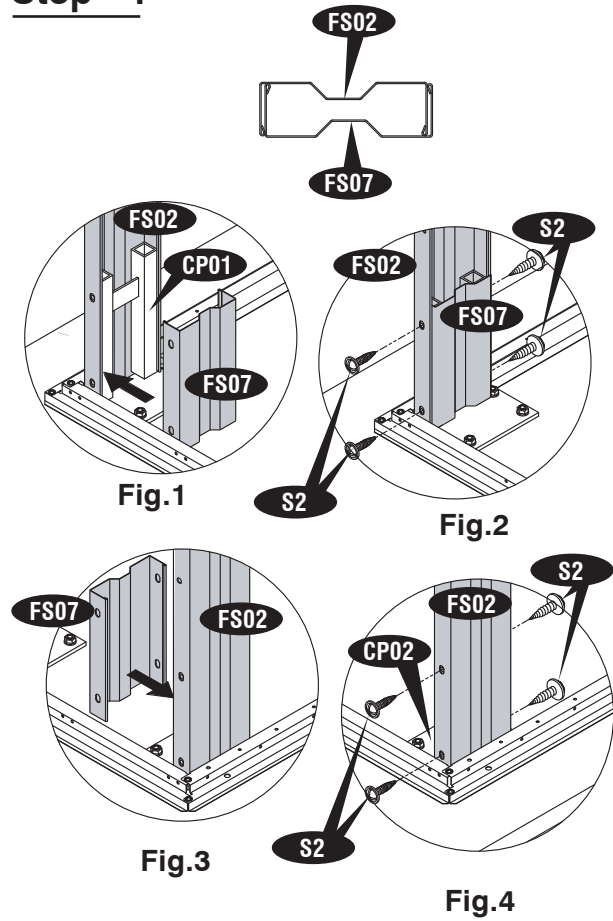

Step - 2

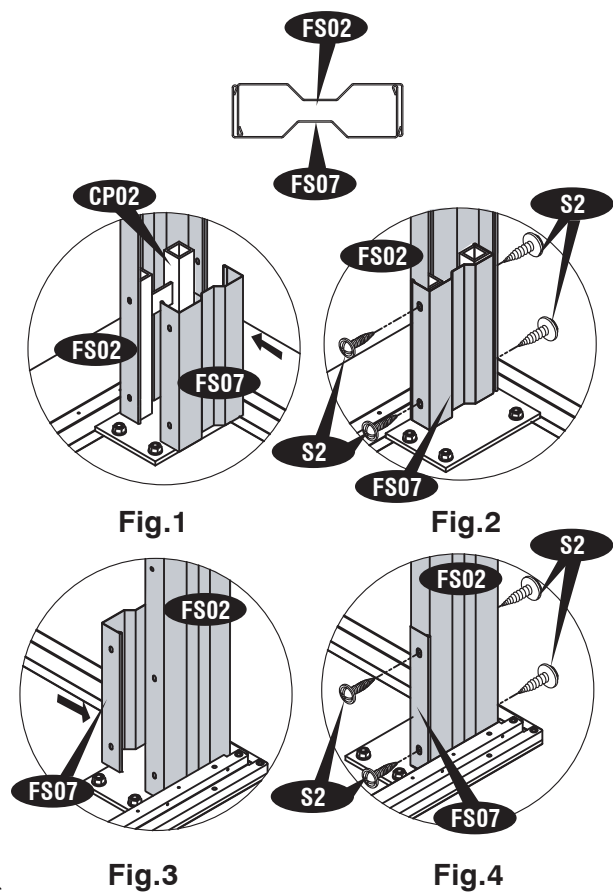

IMPORTANT: USE HAND GLOVES TO PREVENT INJURY.

Step - 3

Make 4 Sets

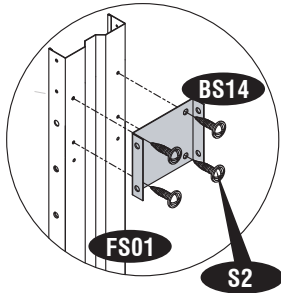


Fig.1


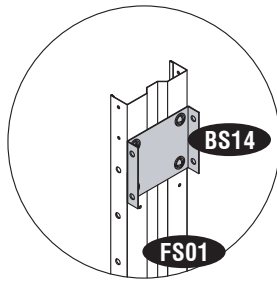


Fig.2

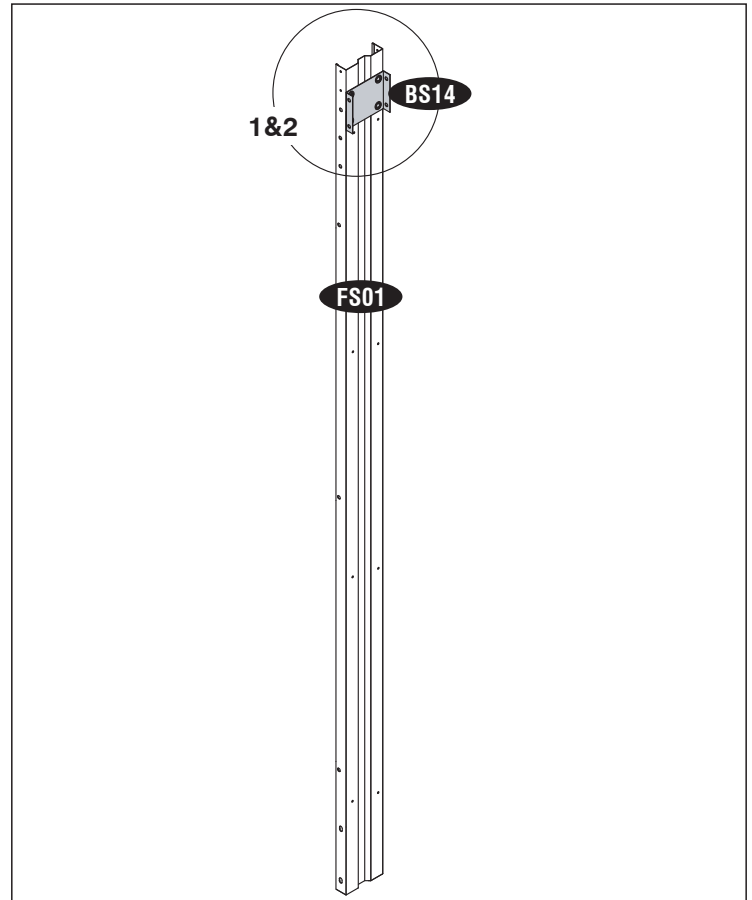

Step - 4

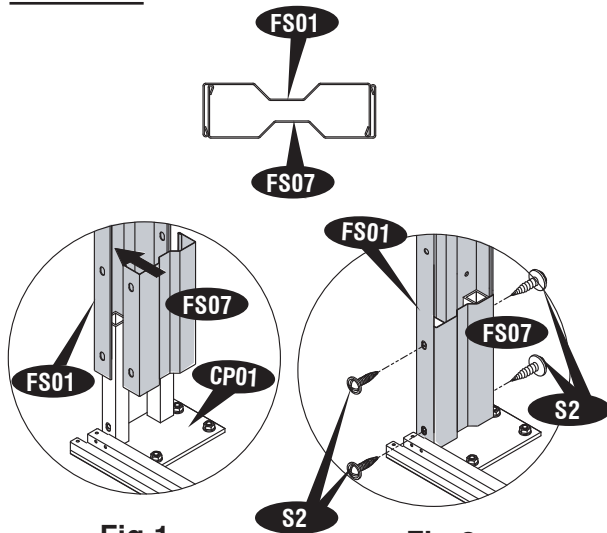


Fig.1

Fig.2


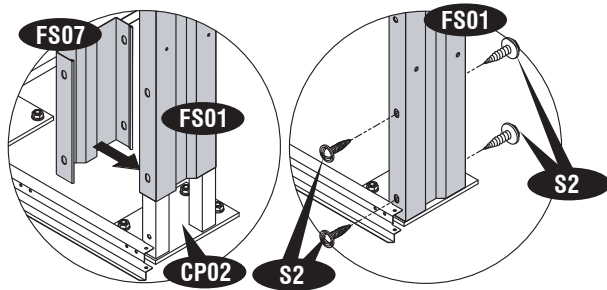


Fig.3



Fig.4

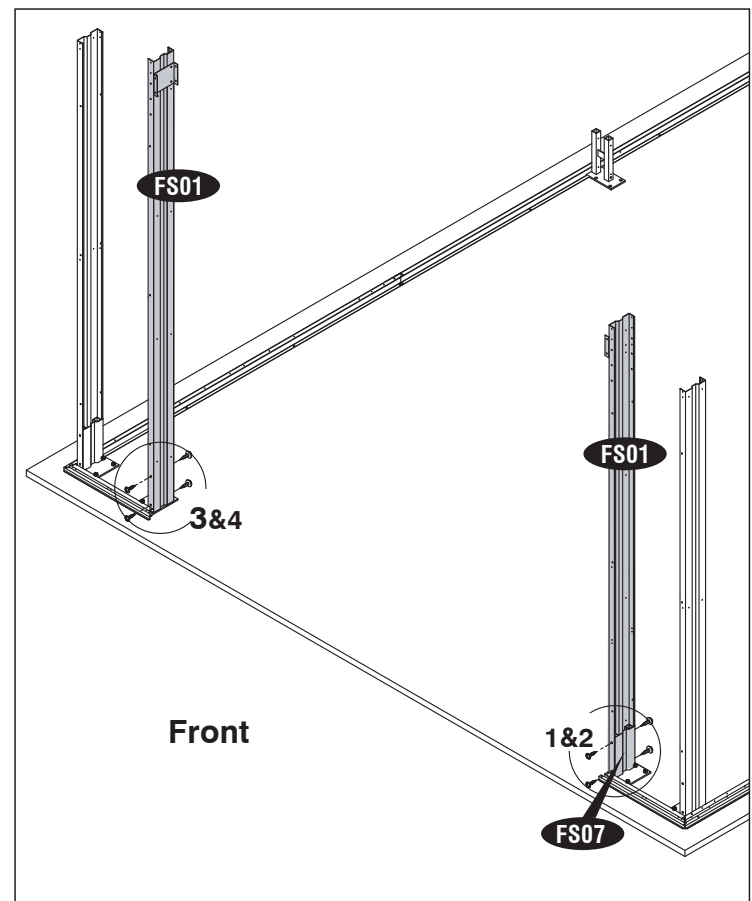


Front

IMPORTANT: USE HAND GLOVES TO PREVENT INJURY.



Step - 5

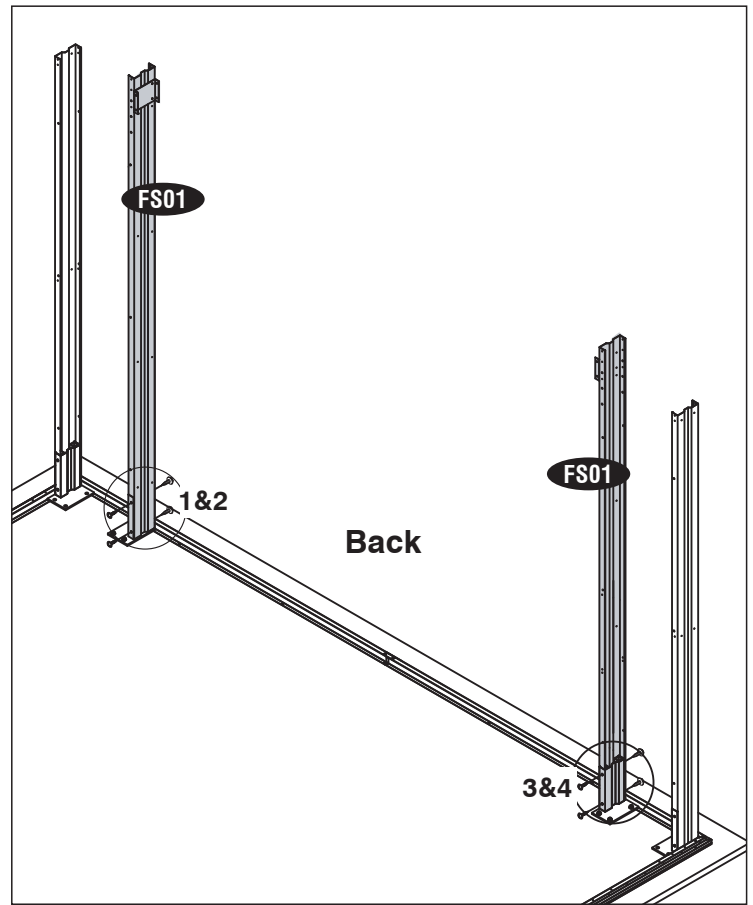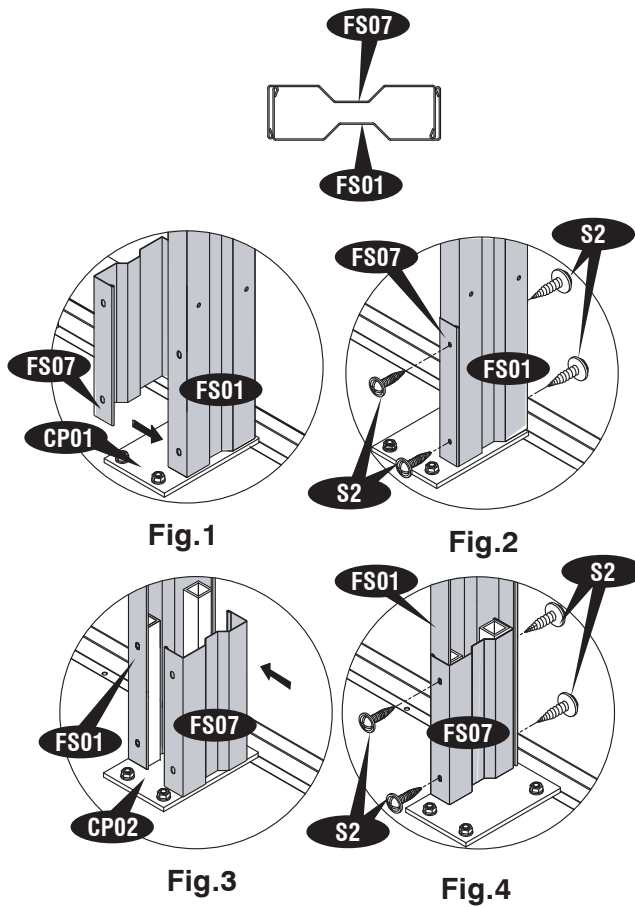



Step - 6

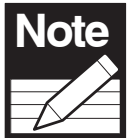

Note Use only 3 Screws as shown in Blow up.

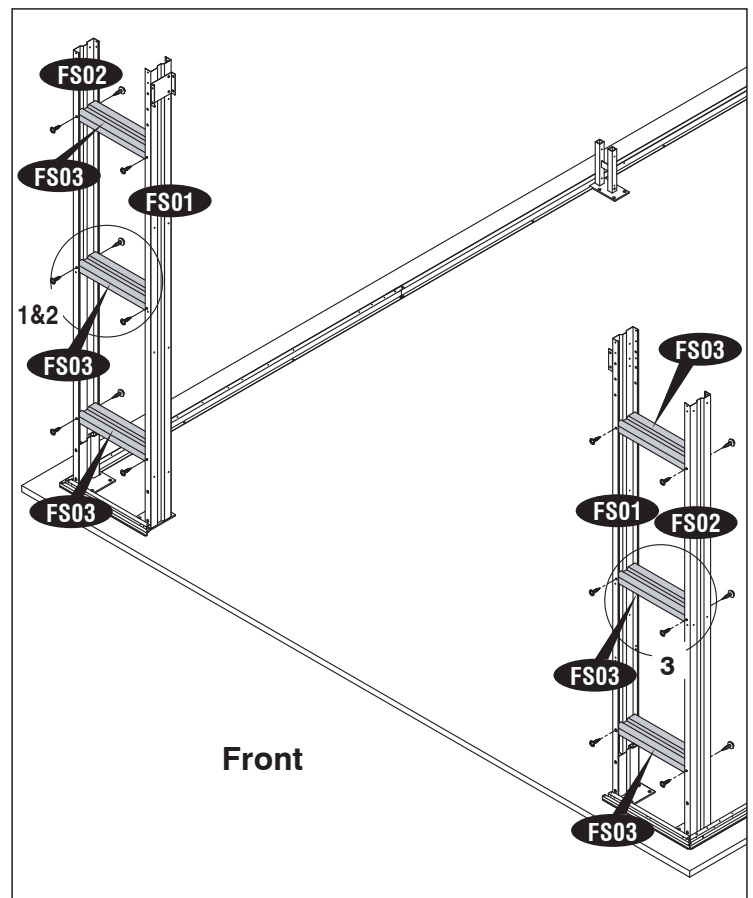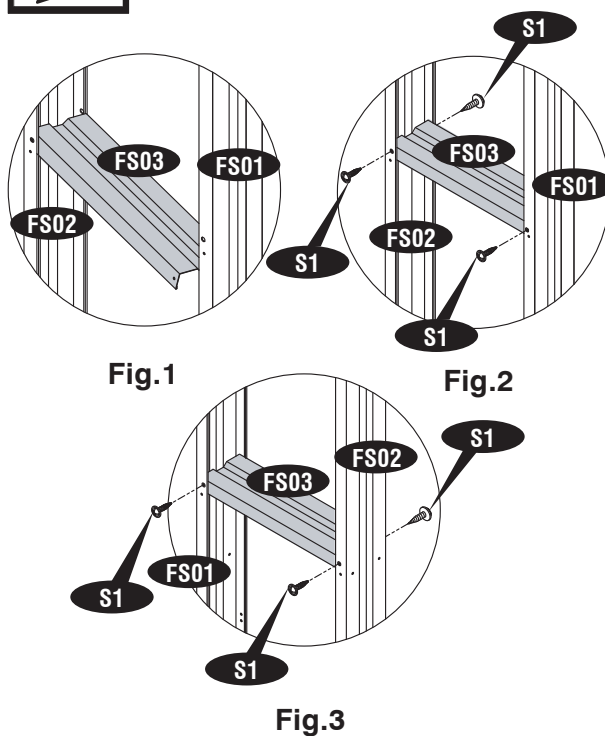


Step - 7

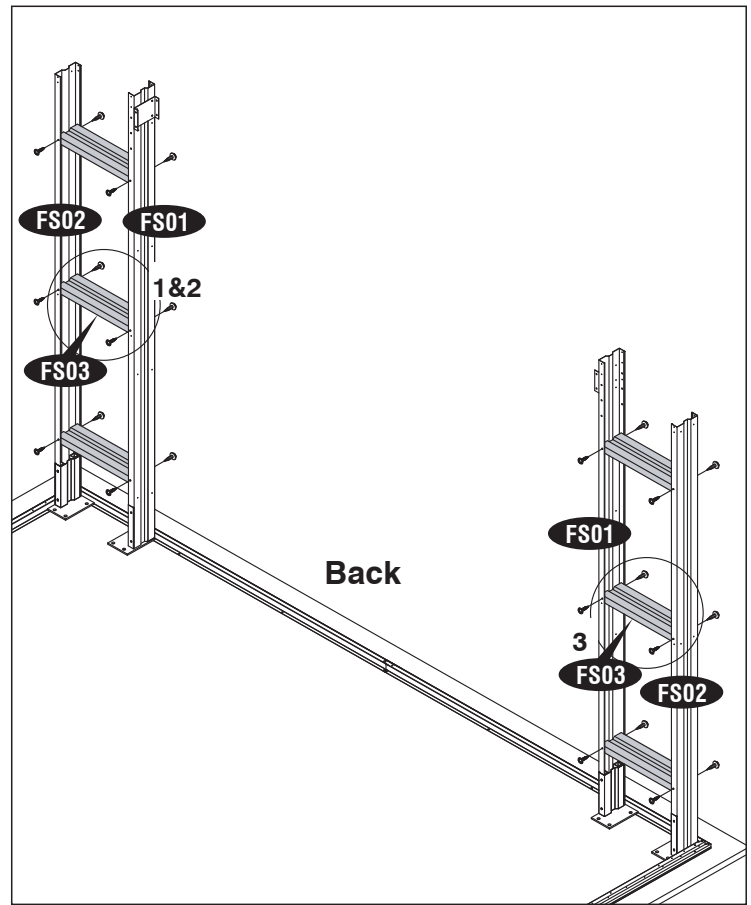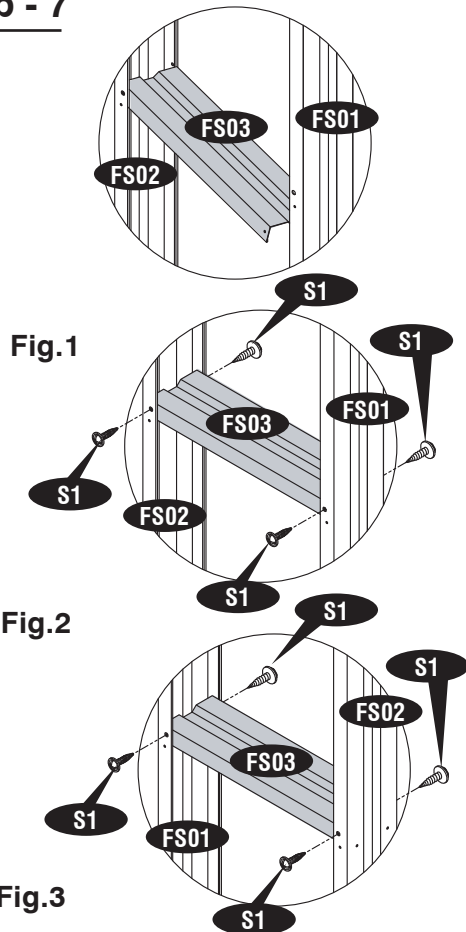

Step - 8


Make 2 Sets

Step - 8

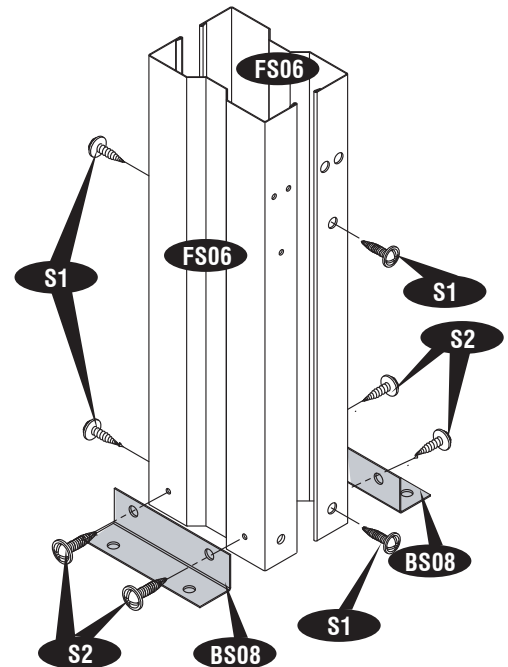


Step - 9

Make 4 Sets

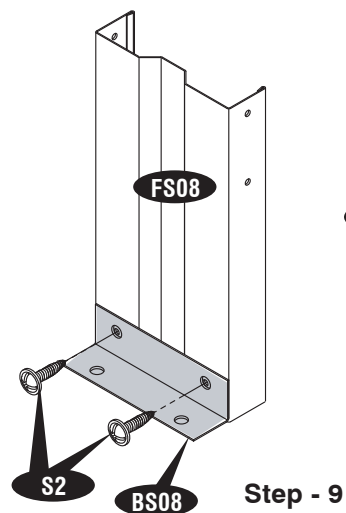


Step - 10

Make 2 Sets

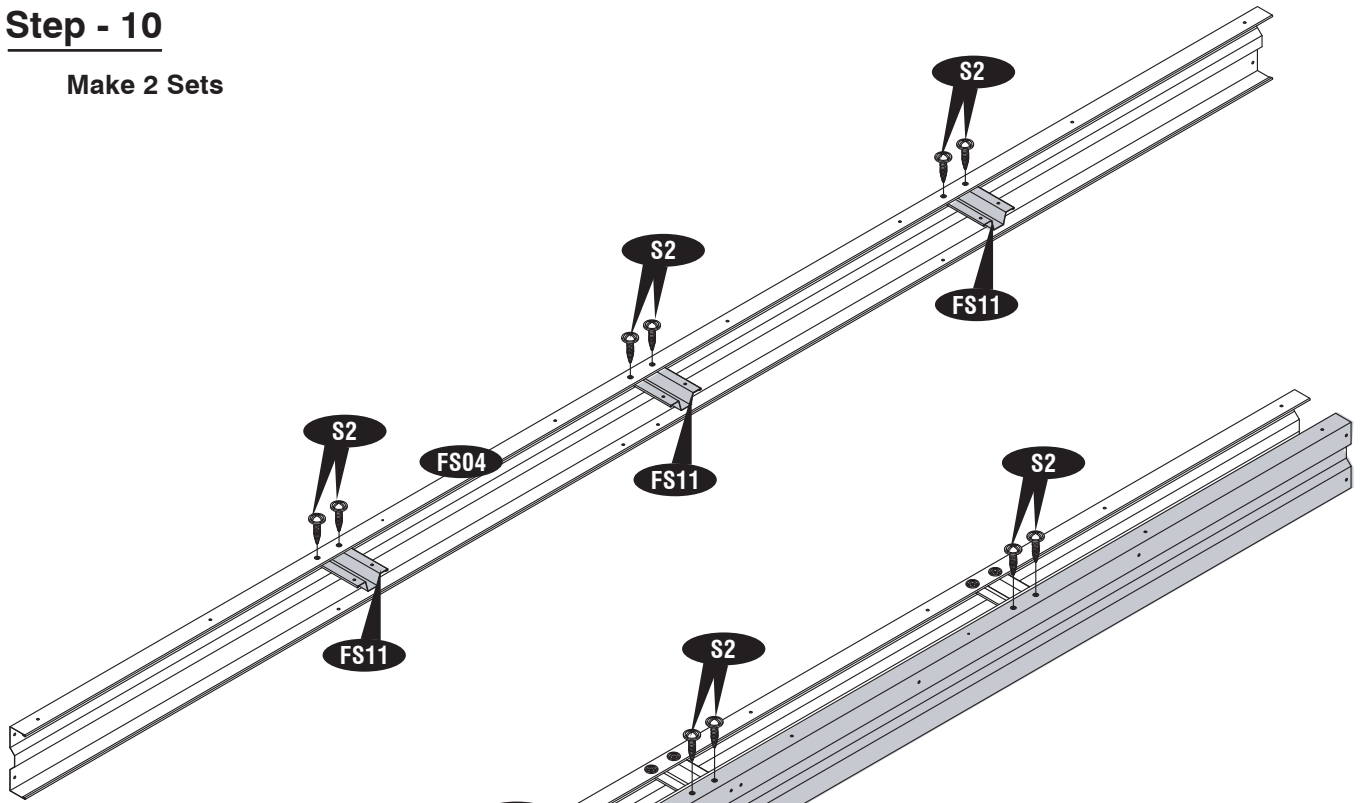


Step - 11

Make 2 Sets

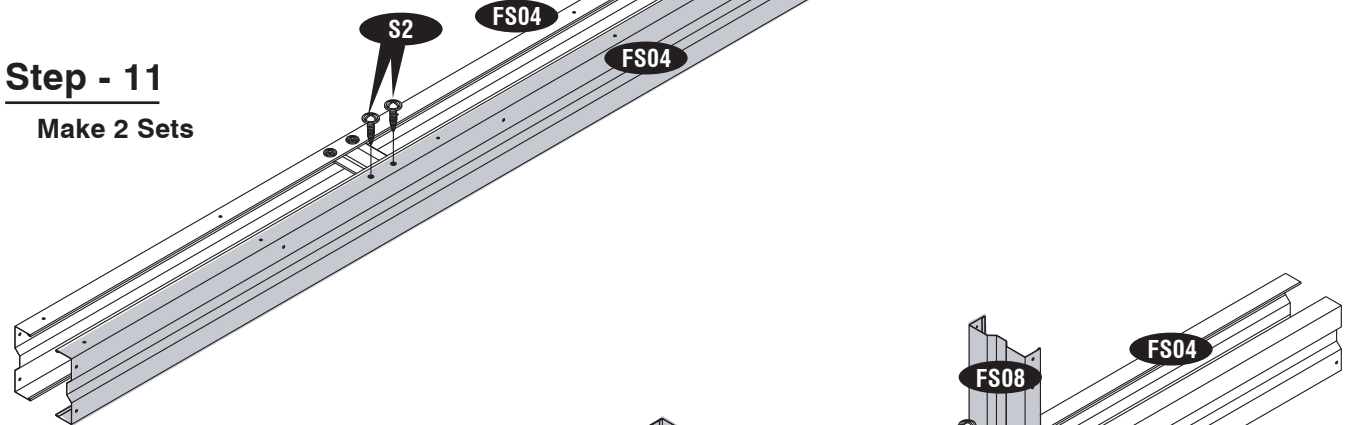

Step - 12

Make 2 Sets

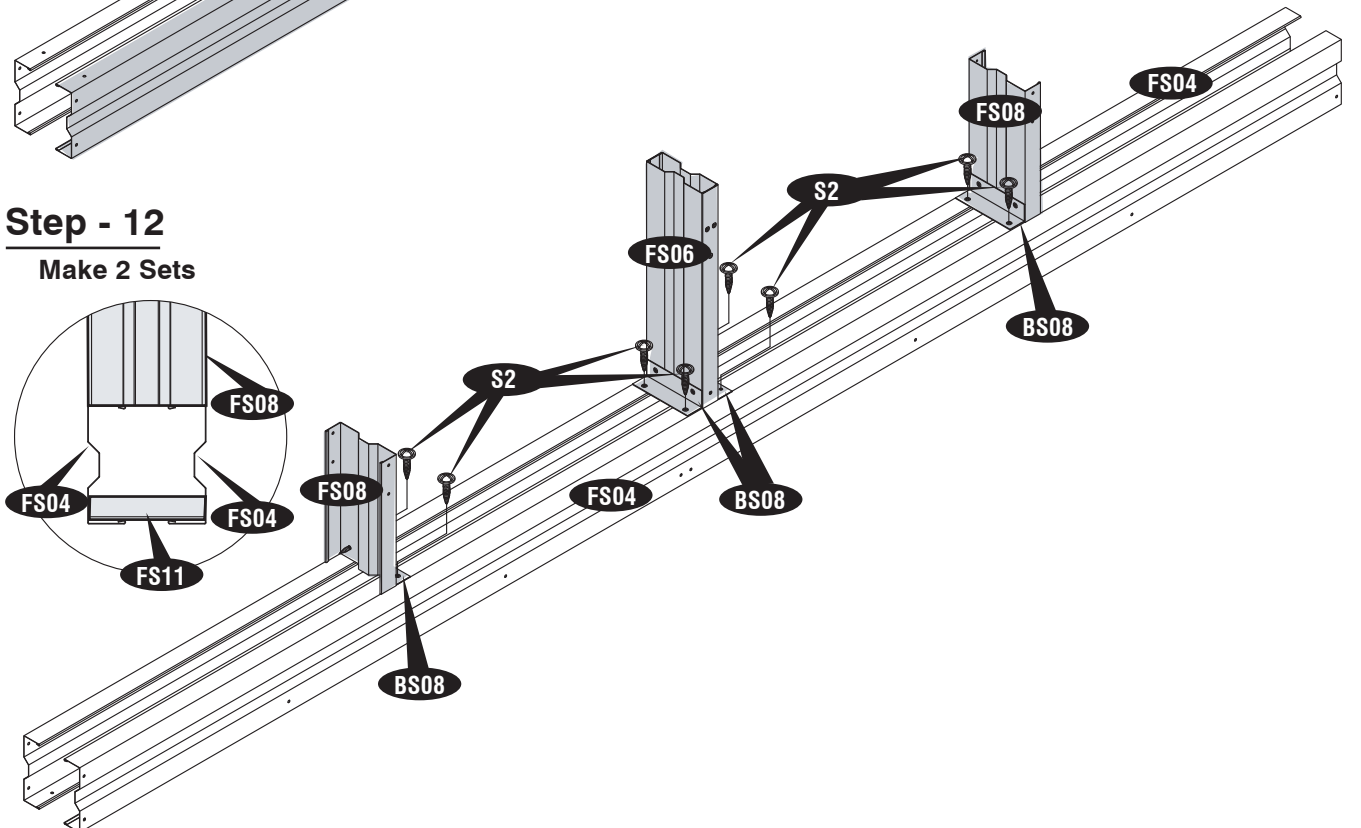

Step - 13

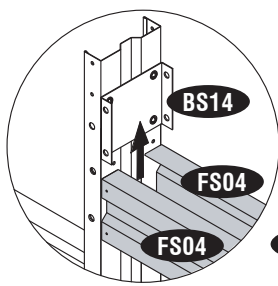


Fig.1

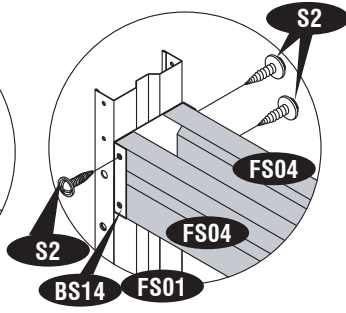


Fig.2


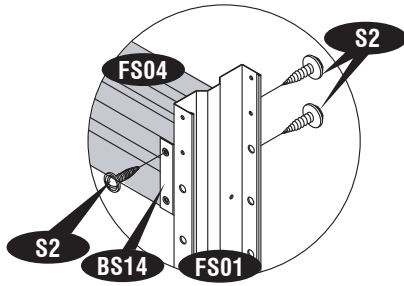


Fig.3

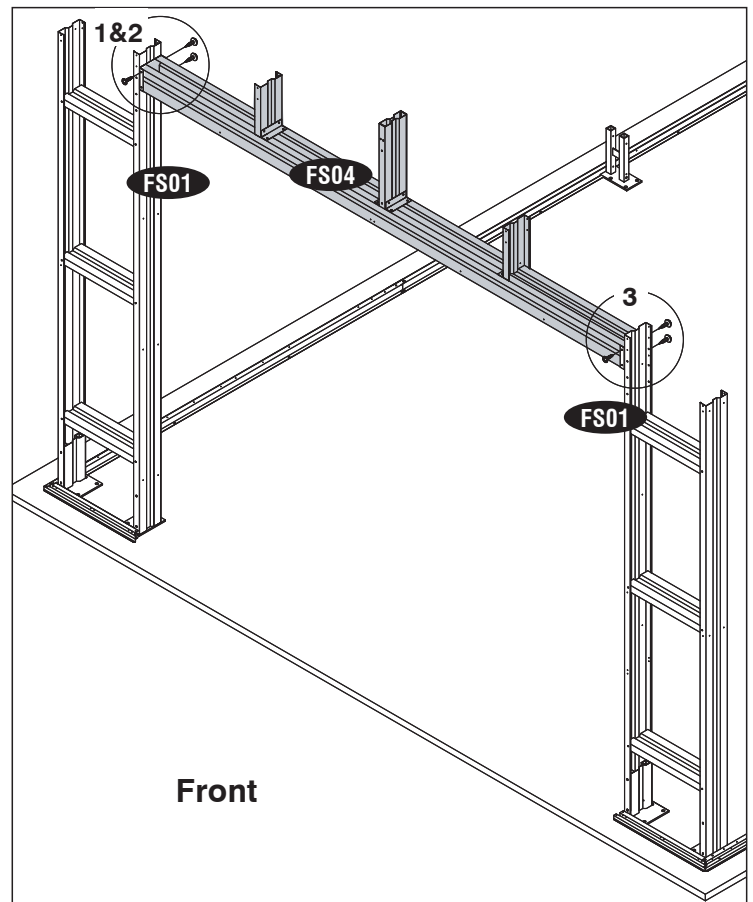

Step - 14

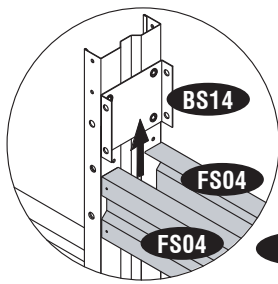


Fig.1

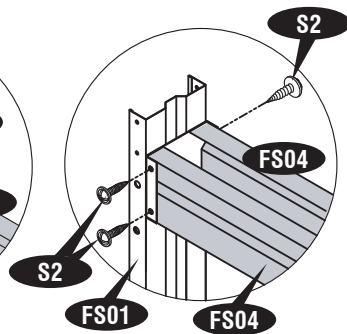


Fig.2



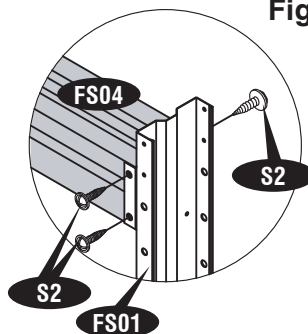


Fig.3

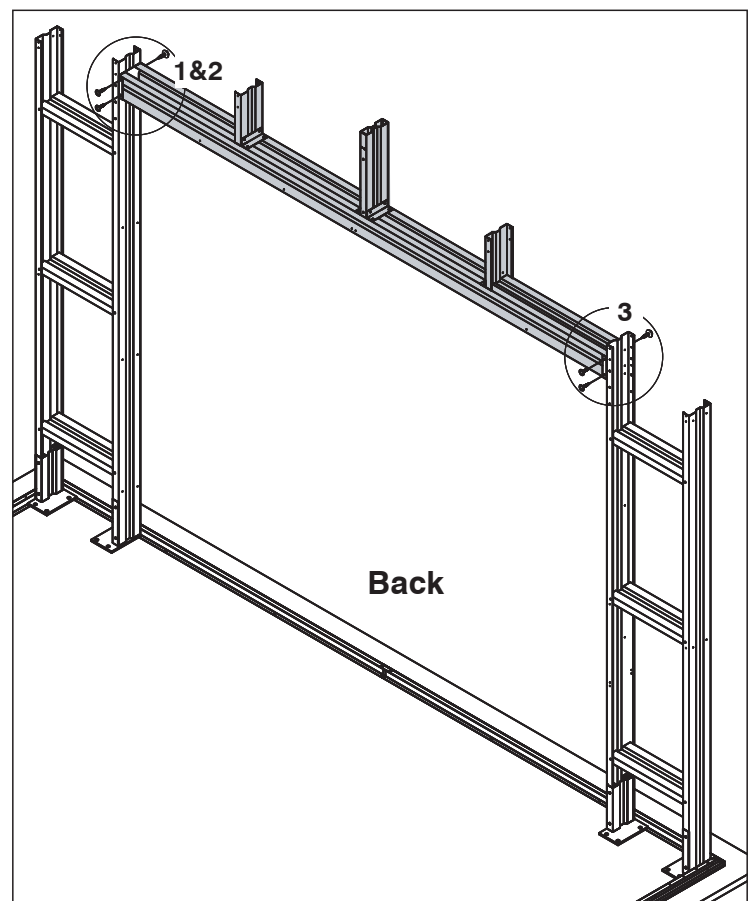


Step - 15

Make 2 Sets


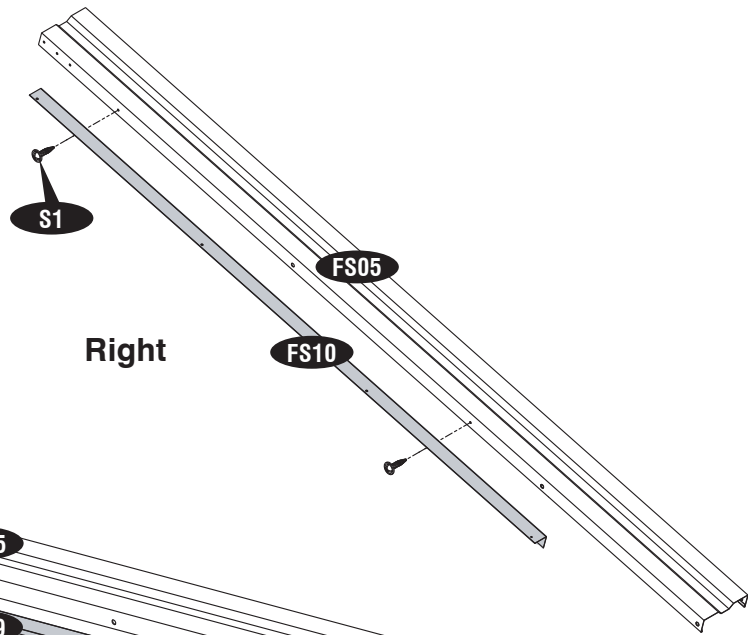


Step - 16



Make 2 Sets

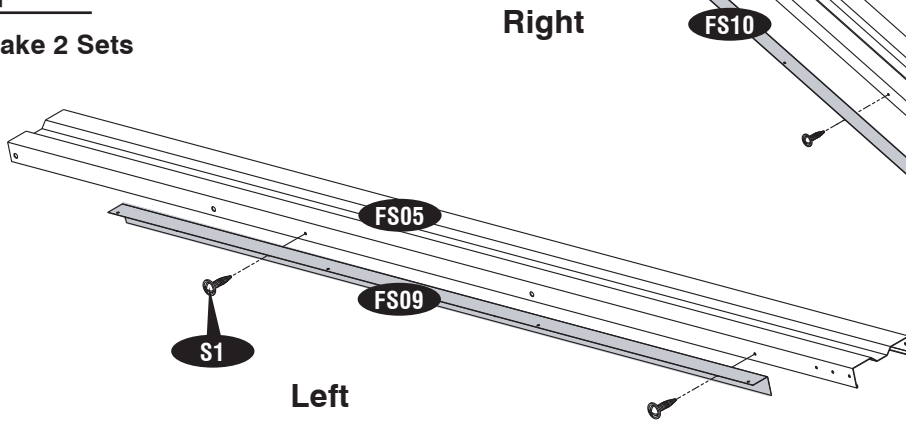



Step - 17

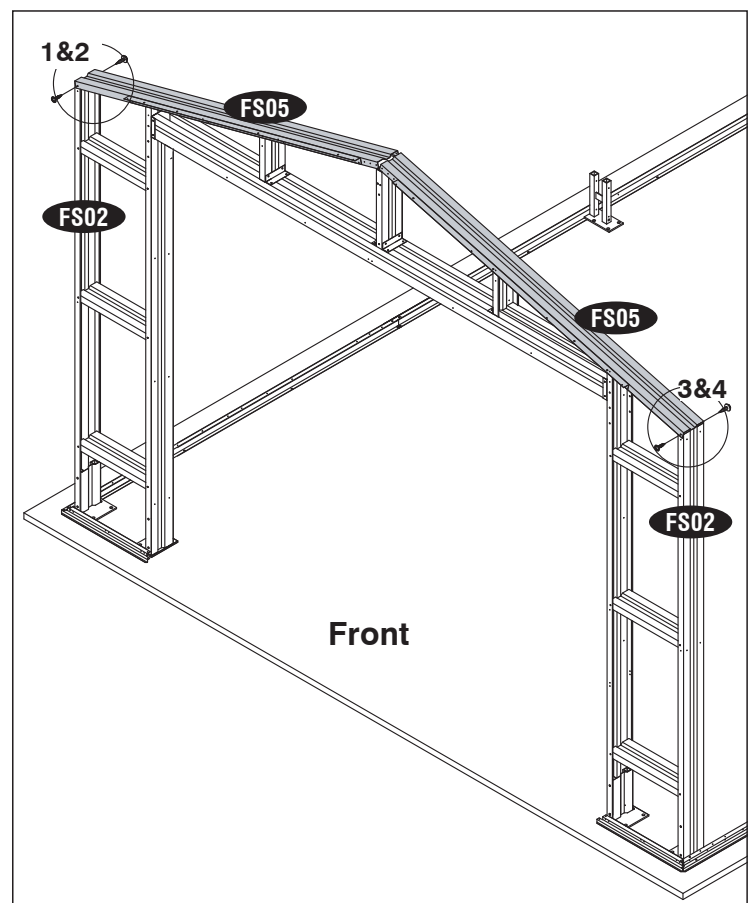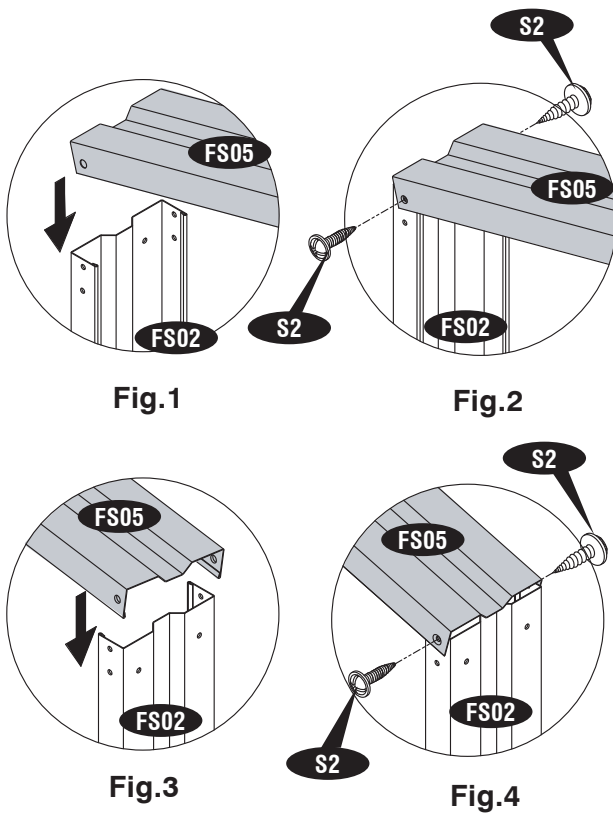

Step - 18

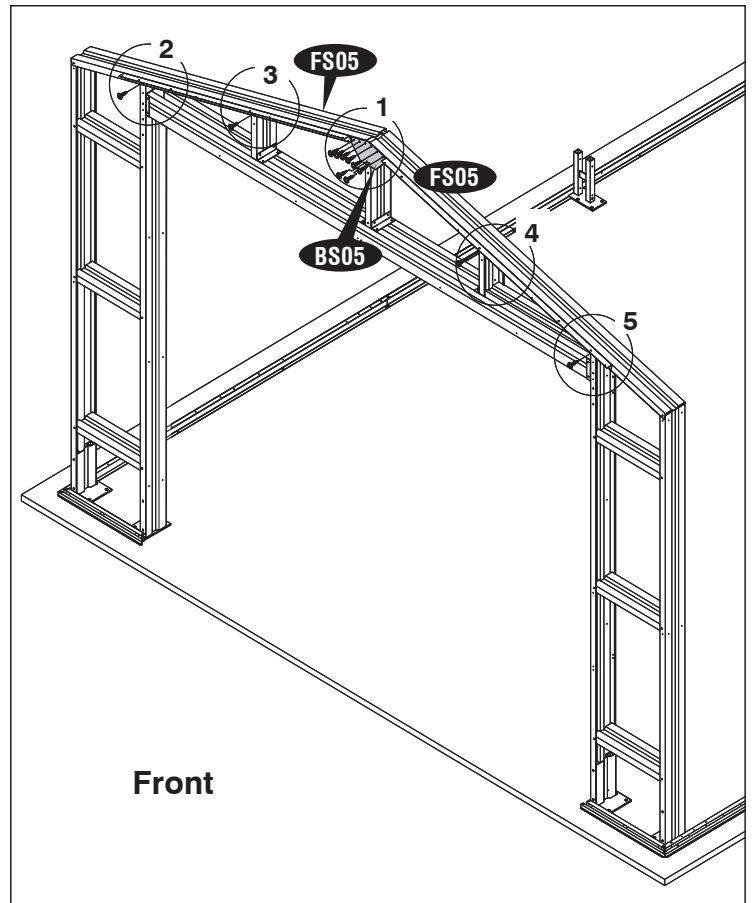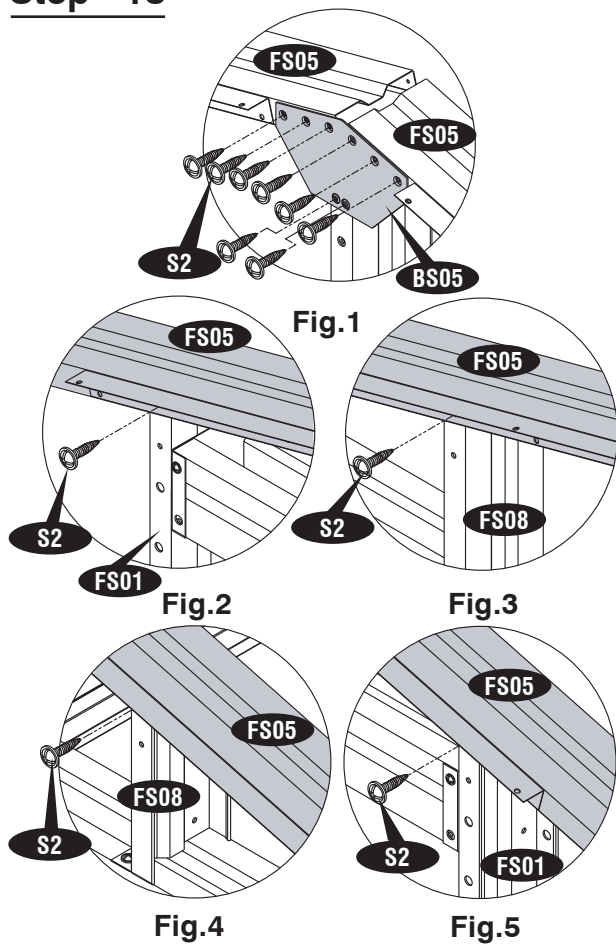

Step - 19

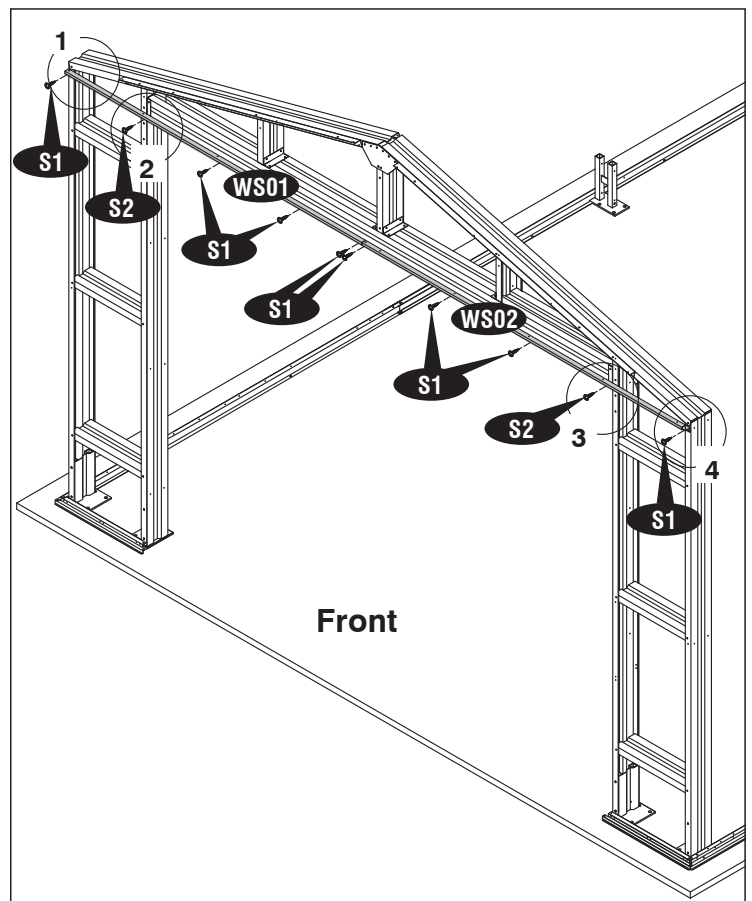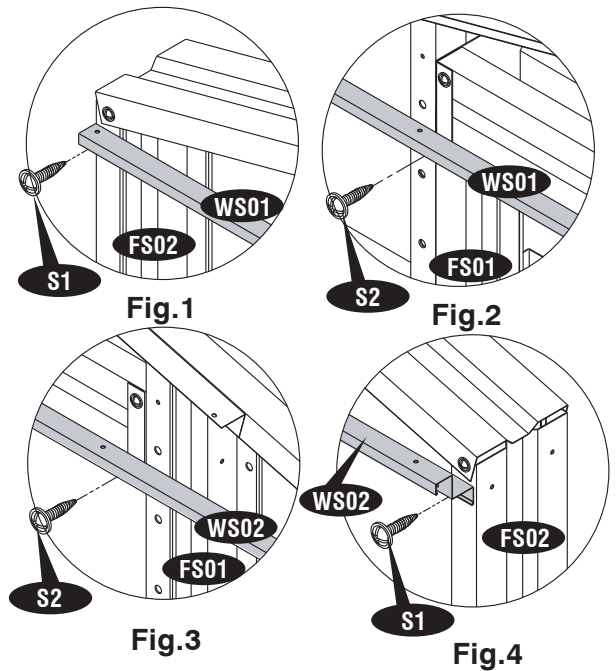

Step - 20

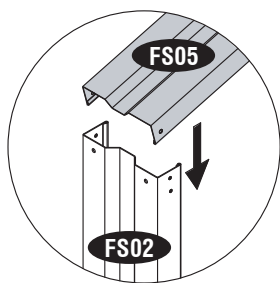


Fig.1

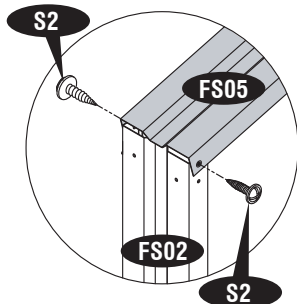


Fig.2

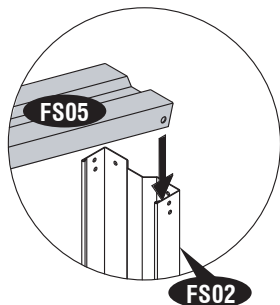


Fig.3


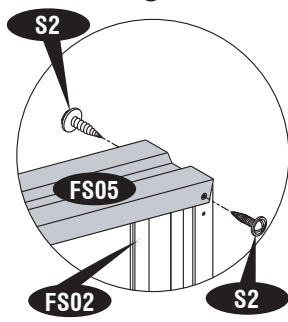


Fig.4

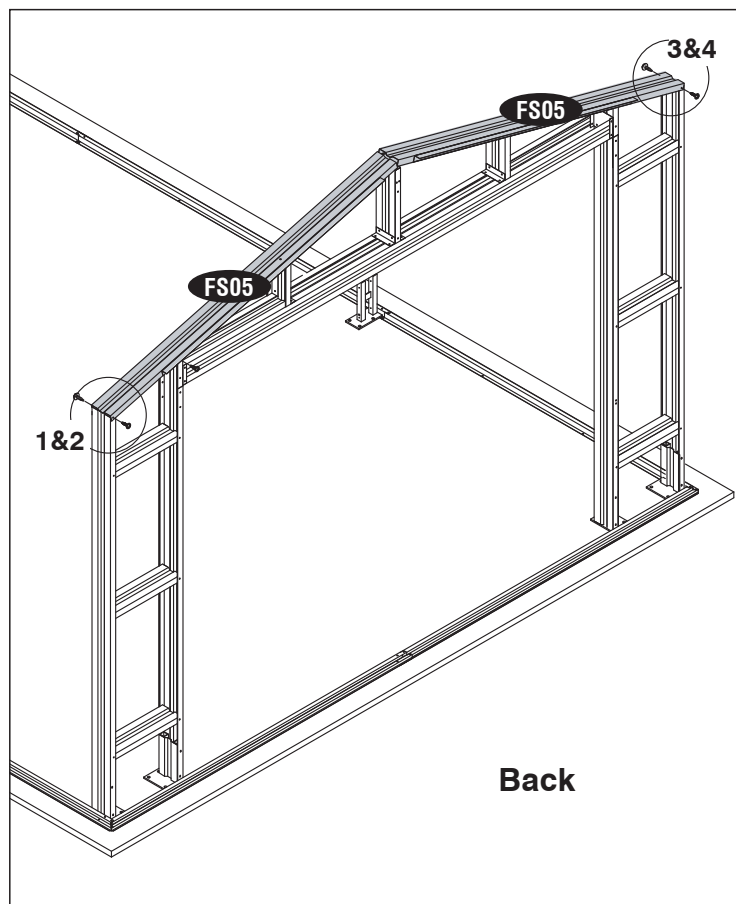

Step - 21

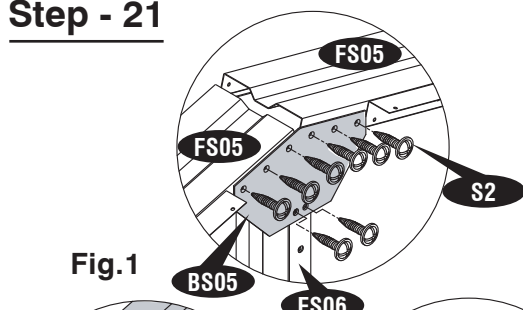


Fig.1

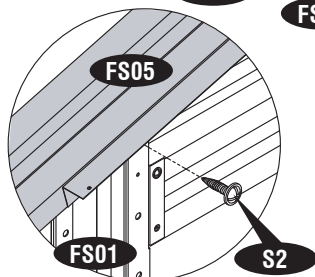


Fig.2

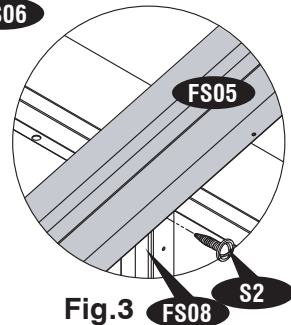


Fig.3

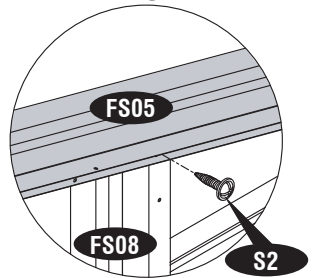


Fig.4


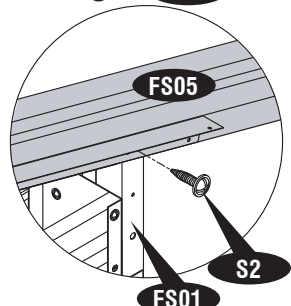


Fig.5

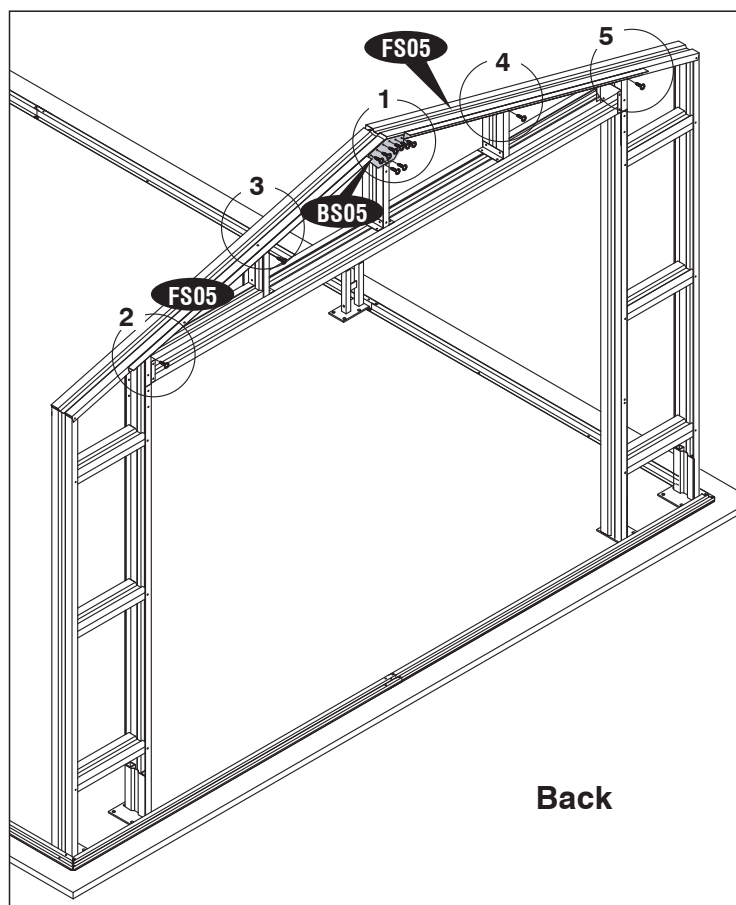

Step - 22

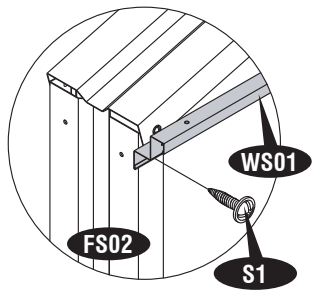


Fig.1

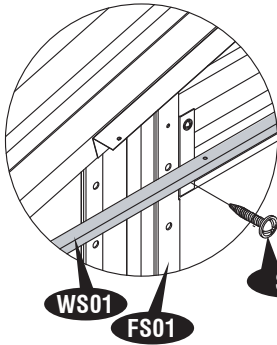


Fig.2


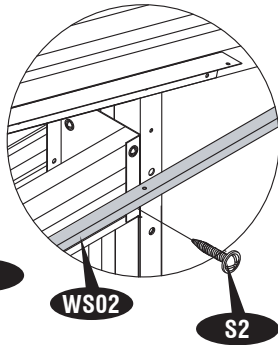


Fig.3

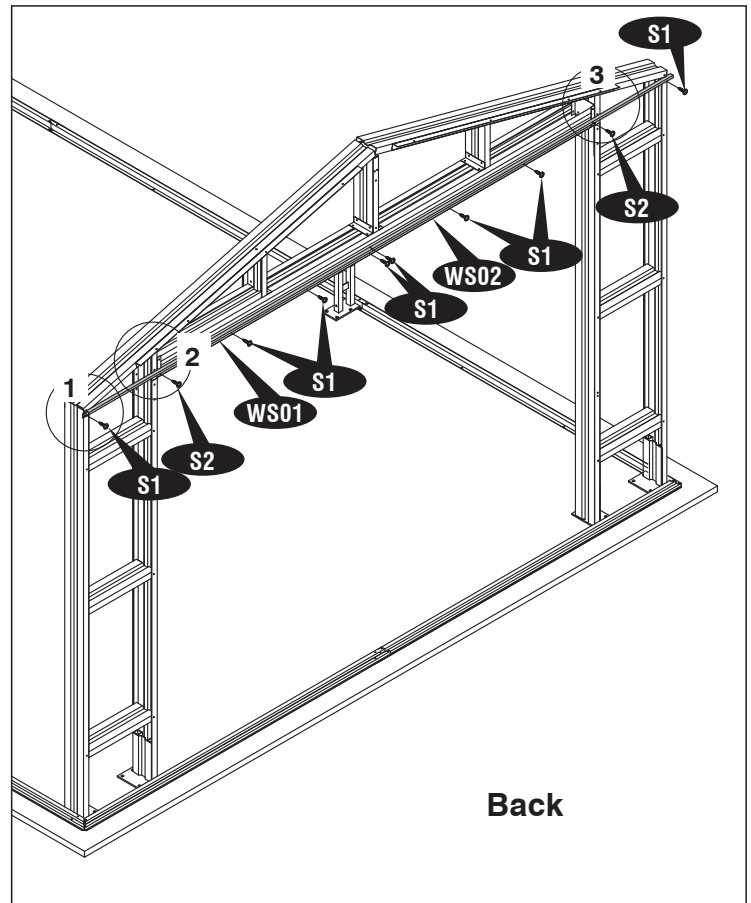

Step - 23

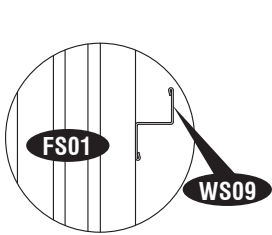


Fig.1



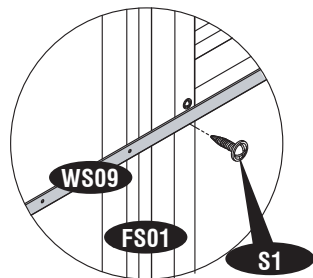


Fig. 2



Fig.3

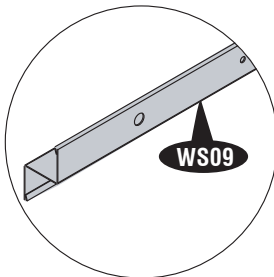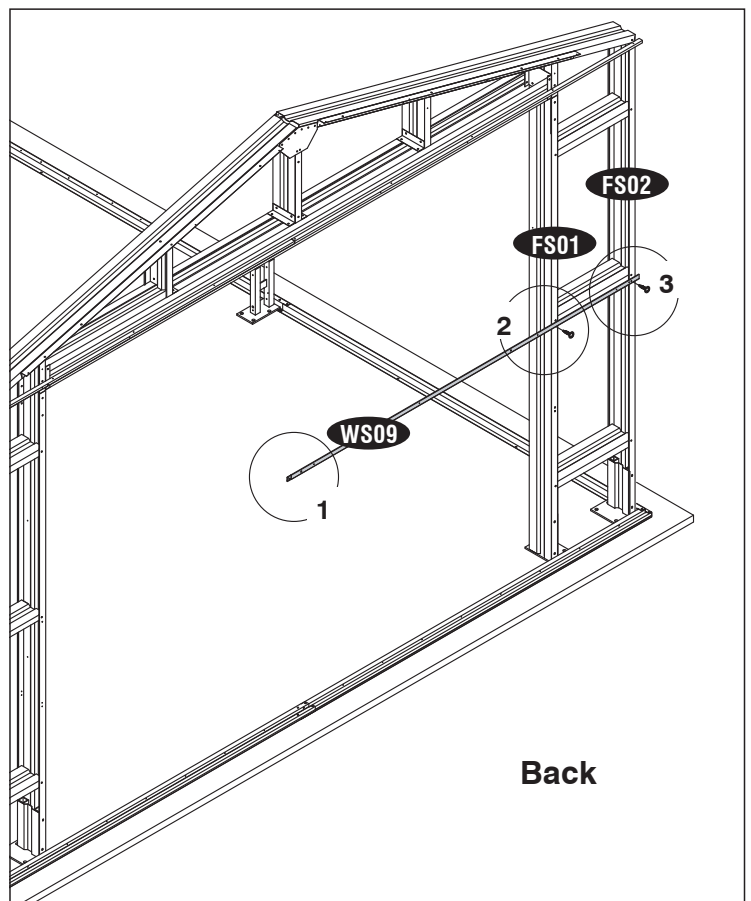

Step - 24

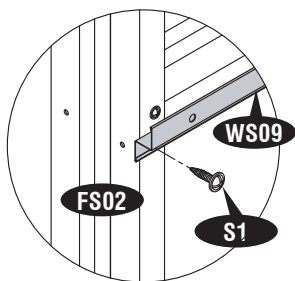


Fig.1

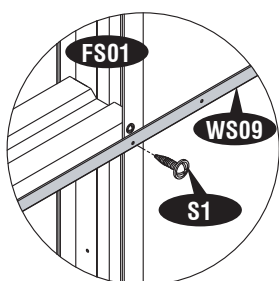


Fig.2


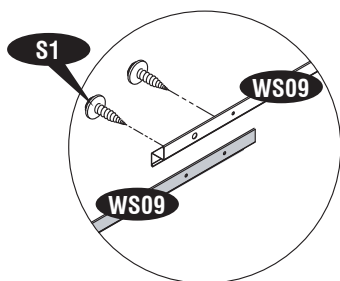


Fig.3

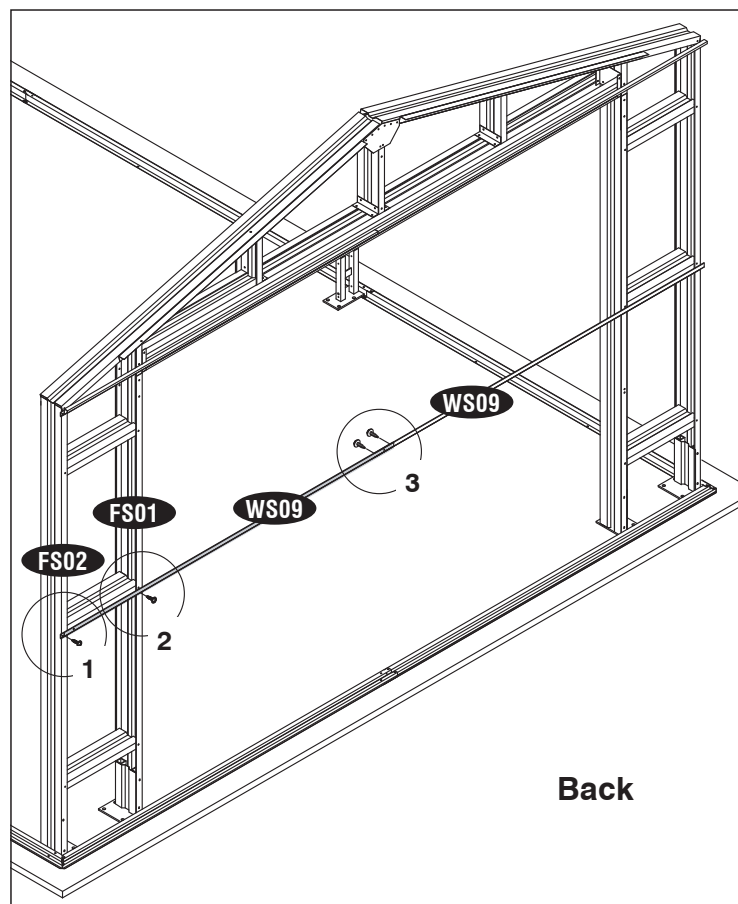

Step - 25

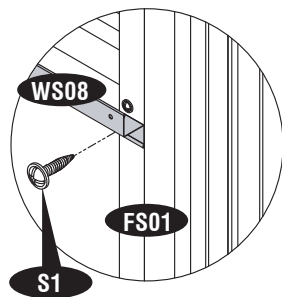


Fig.1

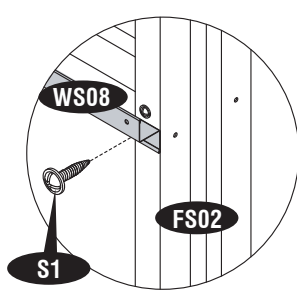


Fig. 2

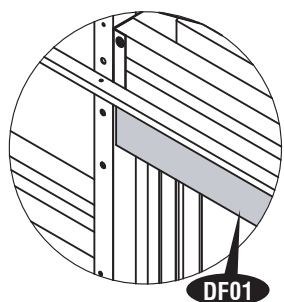


Fig.3



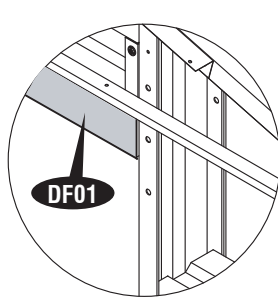


Fig. 4

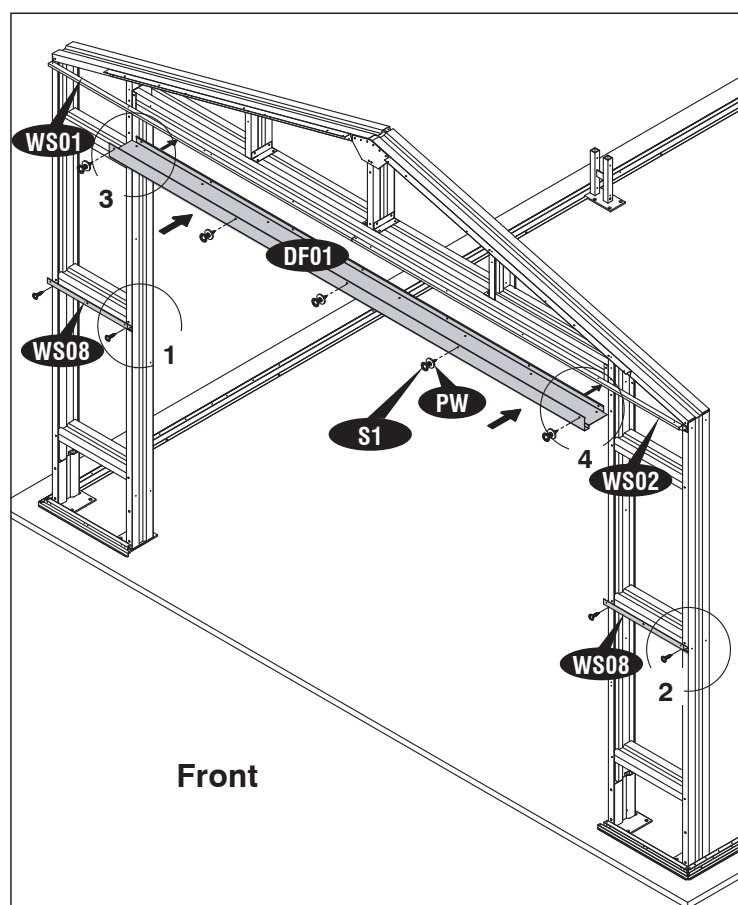

Step - 26

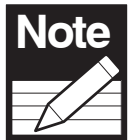

Note It is important that Use S1 Screws first.

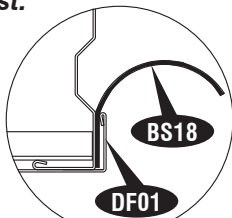


Fig.1

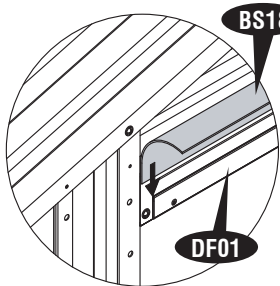


Fig.2

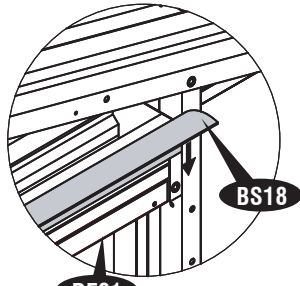


Fig.3



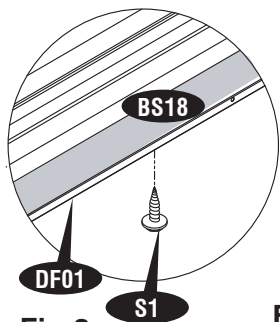


Fig.4

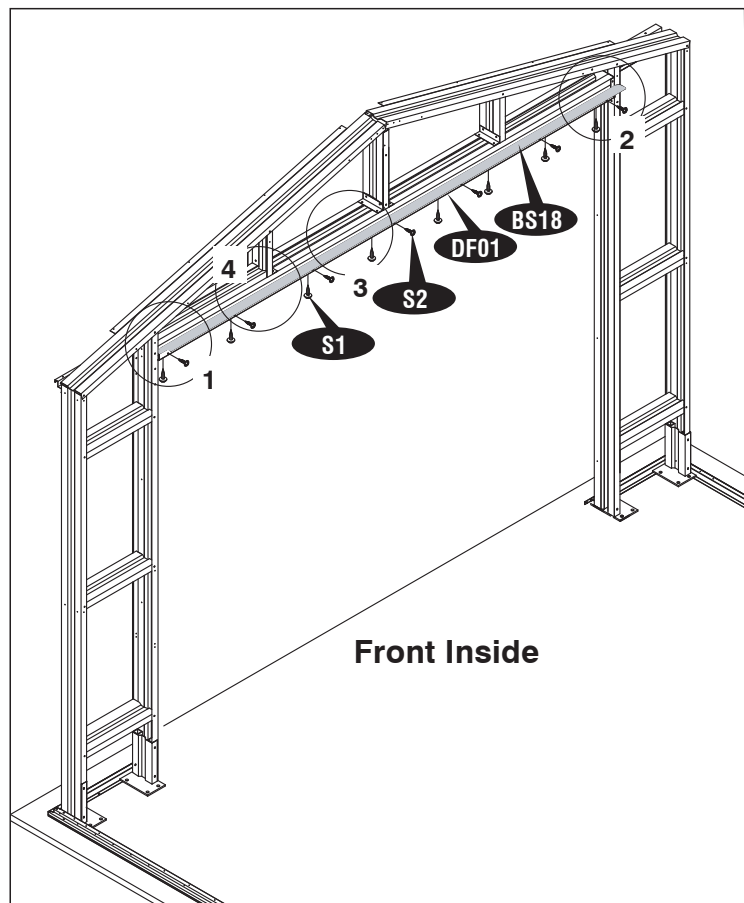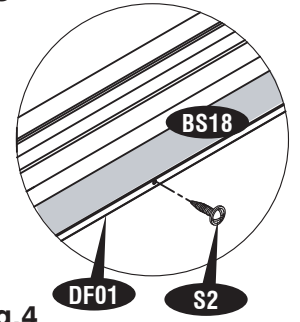

Step - 27

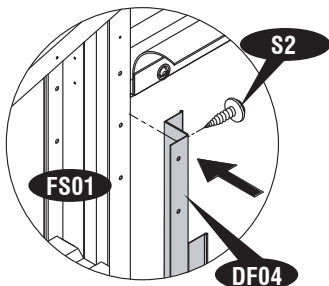


Fig.1

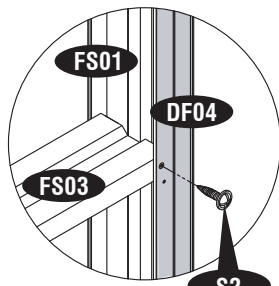


Fig.2

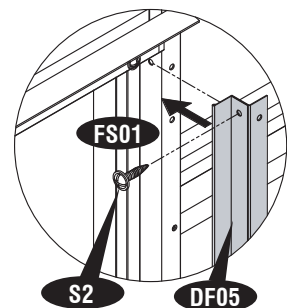


Fig.3




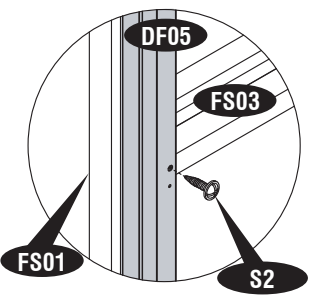




Fig.4

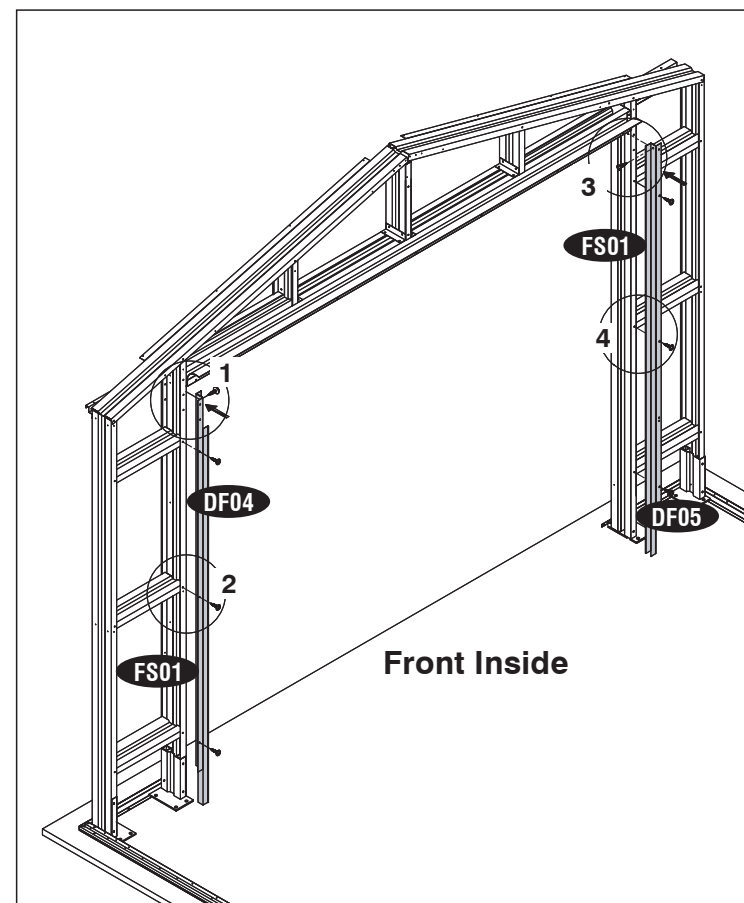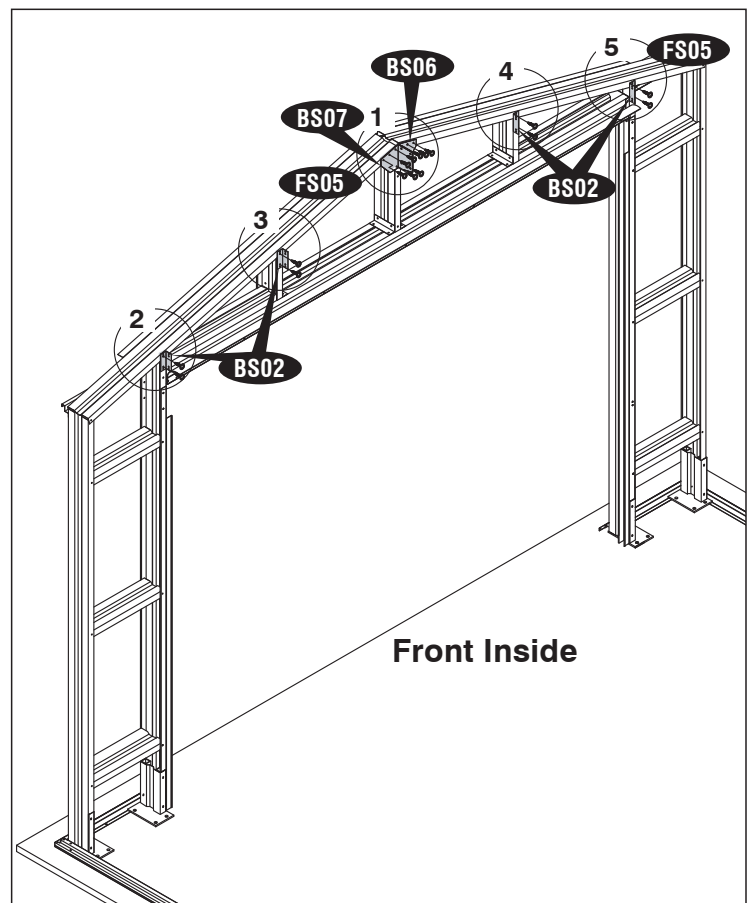

Step - 28

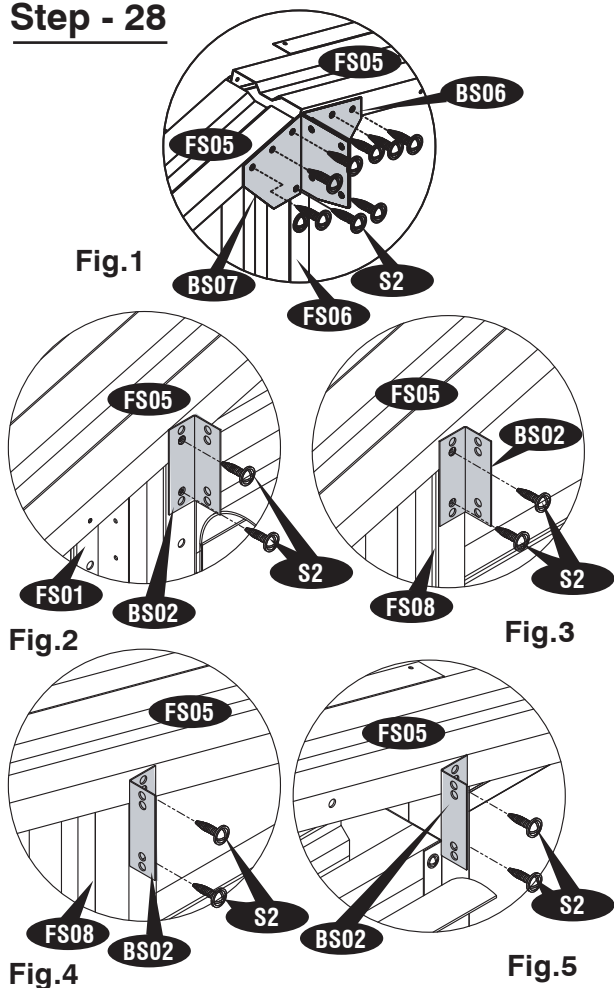

Step - 29

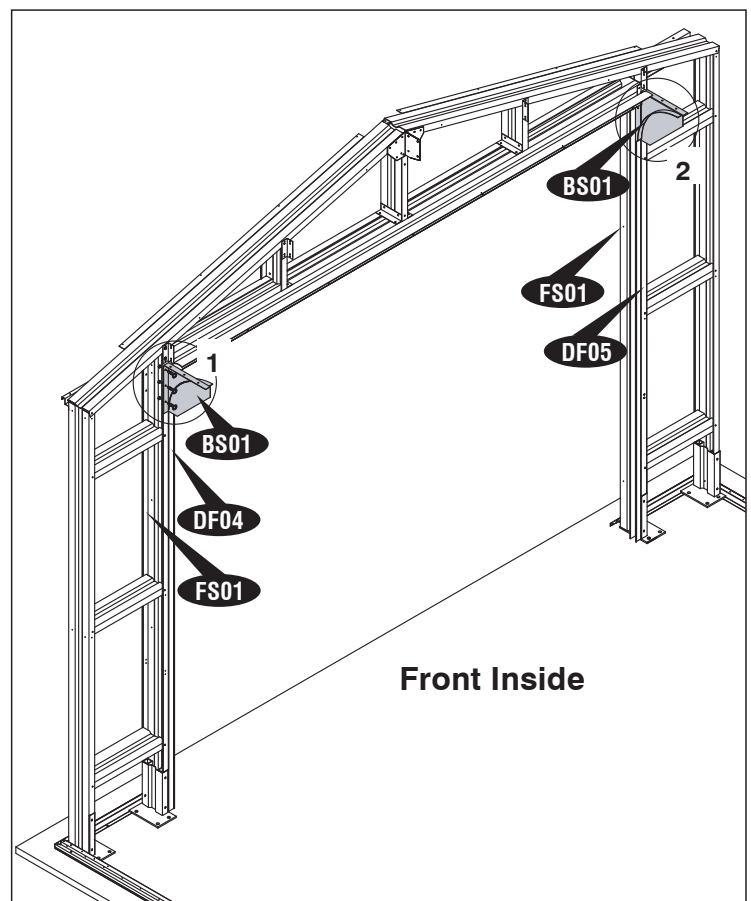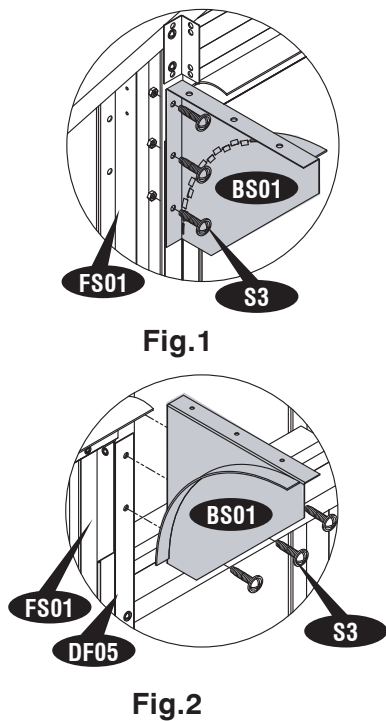

Step - 30

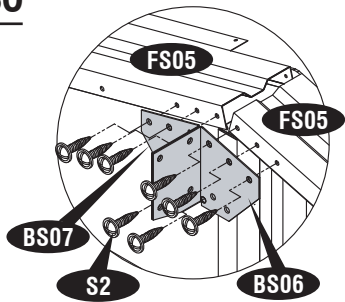


Fig.1

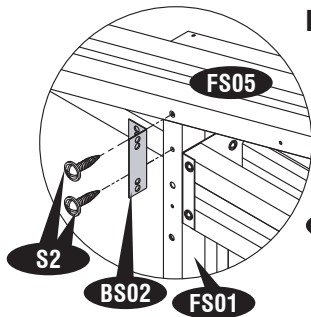


Fig.2

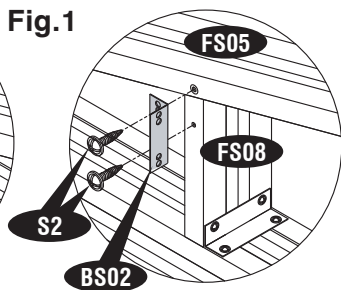


Fig.3

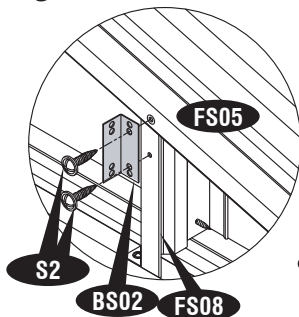


Fig.4



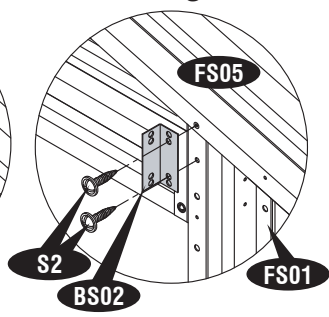


Fig.5

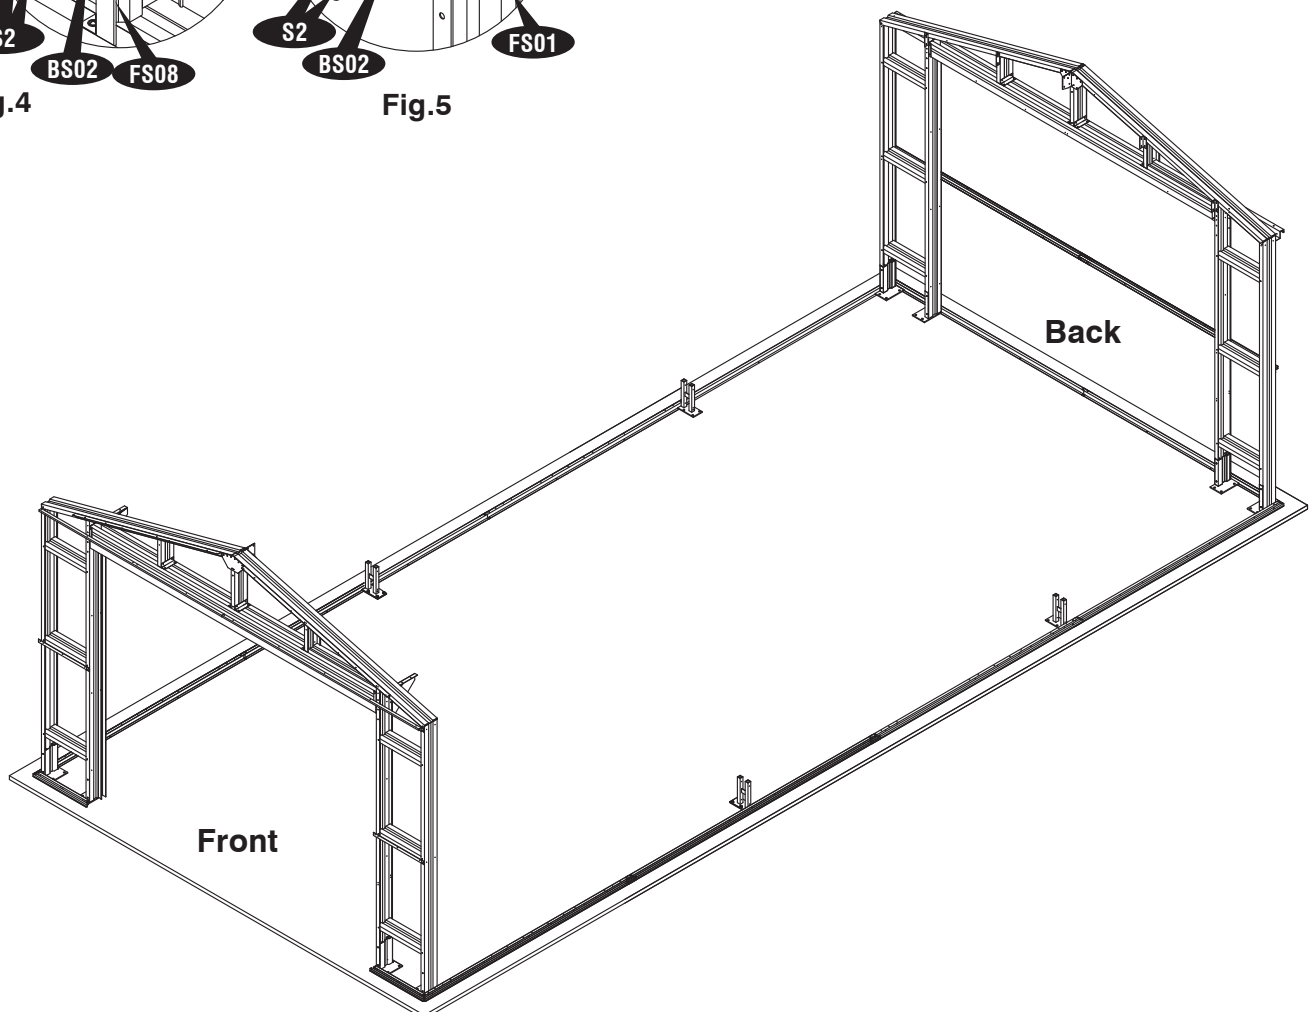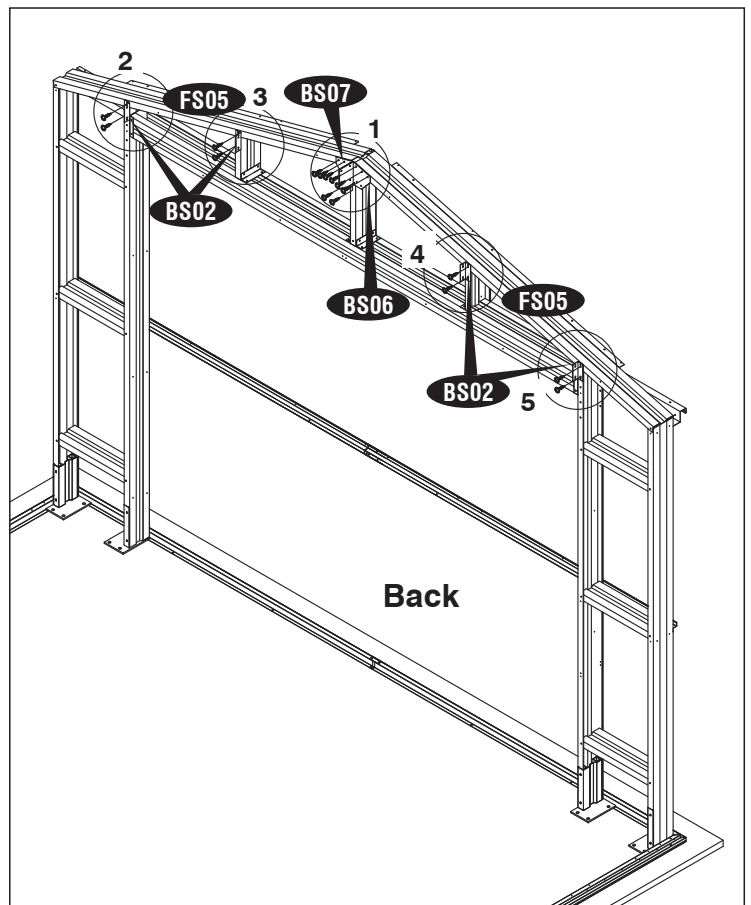


C. Center Structure Assembly

Parts Needed:

Code	Qty
CS01	2
CS02	2
CS03	2
CS04	4
CS05	1
CS06	2
CS07	2
CS08	1
CS09	4
CS10	2
CS11	1
CS12	1
BS02	8
CS13	2
CS14	2
S1	52
S2	116
S3	14

Parts Needed for each extension:

Code	Qty
CS01	2
CS02	2
CS03	2
CS04	4
CS05	1
CS06	2
CS07	2
CS08	1
CS09	4
CS10	2
CS11	1
CS12	1
BS02	8
CS13	2
CS14	2
S1	52
S2	116
S3	14

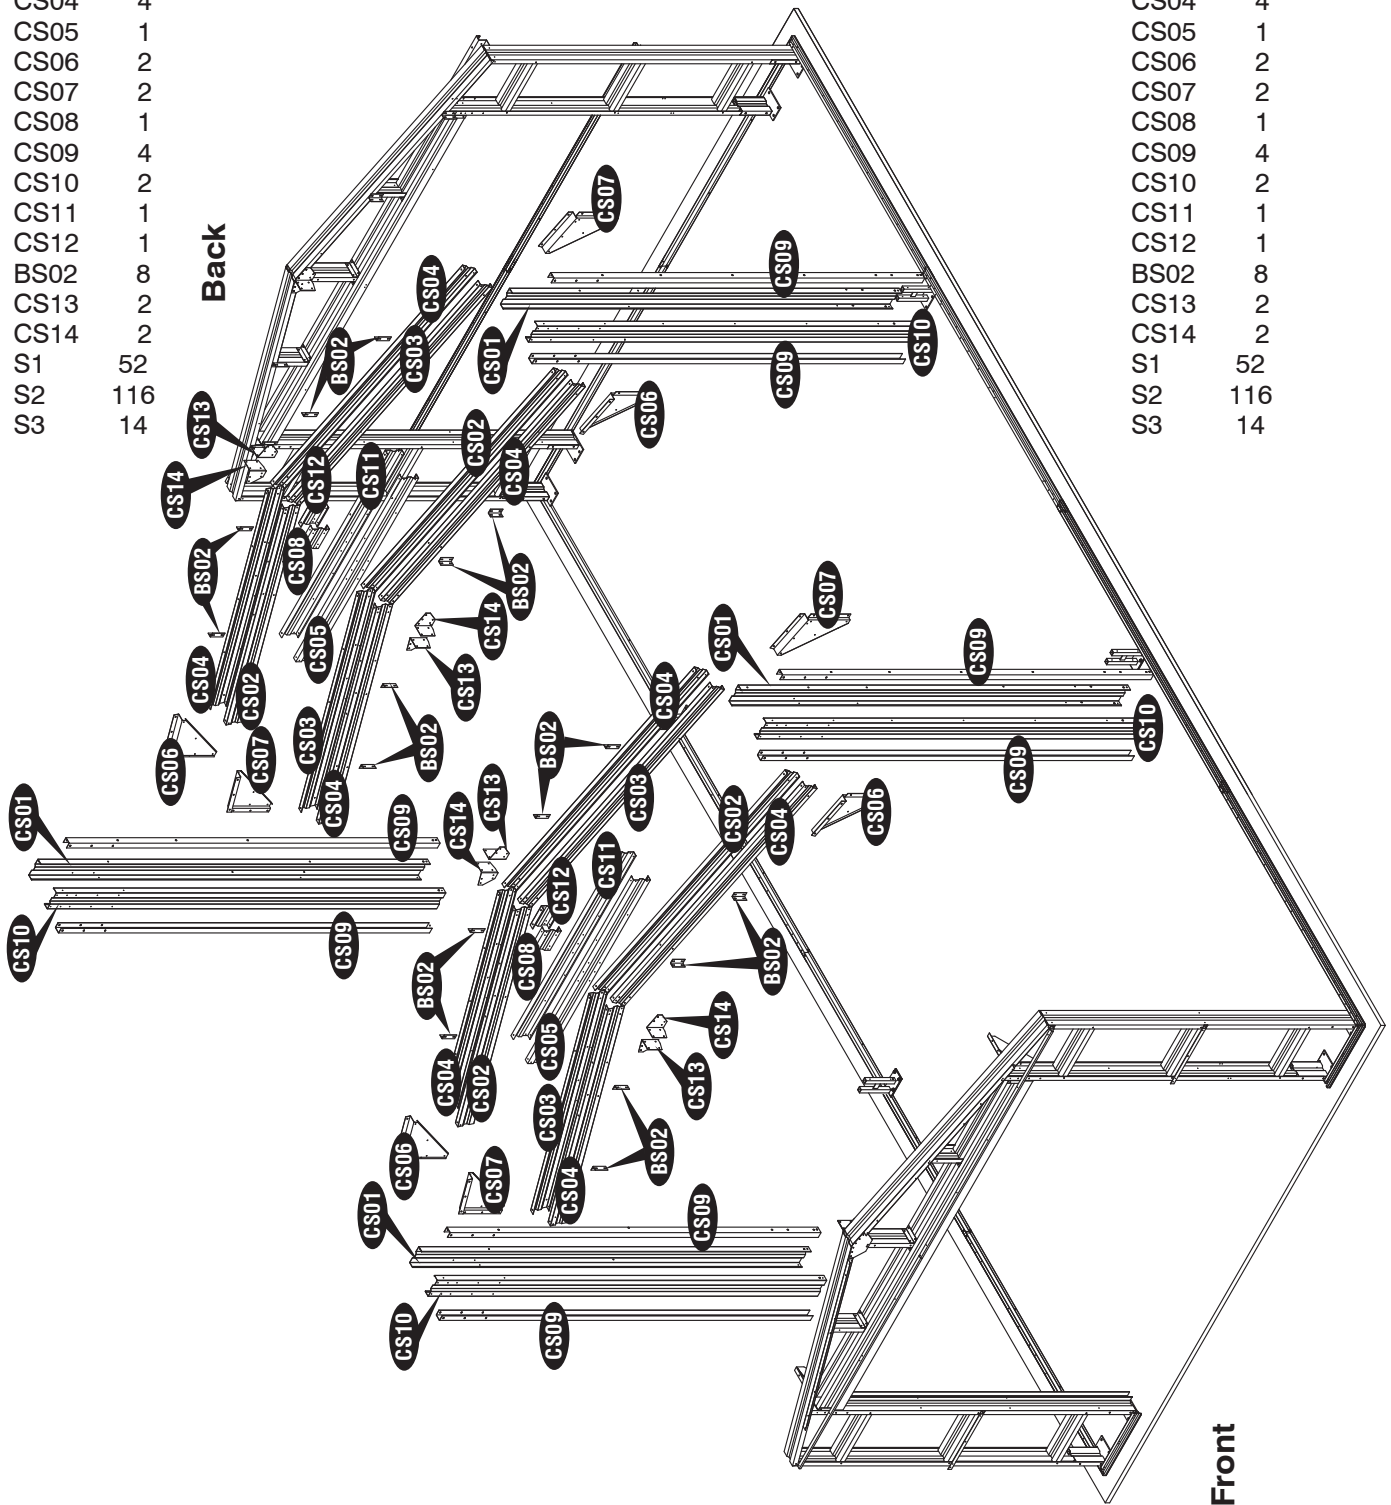

Step - 1

Make 2 Sets

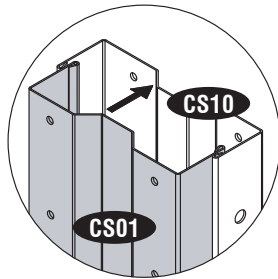


Fig.1

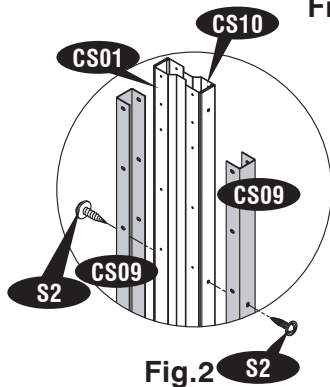


Fig.2




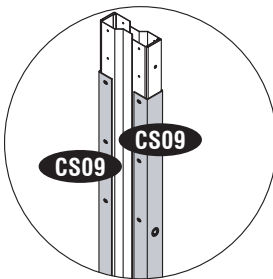



Fig.3

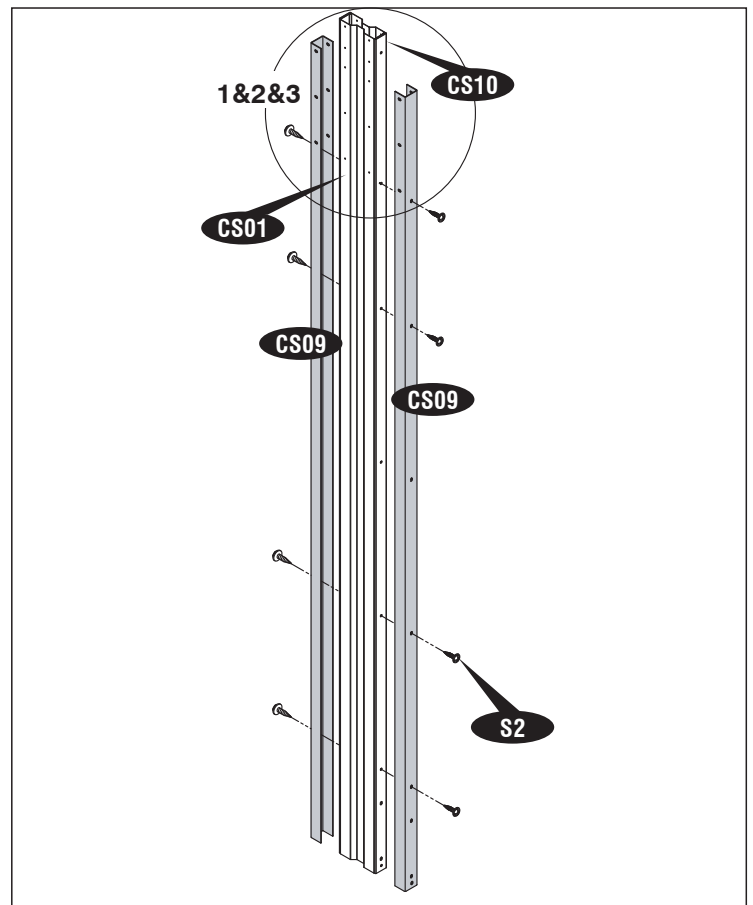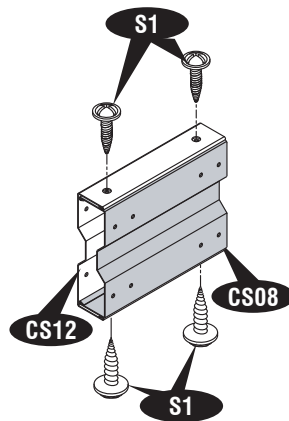

Step -2

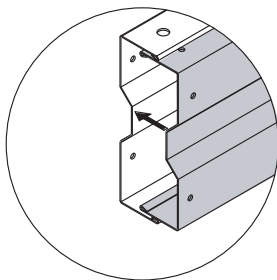


Step - 3

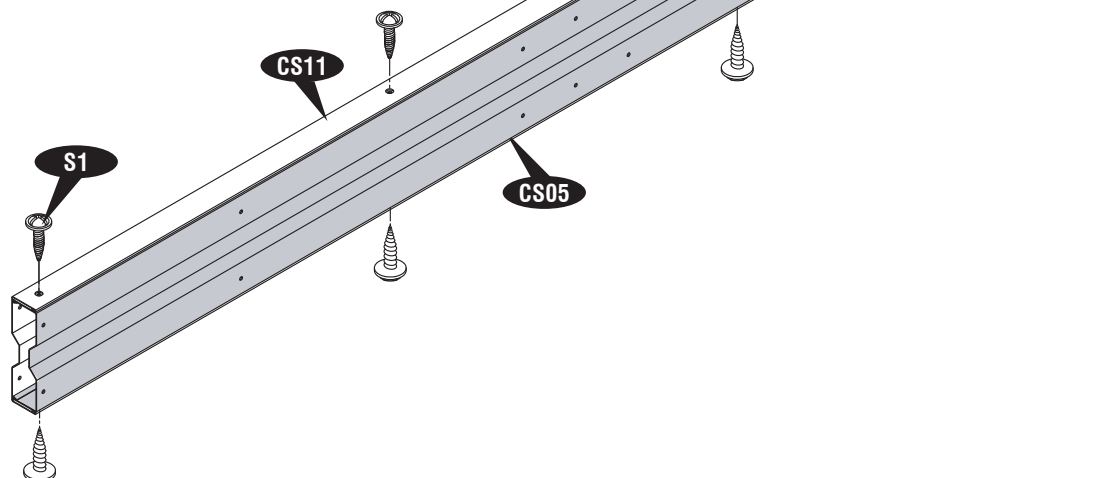


IMPORTANT: USE HAND GLOVES TO PREVENT INJURY.

Step - 4

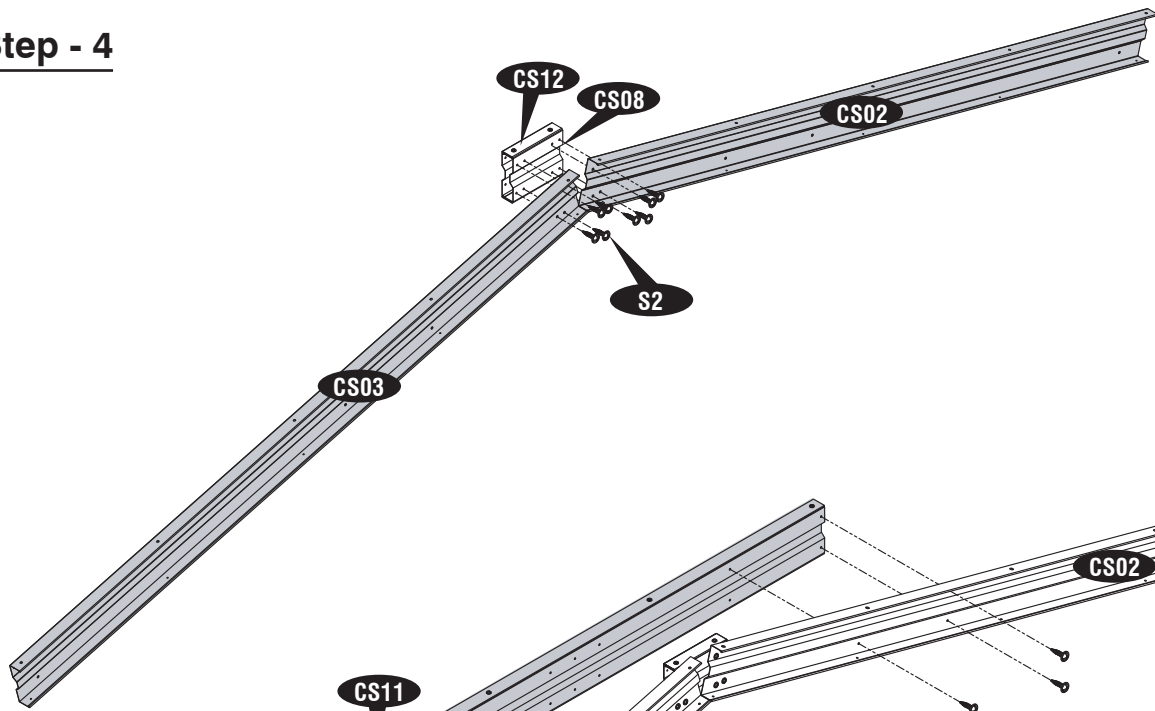

Step - 5

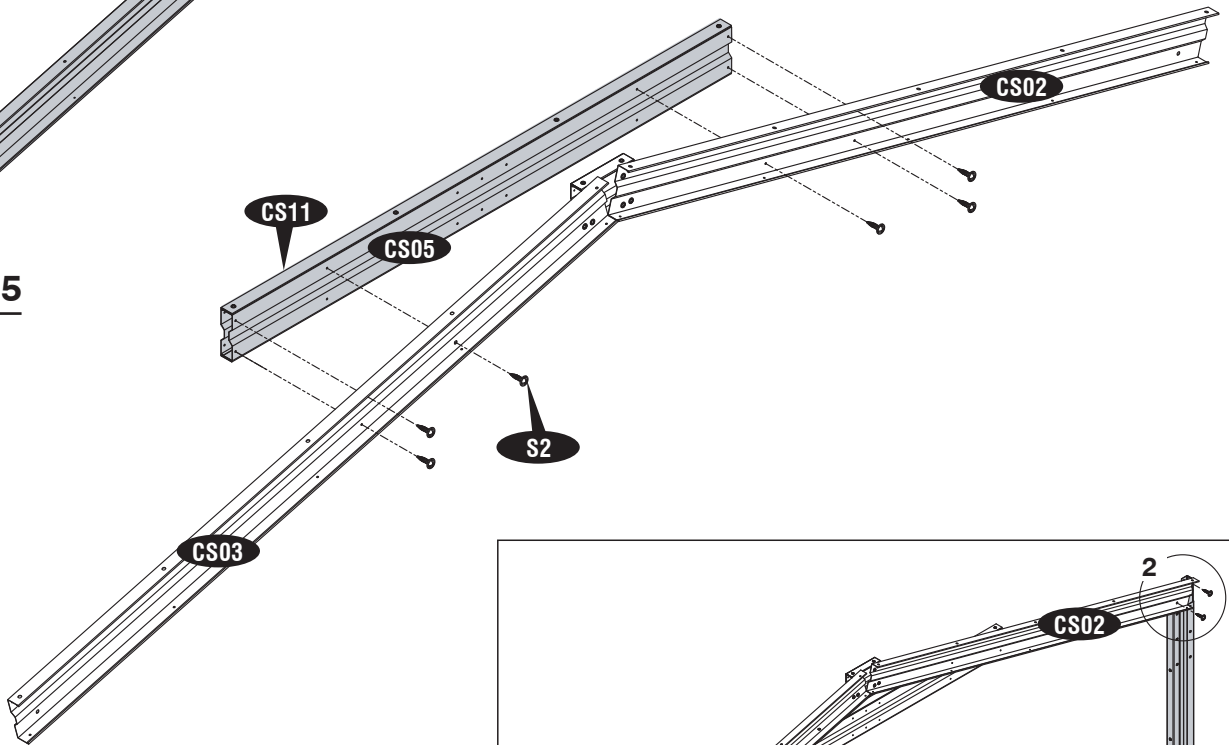

Step - 6

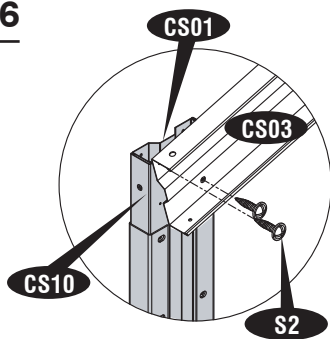


Fig.1


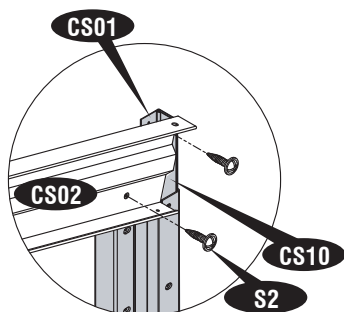


Fig.2

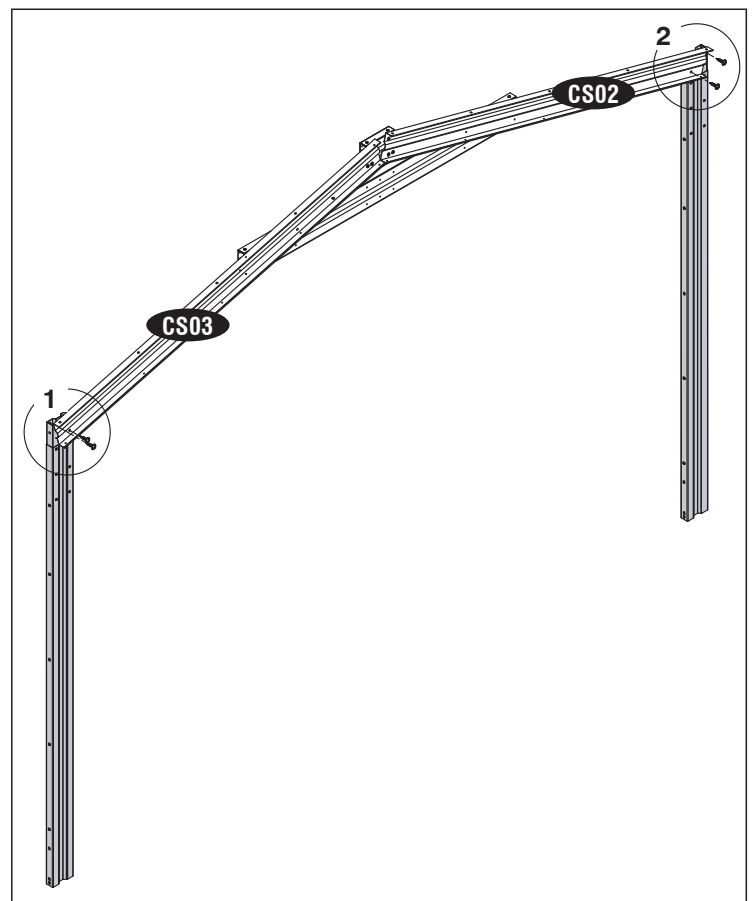

IMPORTANT: USE HAND GLOVES TO PREVENT INJURY.

Step -7

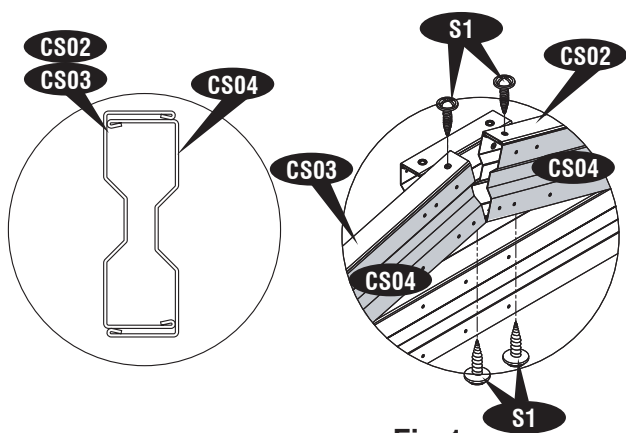


Fig.1

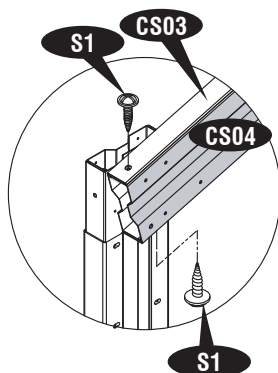


Fig.2


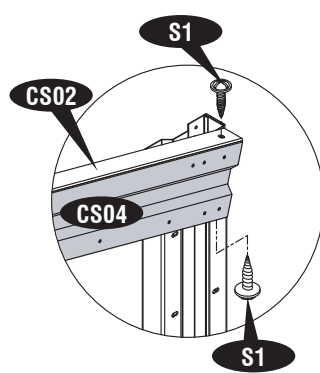


Fig.3

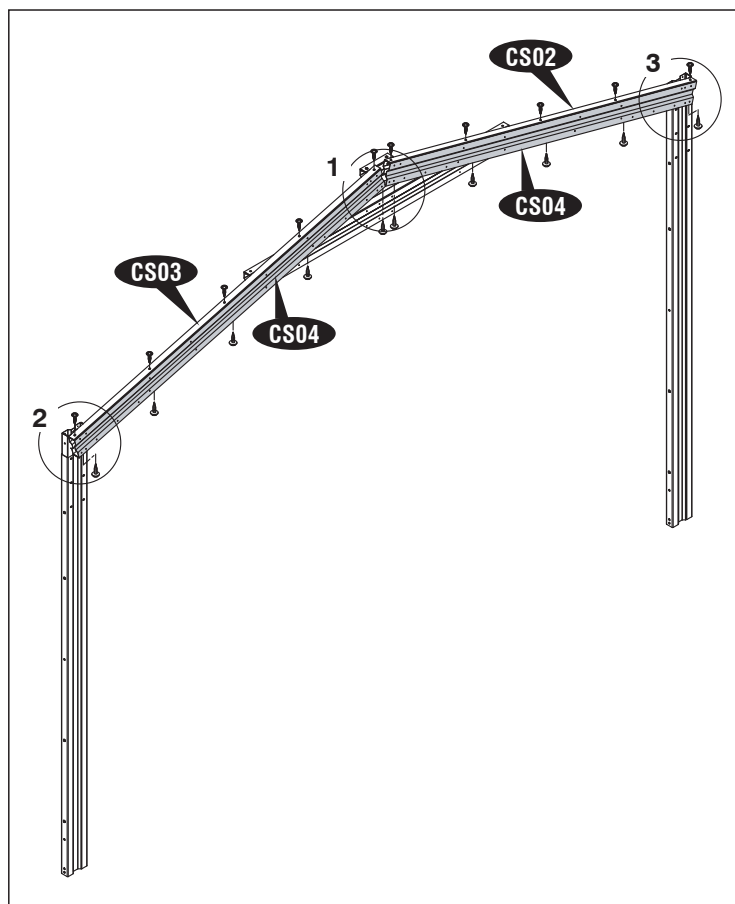

Step -8


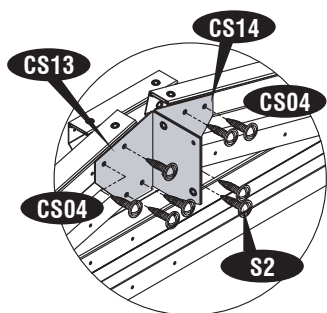


Fig.1

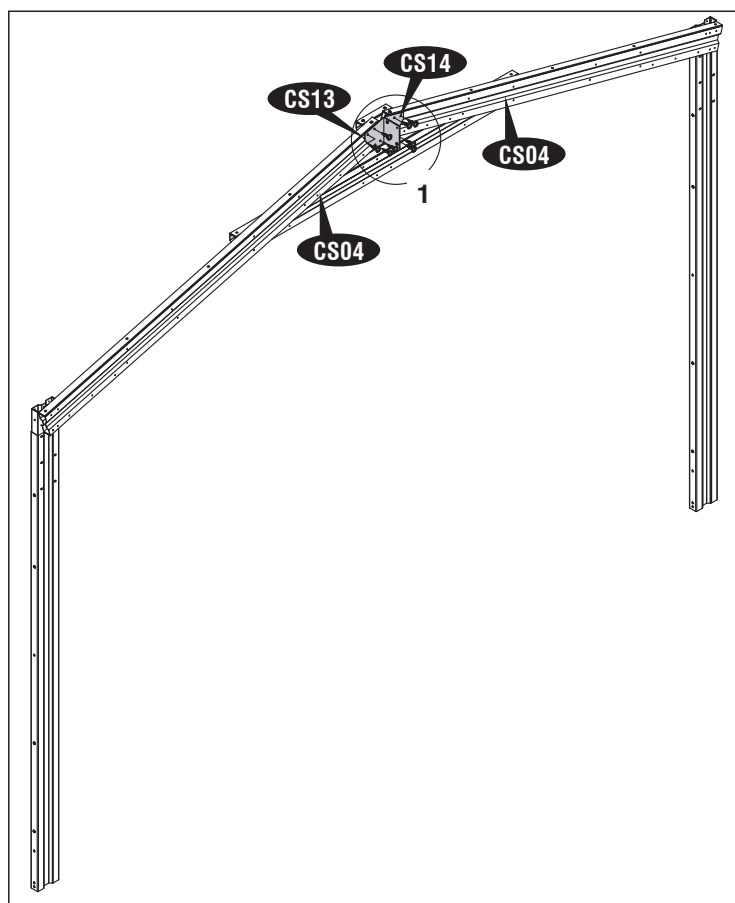

Step -9

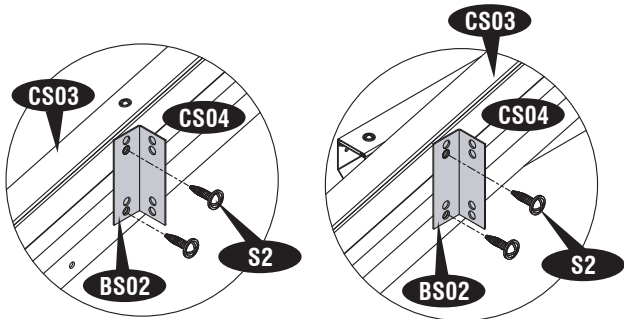


Fig.1

Fig.2


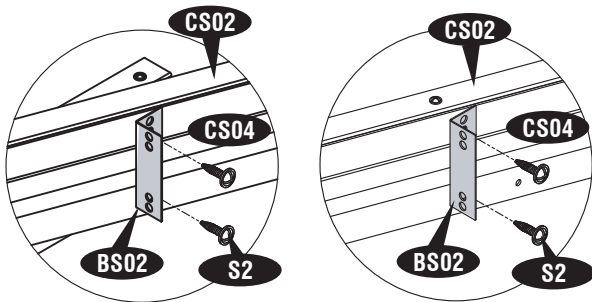


Fig.3

Fig.4

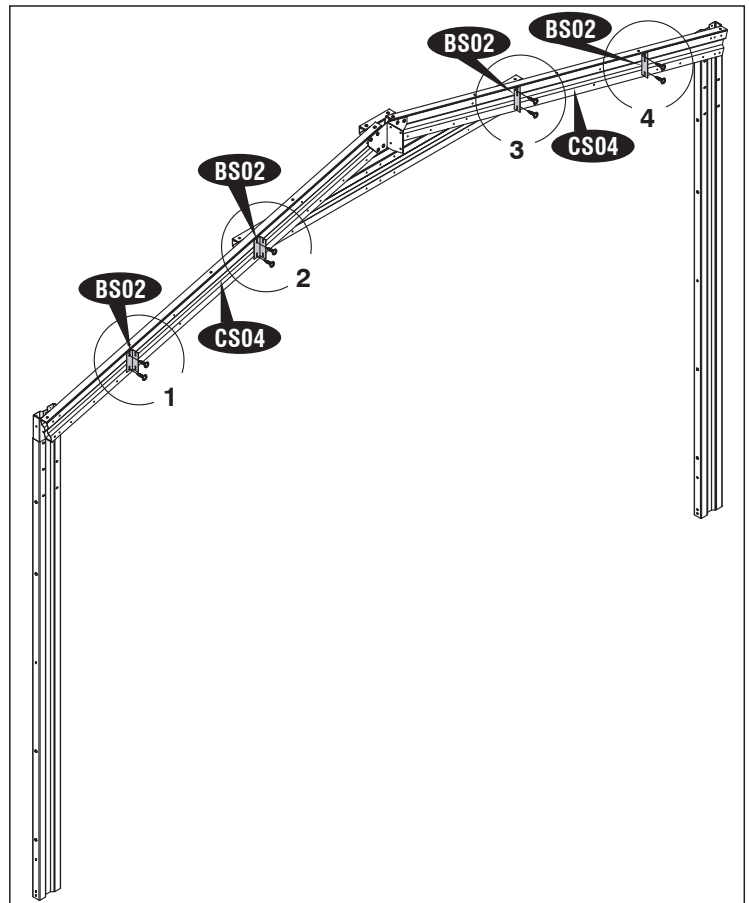

Step -10

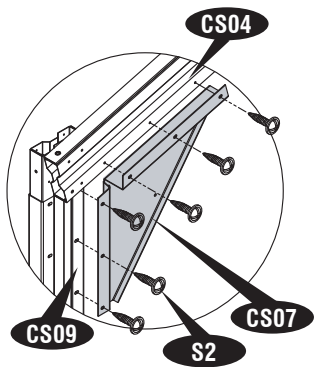


Fig.1




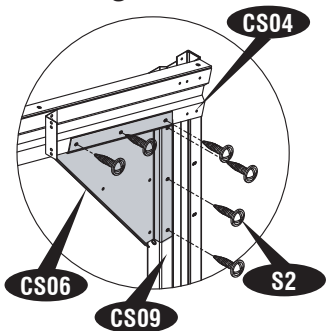




Fig.2

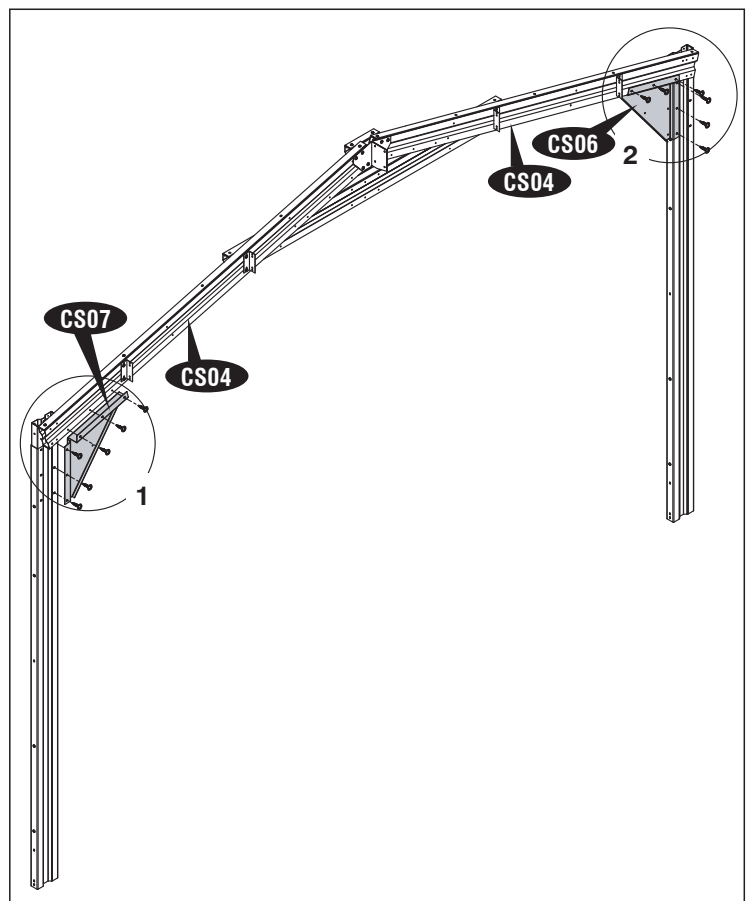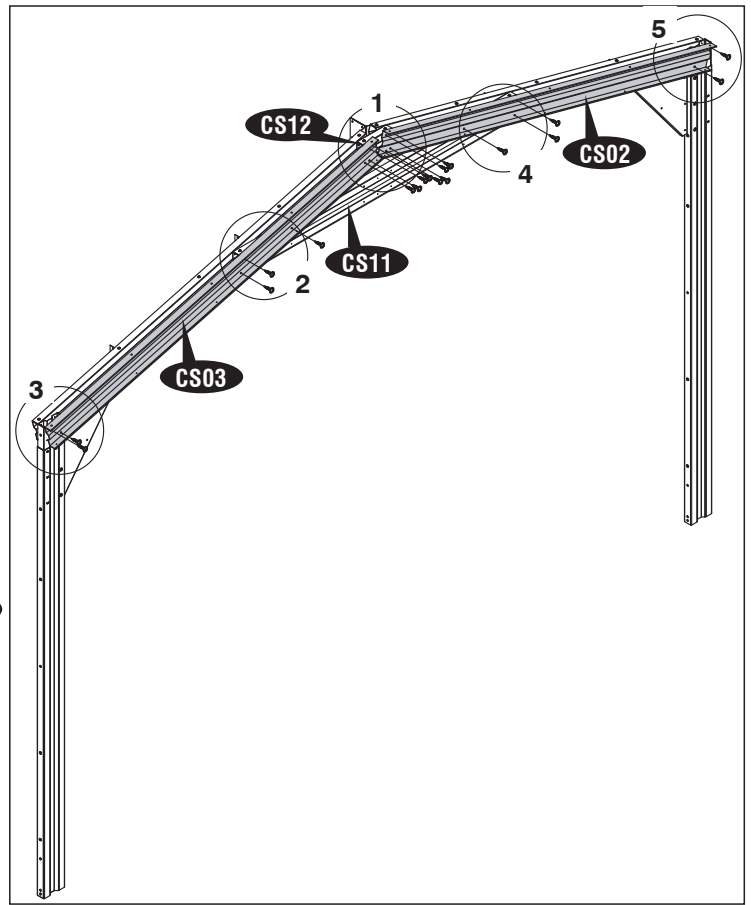

Step - 11

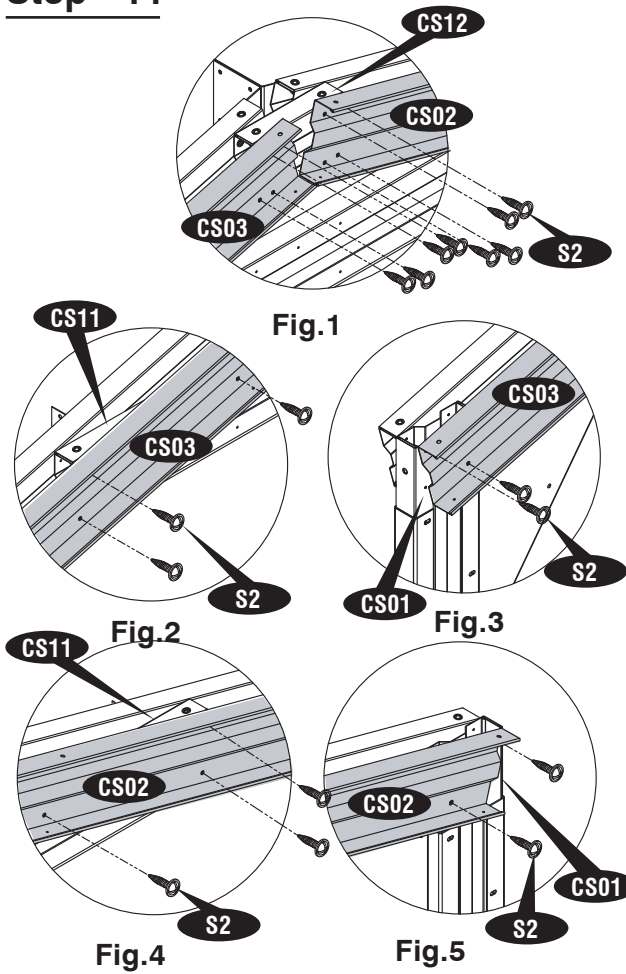

Step - 12

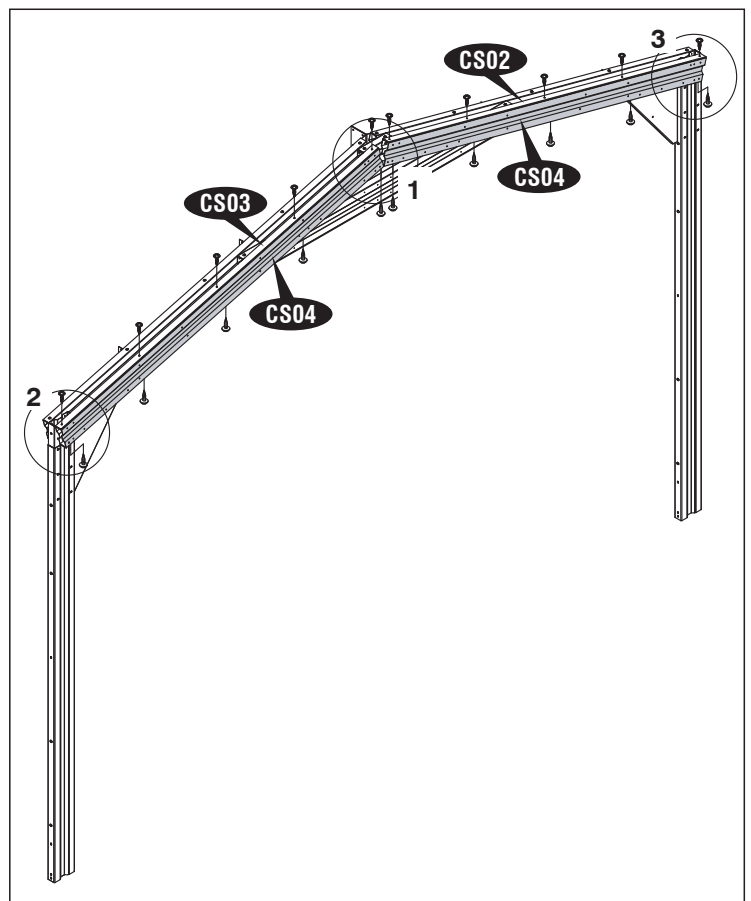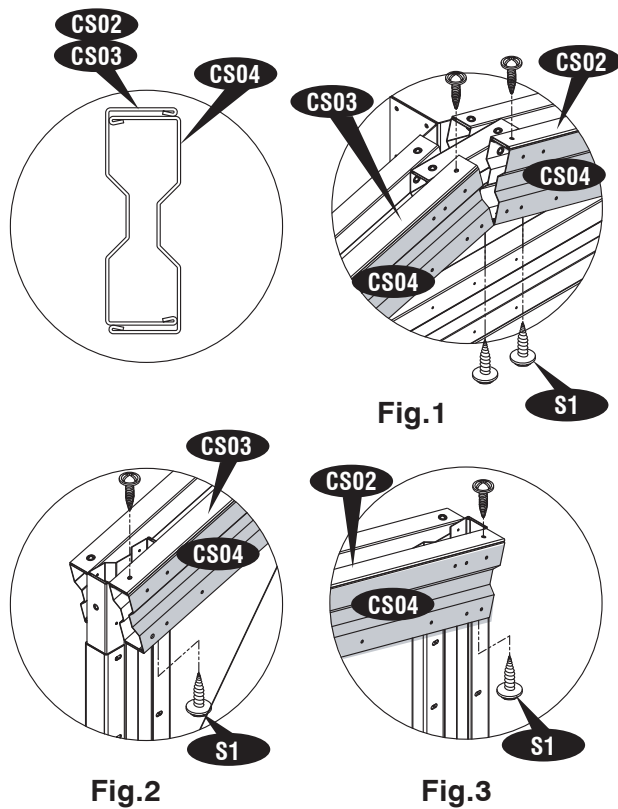

Step - 13


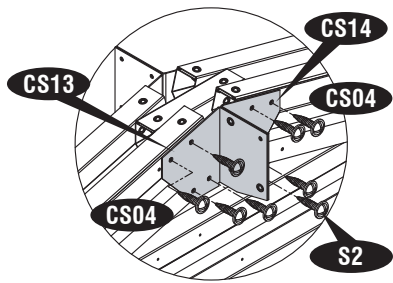


Fig.1

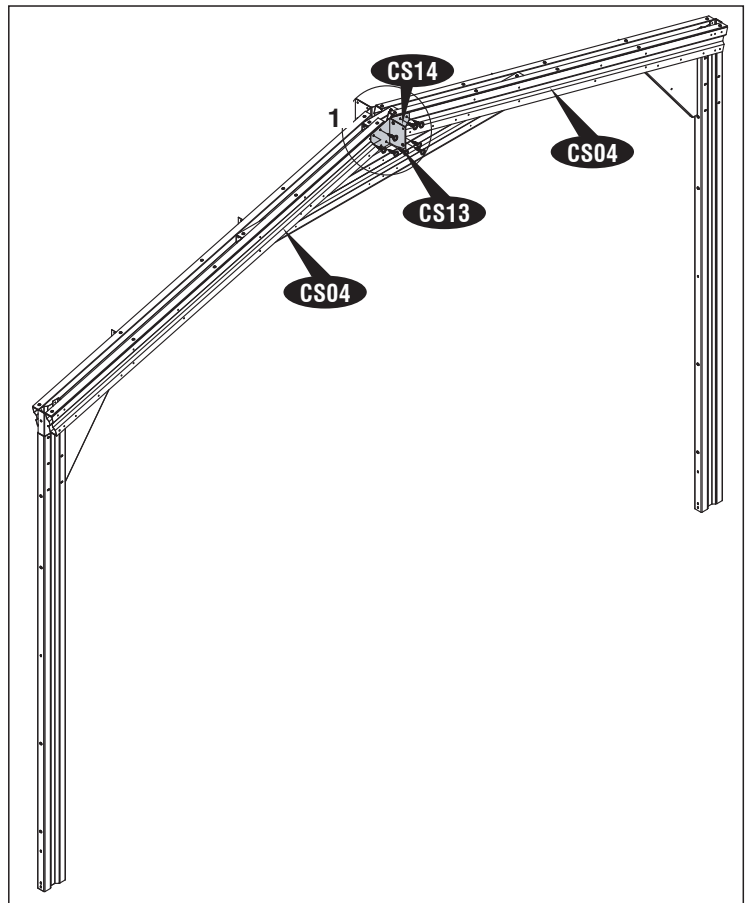

Step - 14

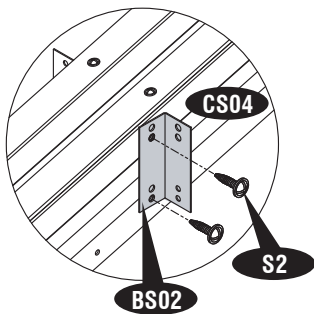


Fig.1

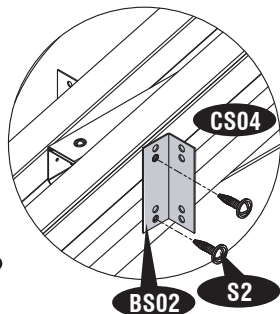


Fig.2

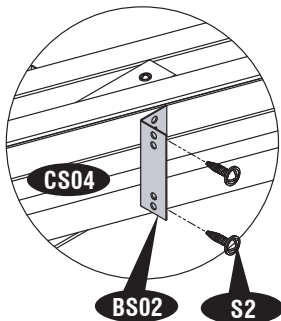


Fig.3


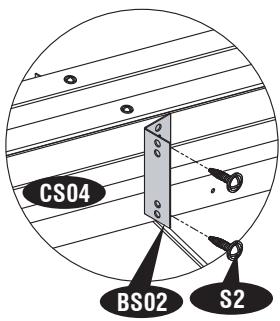


Fig.4

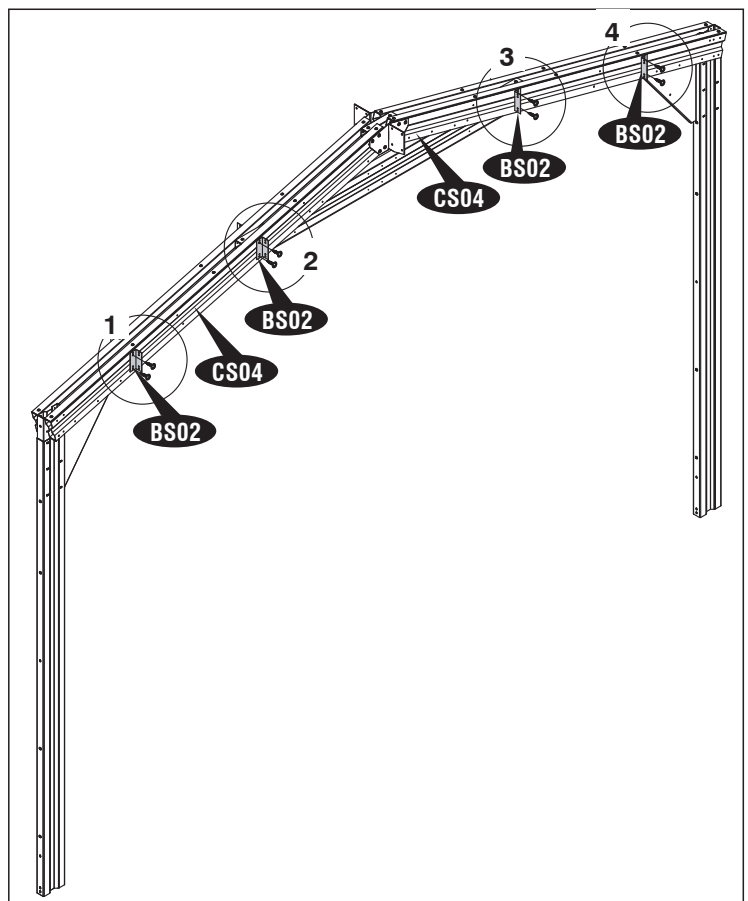

Step - 15

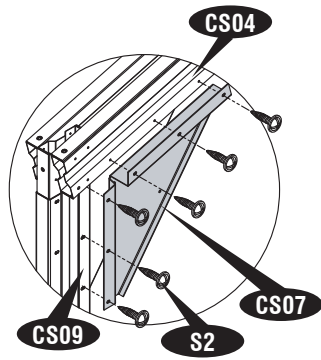


Fig.1


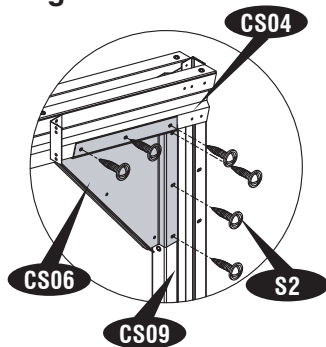


Fig.2

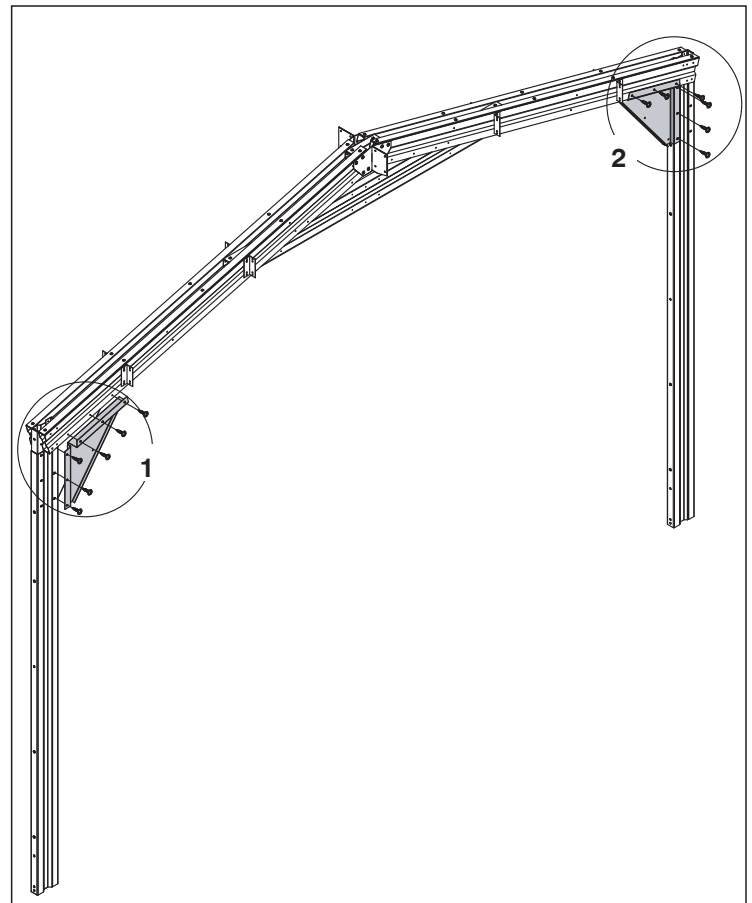

Step - 16

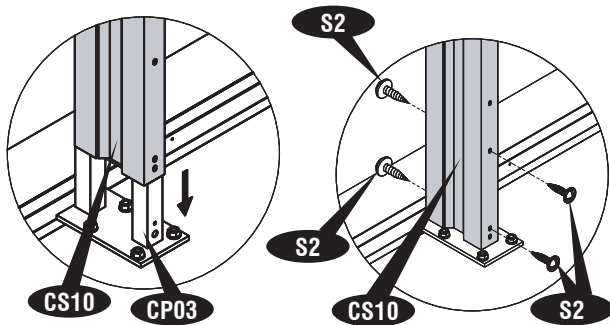


Fig.1

Fig.2


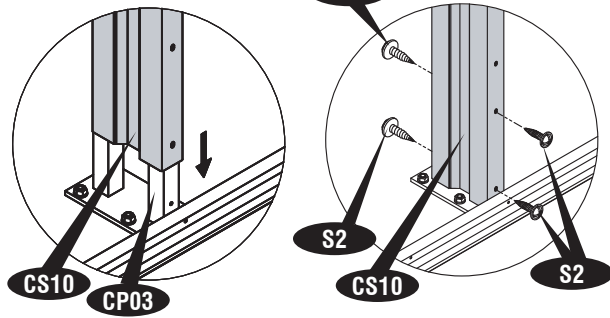


Fig.3

Fig.4

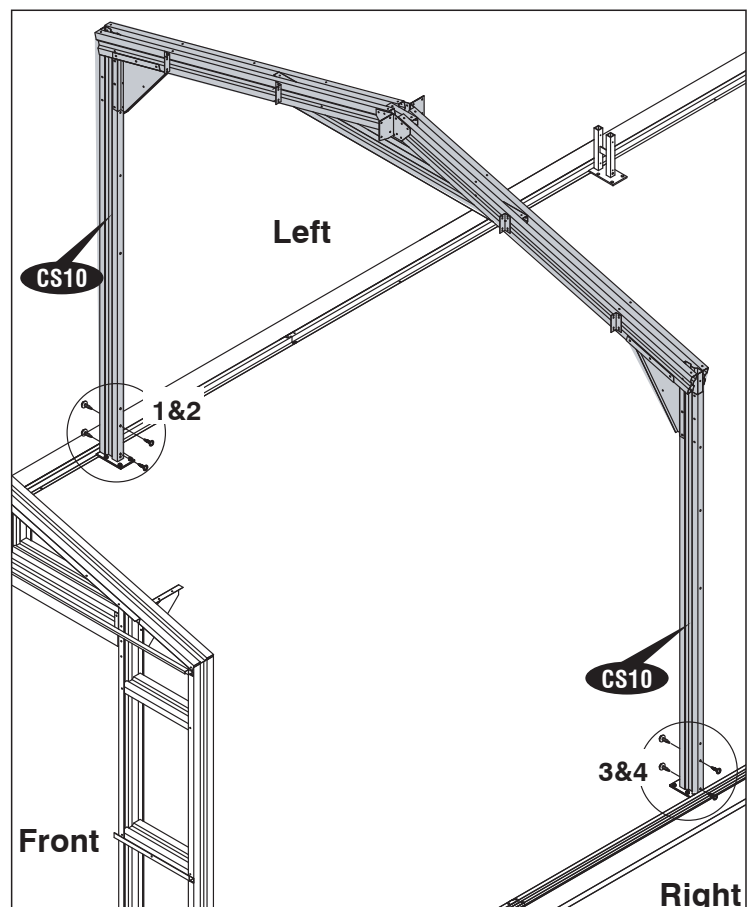

Step - 17

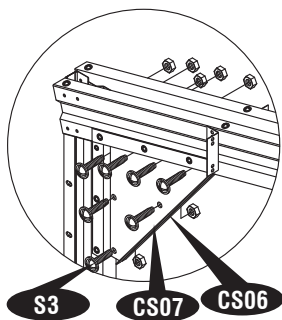


Fig.1


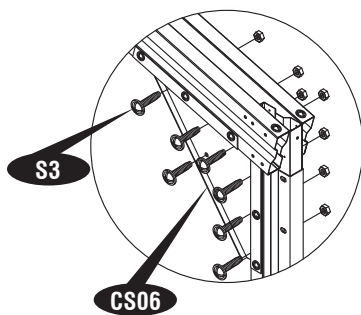


Fig.2

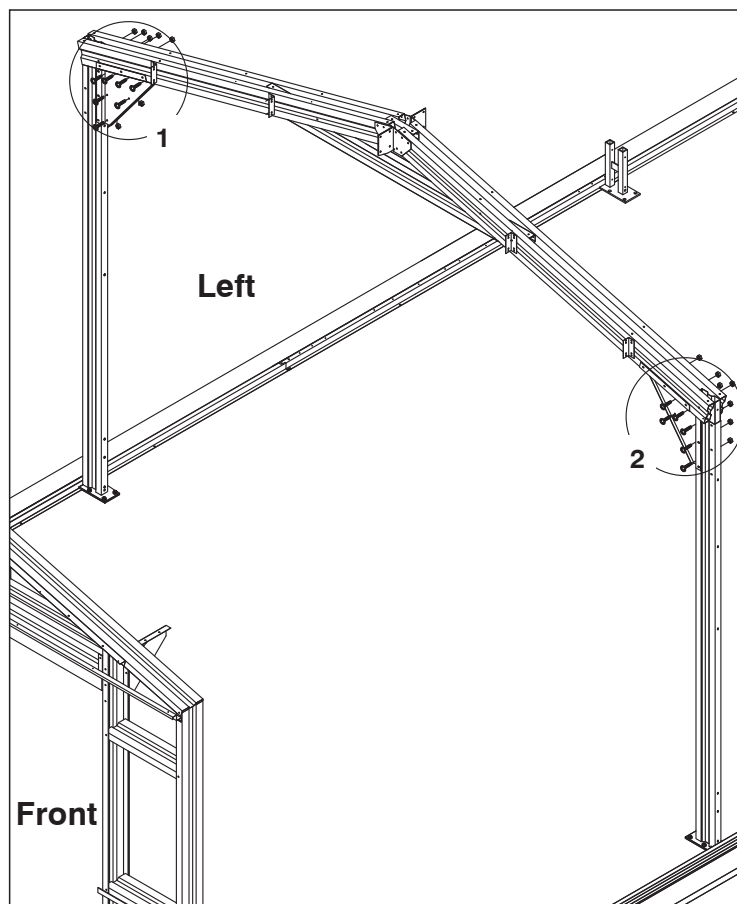

Step - 18

Follow steps 1-15 & prepare another center structure assembly & Assemble with Column support plate (CP03). Use (S2) Screws.

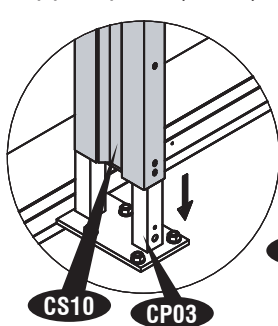


Fig.1

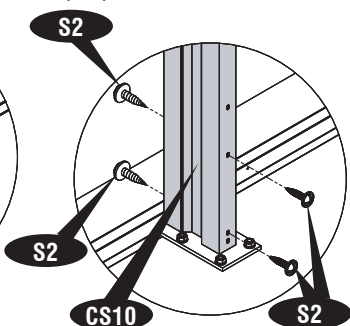


Fig.2

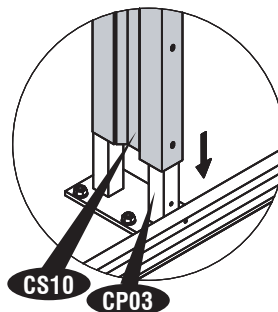


Fig.3


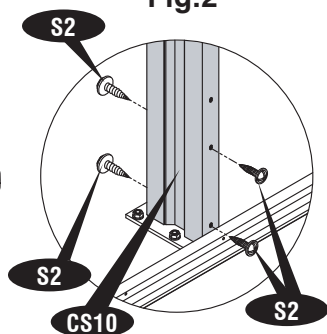


Fig.4

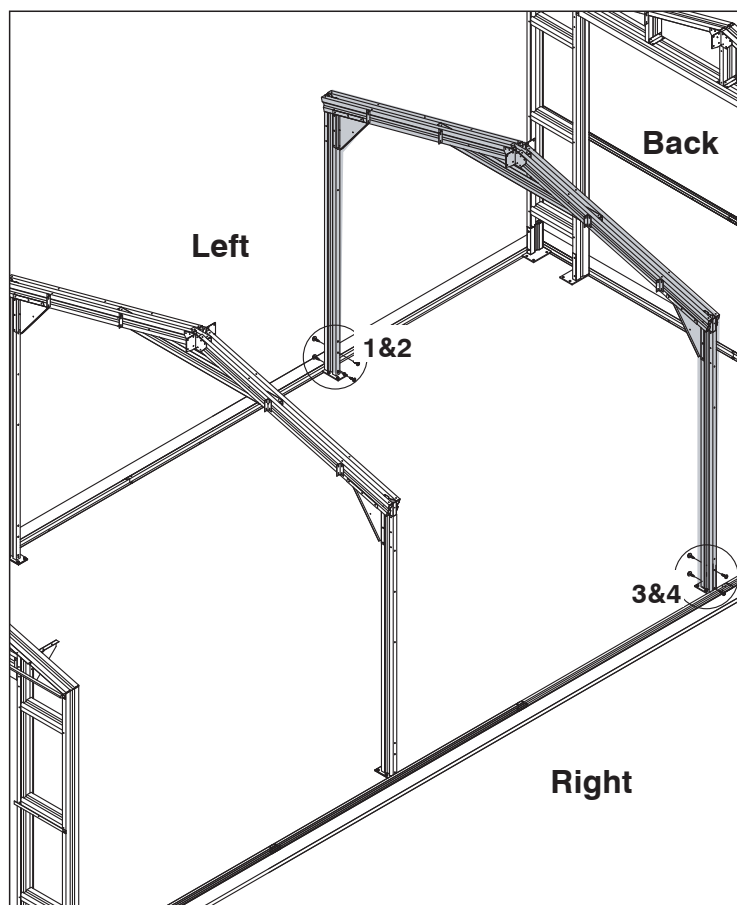

Step - 19

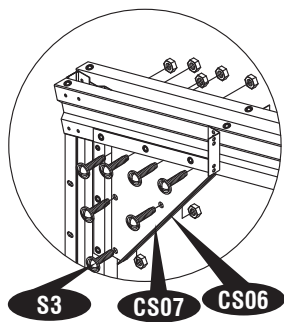


Fig.1



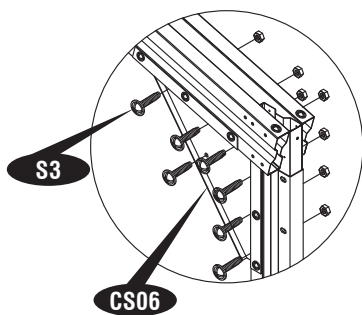


Fig.2

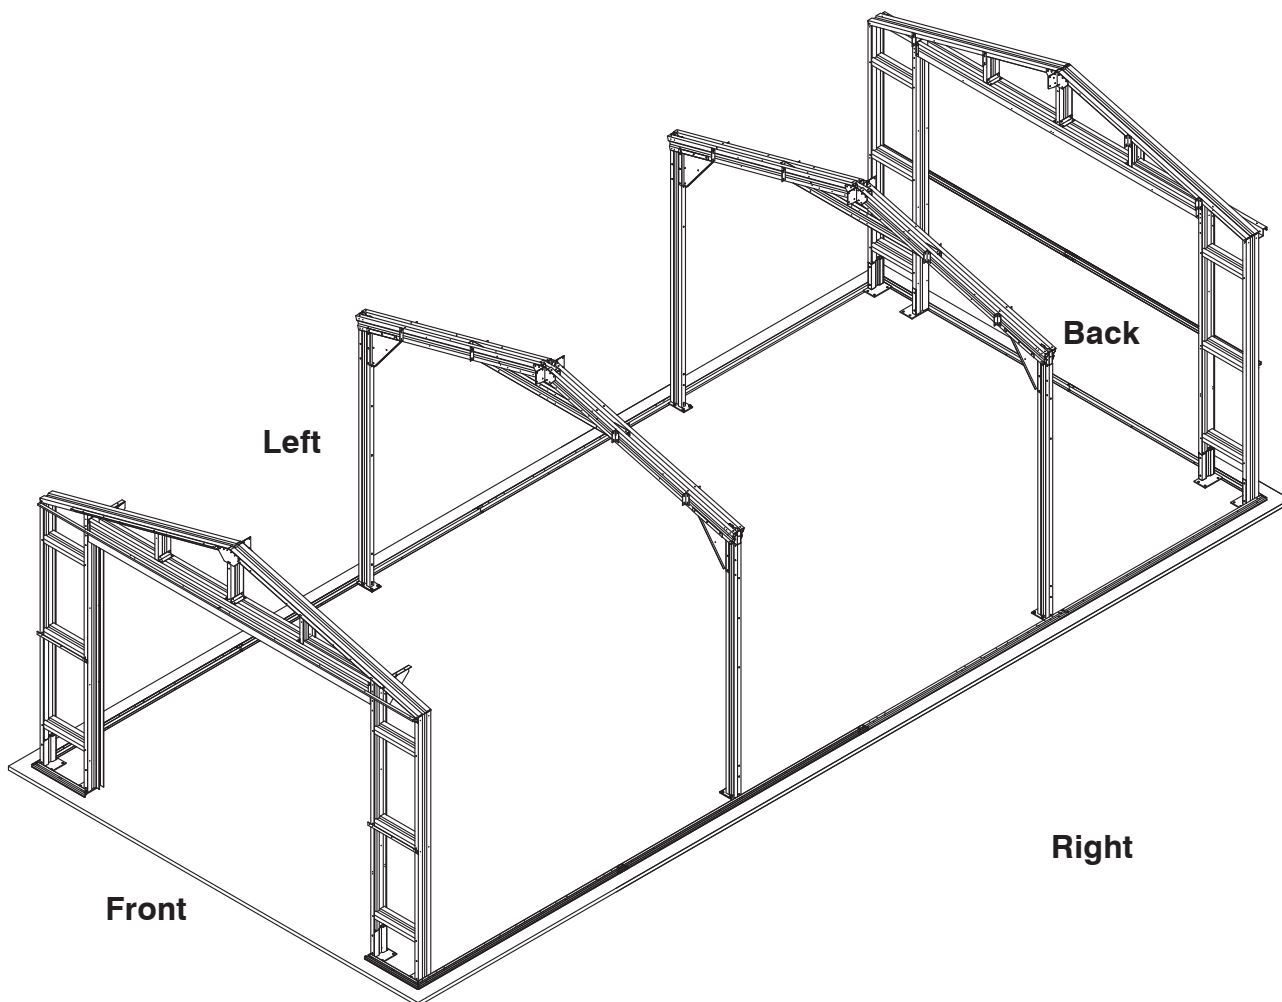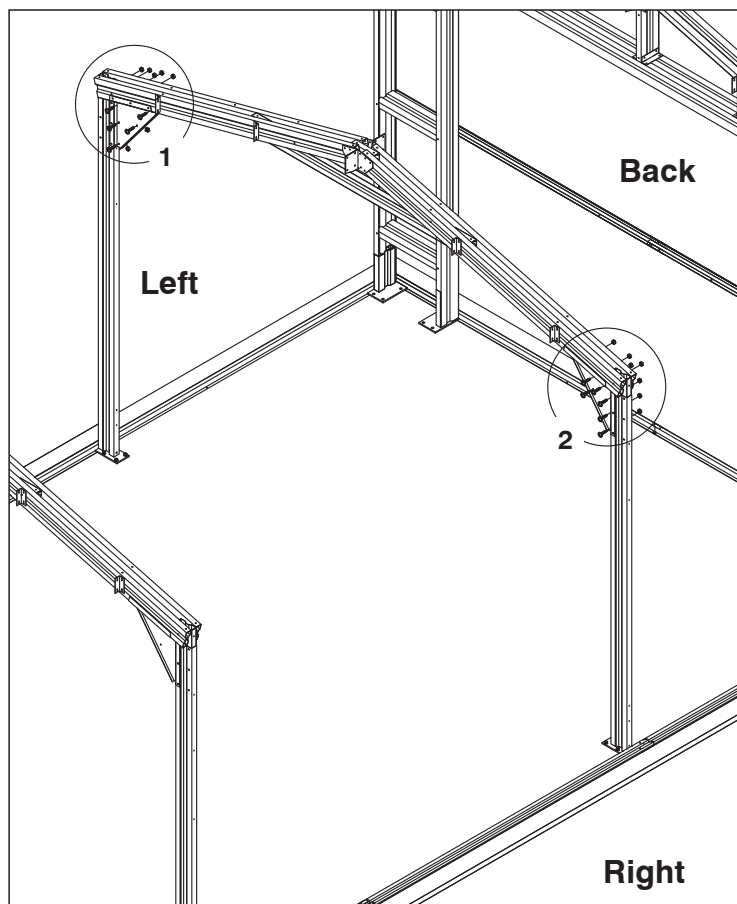


D. Roof Structure Assembly

Parts Needed:

<u>Code</u>	<u>Qty</u>
RS01	11
RS02	1
DF06	1
DF07	1
WS03	4
WS04	2
BS12	1
BS13	1
GW	3
S1	20
S2	18
S3	64



Parts Needed for each extension:

<u>Code</u>	<u>Qty</u>
ERS01	6
EWS03	1
EWS04	1
S1	6
S2	2
S3	28


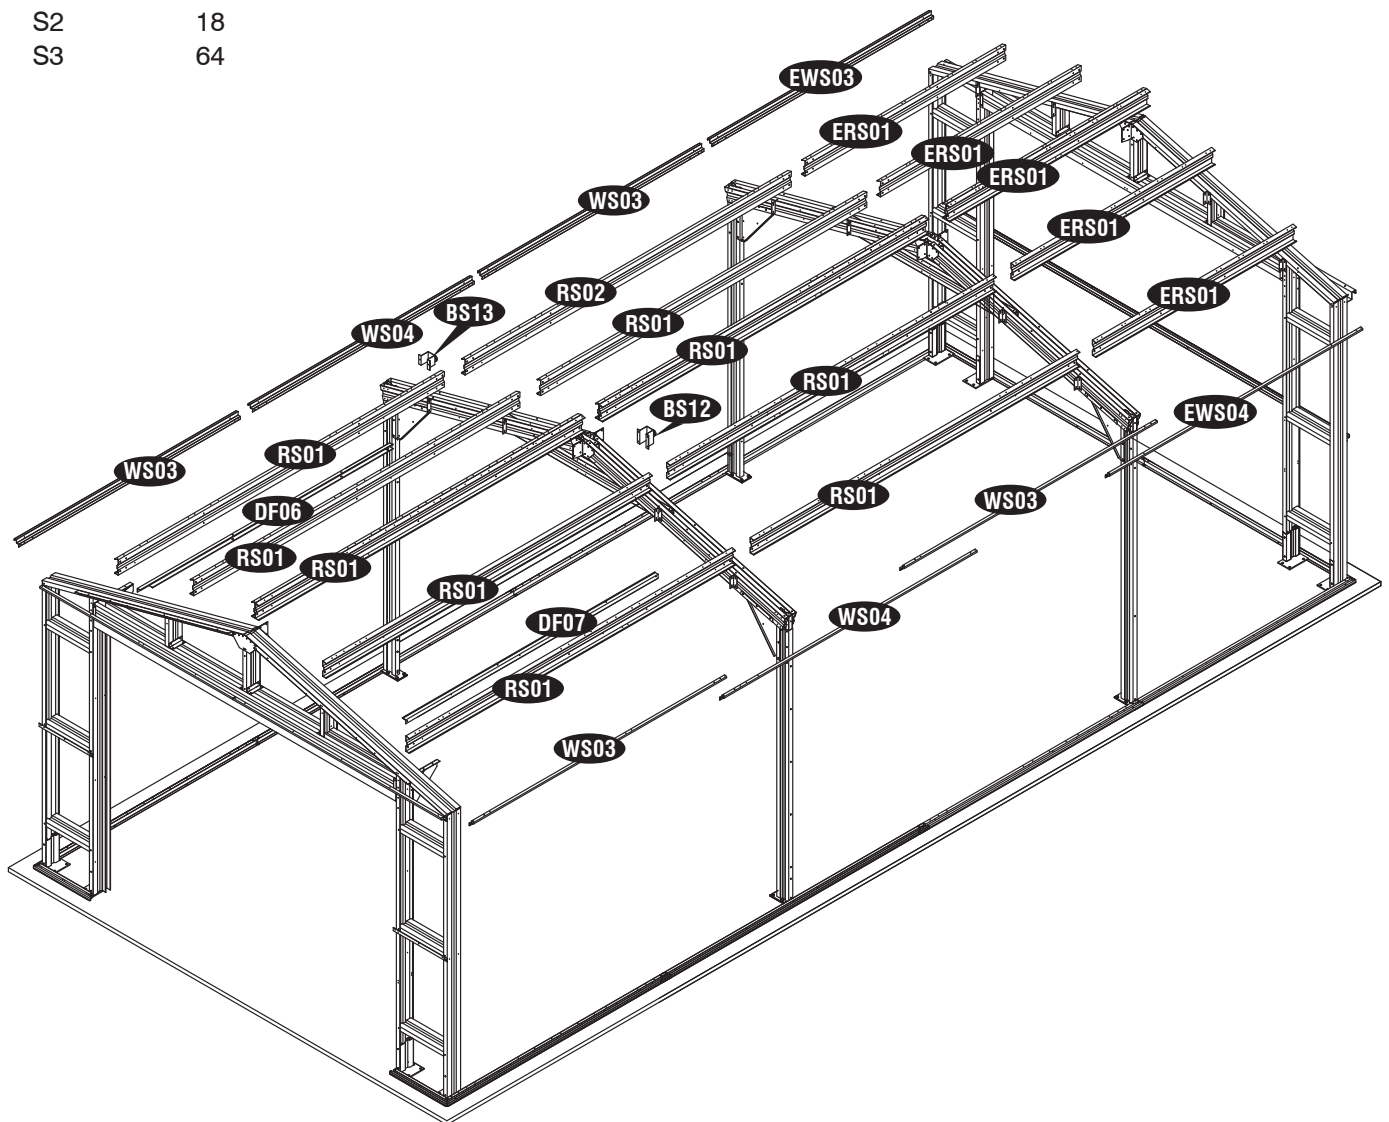


Step -1

Make 2 Sets

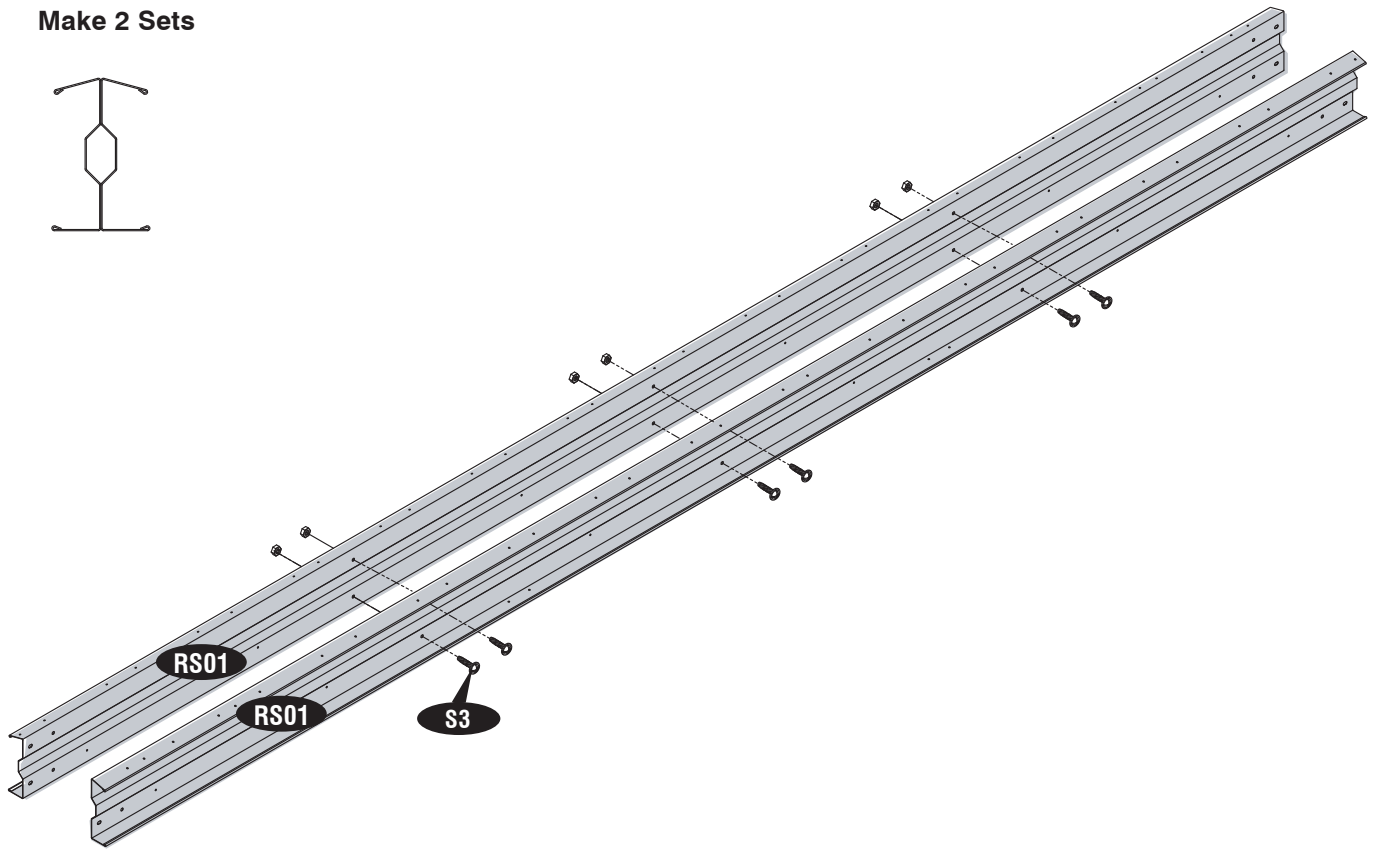

Step -2

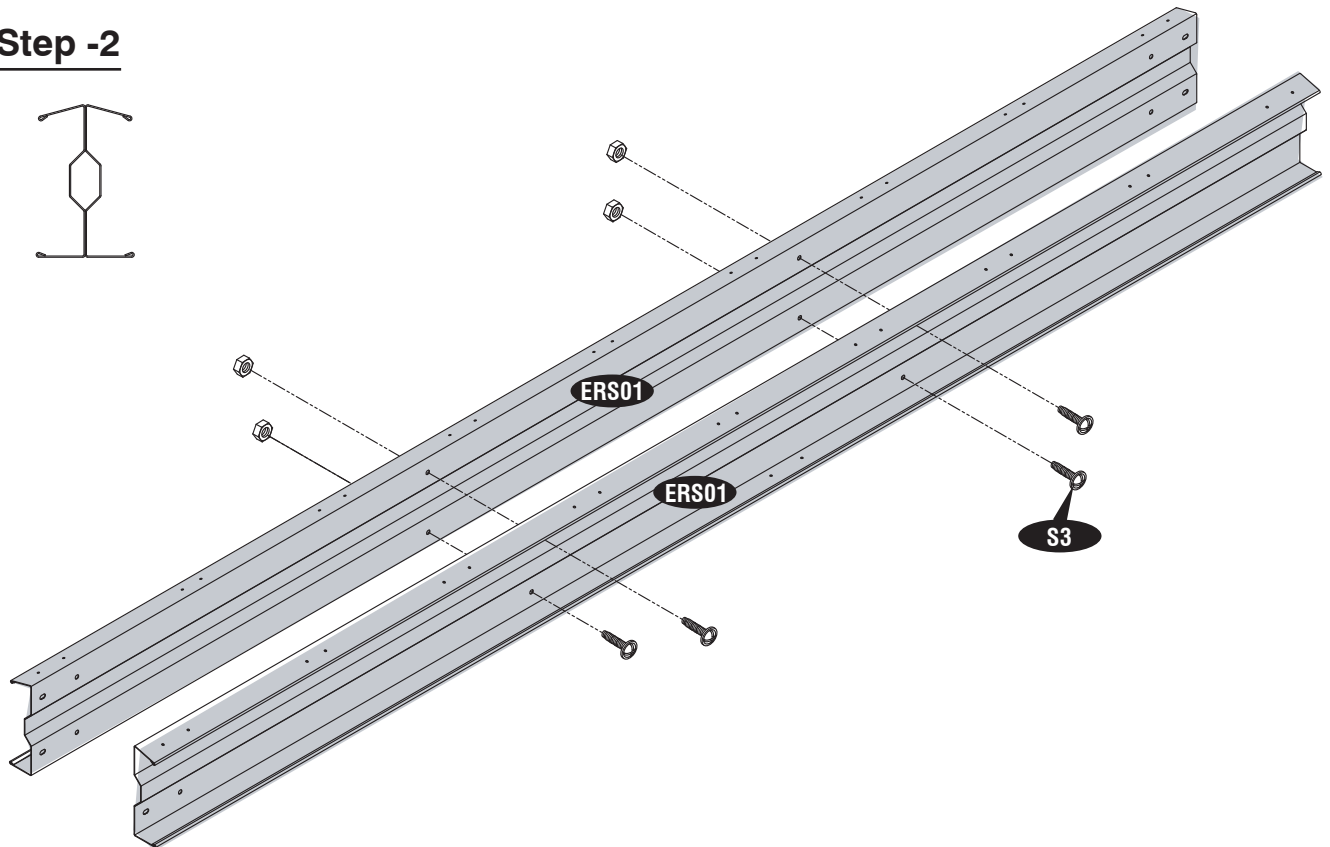

Step -3

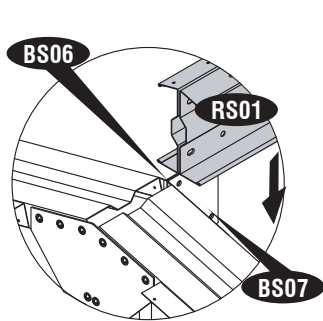
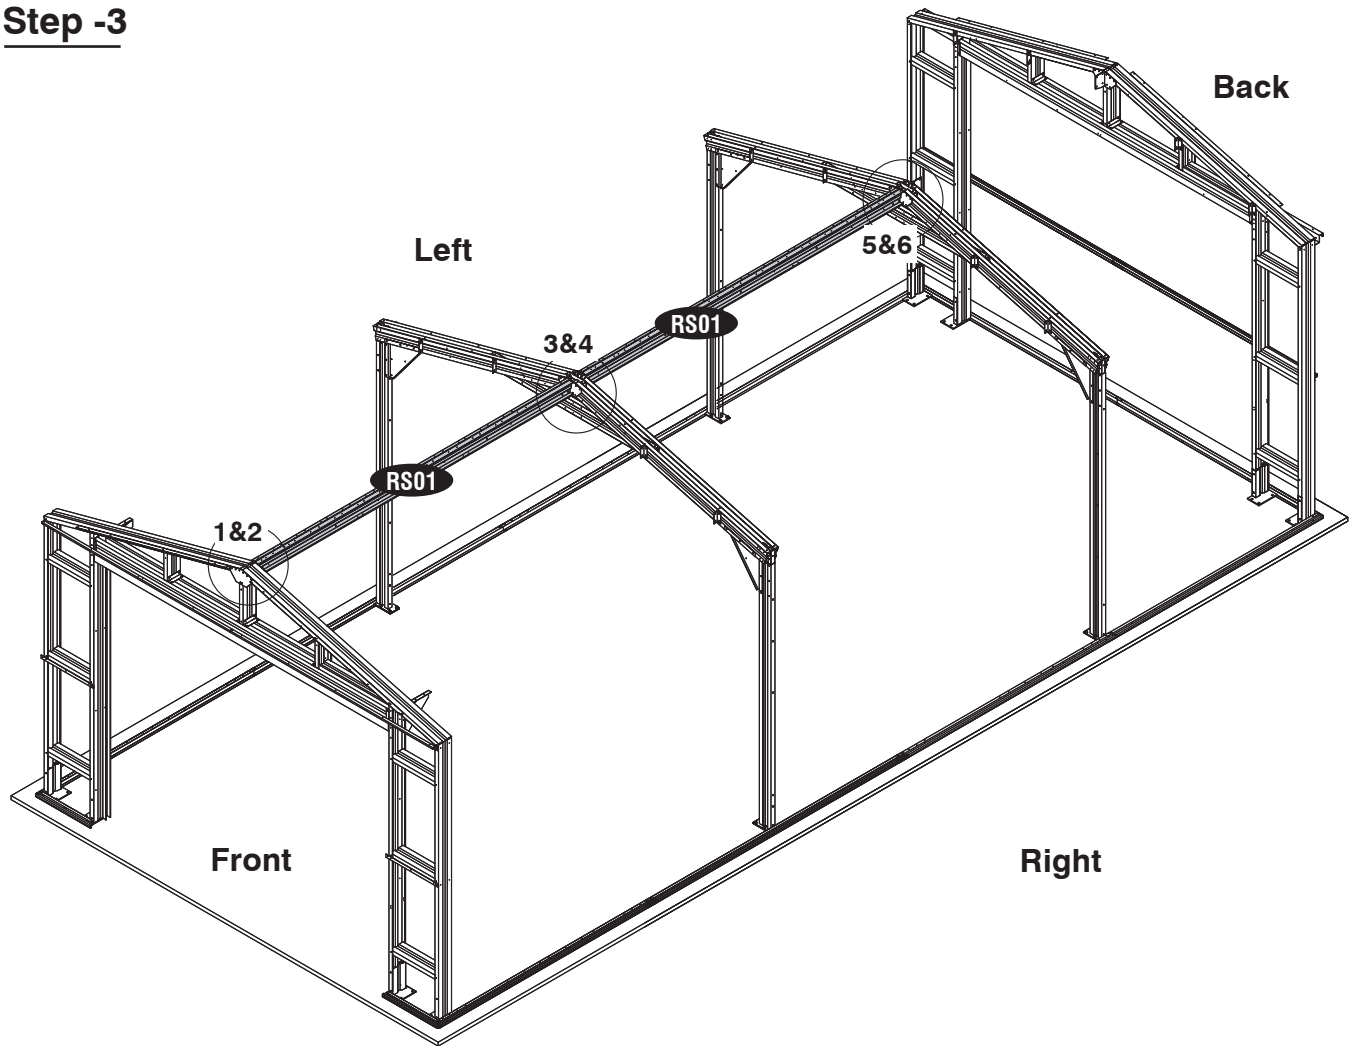


Fig.1

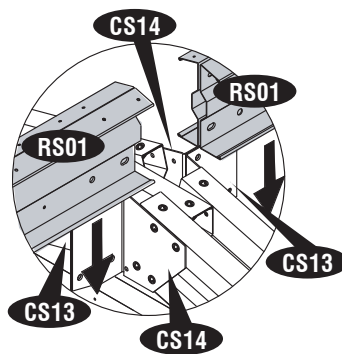


Fig.3

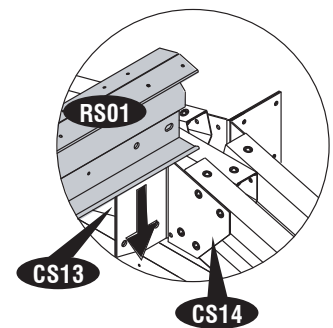


Fig.5

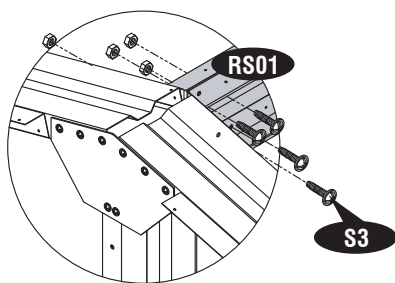


Fig.2

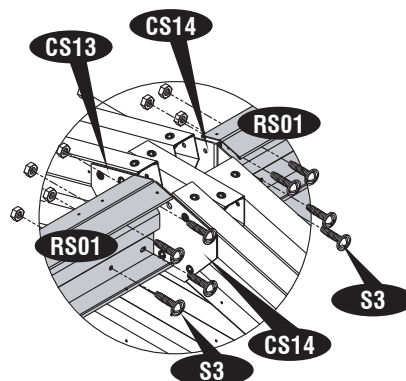


Fig.4

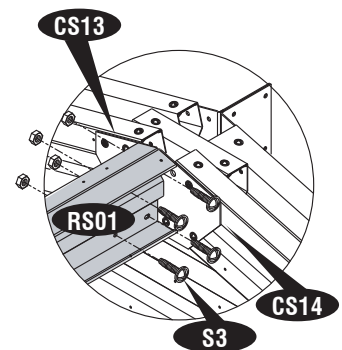


Fig.6

IMPORTANT: USE HAND GLOVES TO PREVENT INJURY.

Step -4

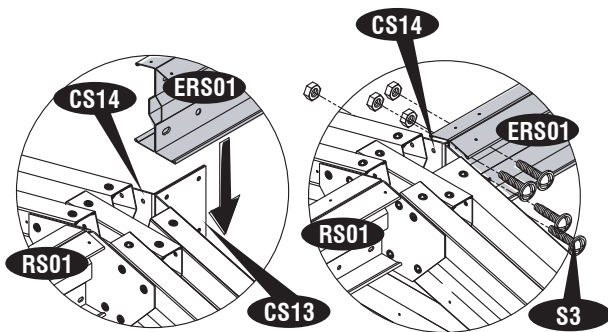


Fig.1

Fig.2


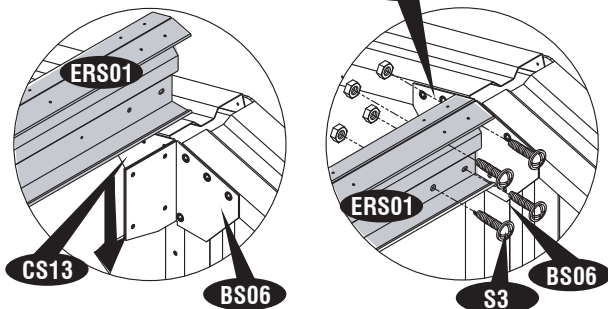


Fig.3

Fig.4

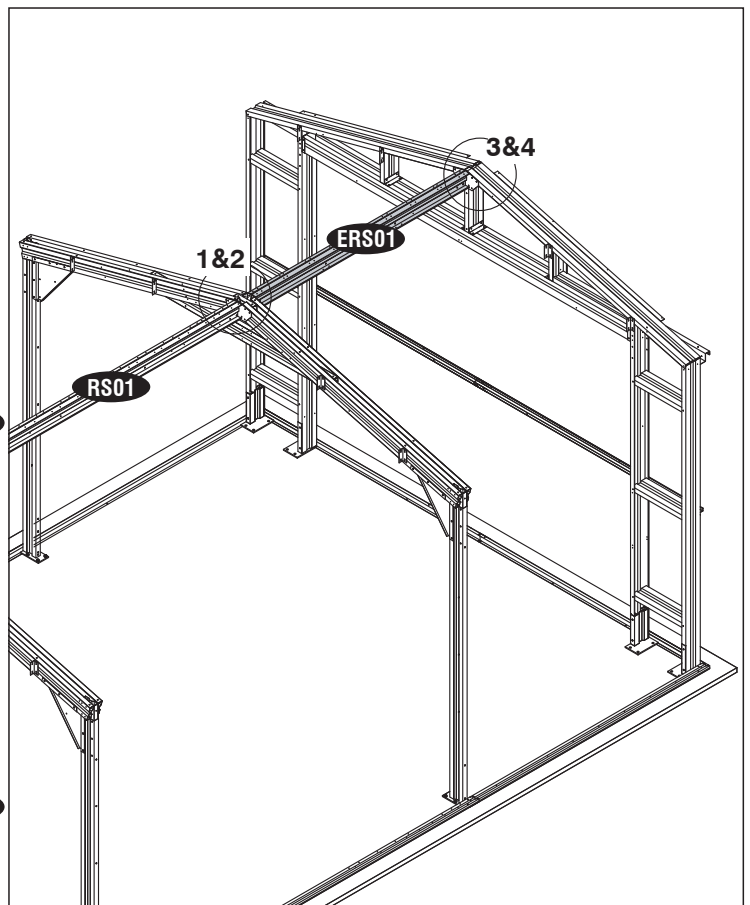

Step -5

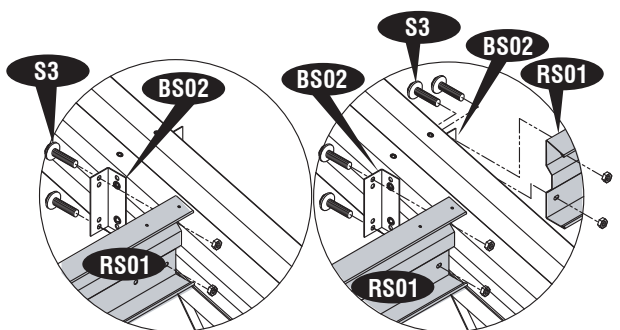


Fig.1

Fig.2


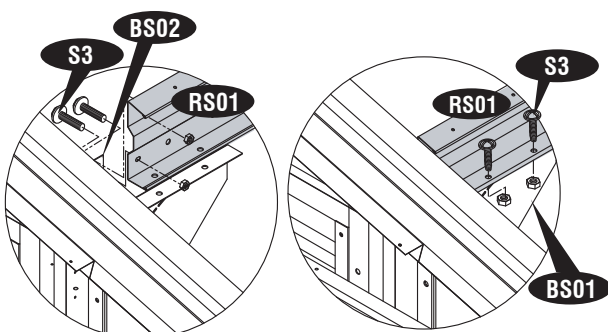


Fig.3

Fig.4

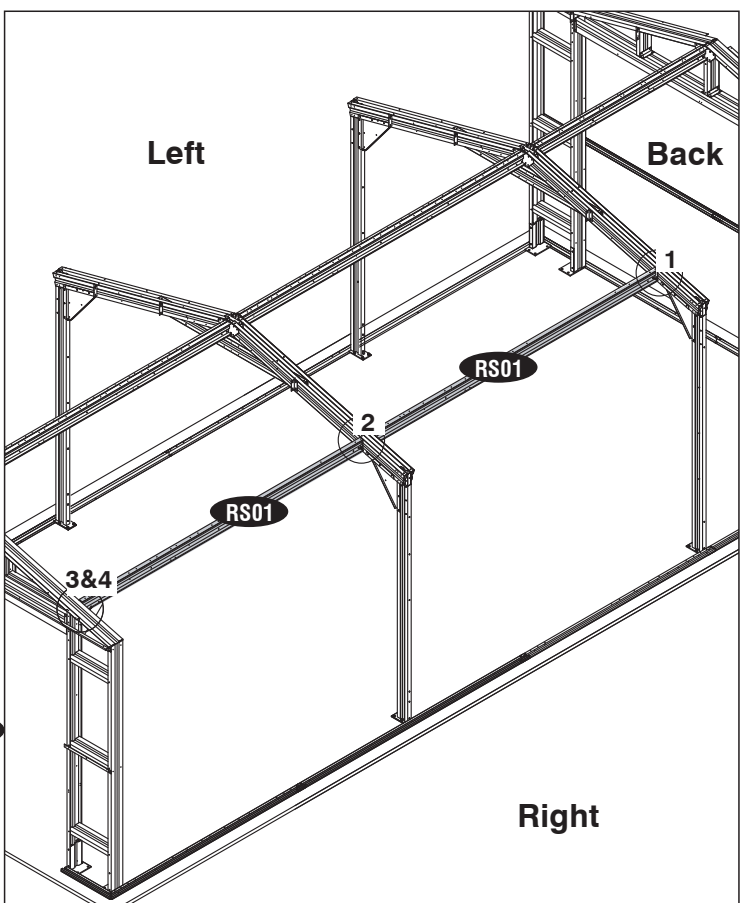

Step - 6

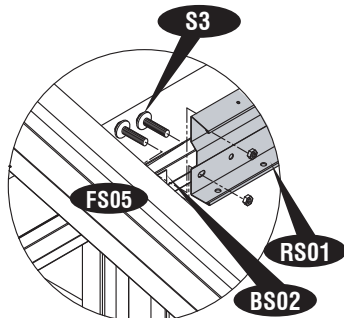


Fig.1

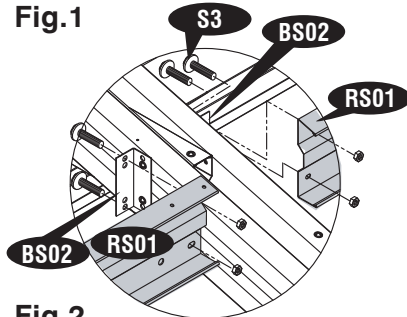


Fig.2


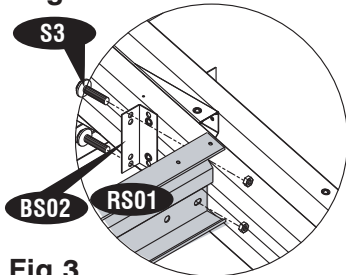


Fig.3

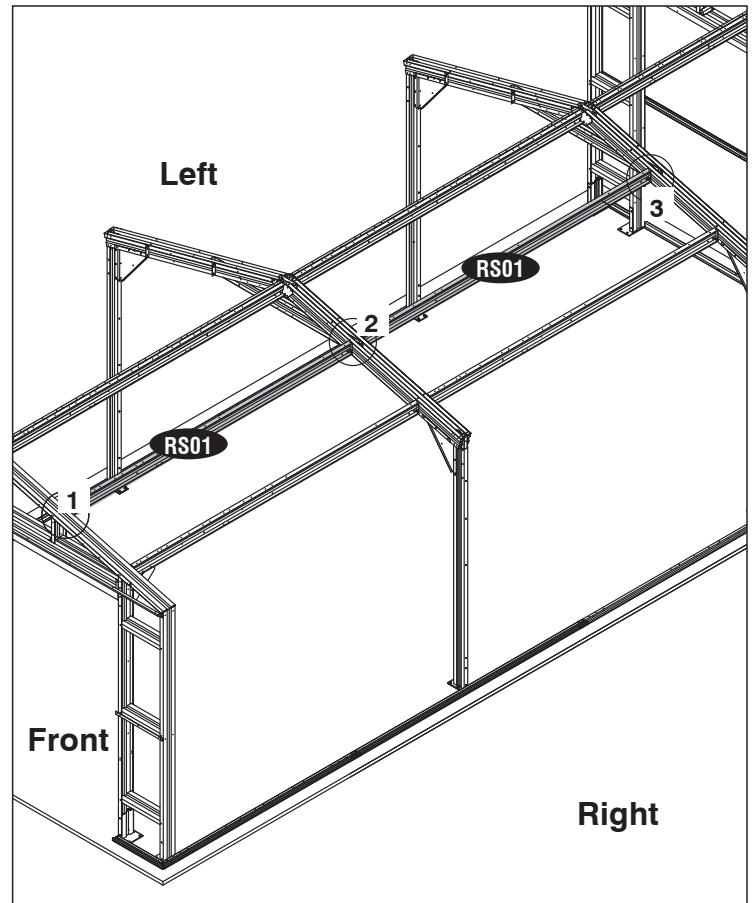

Step - 7

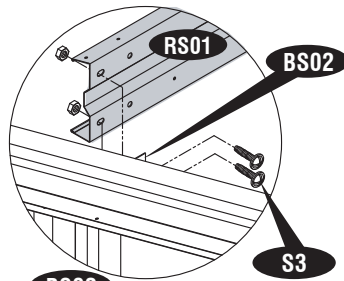


Fig.1

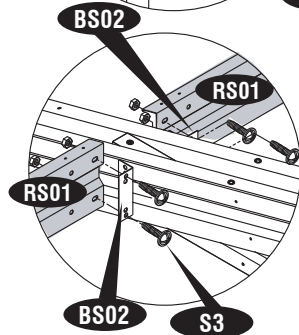


Fig.2




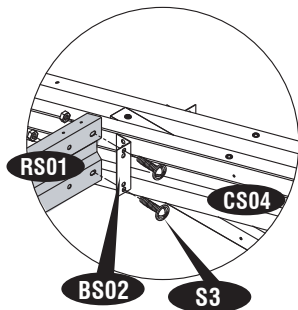




Fig.3

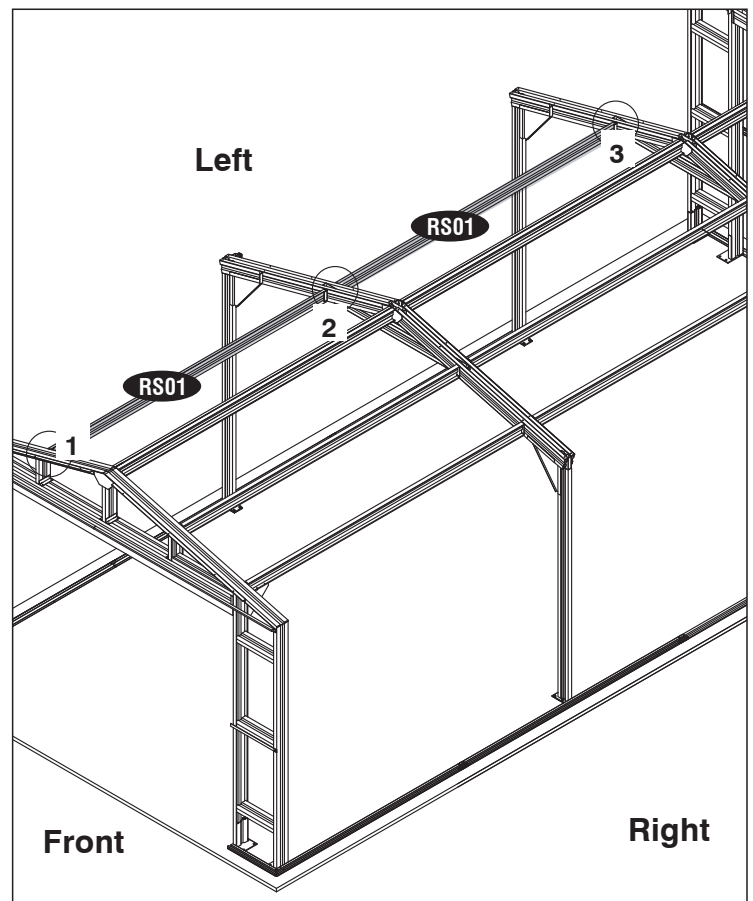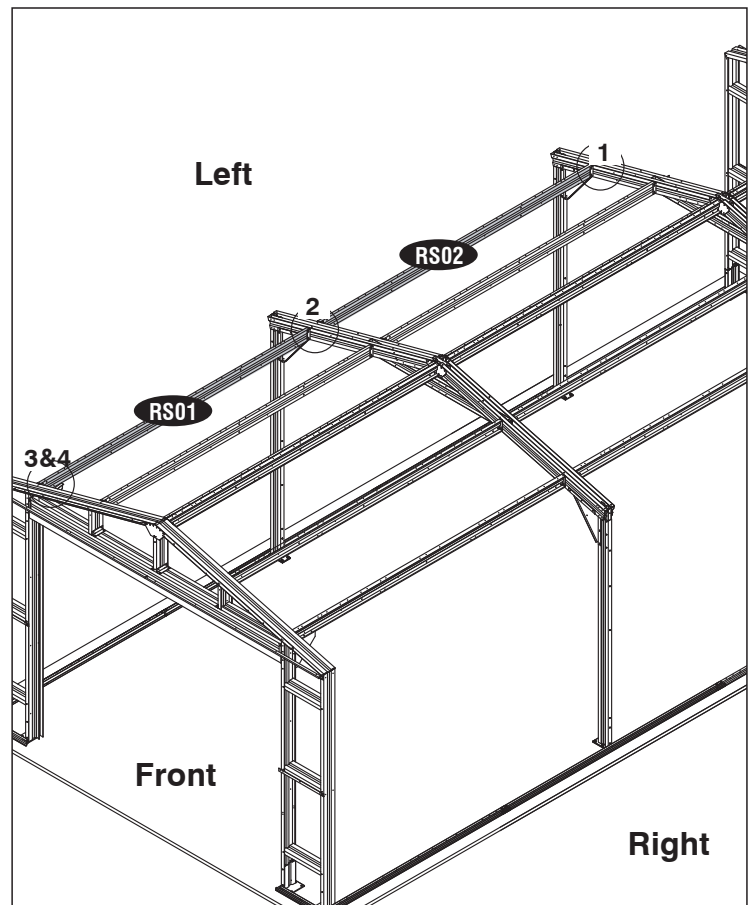



Step - 8

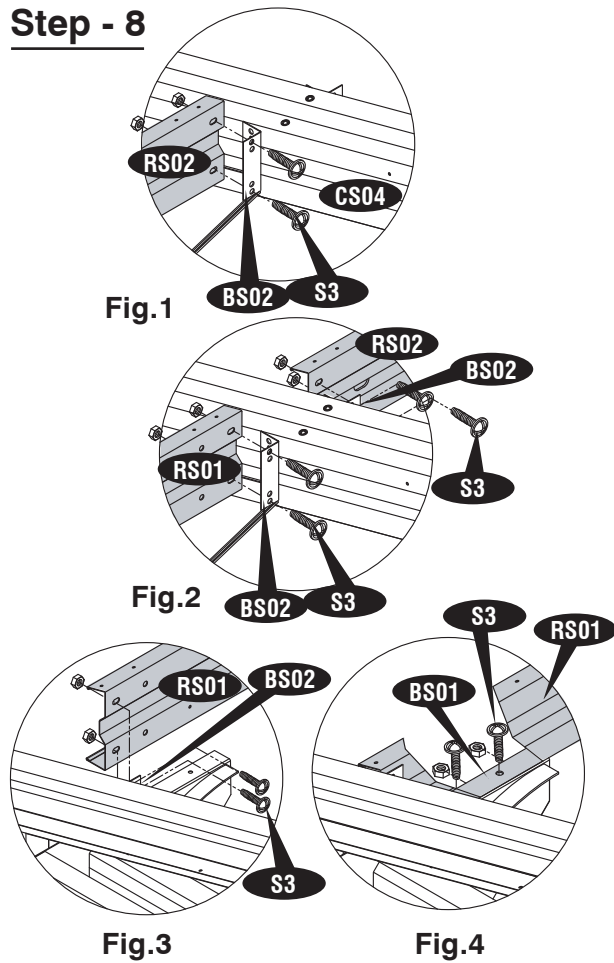


Step -9

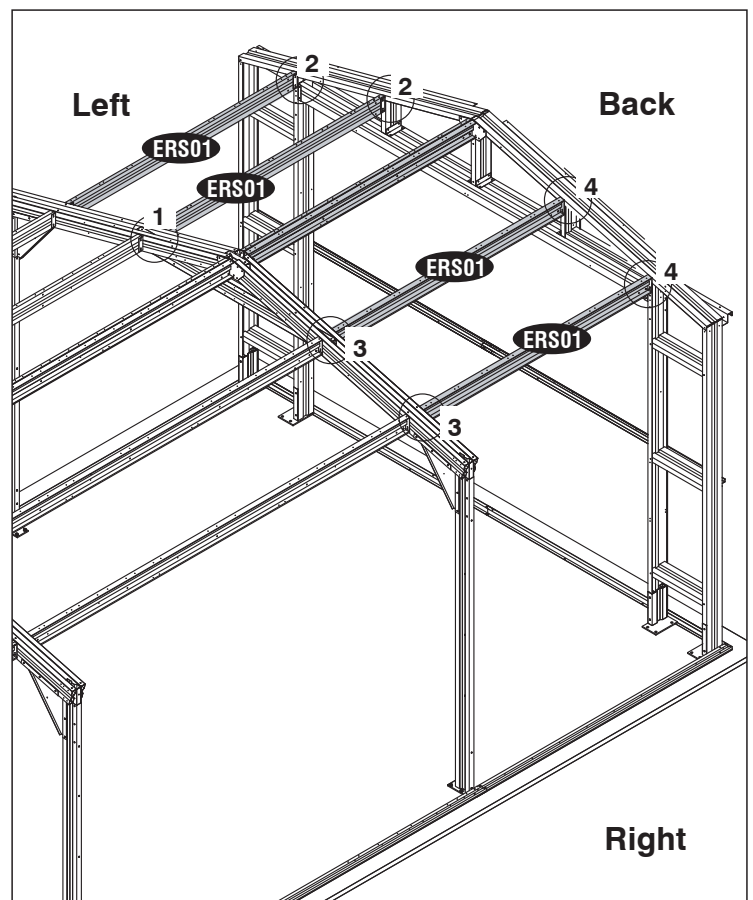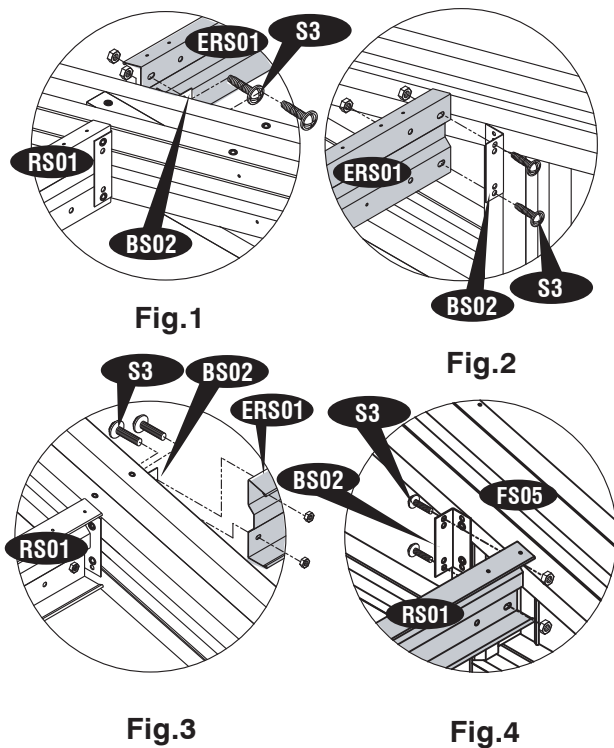

Step - 10

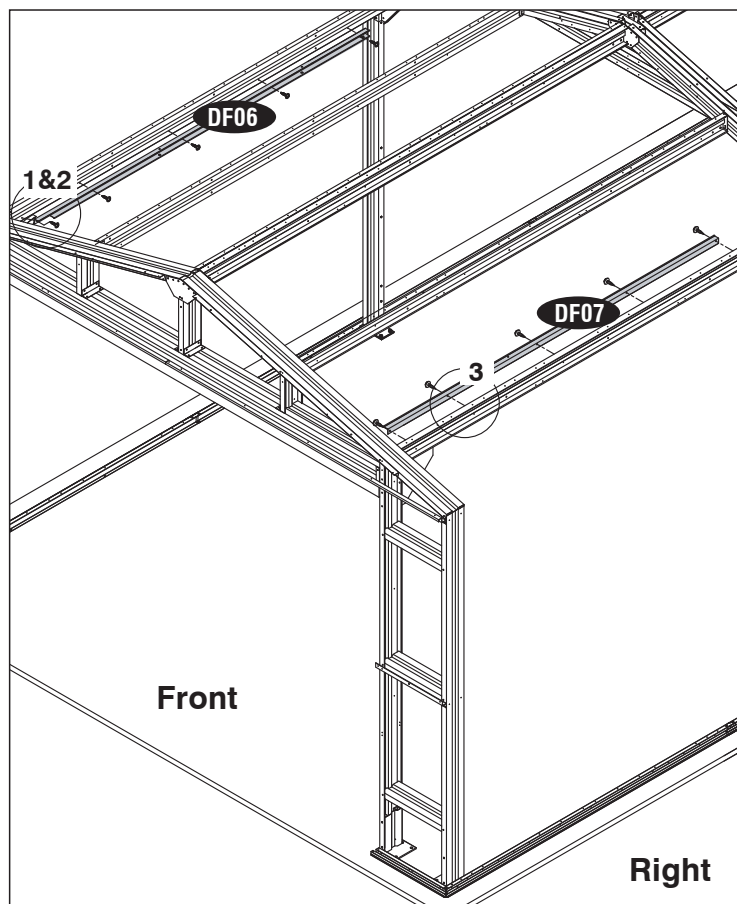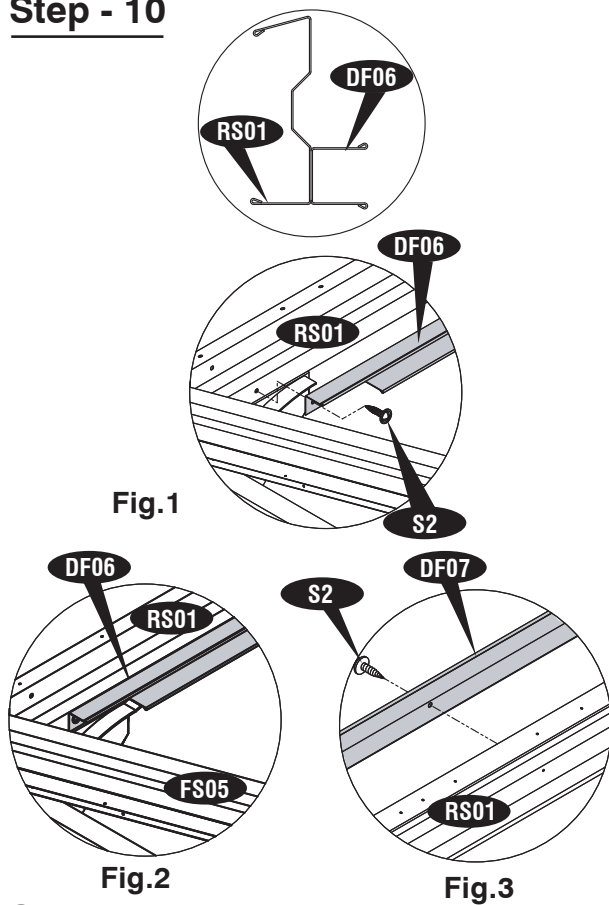

Step - 11

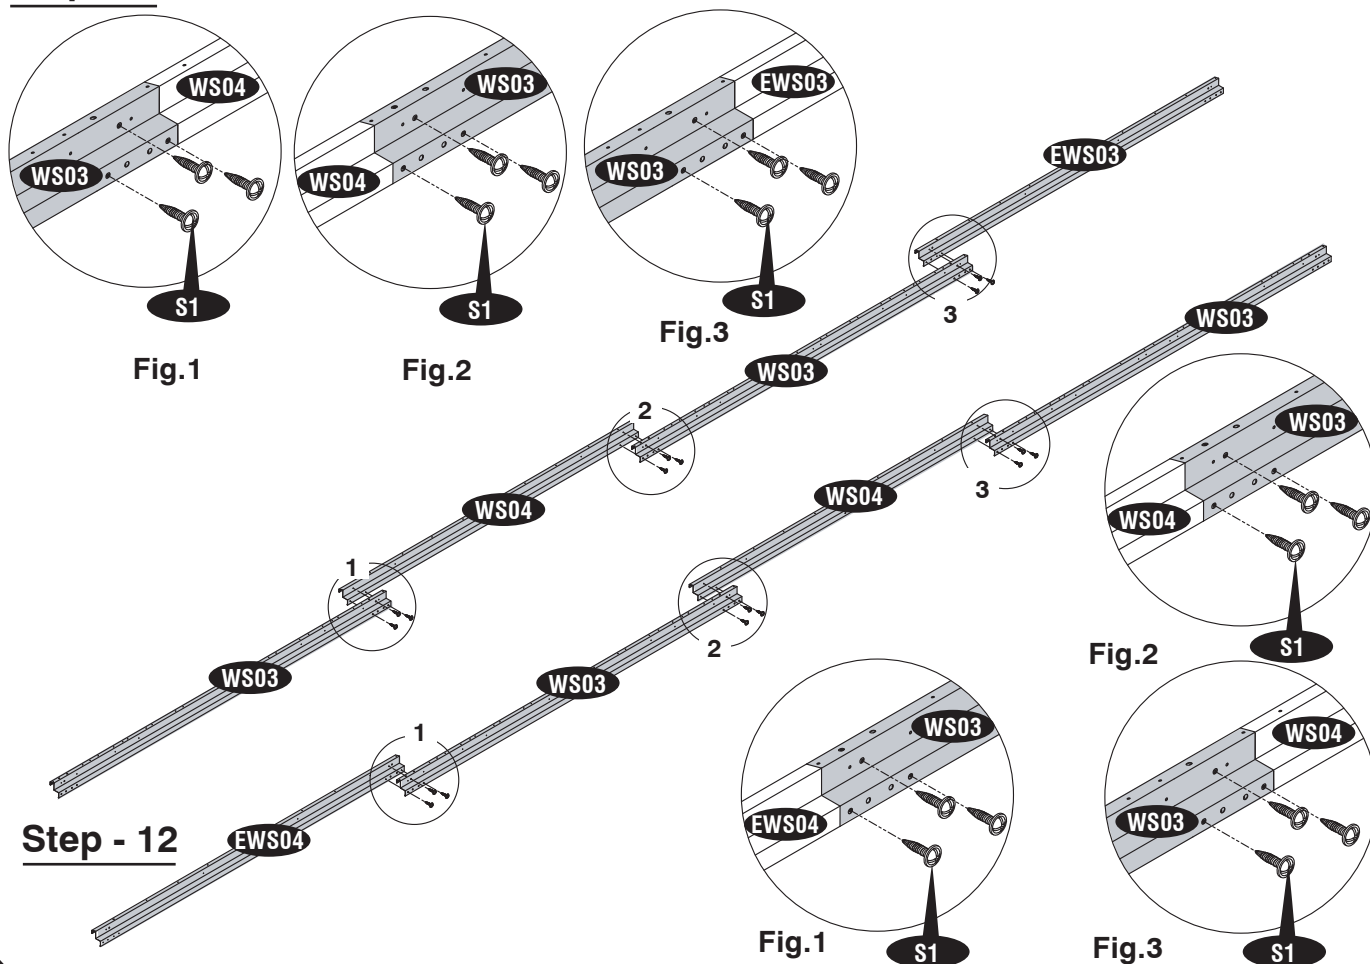

Step - 12

Step - 13

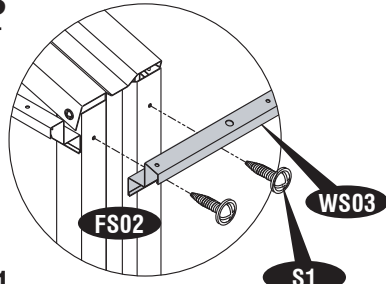


Fig.1

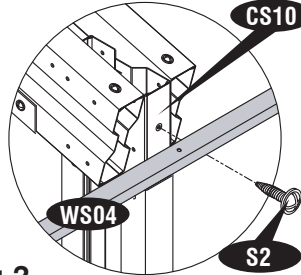


Fig.2


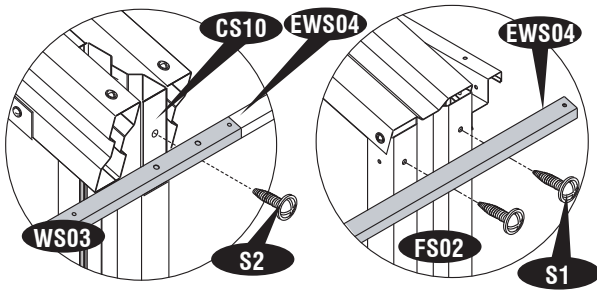


Fig.3

Fig.4

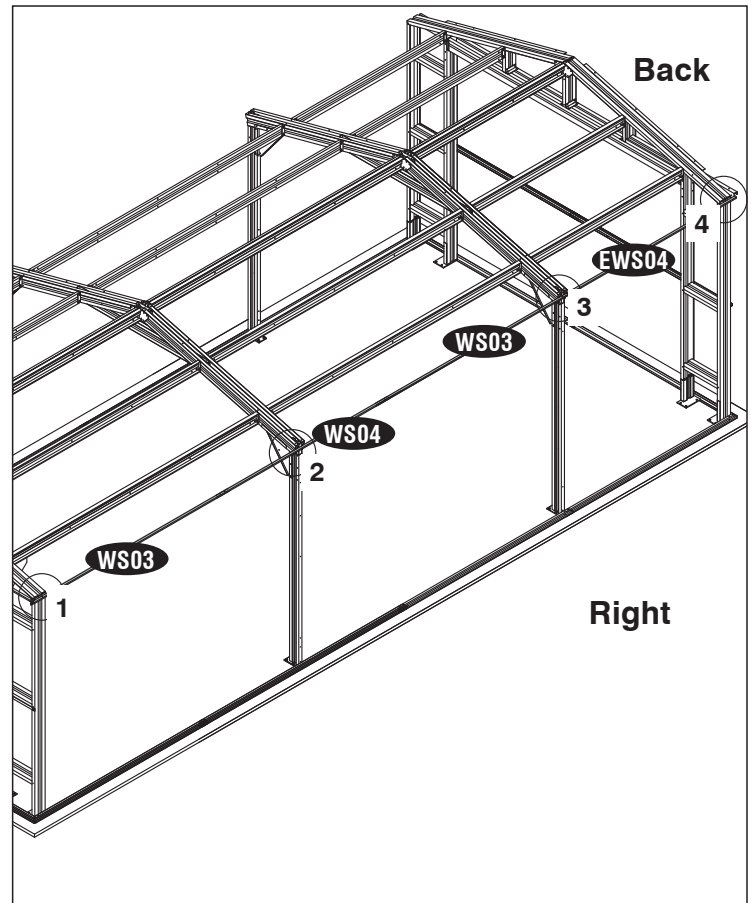

Step - 14

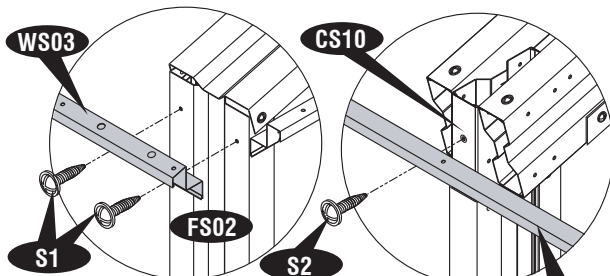


Fig.1

Fig.2

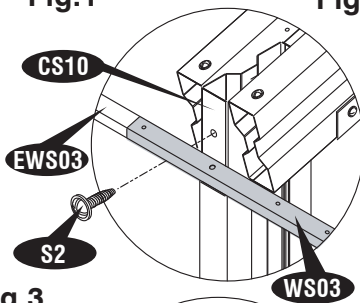


Fig.3


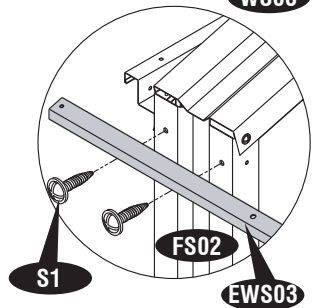


Fig.4

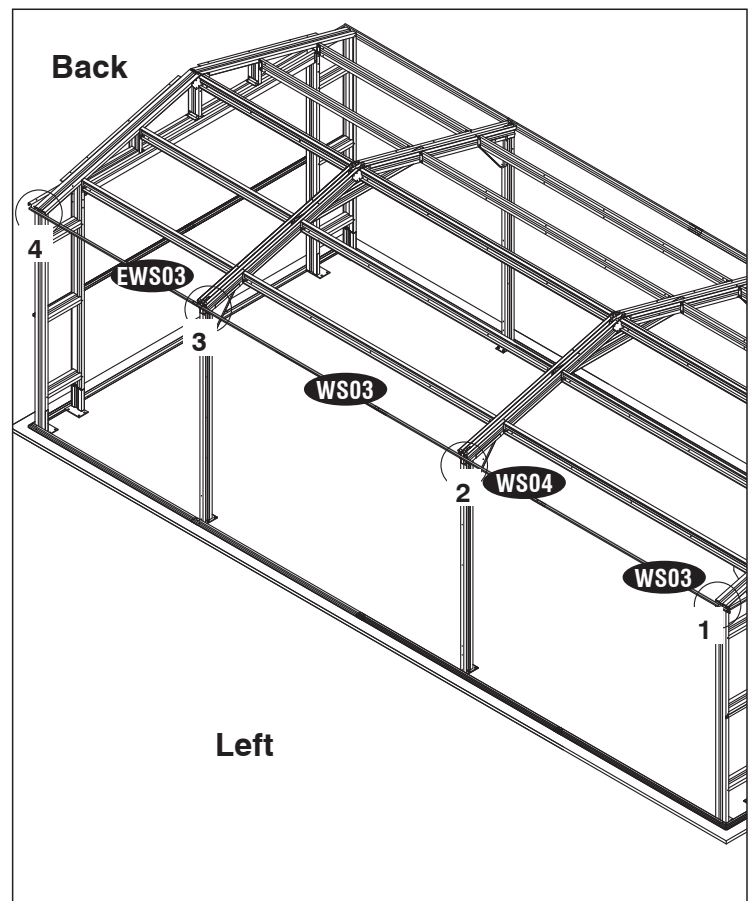

Step - 15

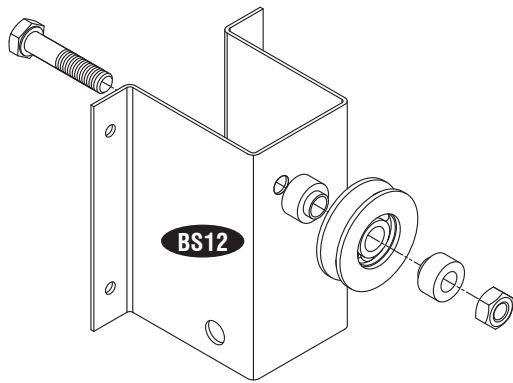


Fig.1

Step - 16

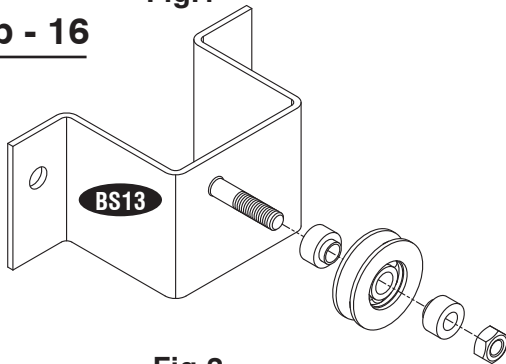


Fig.2

Step - 17

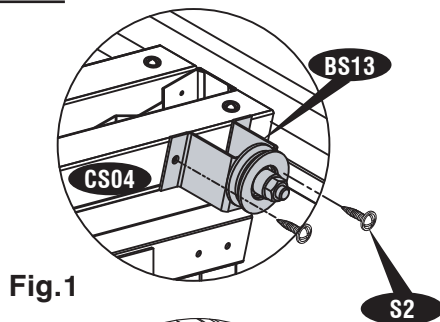


Fig.1

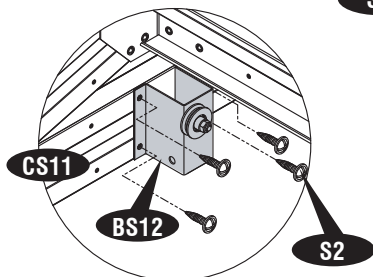


Fig.2



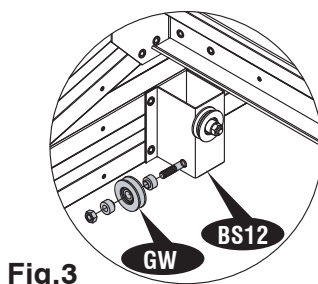


Fig.3

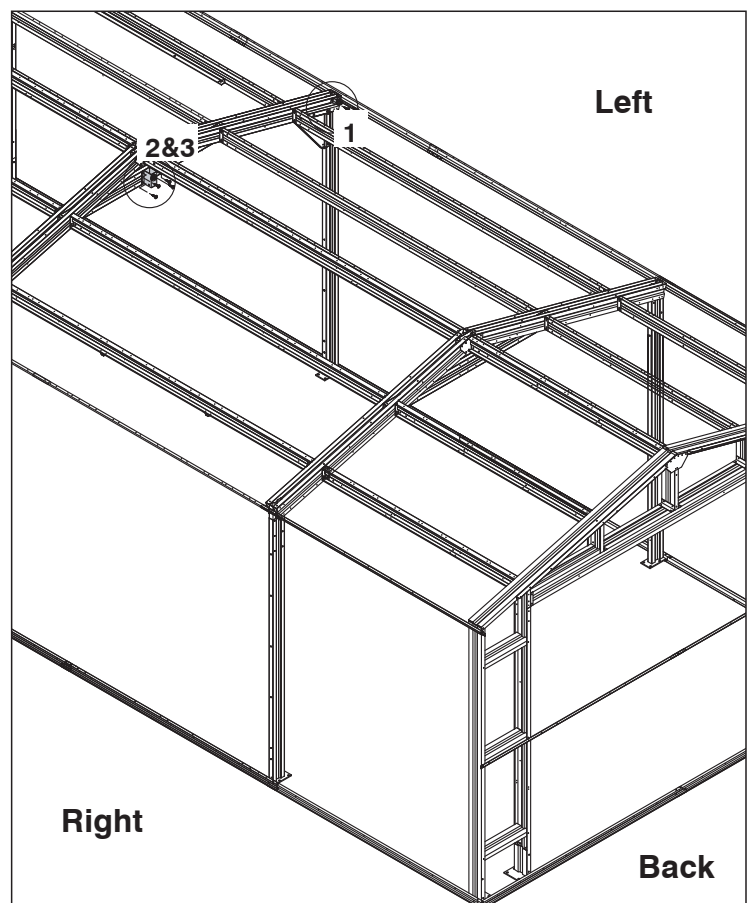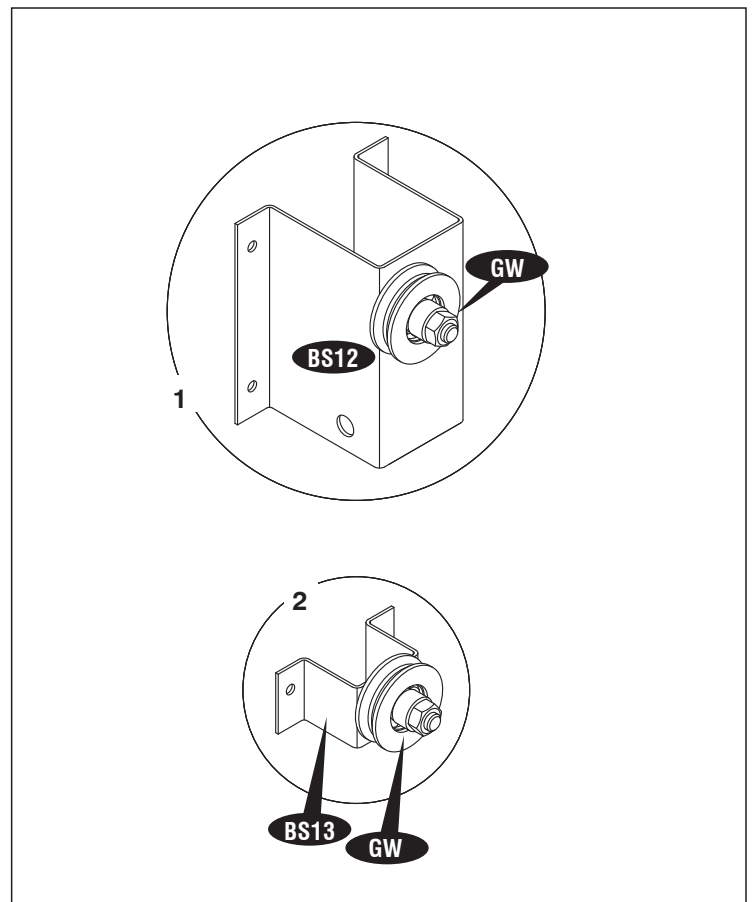

E. Wall Panel Installation and Accessories


Parts Needed:

Code	Qty	Code	Qty
WP01	17	SD01	1
WP02	2	SD02	1
WP03	1	SD03	1
WP04	1	SD04	1
WP05	3	SD05	1
WP06	1	WS05	3
WP07	1	WS06	1
WP08	1	WS07	1
GP01	2	S1	208
GP02	2	S2	4
DF02	1	S3	60
DF03	1	PW	211

Parts Needed for each extension:

Code	Qty
WP01	6
EWS01	1
EWS02	1
S1	31
S2	2
S3	12
PW	42


Exploded View Side Door Right Side

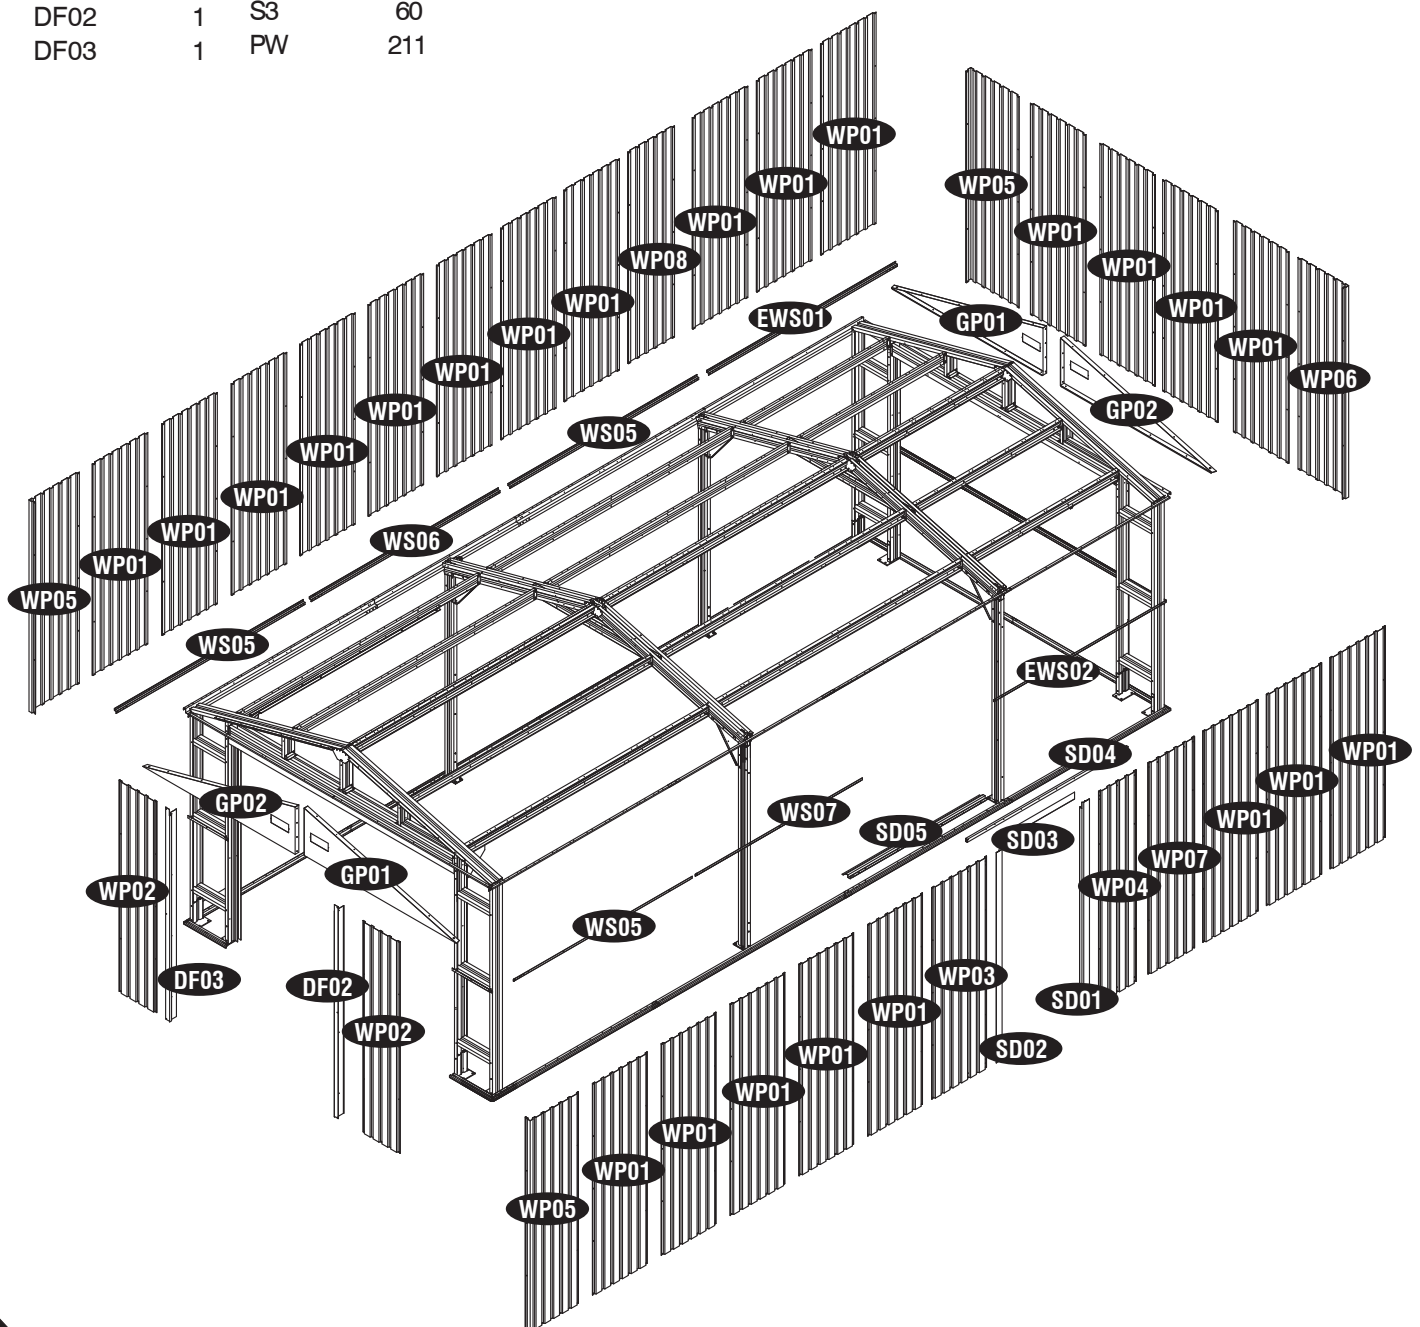

Exploded View Side Door Left Side


IMPORTANT

Follow the Diagram to assemble the side door on Left Side.


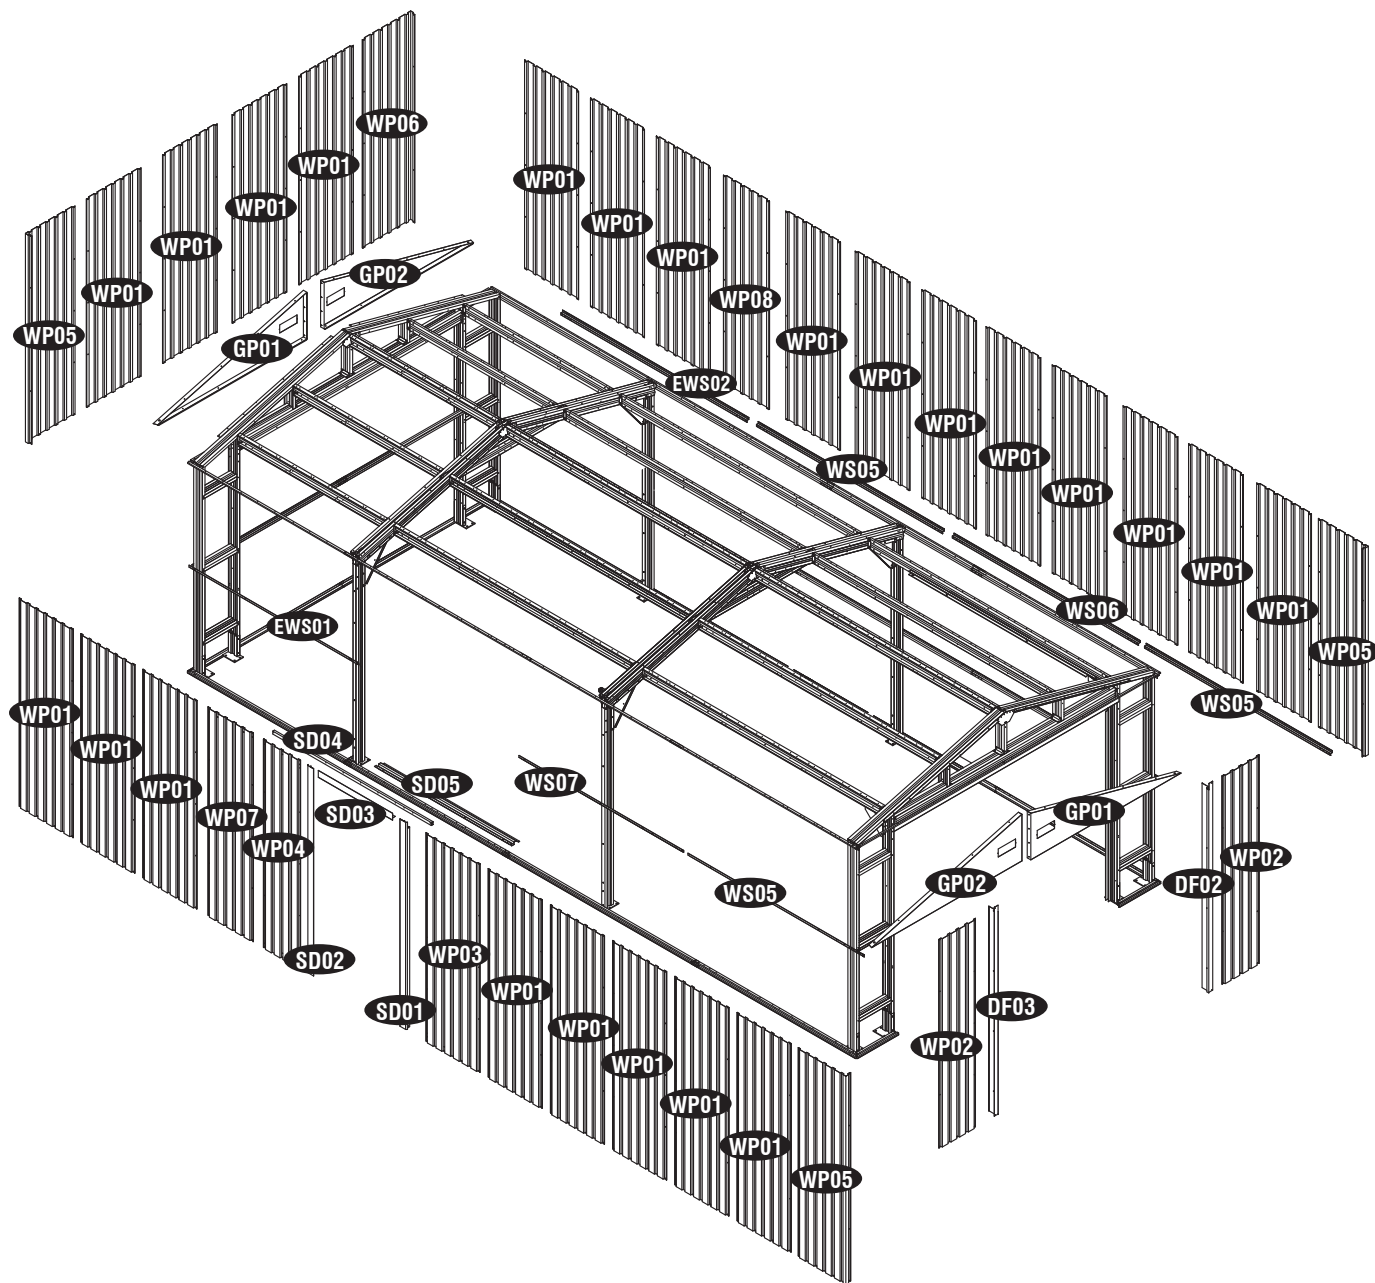


Assembly Steps for Side Door on Right Side

Step - 1

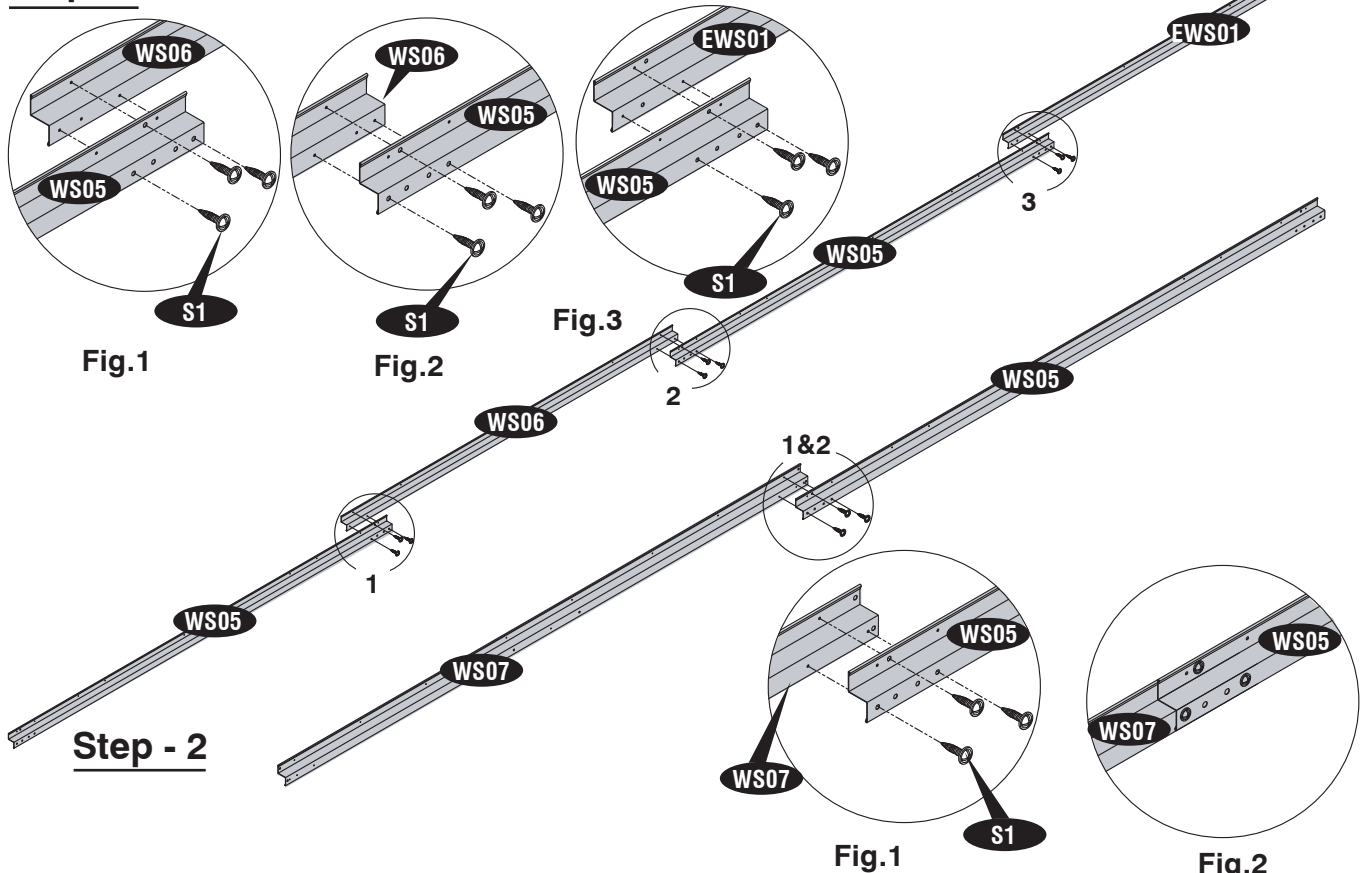

Step - 3

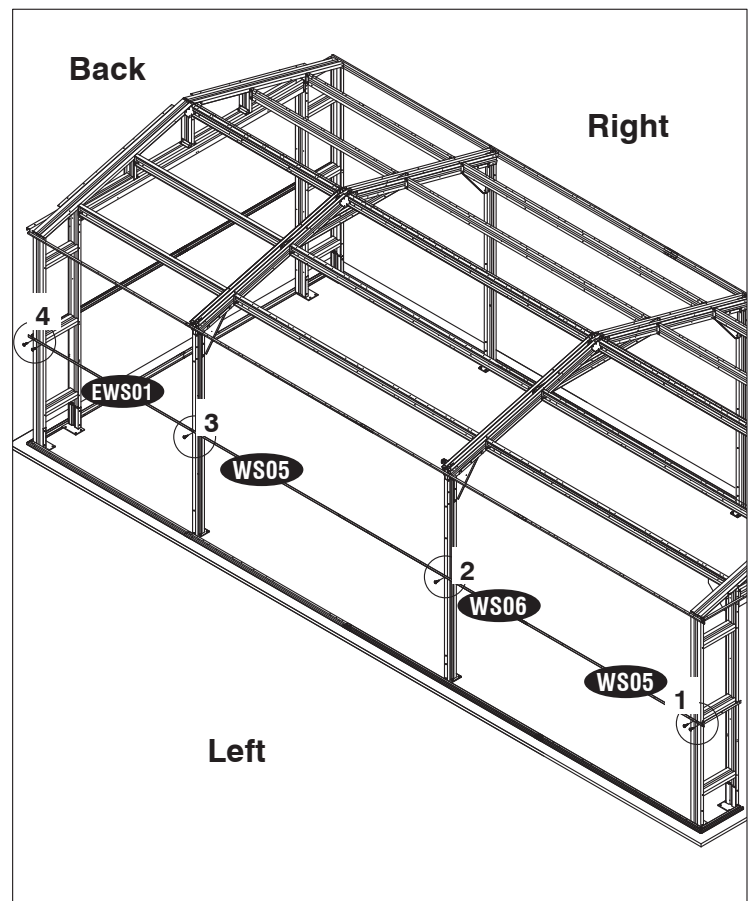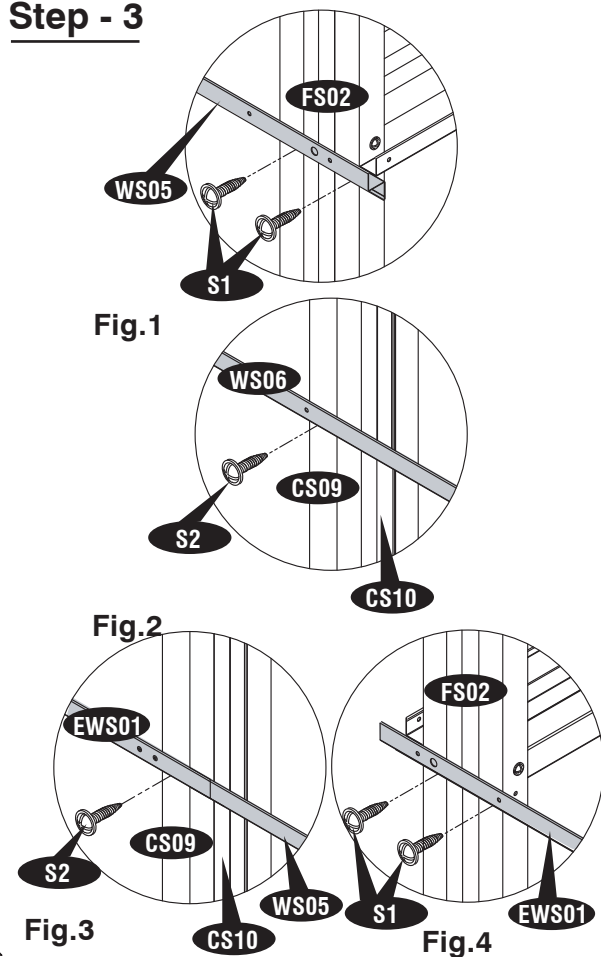

IMPORTANT: USE HAND GLOVES TO PREVENT INJURY.

Step - 4

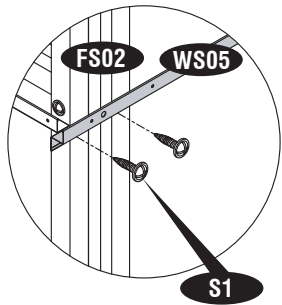


Fig.1


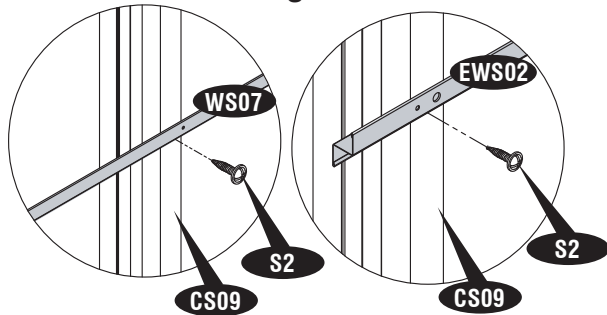


Fig.2

Fig.3

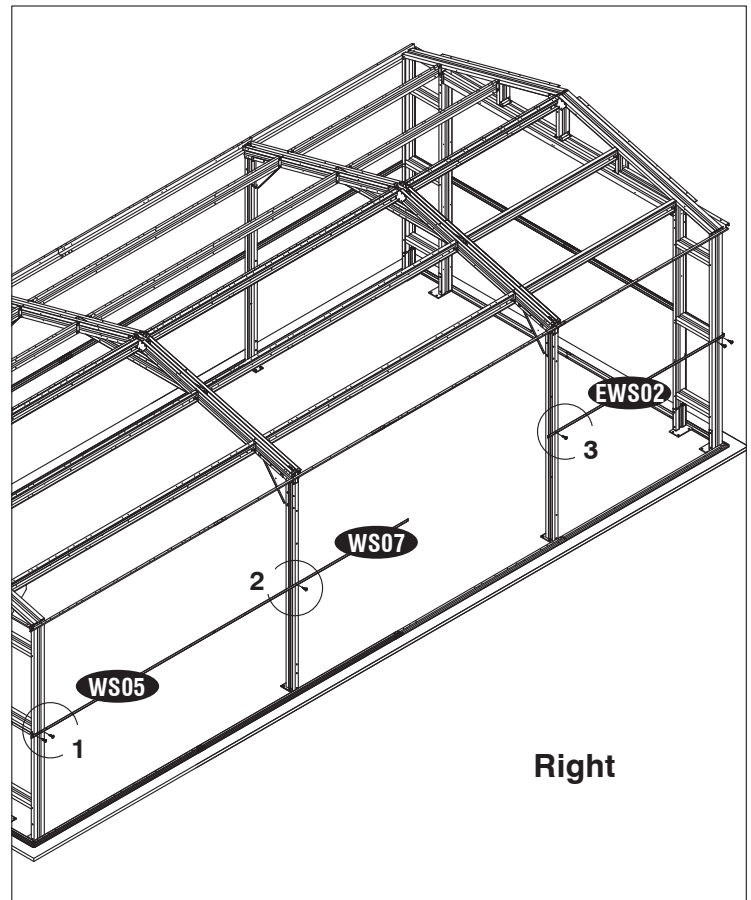

Right

Step - 5

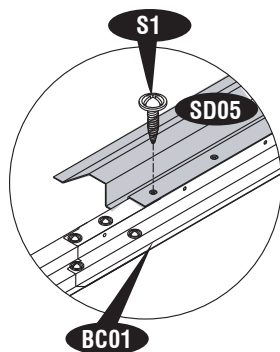


Fig.1


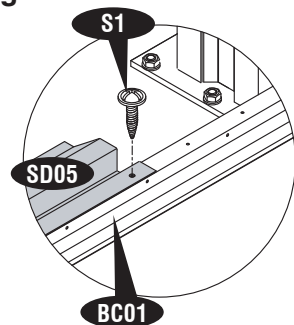


Fig.2

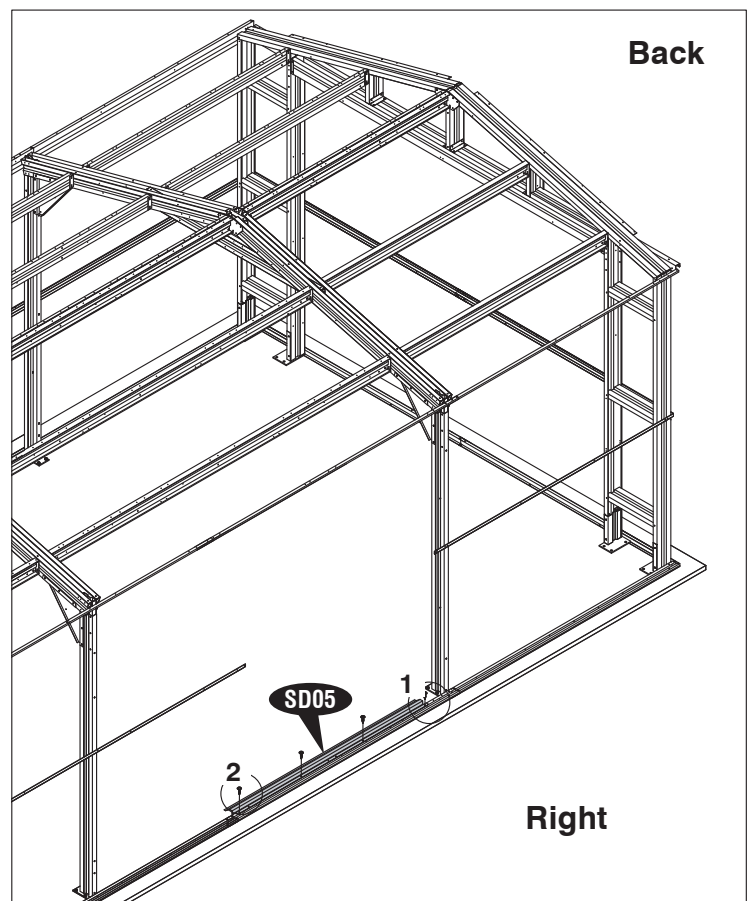

Back

Right

Step - 6

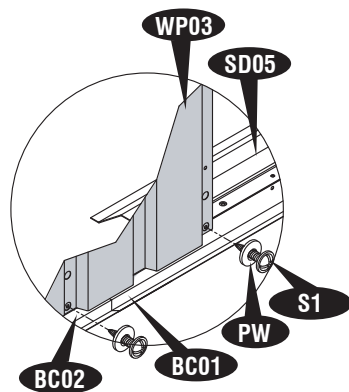


Fig.1


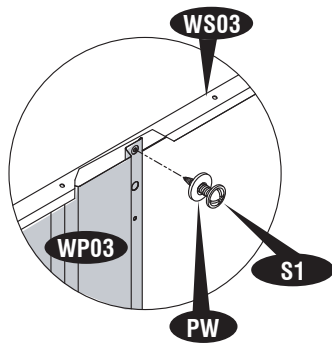


Fig.2

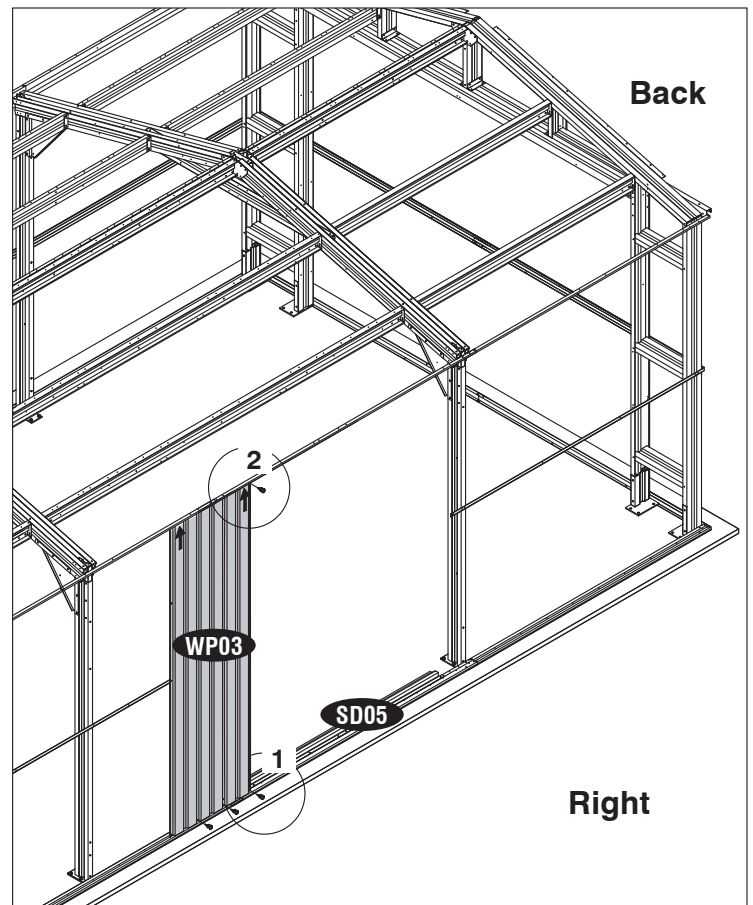

Step - 7

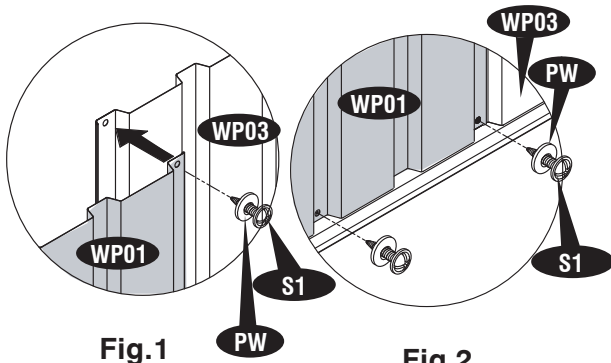


Fig.1

Fig.2


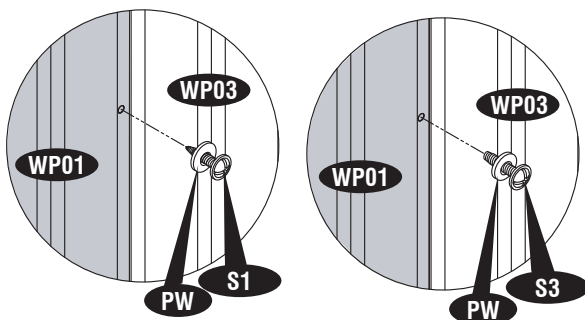


Fig.3

Fig.4

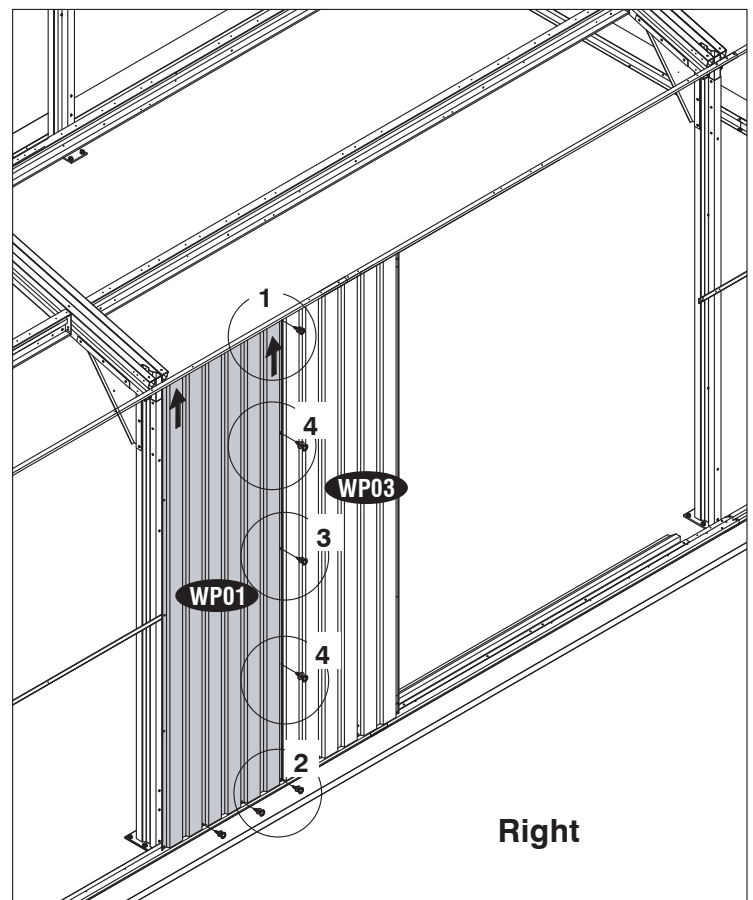

Step - 8

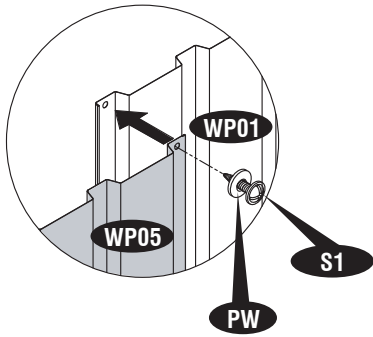


Fig.1


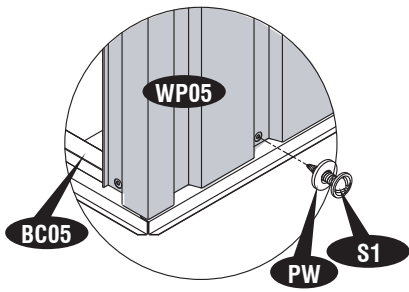


Fig.2

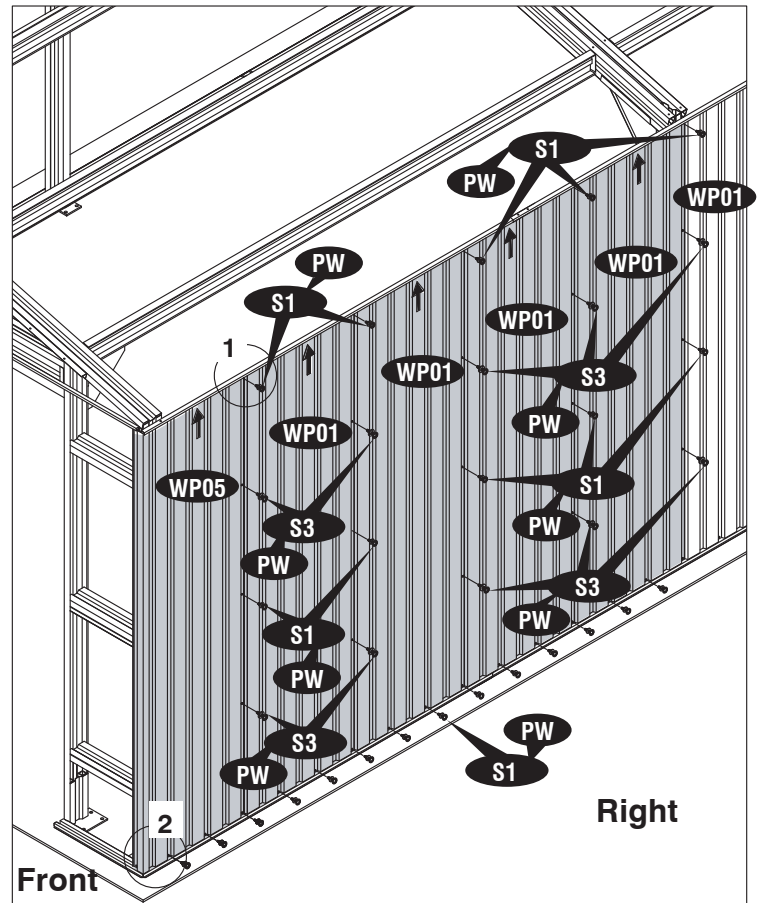

Step - 9

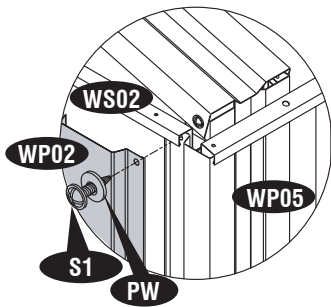


Fig.1

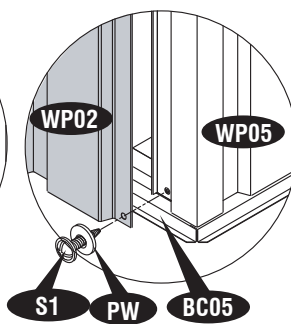


Fig.2

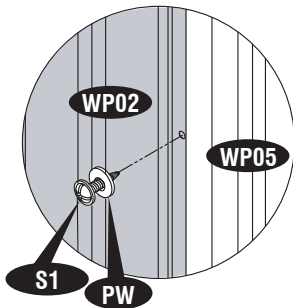


Fig.3


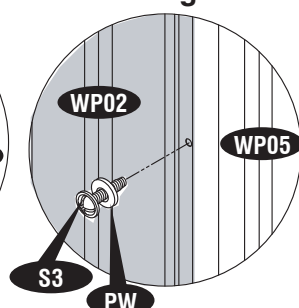


Fig.4

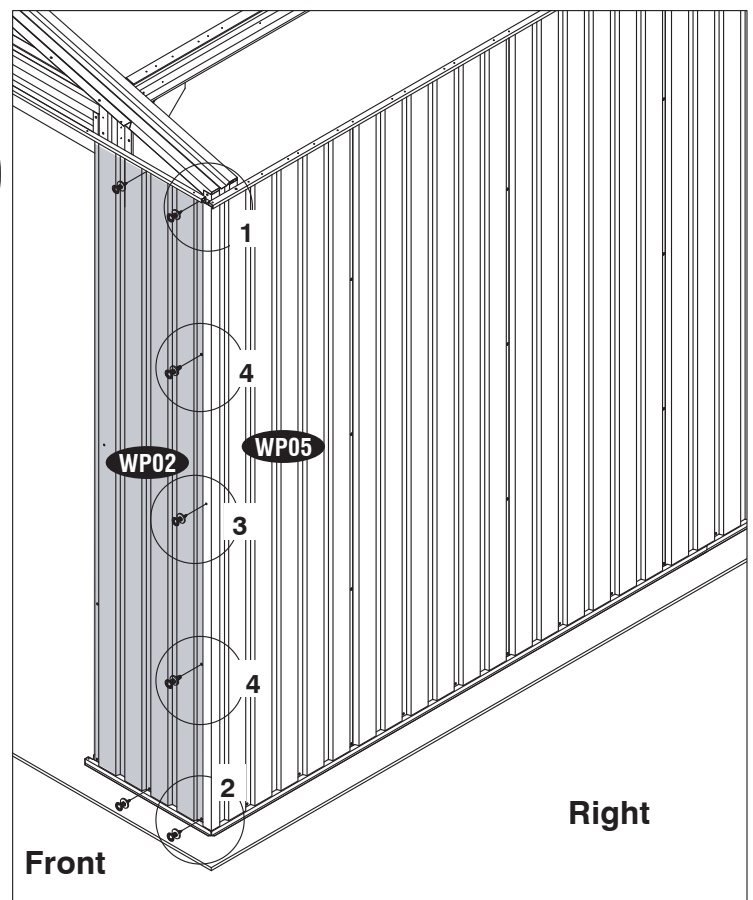

Step - 10

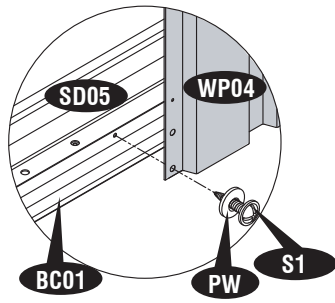


Fig.1


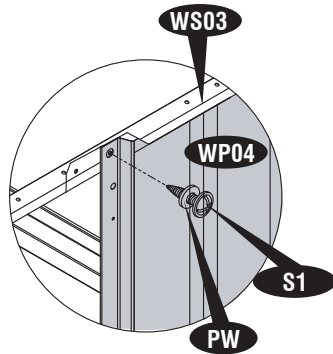


Fig.2

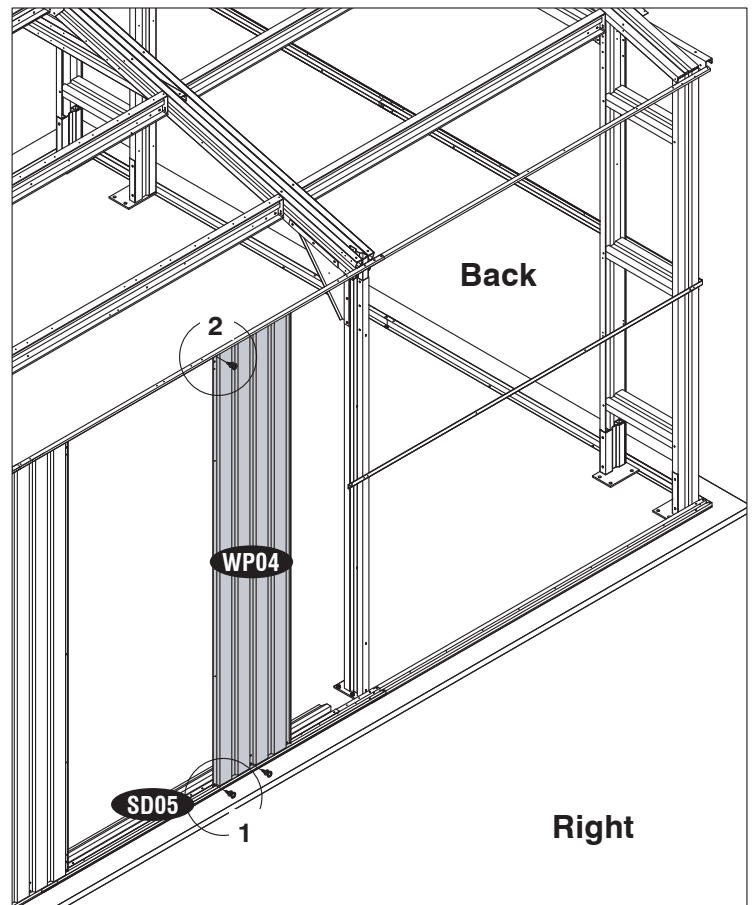

Step - 11

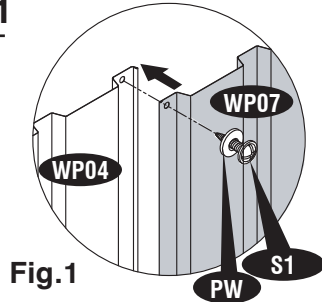


Fig.1

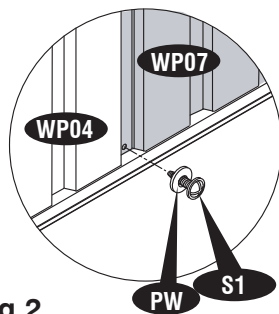


Fig.2


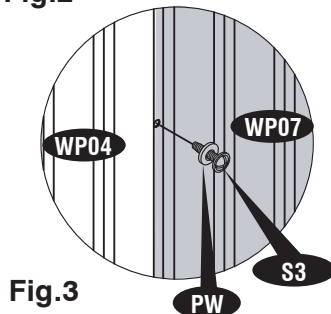


Fig.3

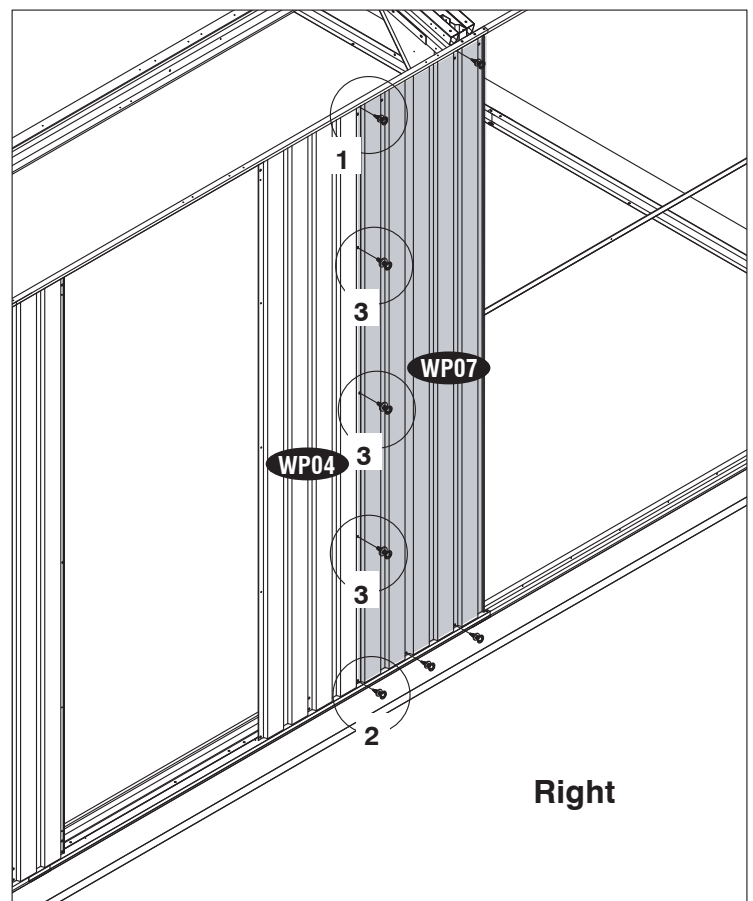

Step - 12

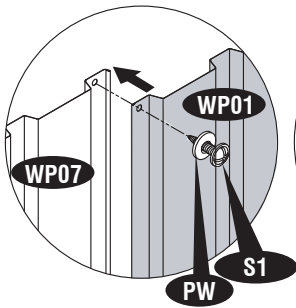


Fig.1

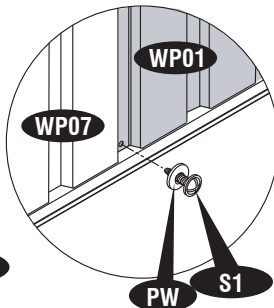


Fig.2

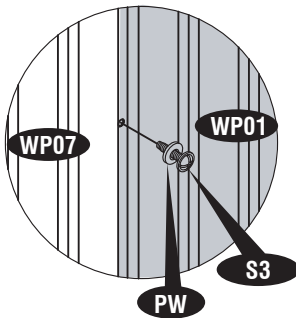


Fig.3


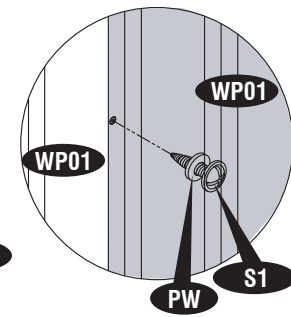


Fig.4

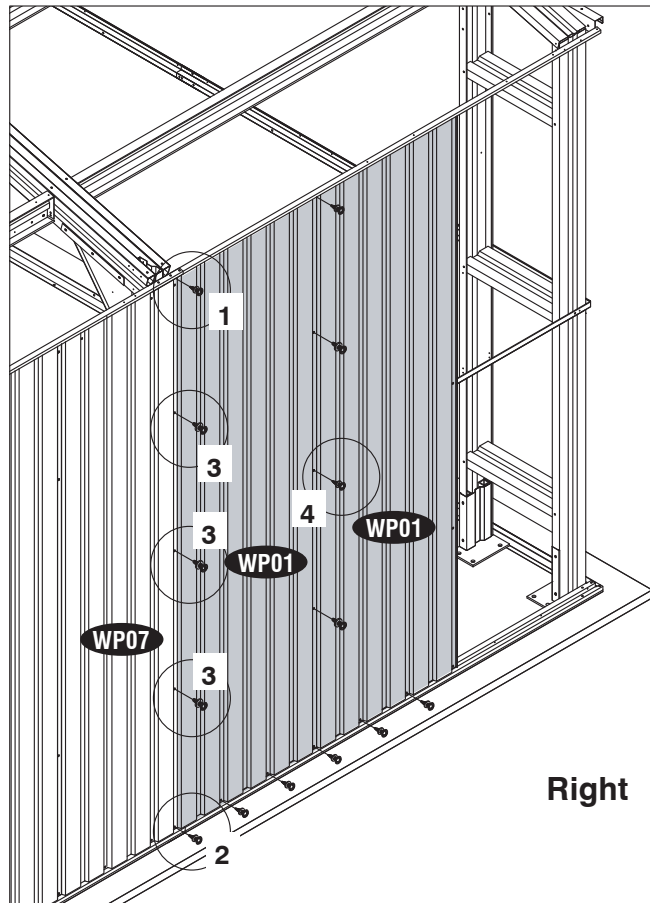

Step - 13

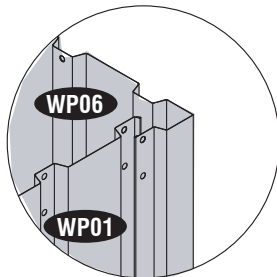


Fig.1


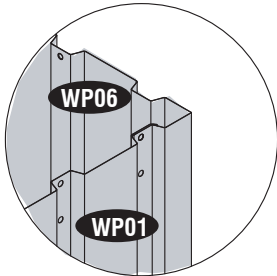


Fig.2

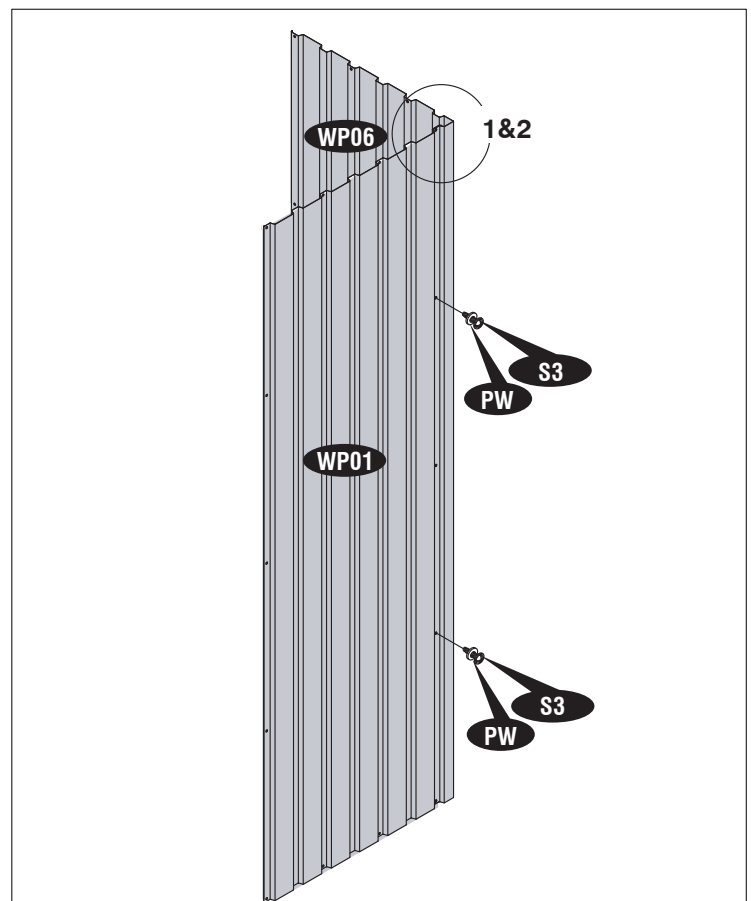

Step - 14

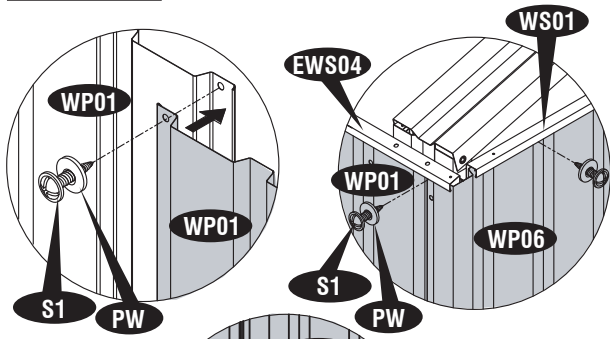


Fig.1

Fig.2

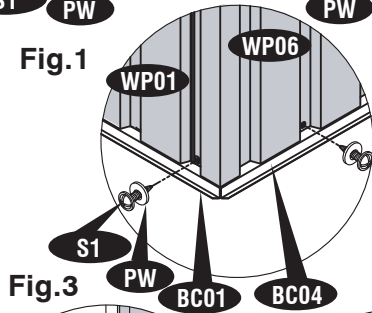


Fig.3


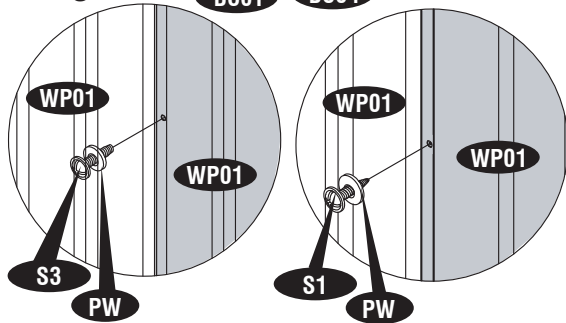


Fig.4

Fig.5

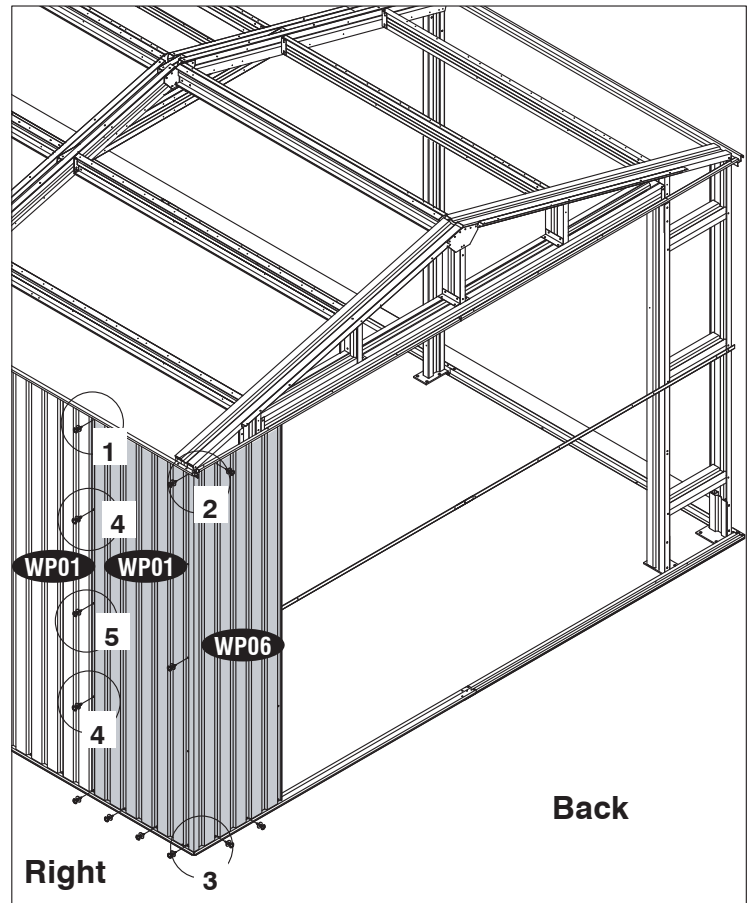

Step - 15

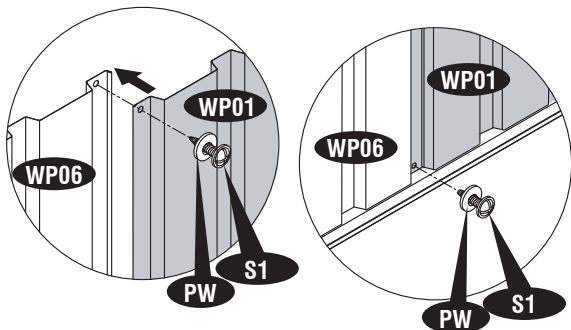


Fig.1

Fig.2


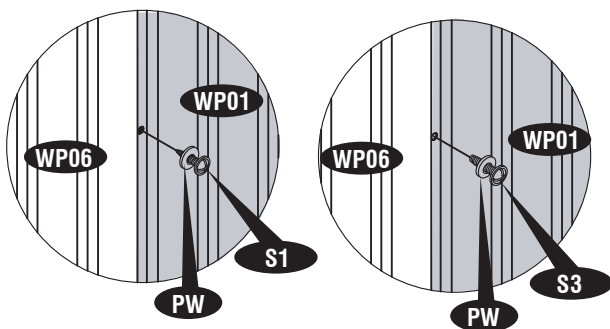


Fig.3

Fig.4

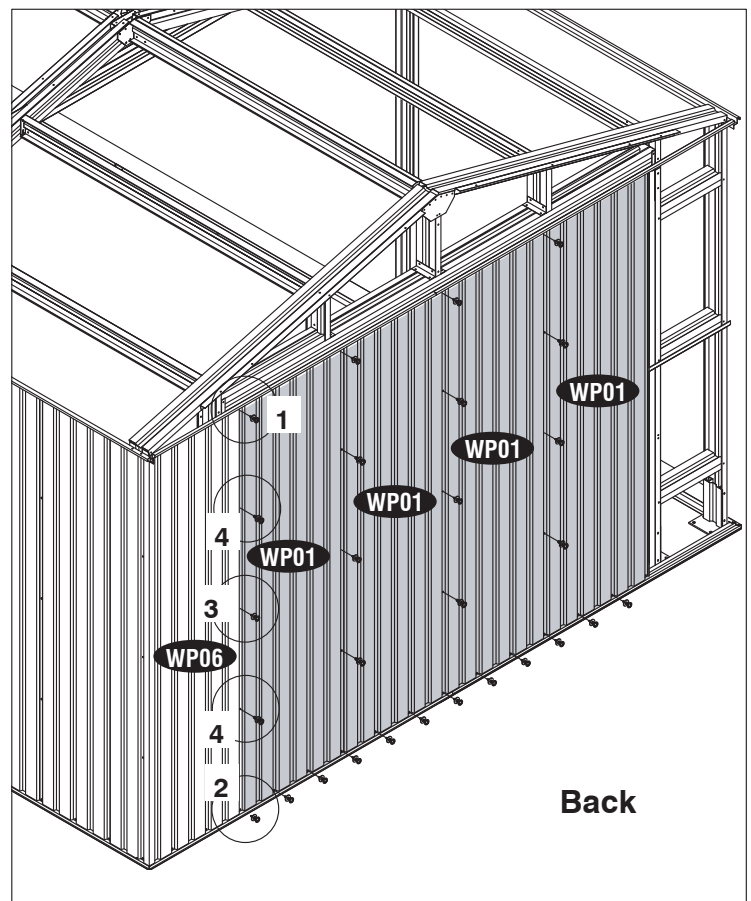

Step - 16

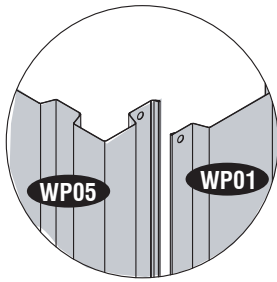


Fig.1


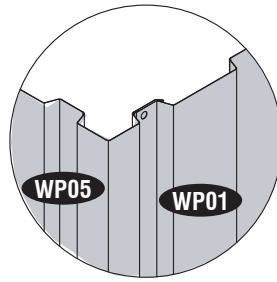


Fig.2

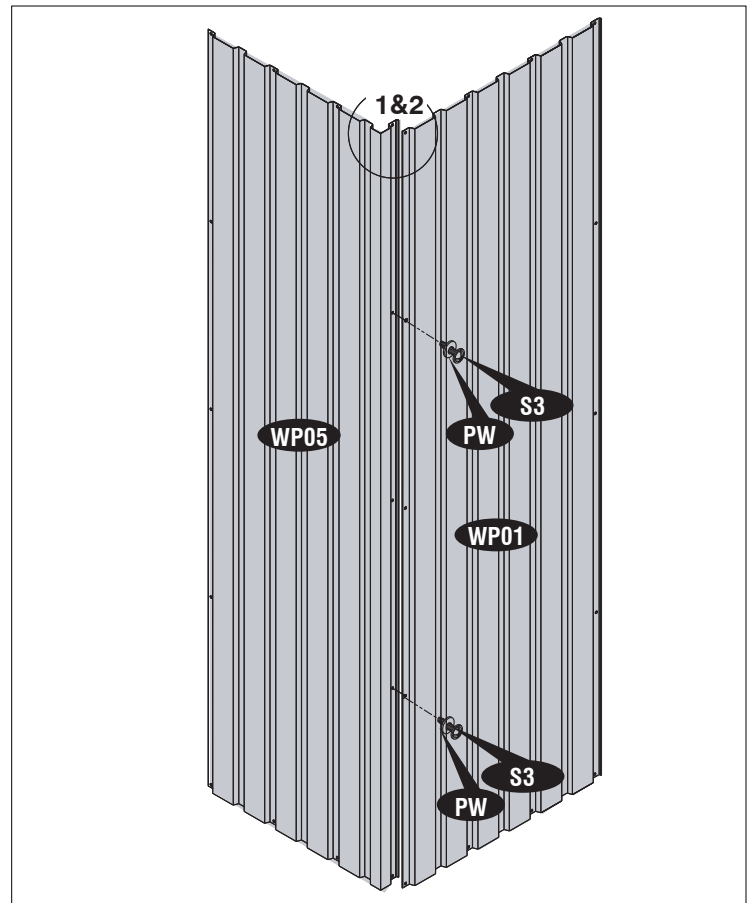

Step - 17

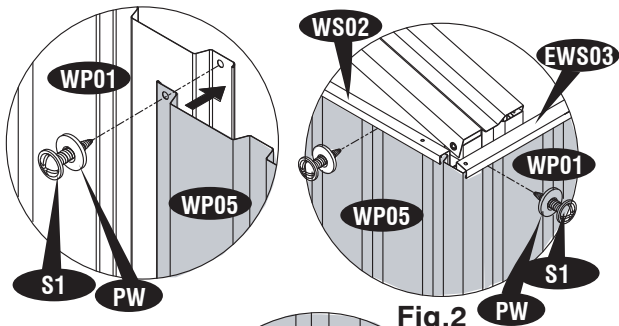


Fig.1

Fig.2

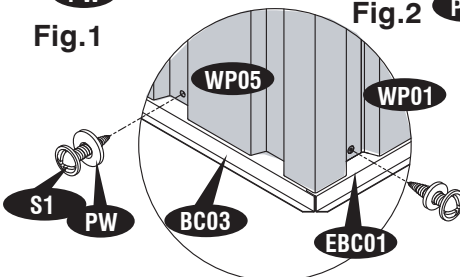


Fig.3


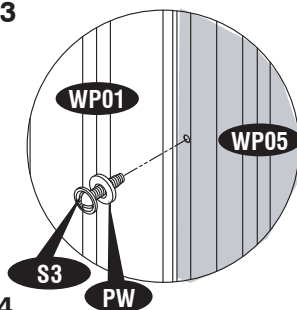


Fig.4

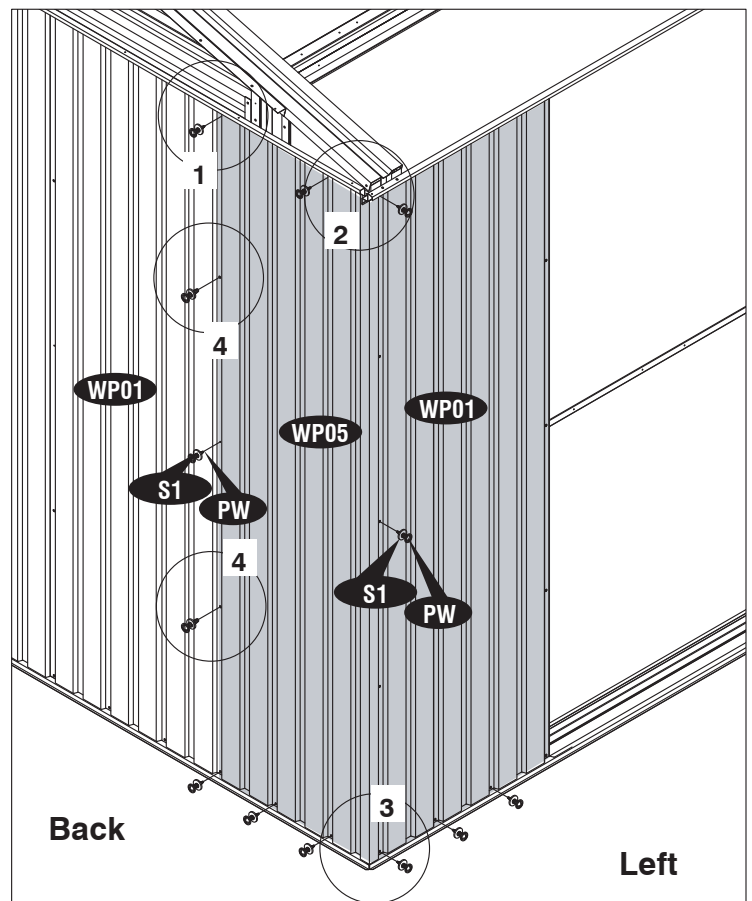

Back

Left

Step - 18

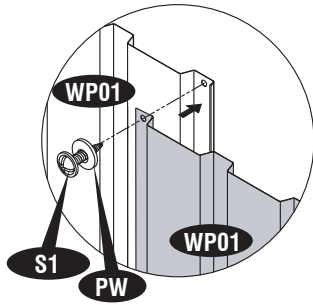


Fig.1

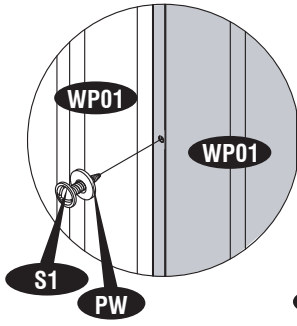


Fig.2



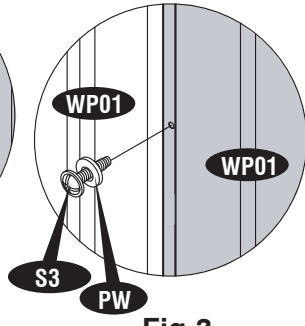



Fig.3

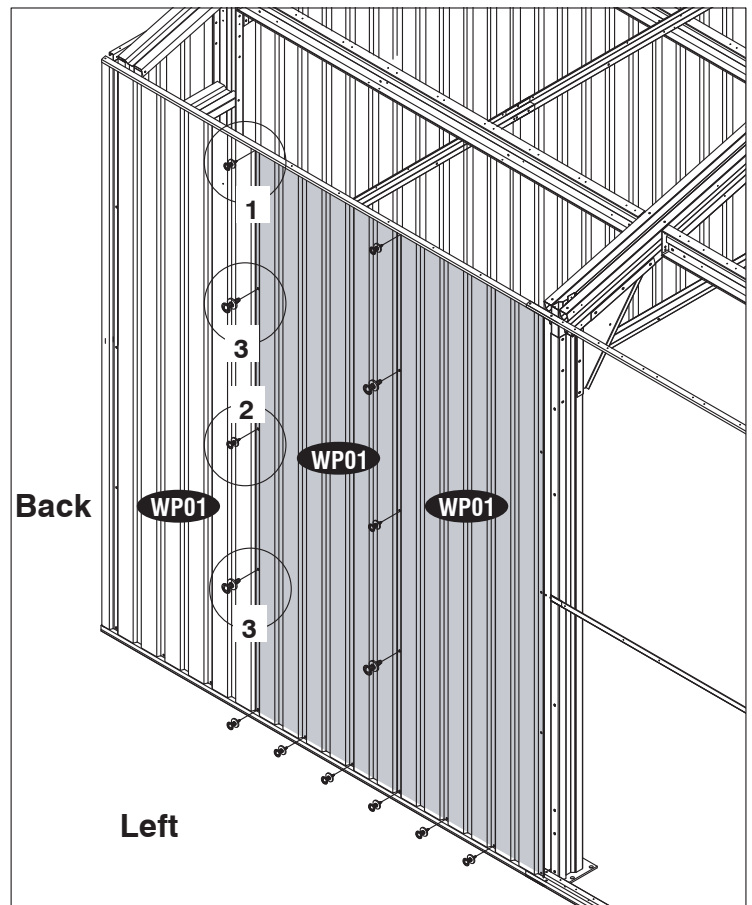



Step - 19

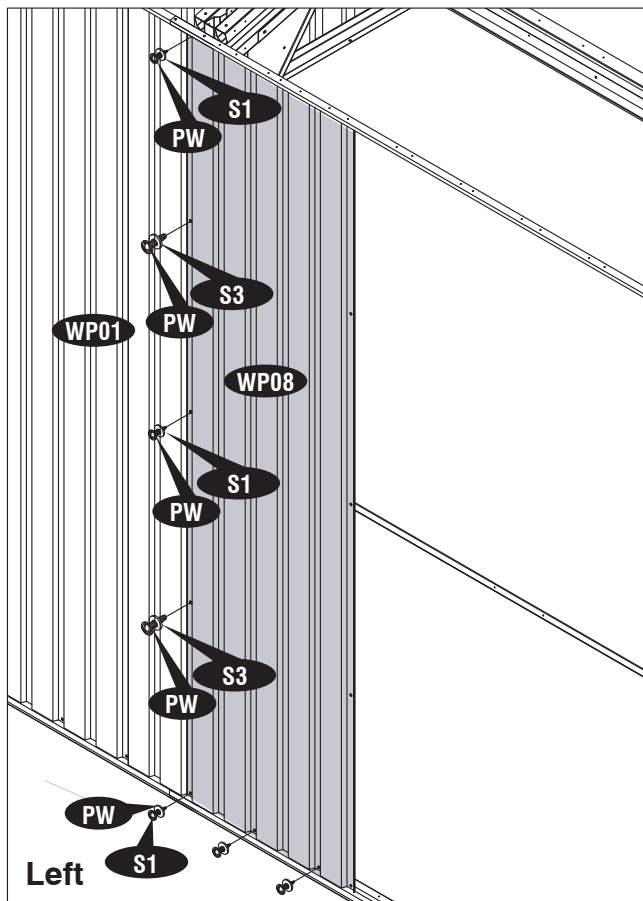



Step - 20

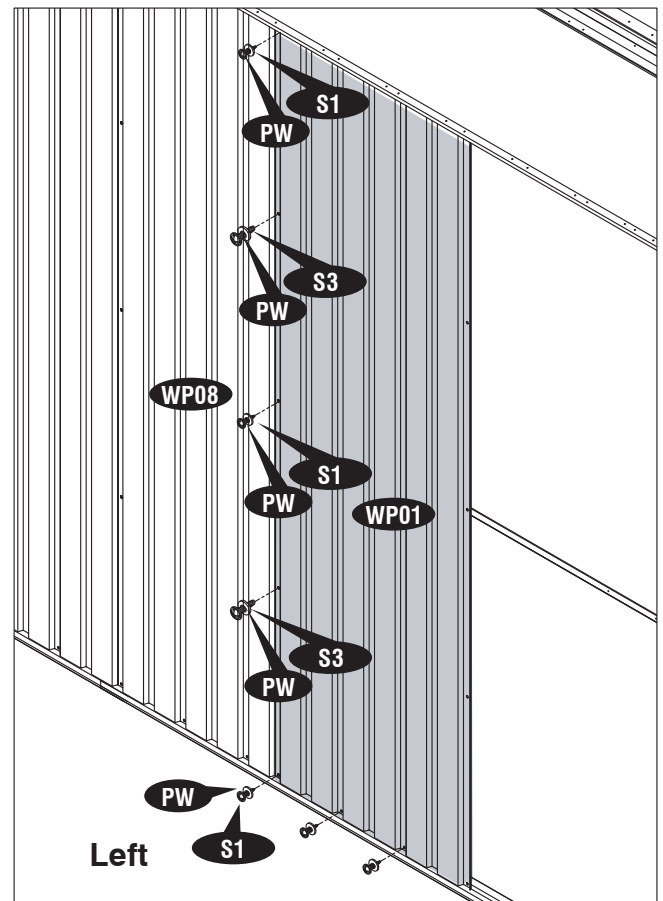

Step - 21

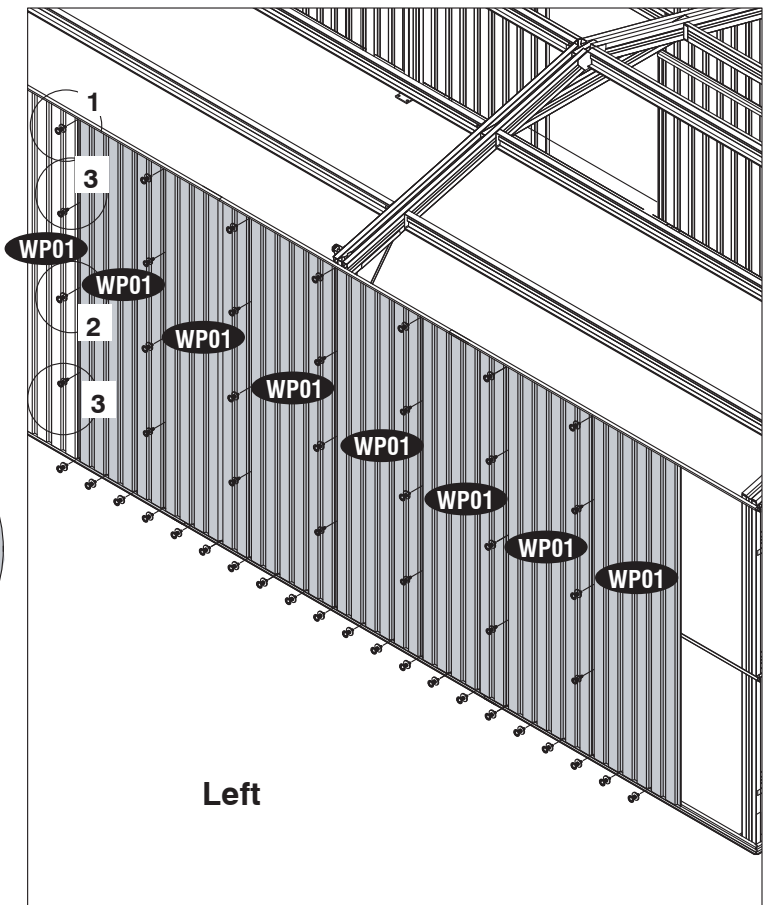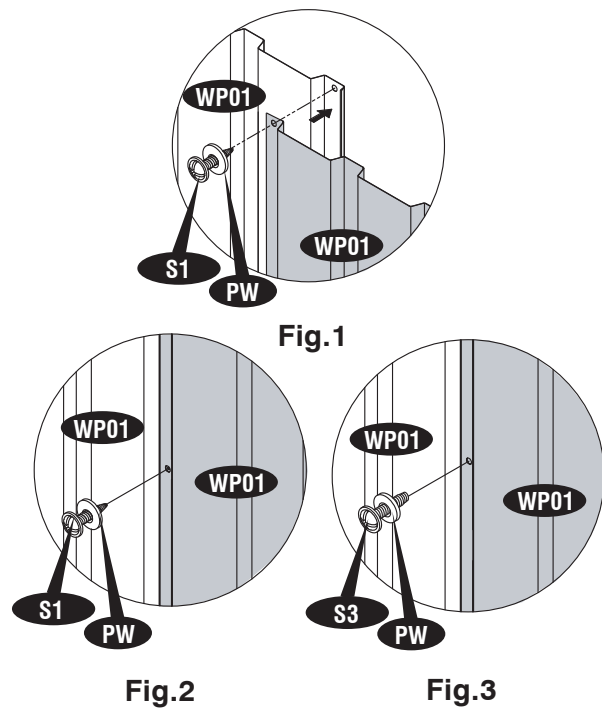

Step - 22

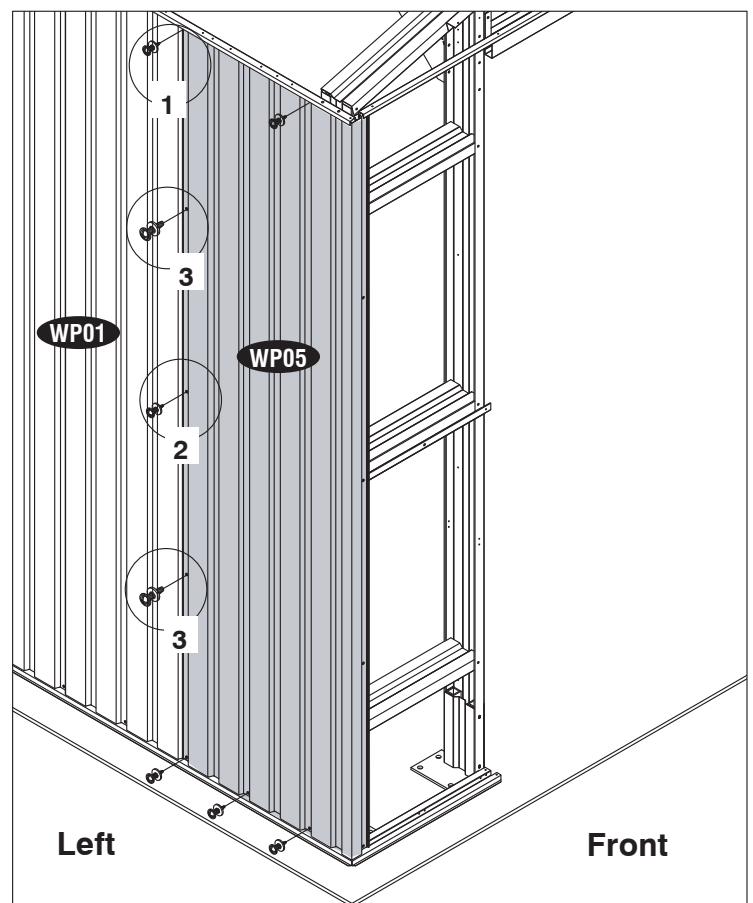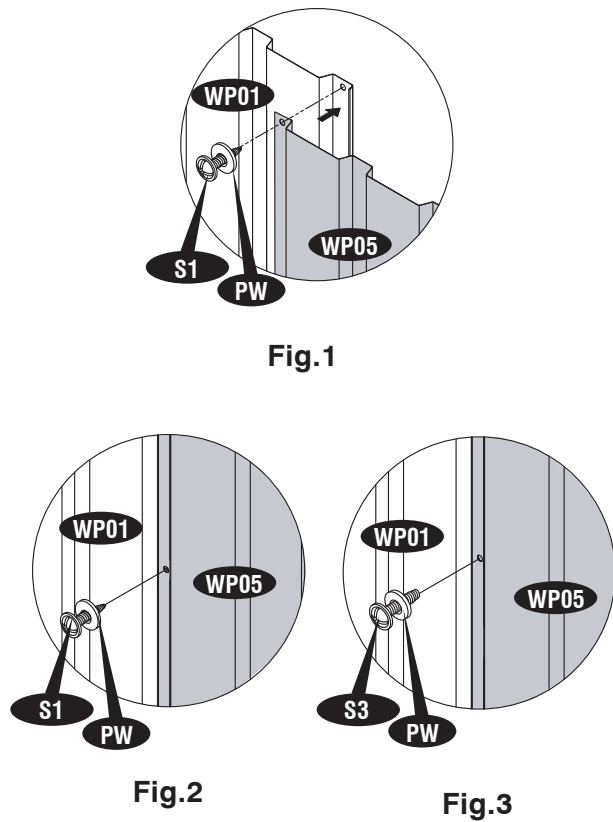

Step - 23



Fig.1

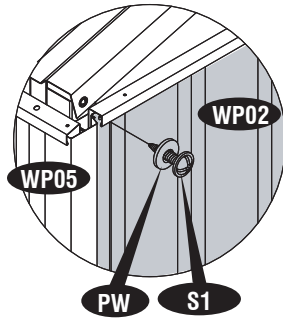


Fig.2

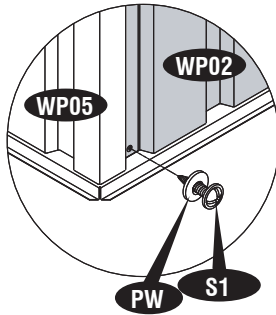


Fig.3


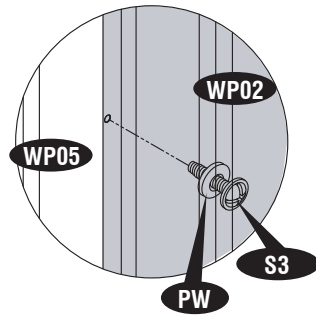


Fig.4

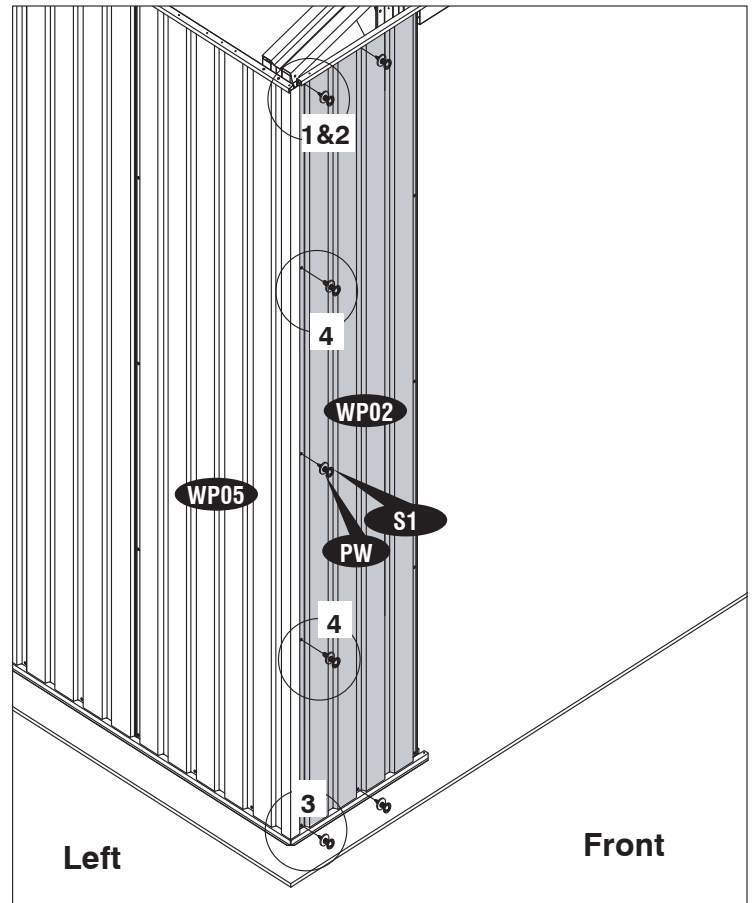

Step - 24

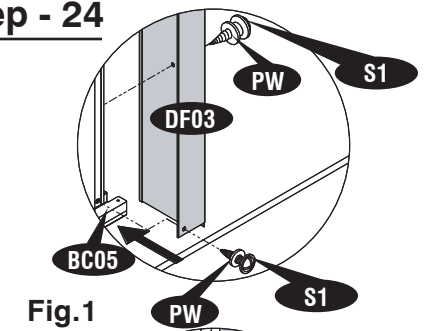


Fig.1

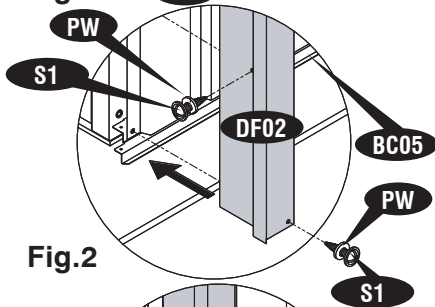


Fig.2


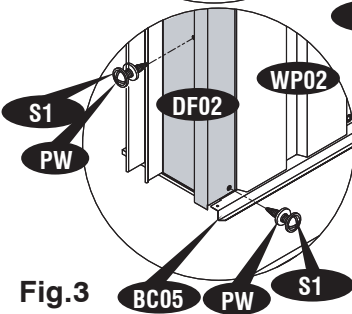


Fig.3

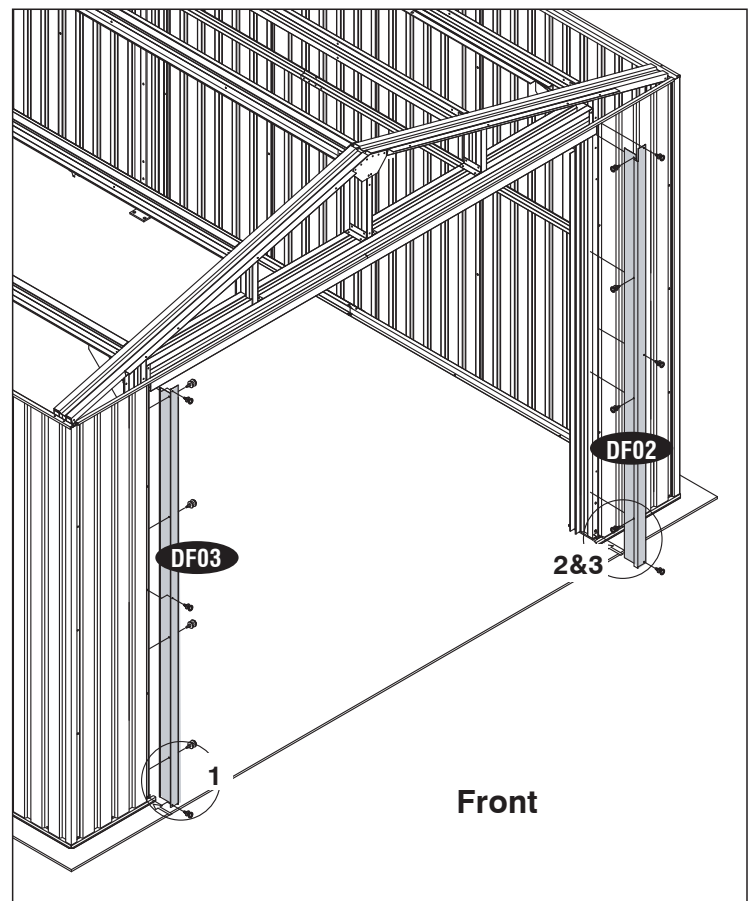

Step - 25

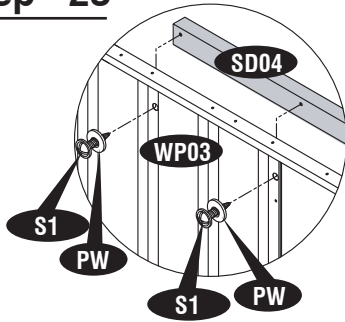


Fig.1


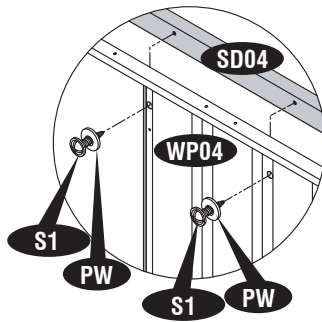


Fig.2

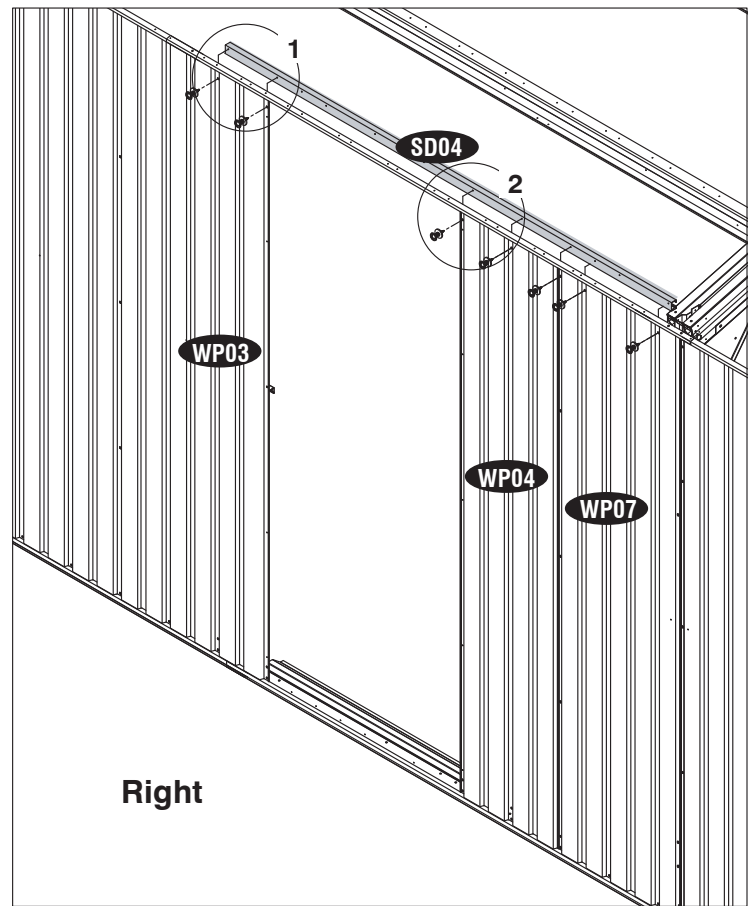

Step - 26

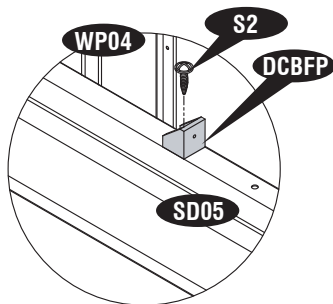


Fig.1


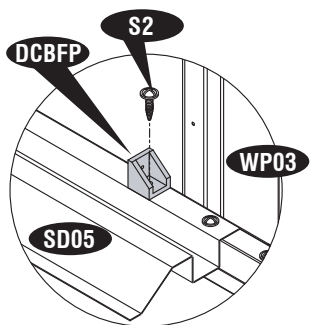


Fig.2

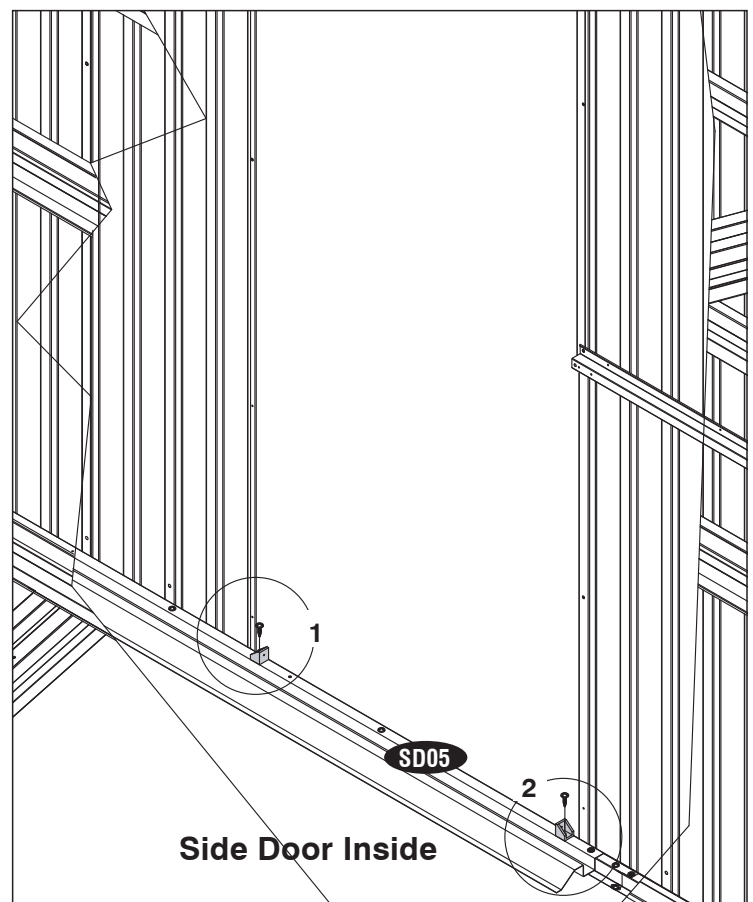

Side Door Inside

IMPORTANT: USE HAND GLOVES TO PREVENT INJURY.

Step - 27

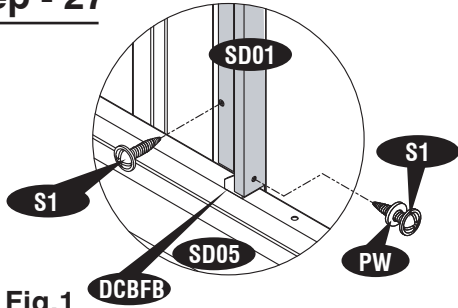


Fig.1

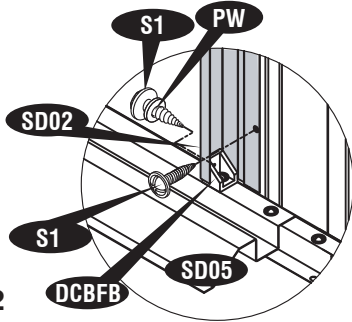


Fig.2


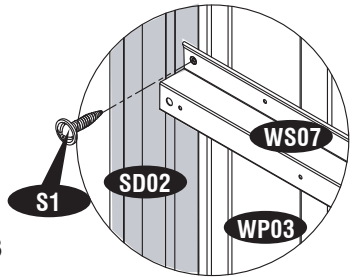


Fig.3

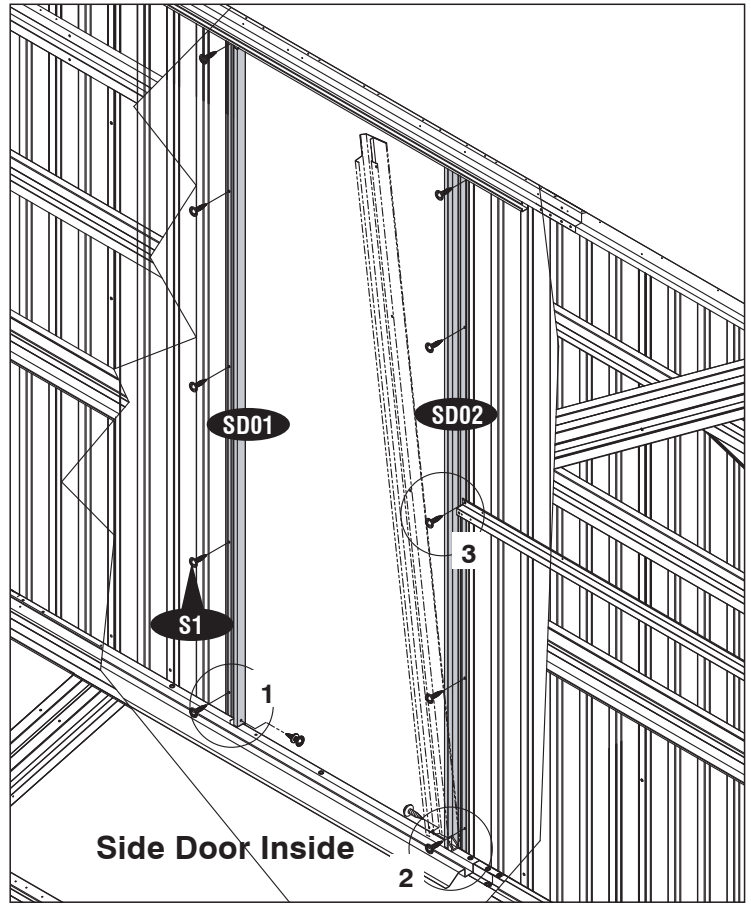

Step - 28

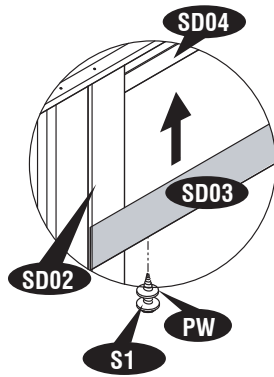


Fig.1


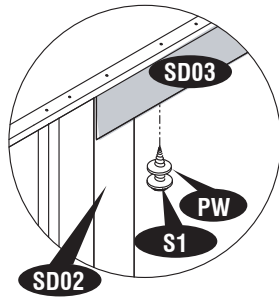


Fig.2

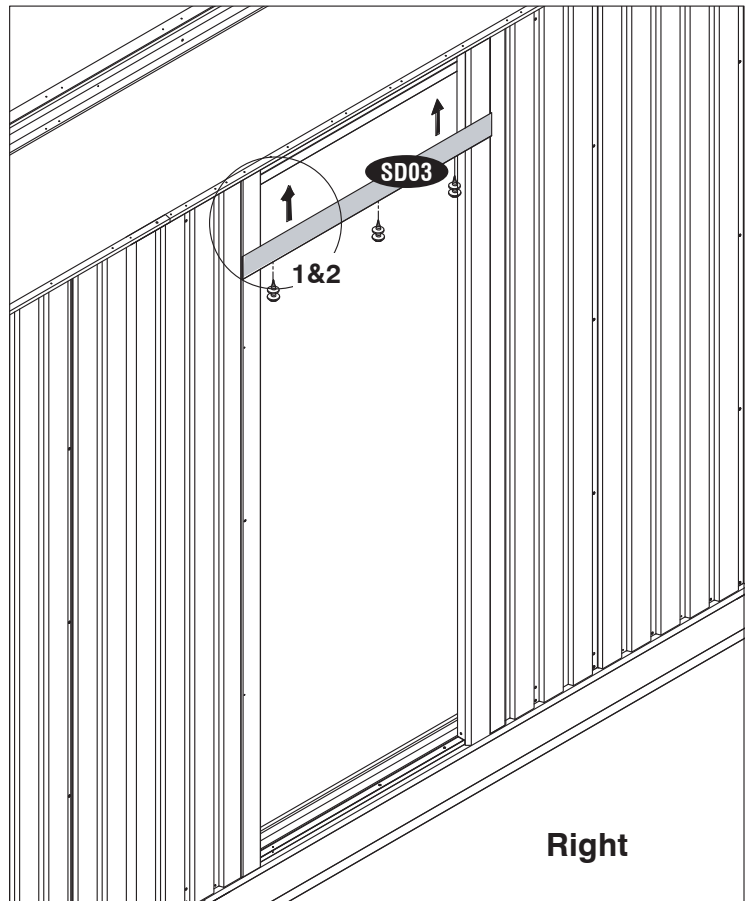

IMPORTANT: USE HAND GLOVES TO PREVENT INJURY.

Step - 29

Make 2 Sets

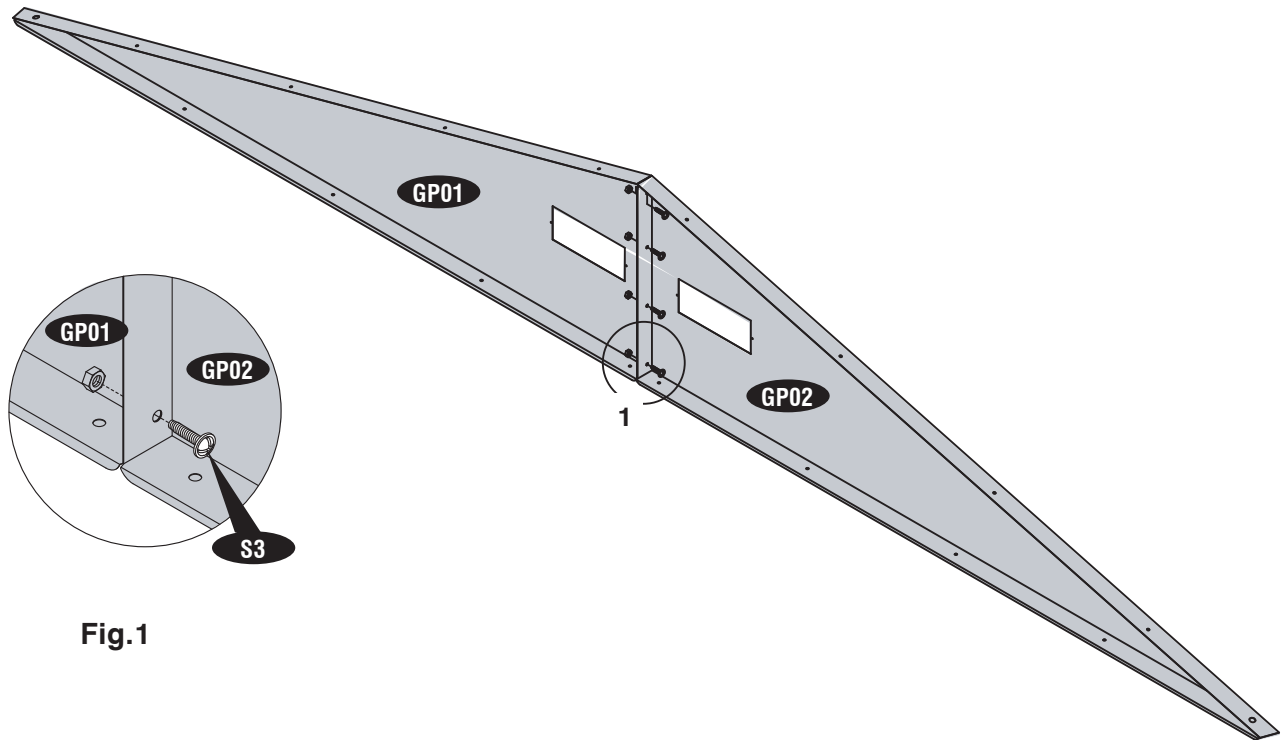


Fig.1

Step - 30

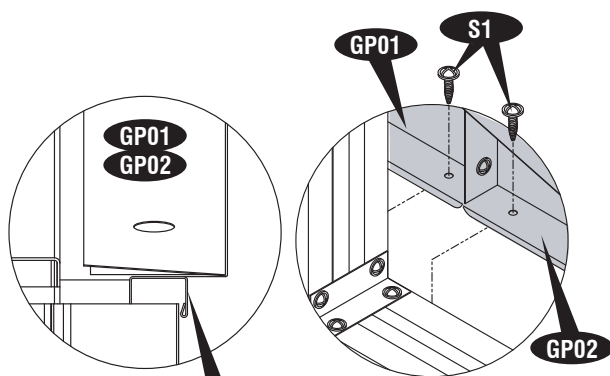


Fig.1

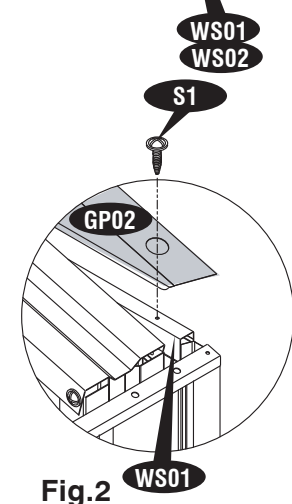


Fig.2


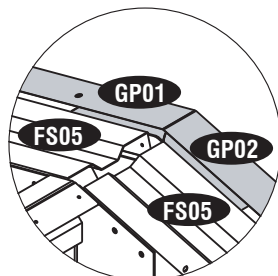


Fig.3

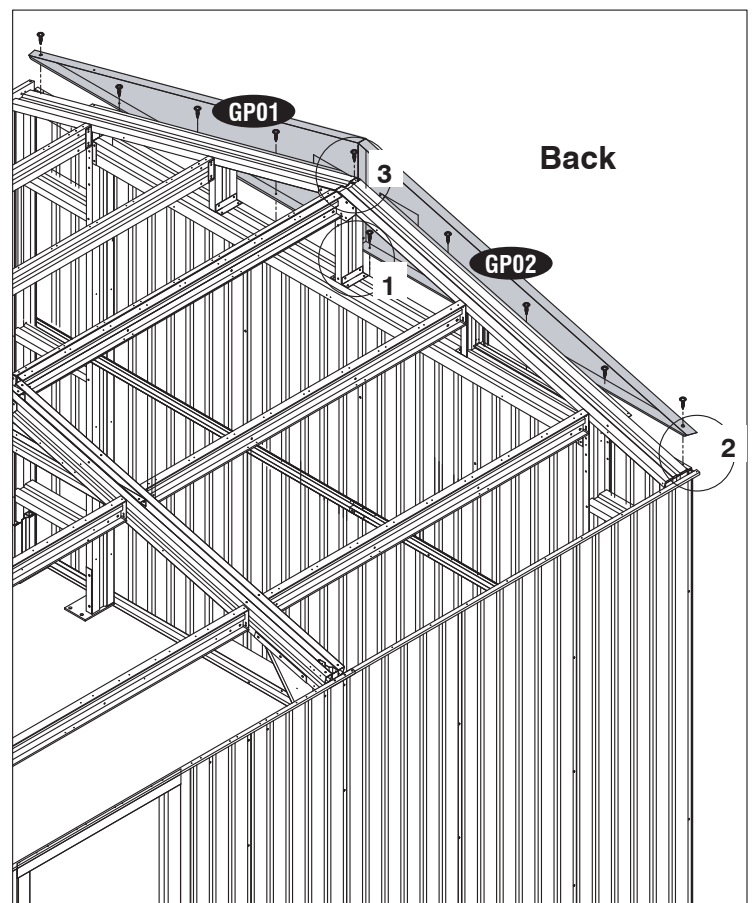

Step - 31

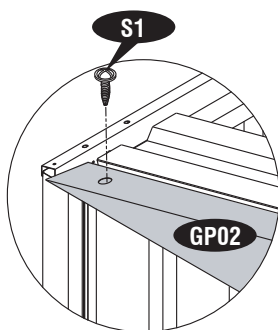


Fig.1

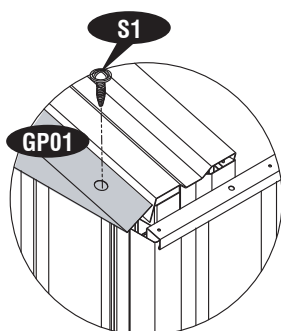


Fig.2



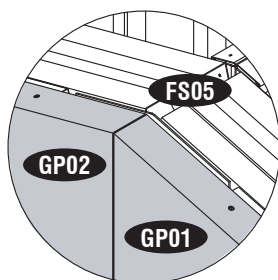


Fig.3

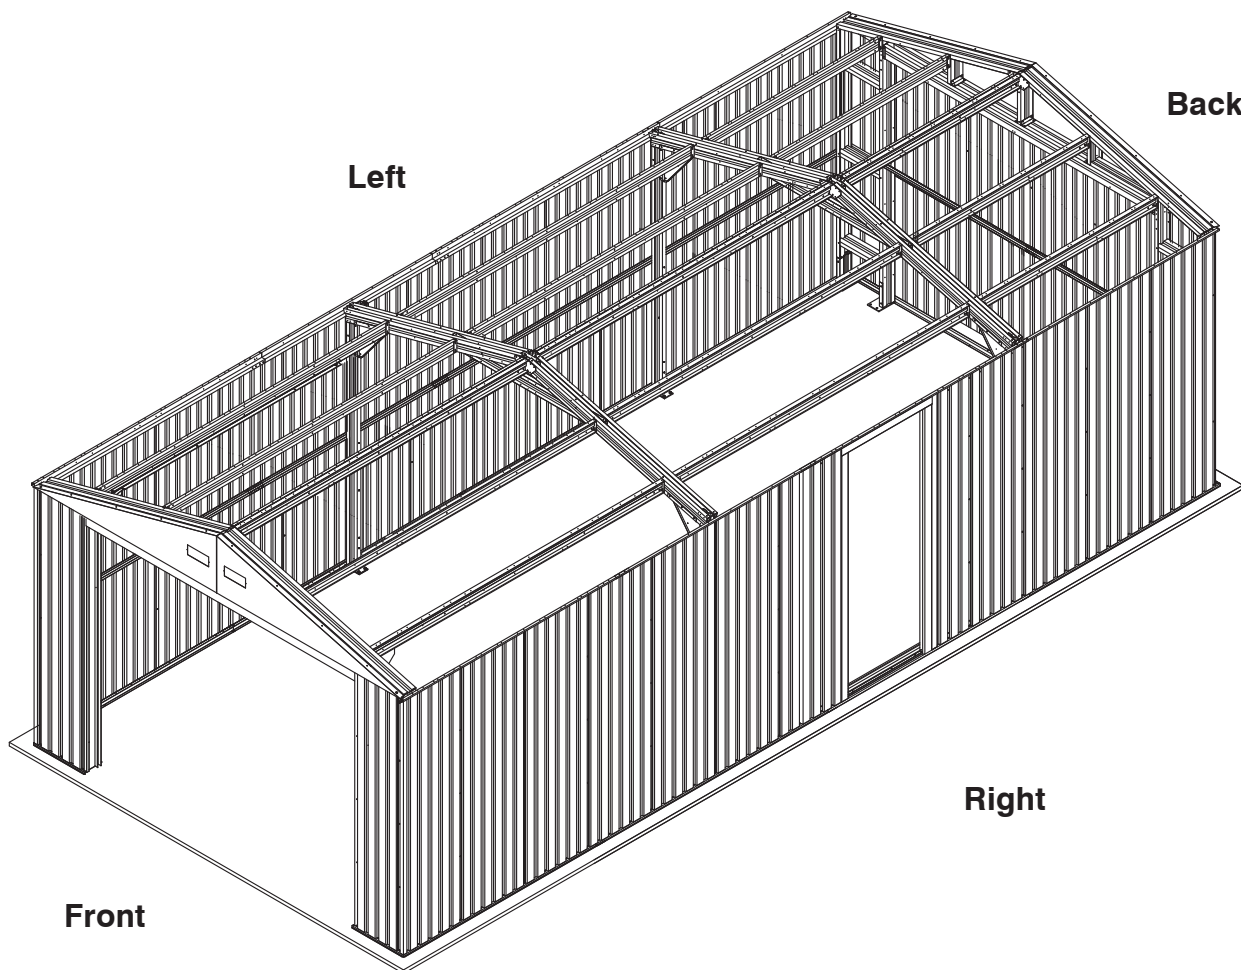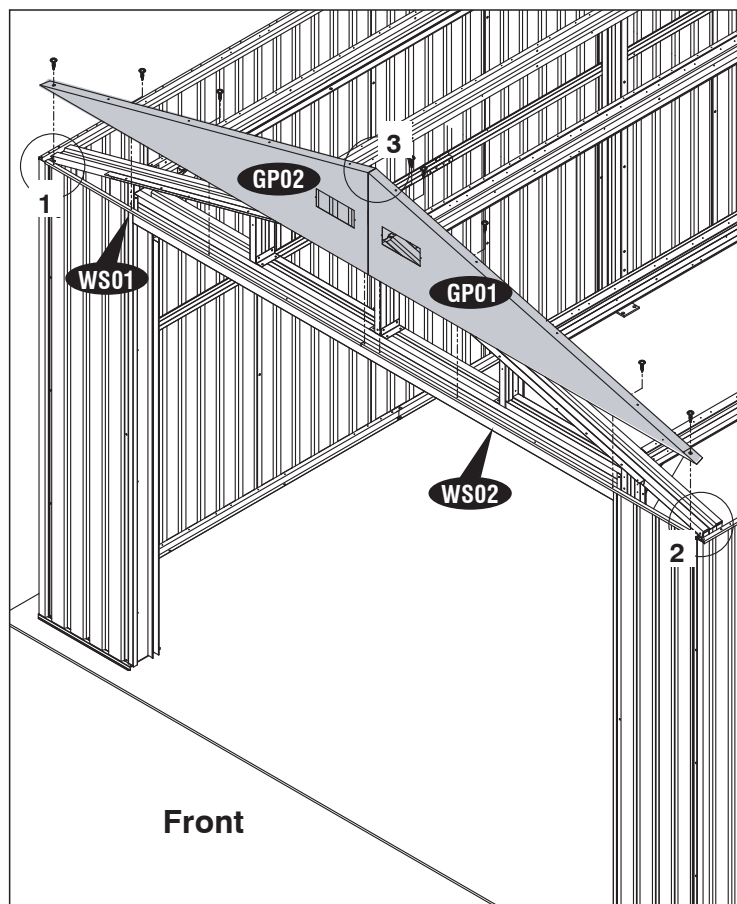


F. Roof Panel Installations and Accessories

Parts Needed:

Code	Qty	Code	Qty
RP01	2	WST	8 Meter
RP02	12	FC	2
RP03	2	VC	4
RP04	2	TC	4
RP05	2	S1	254
RF01	4	S2	28
RF02	4	S3	62
RF03	4	S9	24
RF04	3	PW	332
RF05	1		
RF06	1		
RS03	4		
RS04	4		
RS05	4		

Parts Needed for each extension:

Code	Qty
RP02	3
RP06	3
RF02	2
RF04	1
ERF04	1
RS03	1
RS05	2
ERF04	1
WST	2.5 Meter
S1	72
S2	8
S3	18
S9	6
PW	60

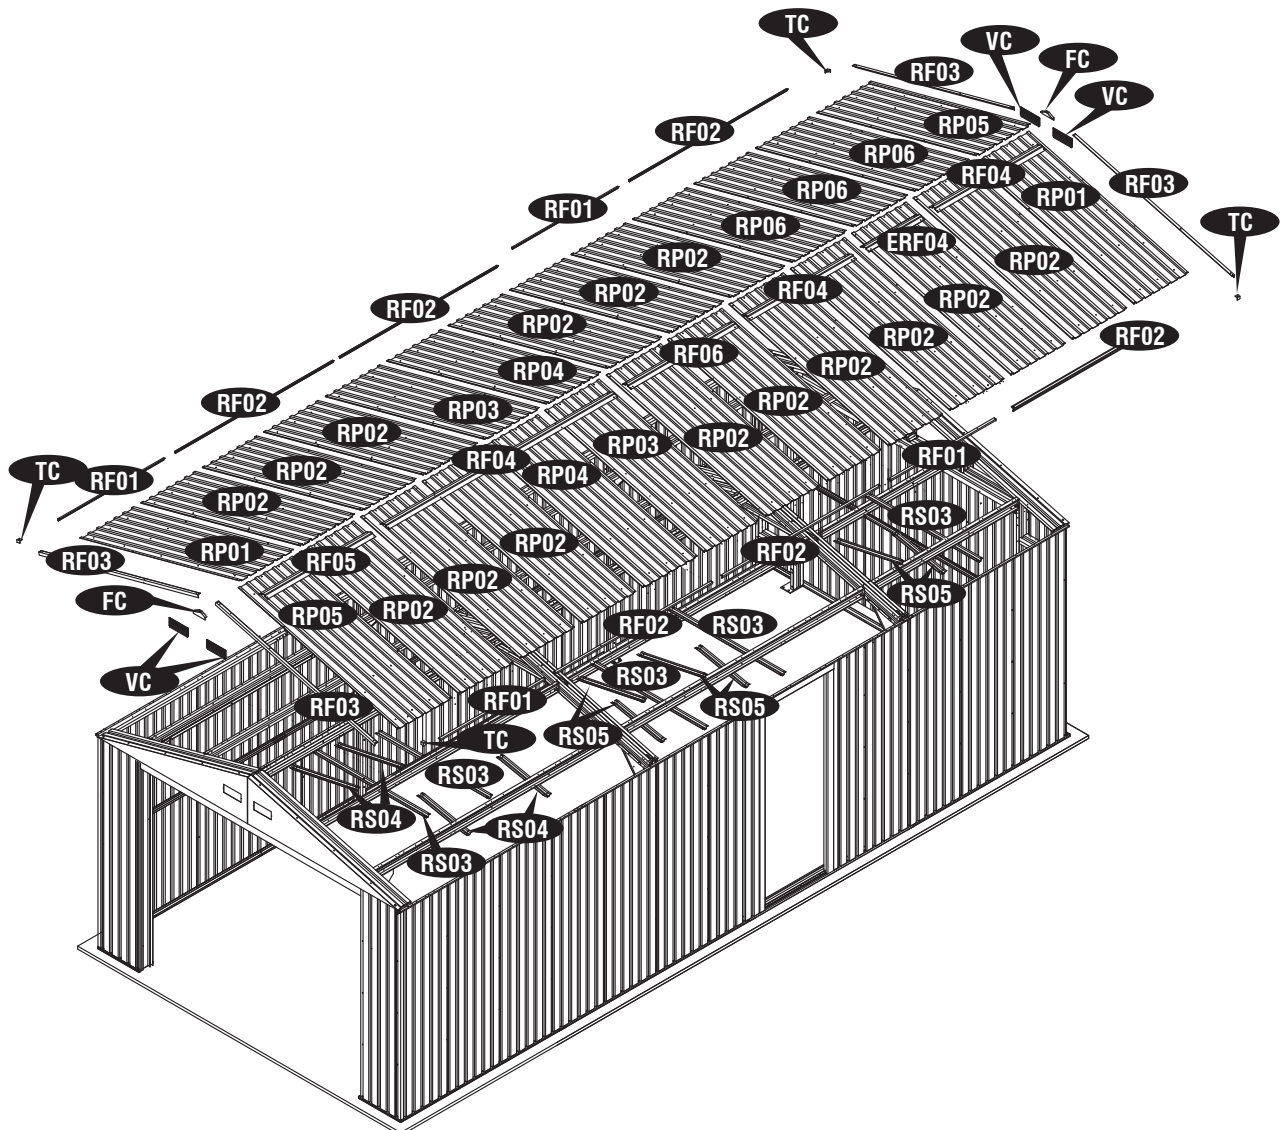

Step - 1



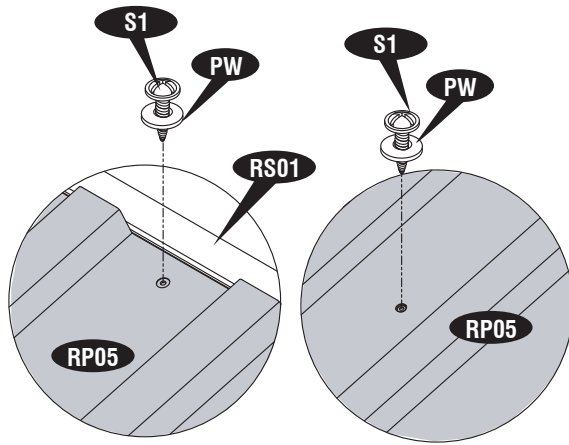


Fig.1


Fig.2

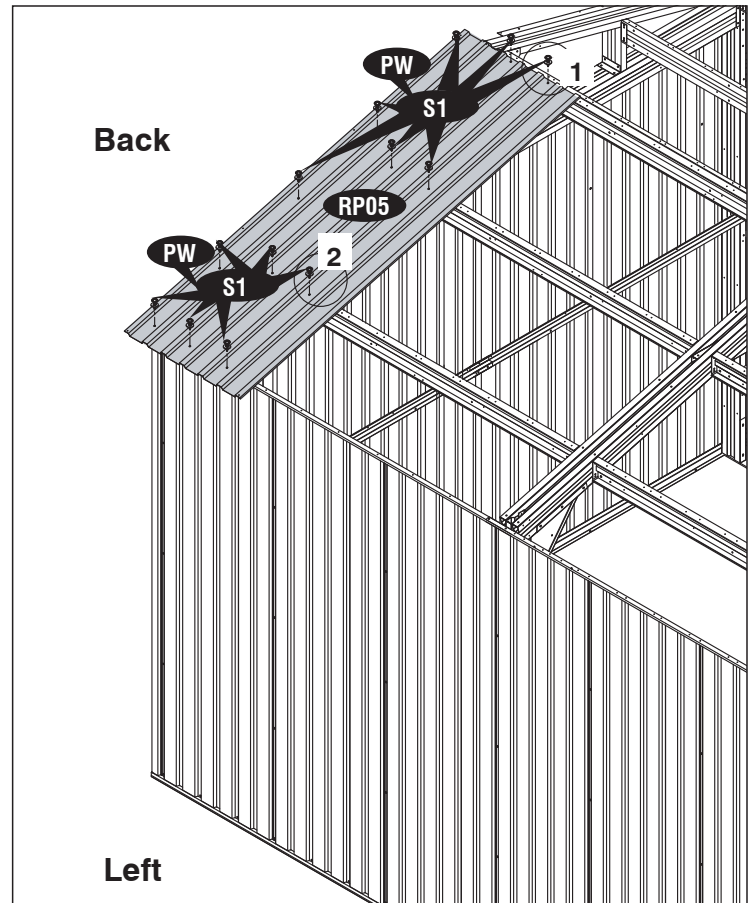

Step -2

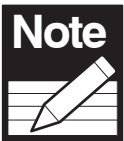

Note Make sure the overlapping position for roof panel is as shown in blow up.

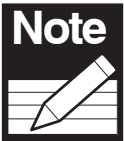

Note Roof Panel installation by using ladder from inside at missing Panels.

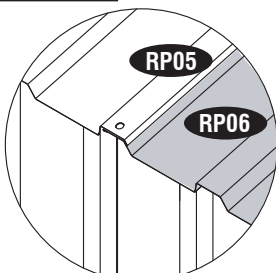


Fig.1

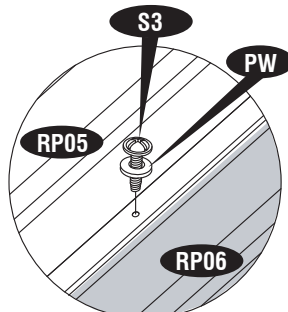


Fig.2

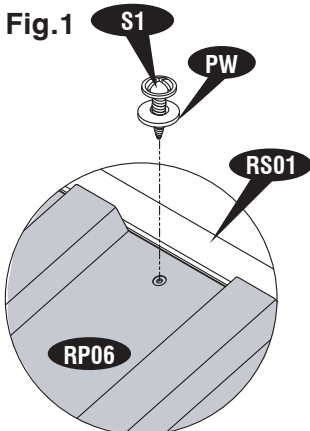


Fig.3


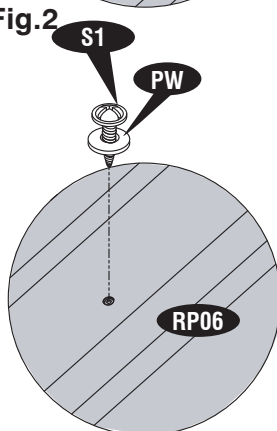


Fig.4

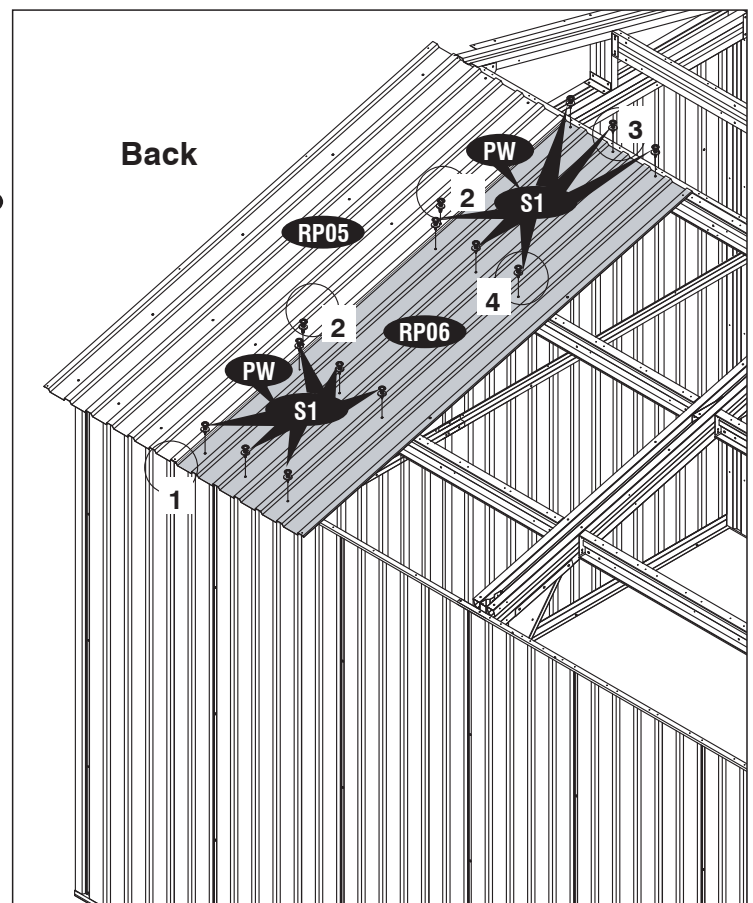

Step -3

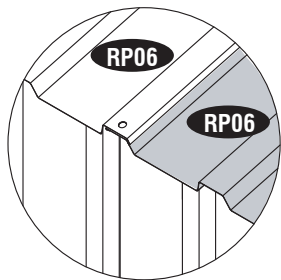


Fig.1

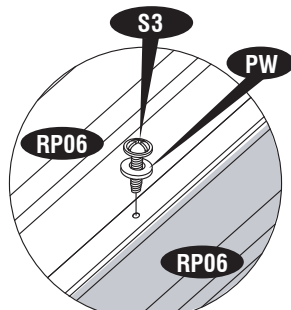


Fig.2

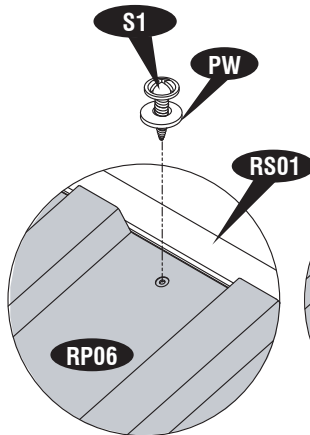


Fig.3


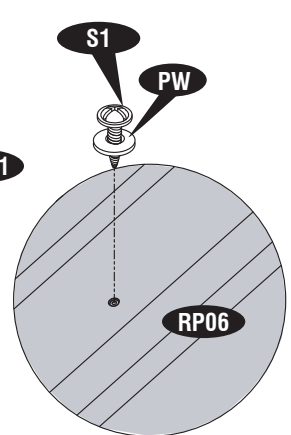


Fig.4

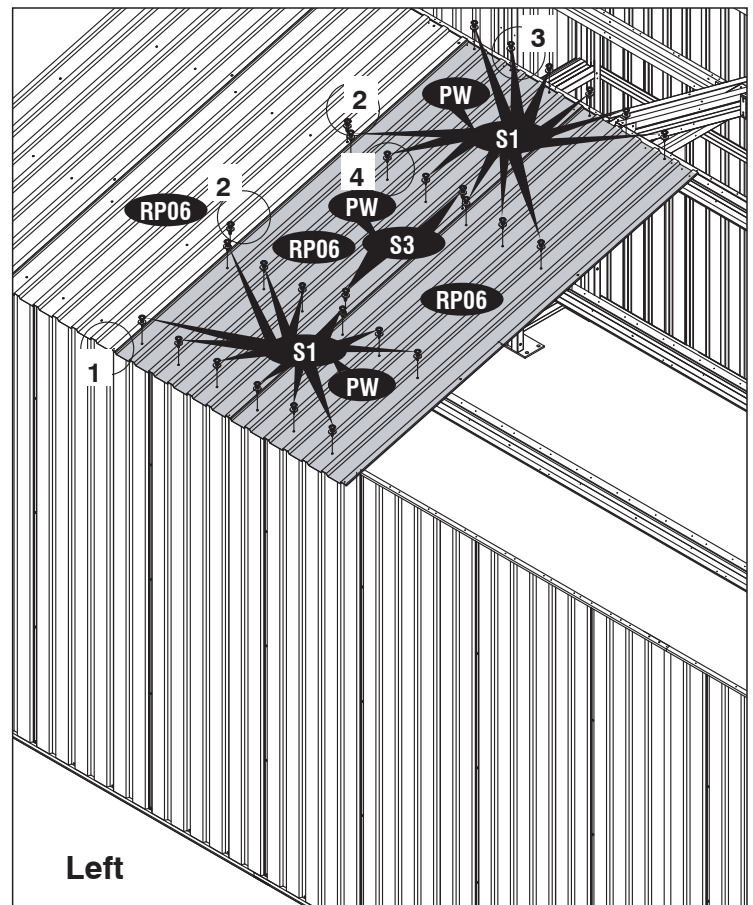

Step -4

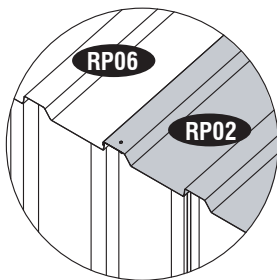


Fig.1

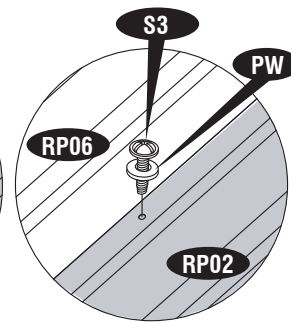


Fig.2

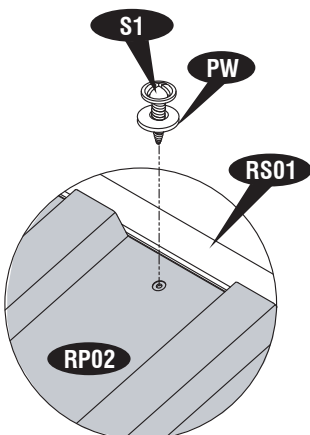


Fig.3


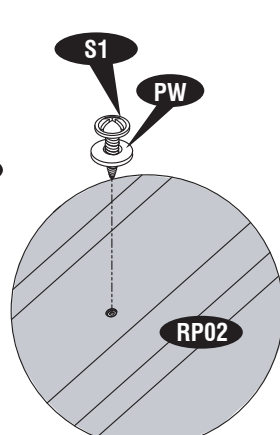


Fig.4

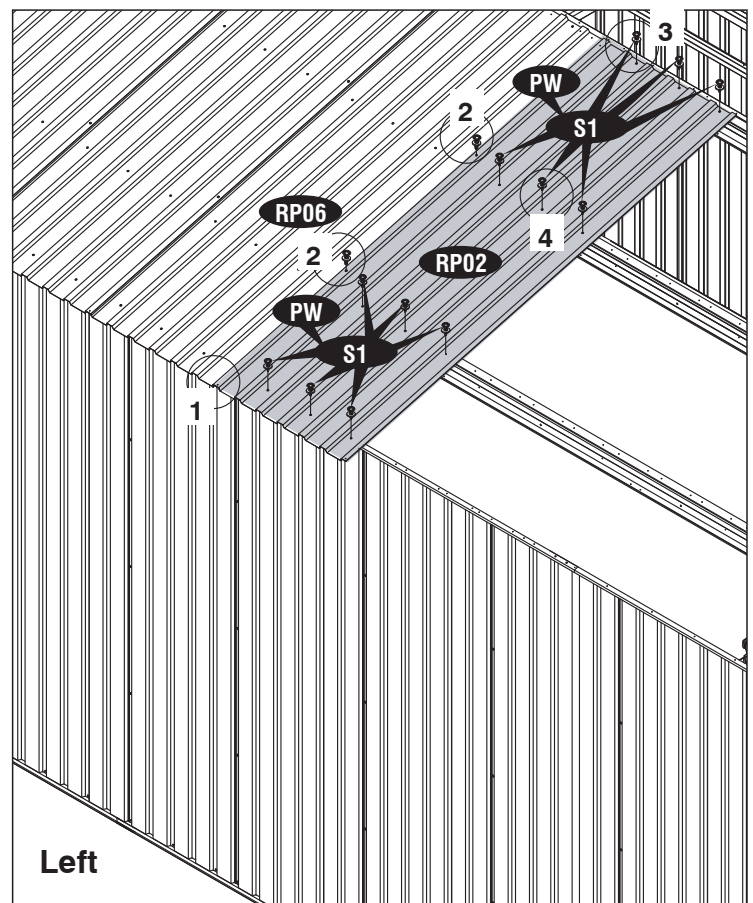

Step -5

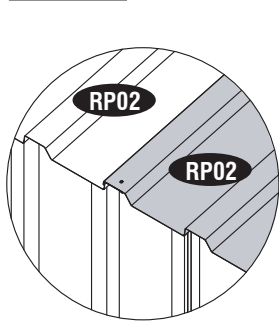


Fig.1

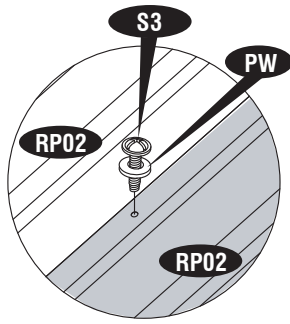


Fig.2

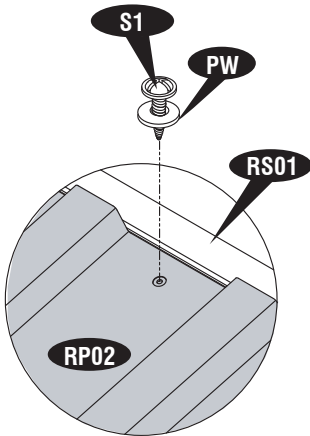


Fig.3



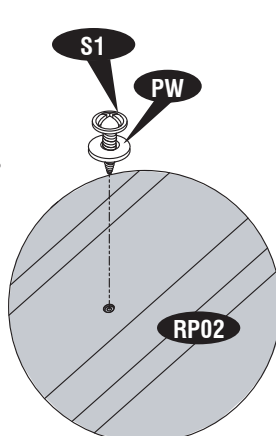


Fig.4

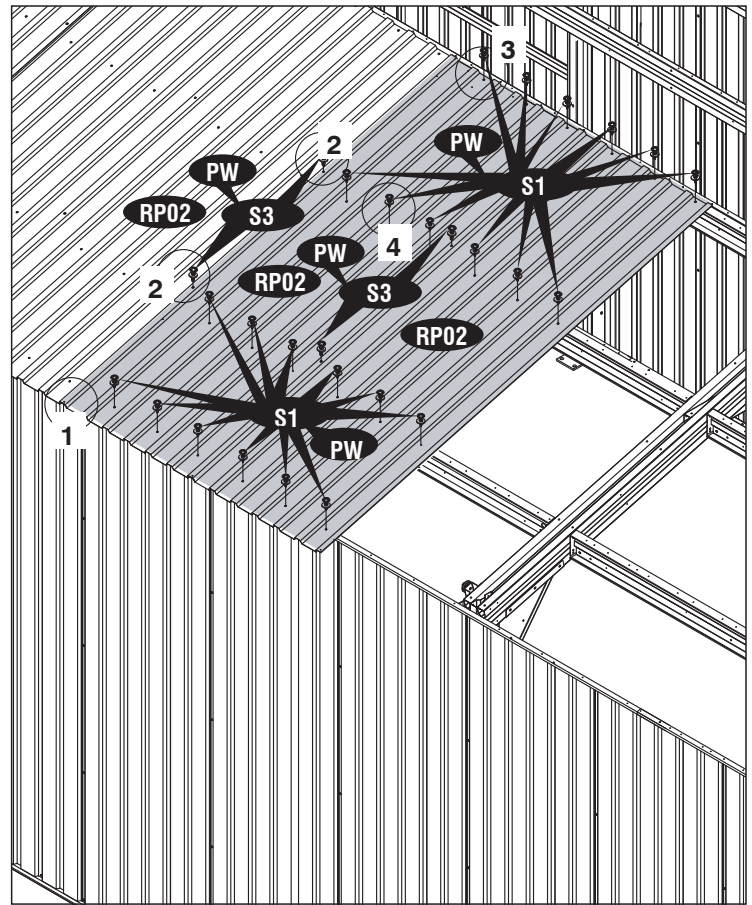


Step -6


Make 2 Sets

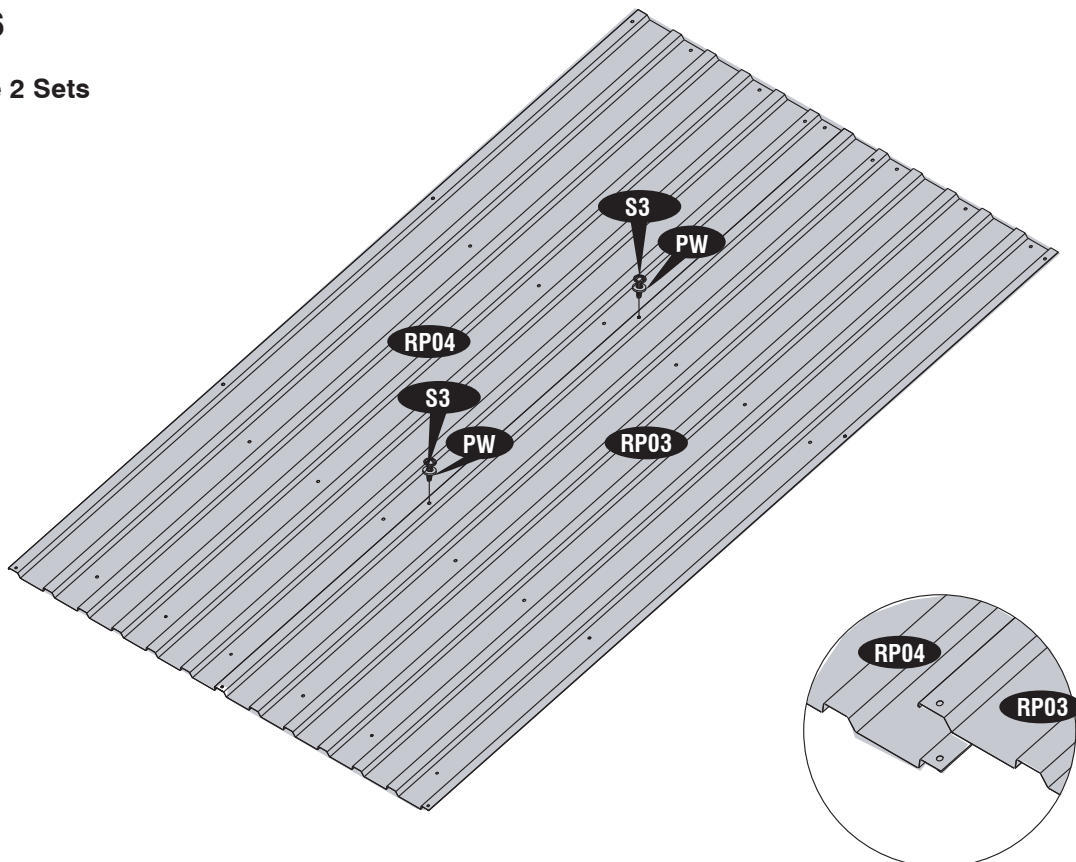


Step -7

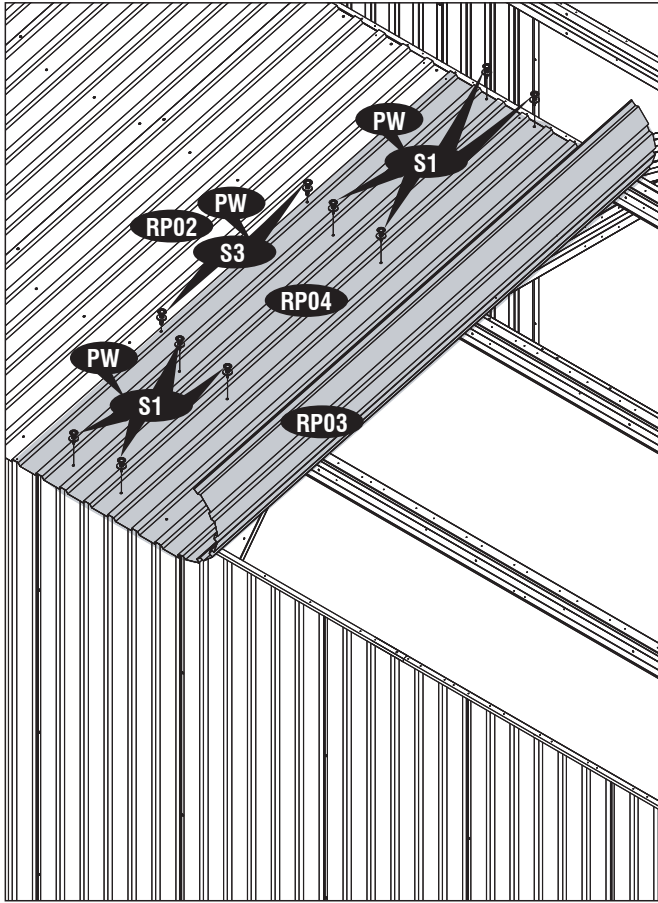


Step -8

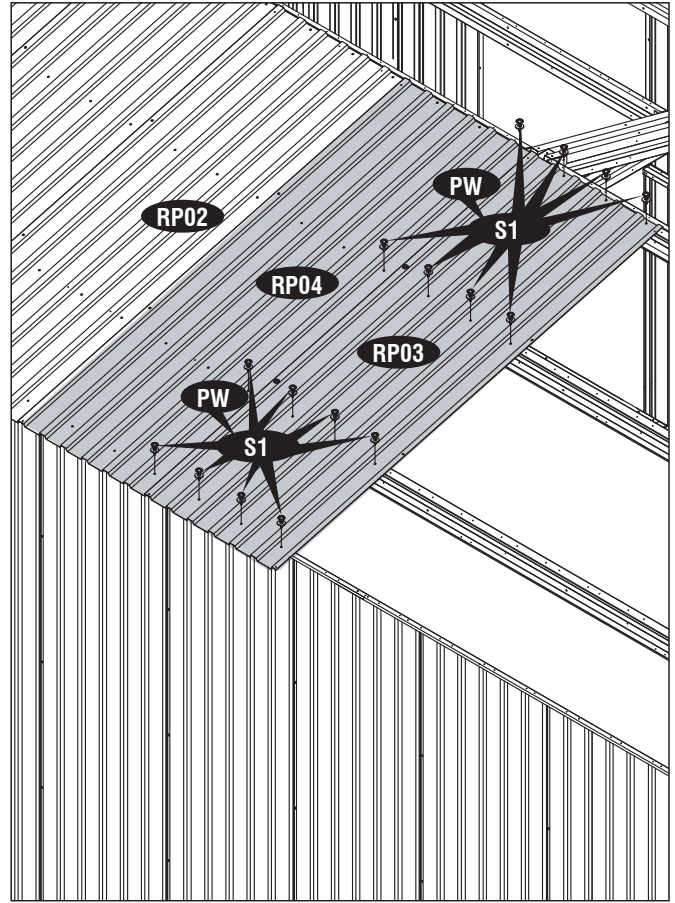


Step -9

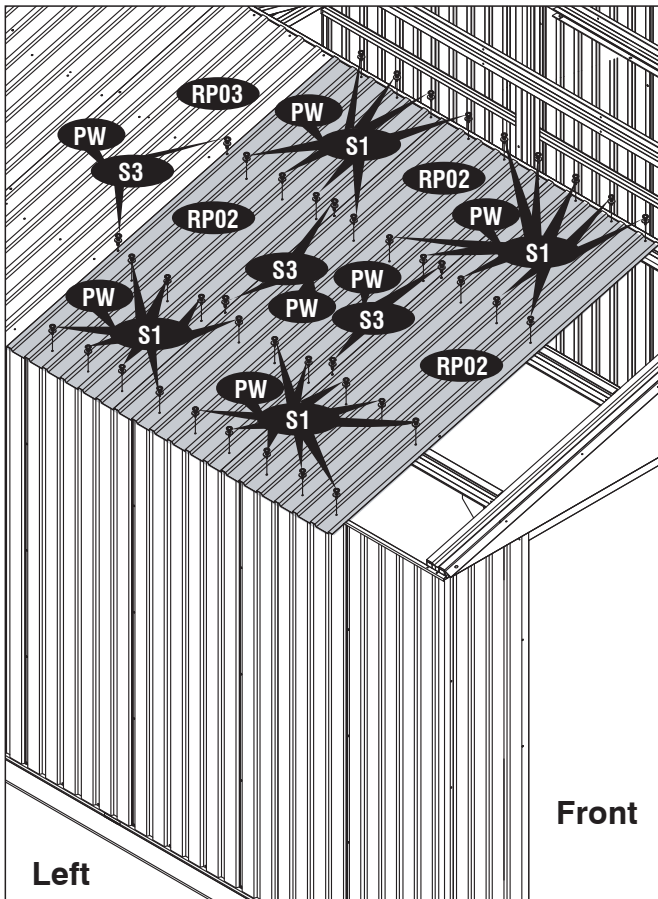



Step -10

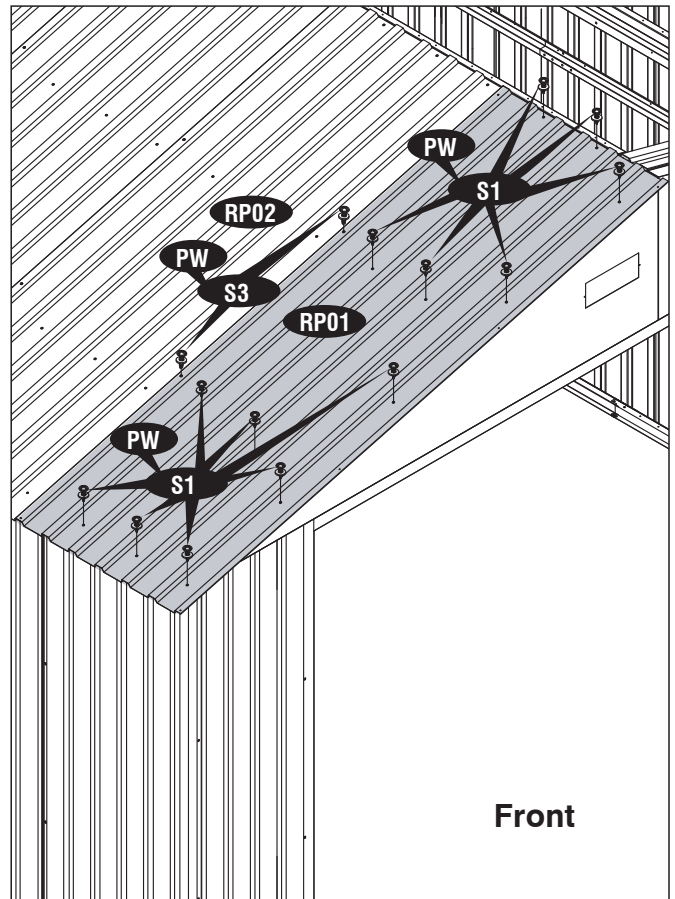

Step - 11

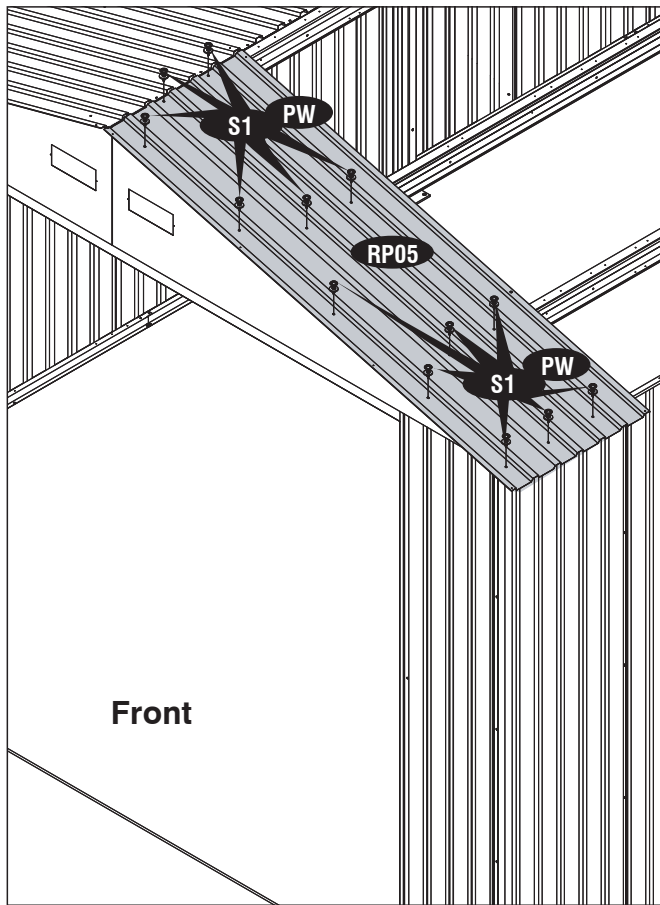

Step - 12

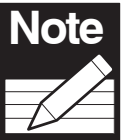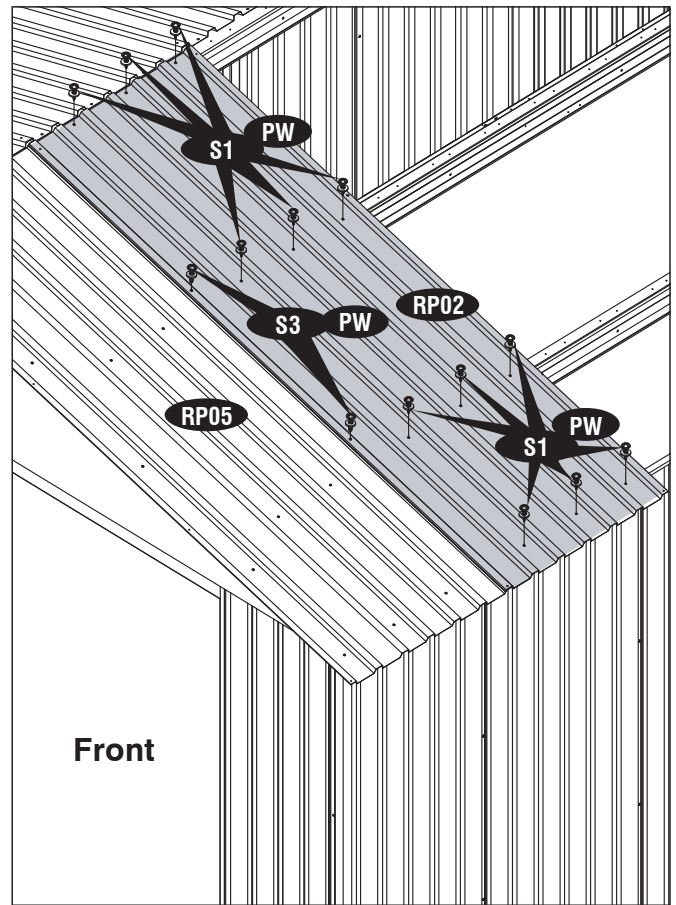

Note Roof Panel installation by using ladder from inside at missing Panels.

Step - 13

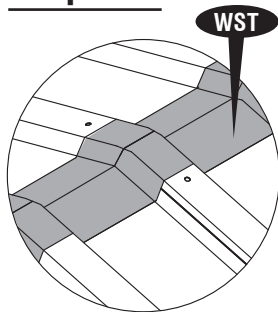


Fig.1

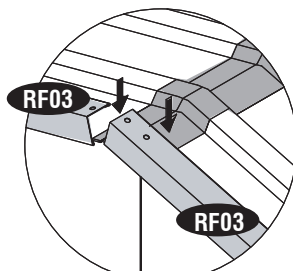


Fig.2

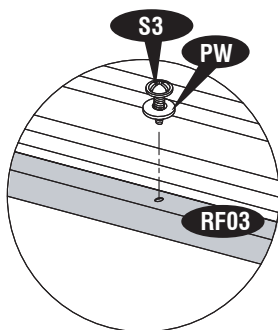


Fig.3


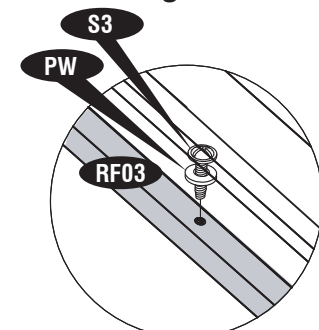


Fig.4

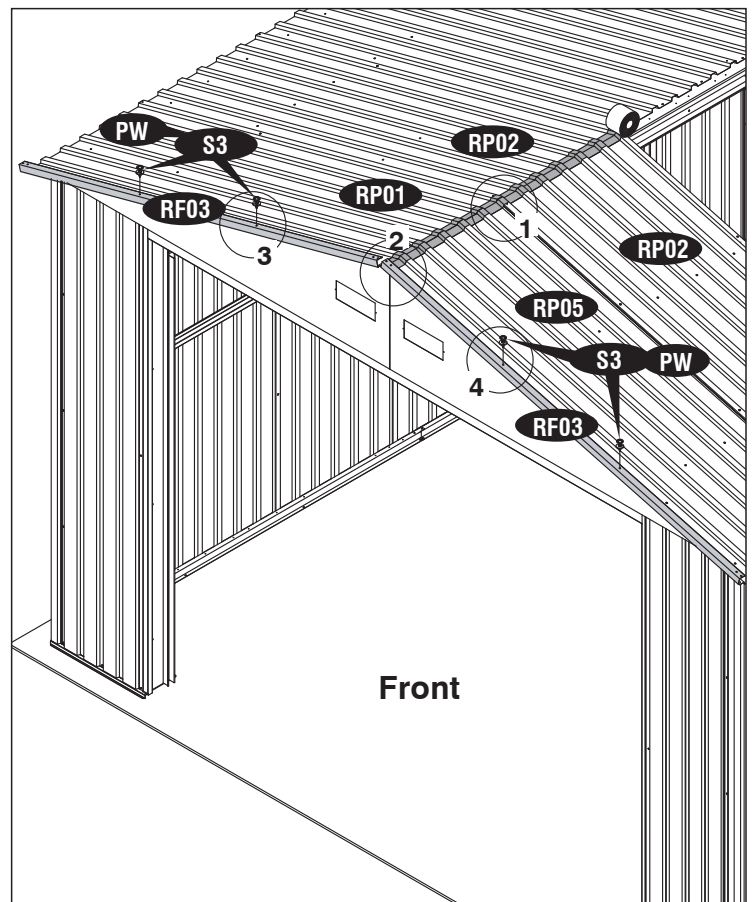

Step - 14

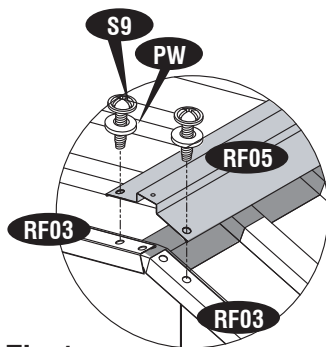


Fig.1



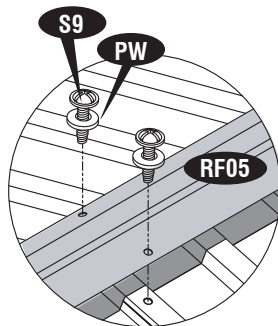



Fig.2

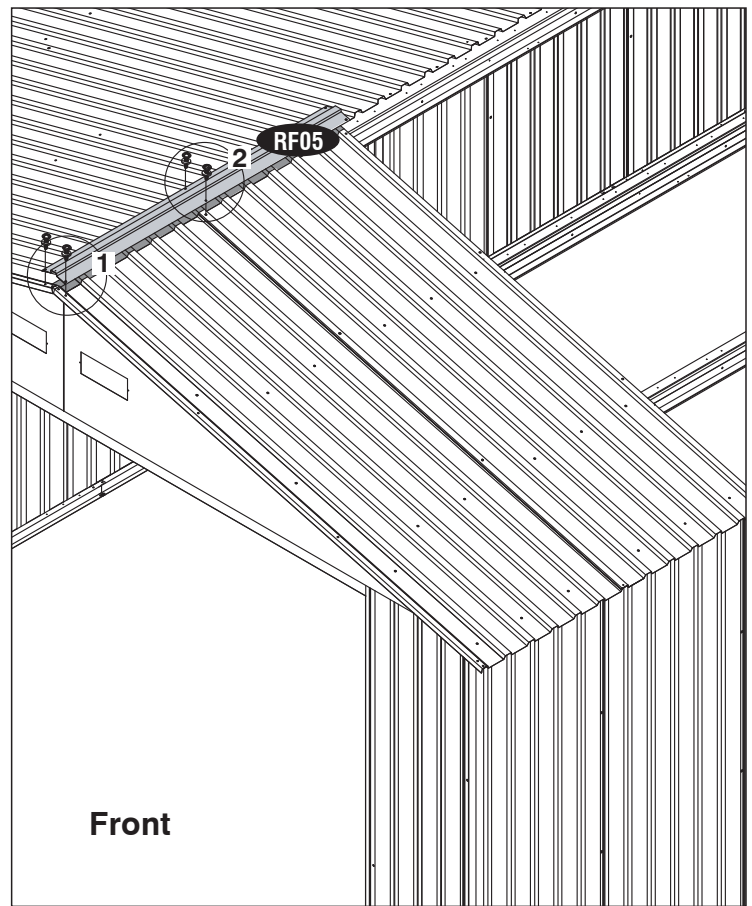


Step - 15

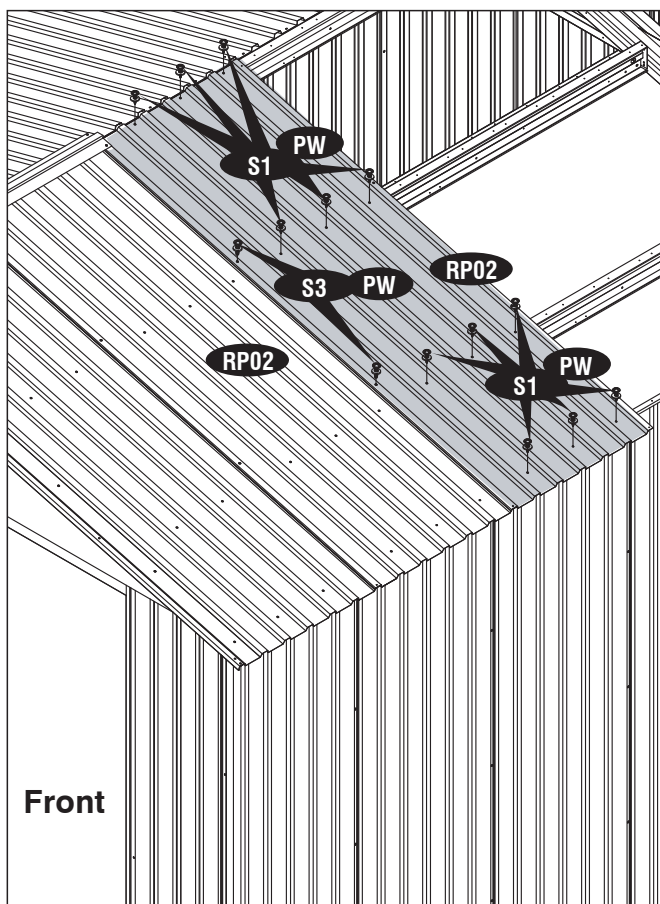


Step - 16

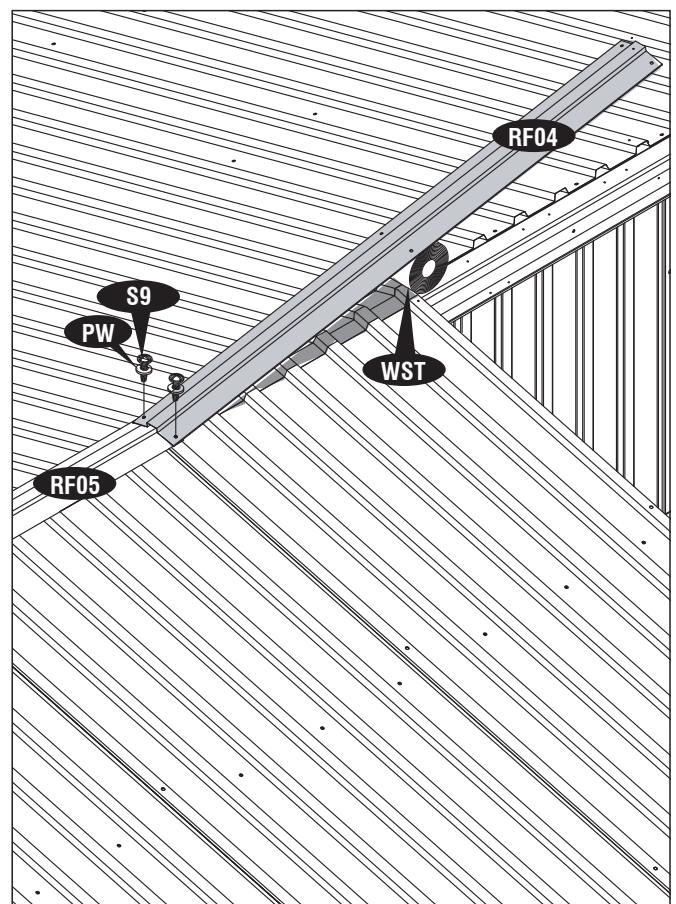


Step - 17

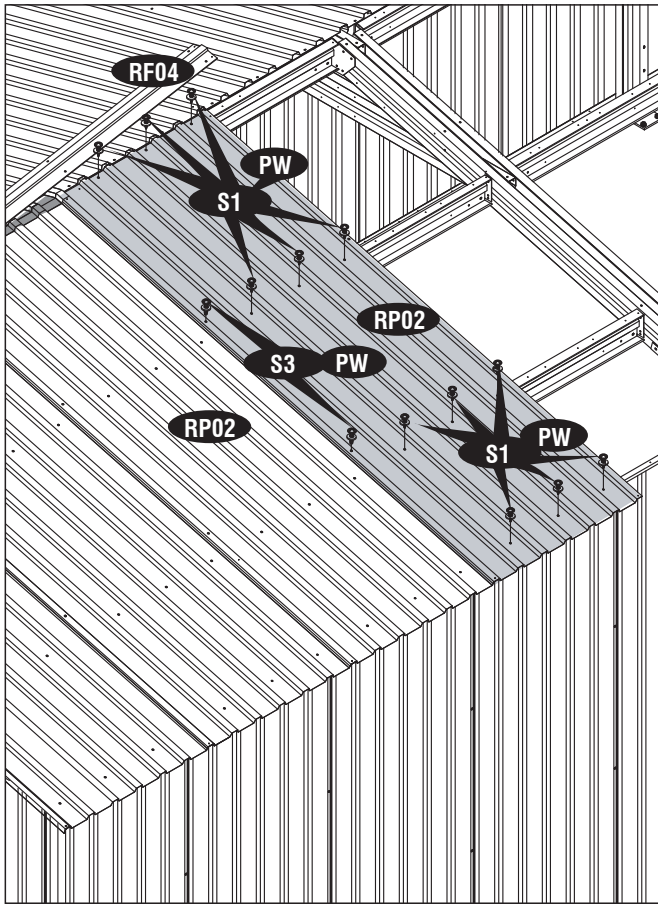


Step - 18

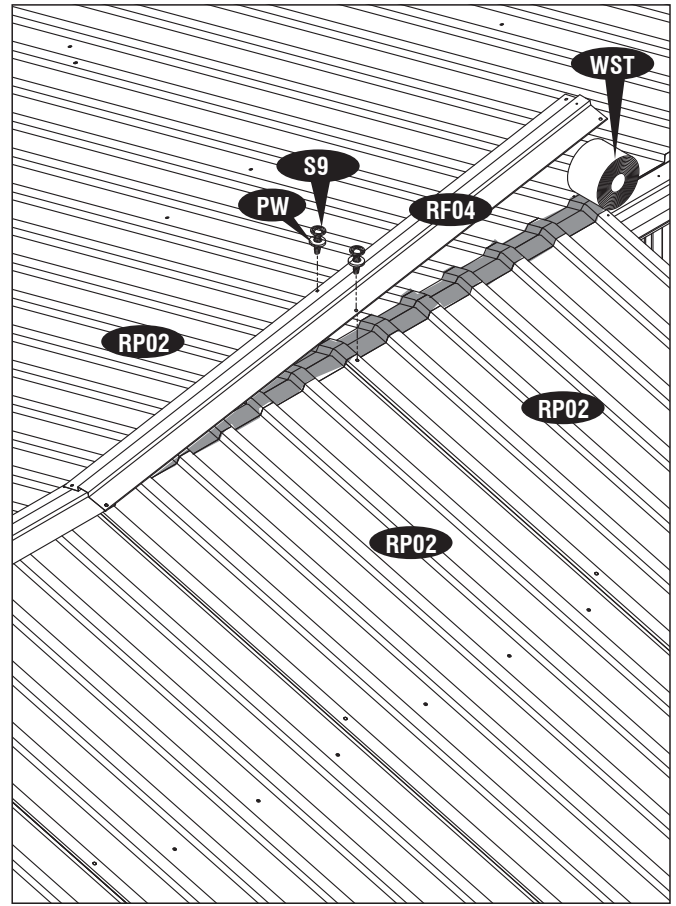


Step - 19

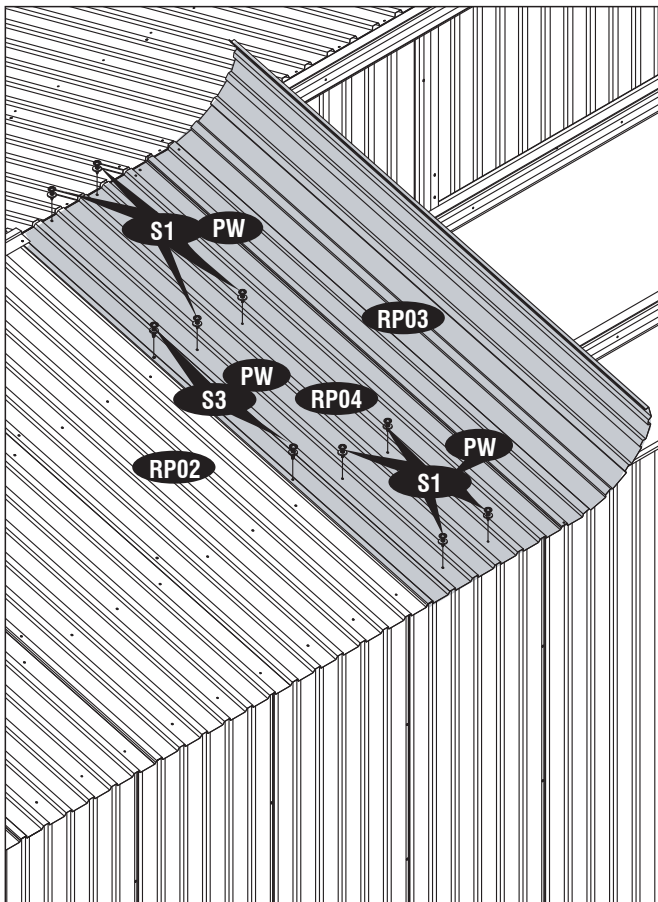


Step - 20

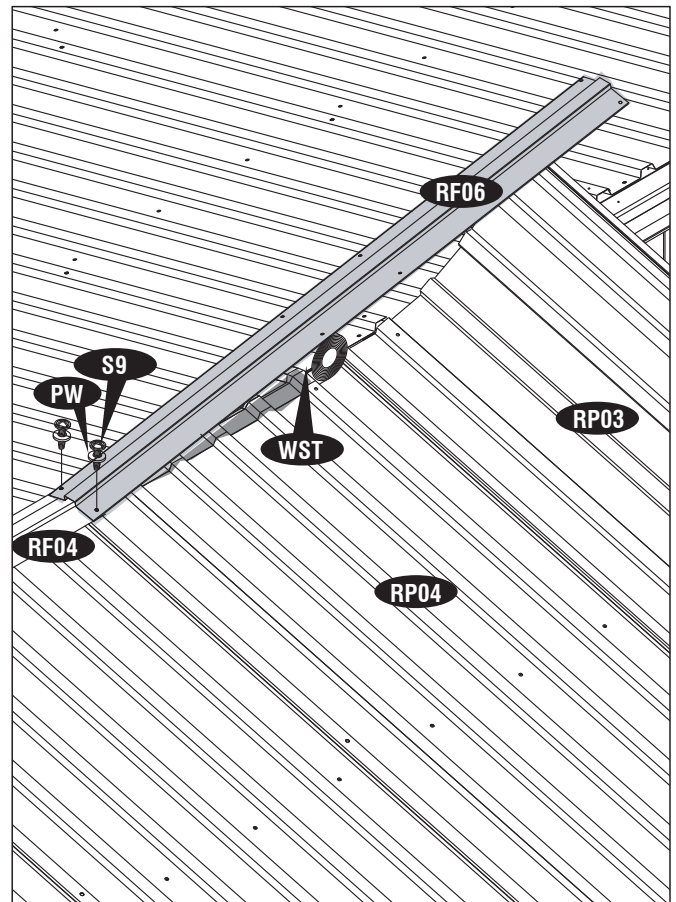


Step - 21

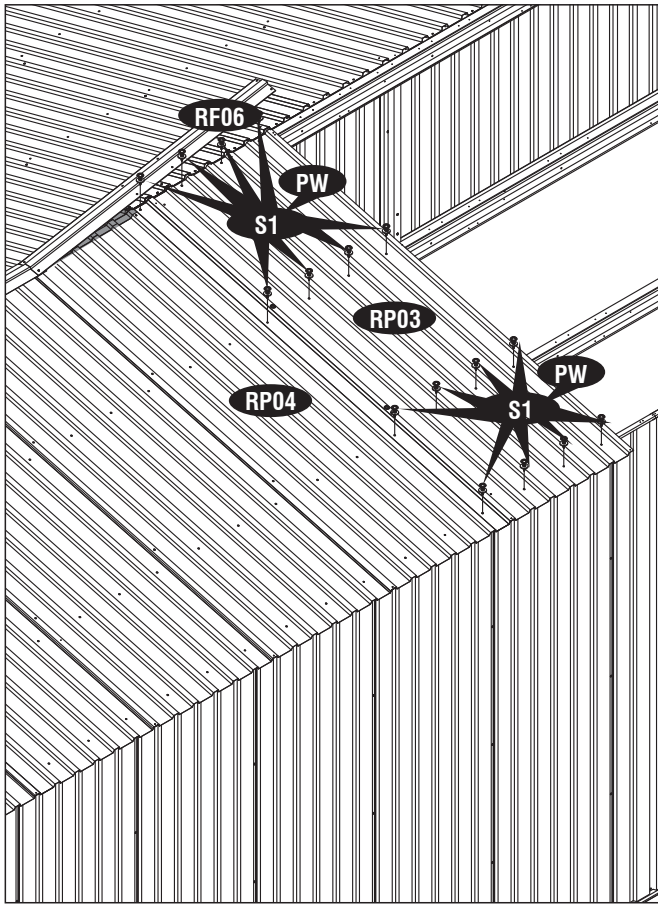


Step - 22

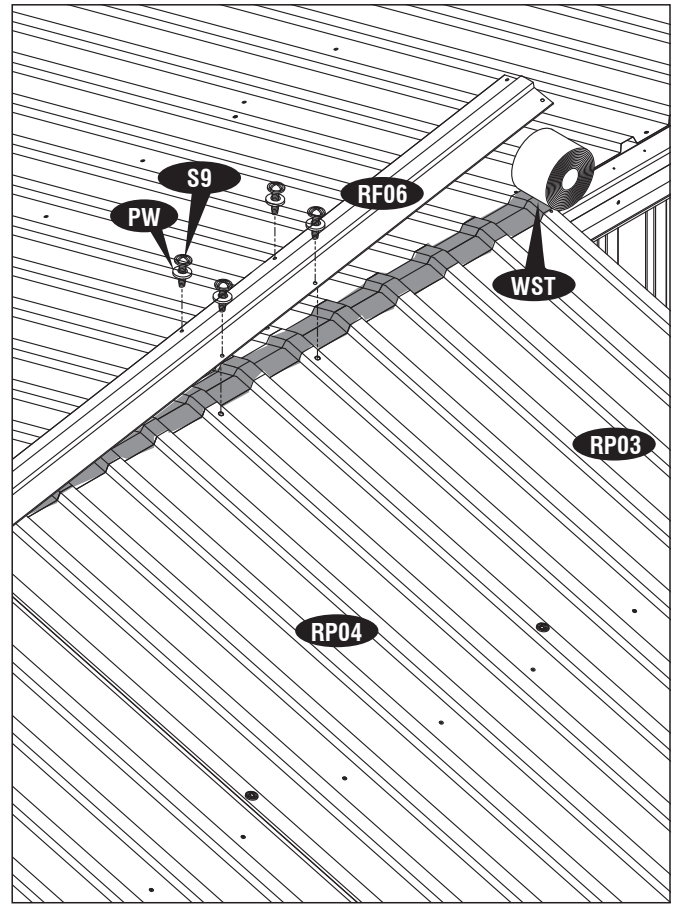


Step - 23

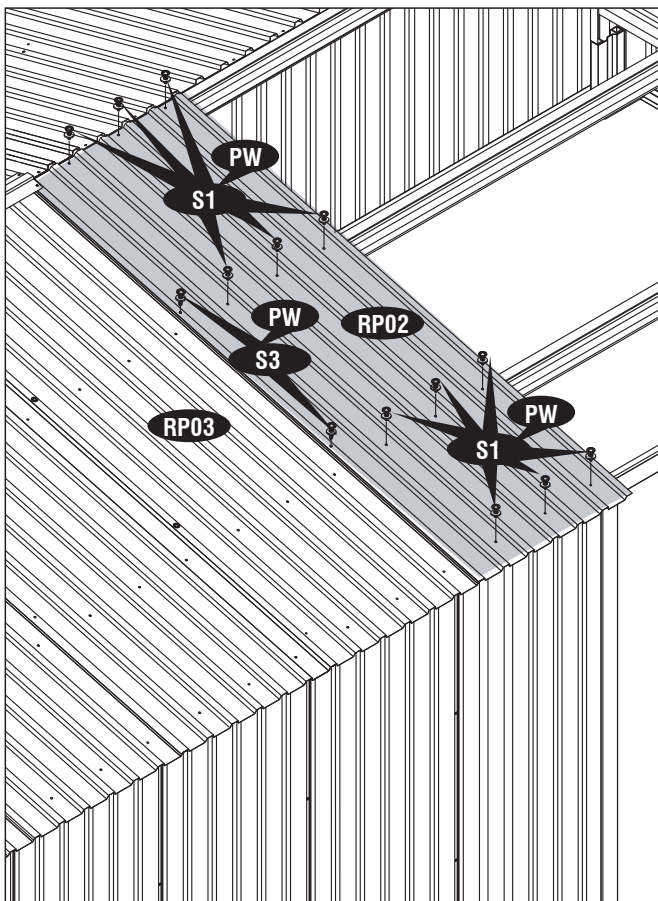


Step - 24

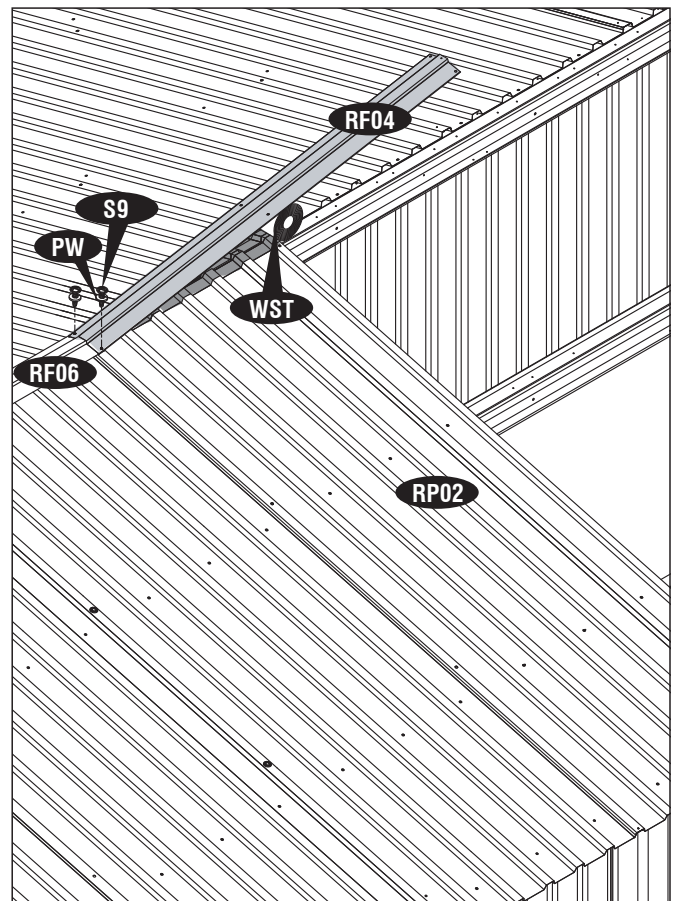


Step - 25

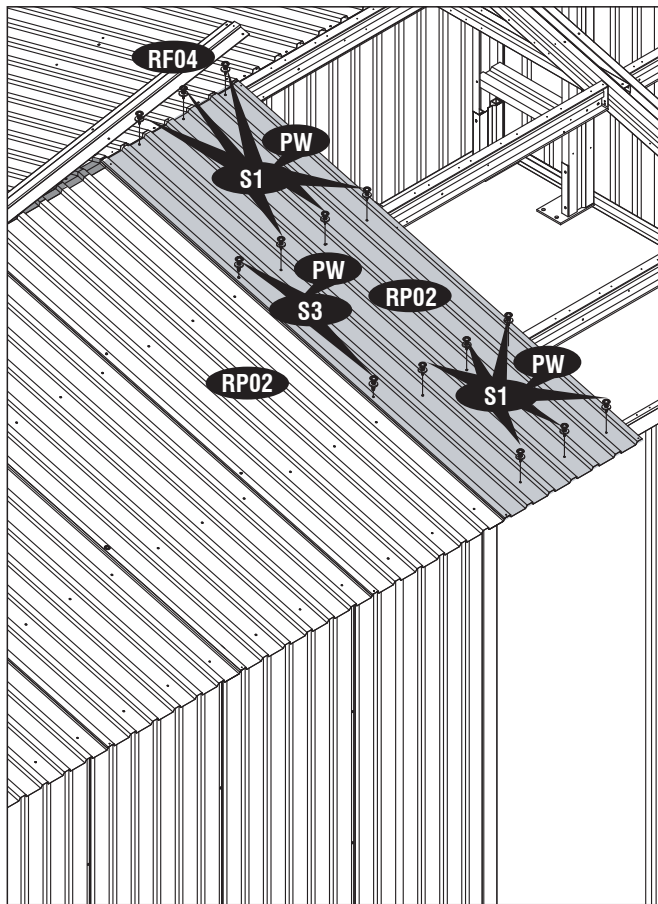


Step - 26

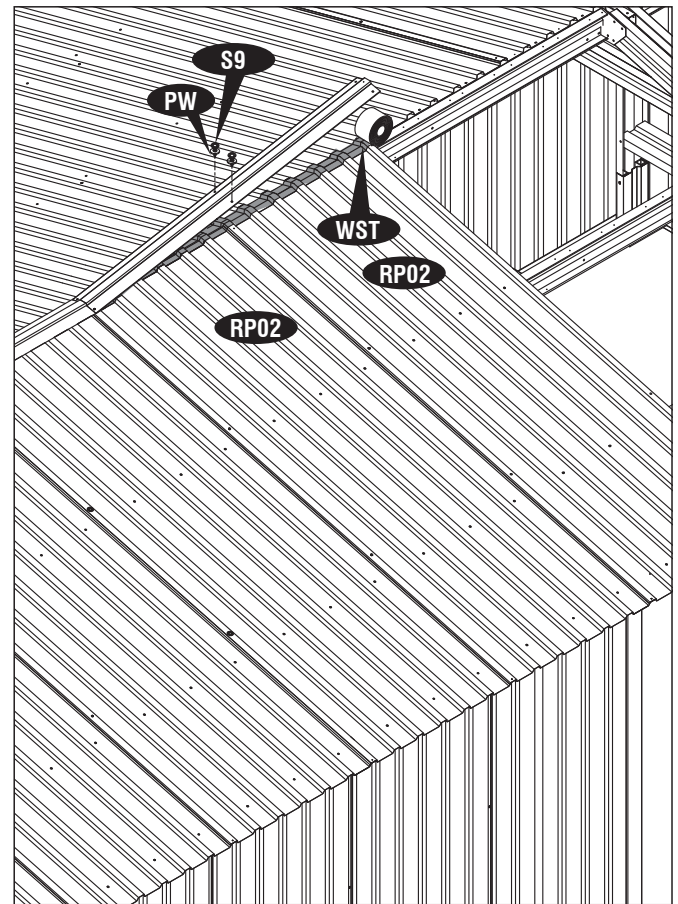


Step - 27

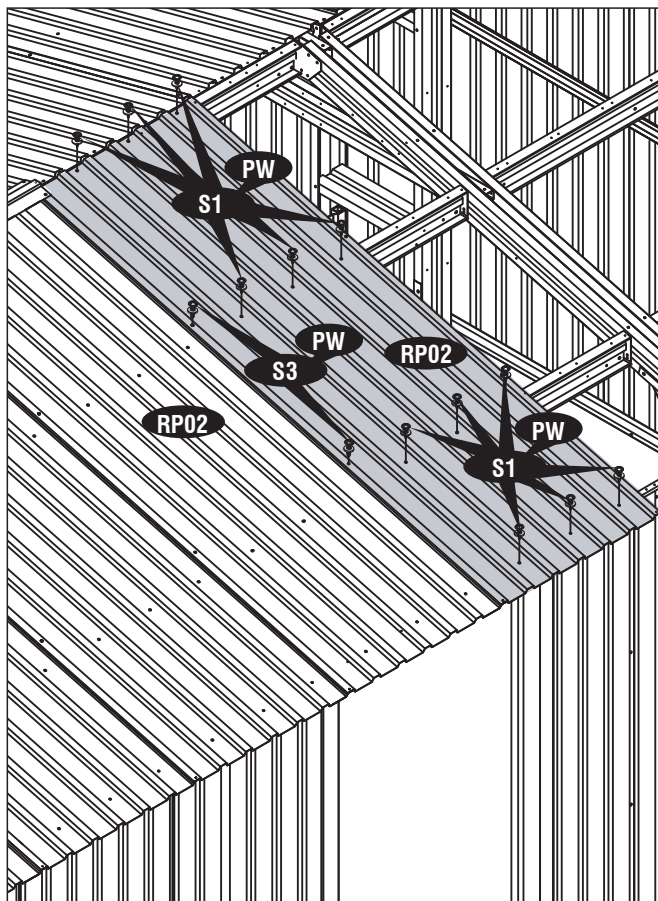


Step - 28

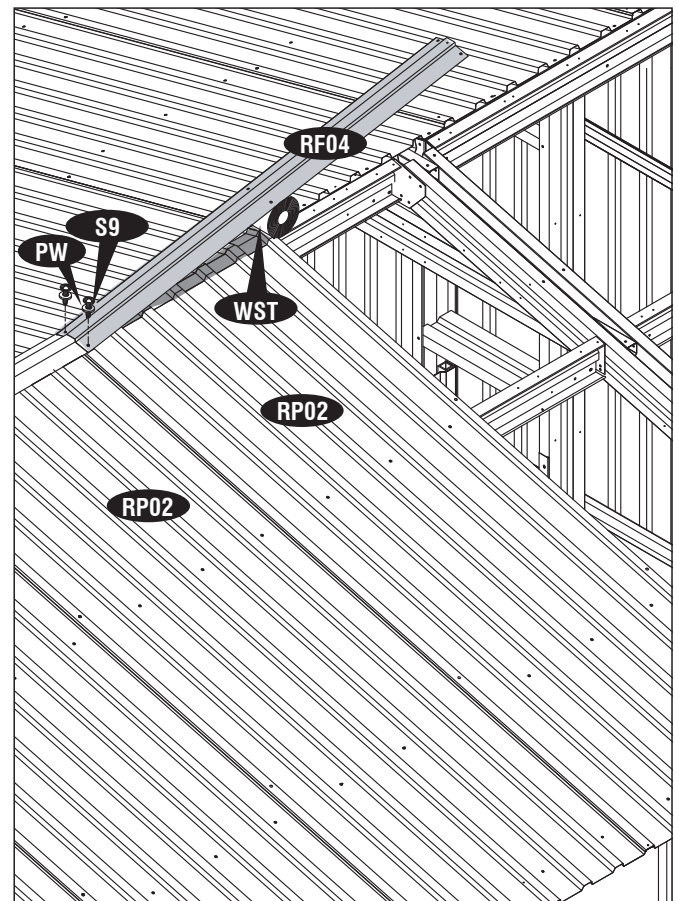


Step - 29

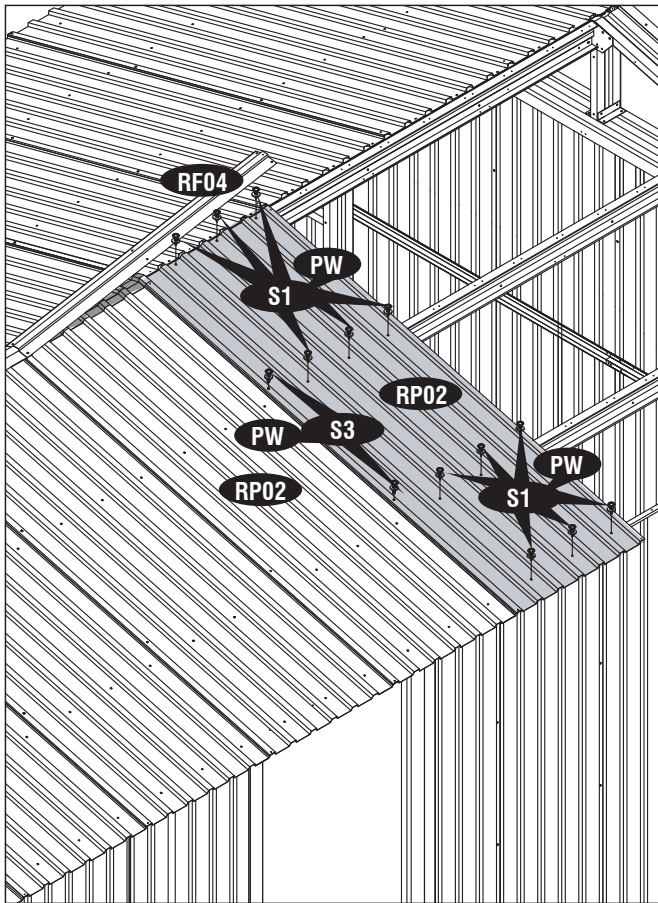


Step - 30

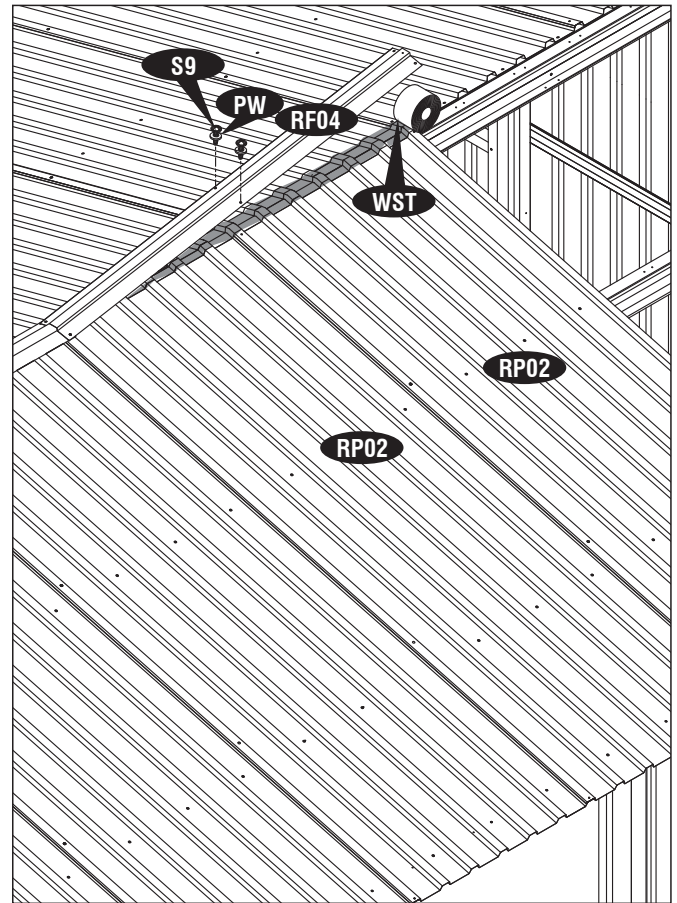


Step - 31

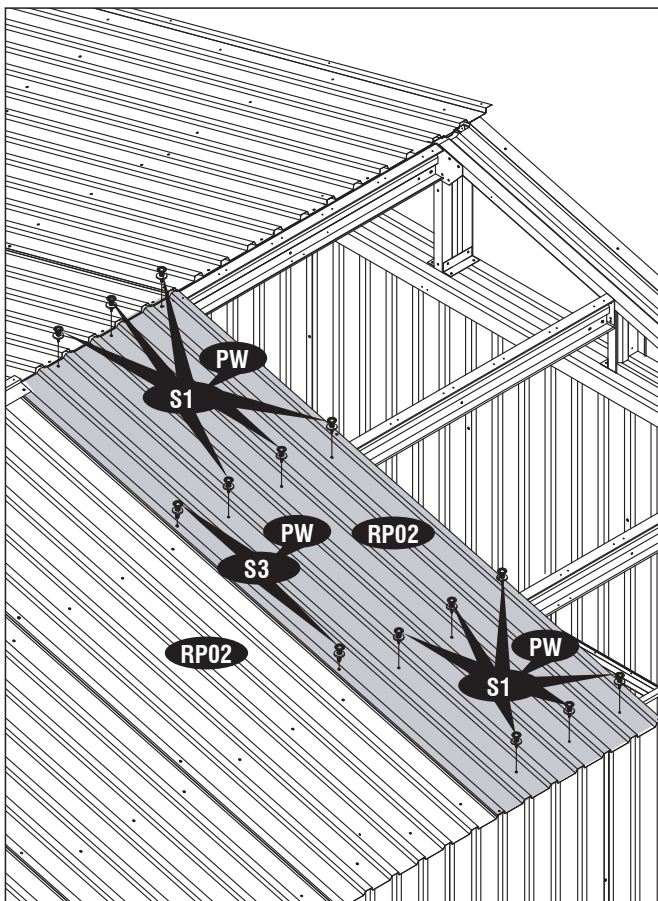


Step - 32

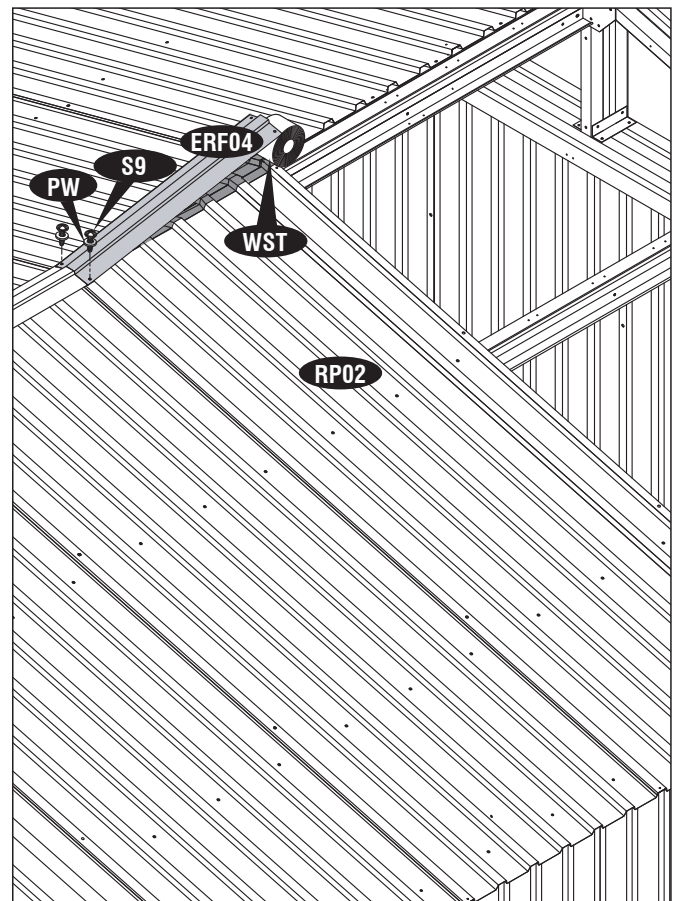


Step - 33

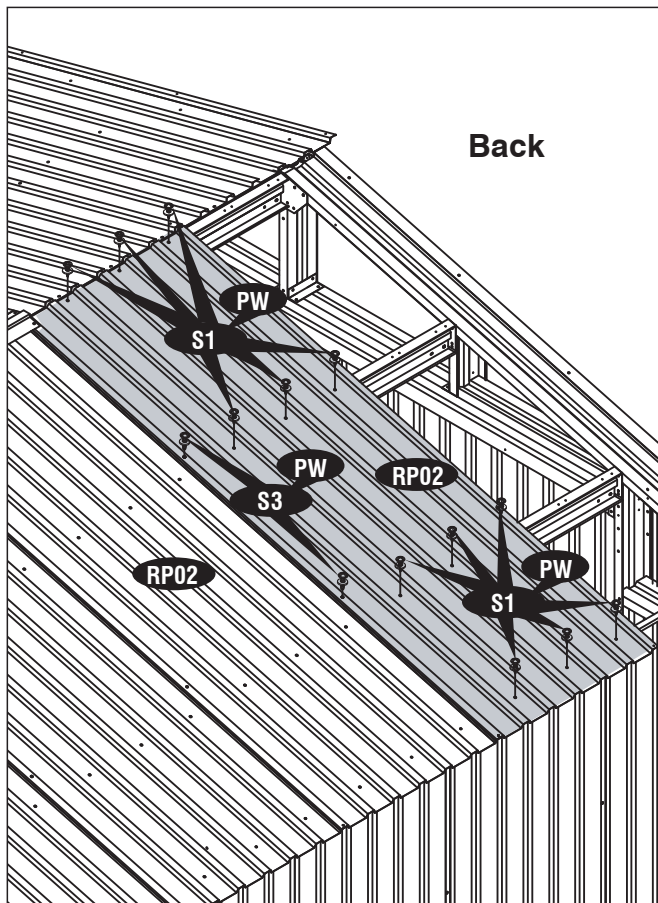


Step - 34

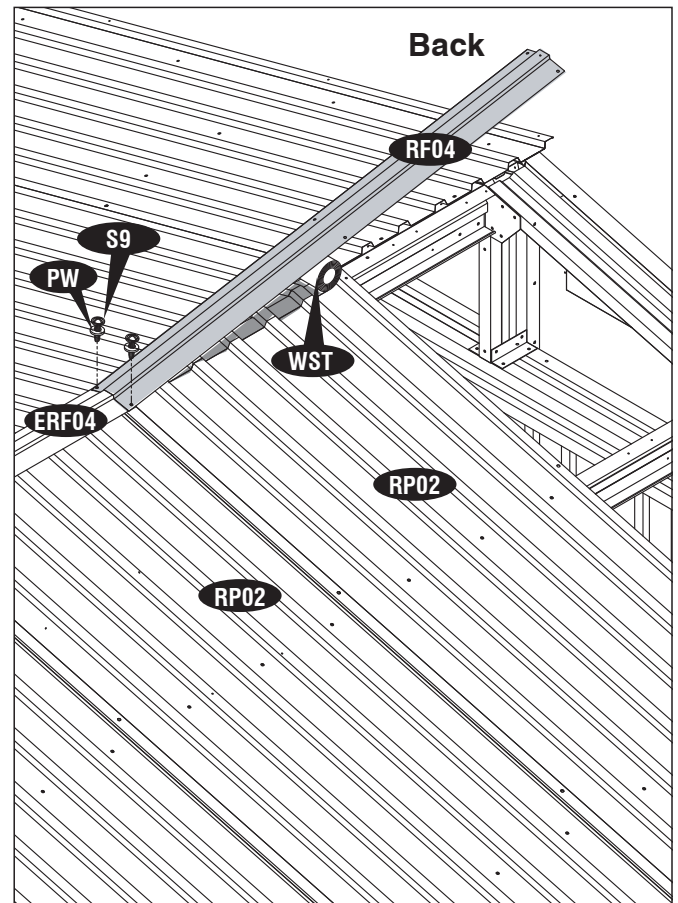


Step - 35

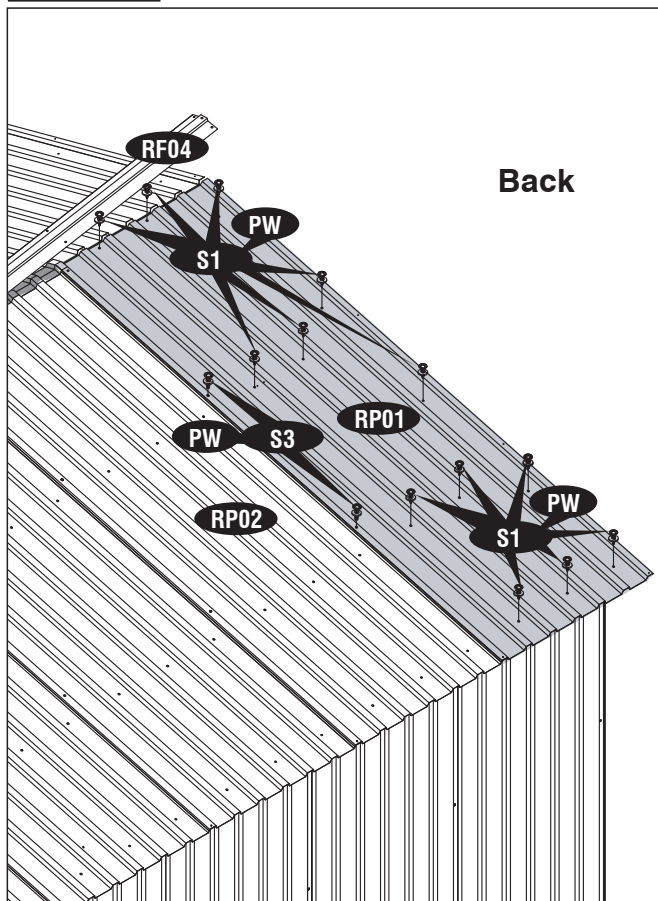


Step - 36

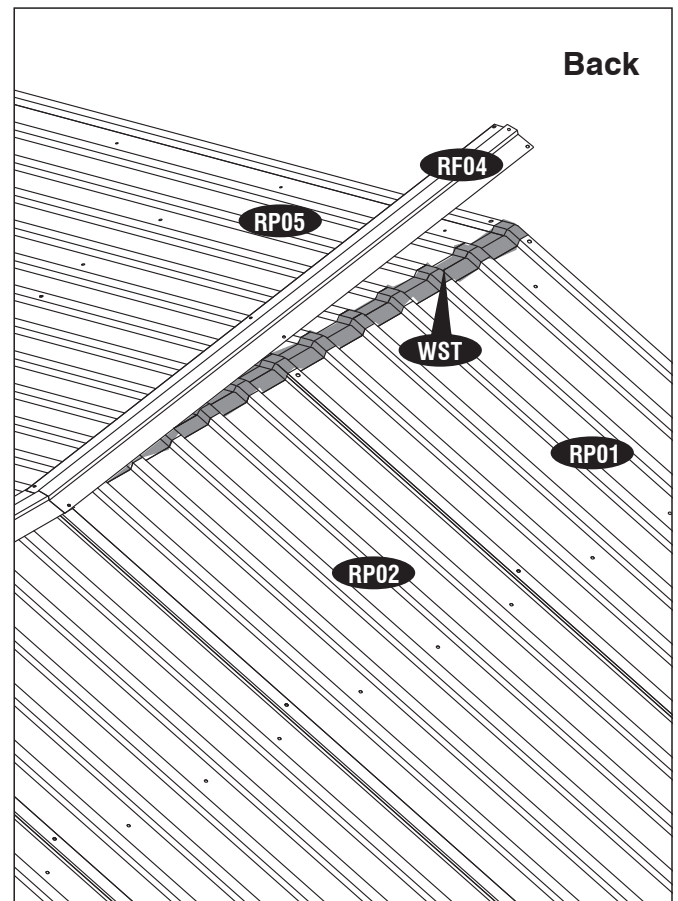


Step - 37

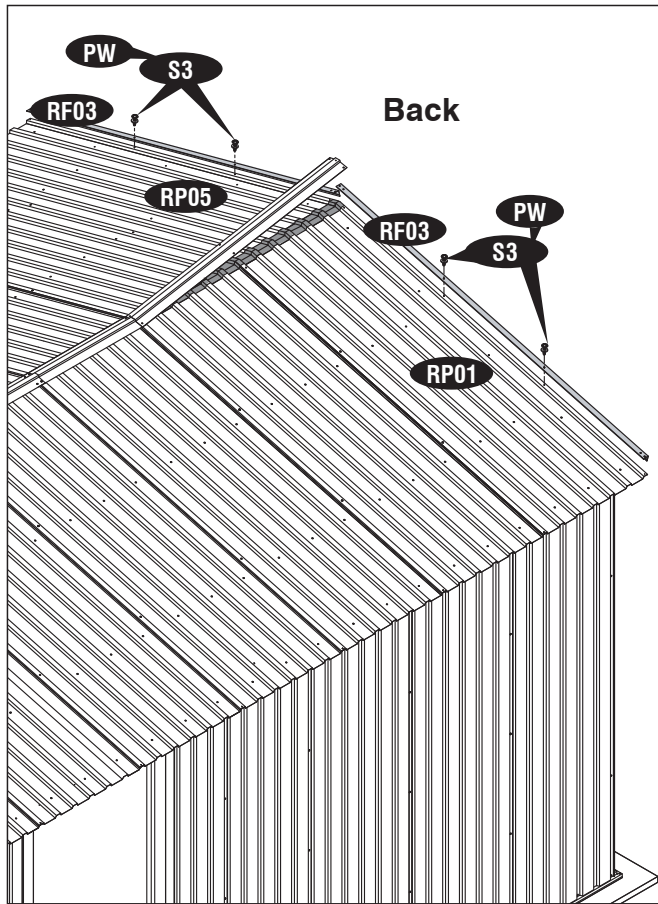

Step - 38

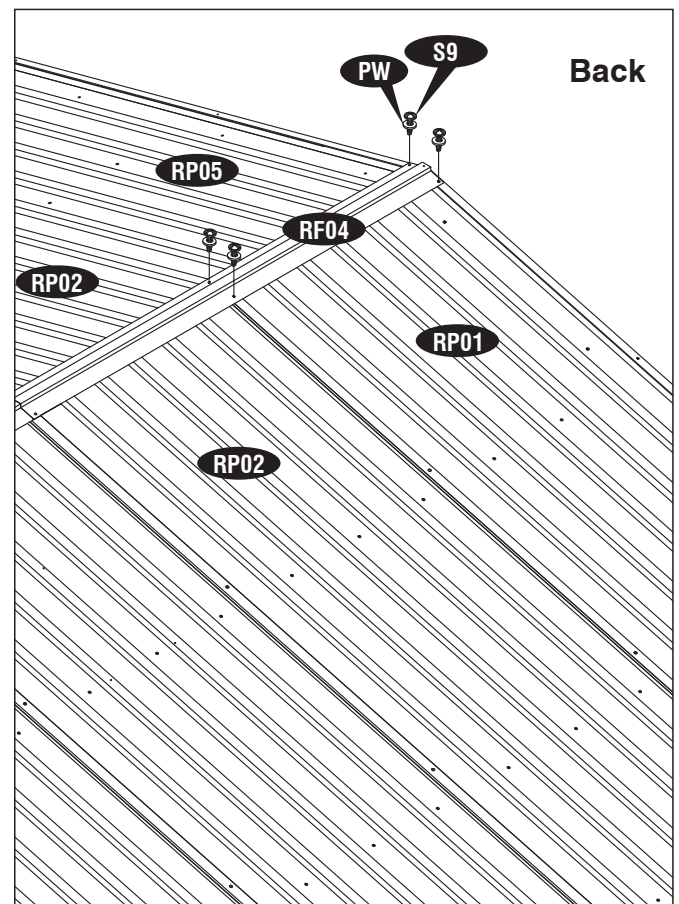

Step - 39

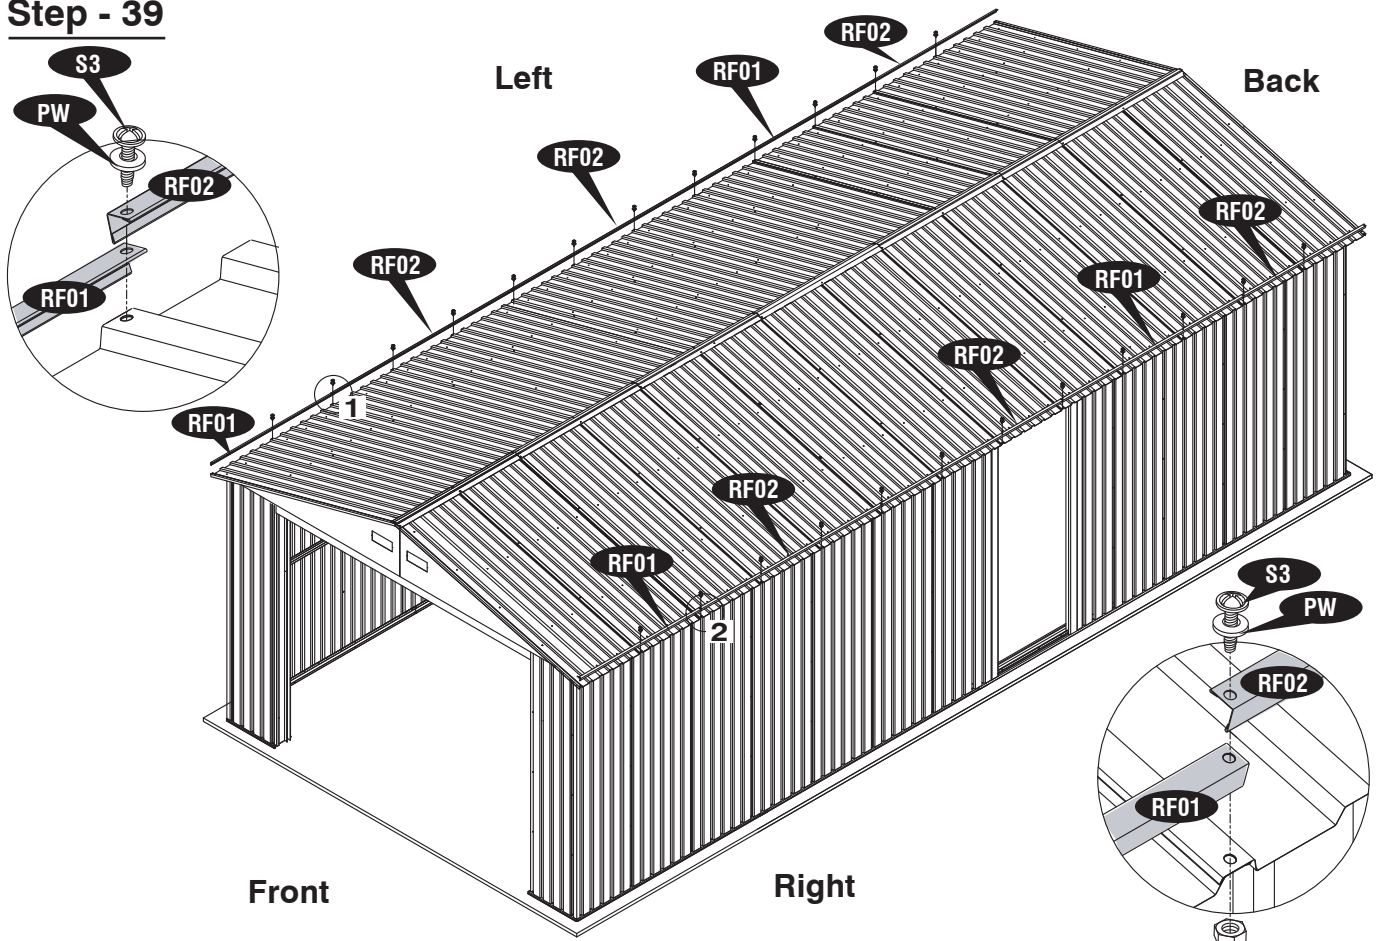

Step - 40

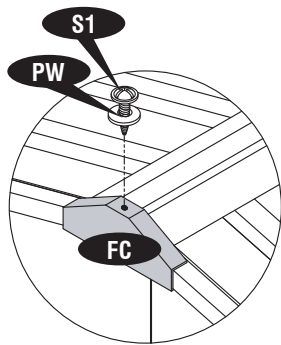


Fig.1

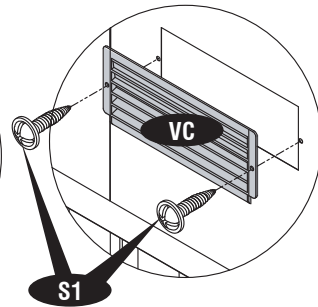


Fig.2

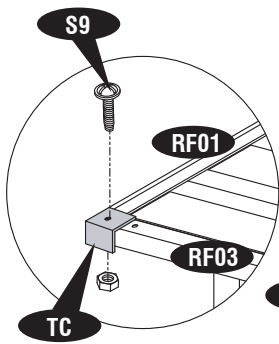


Fig.3


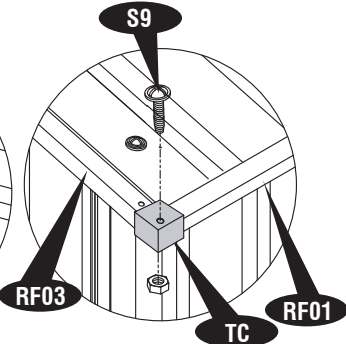


Fig.4

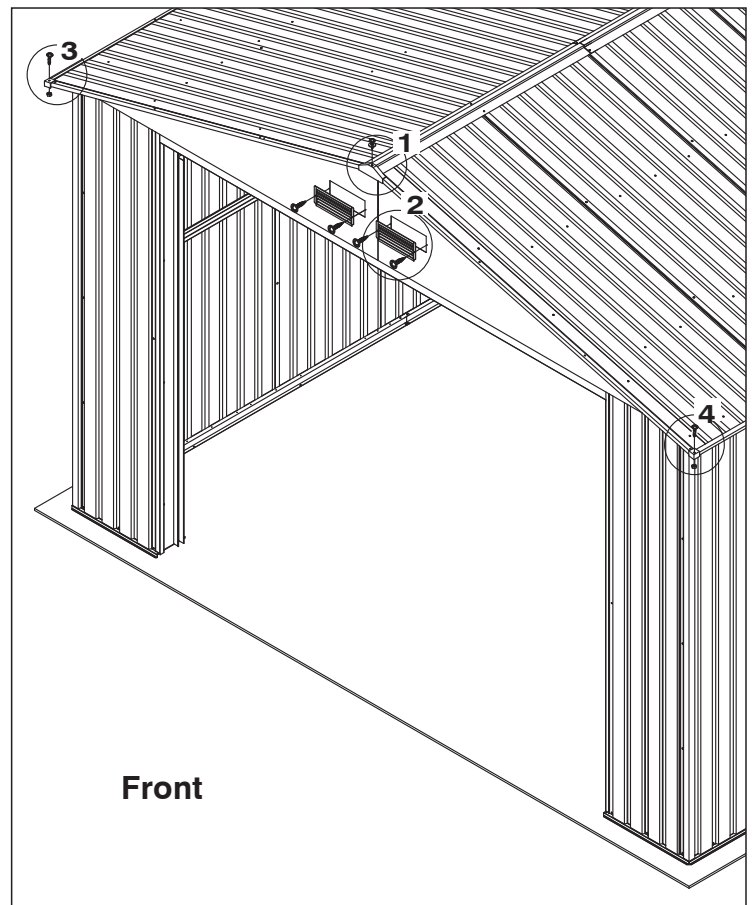

Step - 41

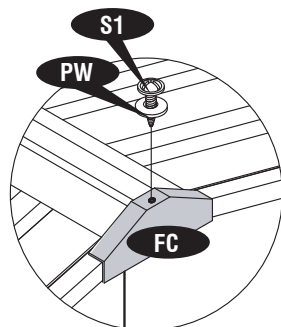


Fig.1

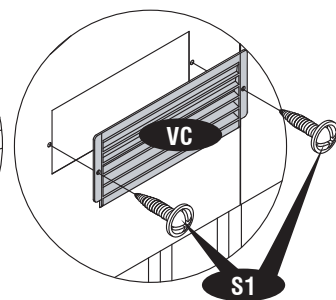


Fig.2

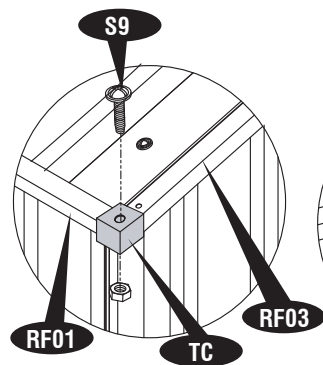


Fig.3




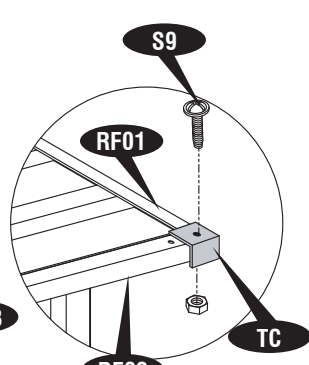




Fig.4

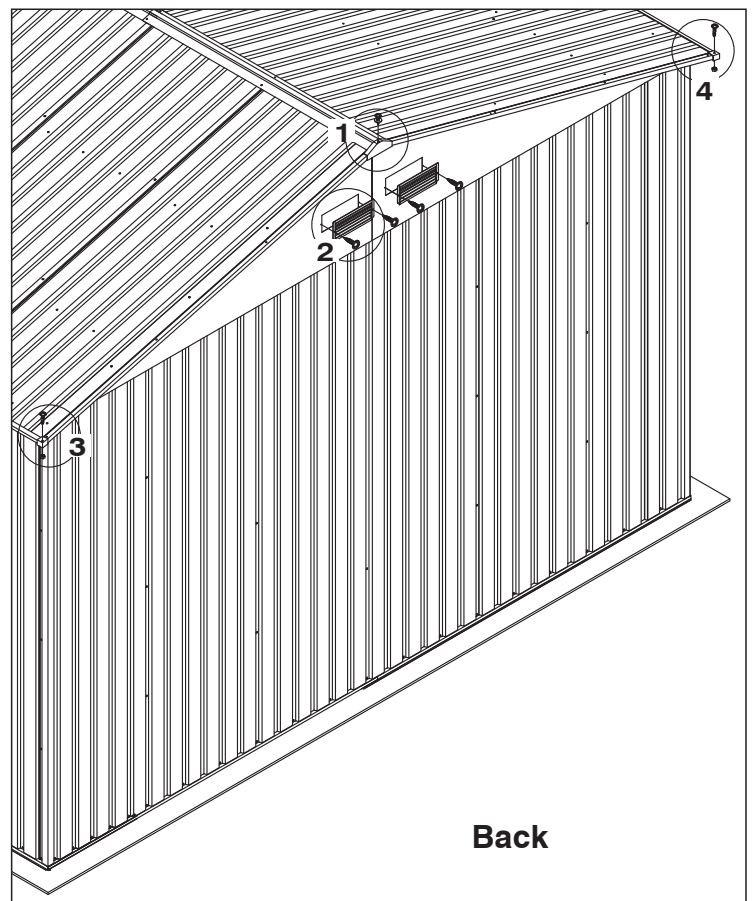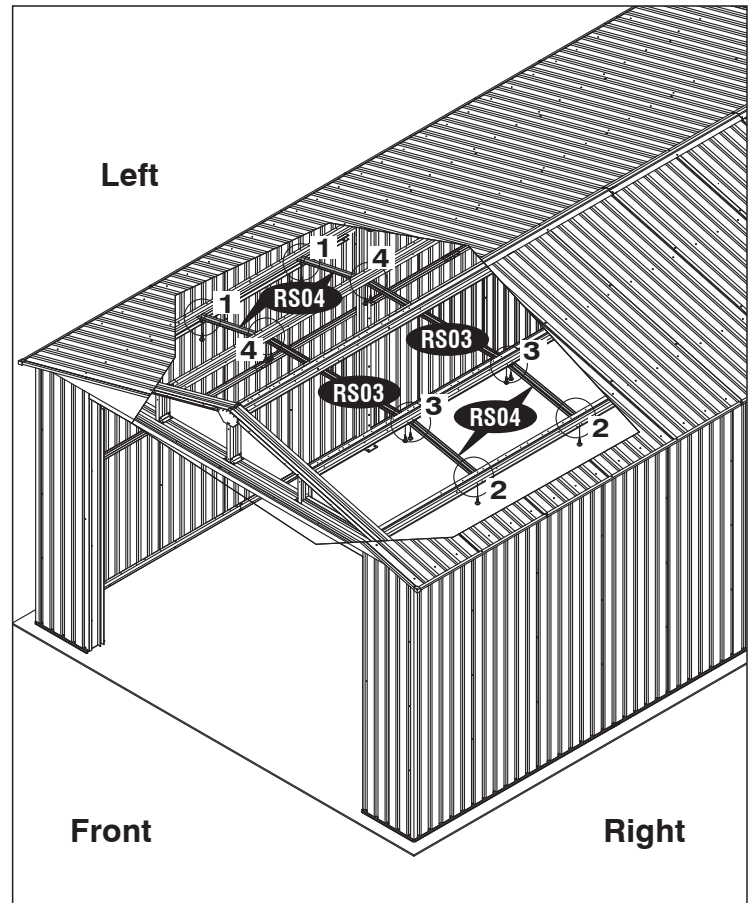

Step - 42

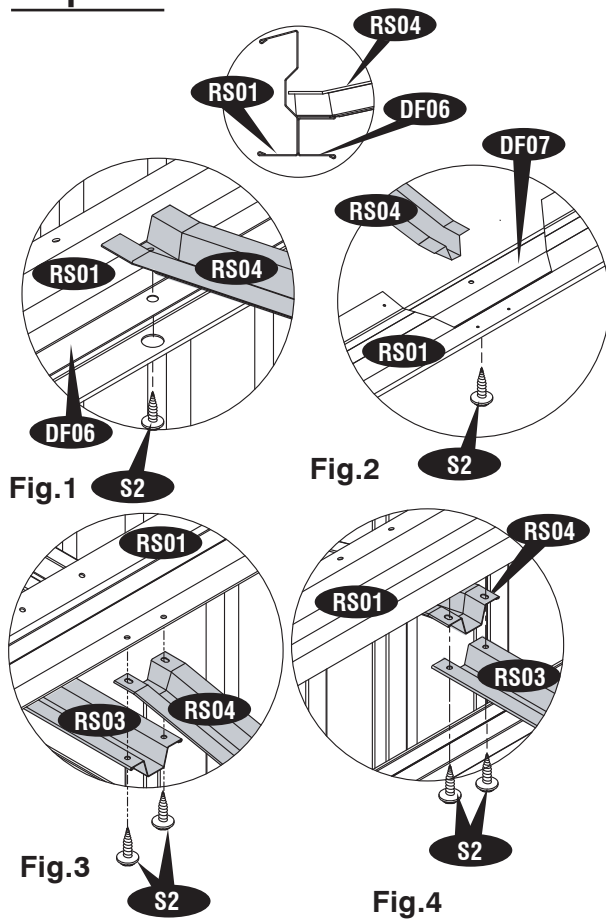

Step - 43

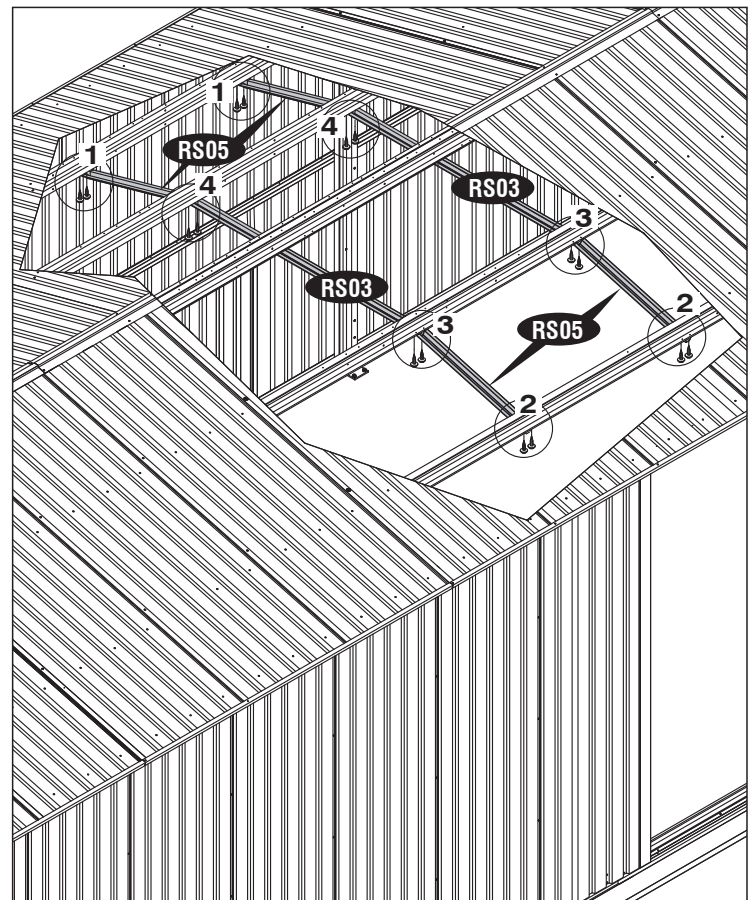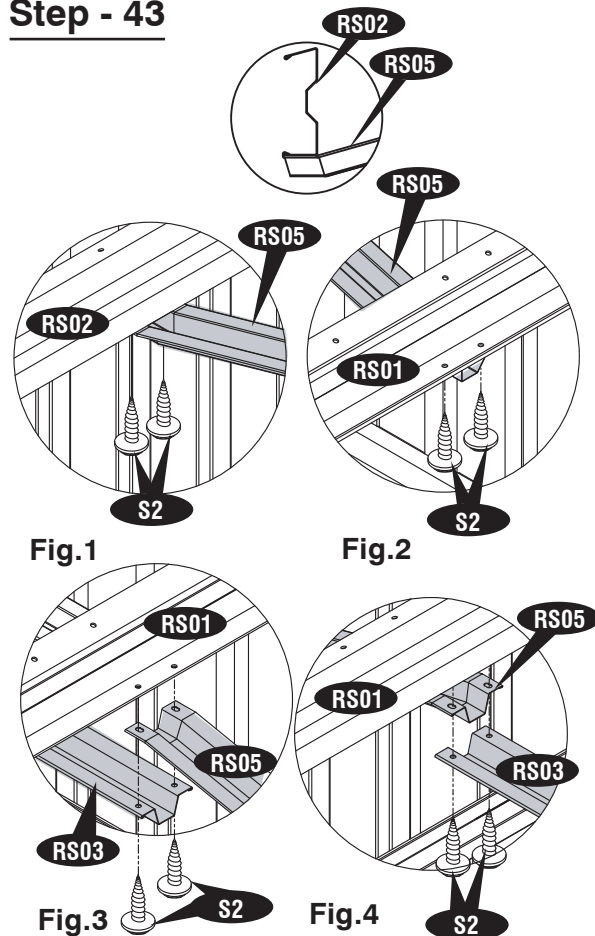

Step - 44

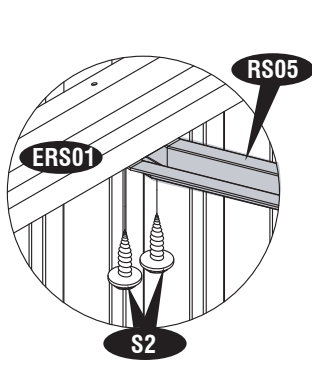


Fig.1

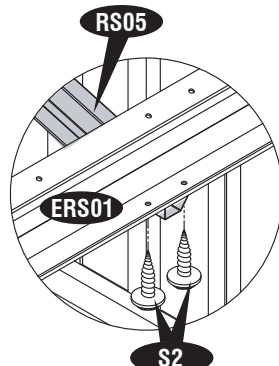


Fig.2

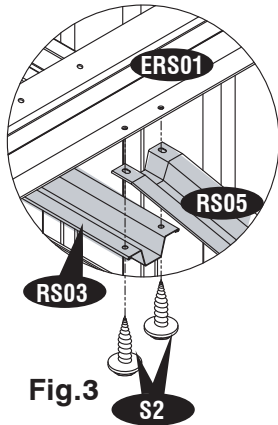


Fig.3


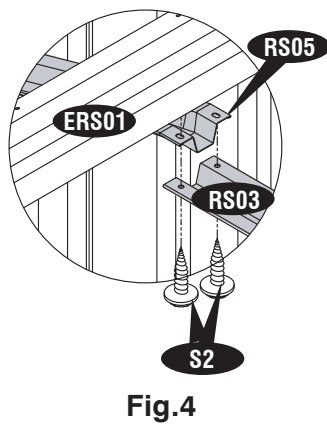



Fig.4

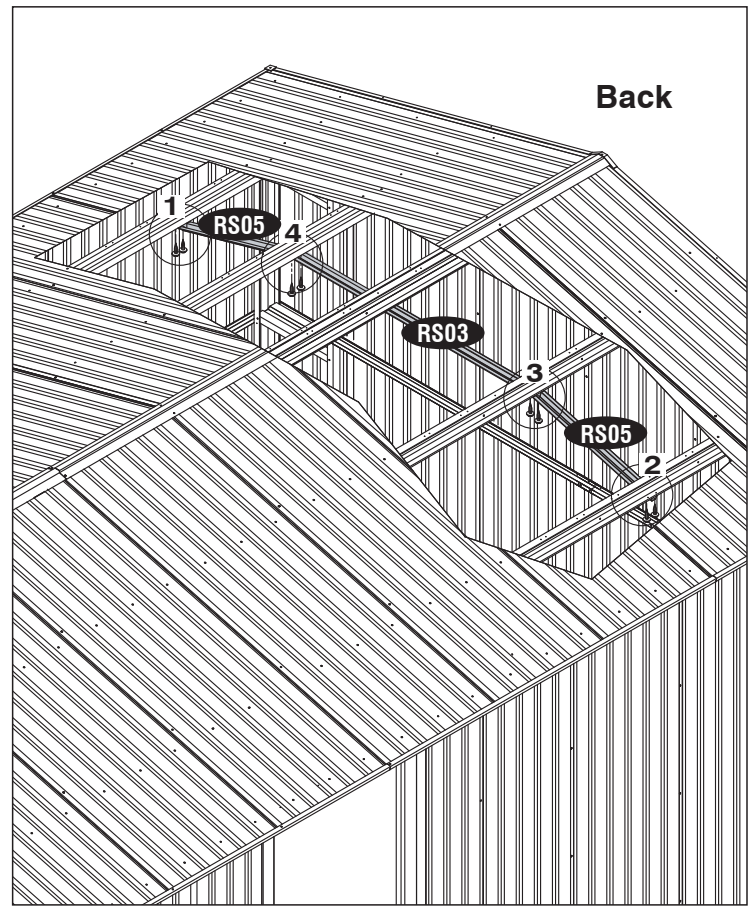

Back

Left

Back

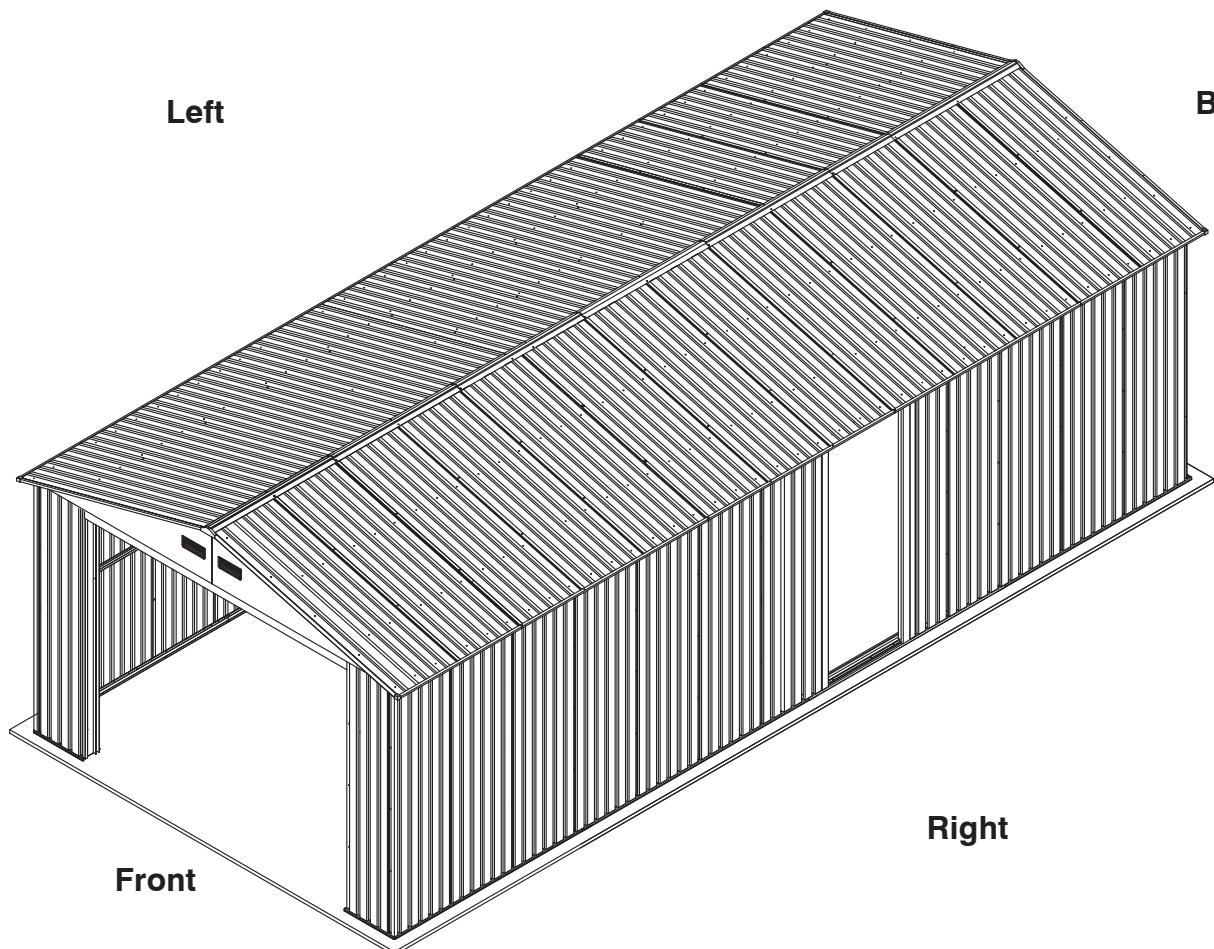

Front

Right

G. Assembly and Installations of Front & Side Door

Parts Needed:

Code	Qty.	Code	Qty.
SP01	2	BS	3
SP02	1	TS	2
SP03	1	DH	3
DS01	1	FDH	2
DS02	1	CW	1
DS03	4	CU	2
DP01	1	STC	5.1mtr
SD06	3	S1	18
BS15	2	S2	4
BS16	2	S3	66
BS17	1	S9	6
WBA	10	PW	63
DF08	1	PC	8 Slabs
DF09	1	EDP1	(4.28mtr) 2
DF10	1	EDP2	(2.04 mtr) 2
		EDP3	(2.14 mtr) 2

Step - 1


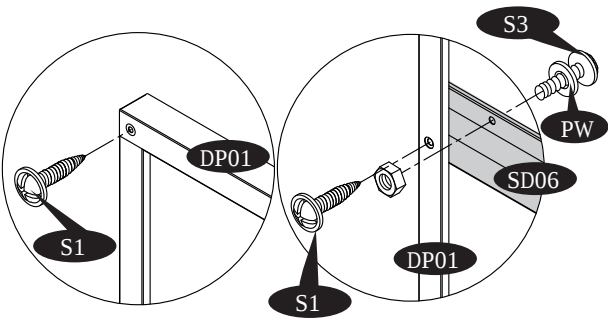


Fig.1

Fig.2

Step - 2

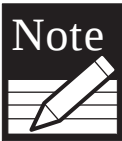

Use suitable holes on door to align.

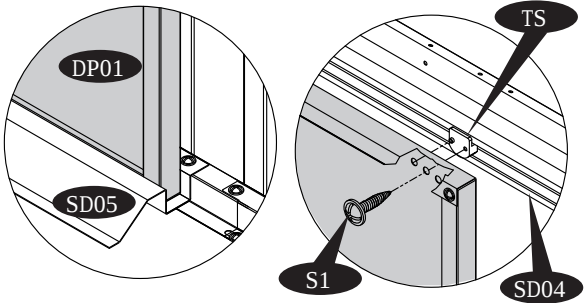


Fig.1

Fig.2



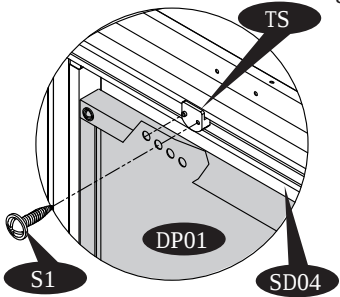


Fig.3

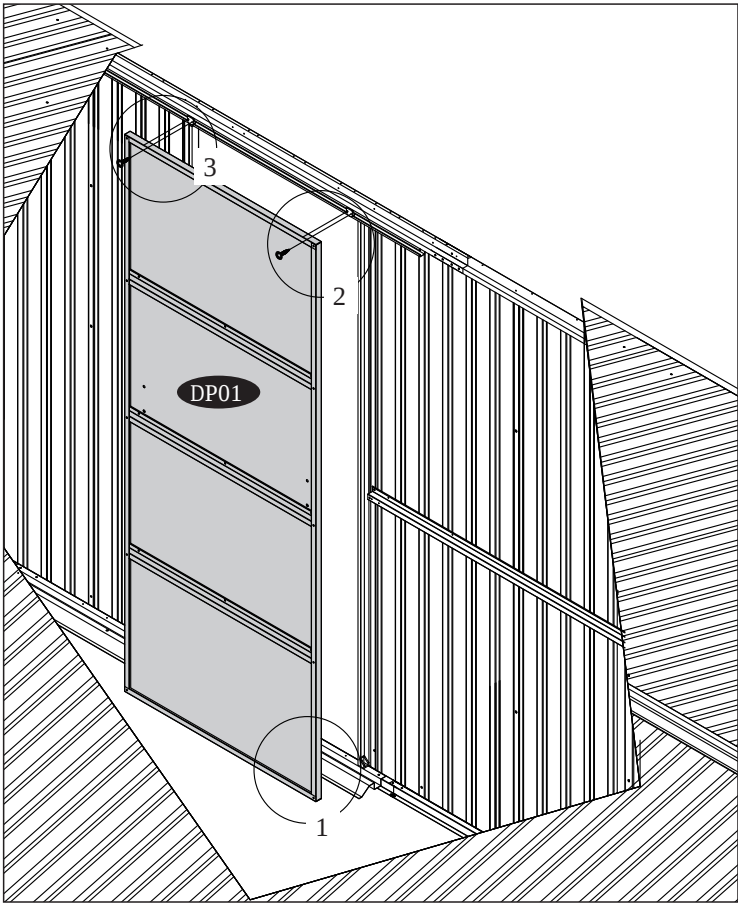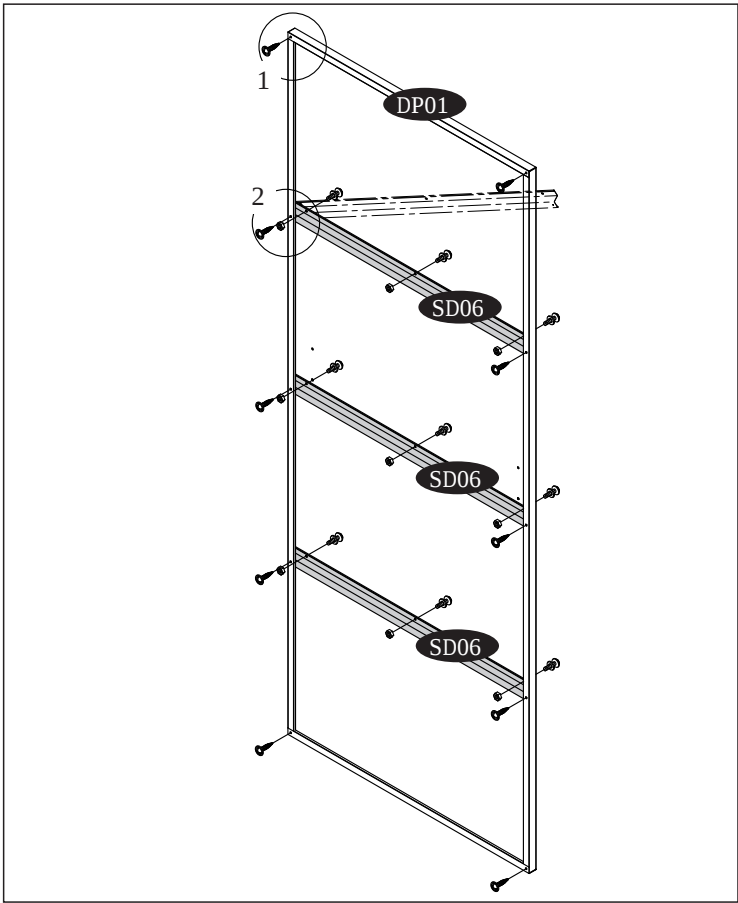

IMPORTANT: USE HAND GLOVES TO PREVENT INJURY.

Step - 3

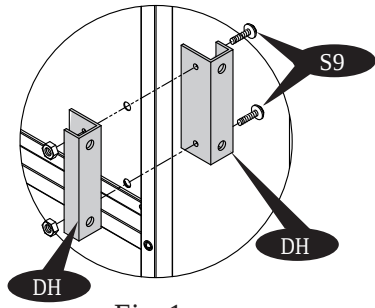


Fig.1


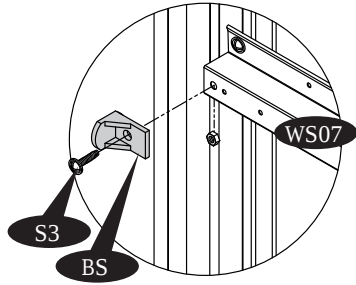


Fig.2

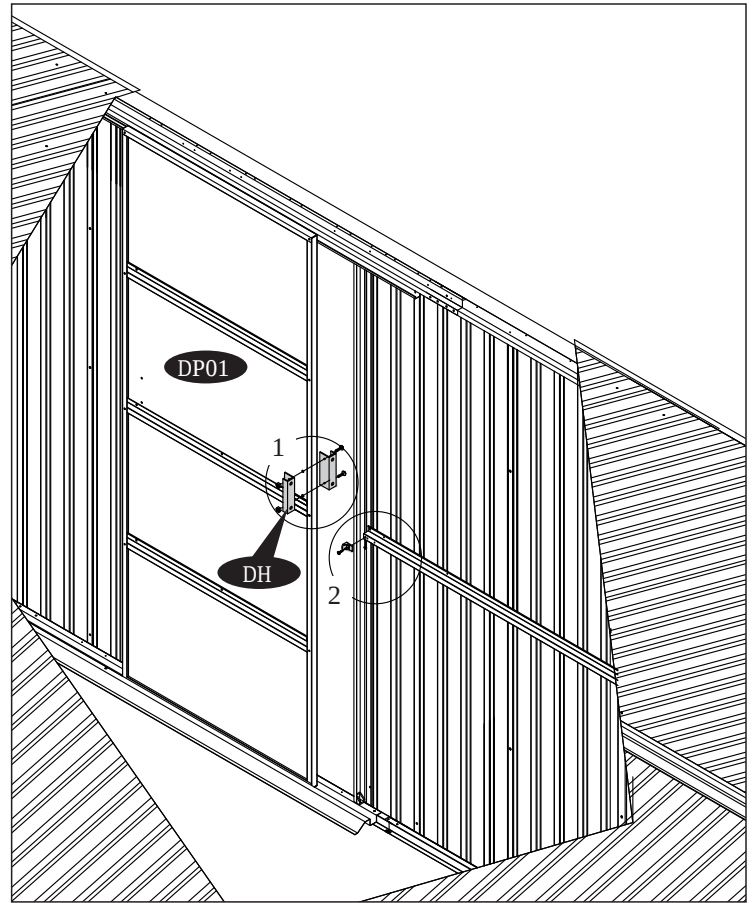

Step - 4

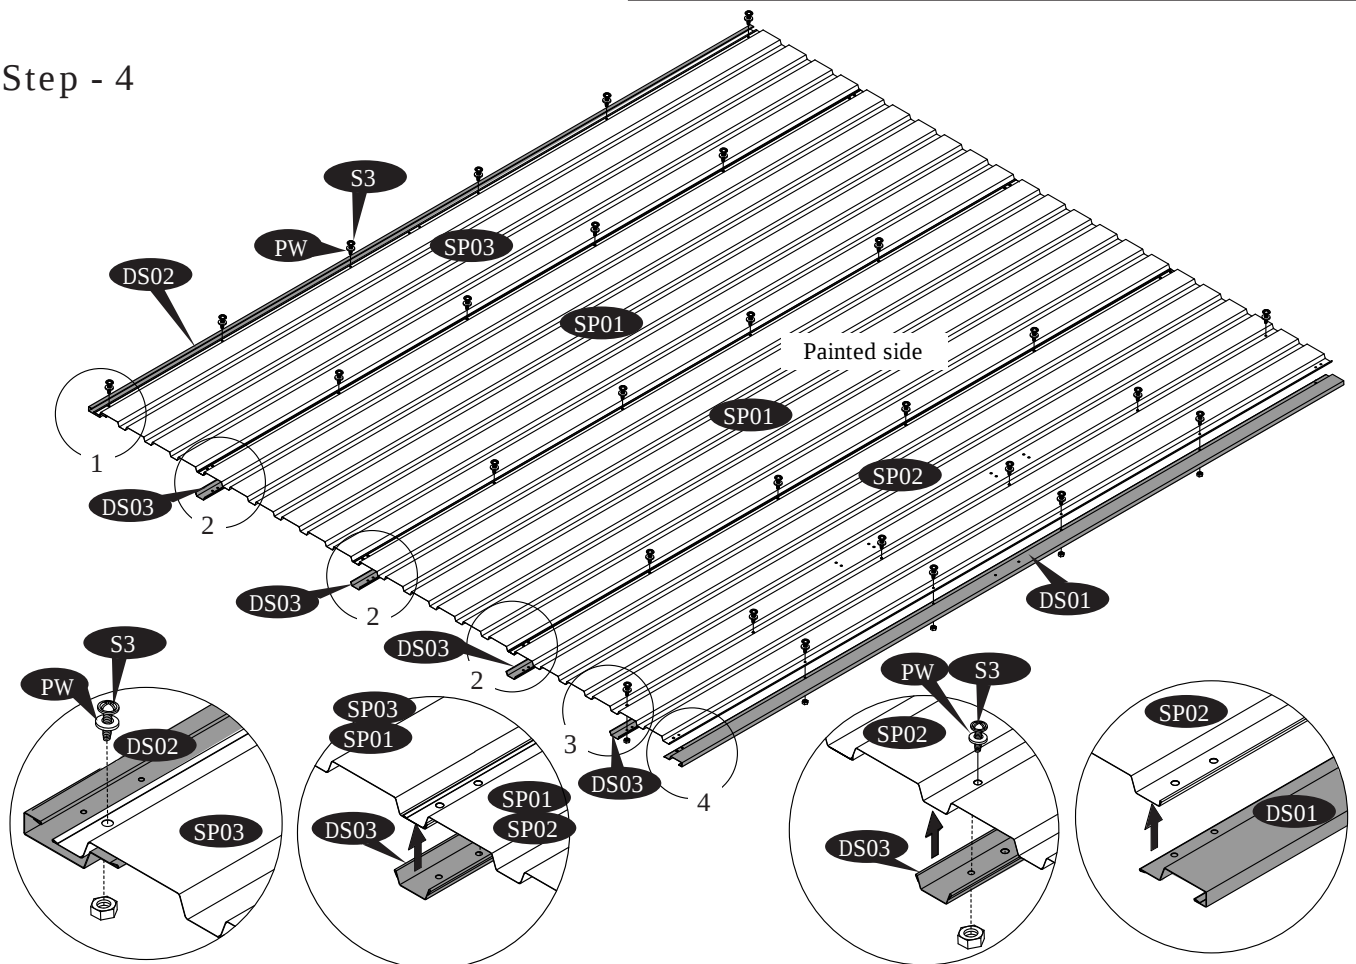


Fig.1

Fig.2

Fig.3

Fig.4

Step - 5

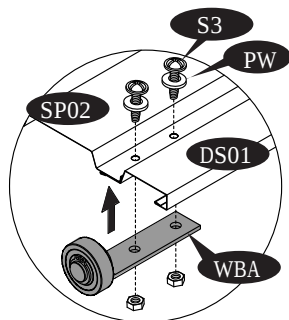
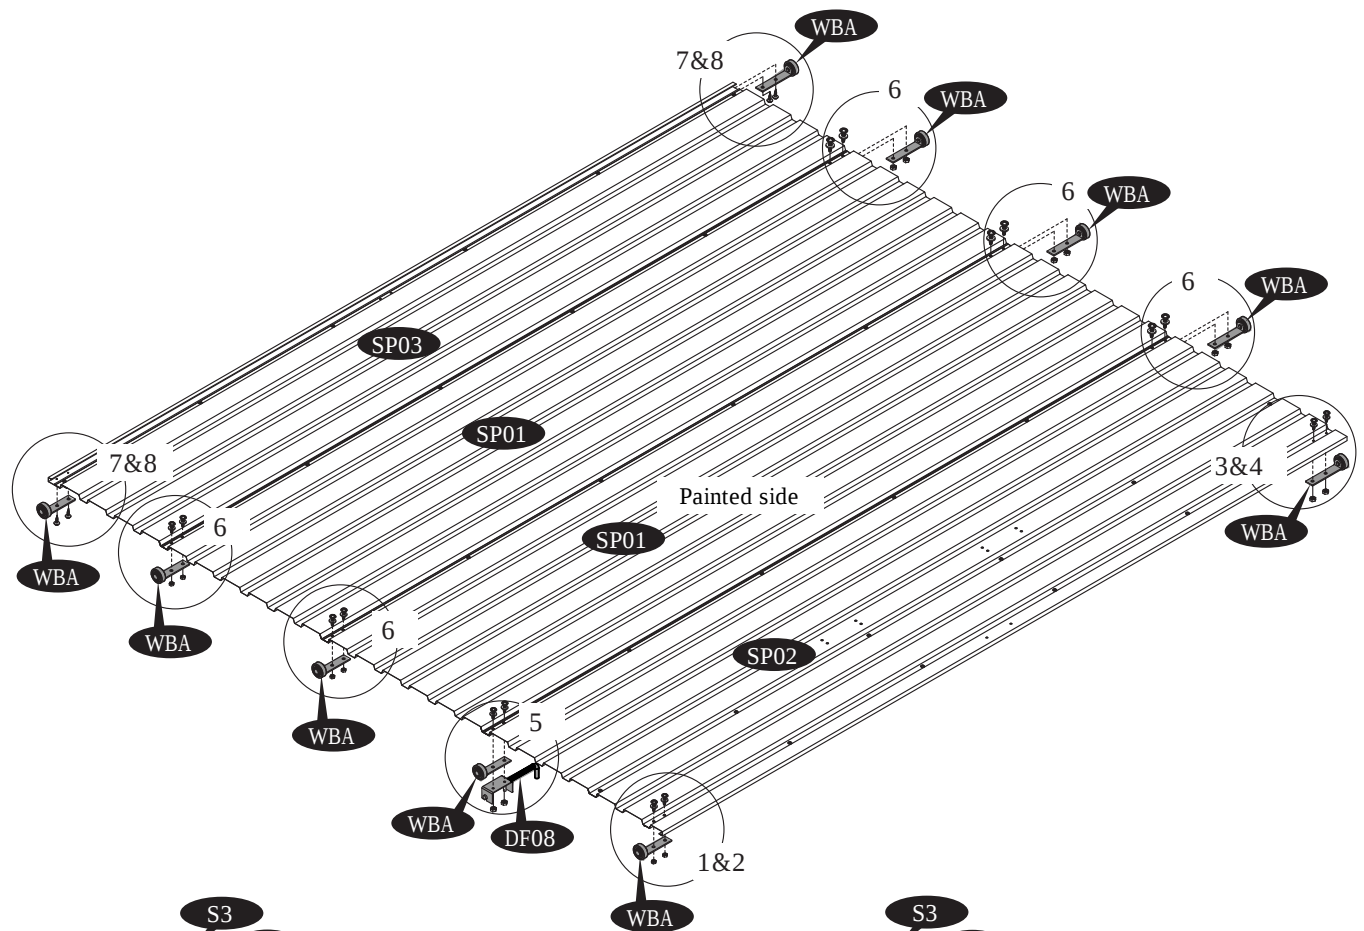


Fig.1

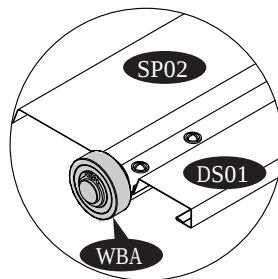


Fig.2

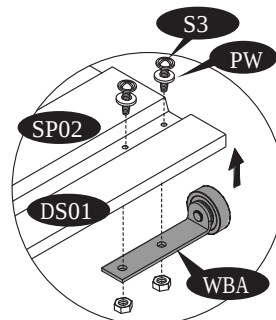


Fig.3

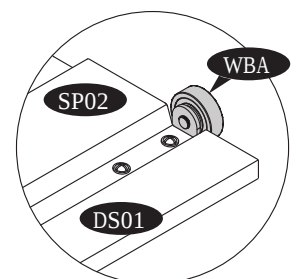


Fig.4

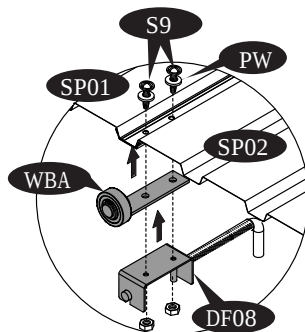


Fig.5

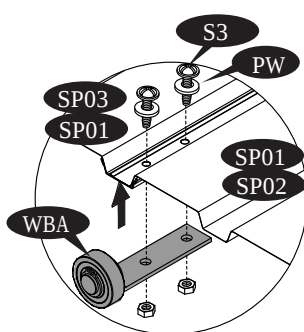


Fig.6

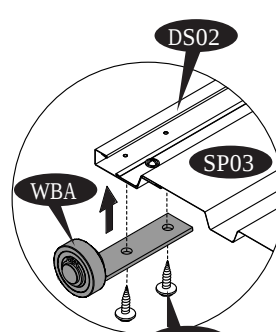


Fig.7






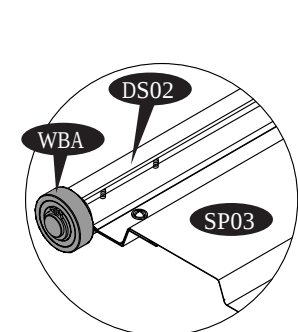


Fig.8

Step - 6

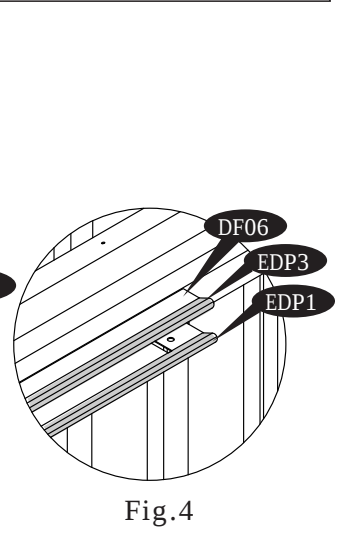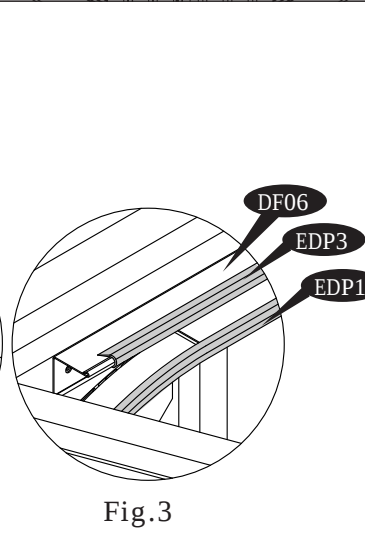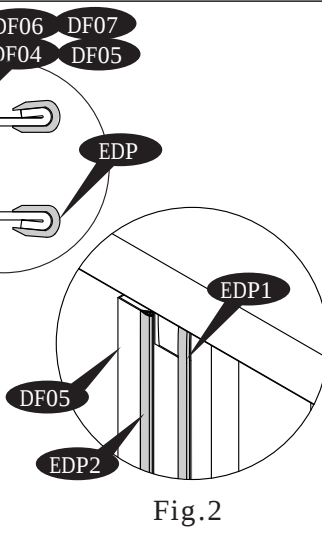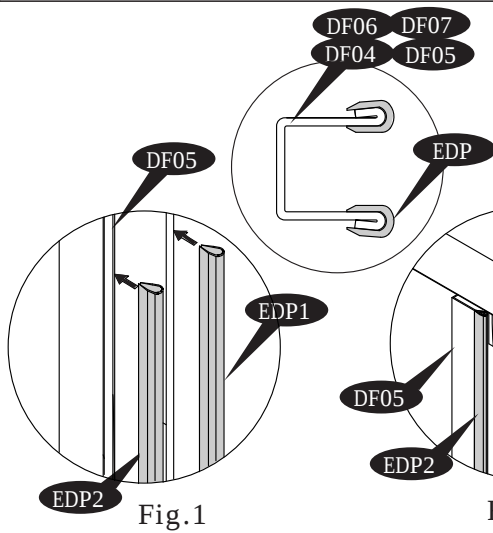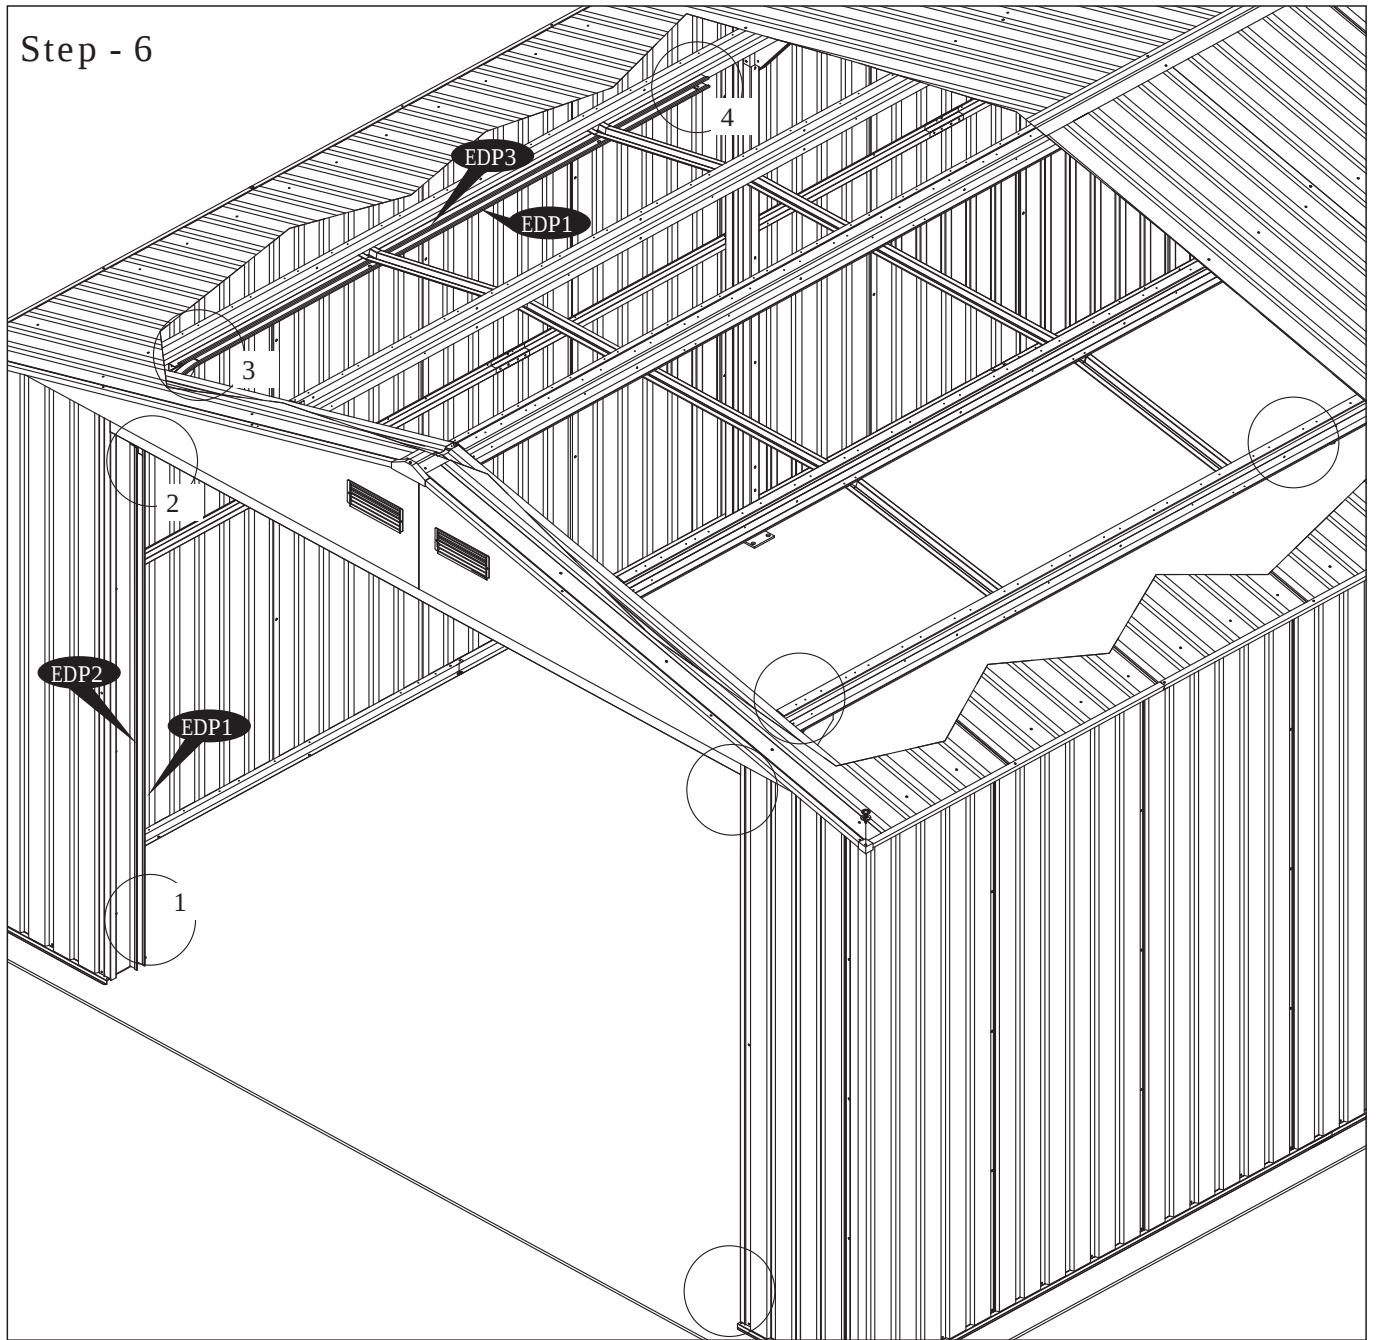

Step -7

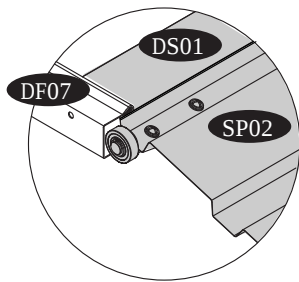


Fig.1


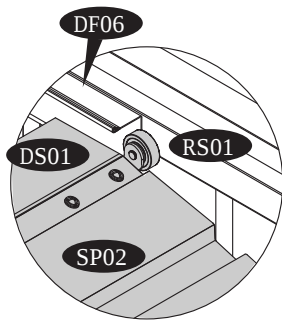


Fig.2

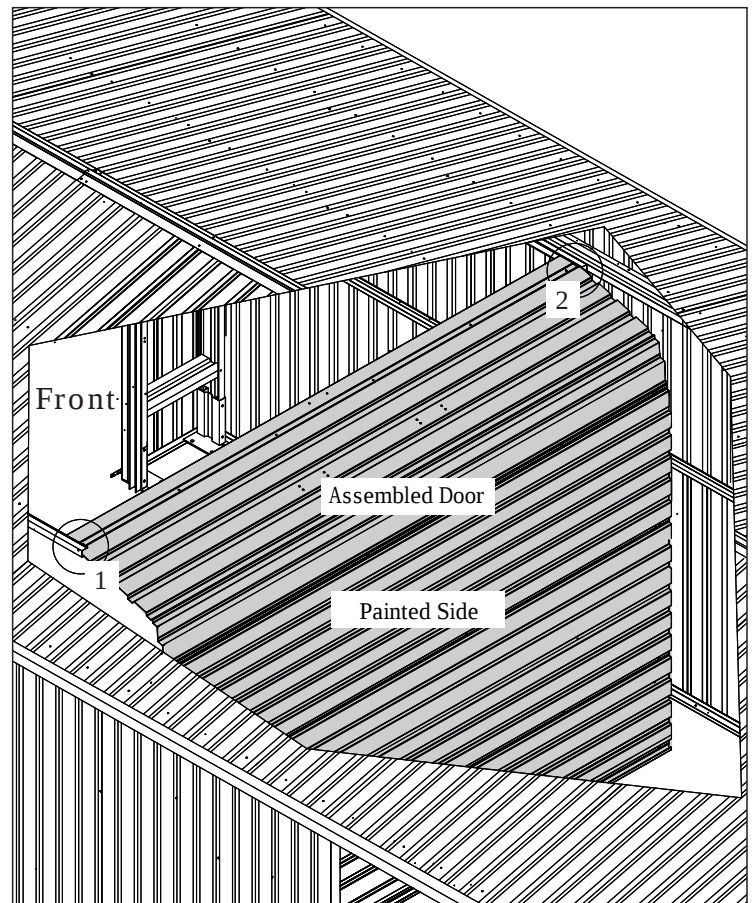

Step - 8

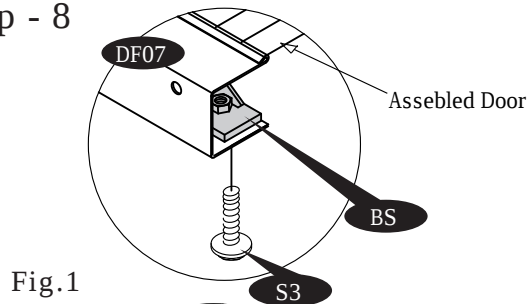


Fig.1

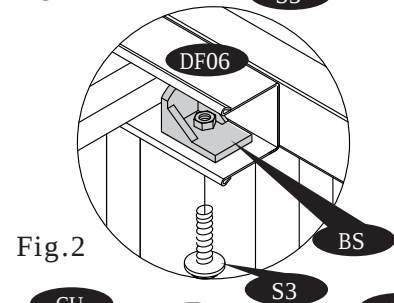


Fig.2


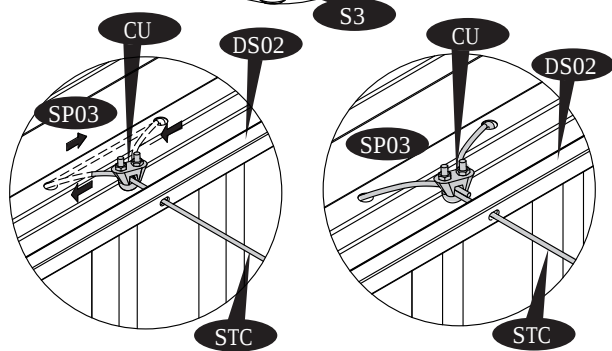


Fig.3

Fig.4

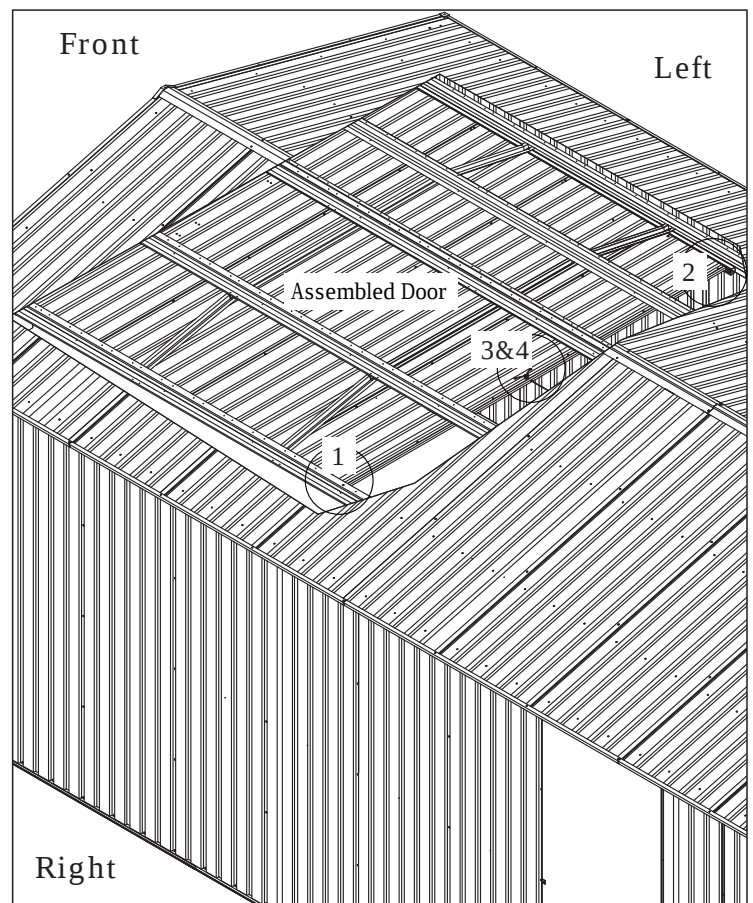

Step -9

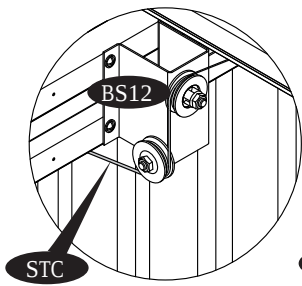


Fig.1

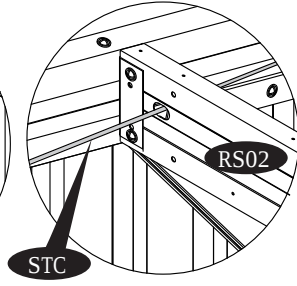


Fig.2

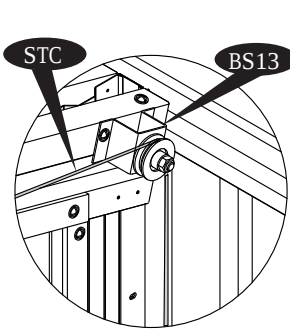


Fig.3


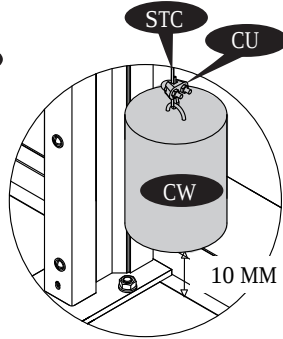


Fig.4

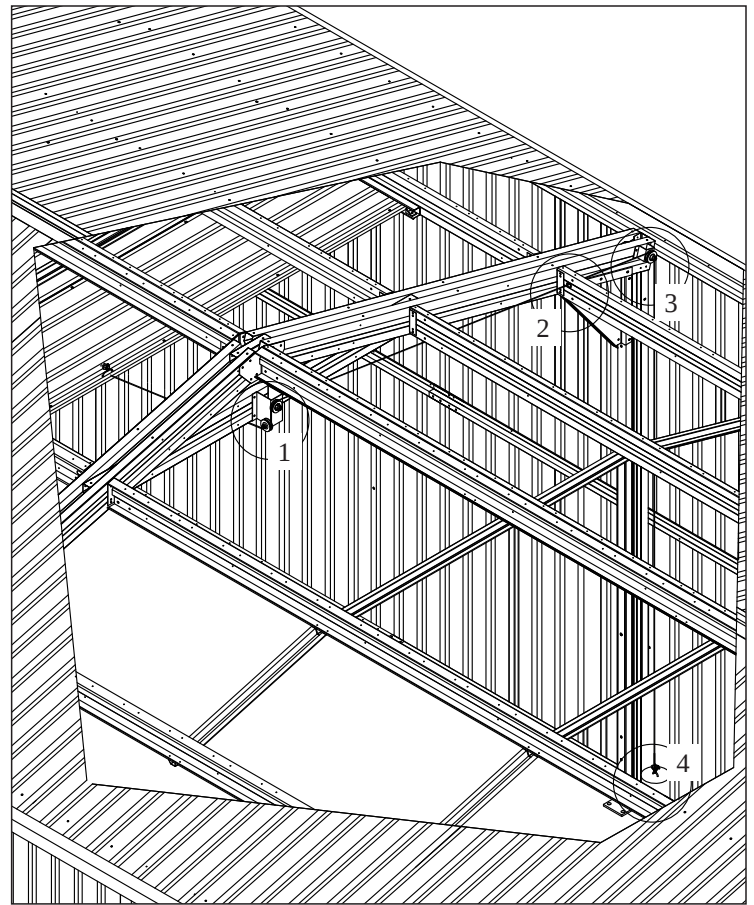

Step - 10

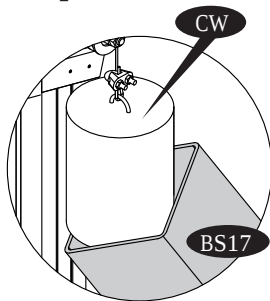


Fig.1

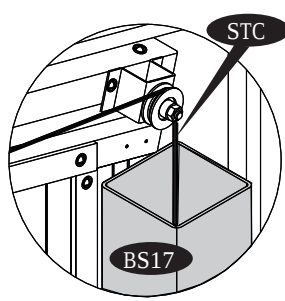


Fig.2

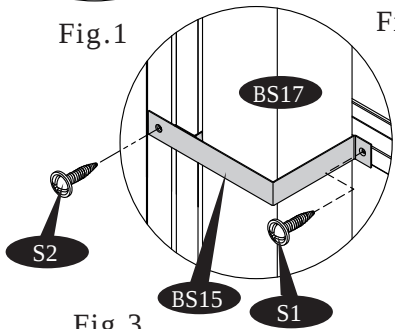


Fig.3


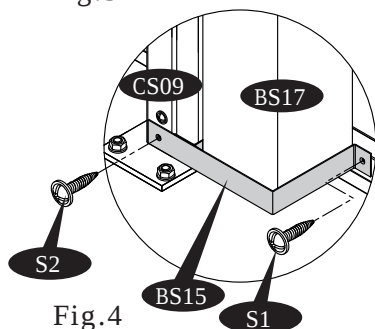


Fig.4

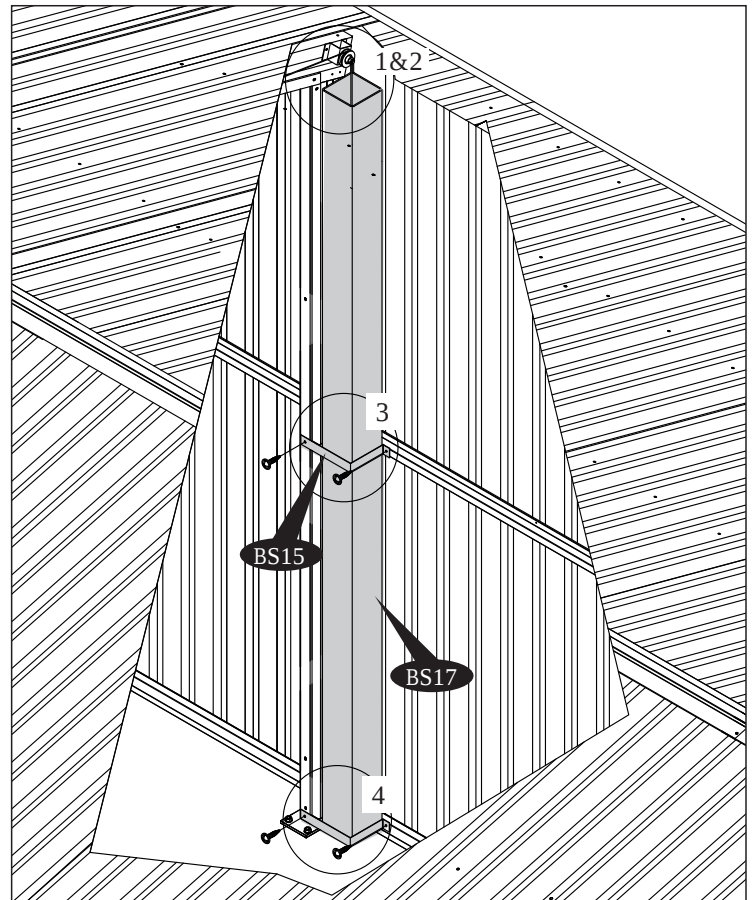

Step - 11

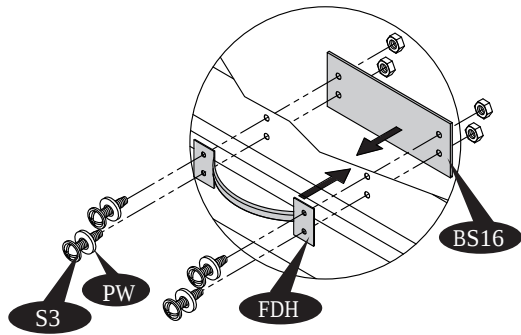


Fig.1

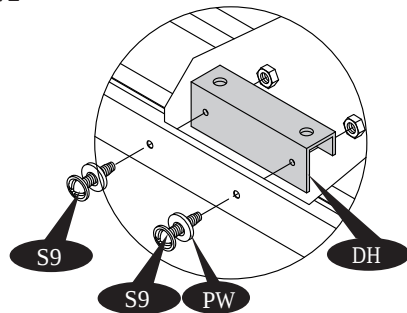


Fig.2

Step - 12





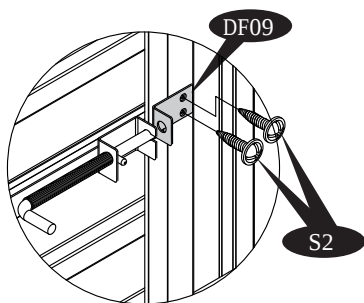


Fig.1

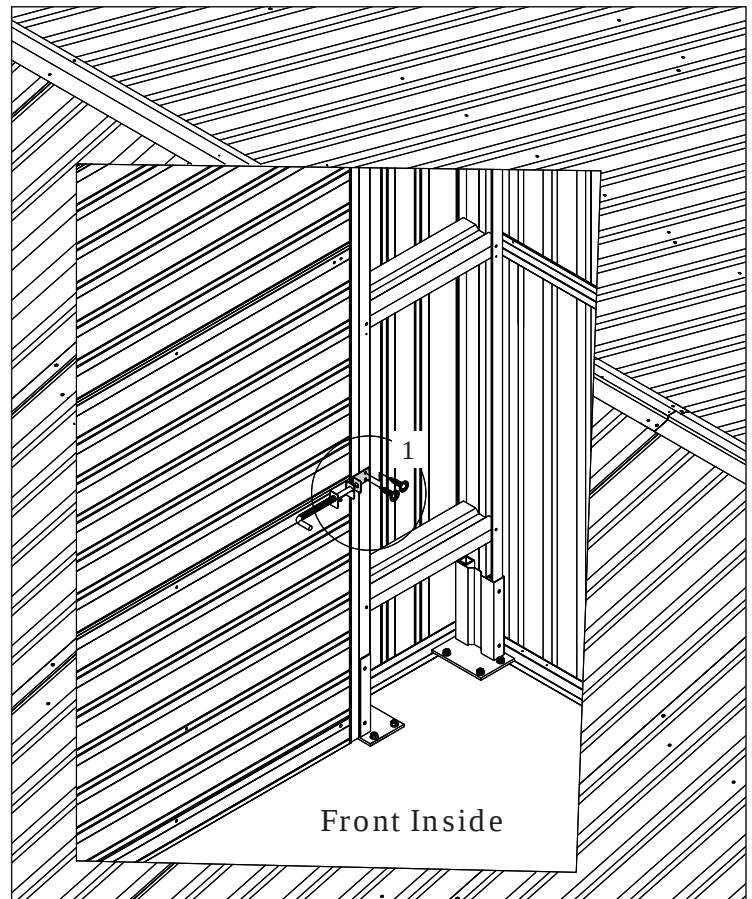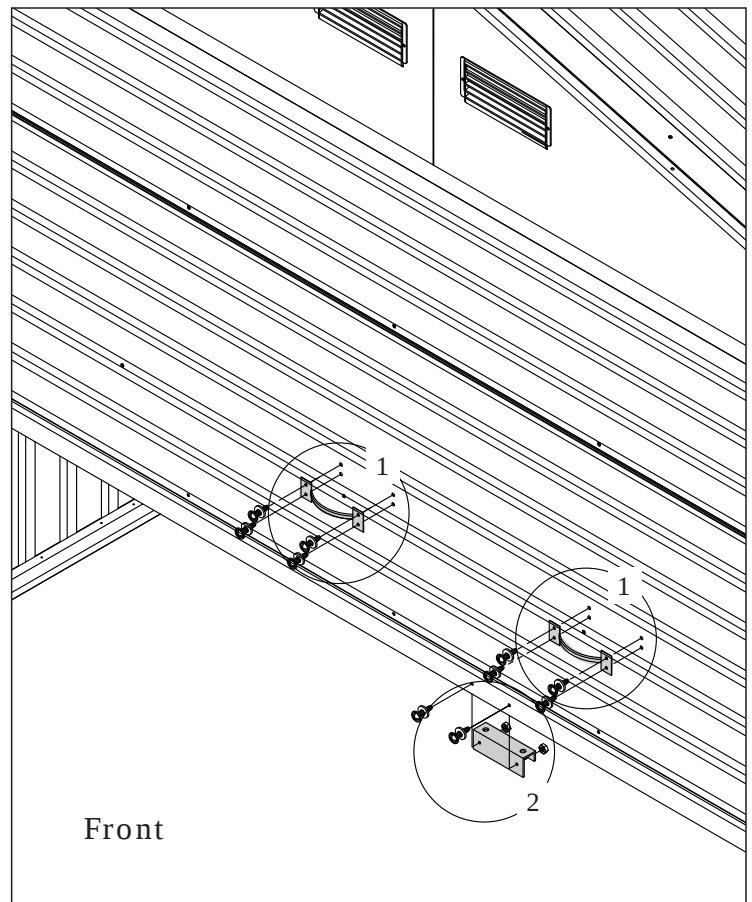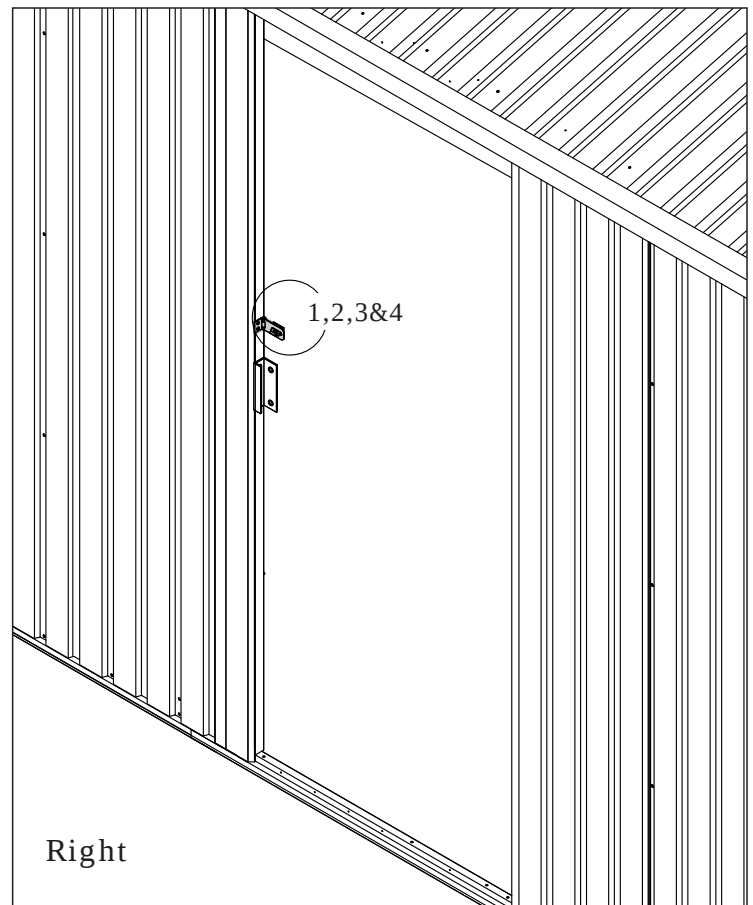

IMPORTANT : “During closing Garage Door in the front , please keep holding Door Handles till it came down to close”.



Step - 13

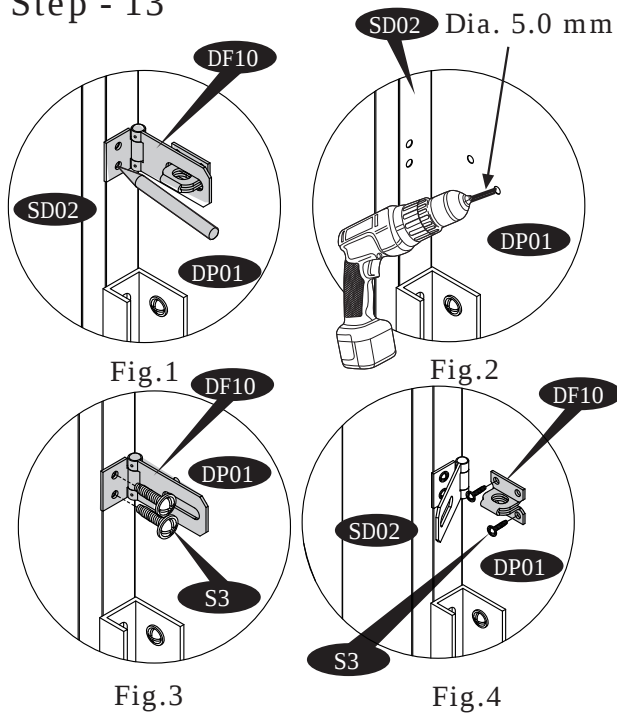


IMPORTANT

Step - 14

Fix the plastic screw cover (PC) to the screws and bolts edge from inside to prevent injury.

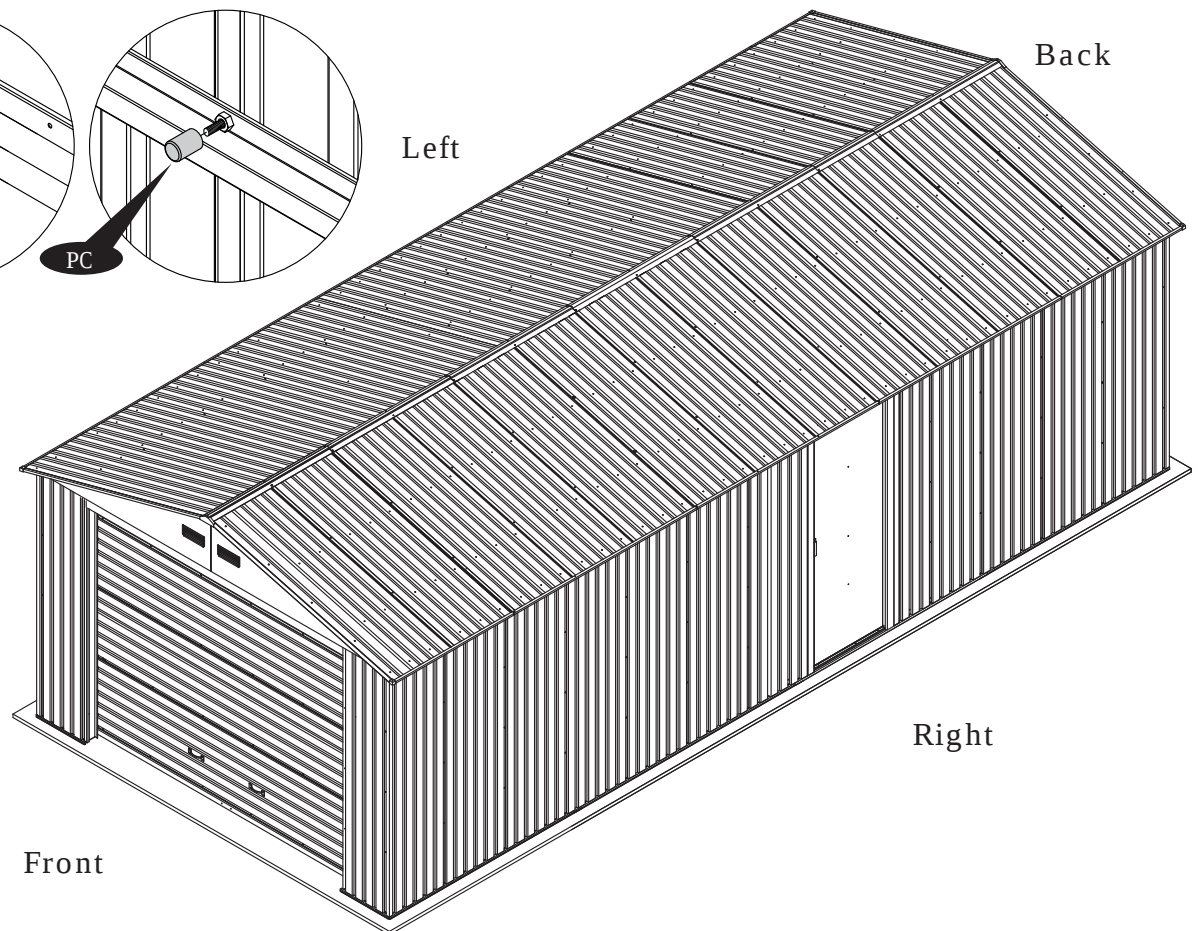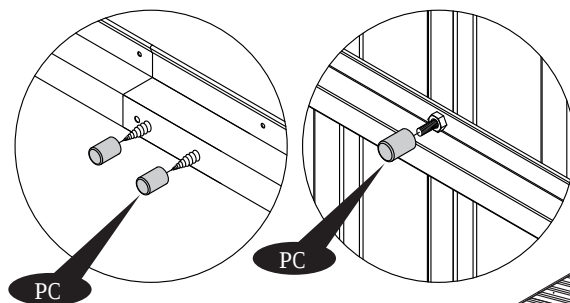

PART 2 : Adding Extension Kit to Existing Garage

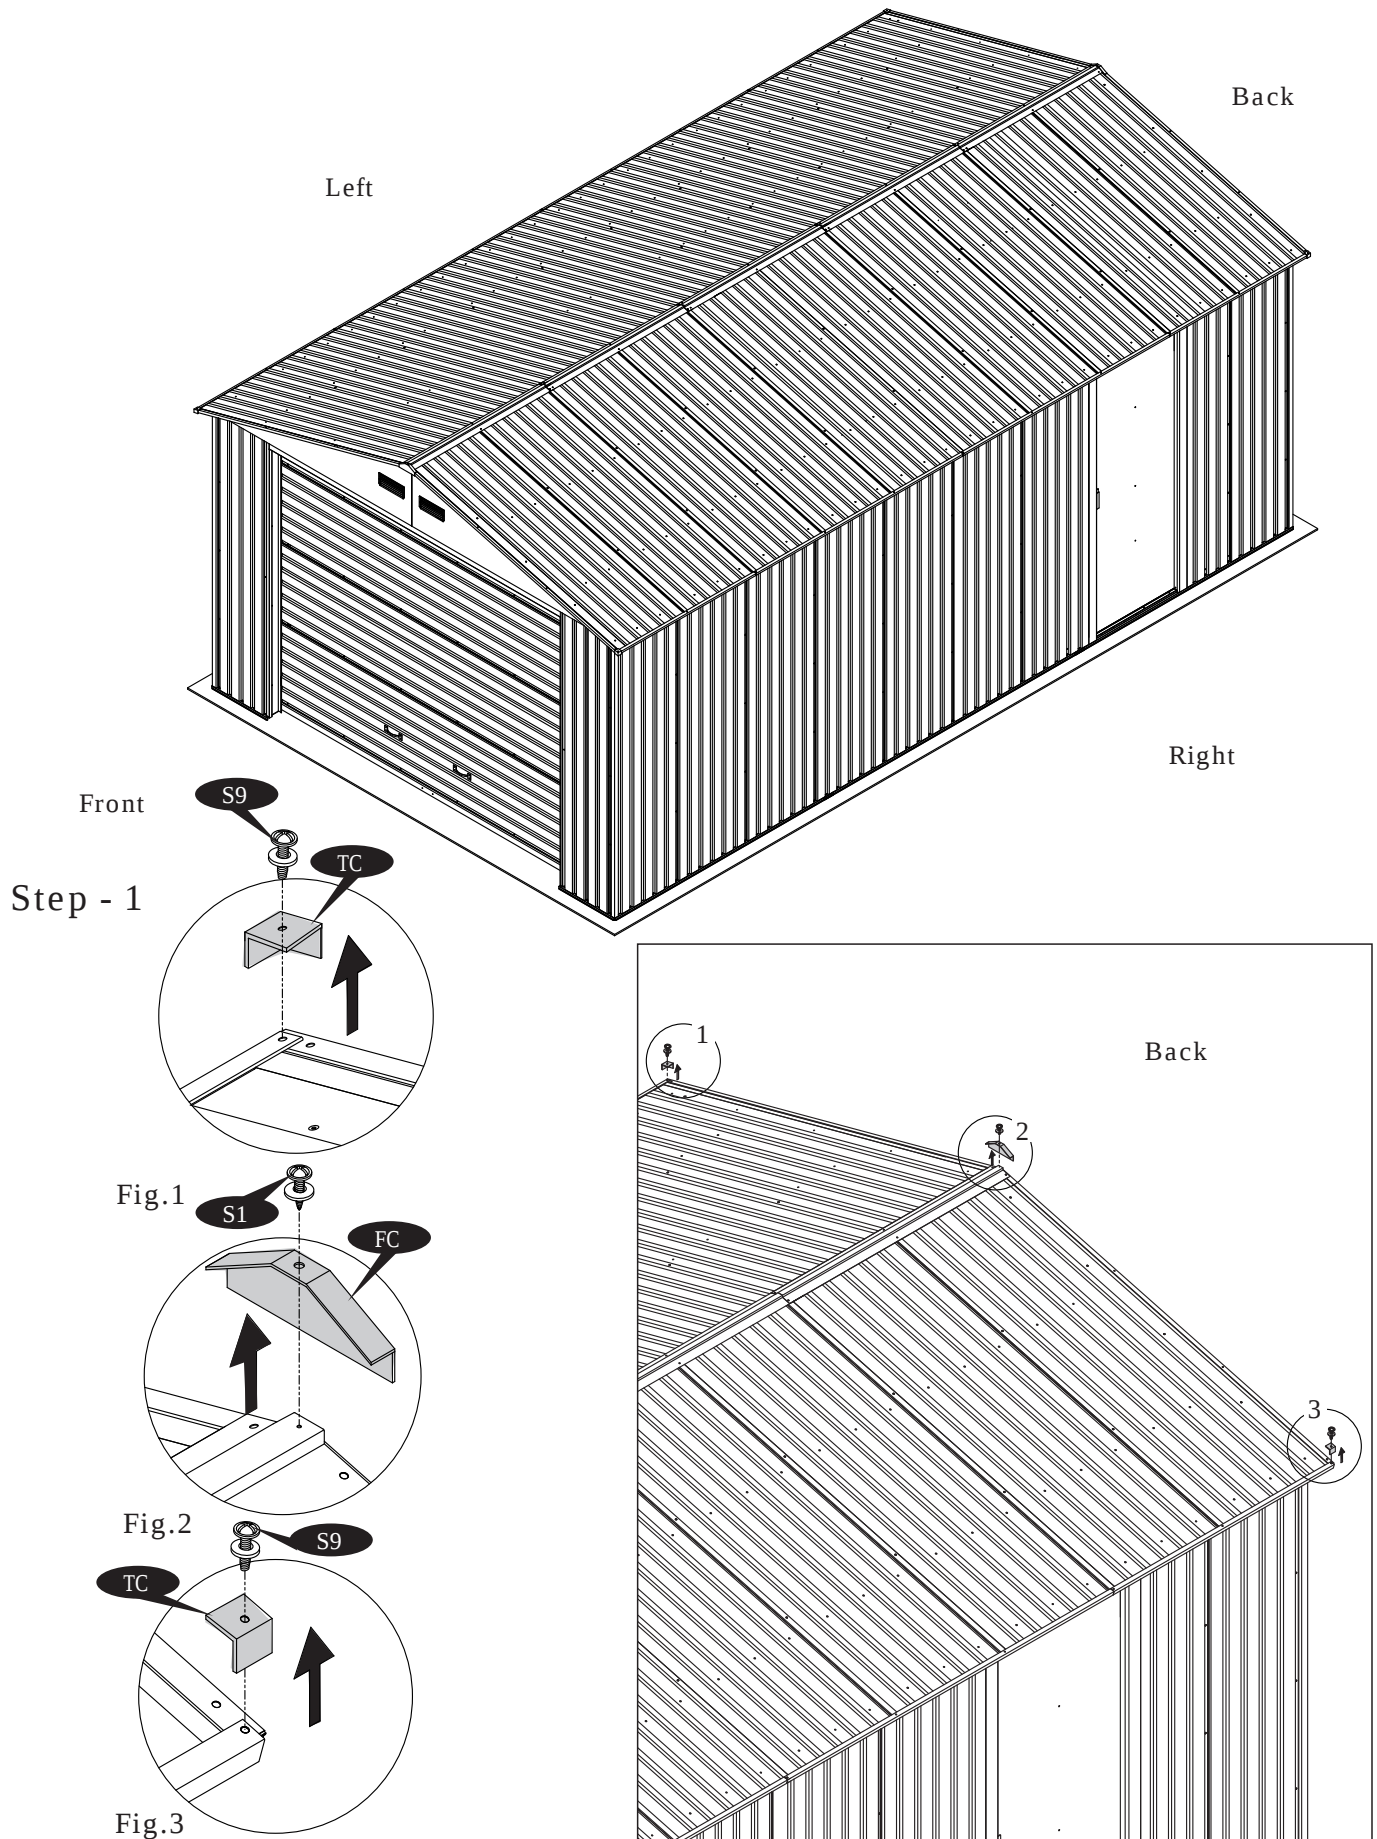

IMPORTANT: USE HAND GLOVES TO PREVENT INJURY.

Step - 2

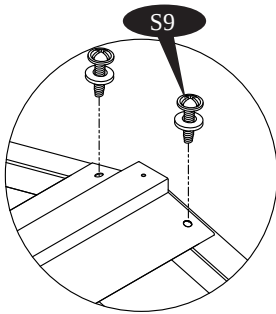


Fig.1

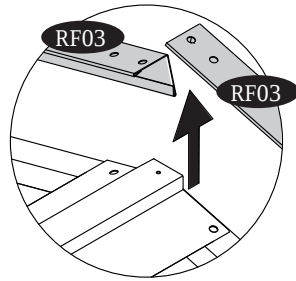


Fig.2

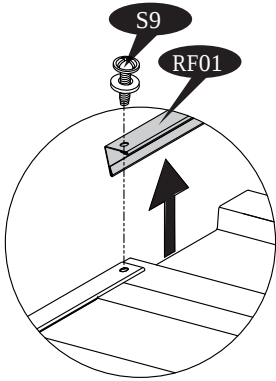


Fig.3



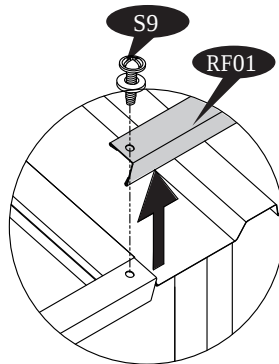



Fig.4

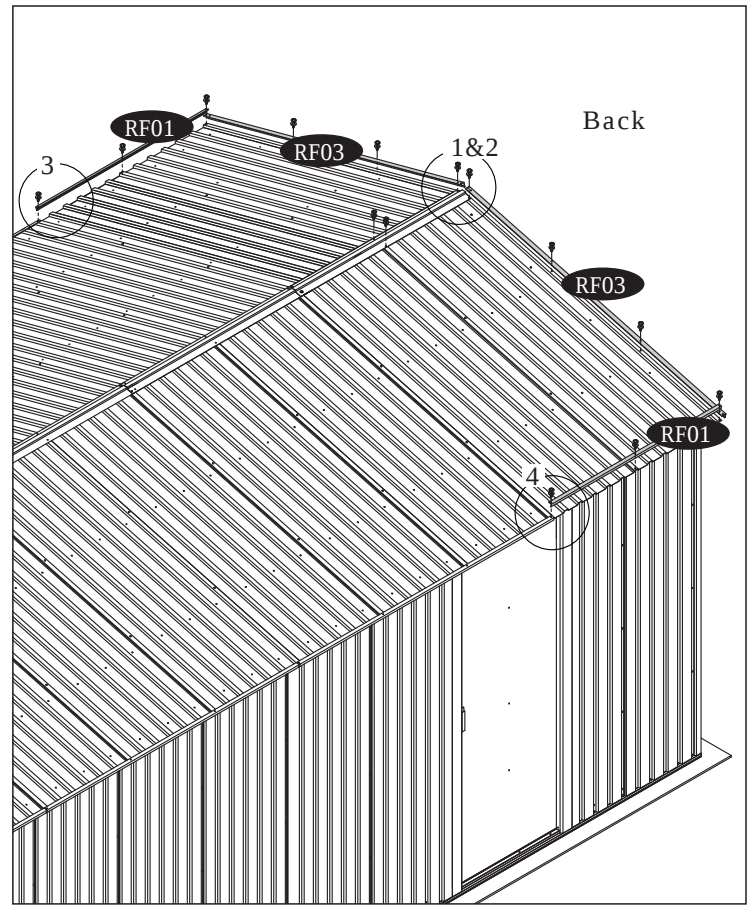


Step - 3

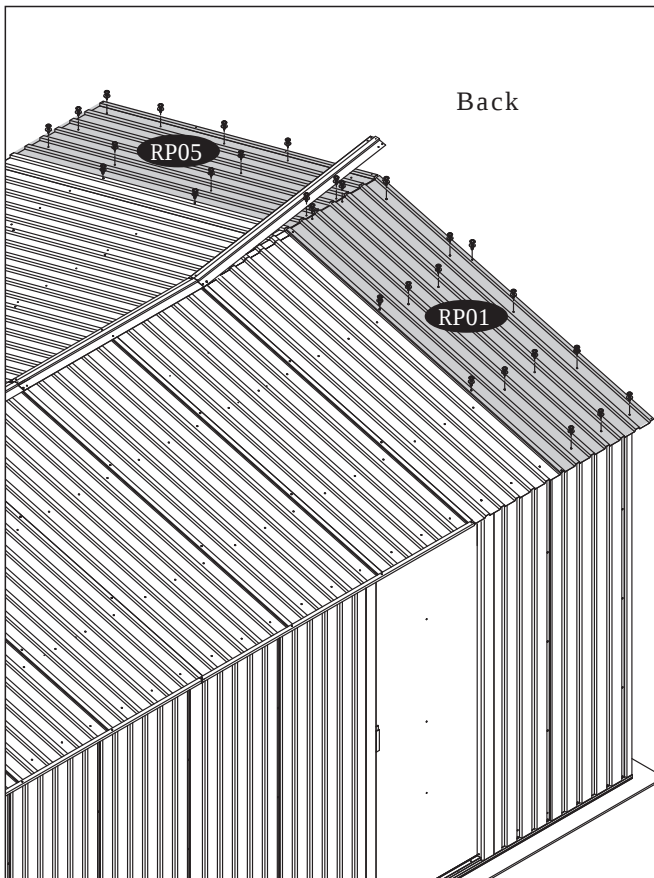


Step - 4

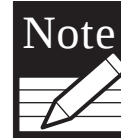


Note Support not included.

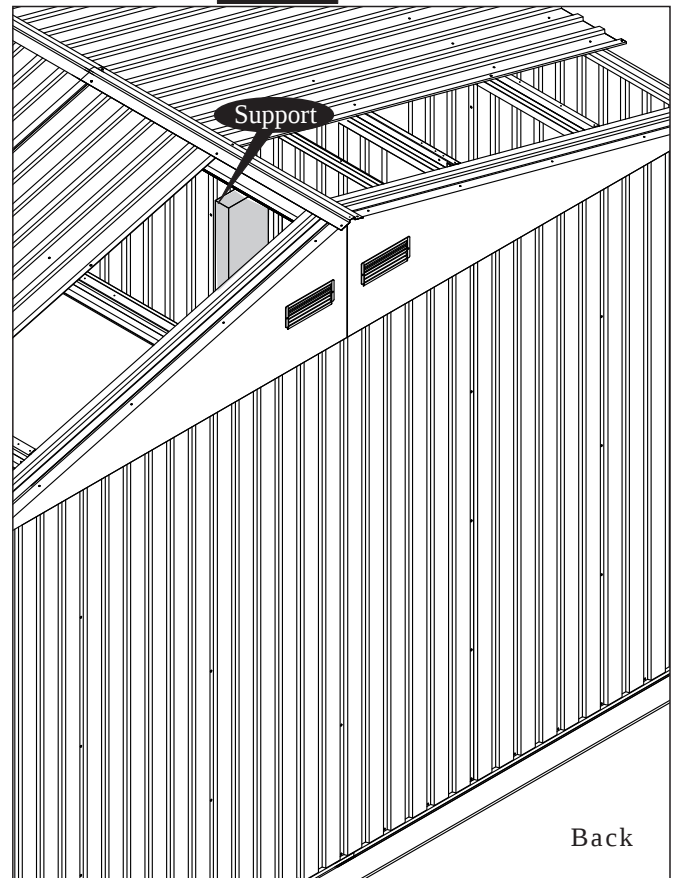


Step - 5

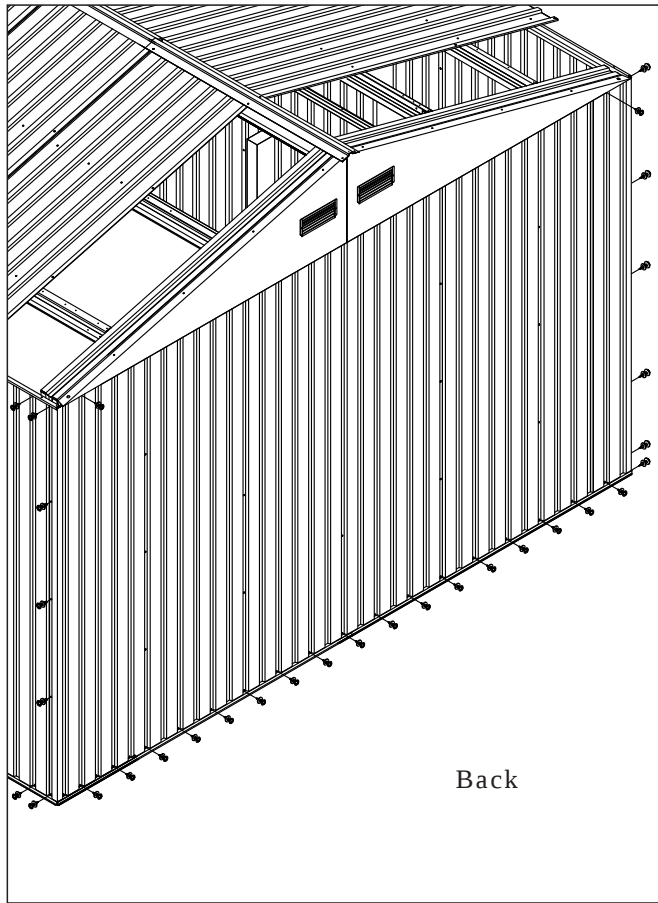


Step - 6

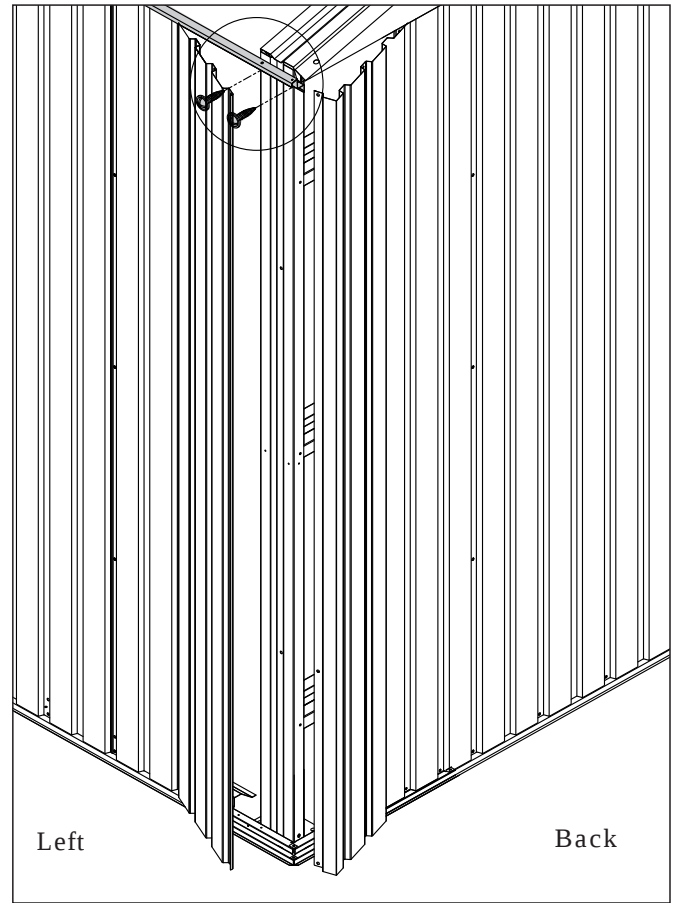

Step - 7

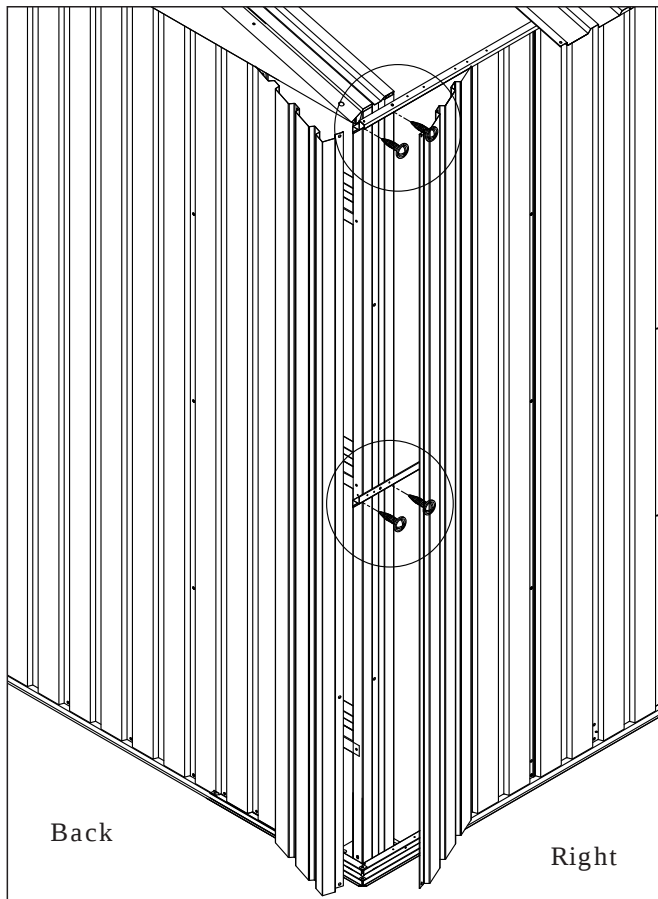

Step - 8

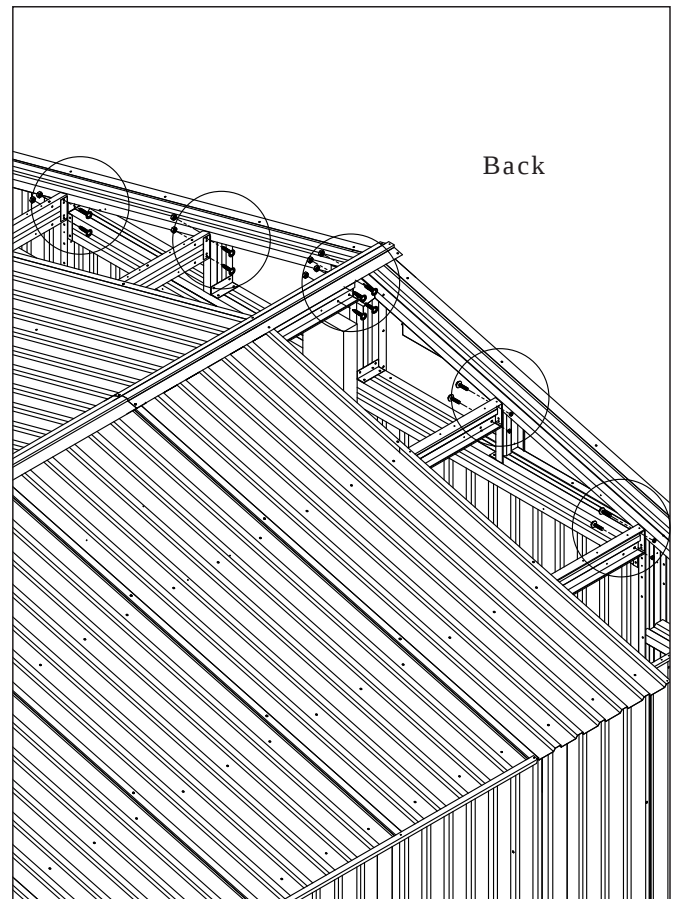

Step - 9

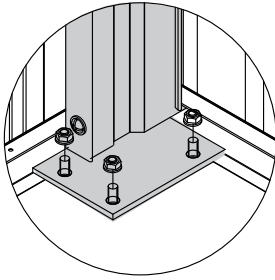


Fig.1

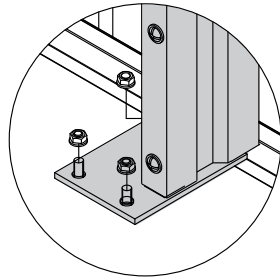


Fig.2

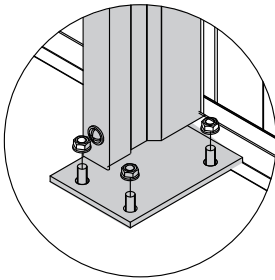


Fig.3



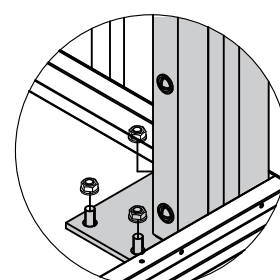



Fig.4

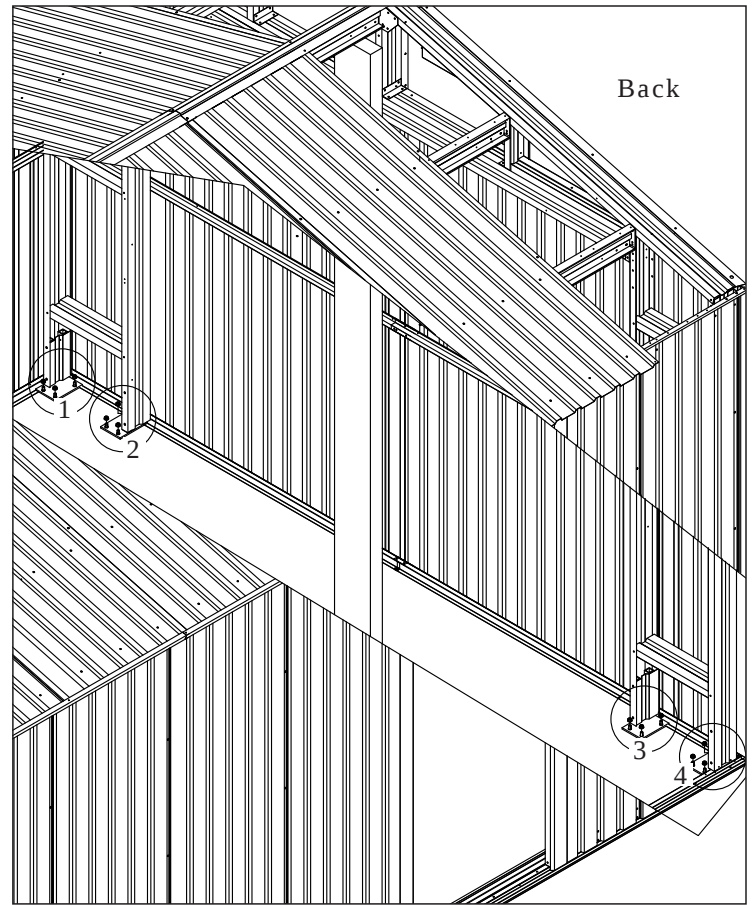


Step - 10

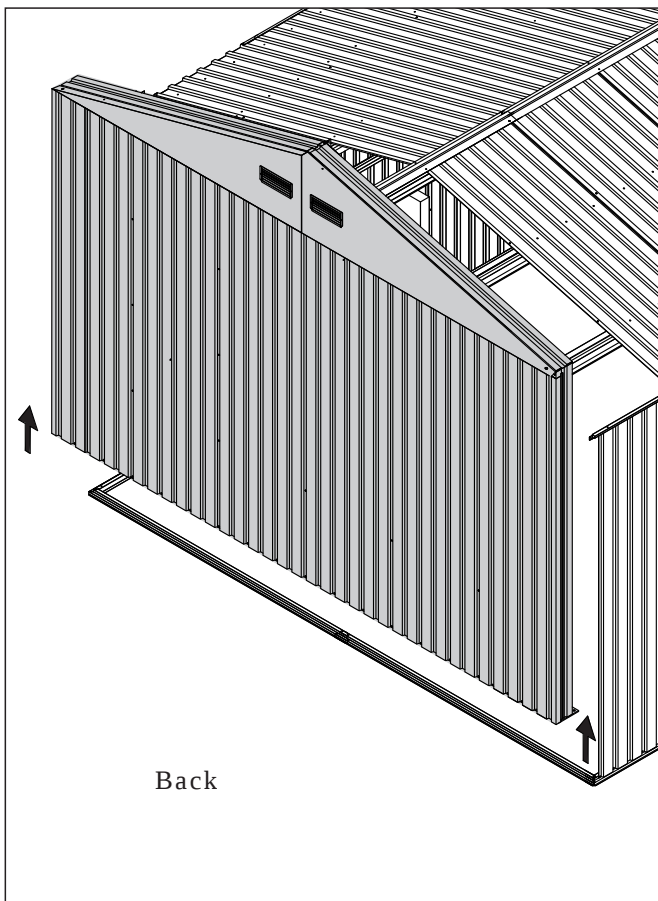

Step - 11

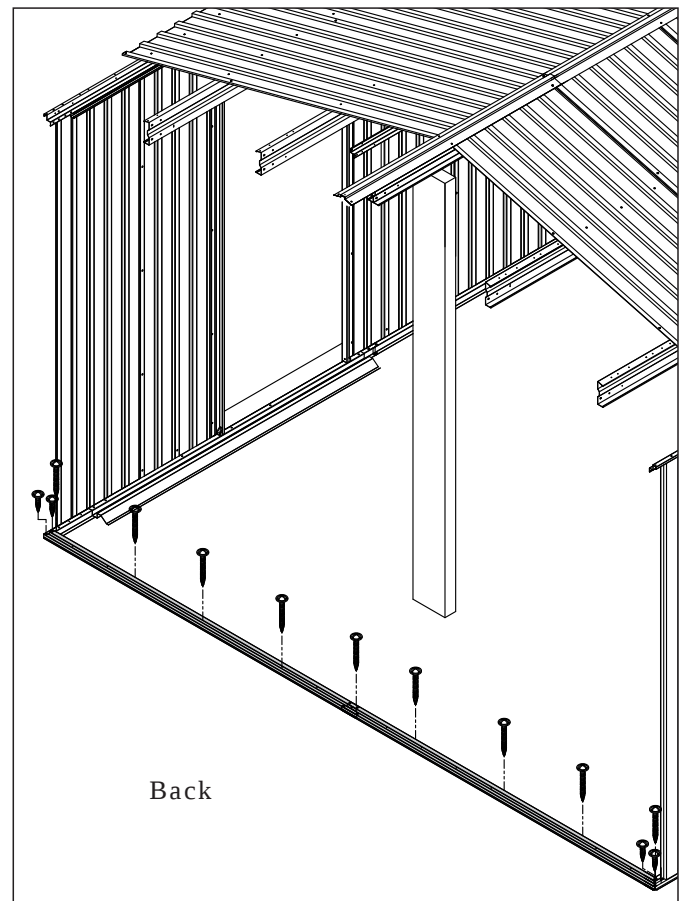

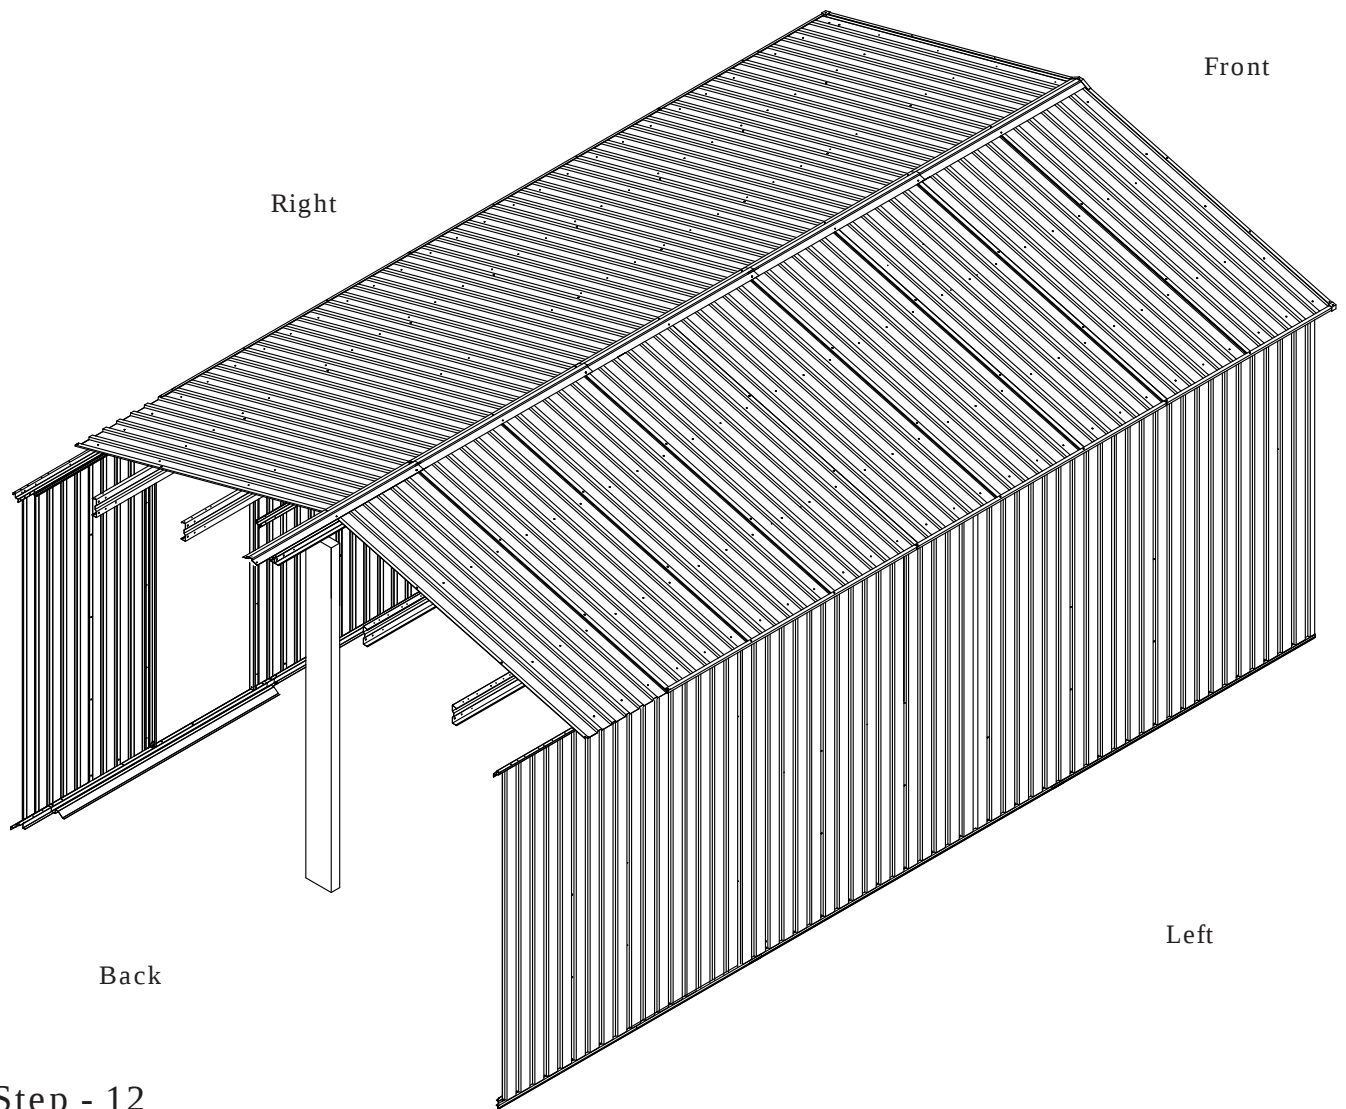

Step - 12

Come back to 12'x20' MetalGarage Extension Kit manual (PART-1) and follow the steps



U.S. Polymers, Inc.
1057 S. Vail Ave
Montebello, CA 90640,
United States of America

English

RD-3.0 | 21-06-2017