




KIT TWIN

ASSEMBLY INSTRUCTION (TWIN)


Before assembling your bed kit, please read through these instructions carefully and familiarize yourself with the different parts. Please note that you will require a Phillips screwdriver.

PARTS LIST

01 KIT 1 SET

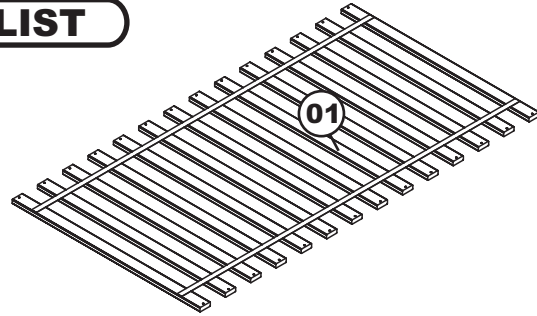

NOTE: WE INCLUDE SPARE HARDWARE IN CASE THE WOOD SCREWS ARE DAMAGED DURING ASSEMBLY.




1 1/4" Wood screw - 28 pcs Spare - 2 pcs

HARDWARE

Step 1 Assemble bed frame or bunk bed according to assembly instructions.

Step 2 Lay the kit onto the bed.

PLATFORM BED

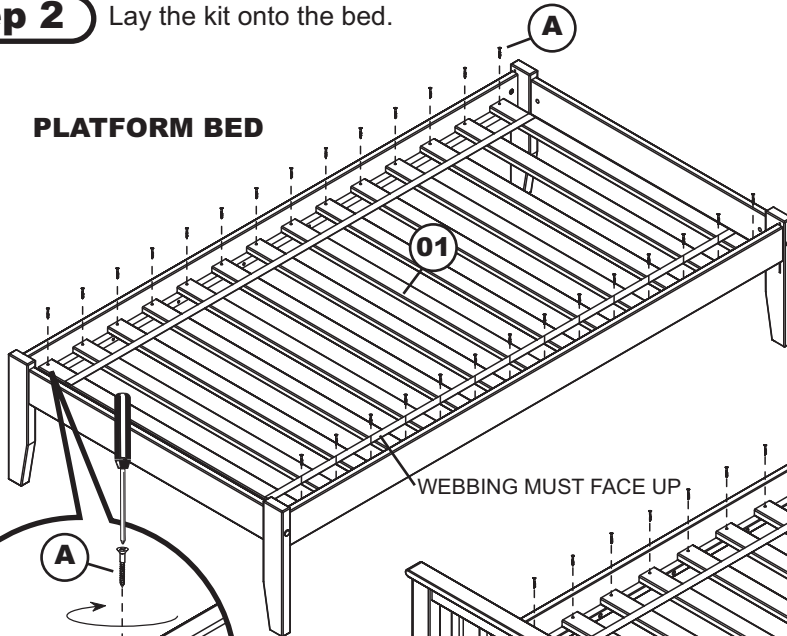

WEBBING MUST FACE UP




Adult assembly



Wood screw

BUNK BED

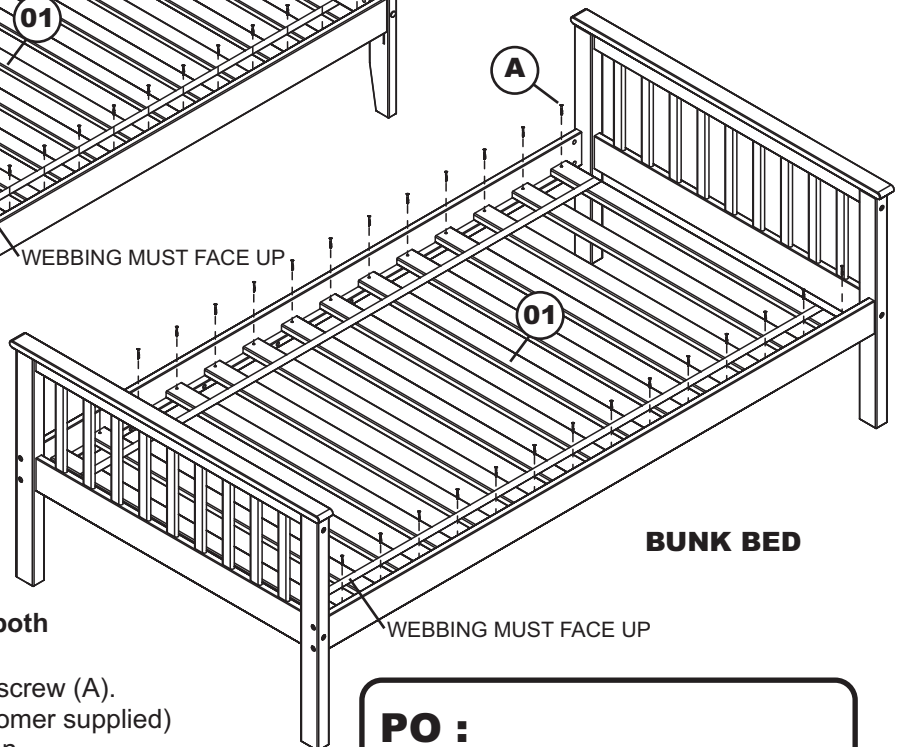

WEBBING MUST FACE UP

Be sure to align slat kit evenly with both ends of side rail.

Screw kit (01) to side rail, using wood screw (A). Tighten with Phillips screwdriver. (Customer supplied) Be sure the space between slats is even.

NOTE: WEBBING MUST FACE UP

PO :