









# Product Assembly Instructions

## Item#: RAMONA Swivel Barstool

Helpers needed to assemble: 2  
 Estimate time frame to assemble: 20 minutes

- Step 1:** Aligen the frame(2) onto the bottom of seat (1).
- Step 2:** Put the bolts(A) through holes of frame and swivel.
- Step 3:** Put the washer ( C ) and nut (B) on the bottom of bolt as picture

| # | Picture   | Description  | Quantity |
|---|---|--------------|----------|
| 1 |    | Seat         | 1        |
| 2 |    | Frame        | 1        |
| A |    | Bolts(M6x25) | 4        |
| B |    | Nut          | 4        |
| C |    | Washer       | 4        |
| D |  | Allen Key    | 1        |
|   |   |              |          |

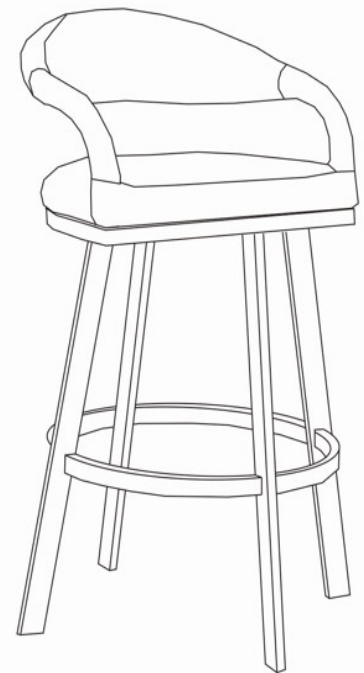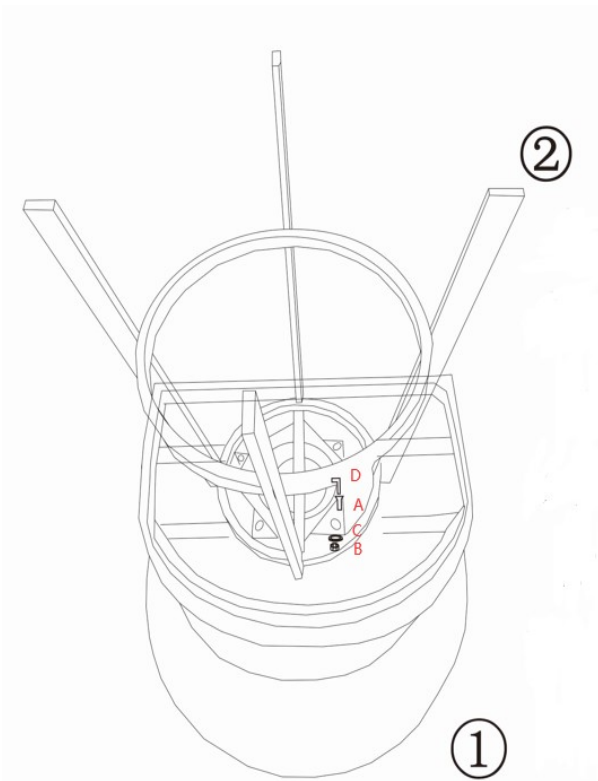

- Step 4:** Hold the nut not moving, and use allen key (D) to afix the bolt into nut until tighten.
- Step 5:** Test the barstool is firmly on the ground and the seat does not wiggle.
- Step 6:** Sit and enjoy your new barstool.

**\* Keep the Allen Key and Tighten all screws each 3 months for safety concern!**