



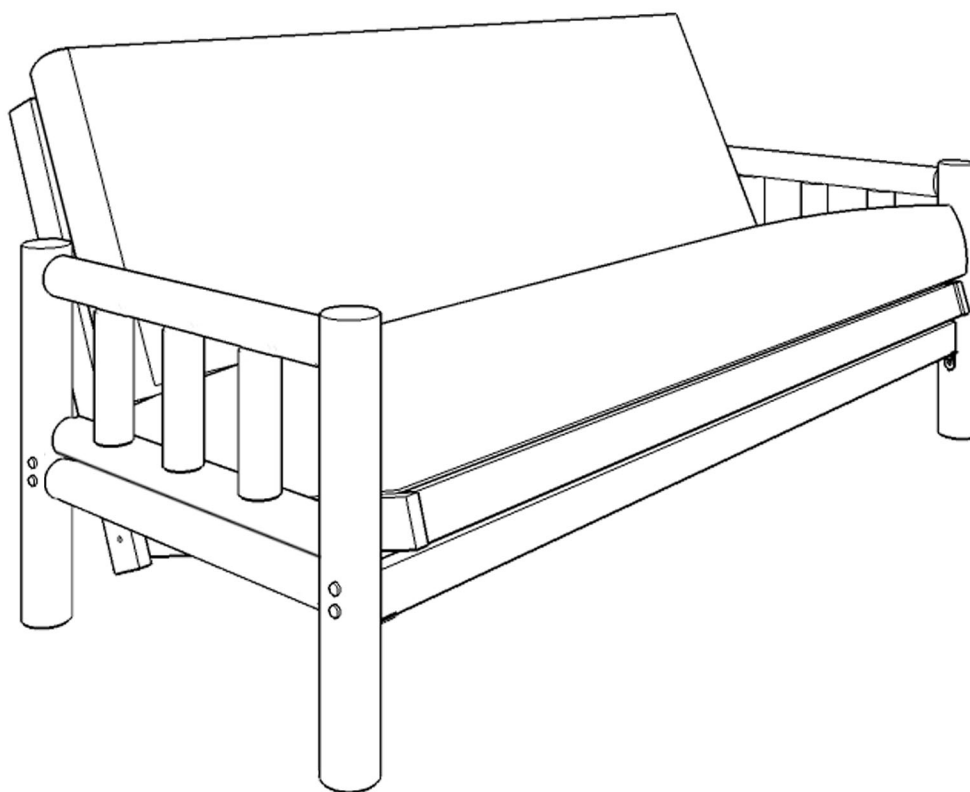

## Assembly Instructions



Required:

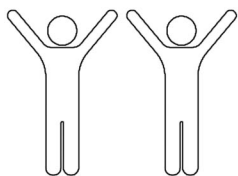

Tools Needed:




Allen Key provided

Please cover floor with corrugated cardboard / paper / carpet  
to avoid scratches / damages to floor




# Body

## Assembly Instructions

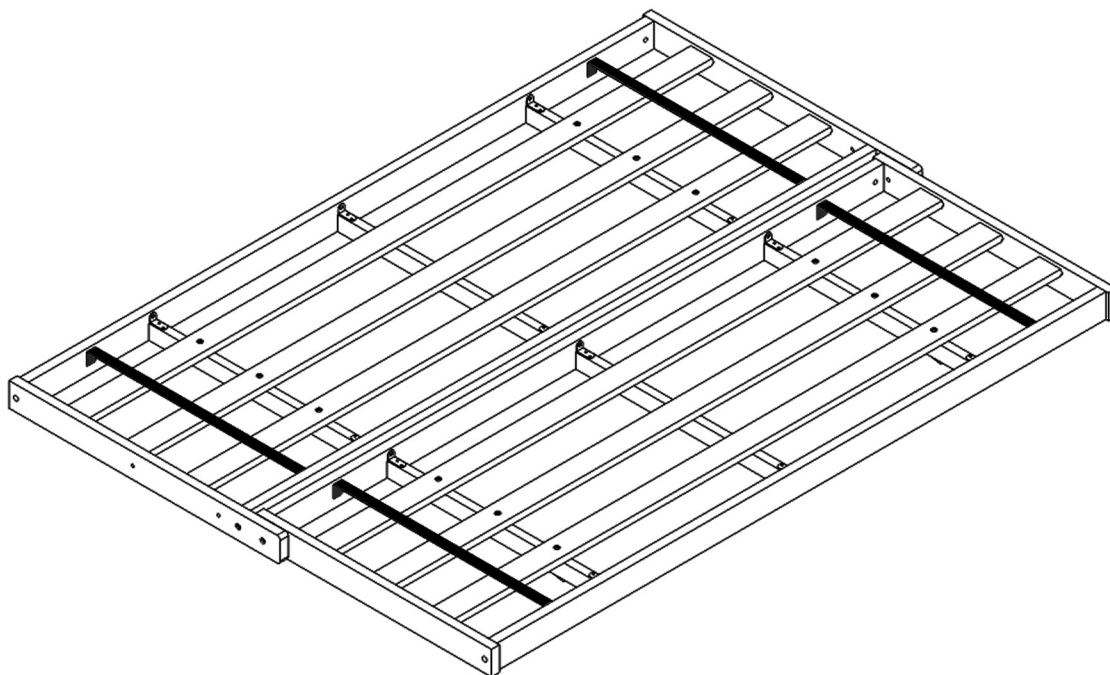

Recommended:

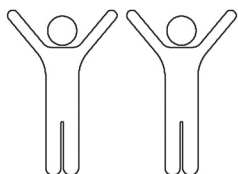

Tools Needed:



Allen Key provided

Please cover floor with corrugated cardboard / paper / carpet  
to avoid scratches / damages to floor


# Assembly Checklist

Please make sure that you have all of the below items before you start. If any are missing, please contact us for a replacement.




## Parts supplied for assembly

Box A

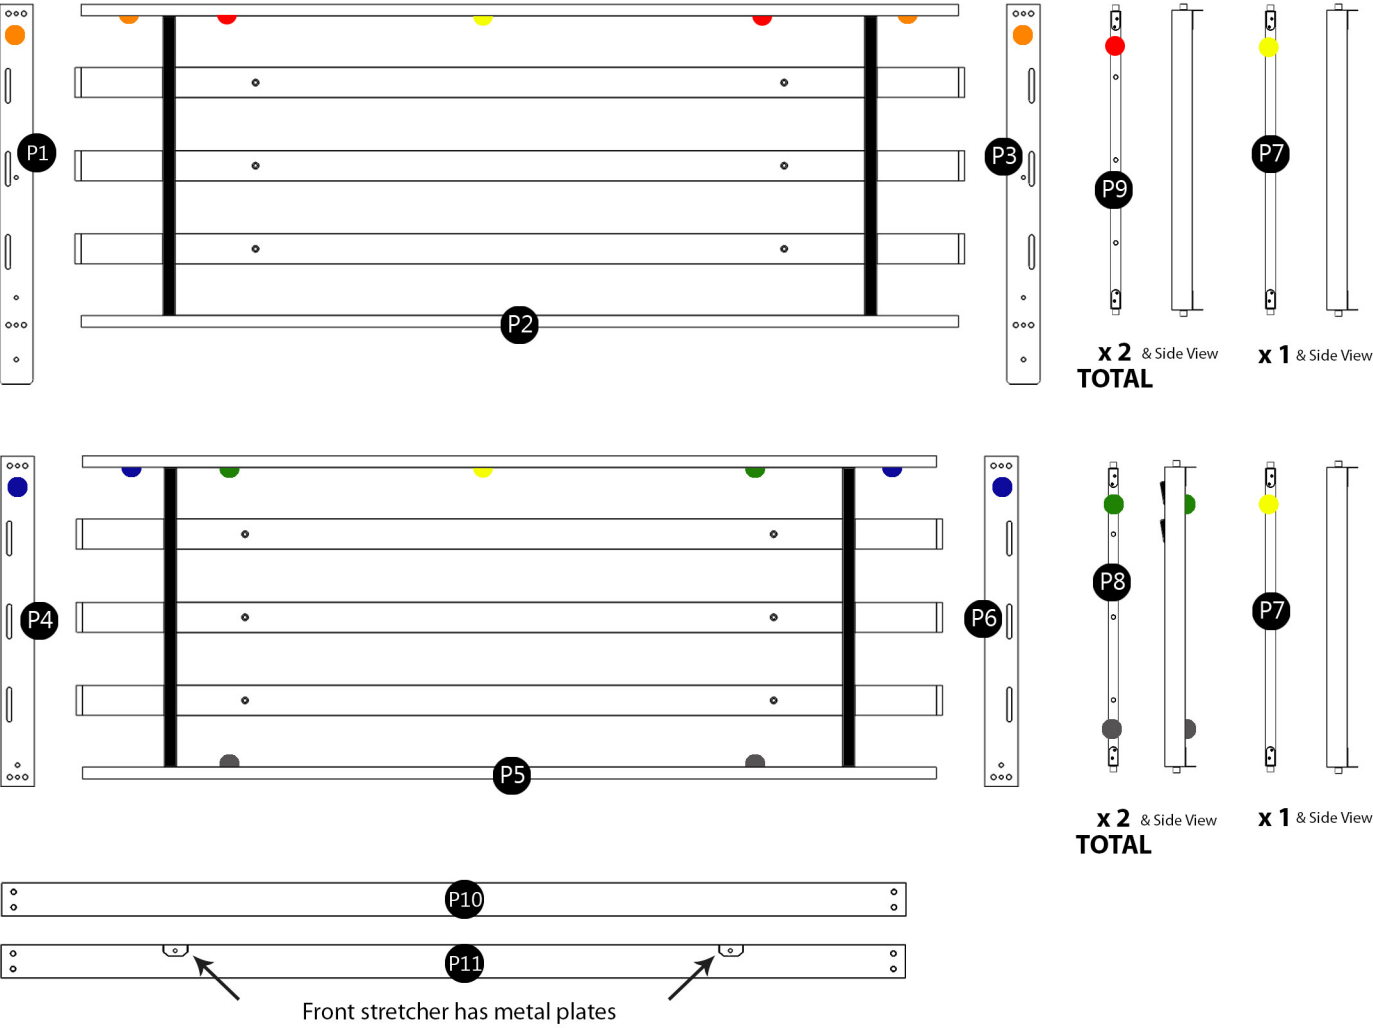



## Hardware supplied for assembly

Tools required for assembly:  
- Allen Key (supplied)

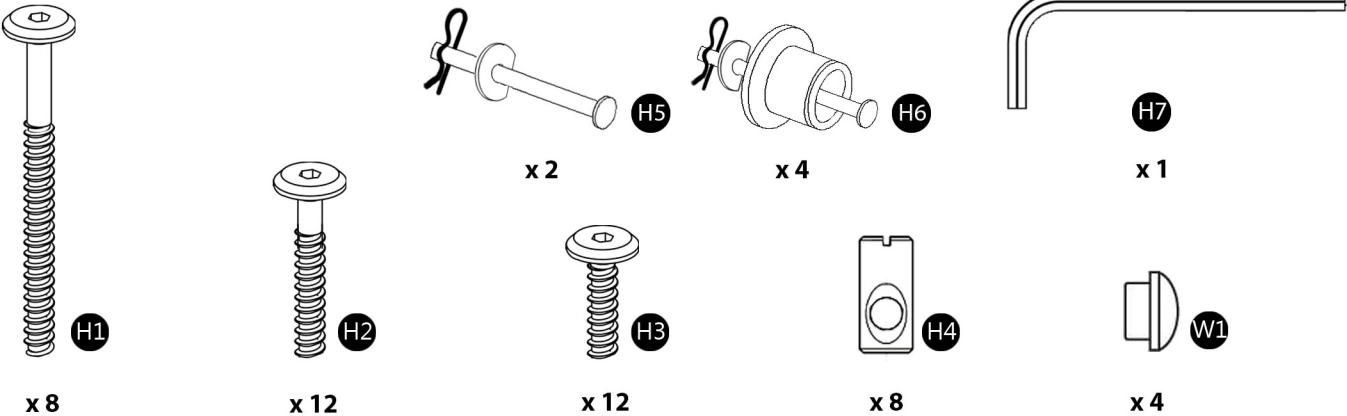


**Step 1:** Locate parts P2, P9(2), & P7

Use colored dots to align parts for connection.

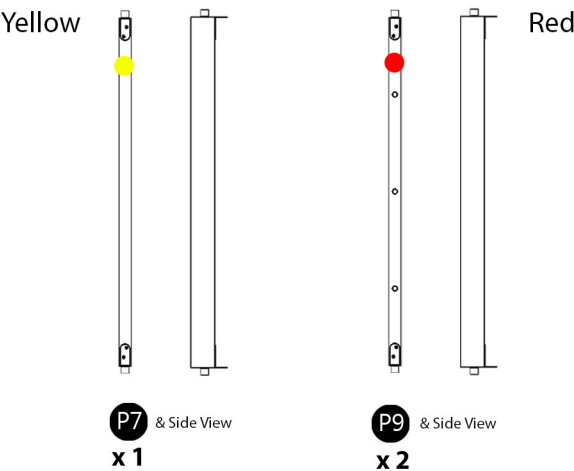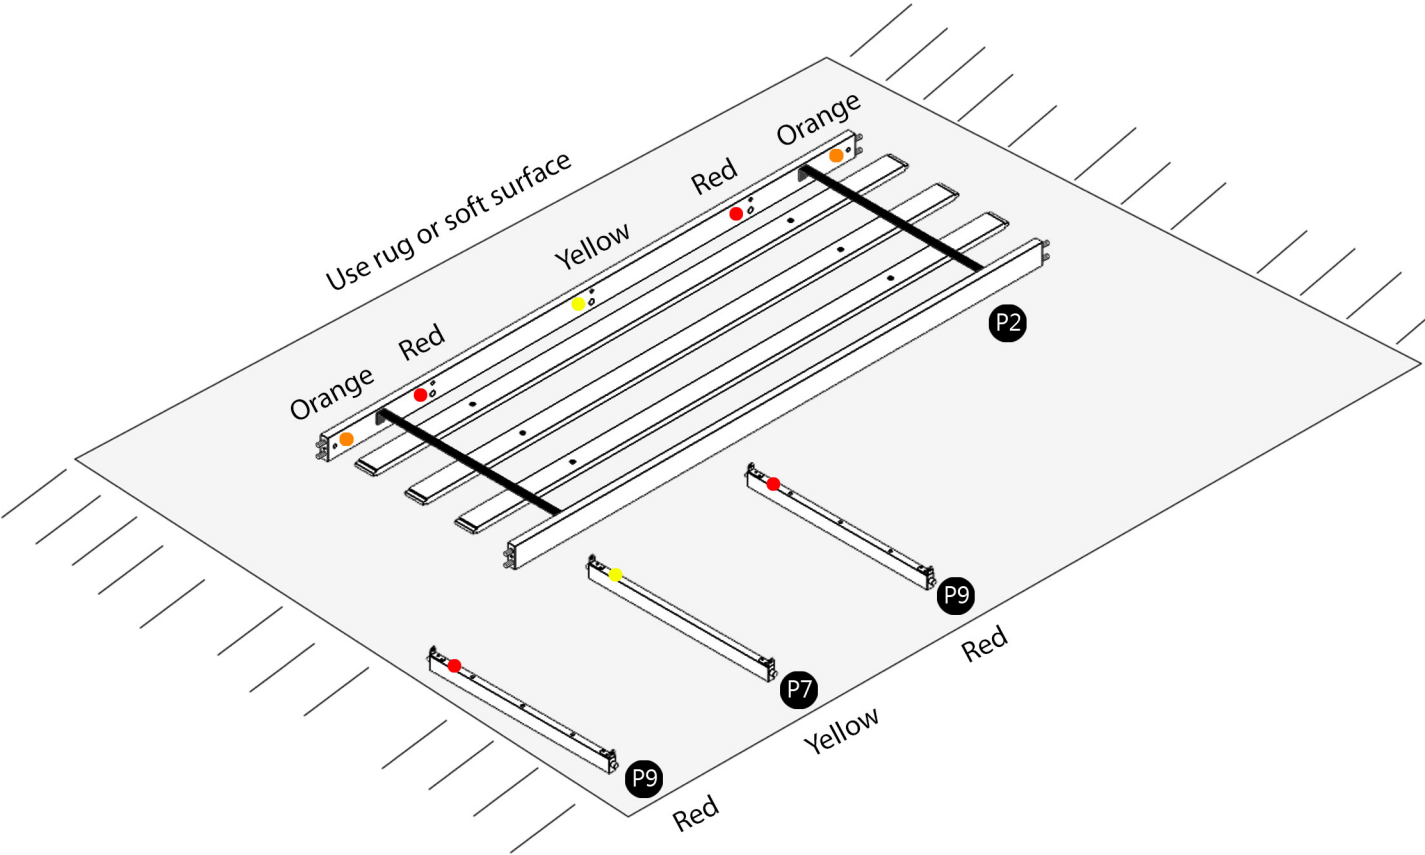






## Step 2: Attach P7 and P9(2) to P2 with hardware as shown

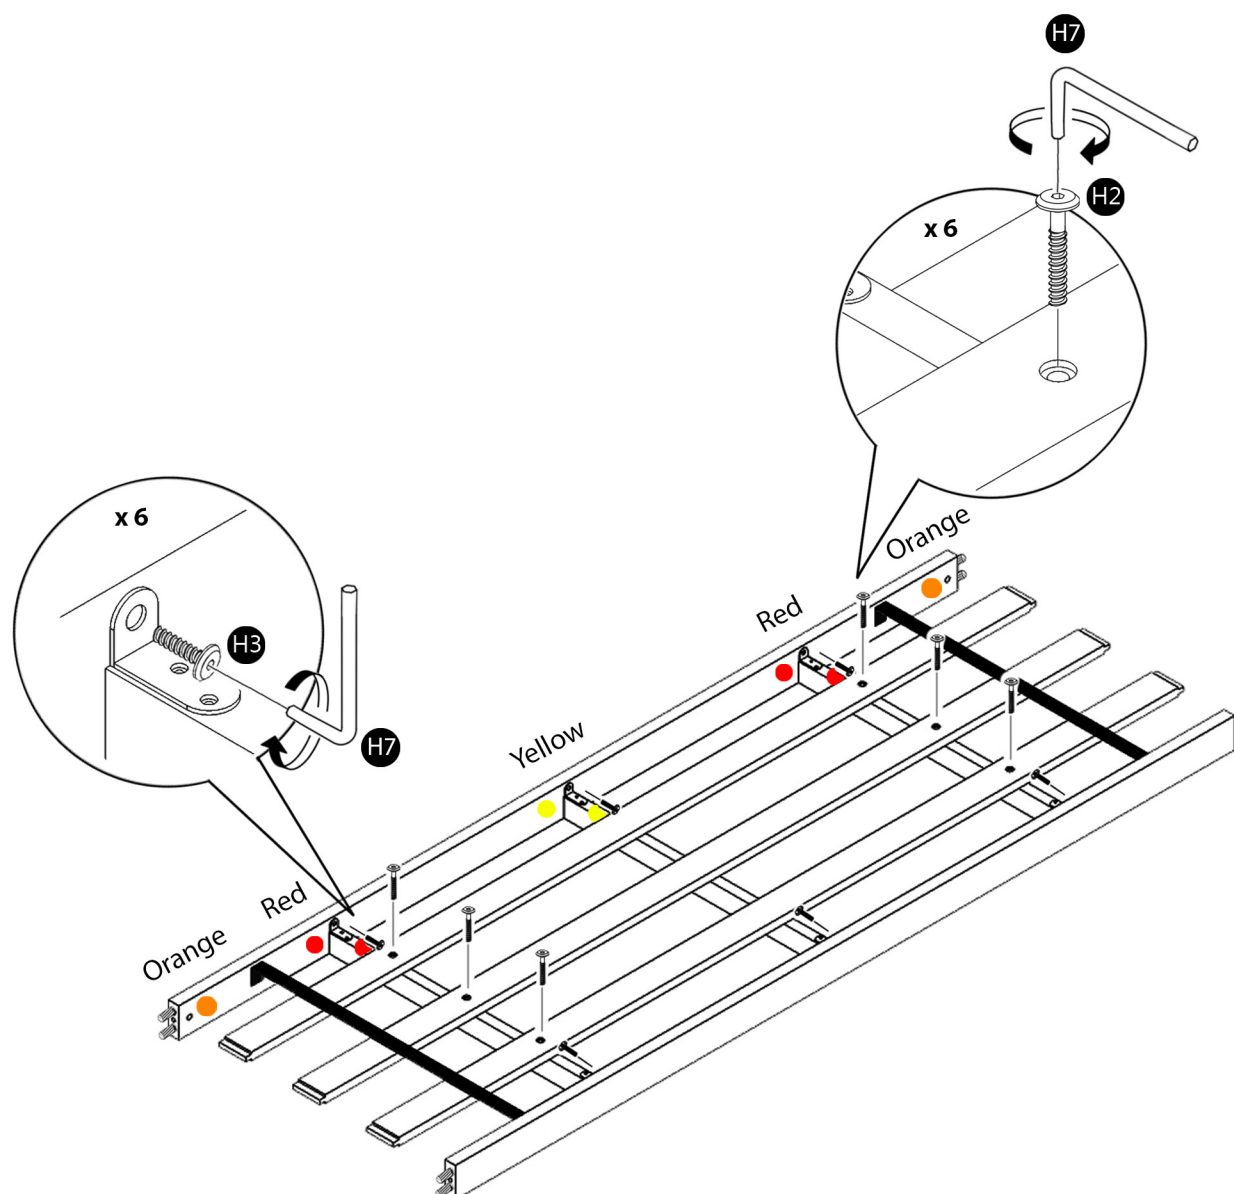

Loosely attach H2 and H3 bolts.

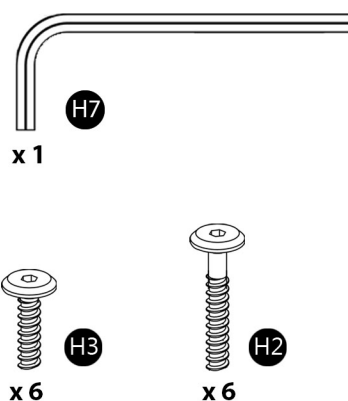


**Step 3:** Attach four nylon guides (H6) as shown

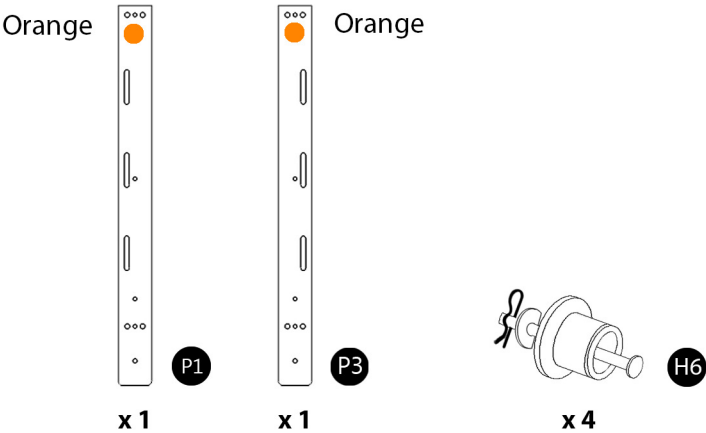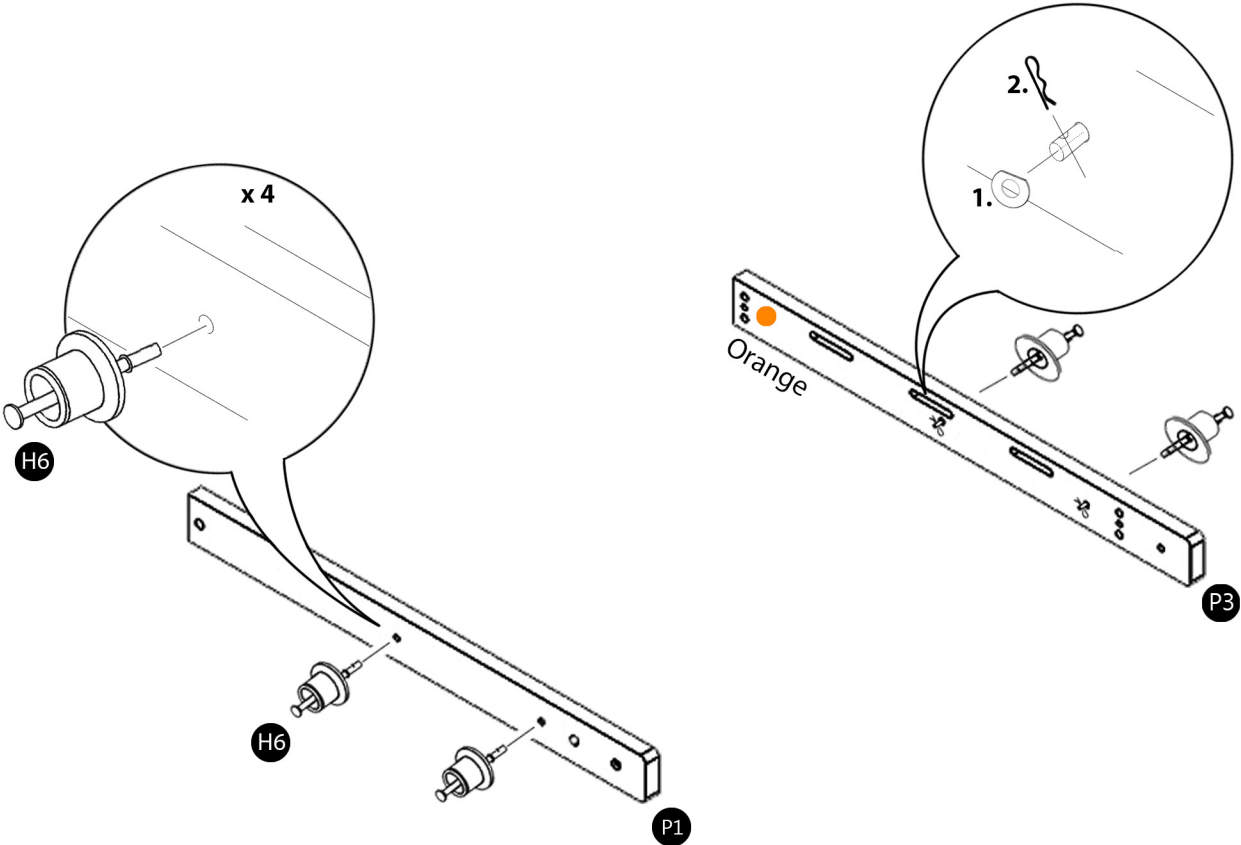


# Step 4: Attach P1 & P3 to back deck P2

Use colored dots to align parts for connection.



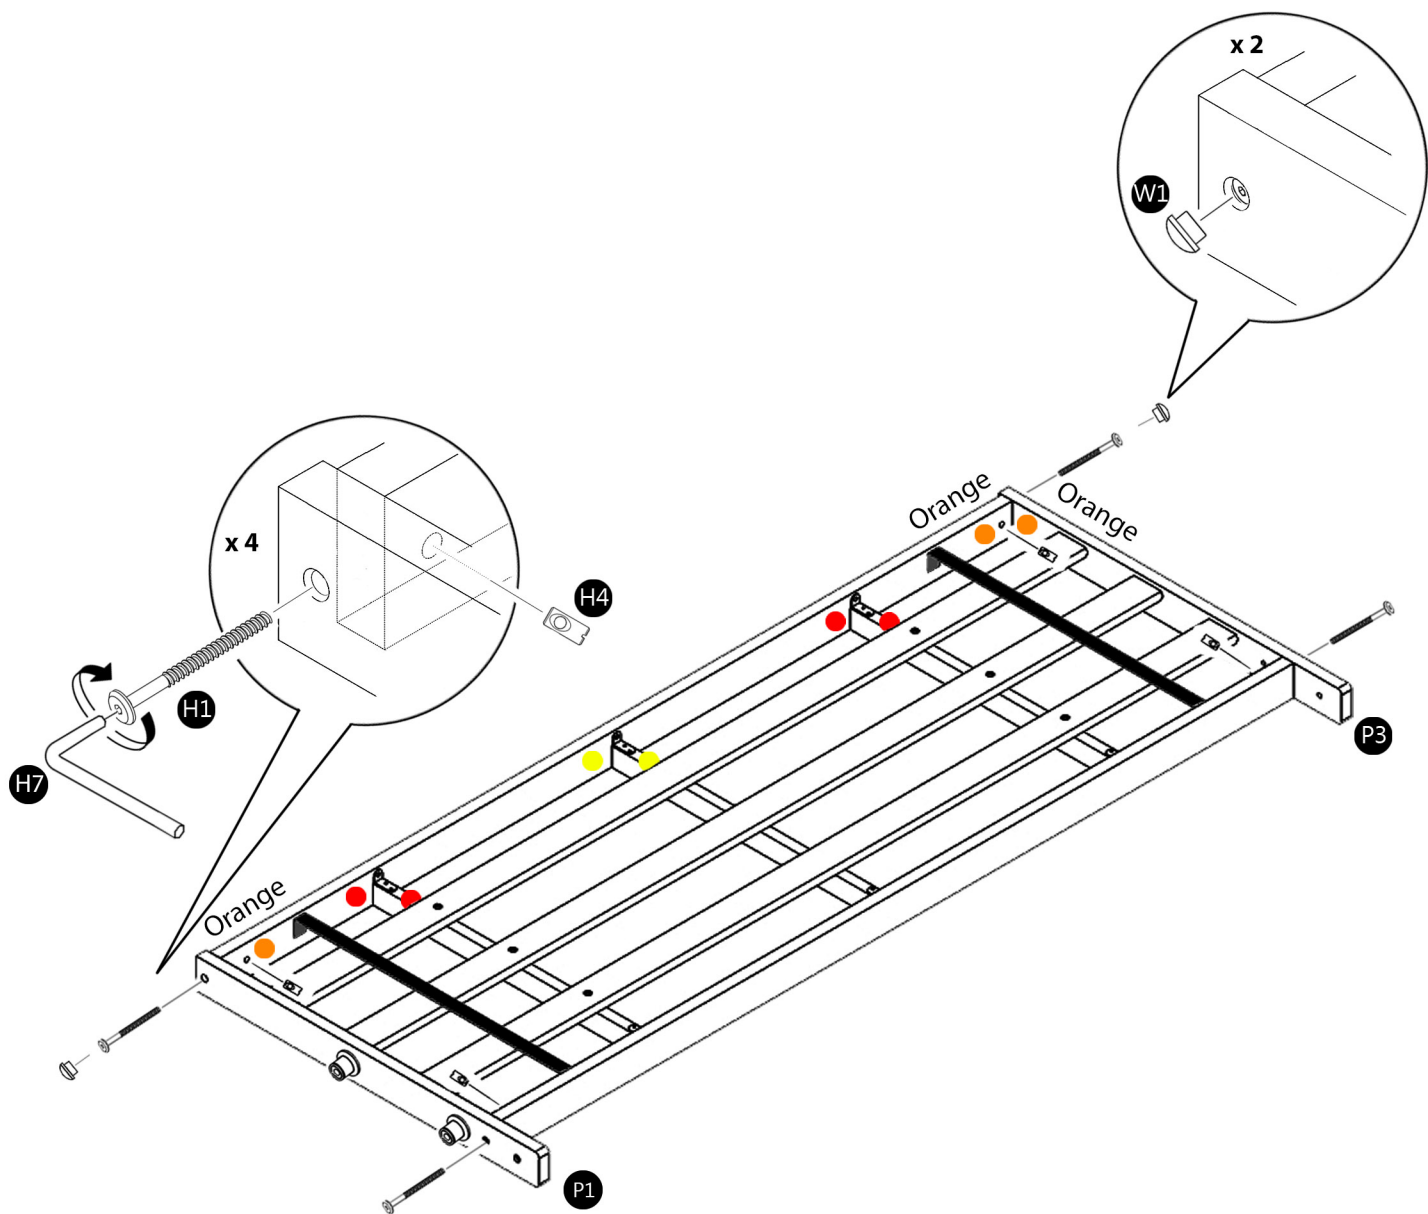


All bolts can be tightened at this point.

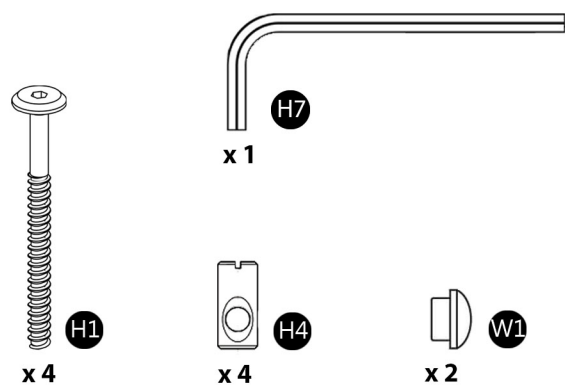


**Step 5:** Locate parts P5, P8(2), & P7


Use colored dots to align parts for connection.

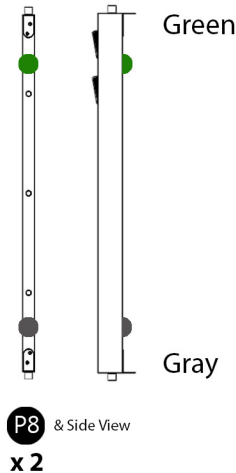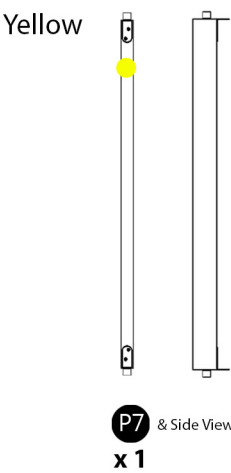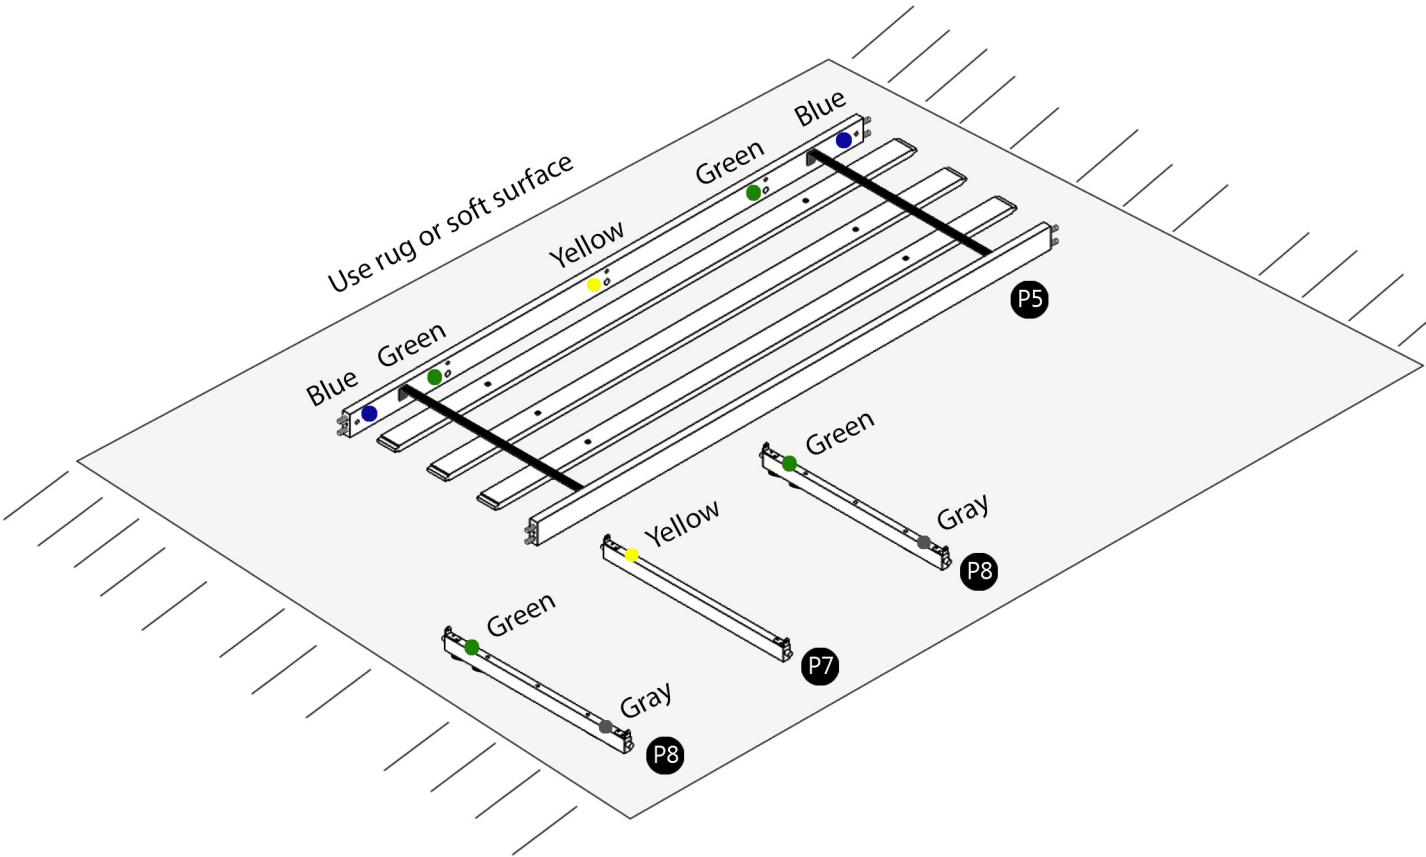


## Step 6: Attach P7 and P8(2) to P5 with hardware as shown

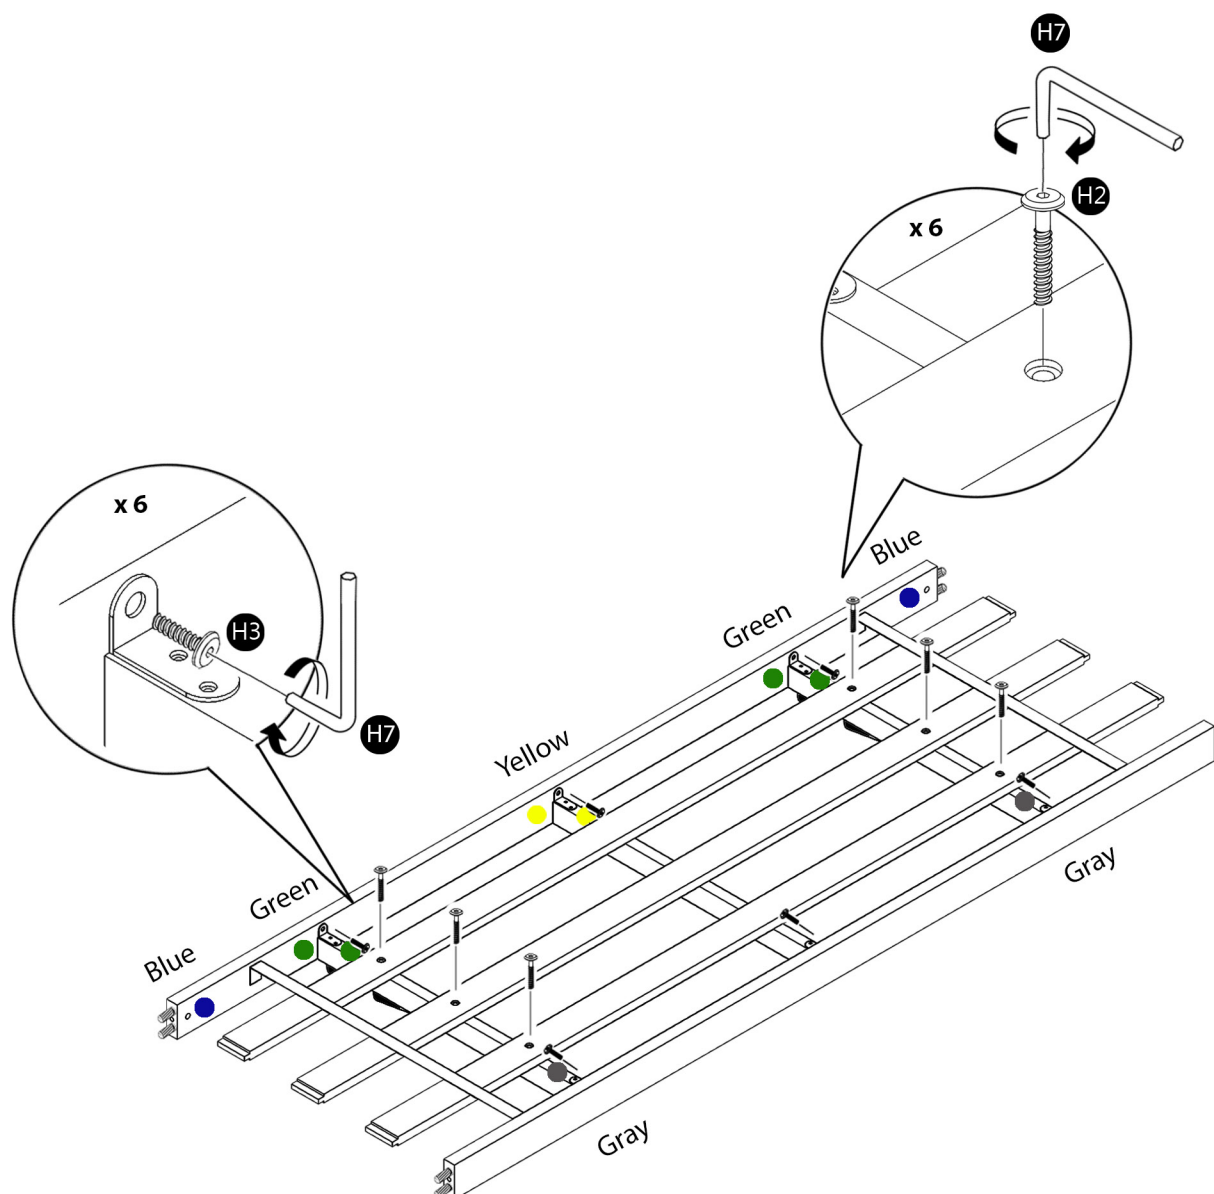

Loosely attach H2 and H3 bolts.


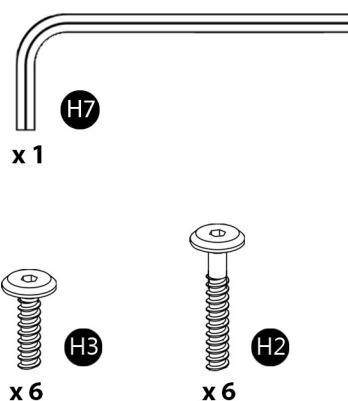


Use colored dots to align parts for connection.

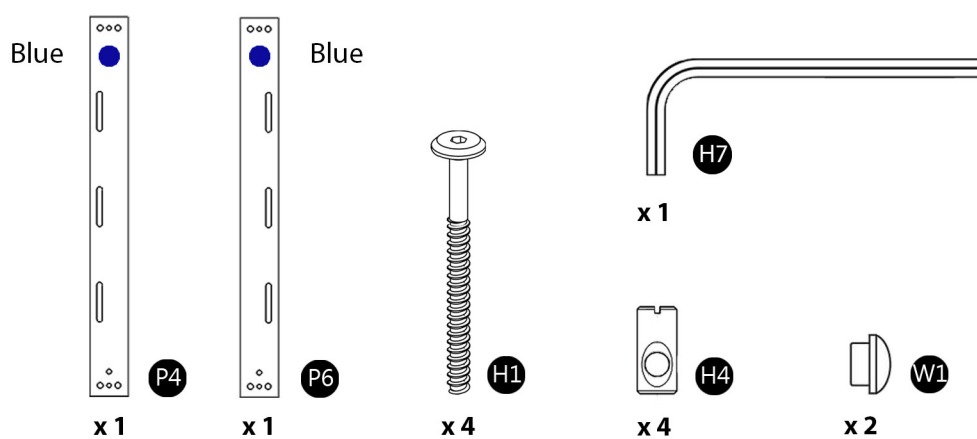



**Step 8:** Connect the fully assembled seat and back decks using hardware H5 (x2) as shown below

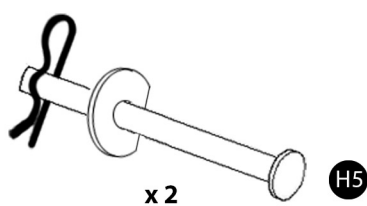
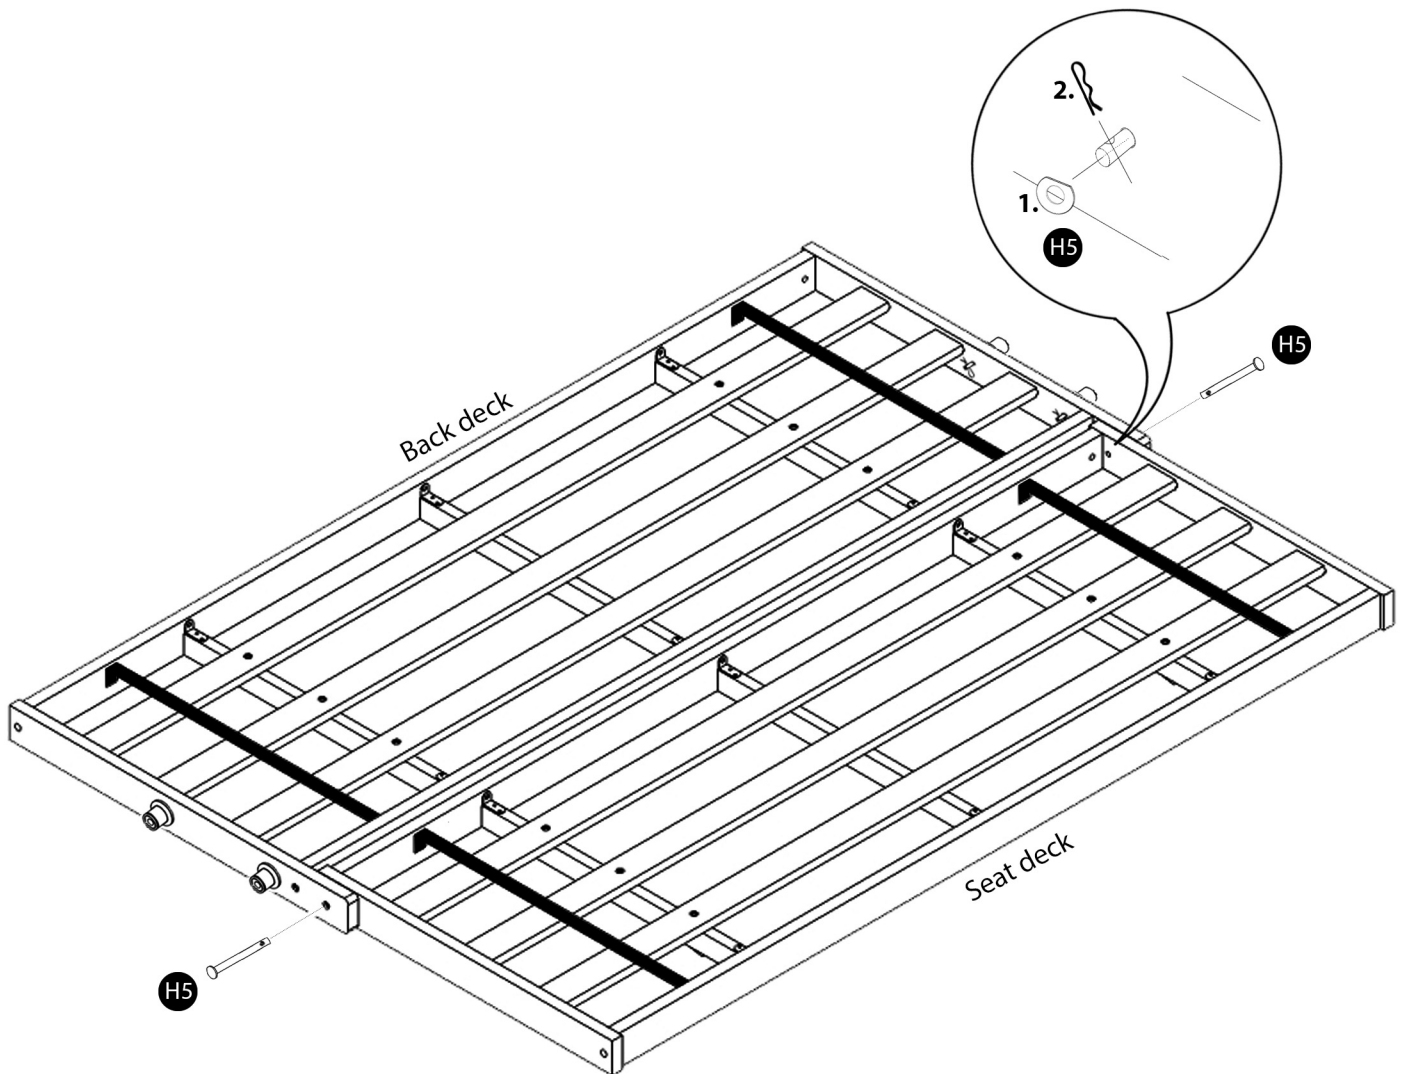


# Assembly Checklist


Please make sure that you have all of the below items before you start. If any are missing, please contact us for a replacement.



## Arms

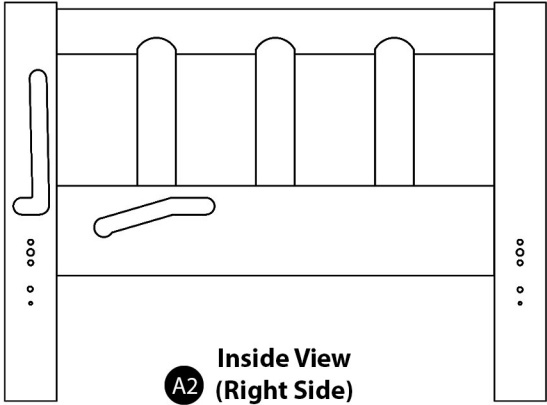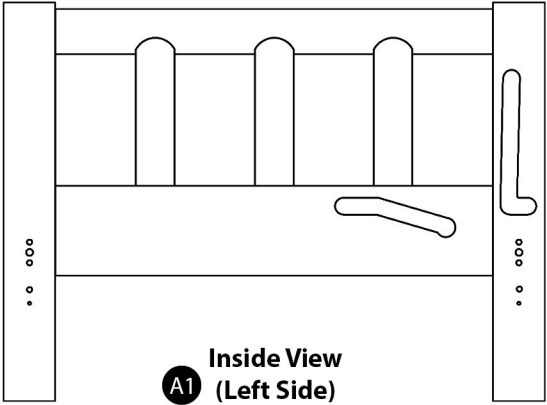

## Hardware supplied for arm assembly



x 8



x 4




x 4



x 8



x 1

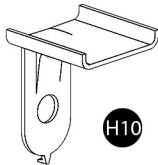


x 4




x 8

## Step 9: Locate 4 legs, parts A1 & A2

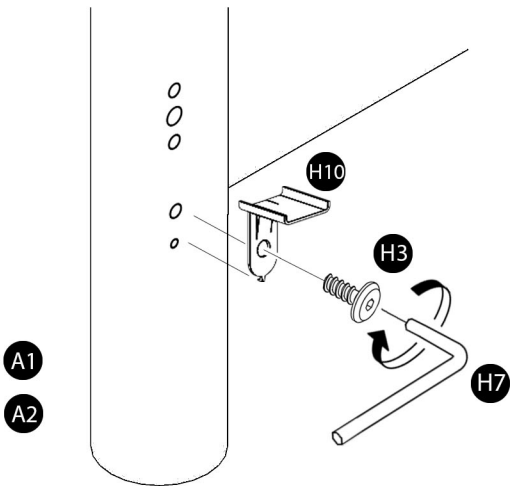


Do not tighten the bolts before finishing all steps.

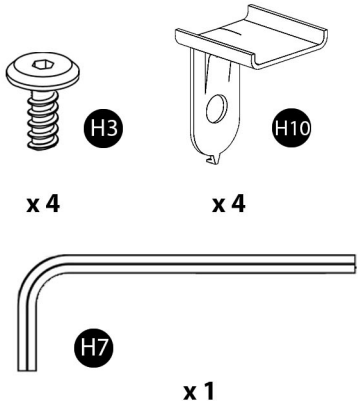





**Step 10:** Insert wood dowels (W2) into stretchers (P10) and (P11) as shown

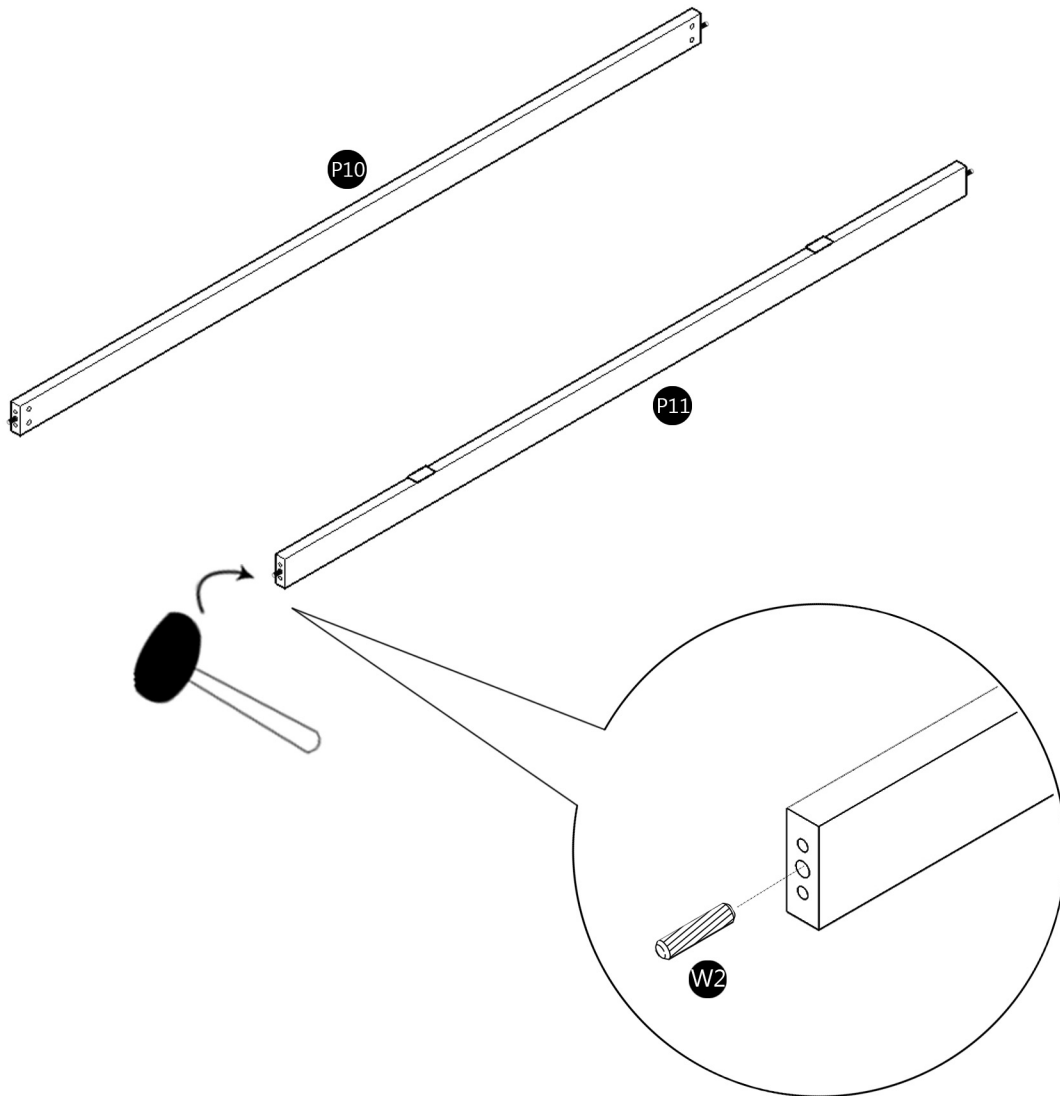


**Step 11:** Attach P10 & P11 to A1 & A2 with hardware as shown

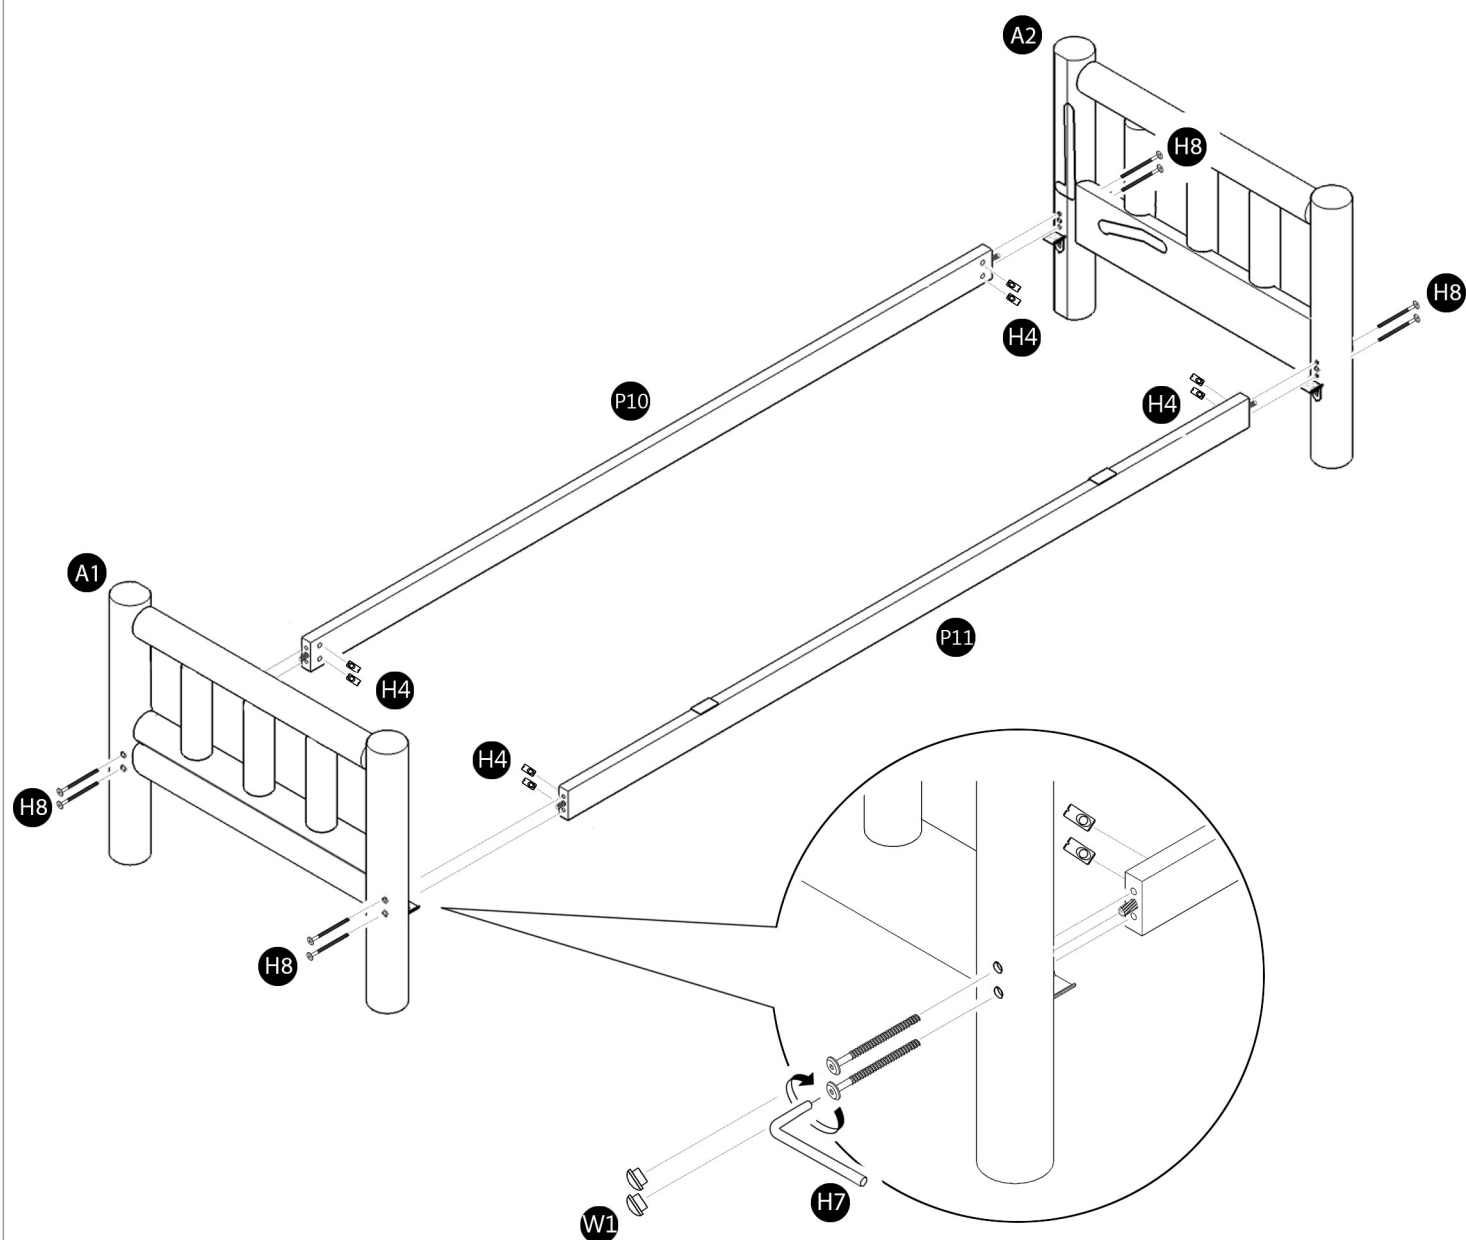


The bolts need to be very loosely attached at this point. Your arm may vary.

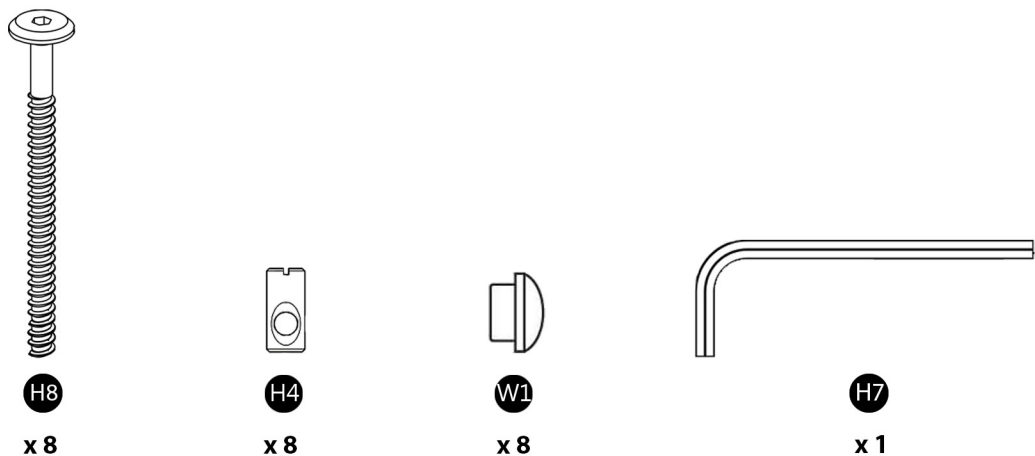

**Step 12:** Align H6(4) into grooved out slots on A1 & A2.

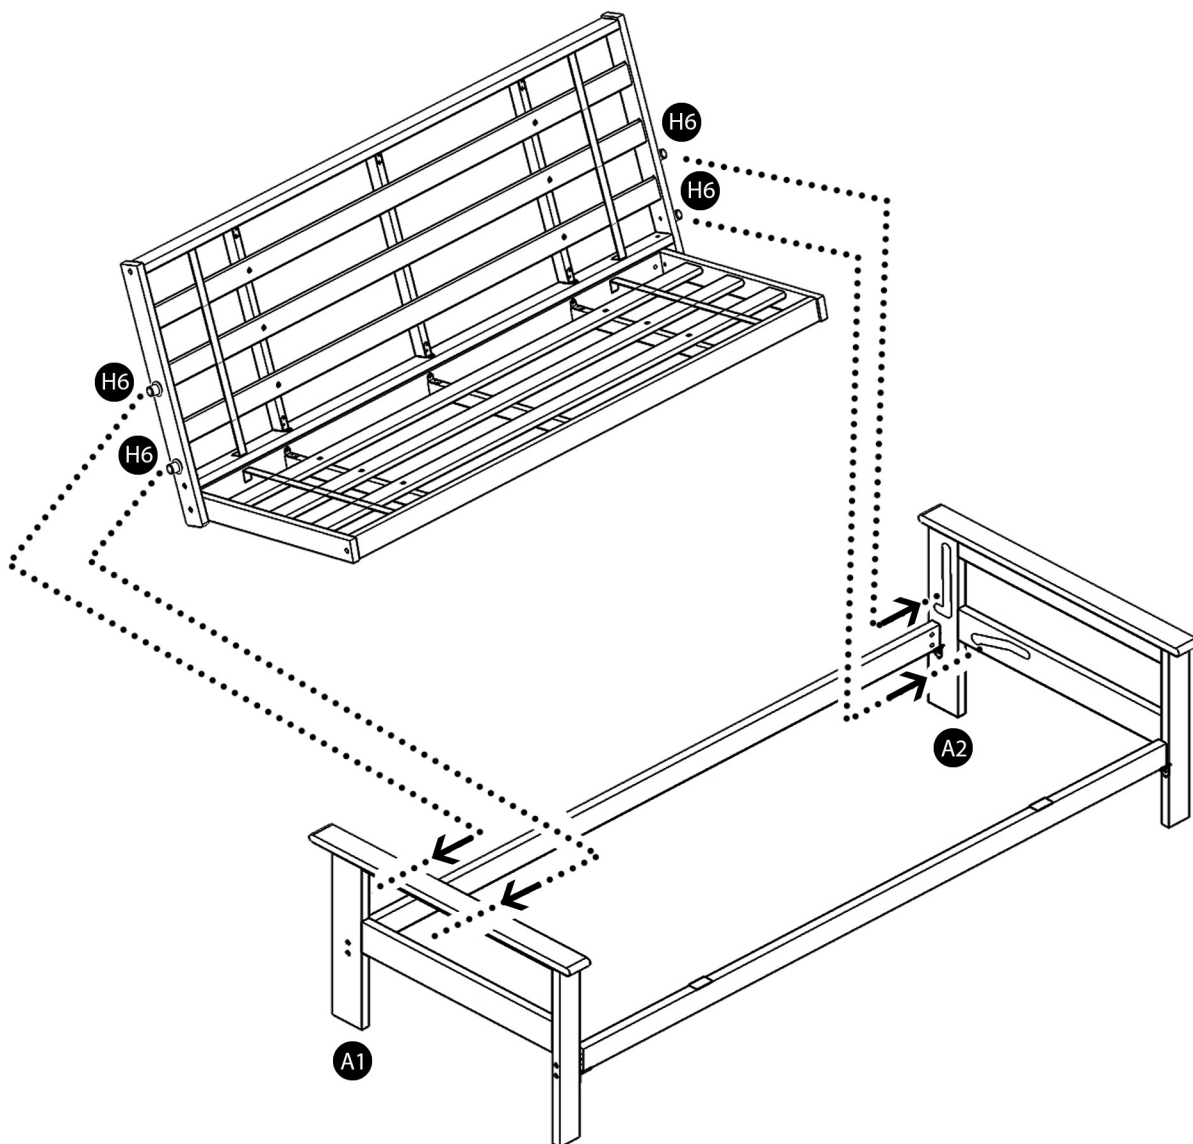


The bolts need to be very loosely attached at this point. Tighten all bolts after everything is in place.

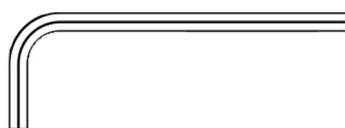


H7  
x 1

## Assembled views


Your arm may vary.

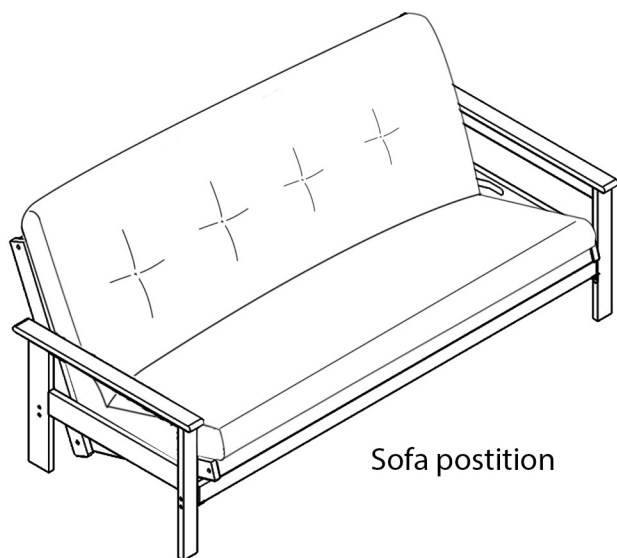


Sofa position

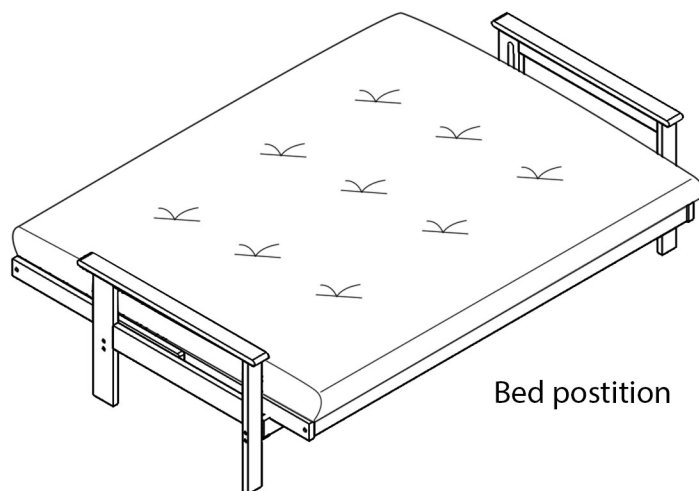

Bed position

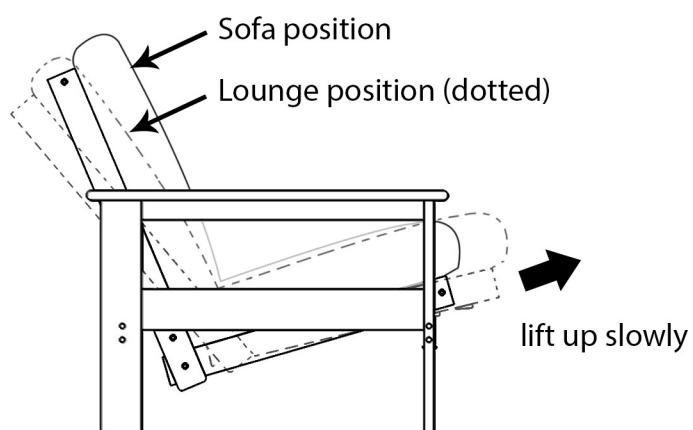

Sofa position to Lounge position.

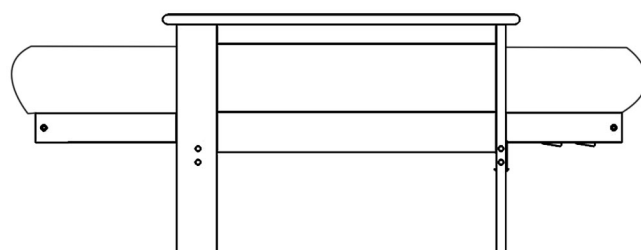

Bed position