

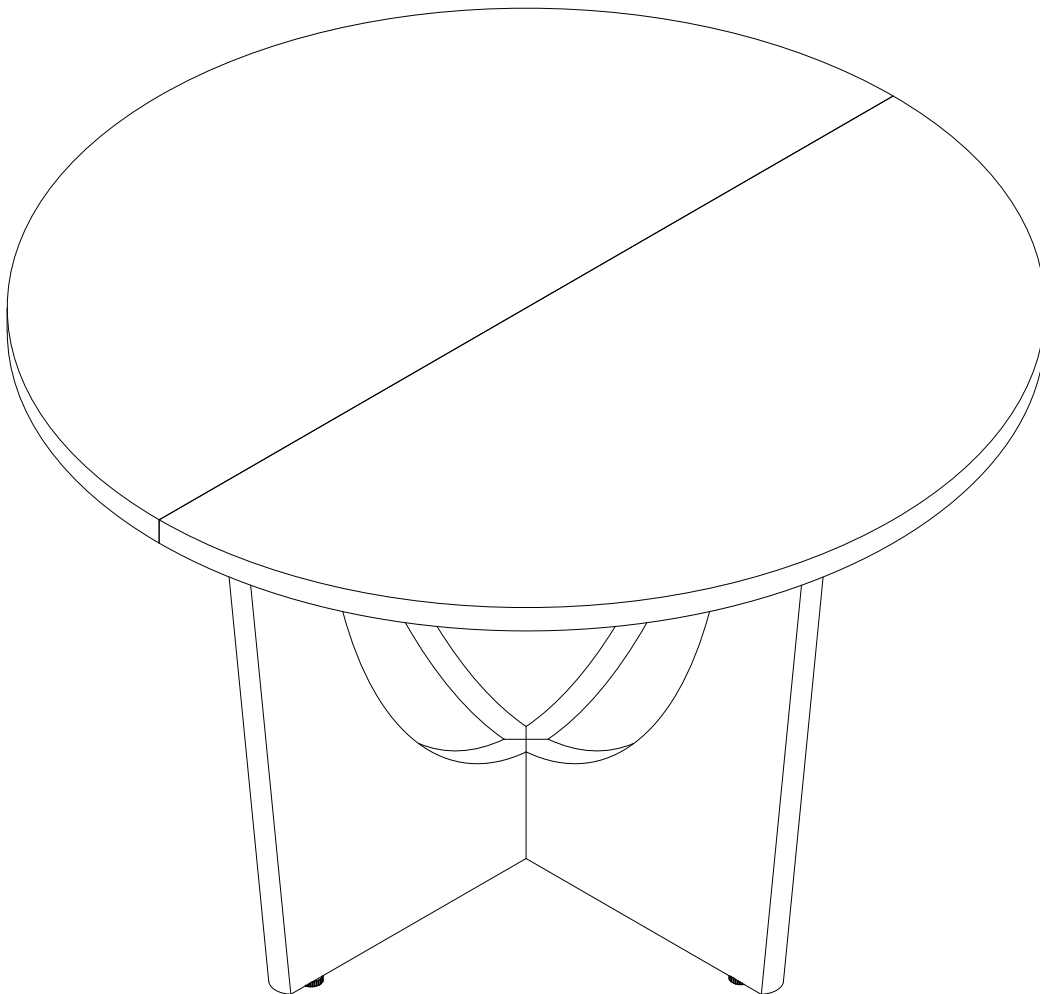

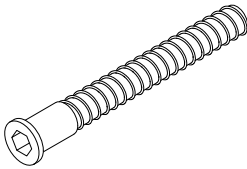
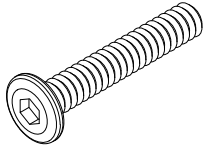

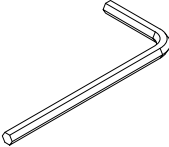

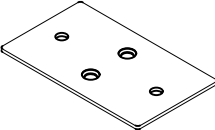
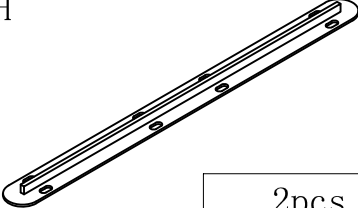



DT001L
Assembly Instructions

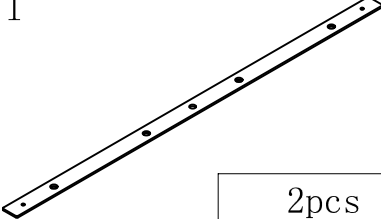



A  M6*12mm 24pcs	B  M7*38mm 16pcs	C  M6*55mm 1pc
D  Ø28*11mm 4pcs	E  M4 1pc	F  1pc
G  4pcs	H  2pcs	I  2pcs

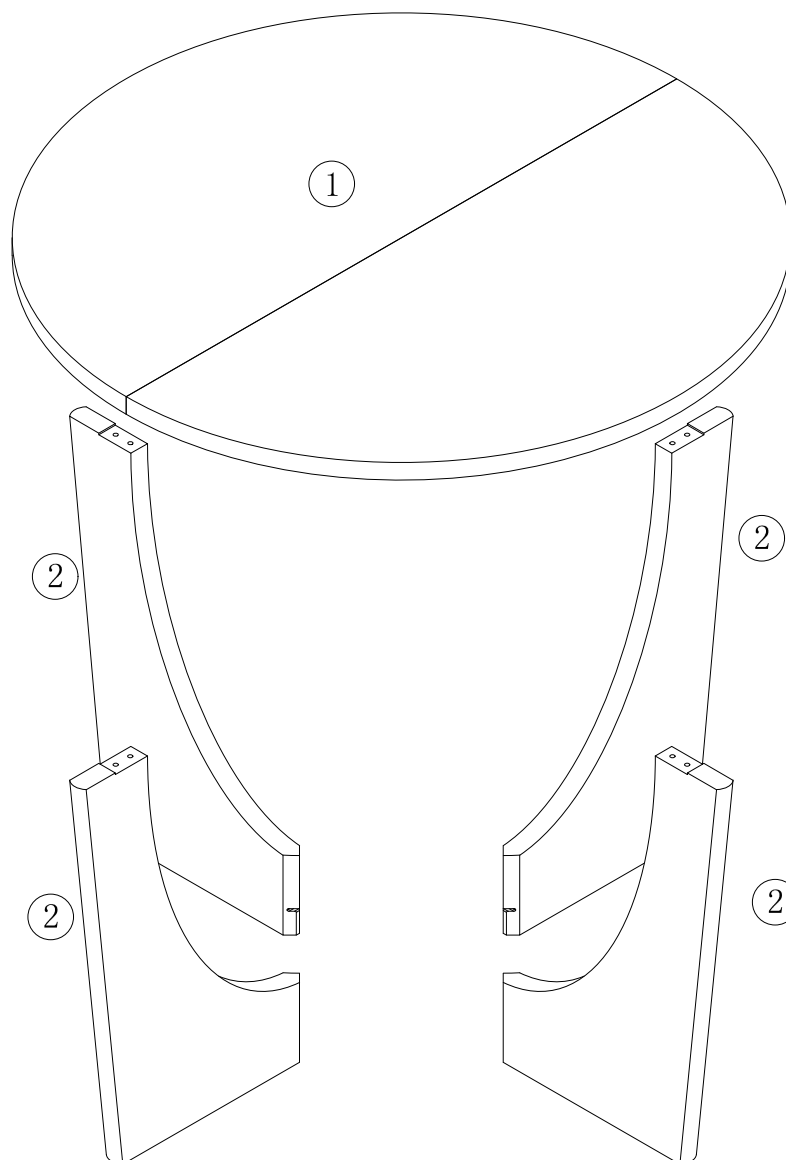

STEP 1

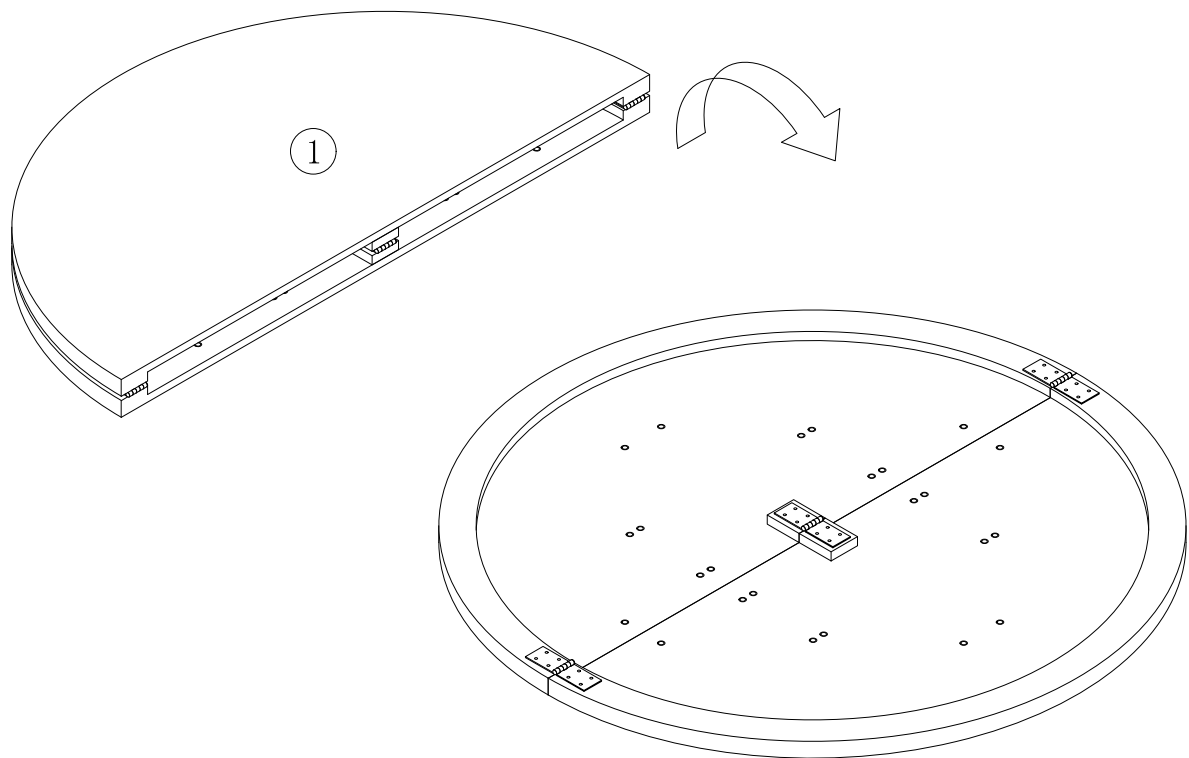


STEP 2

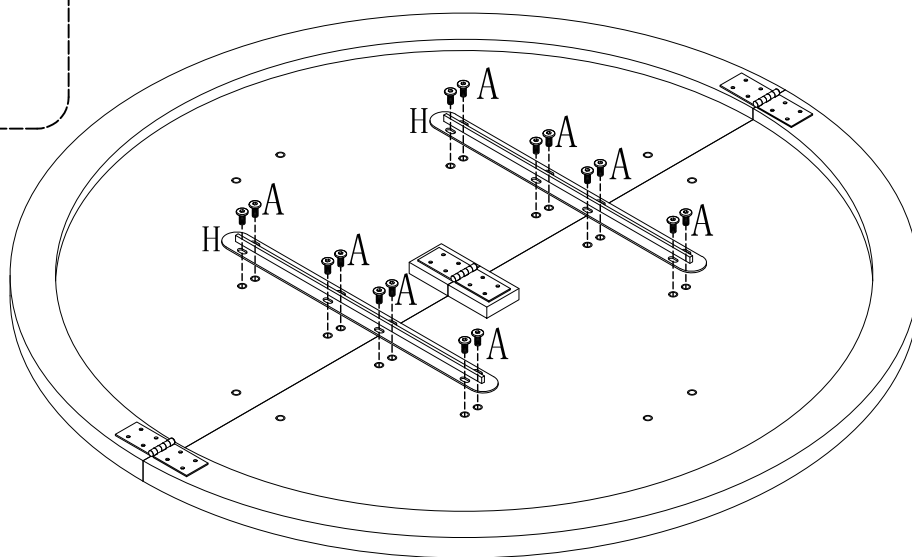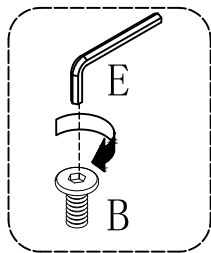


	A x 16pcs
	H x 2pcs

STEP 3

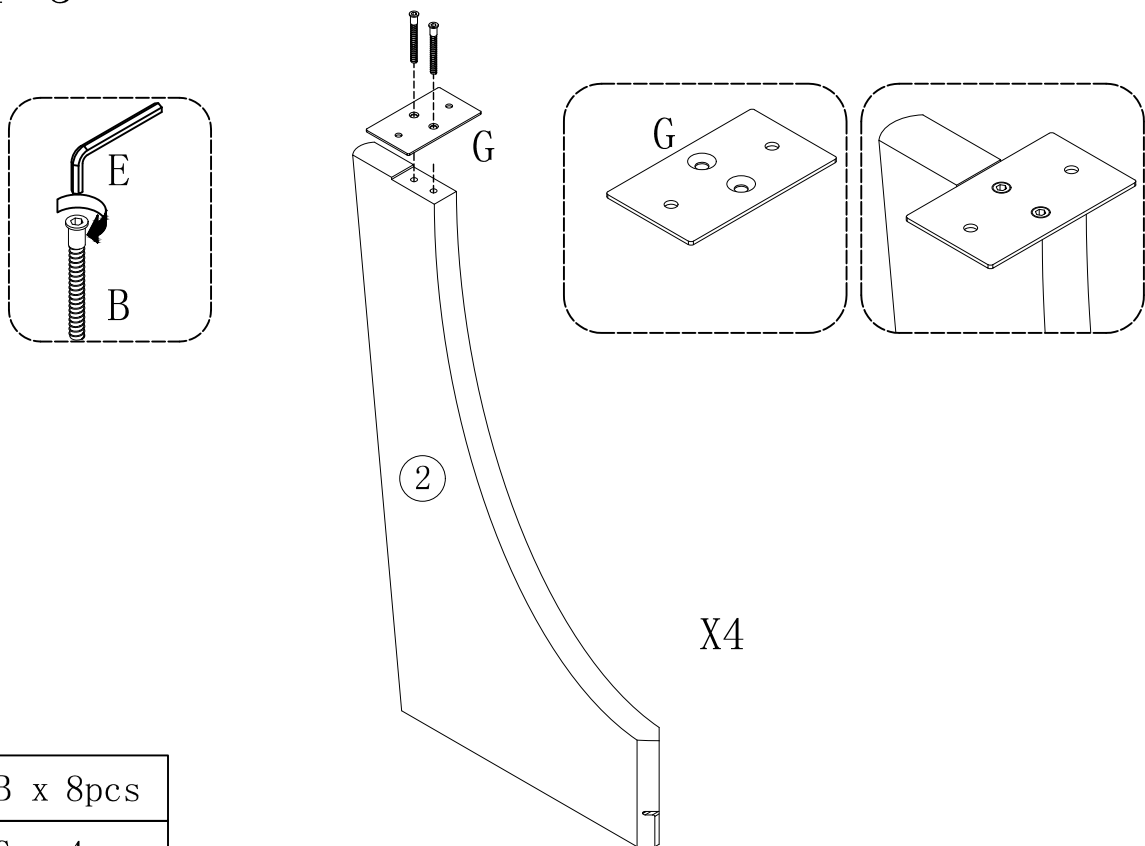




	B x 8pcs
	G x 4pcs

STEP 4

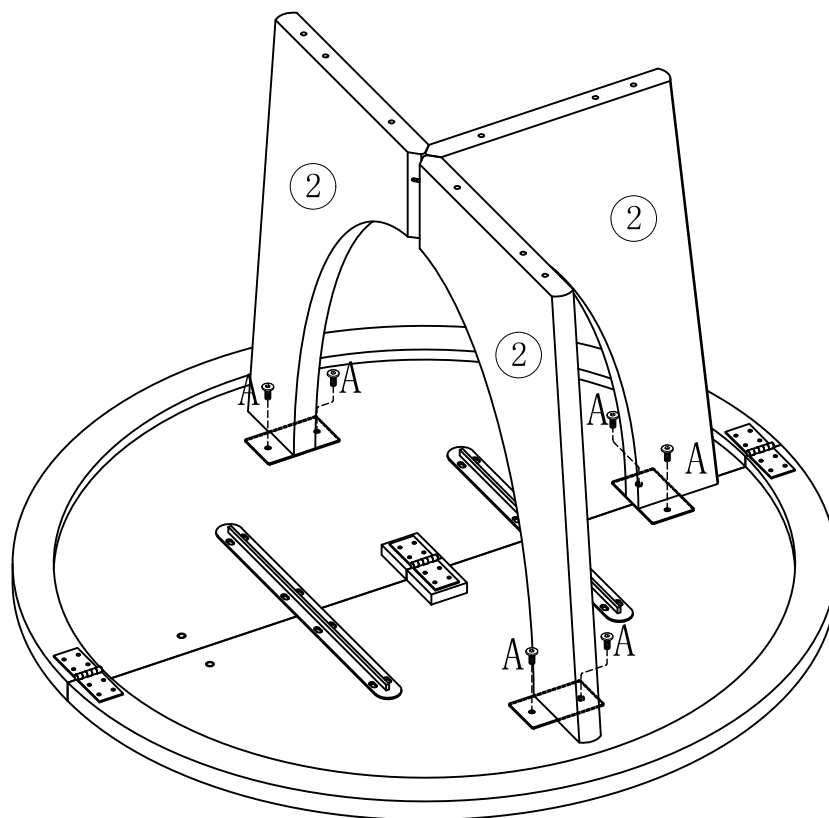


	A x 6pcs
---	----------

STEP 5

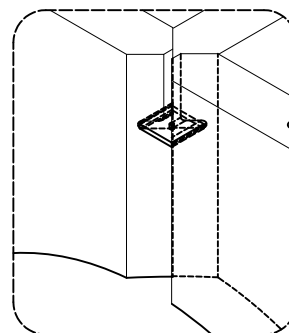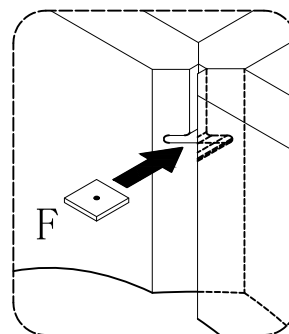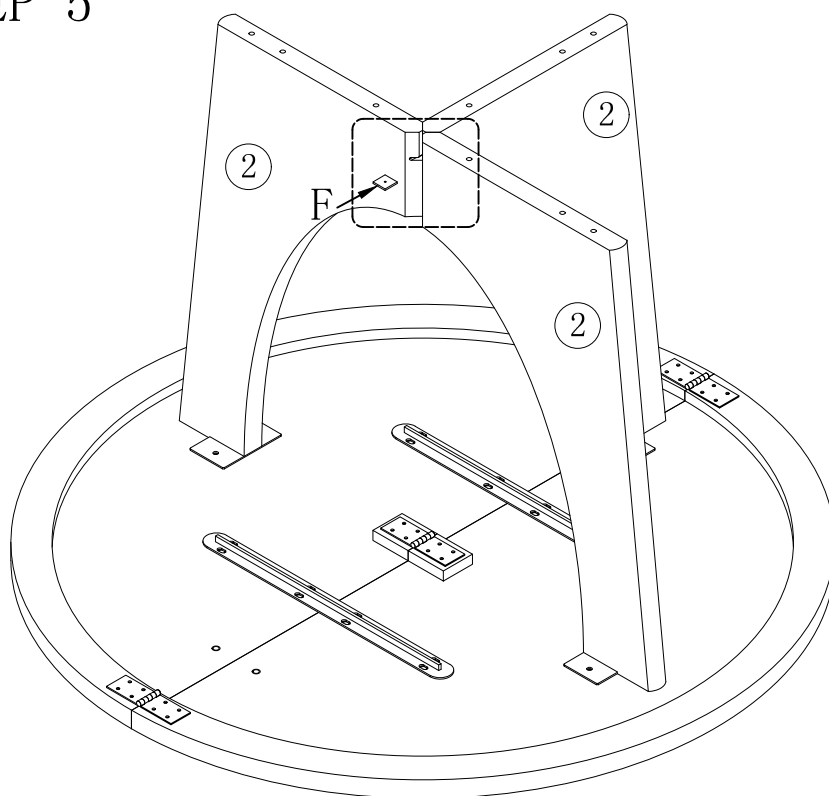


F x 1pc


STEP 6

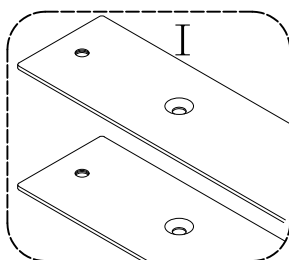

Attache the 2pcs "I" with part "C" and connect to part "F", please note DO NOT TIGHTEN the bolt yet.

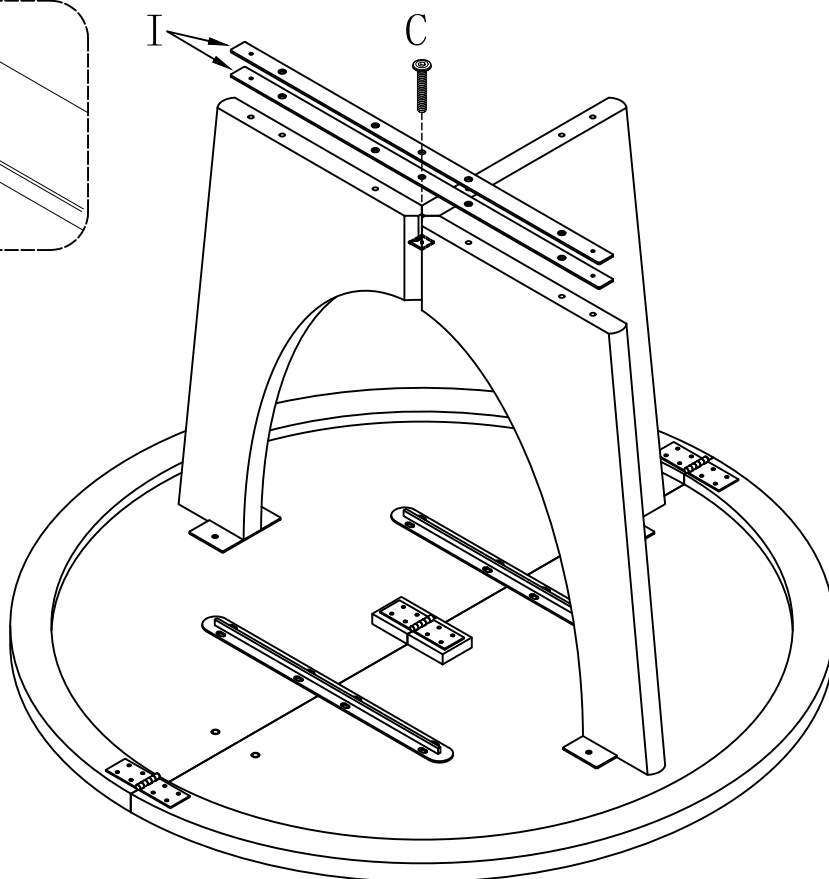


C x 1pc



I x 2pcs


STEP 7

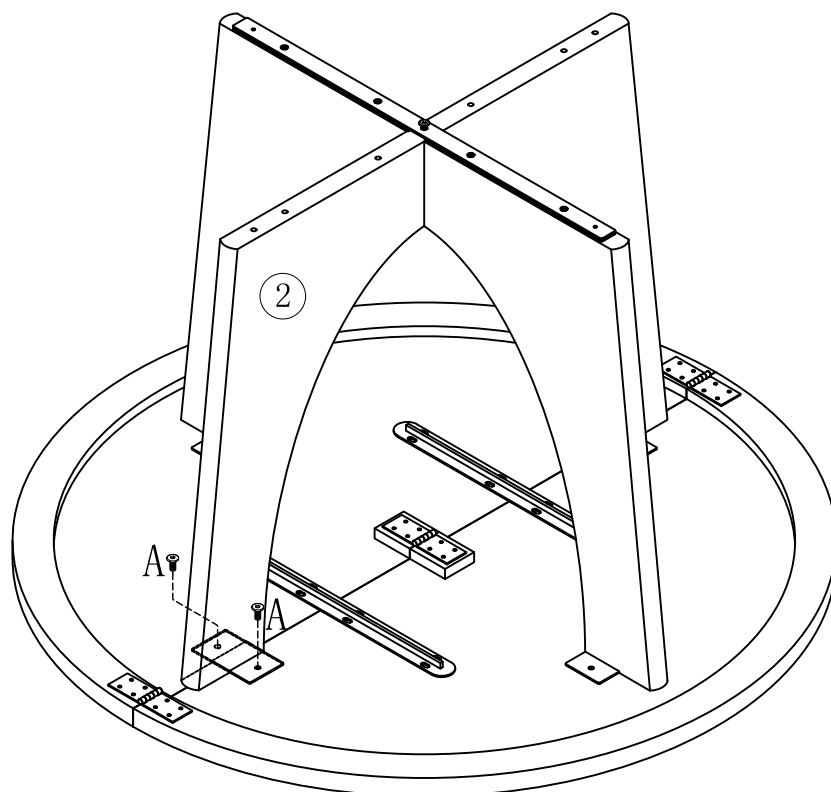

A x 2pcs


STEP 8

Rotate one of part
"I", ensure all holes
align with bottom of
table base

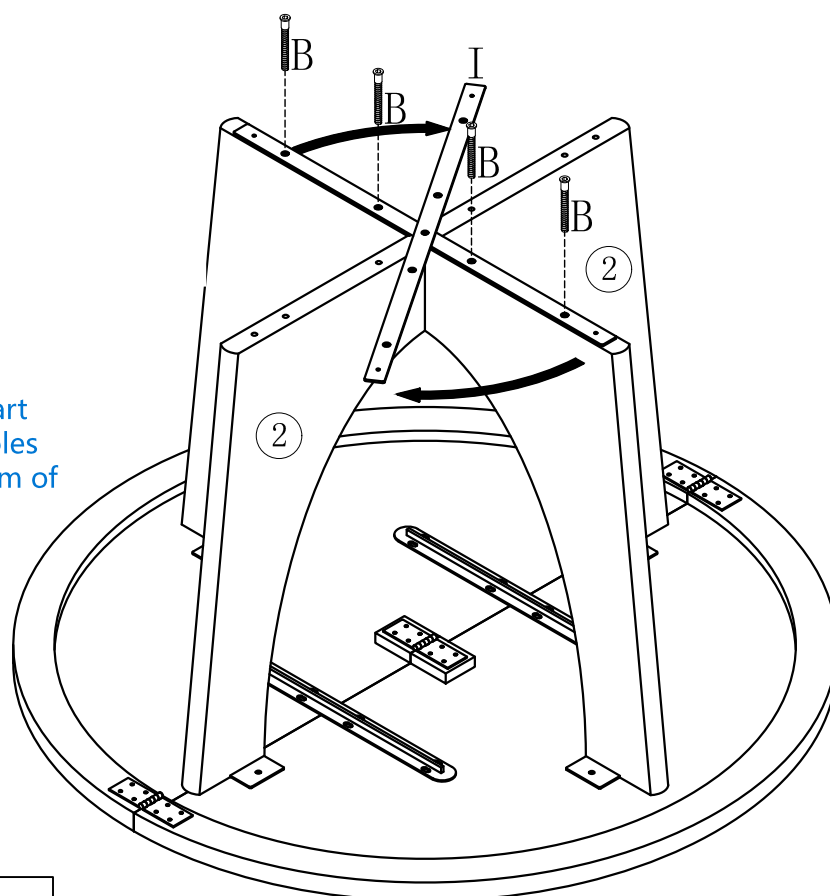



B x 4pcs

STEP 9

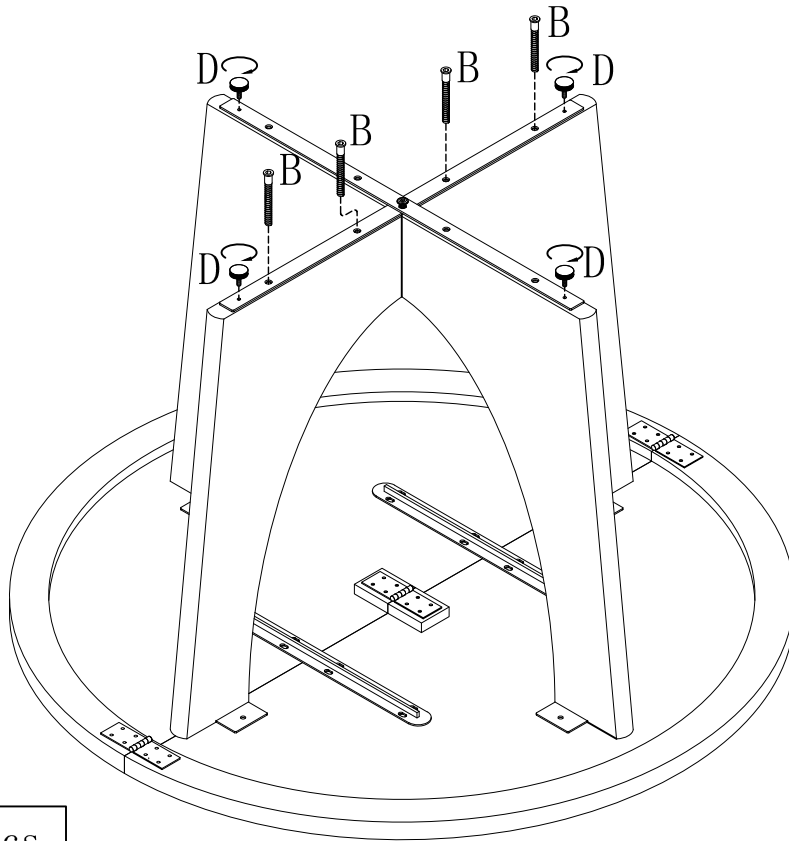

	B x 4pcs
	D x 4pcs

STEP 10

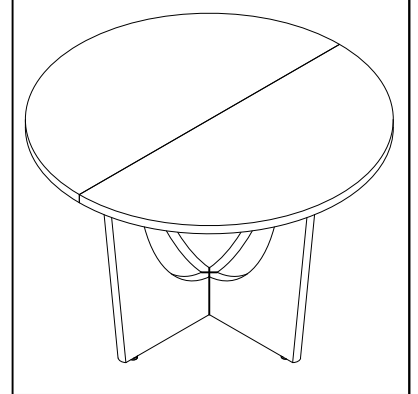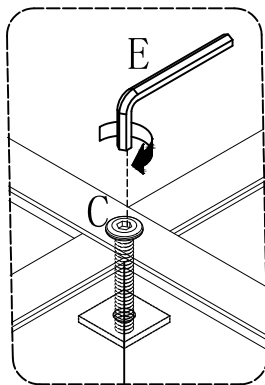

Again, use wrench E to tighten the C screw

