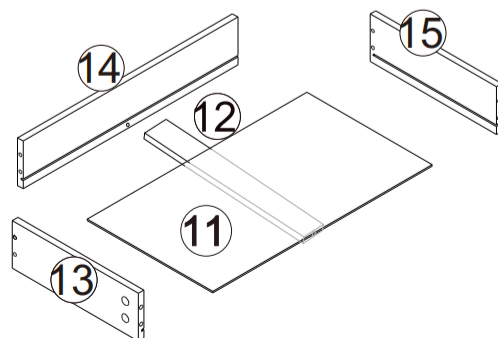
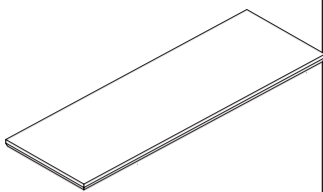
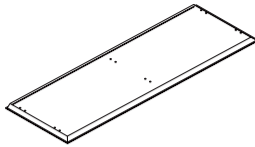



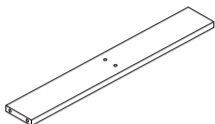



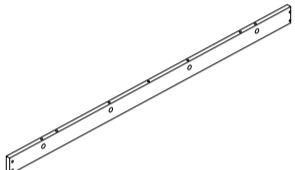


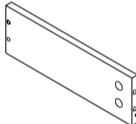
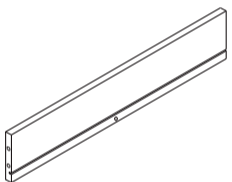
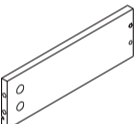
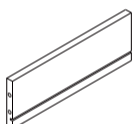




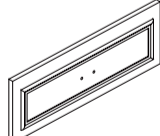
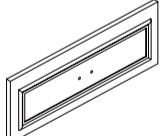
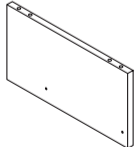


X4











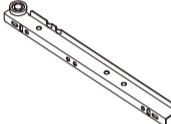
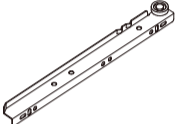



X6

Parts and Operation Elements

			
① 1pc	② 1pc	③ 1pc	④ 1pc
			
⑤ 1pc	⑥ 2pcs	⑦ 2pcs	⑧ 2pcs
			
⑨ 2pcs	⑩ 2pcs	⑪ 6pcs	⑫ 6pc
			
⑬ 10pcs	⑭ 6pcs	⑮ 10pcs	⑯ 4pcs
			
⑰ 4pcs	⑱ 1pc	⑲ 2pcs	⑳ 1pc
			
㉑ 2pcs	㉒ 2pcs	㉓ 2pcs	





Hardware

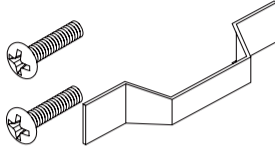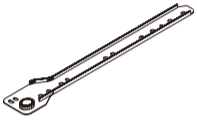 Cam bolt		 Cam Lock		 6x30mm Wood dowel		 4x30mm screw	
A	78+2pcs	B	78+2pcs	C	38+2pcs	D	46+2pcs
 3x16MM		 3x12mm screw		 10pcs		 Anti-dumping device	
E	8pcs	F	80+3pcs	G	10pcs	H	2pcs
 300MM		 300MM		 300MM		 300MM	
CL	10pcs	CR	10pcs	DL	10pcs	DR	10pcs
 4x40mm screw							
I	10+1pcs						




SPARE BAG

THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

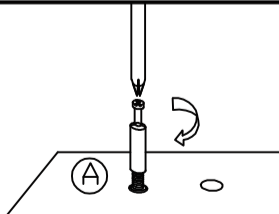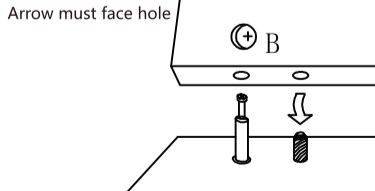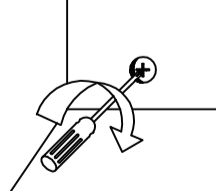							
Gently screw cam bolt into the threaded anchor.		Insert the wood dowel halfway into hole.		Arrow must face hole		Screw the camlock firmly into locked position.	

1

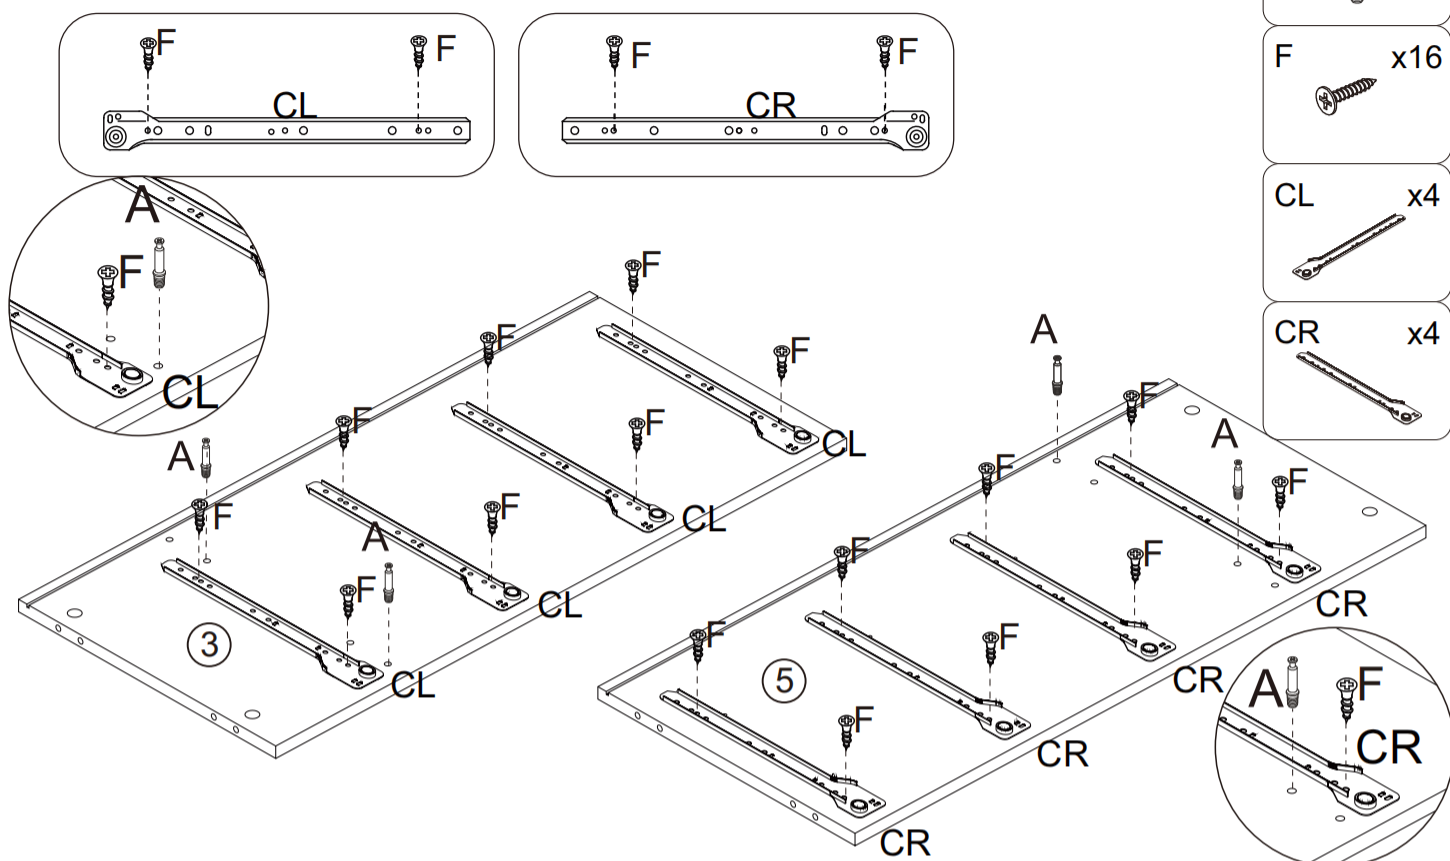


A x4

F x16

CL x4

CR x4

2






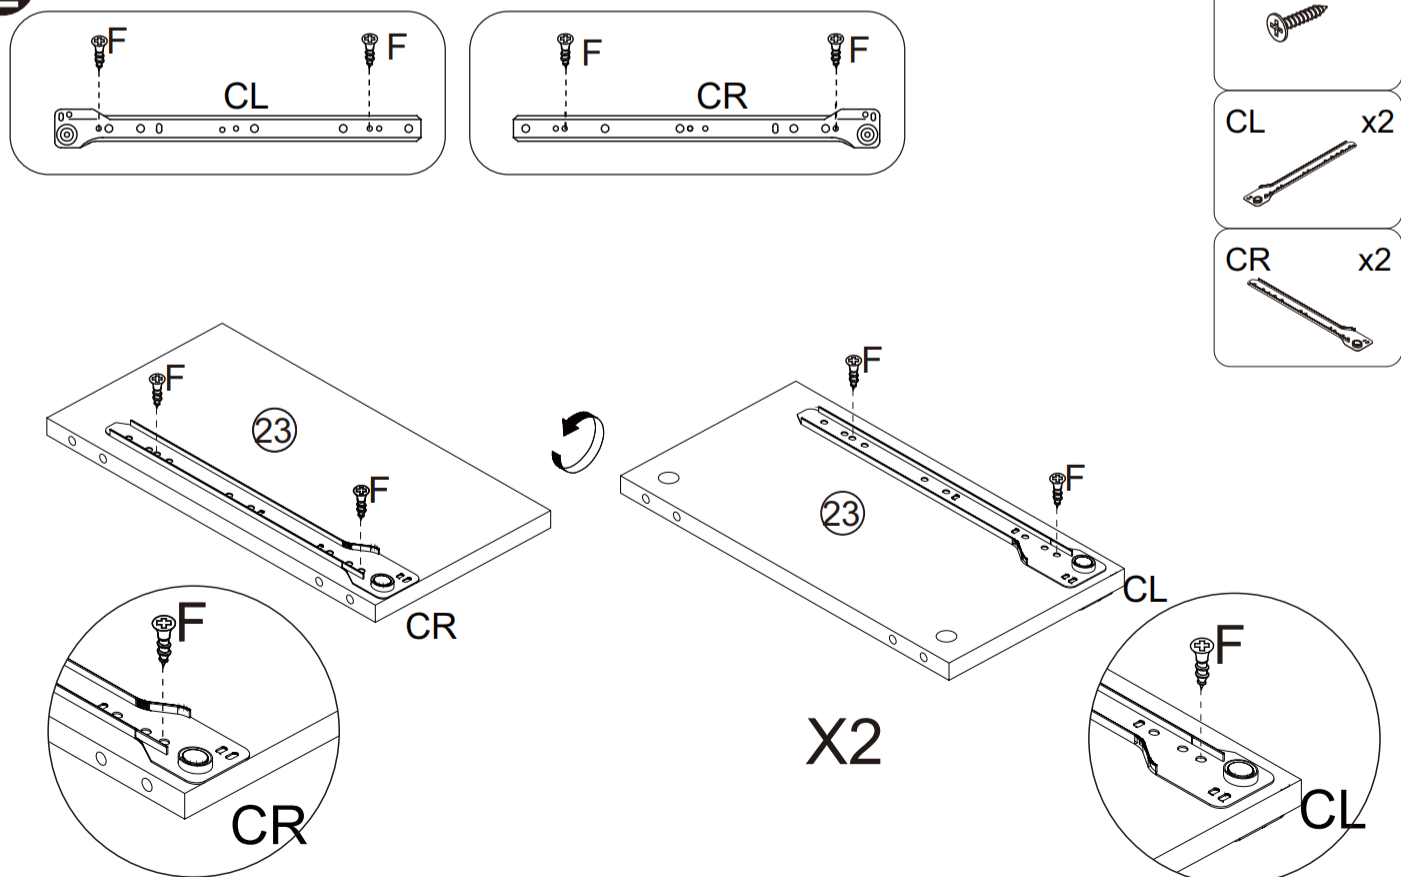


F x8




CL x2

CR x2



3

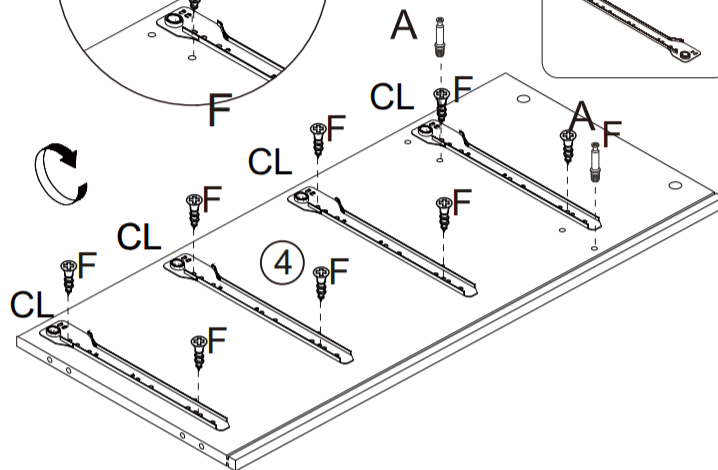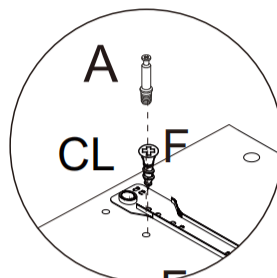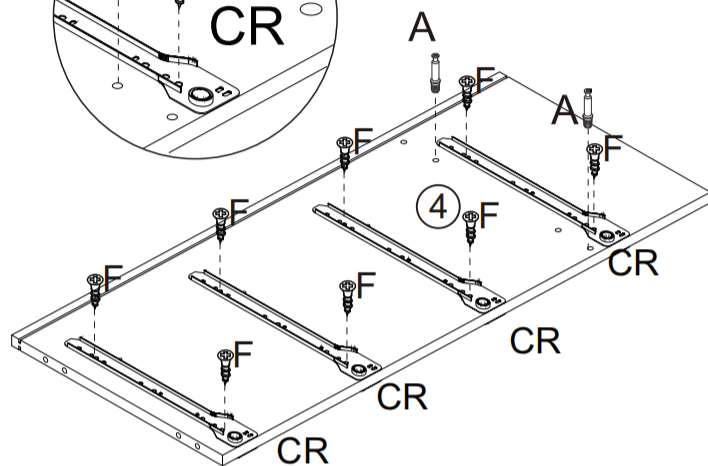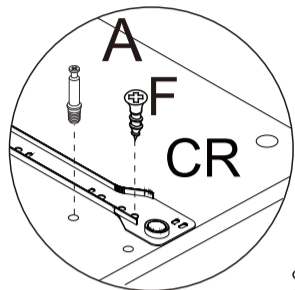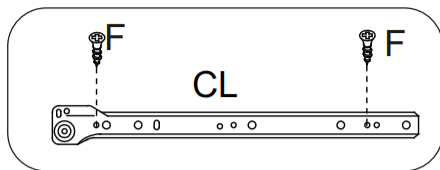



4

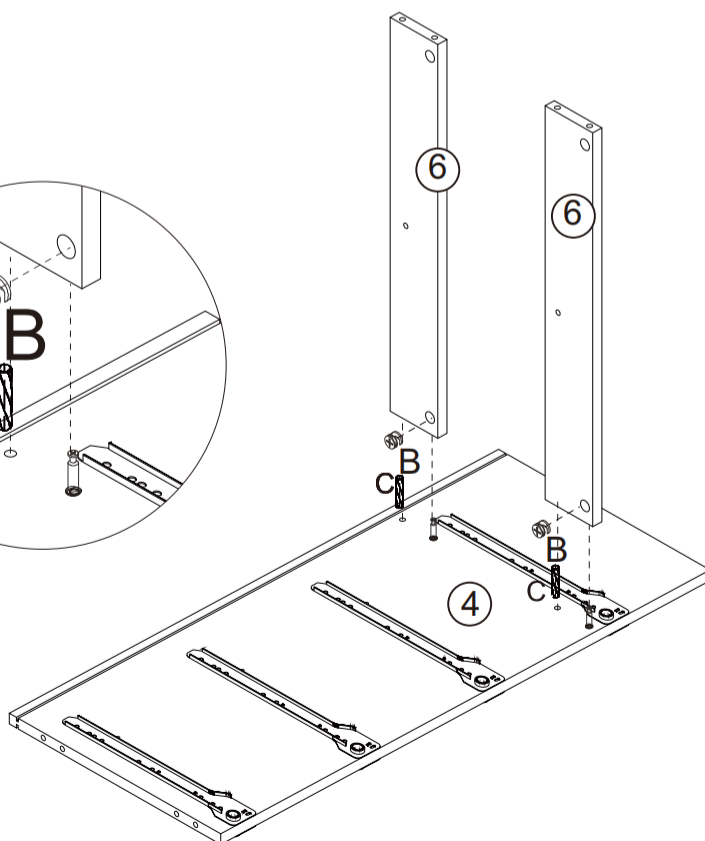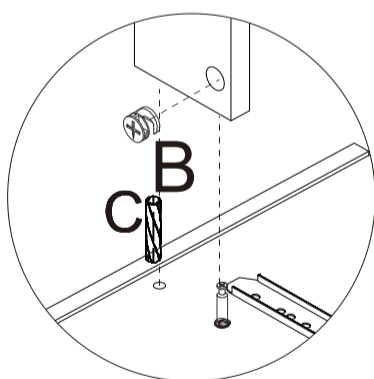


5

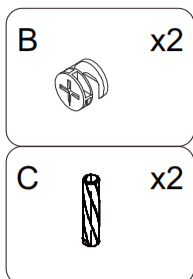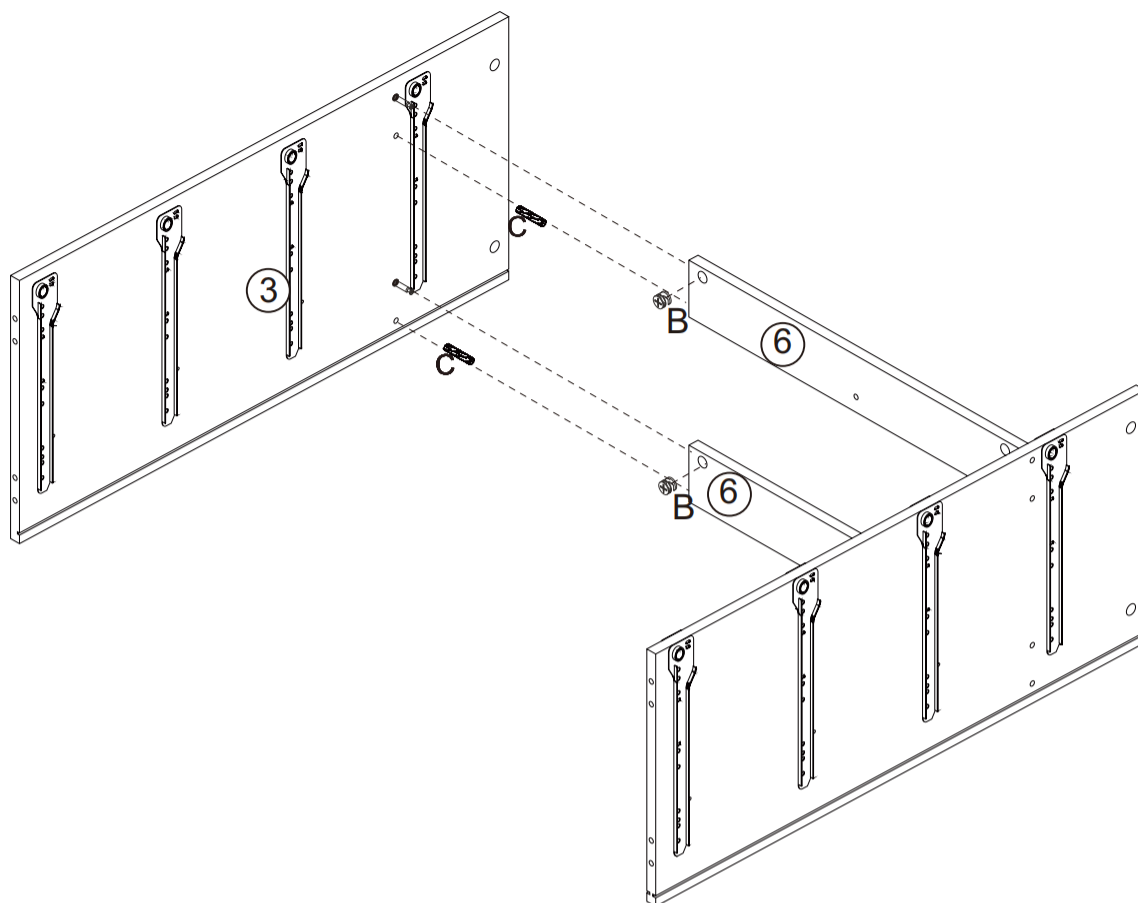

6

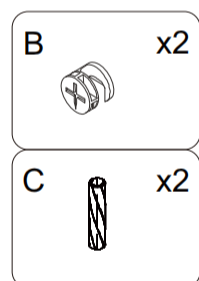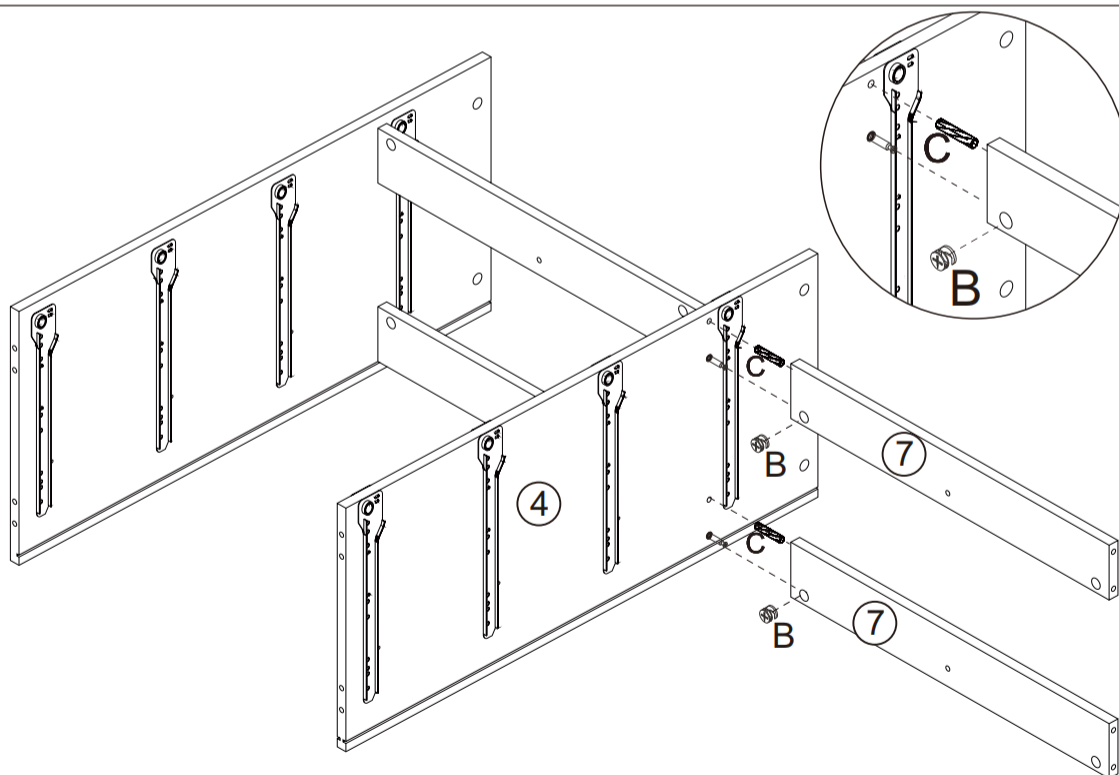


7

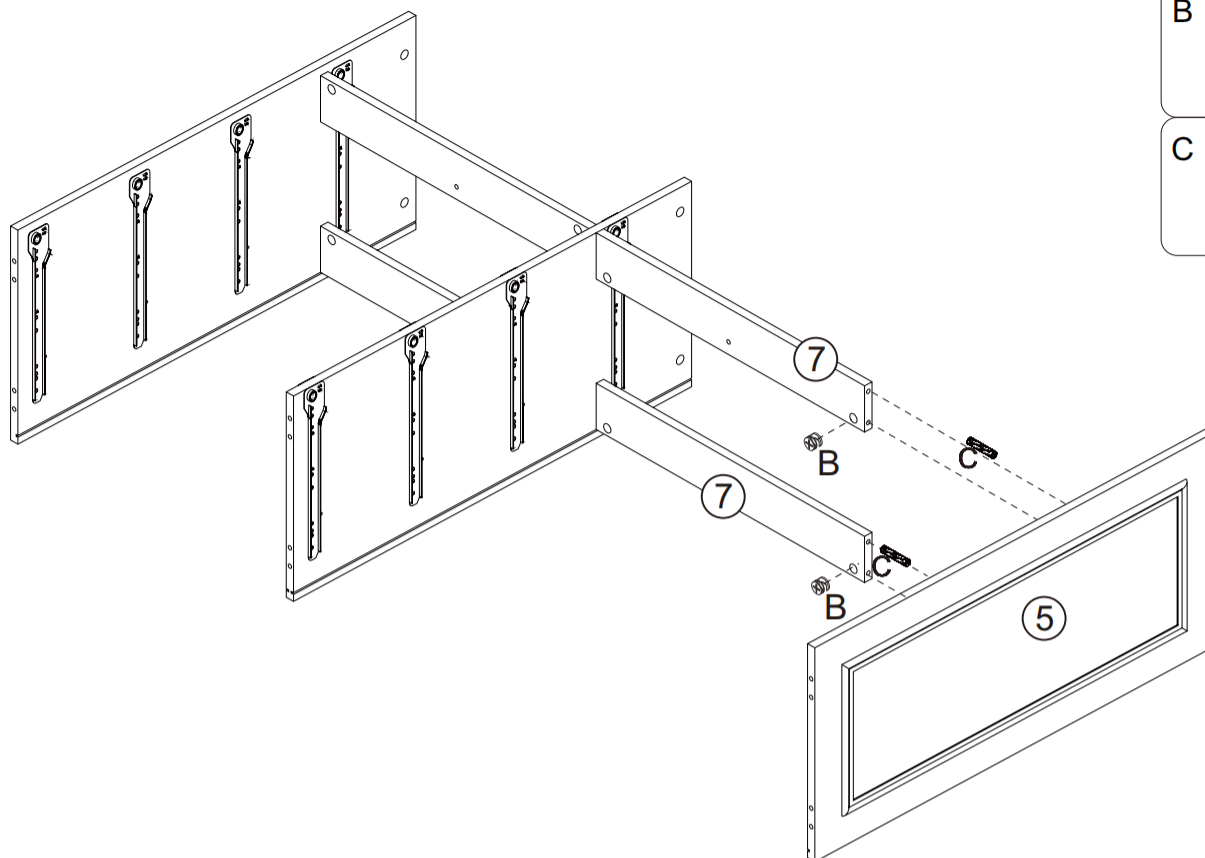

B x2

C x2


8

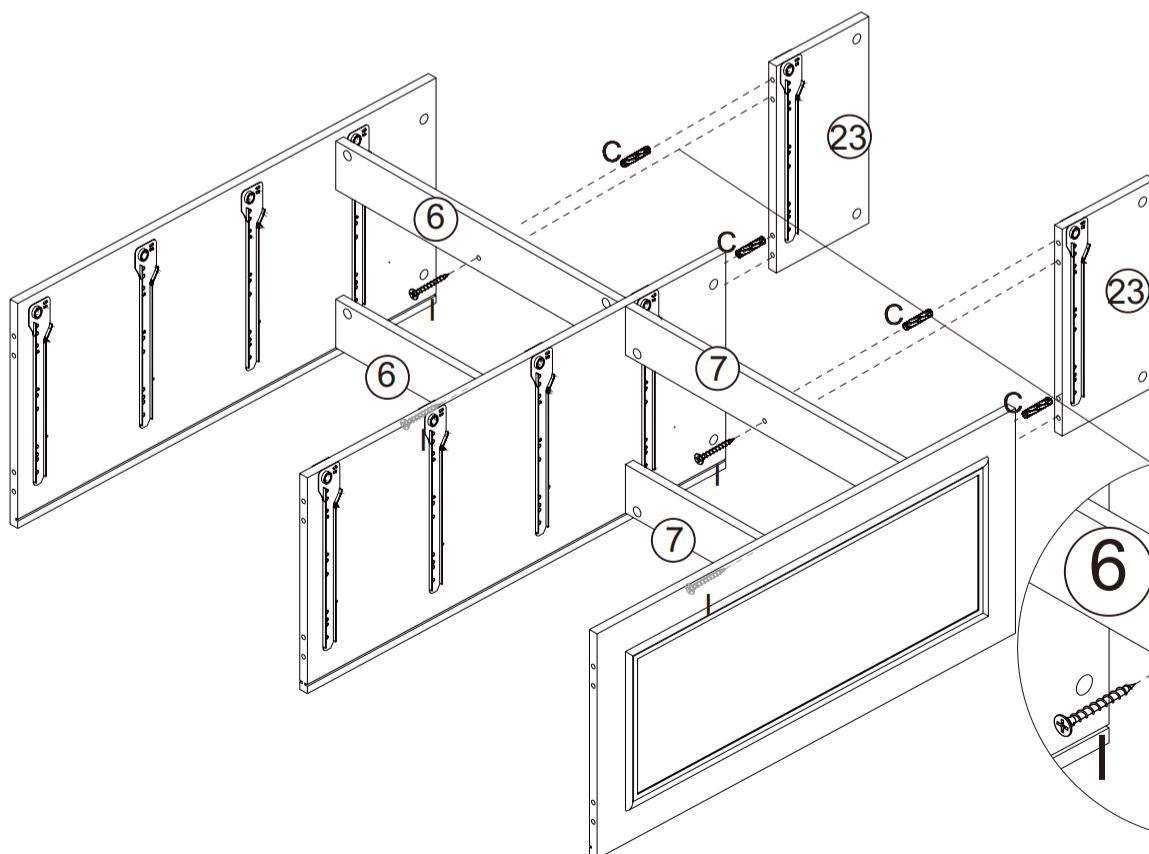

C x4


I x4

9

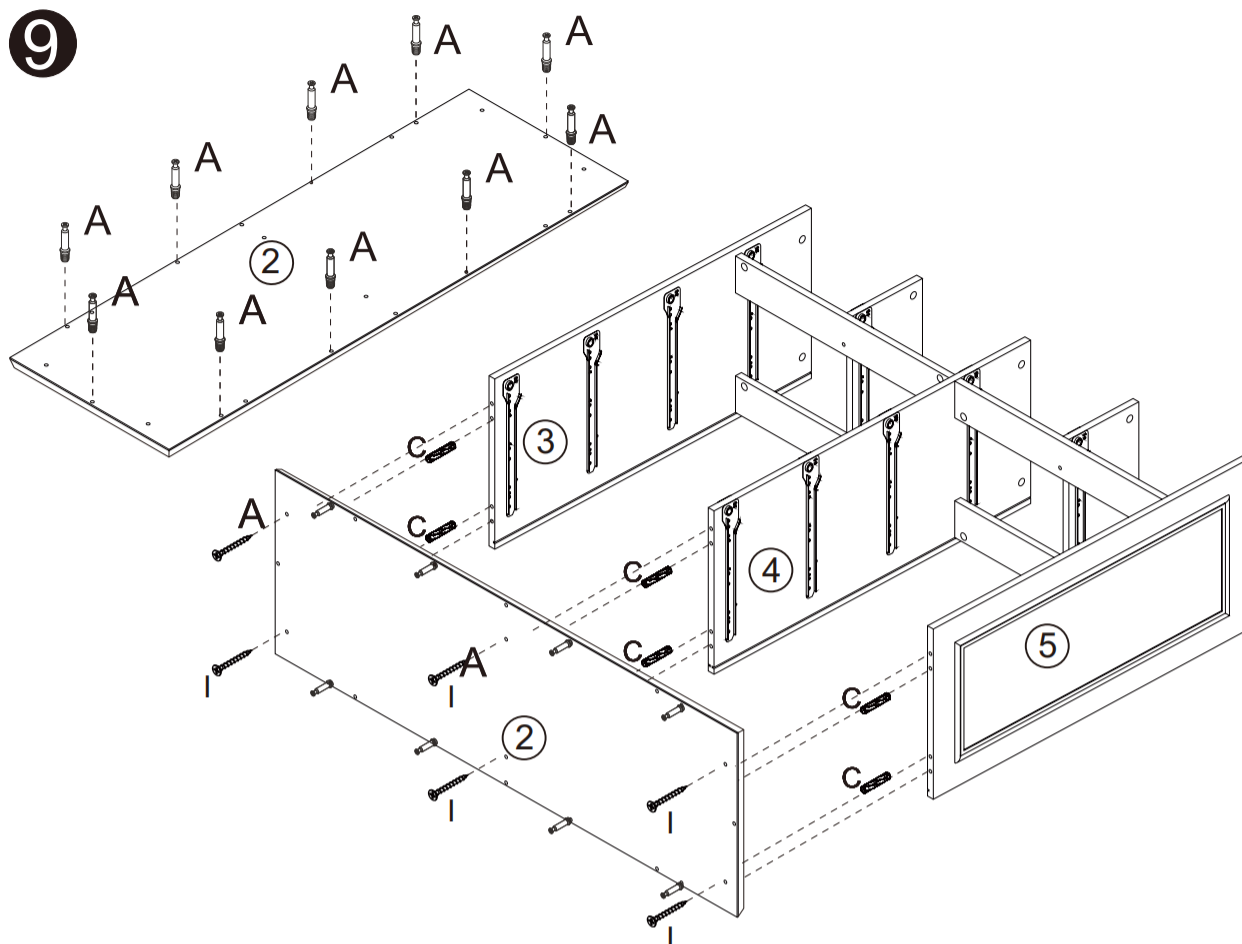


- A x10
- I x6
- C x6

10

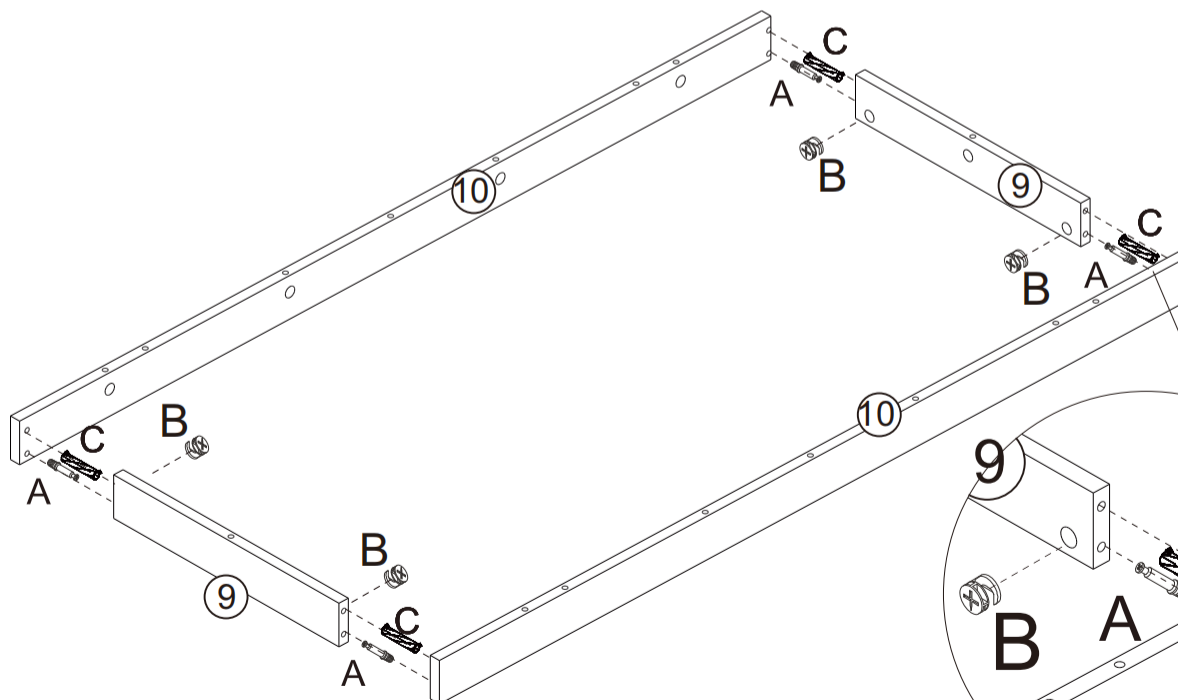

- A x4
- B x4
- C x4

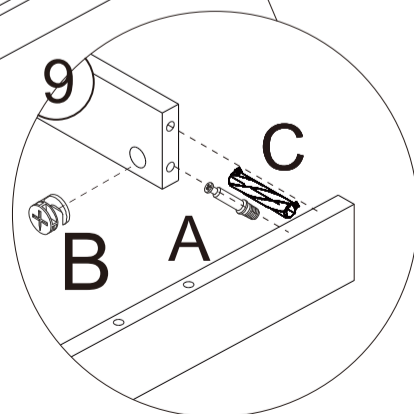


11


B x10




C x6

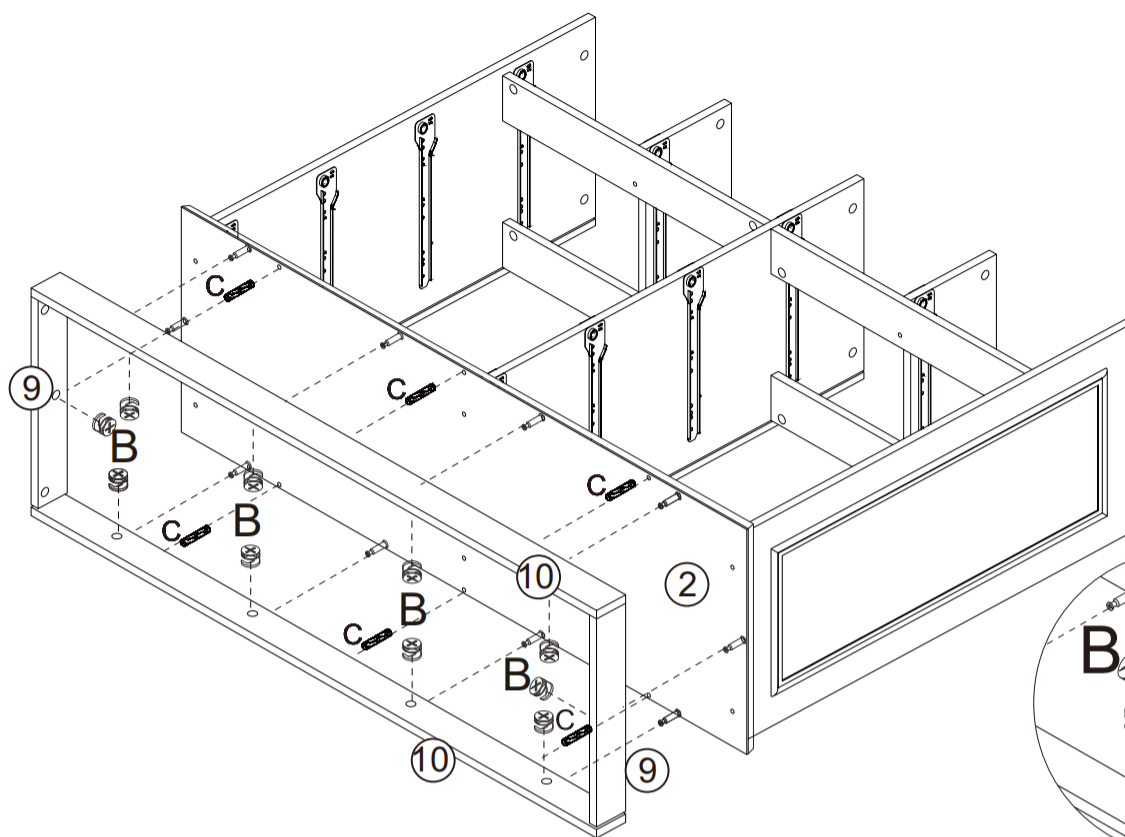



12

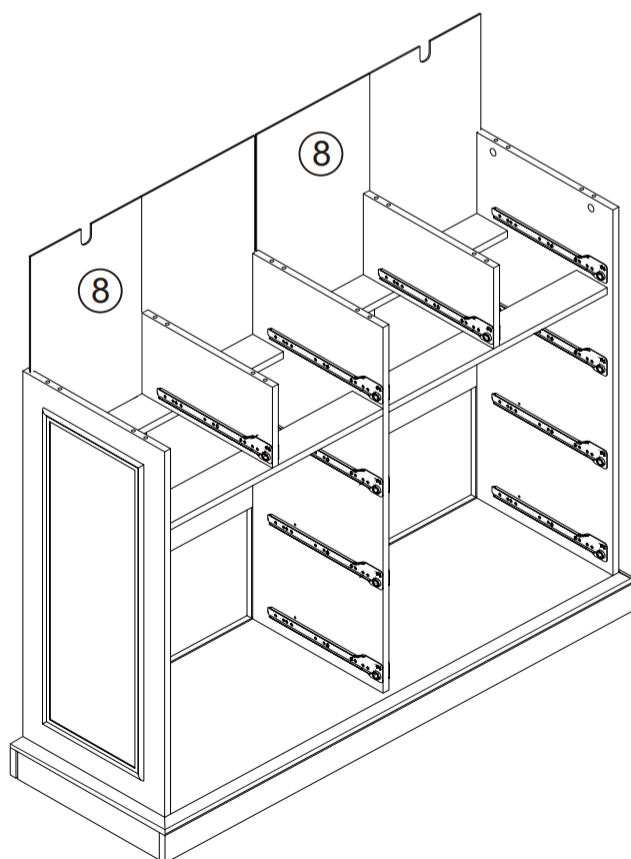





13

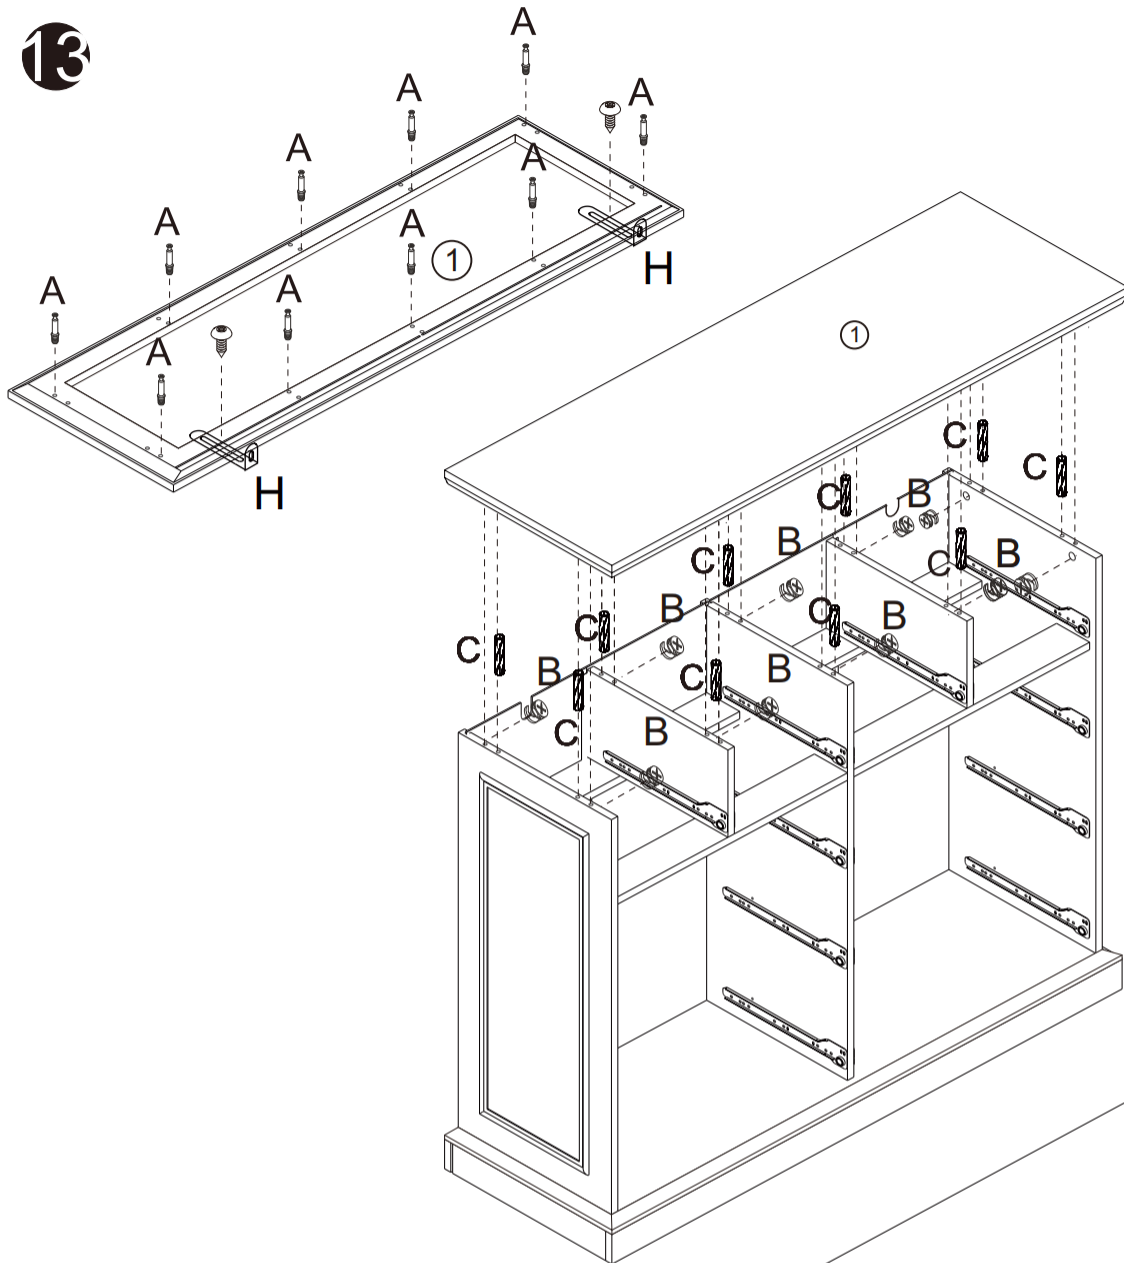



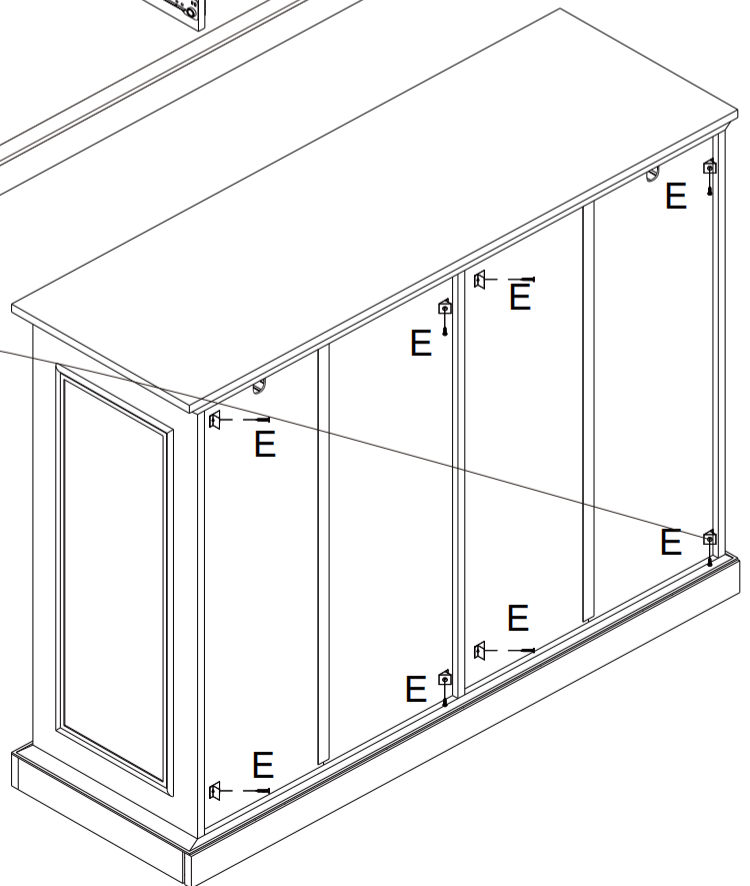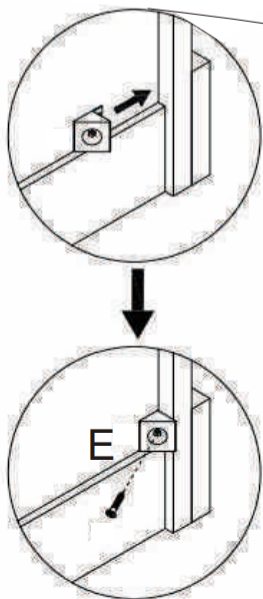

- A x10
- B x10
- C x10
- E x8
- H x2

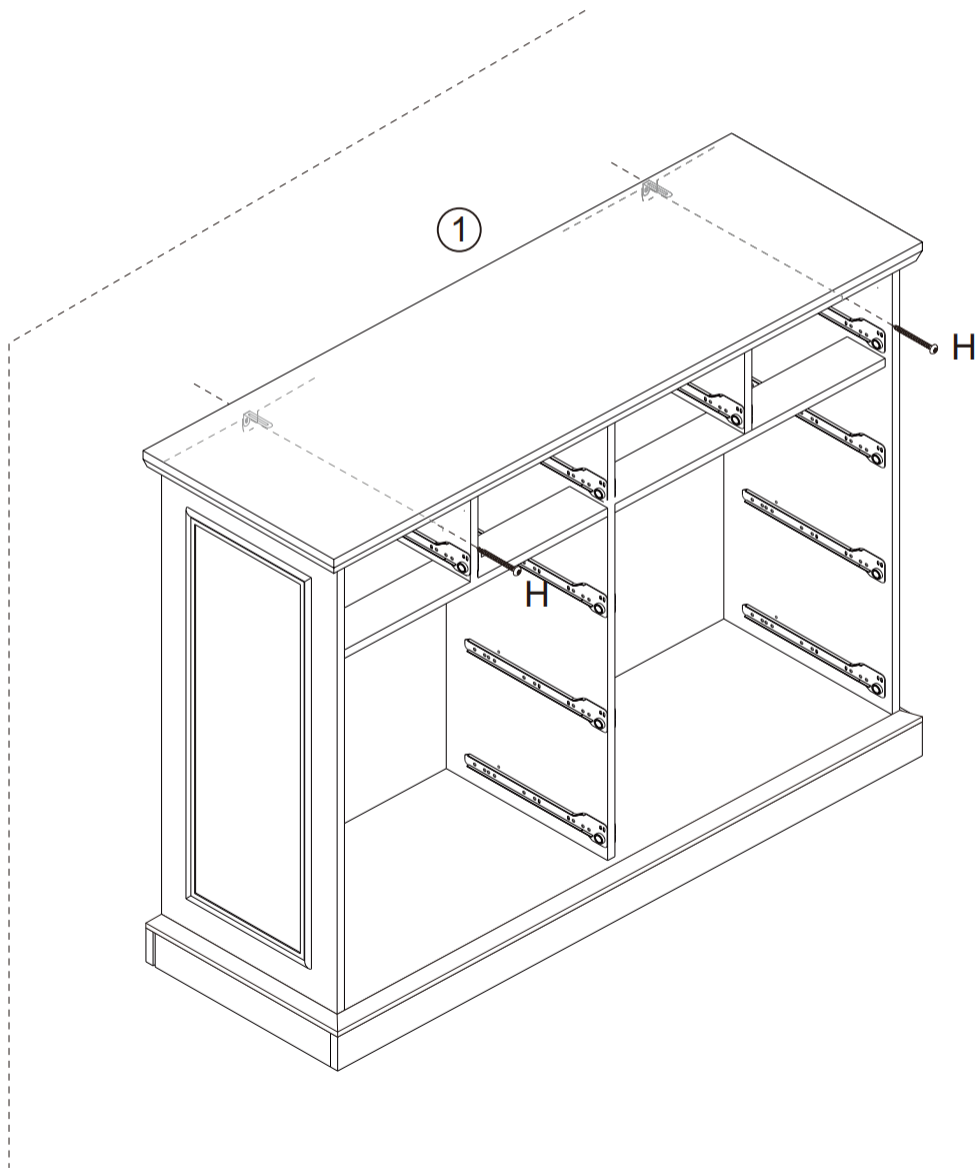
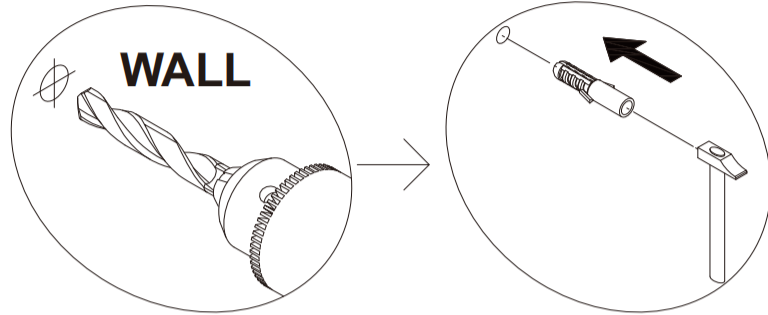
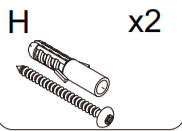
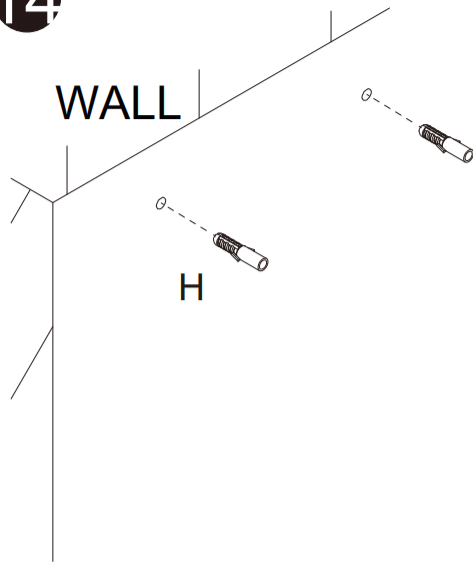


14





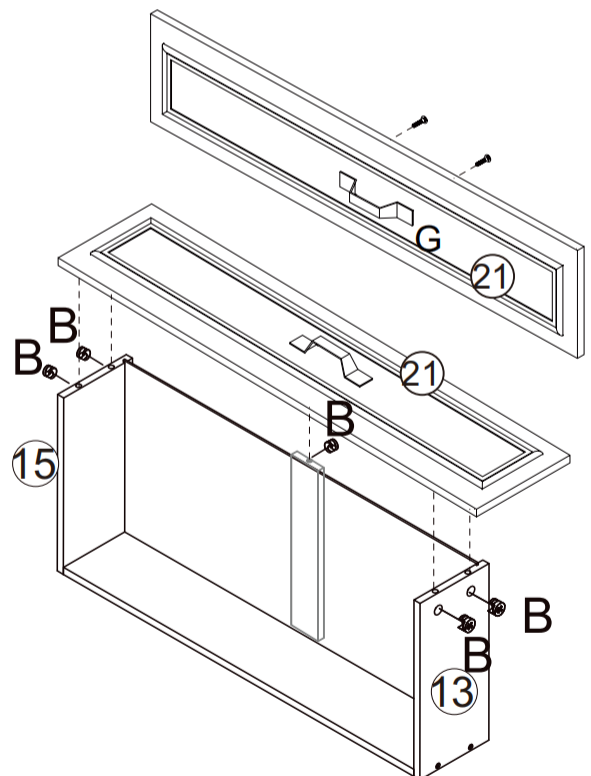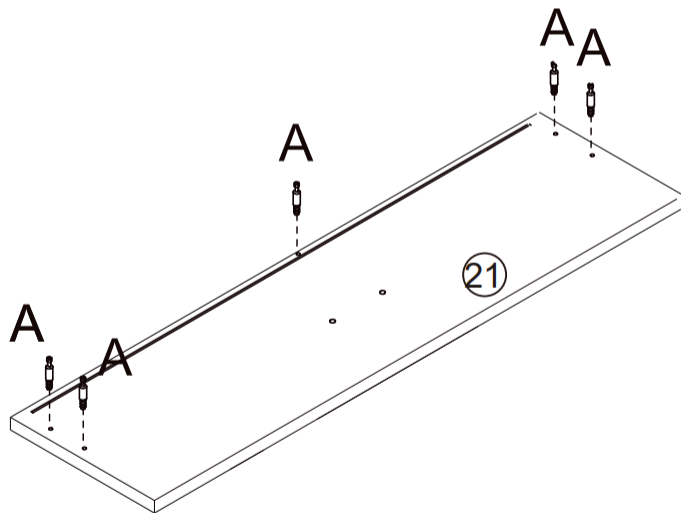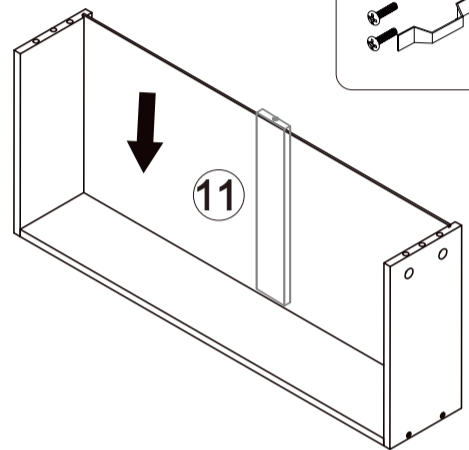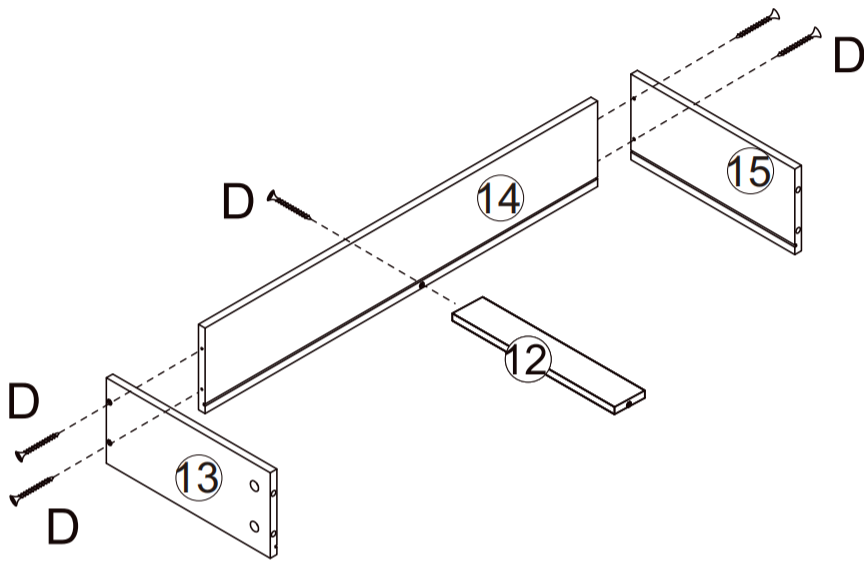

15





- A x15

- B x15

- D x15

- G x3

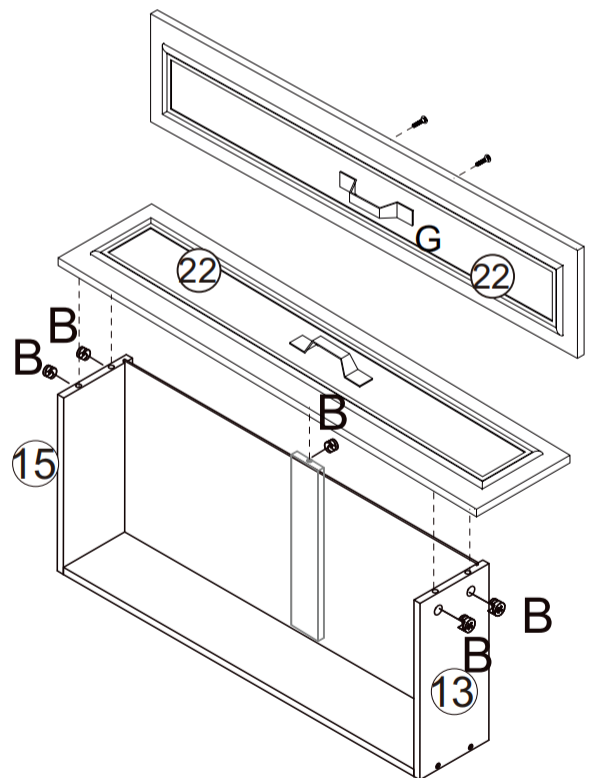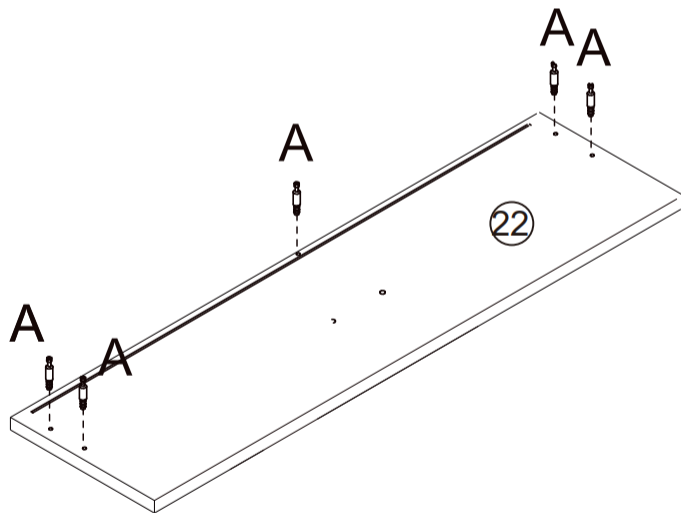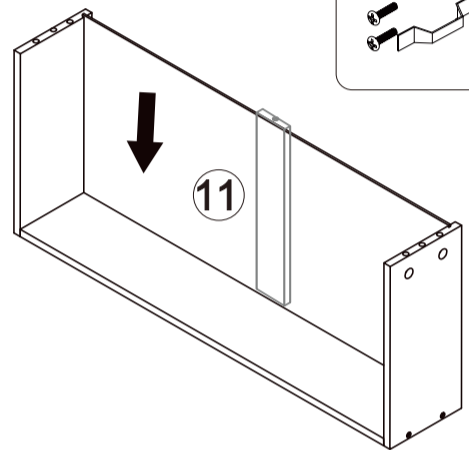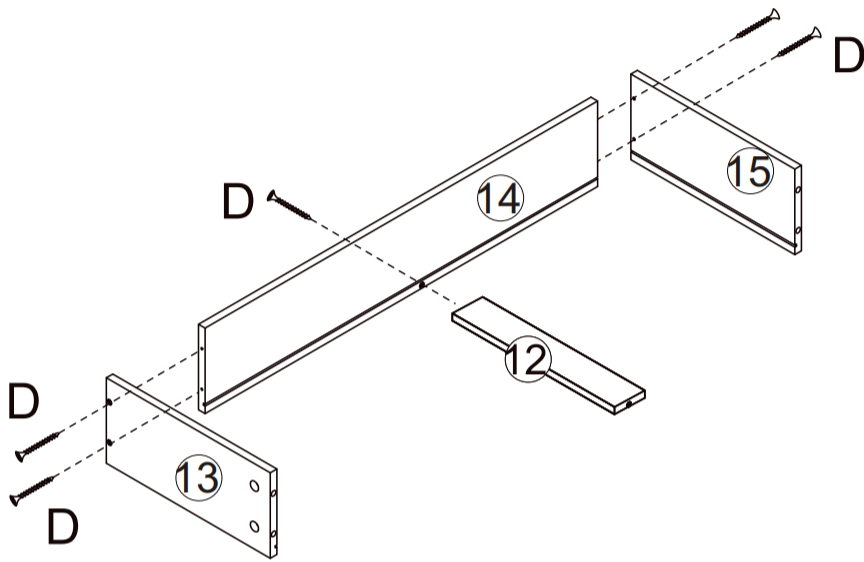


x3





16





- A x15

- B x15

- D x15

- G x3



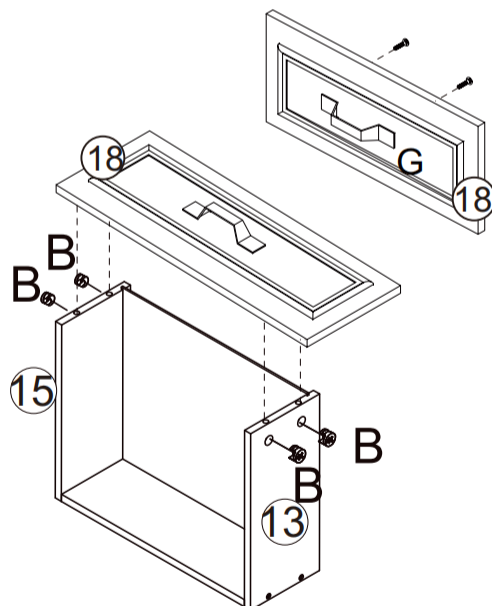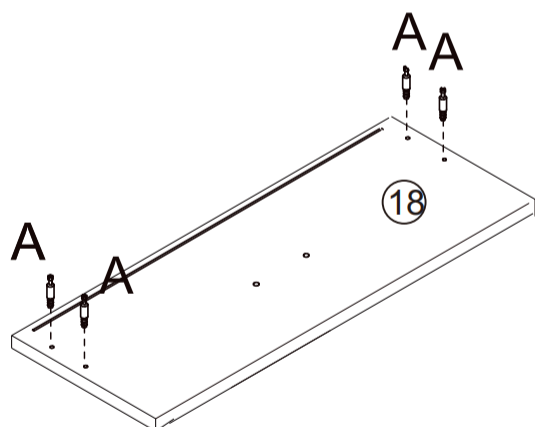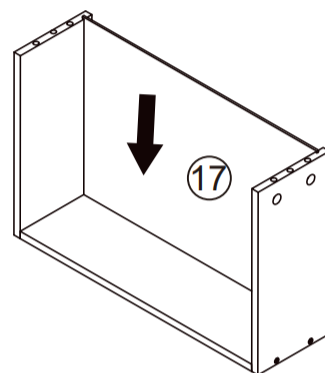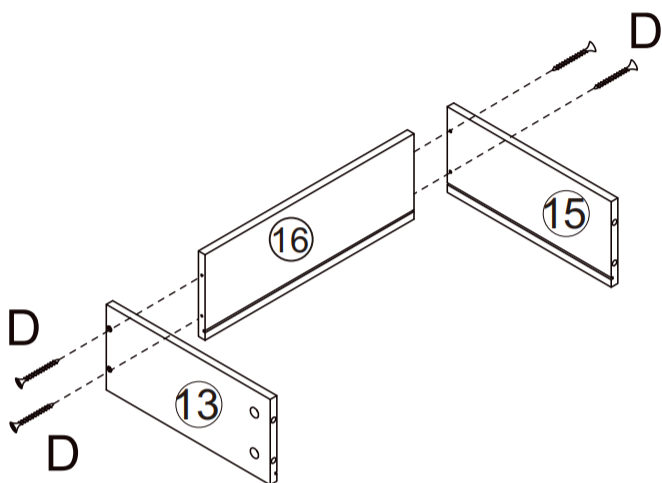




x3





17

- A x4

- B x4

- D x4

- G x1

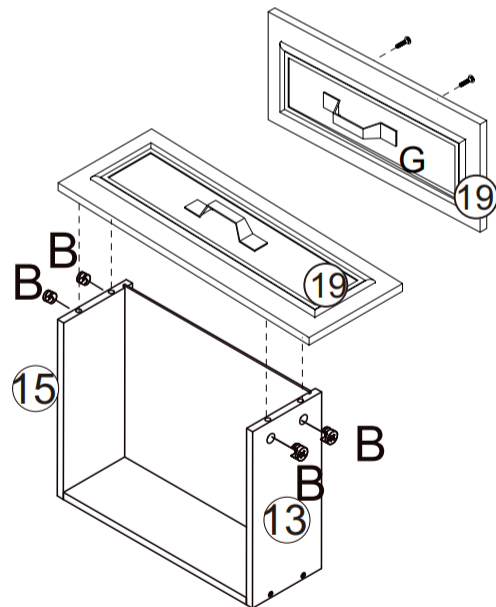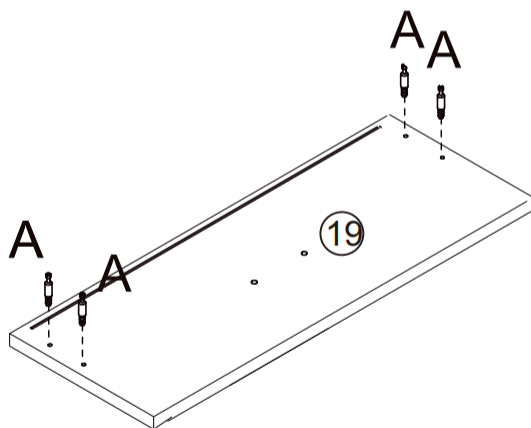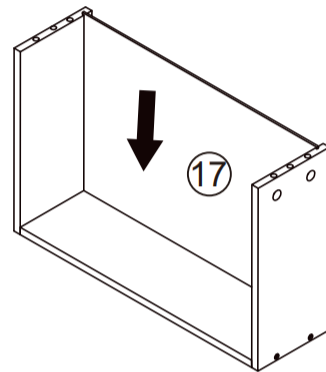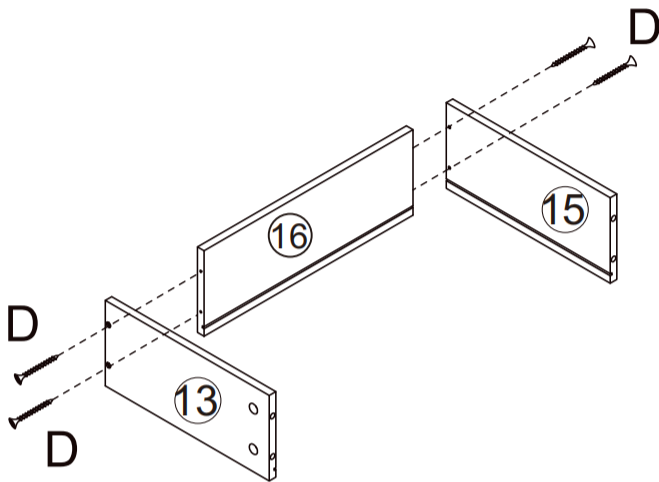










18

- A x4

- B x4

- D x4

- G x1

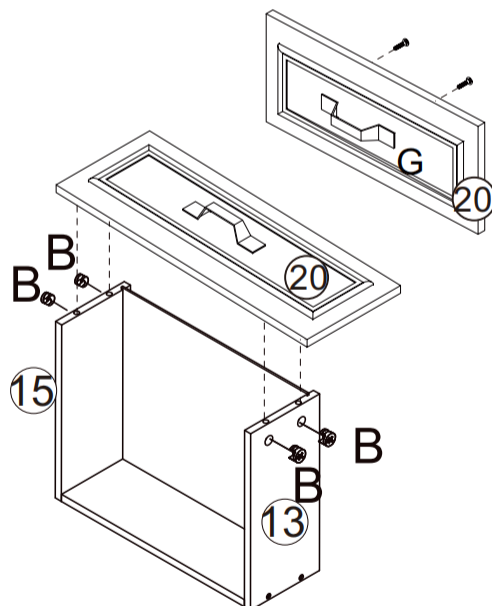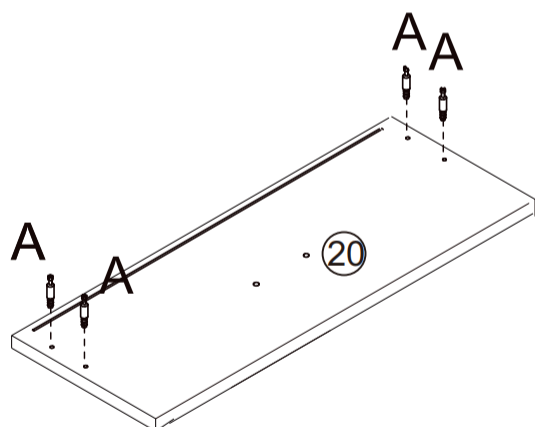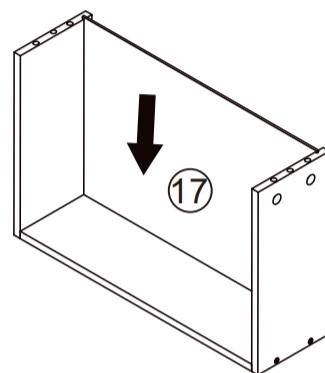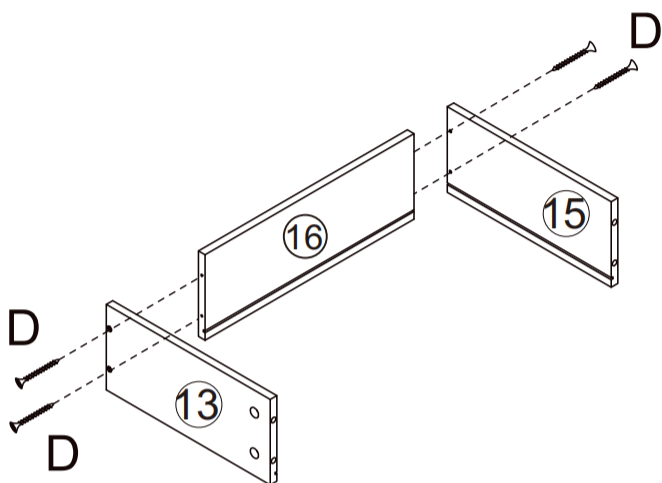


19

- A x8

- B x8

- D x8

- G x2


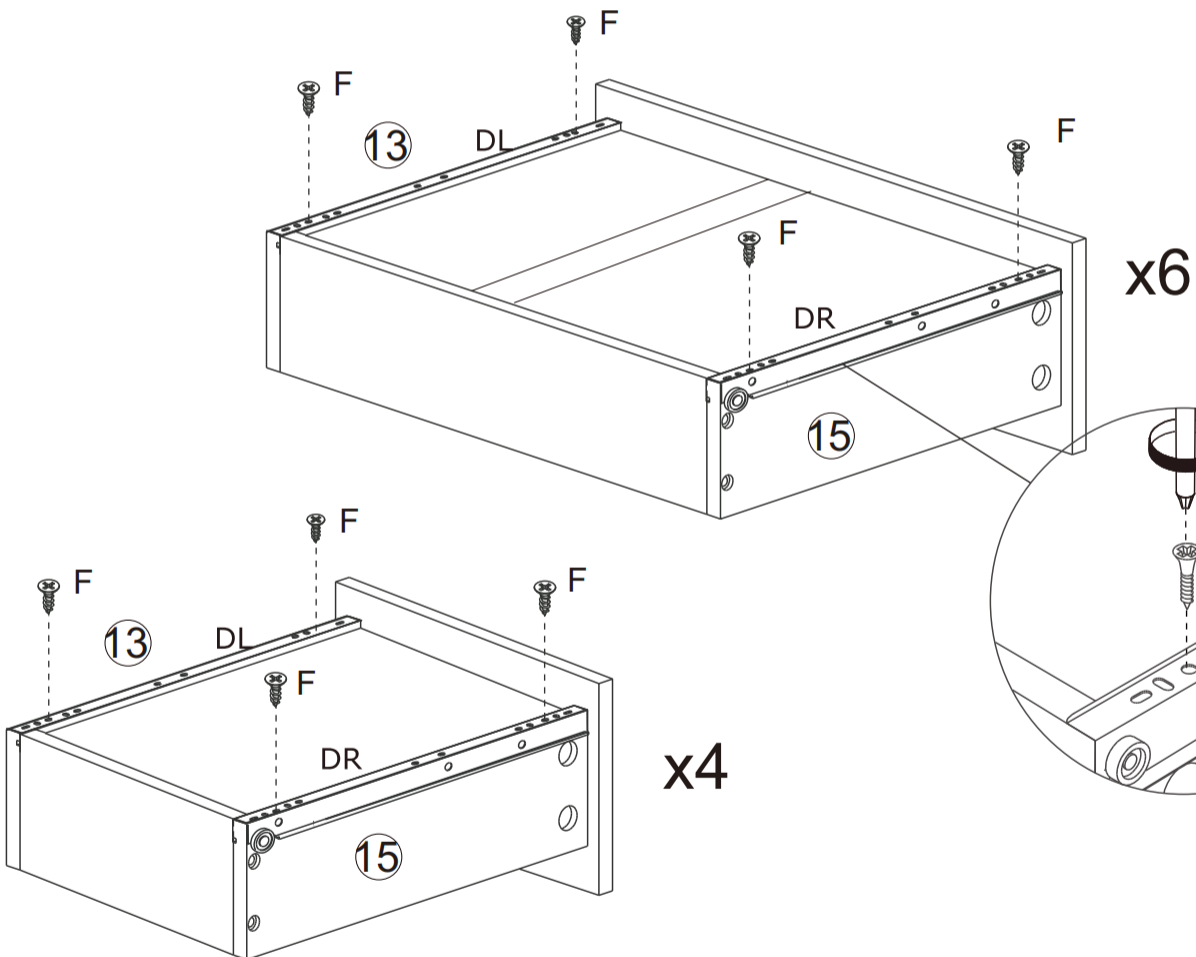
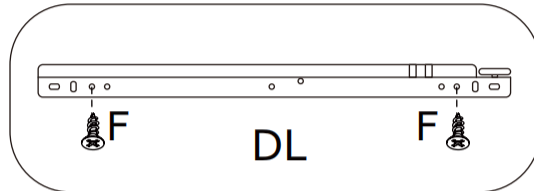
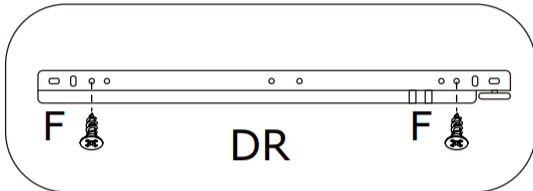


x2

F x40

DL x10

DR x10



21

