



Pmni anhua

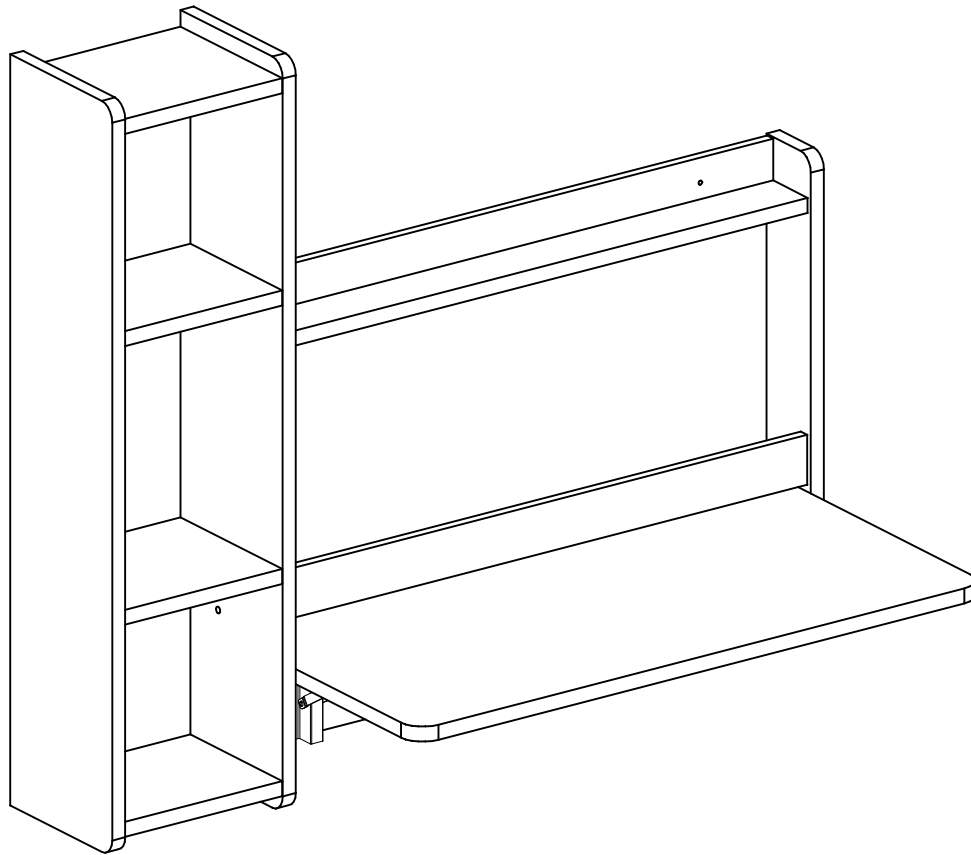


Installation wall requirements

Solid brick wall, load-bearing wall, fired hollow brick wall, wood board wall thickened insulation wall! It is not recommended to install gypsum board walls and thin plywood walls...! .

1.For solid brick walls, load-bearing walls, and fired hollow brick walls, we are equipped with 10mm wall fittings


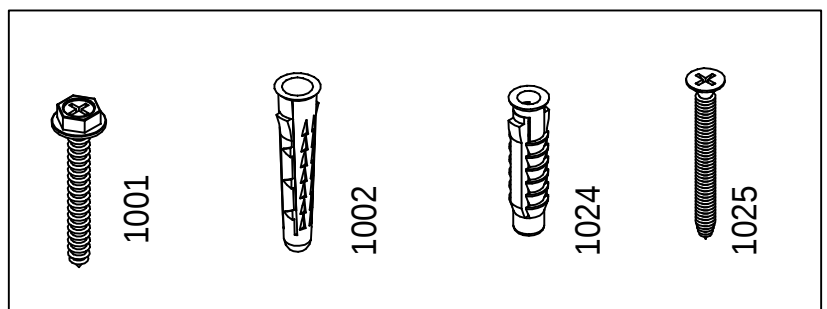


2.If it is a wooden wall (the thickness of the wooden board needs to be at least 15 mm), you need to buy automatic screws locally.




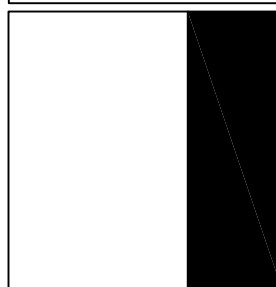



15mm



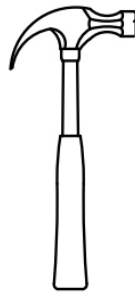

10mm 10mm

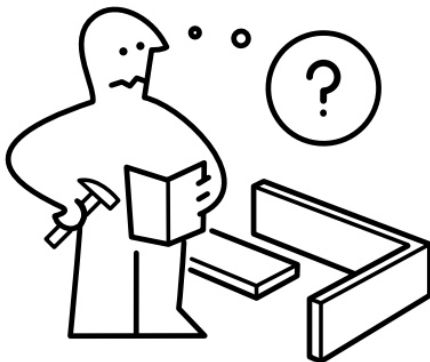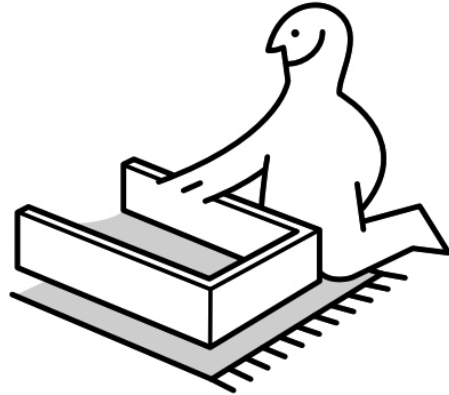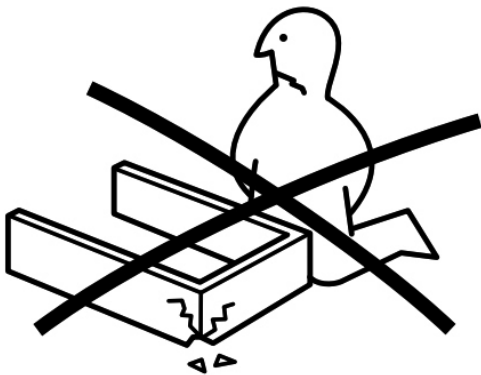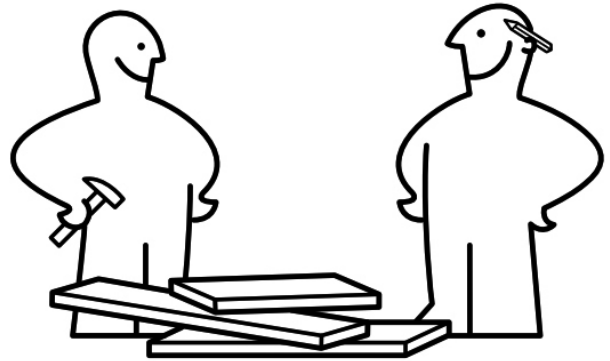




1001

4x




1002

4x




1003

40x




1004

40x



1024

1x




1025

1x




1007

20x



1008


6x

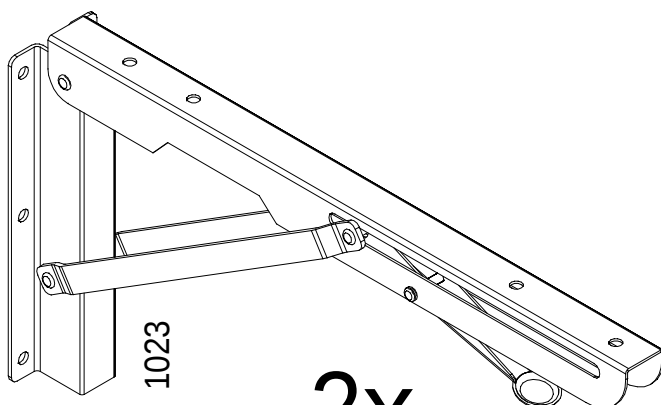



1023

2x


1

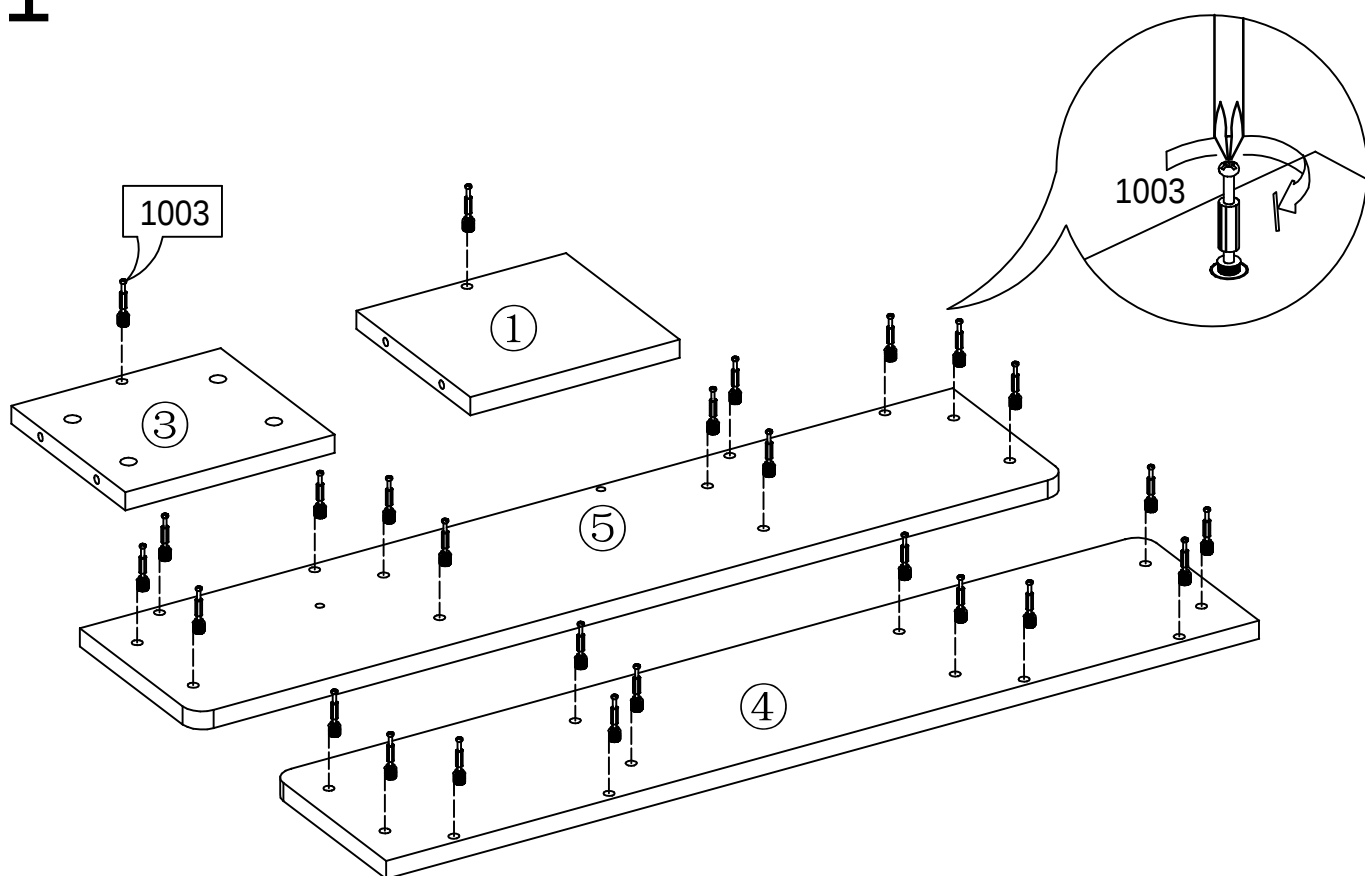


2

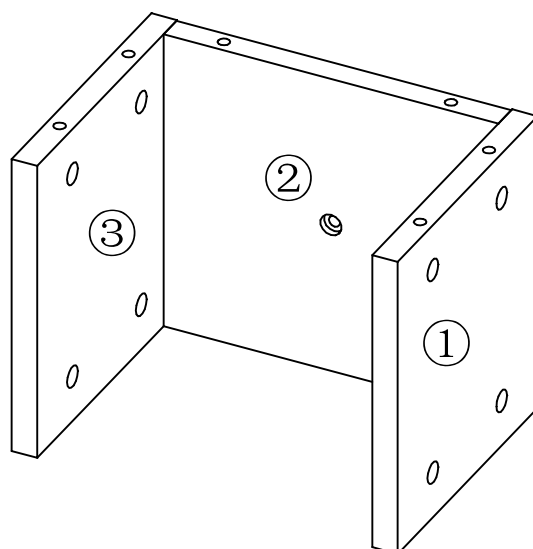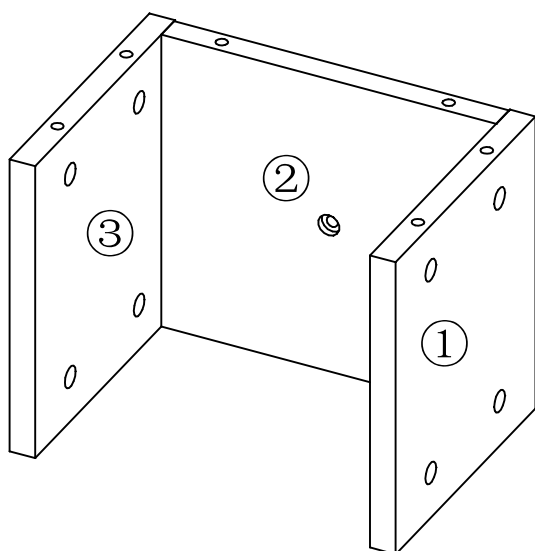


3

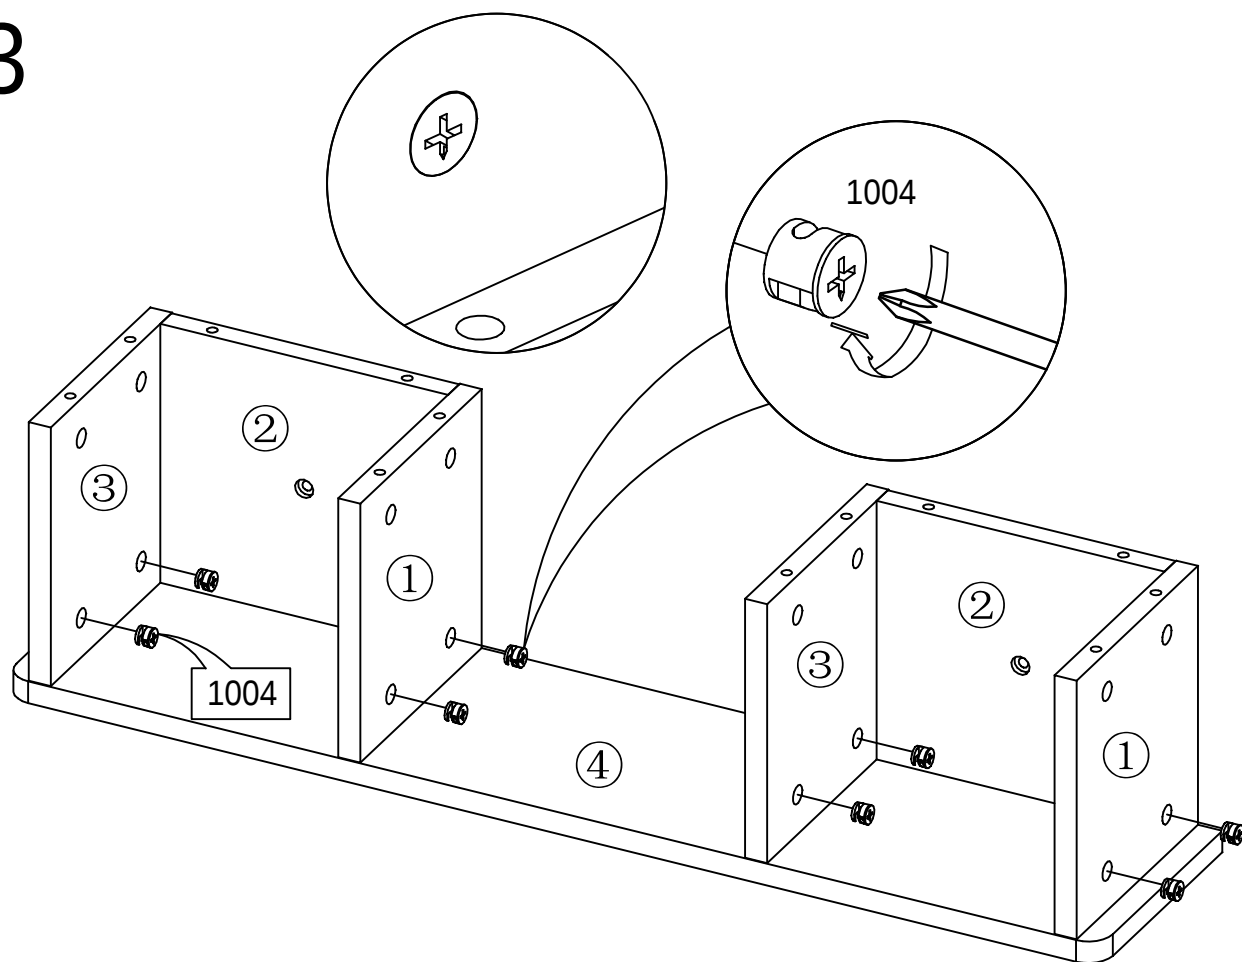


4

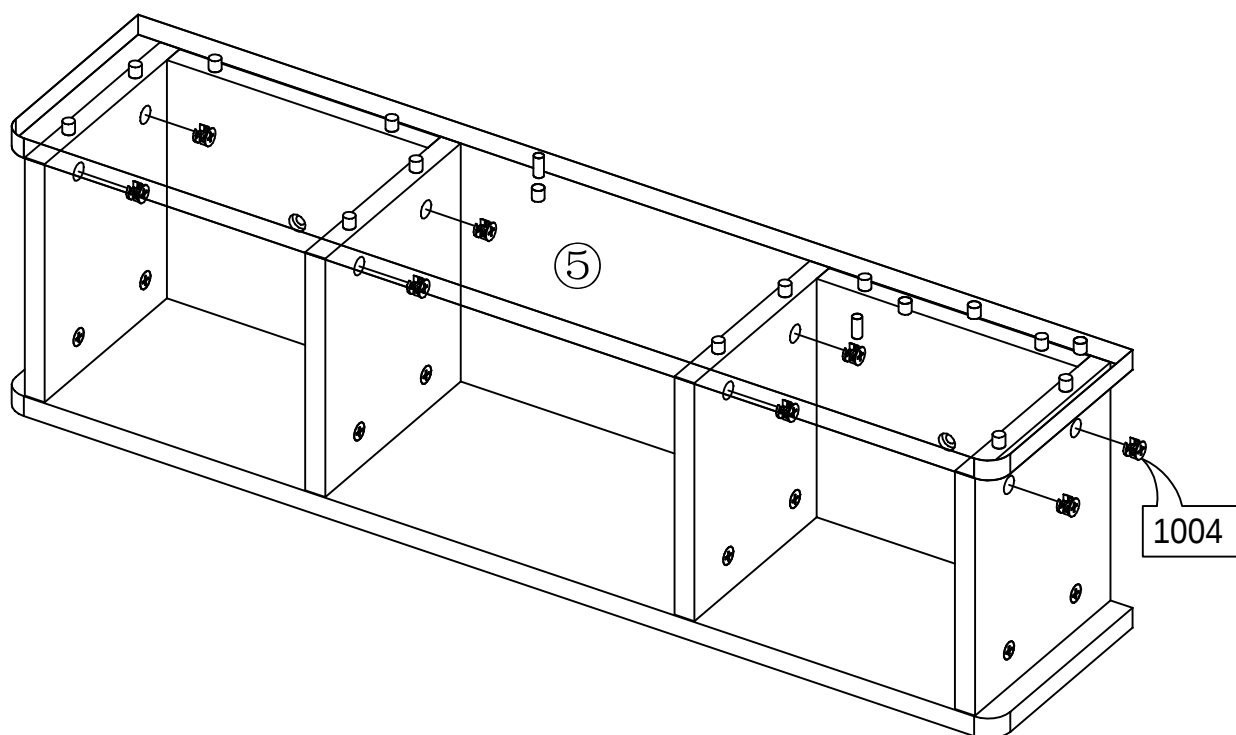


5

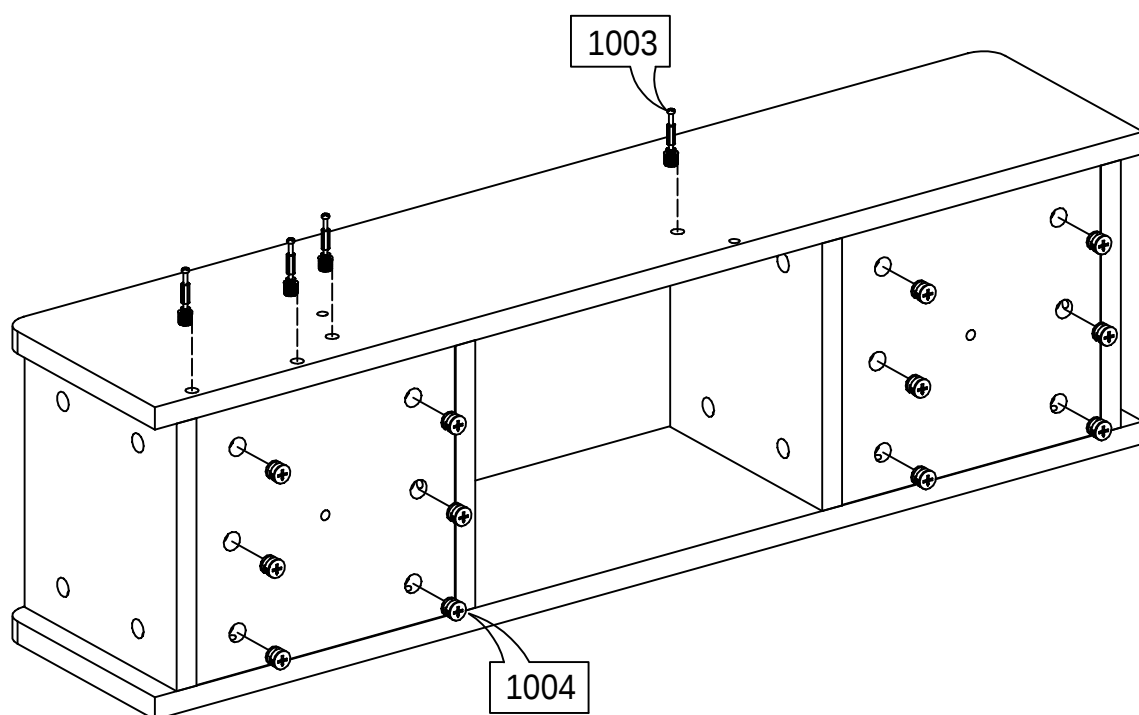


6

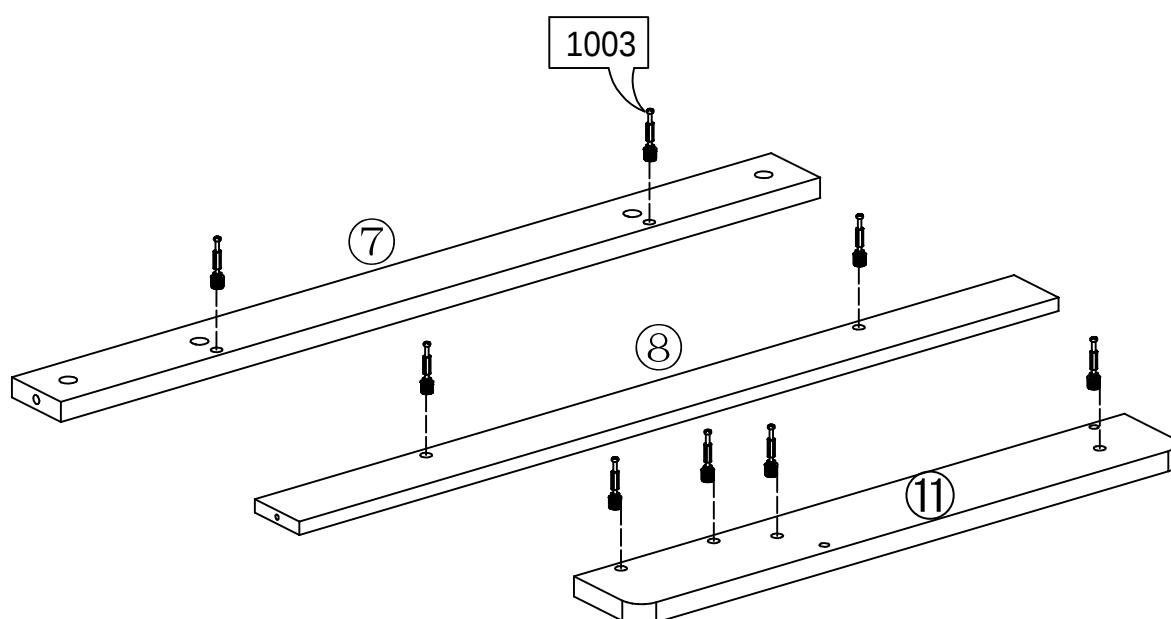


7

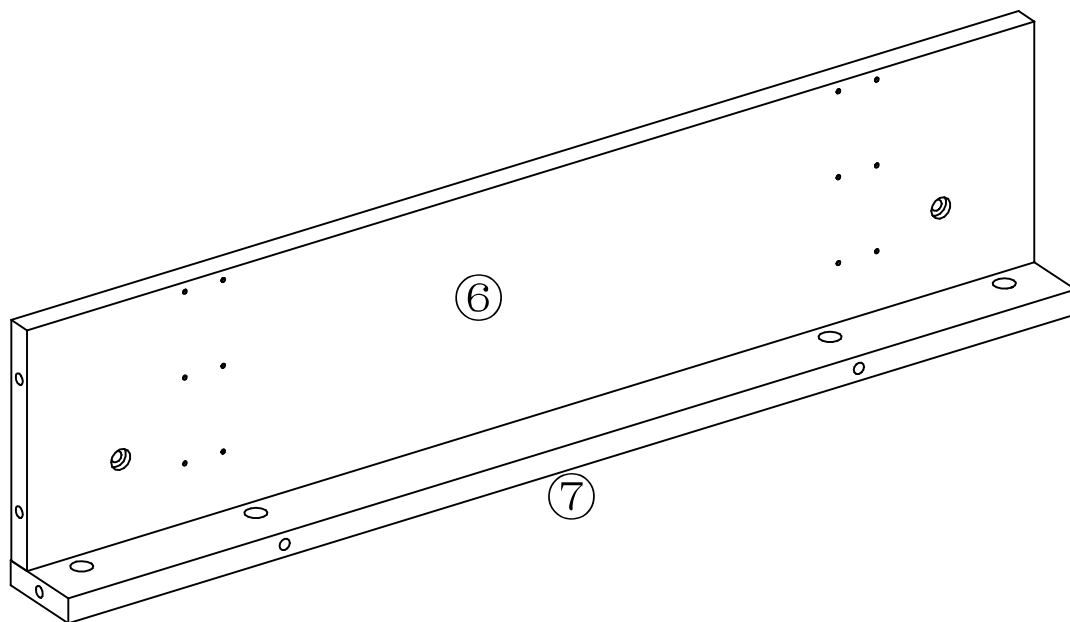


8

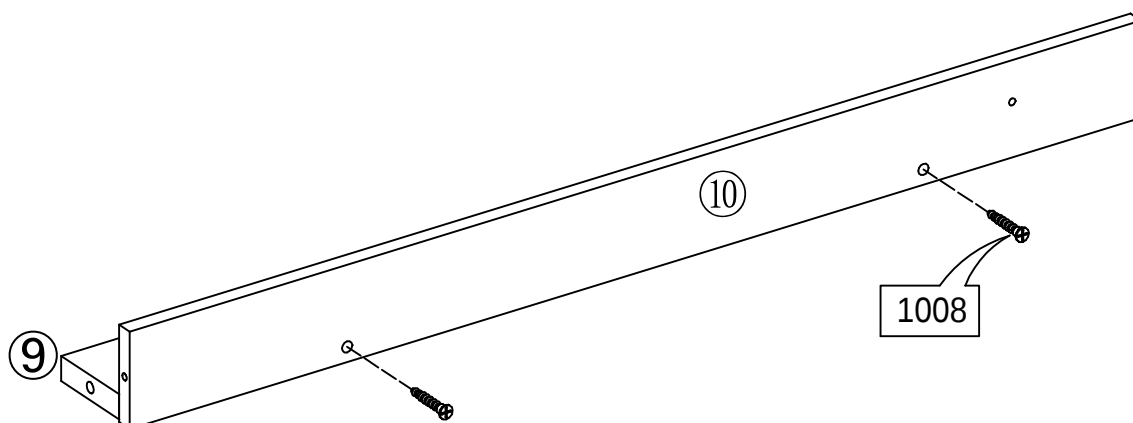


9

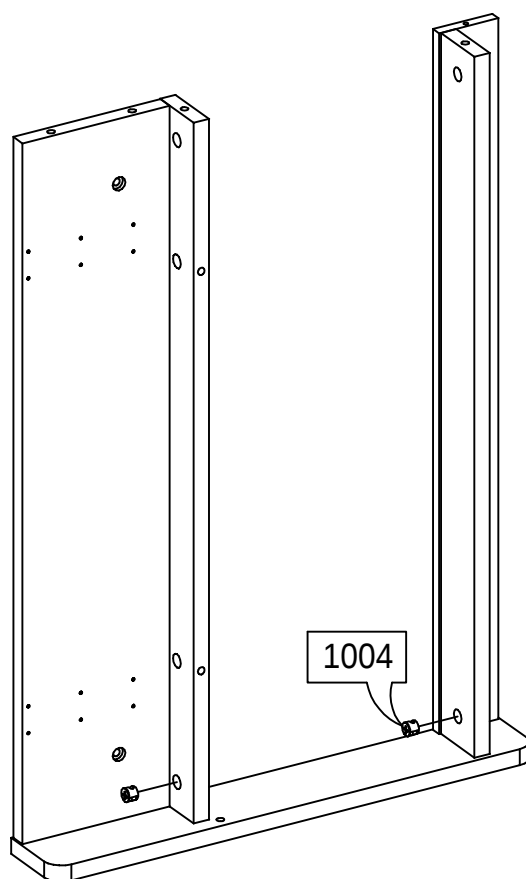


10

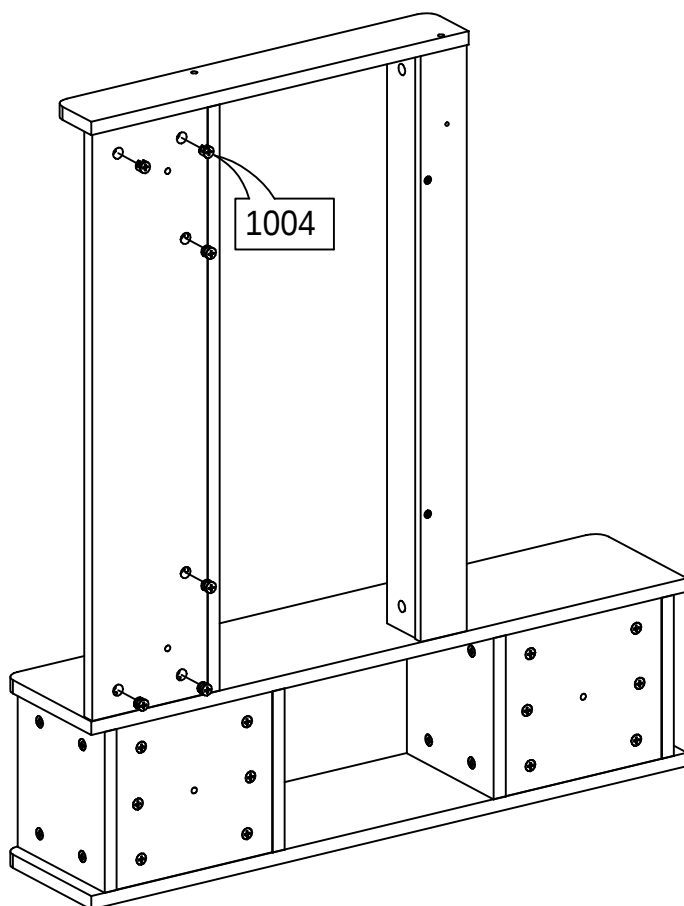

11


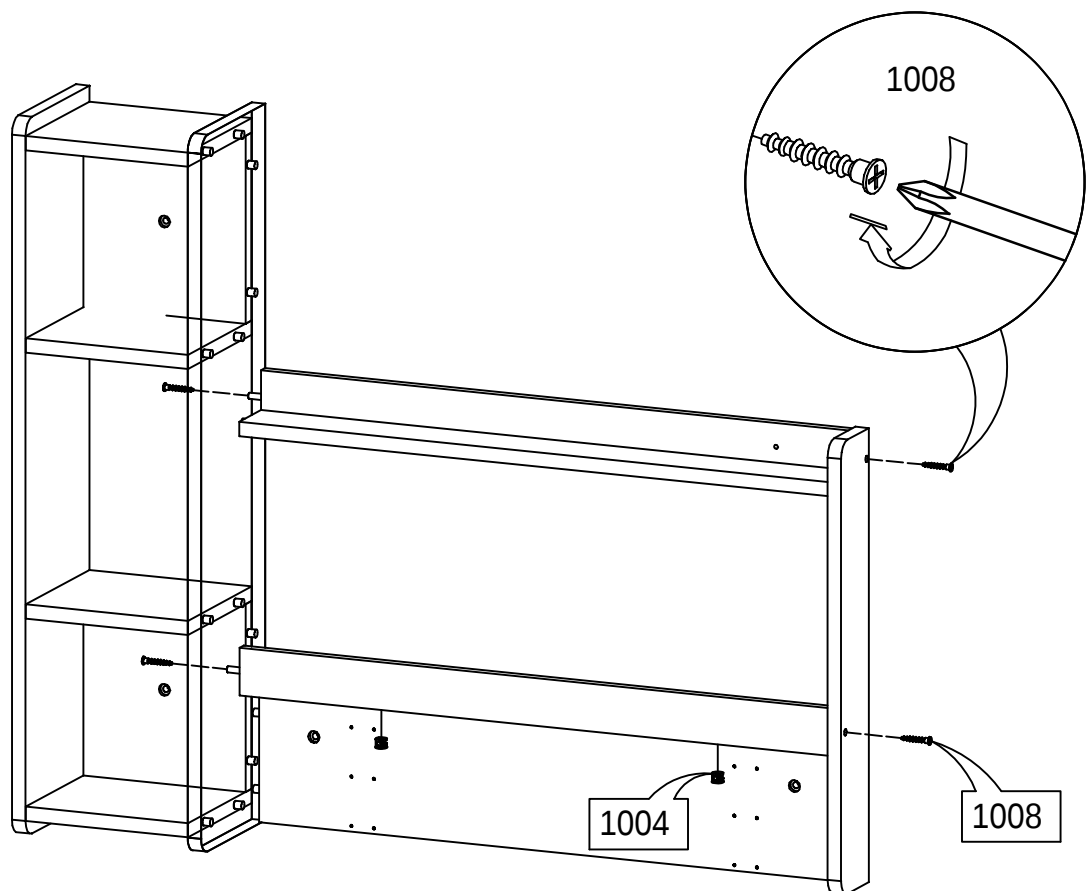


12

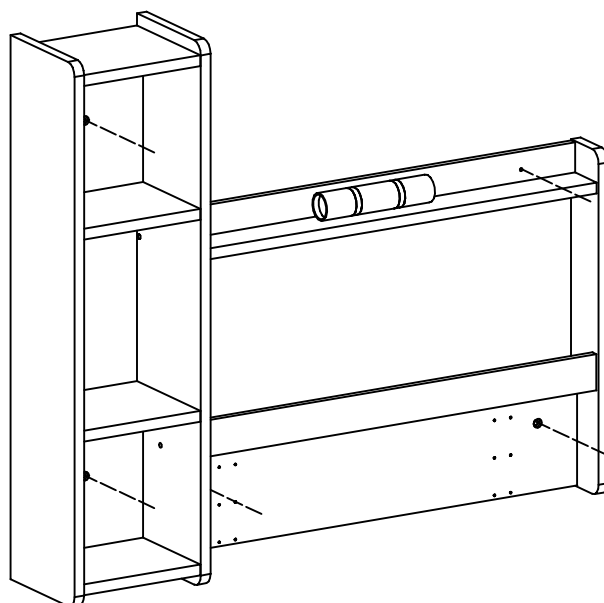

13

Make 8mm expansion holes on the wall

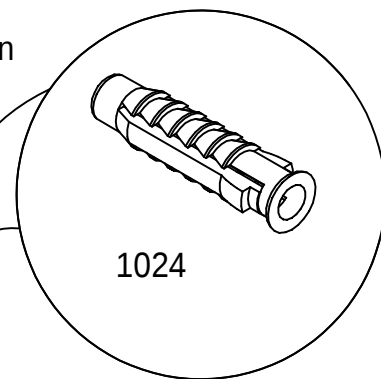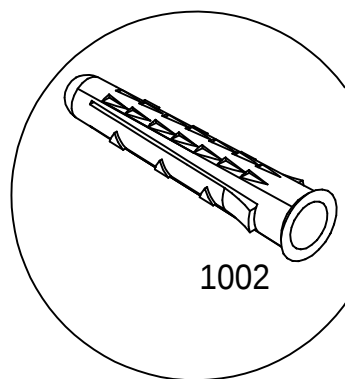


1024


1002

Make 10mm expansion holes on the wall


14

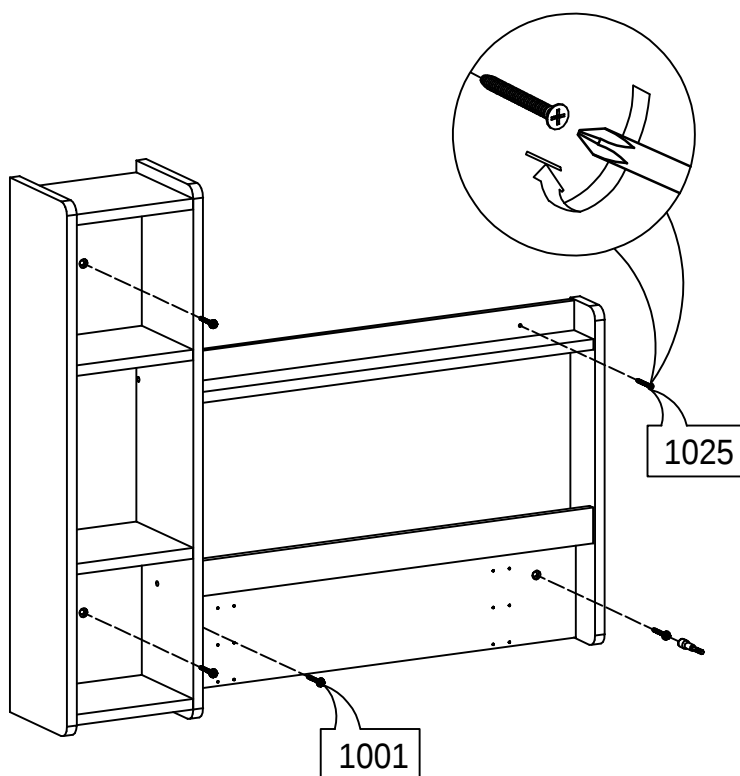

15

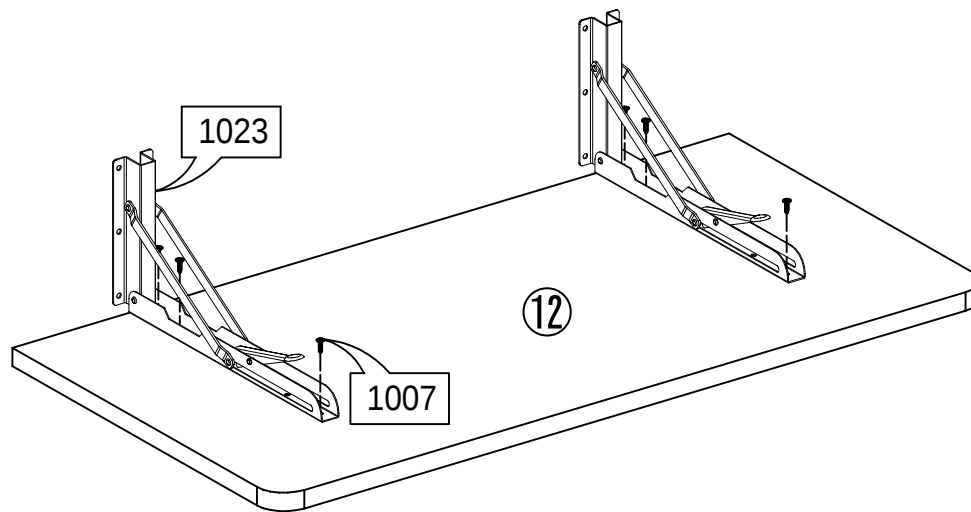

16

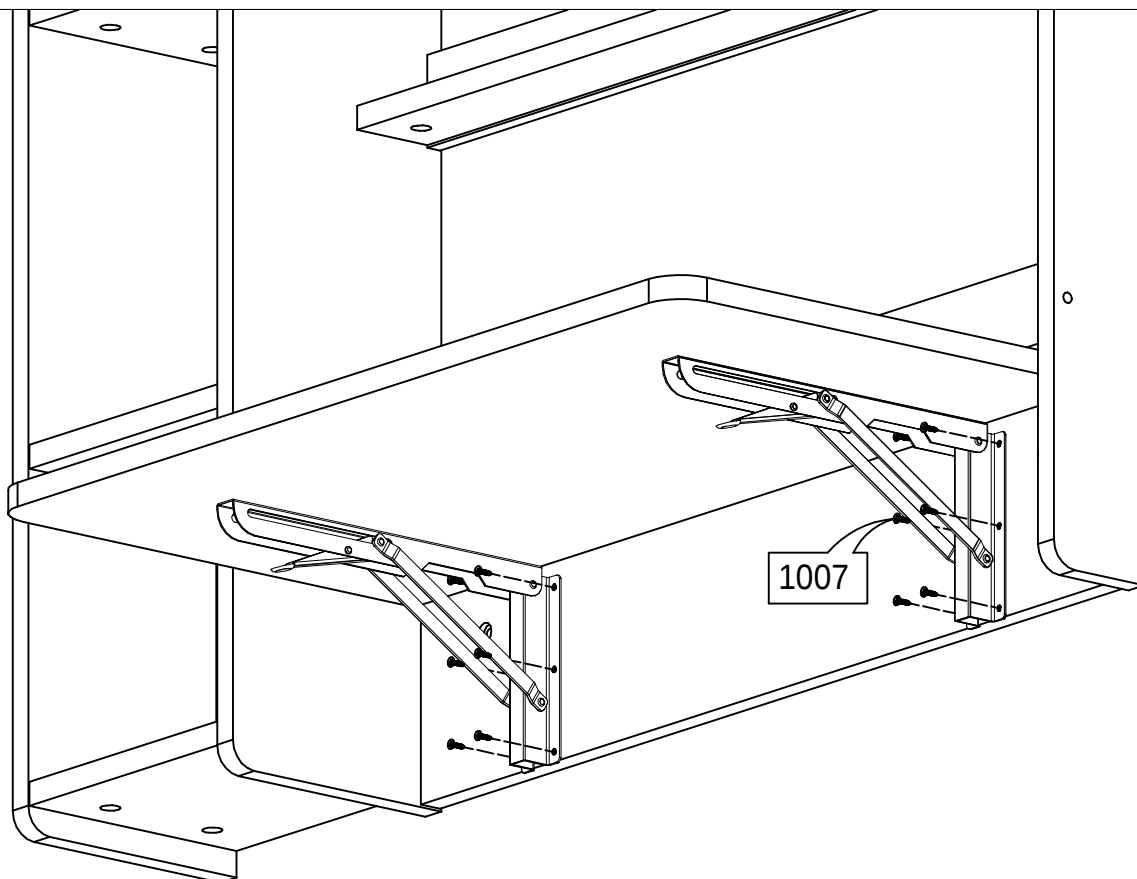

17

