
























Assembly instruction

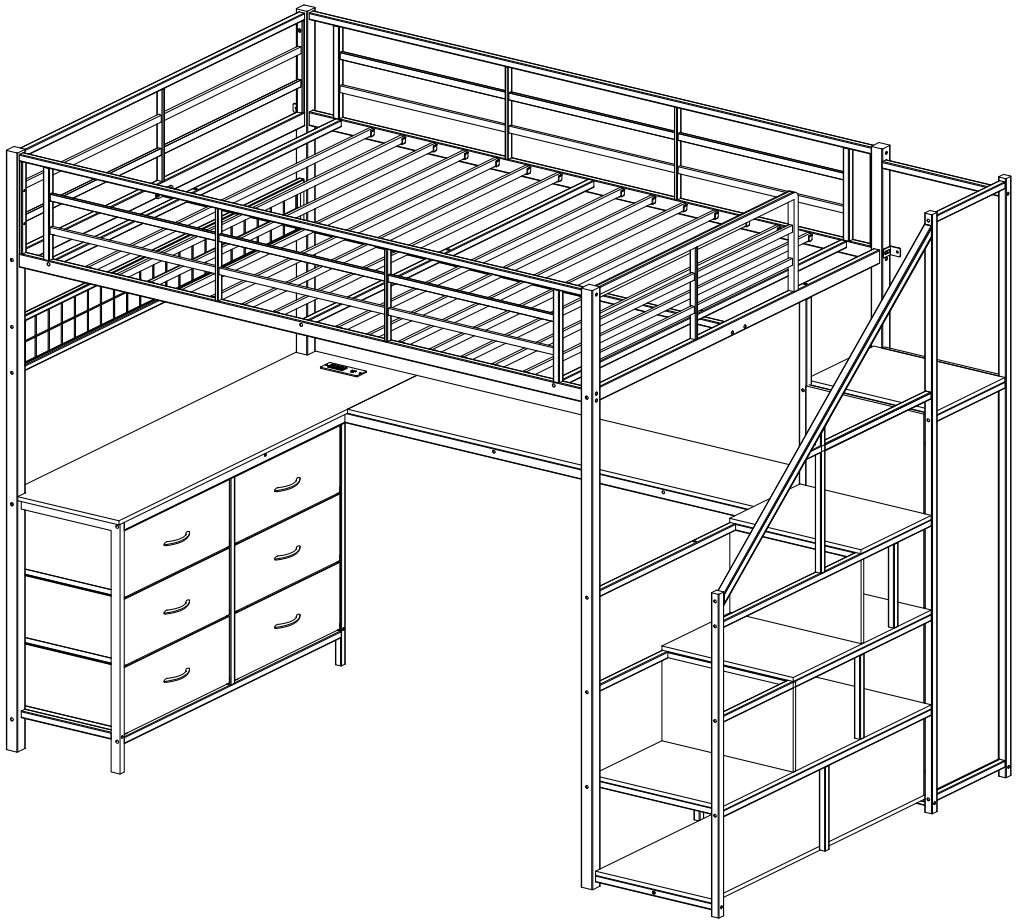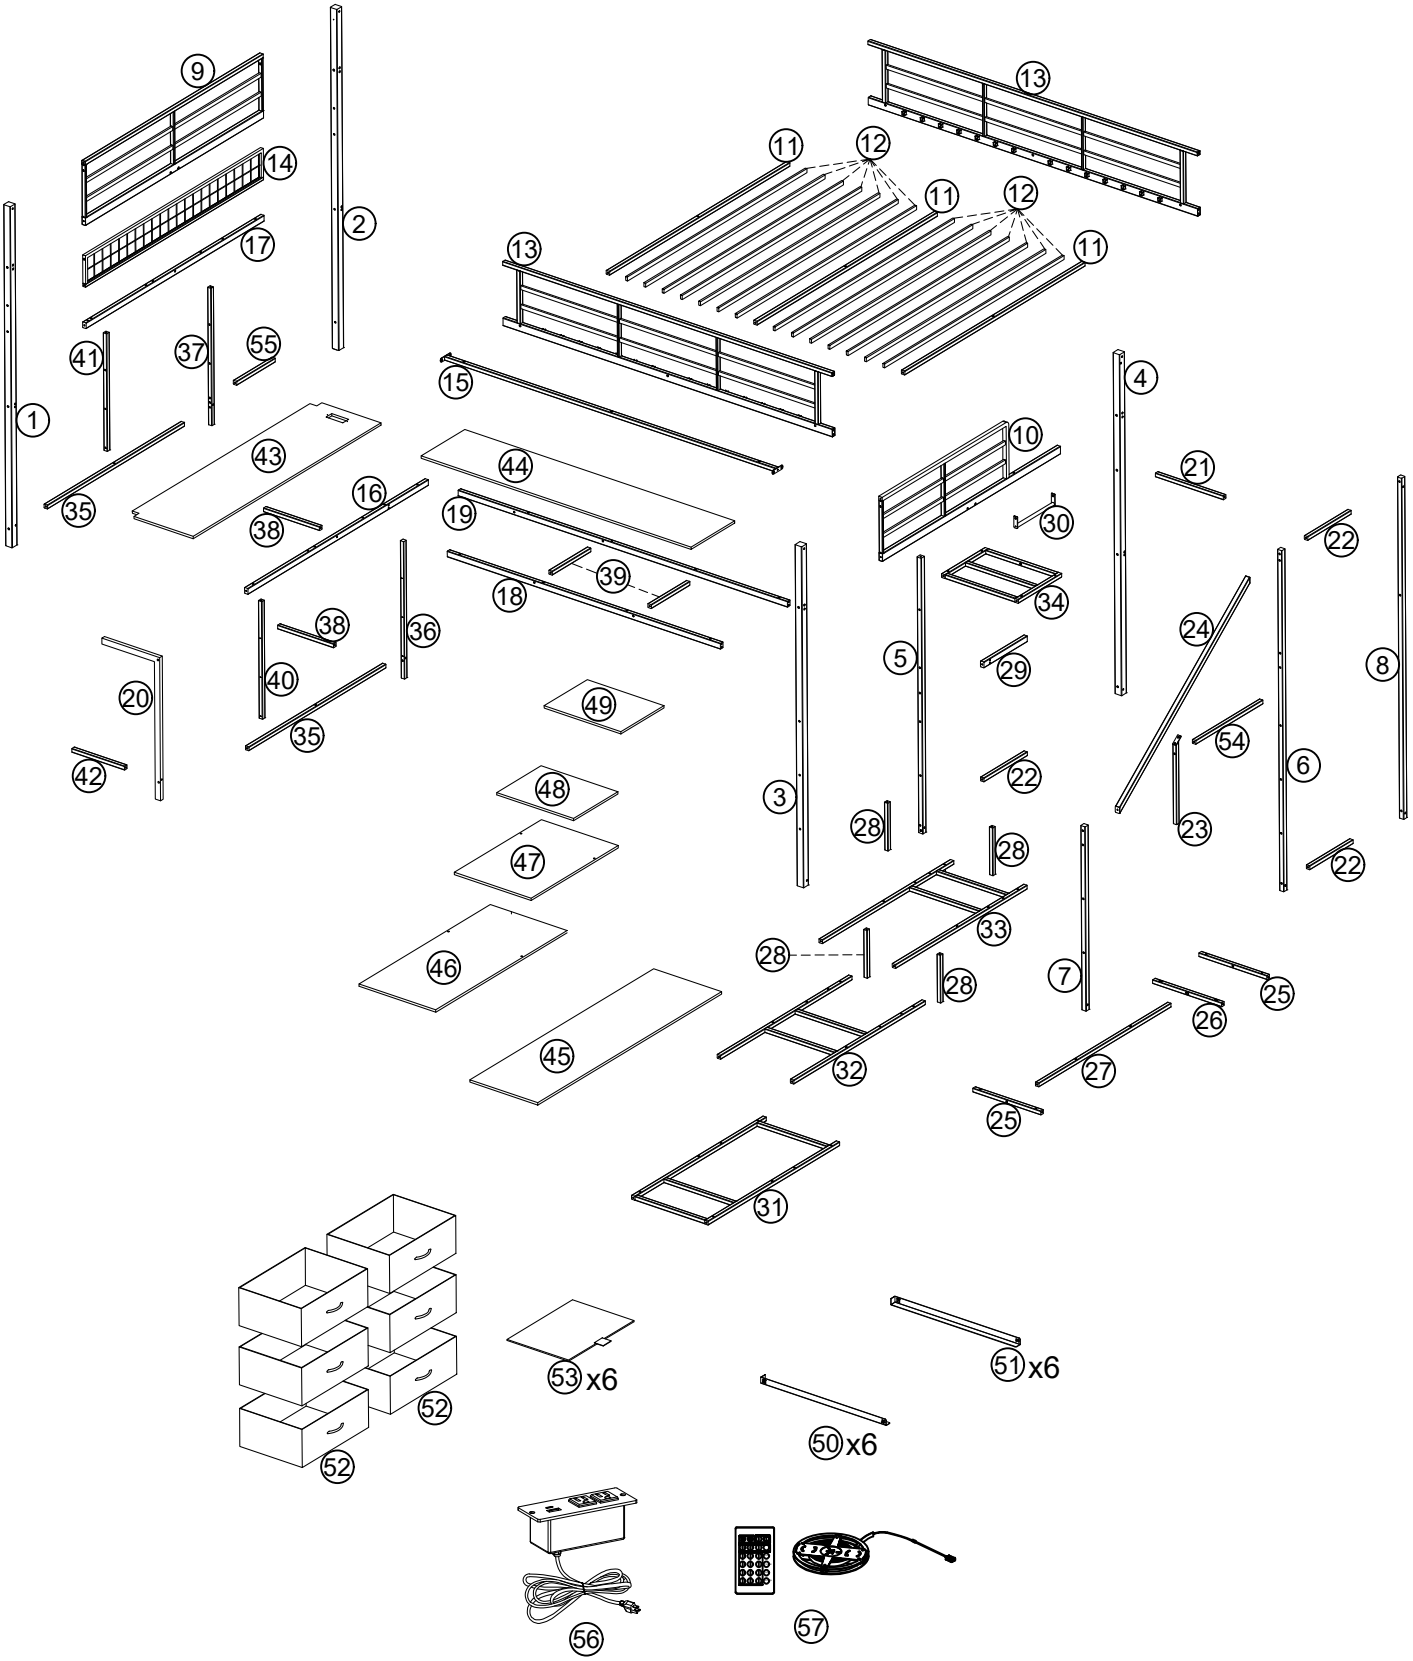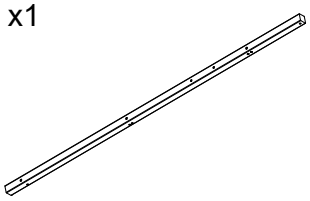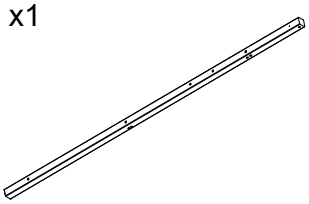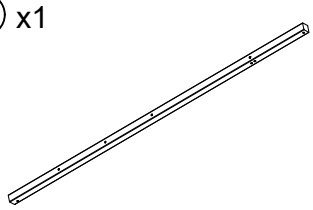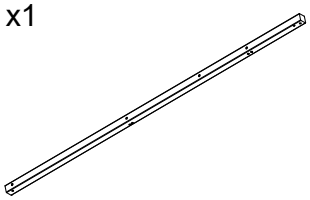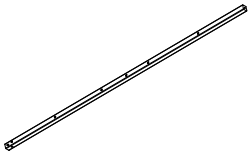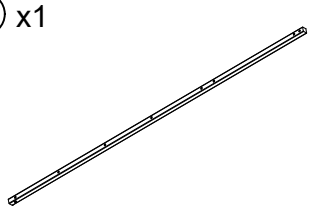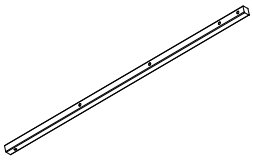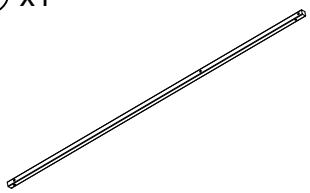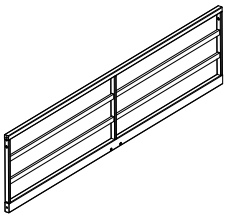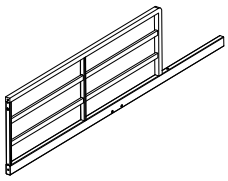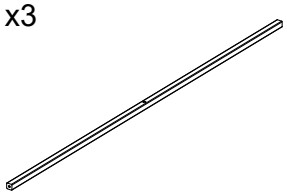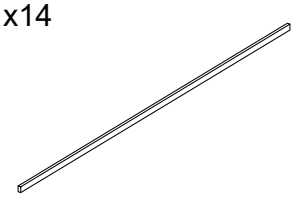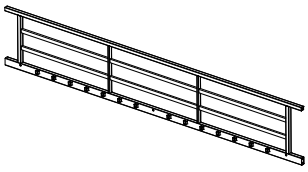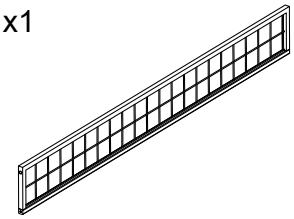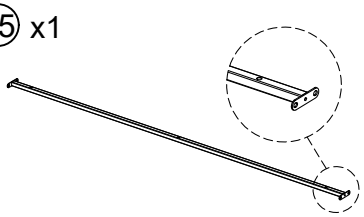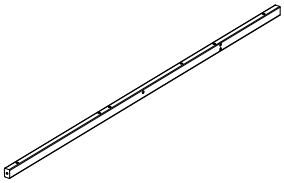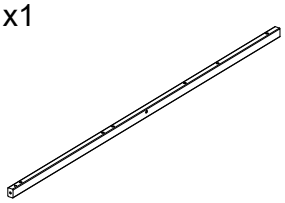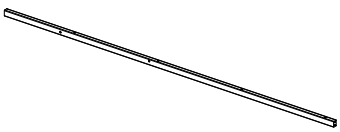


Assembly instruction

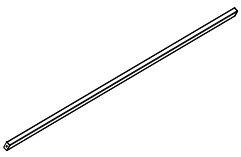


① x1 	② x1 	③ x1 
④ x1 	⑤ x1 	⑥ x1 
⑦ x1 	⑧ x1 	⑨ x1 
⑩ x1 	⑪ x3 	⑫ x14 
⑬ x2 	⑭ x1 	⑮ x1 
⑯ x1 	⑰ x1 	⑱ x1 
⑲ x1 	⑳ x1 	㉑ x1 
㉒ x3 	㉓ x1 	㉔ x1 


㉕ x2



㉖ x1




㉗ x1

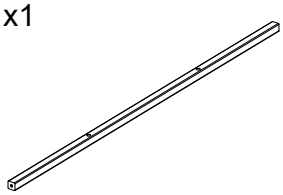


㉘ x4




㉙ x1

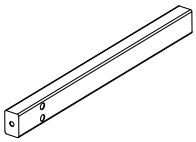


㉚ x1

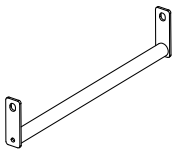


㉛ x1

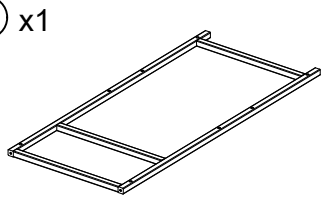


㉜ x1

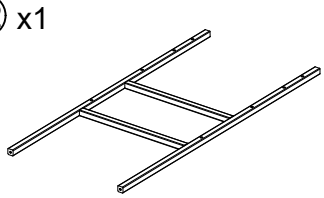


㉝ x1

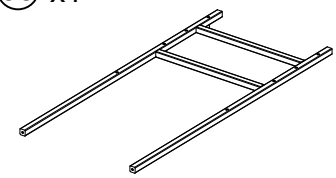


㉞ x1

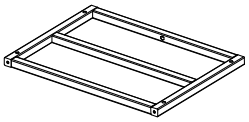


㉟ x2

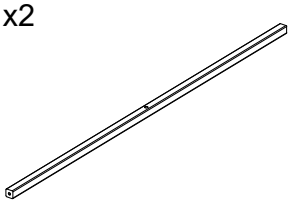

㊱ x1

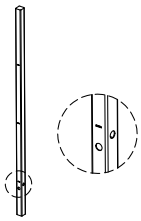


㊲ x1

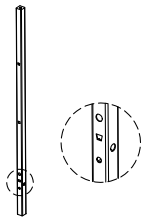


㊳ x2




㊴ x2

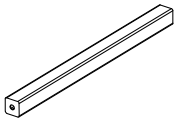


㊵ x1

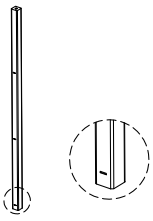


㊶ x1

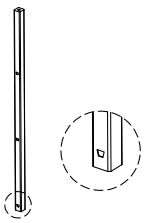


㊷ x1




㊸ x1

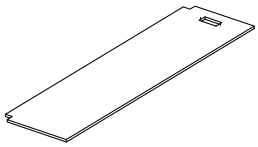


㊹ x1

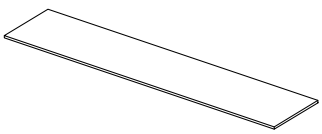


㊺ x1

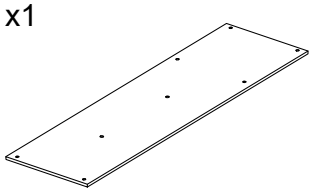


㊻ x1









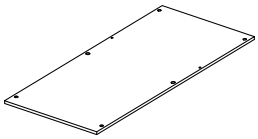


㊼ x1












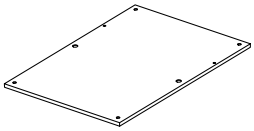


㊽ x1



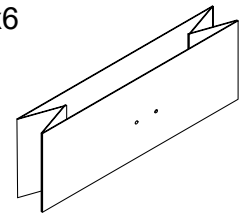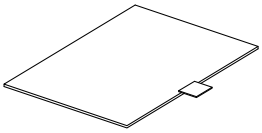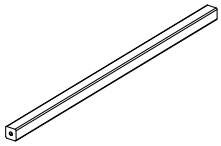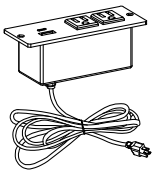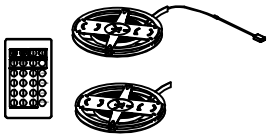
㊾ x1 	㊿ x6 	(51) x6 
(52) x6 	(53) x6 	(54) x1 
(55) x1 	(56) x1 	(57) x1 



Hardware List

A×12 (2+extra)  M8×60mm	B×42(4+extra)  M6×60mm	C×25(2+extra)  M6×50mm
D×50 (5+extra)  M6×38mm	E×29(3+extra)  M6×28mm	F×7(1+extra)  M6×15mm
G×4 (1+extra)  M6×15mm	H-1 H-2  M4	I×2 
J×2 (1+extra)  M4×12mm	K×12(1+extra)  M4×10mm	L×6 
M×2  M8×40mm	N×2  M5×40mm	O×12 (2+extra)  Ø18*Ø8.5*1.5T

1





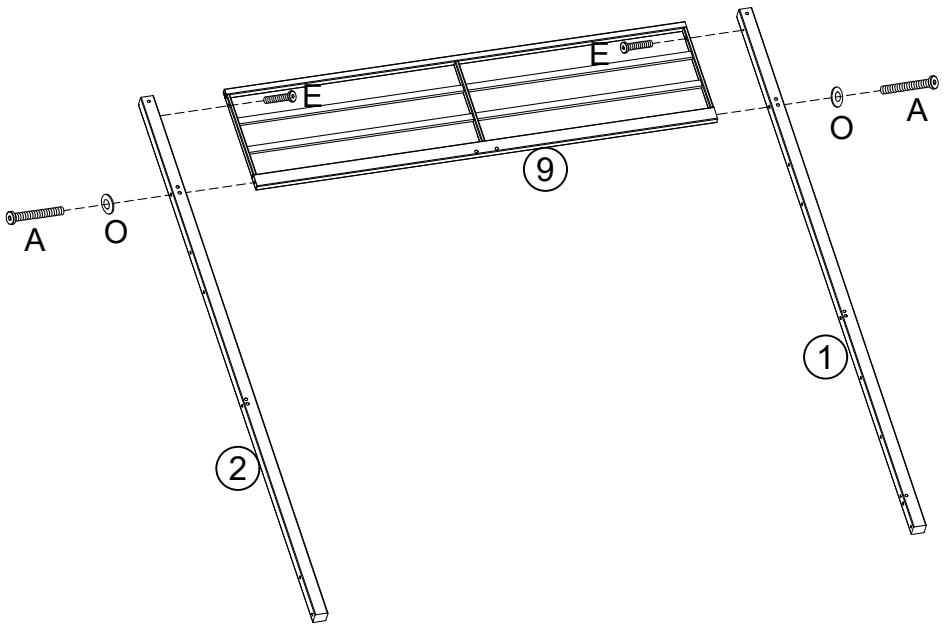


A×2pcs  M8×60mm
E×2pcs  M6×28mm
O×2pcs  Ø18*Ø8.5*1.5T

2



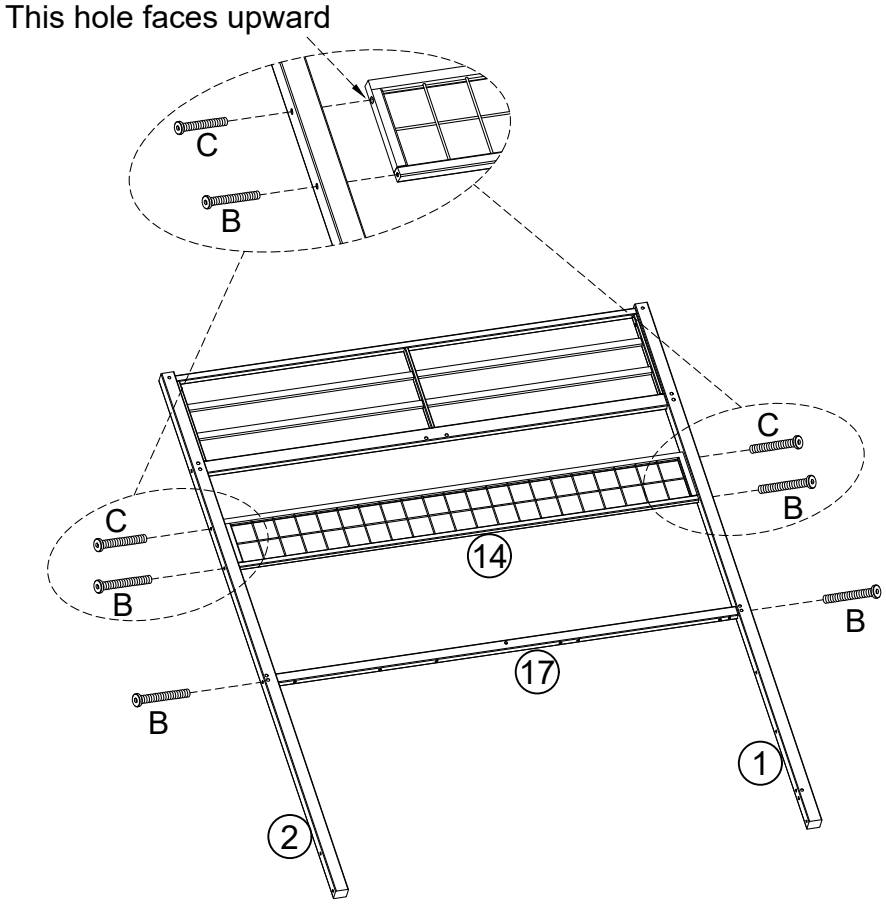


B×4pcs  M6×60mm
C×2pcs  M6×50mm

3




B×1pc




M6×60mm

C×2pcs



M6×50mm

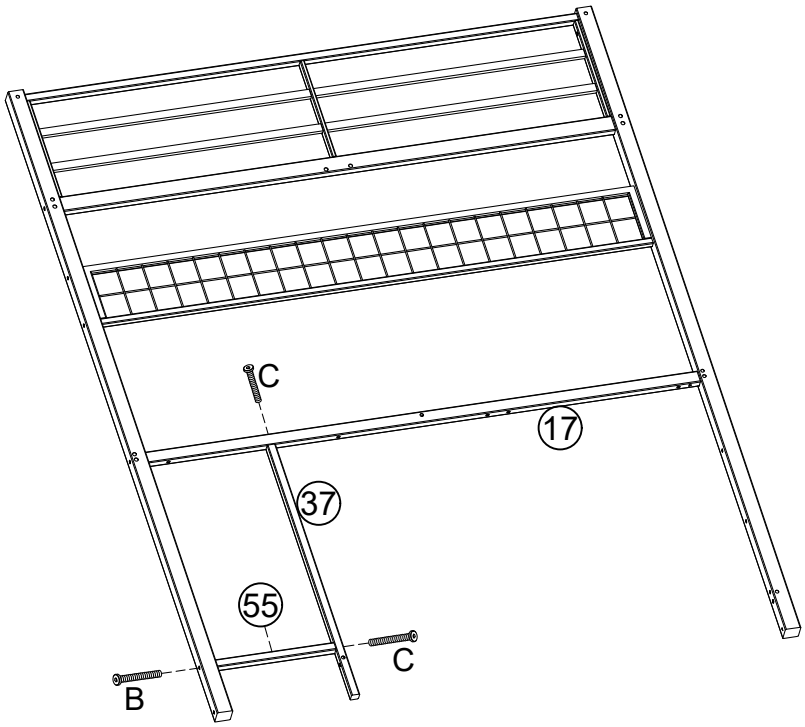

4




B×1pc




M6×60mm

C×3pcs




M6×50mm

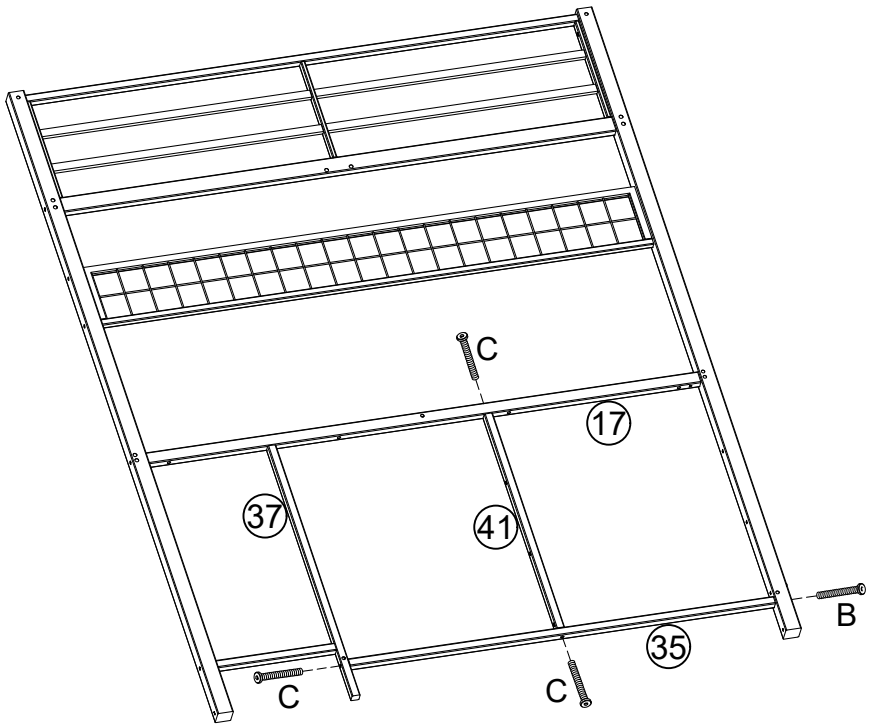


5

80%

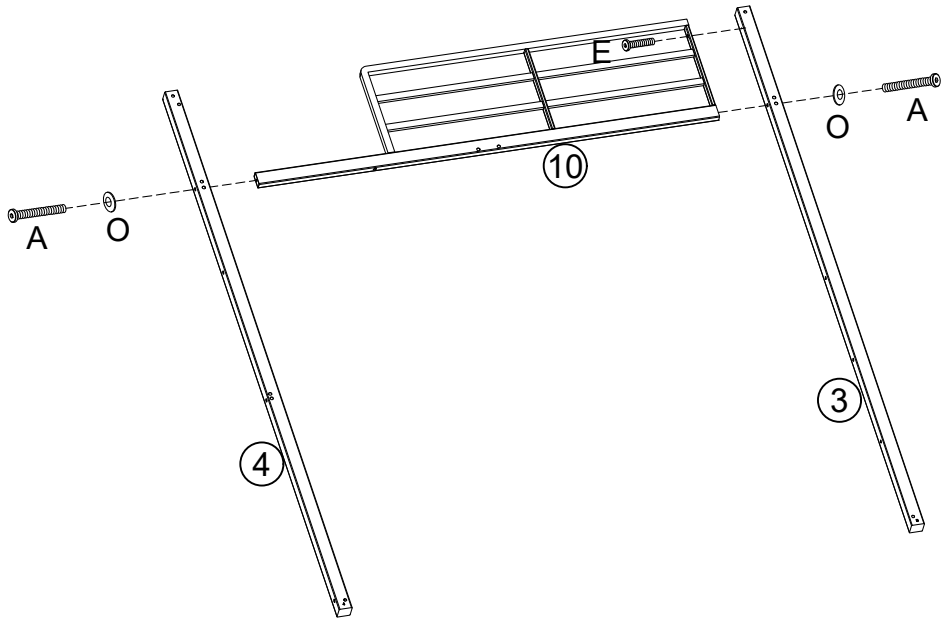


A×2pcs



M8×60mm

E×1pc



M6×28mm


O×2pcs



Ø18*Ø8.5*1.5T

6

80%

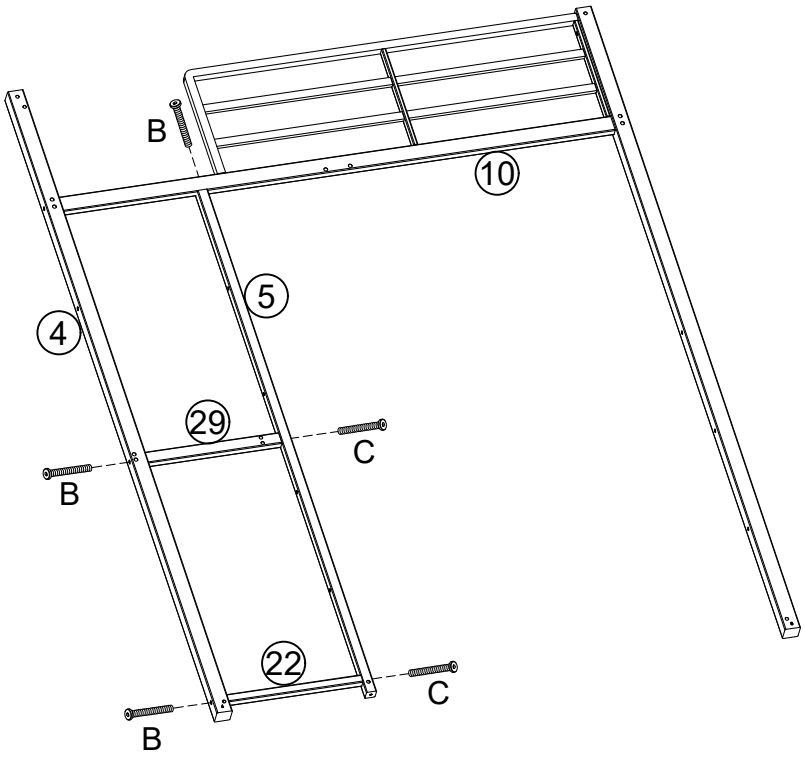


B×3pcs



M6×60mm


C×2pcs




M6×50mm

7



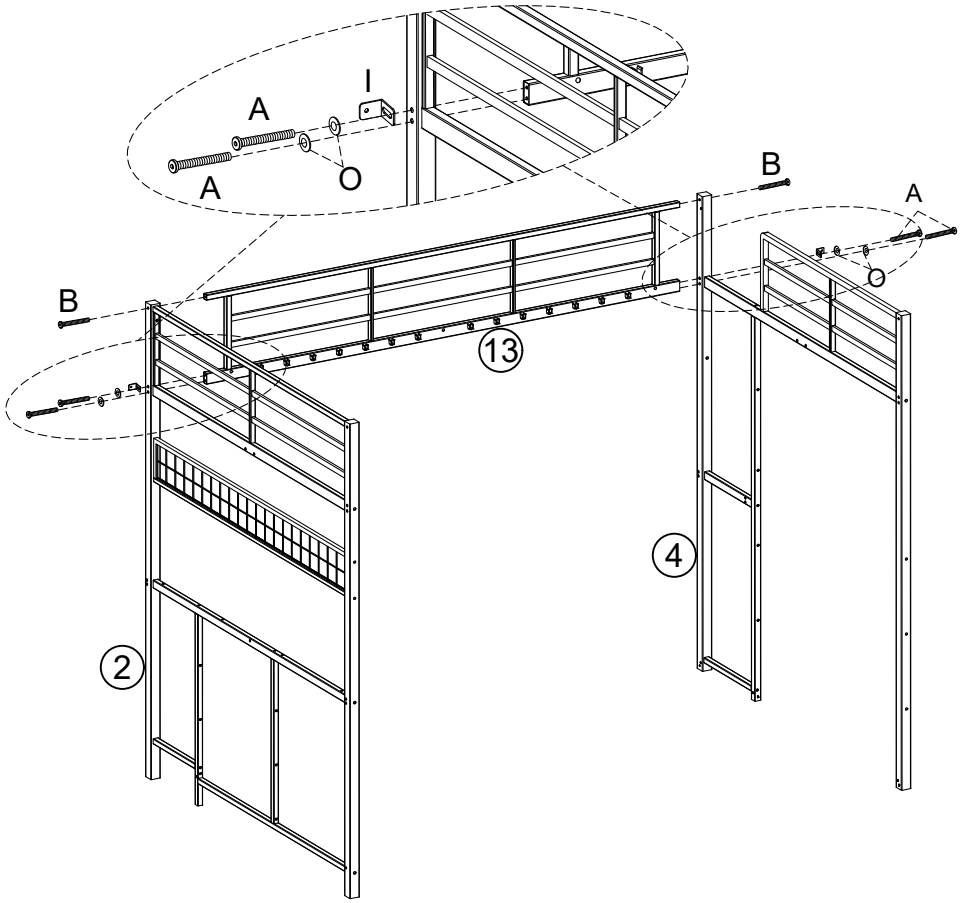


A×4pcs




M8×60mm

B×2pcs



M6×60mm

I×2pcs




O×4pcs



Ø18*Ø8.5*1.5T

8



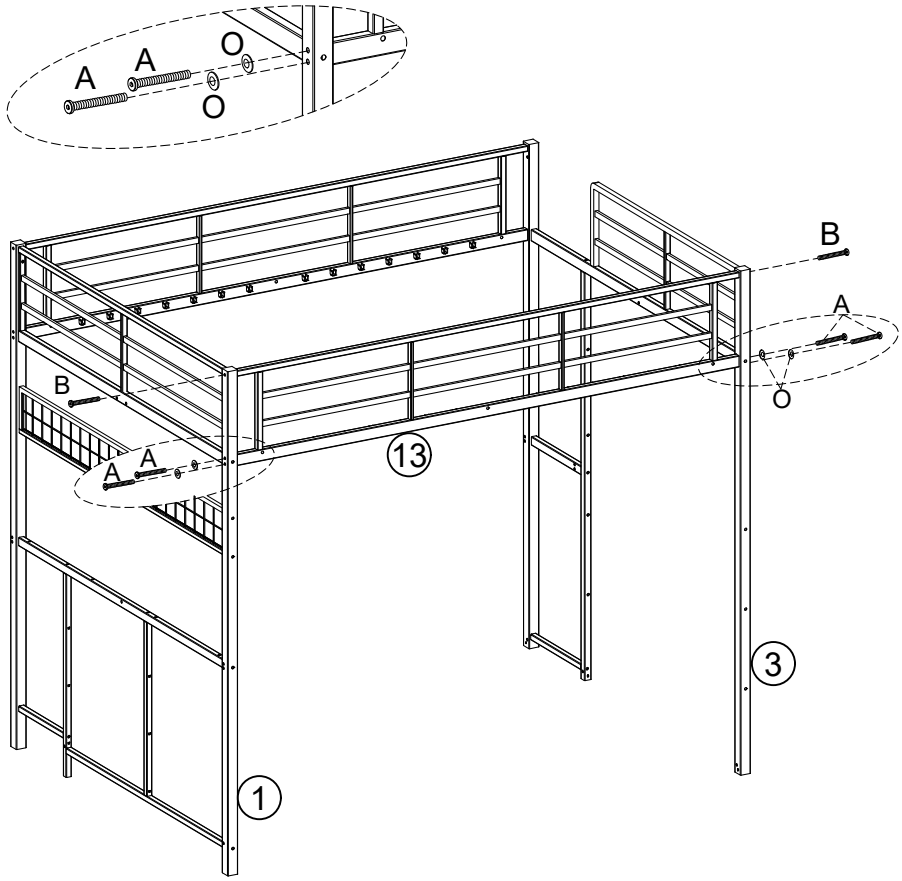

A×4pcs



M8×60mm

B×2pcs




M6×60mm

O×4pcs




Ø18*Ø8.5*1.5T


9



D×6pcs



M6×38mm

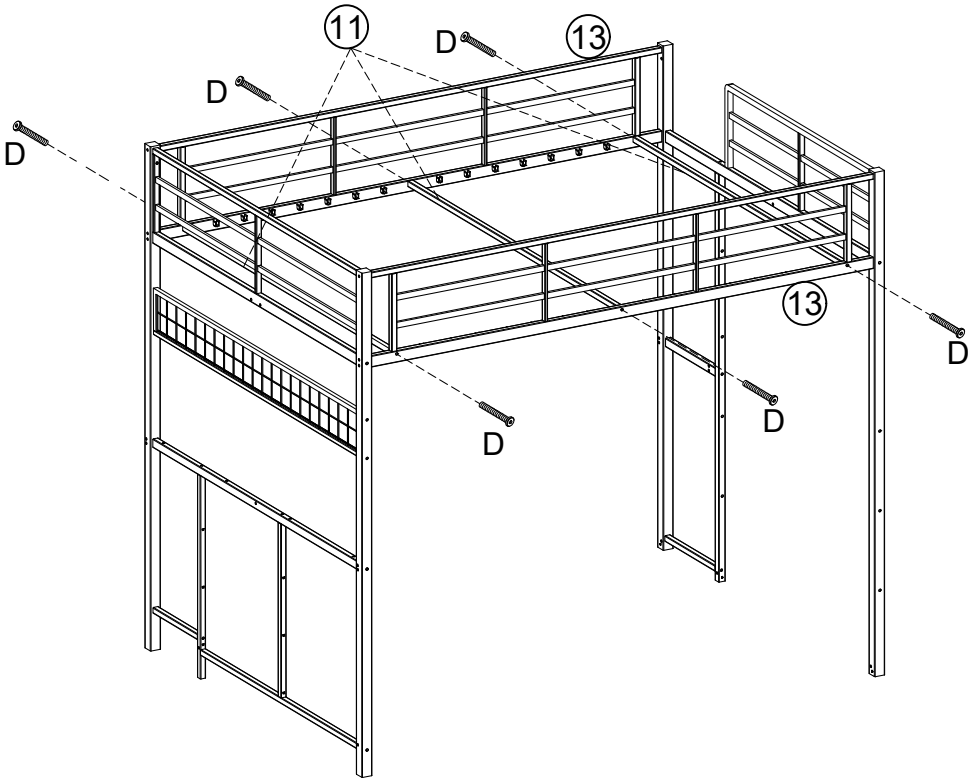


10



B×4pcs



M6×60mm

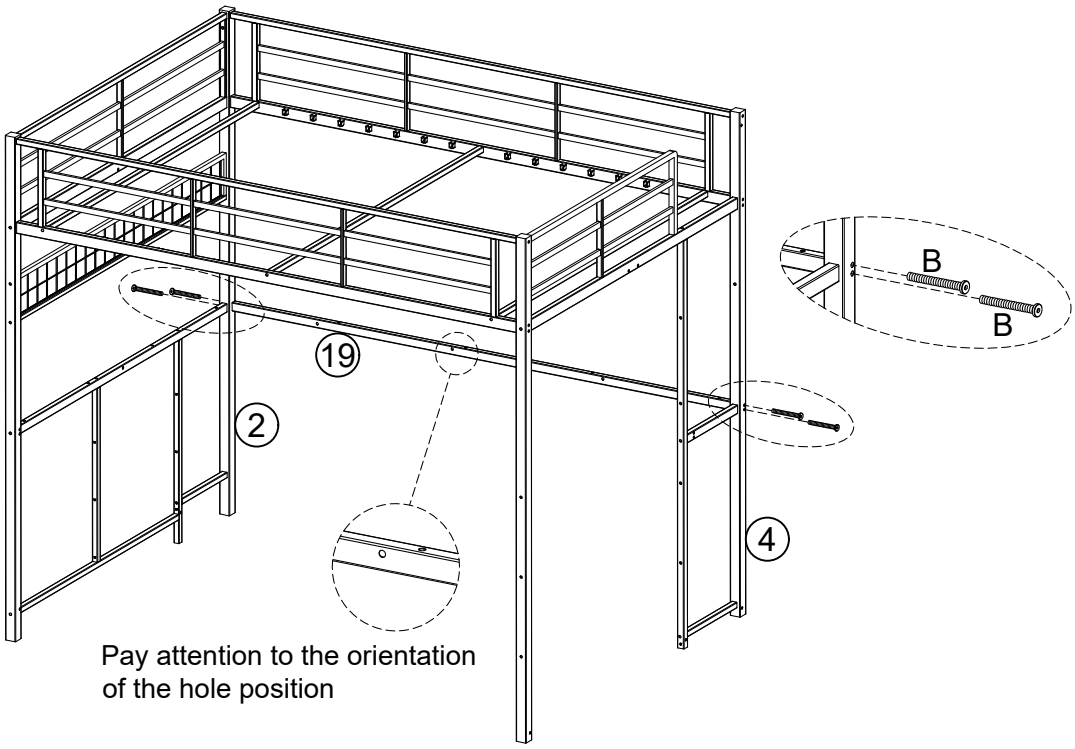


Pay attention to the orientation of the hole position


11



B×4pcs



M6×60mm

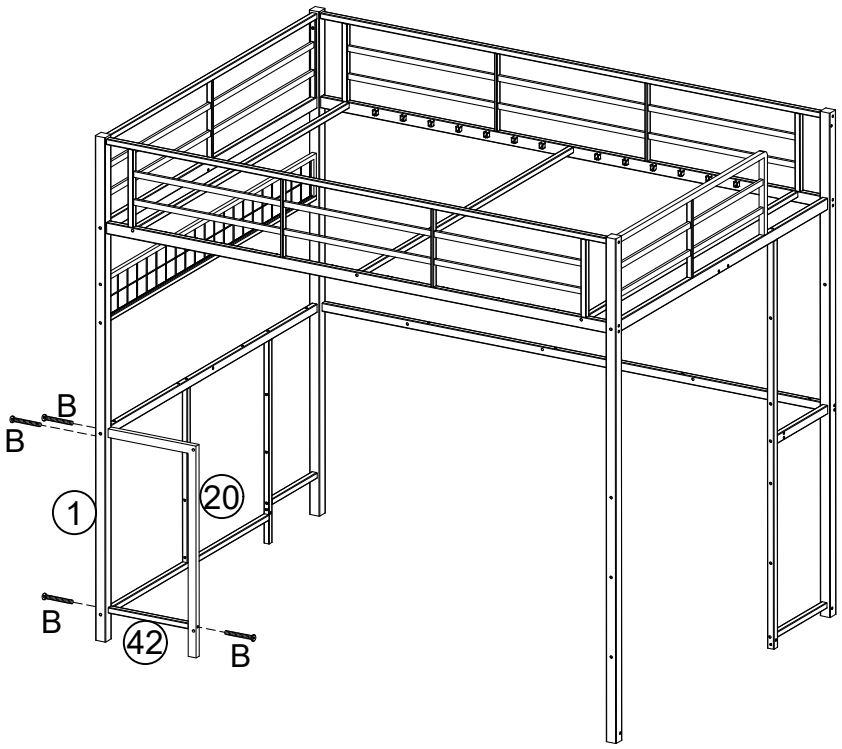


12



D×2pcs




M6×38mm

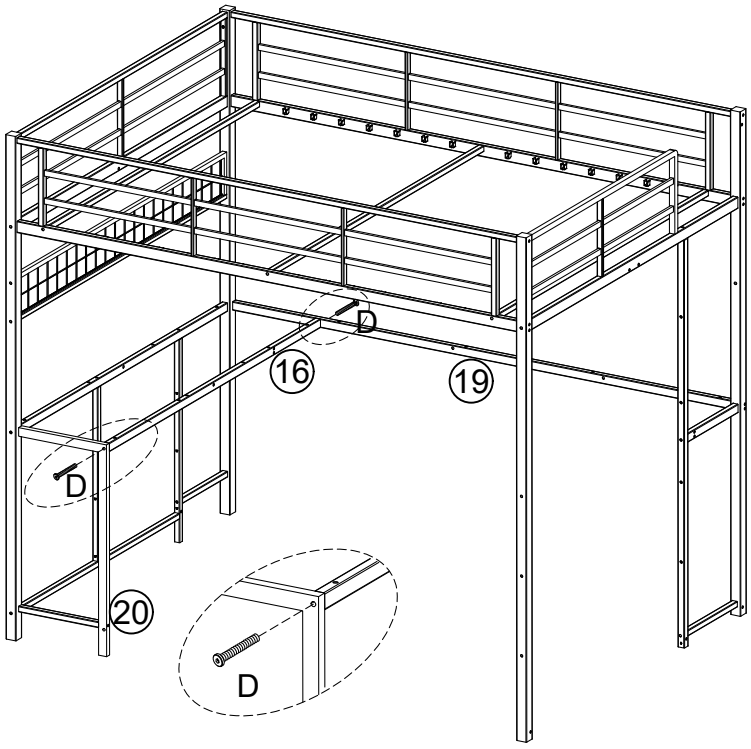


13



D×2pcs



M6×38mm

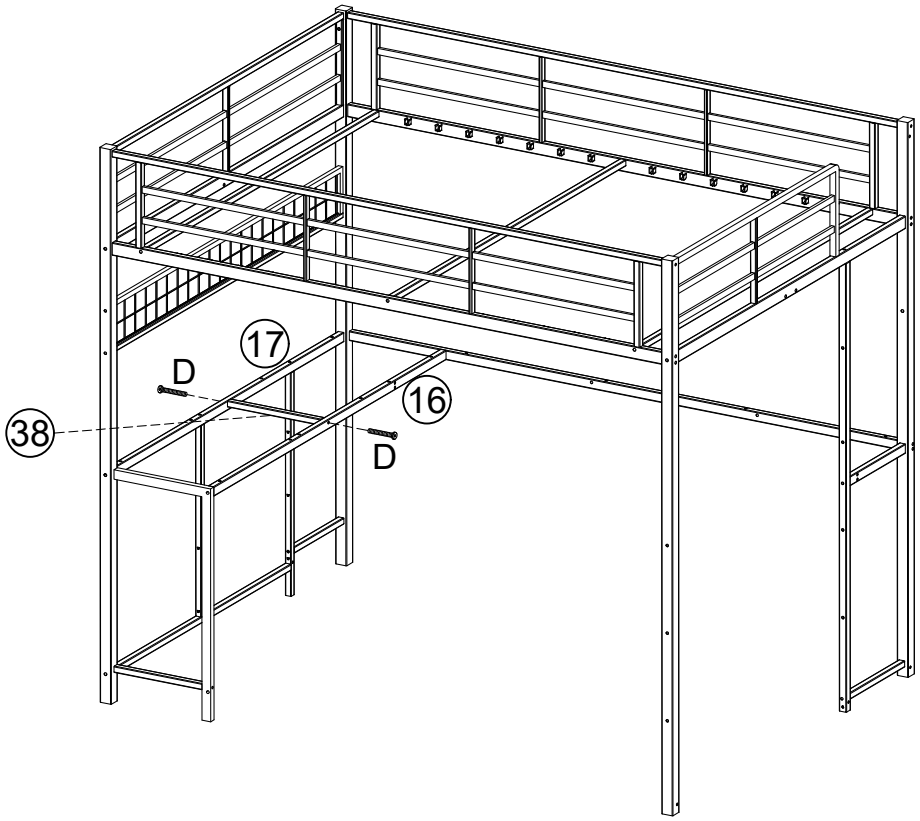

14



C×2pcs




M6×50mm

D×3pcs




M6×38mm

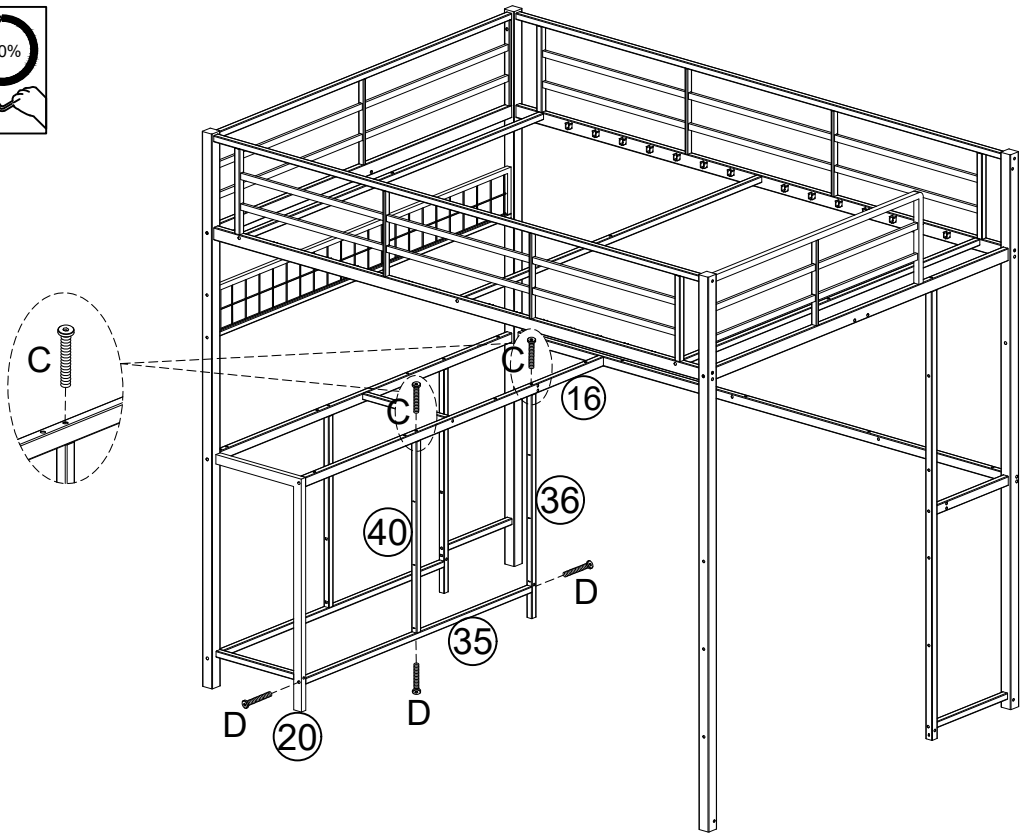


15



D×2pcs




M6×38mm

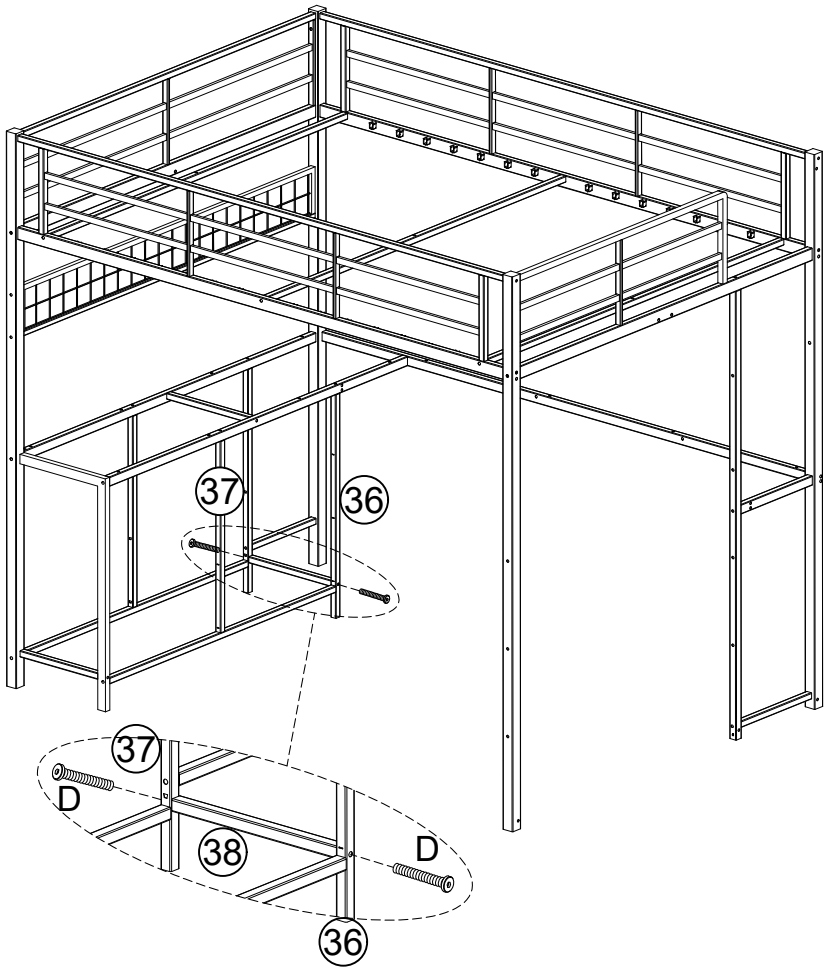



16



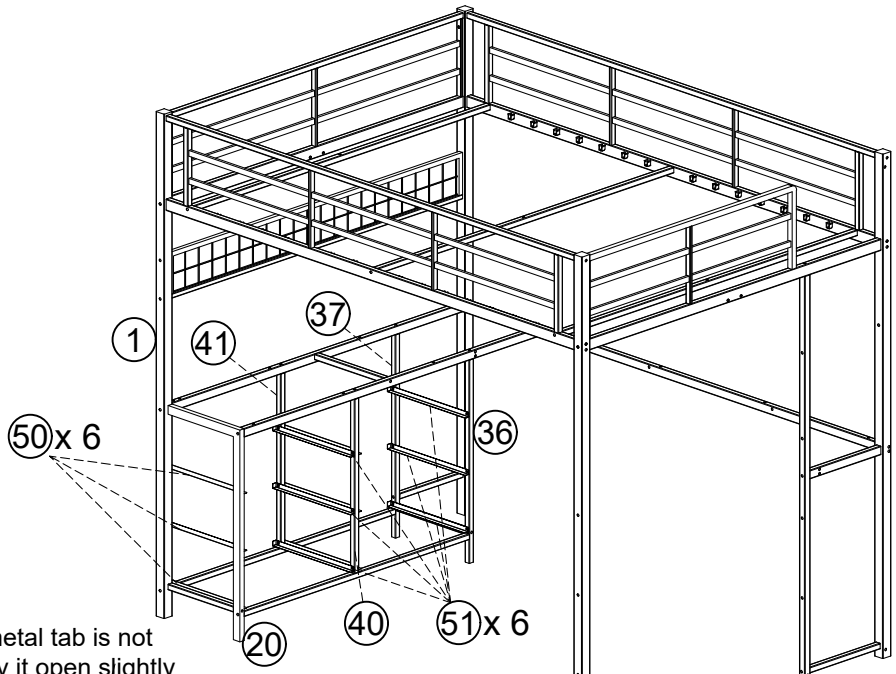

Note：If the metal tab is not protruding,pry it open slightly

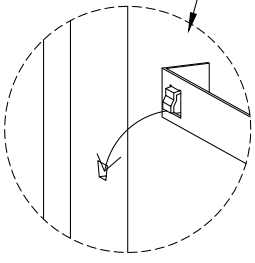

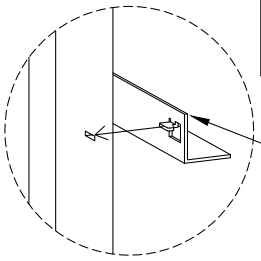


Note：To install，this end should be inserted firstly.To remove,pull the other end up firstly.


17



D×4pcs



M6×38mm

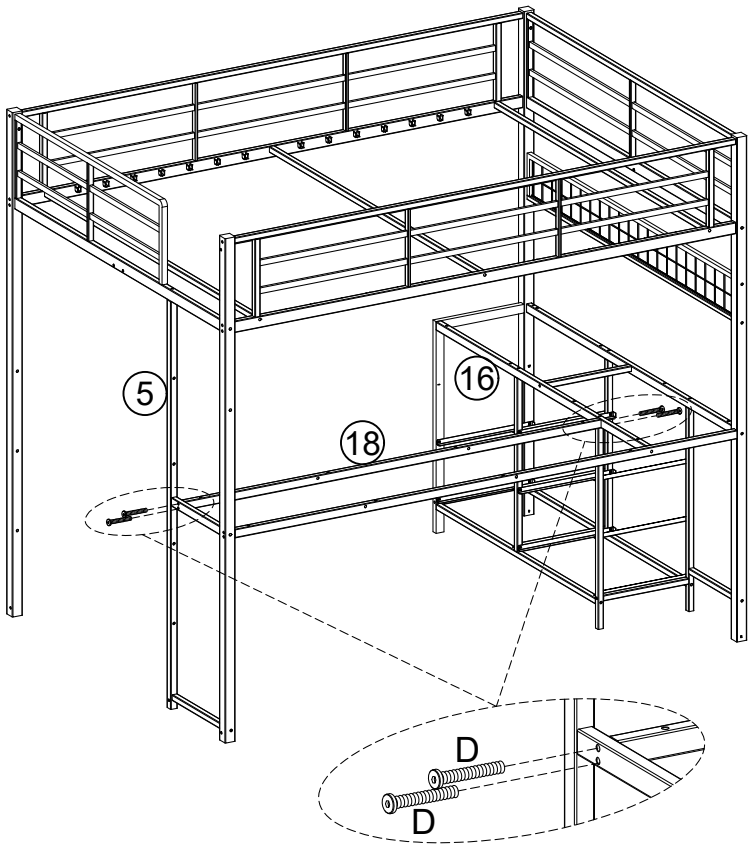


18



D×4pcs



M6×38mm

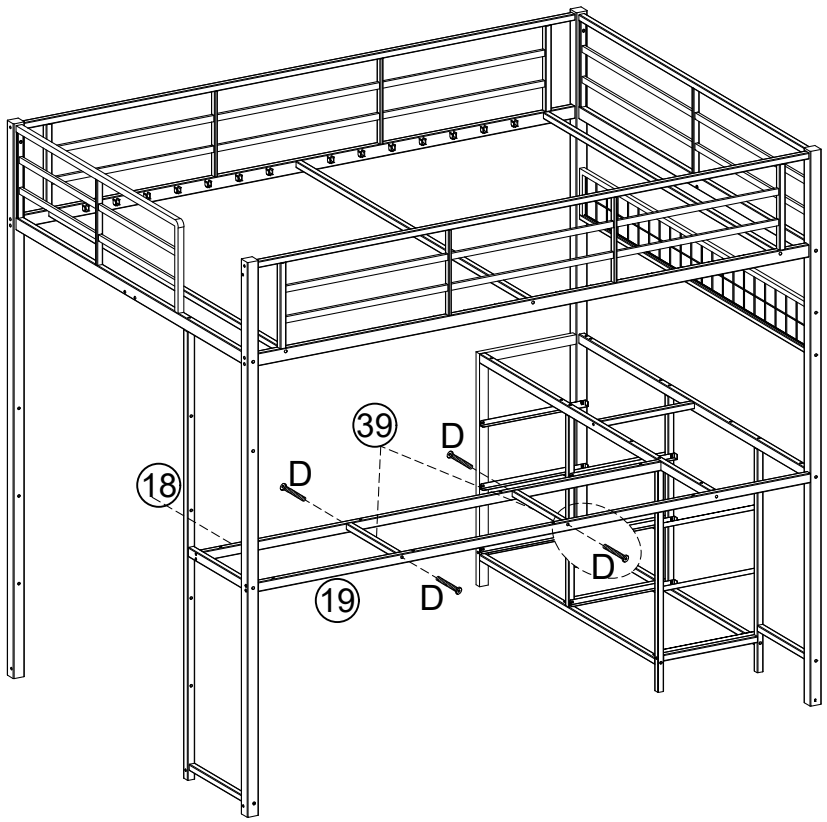



19

80%

D×8pcs

M6×38mm

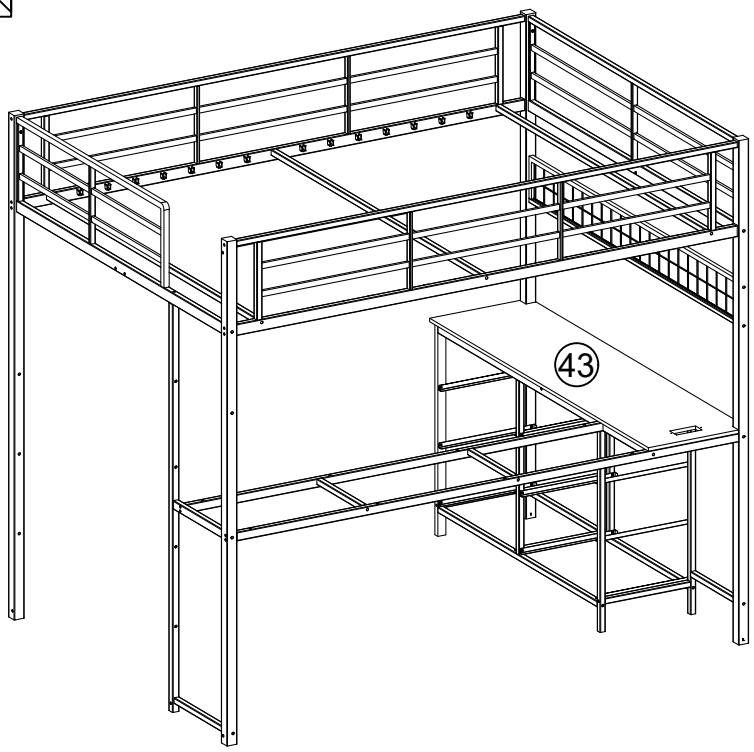

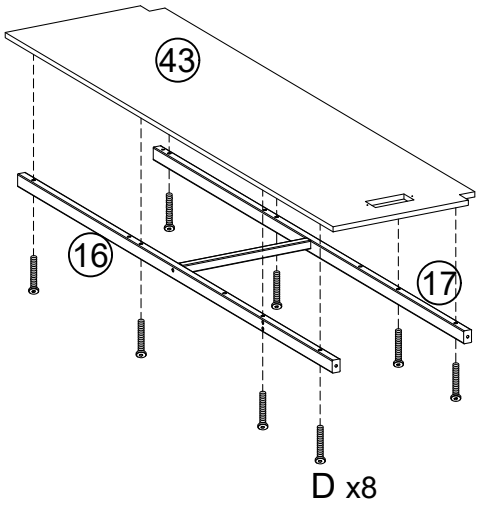



20

80%

D×8pcs

M6×38mm

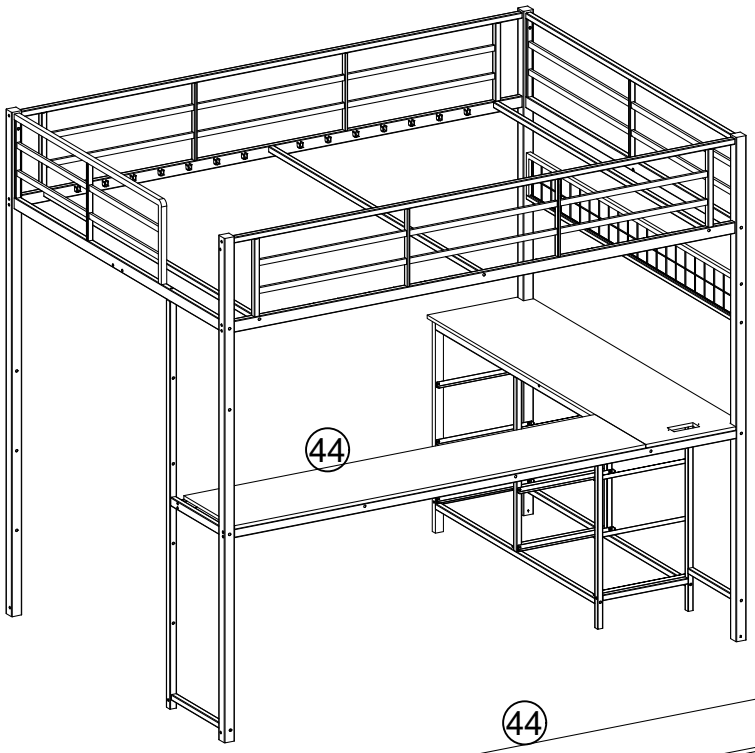

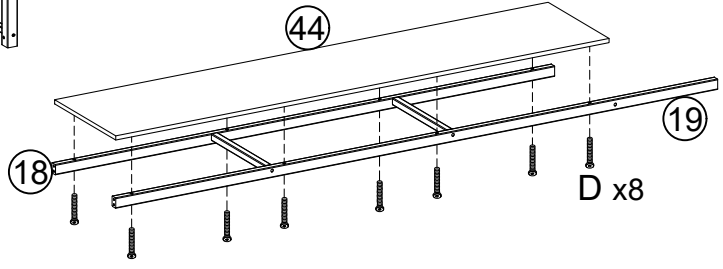


21




J×2pcs




M4×12mm

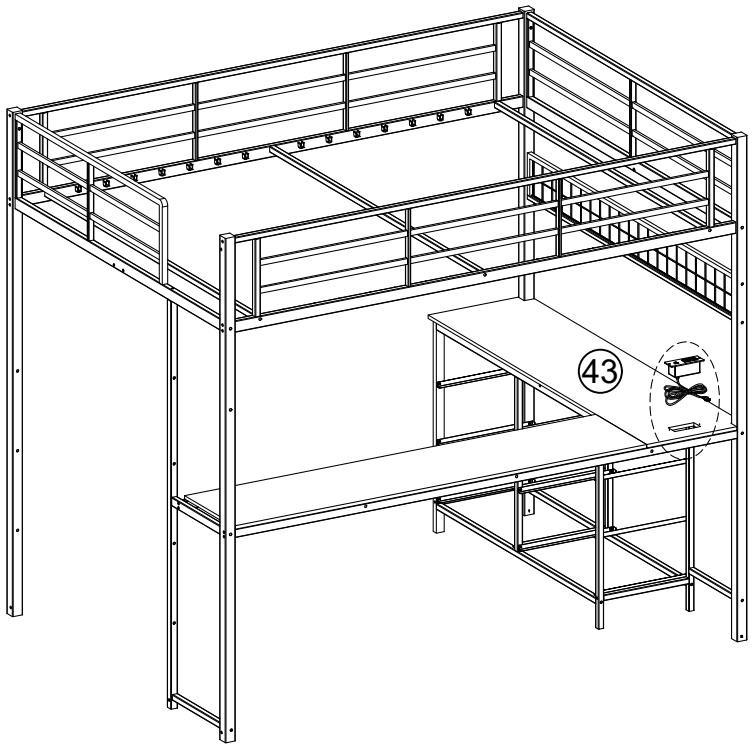

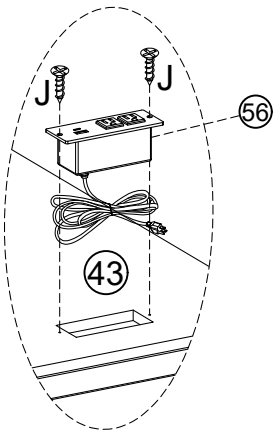

22



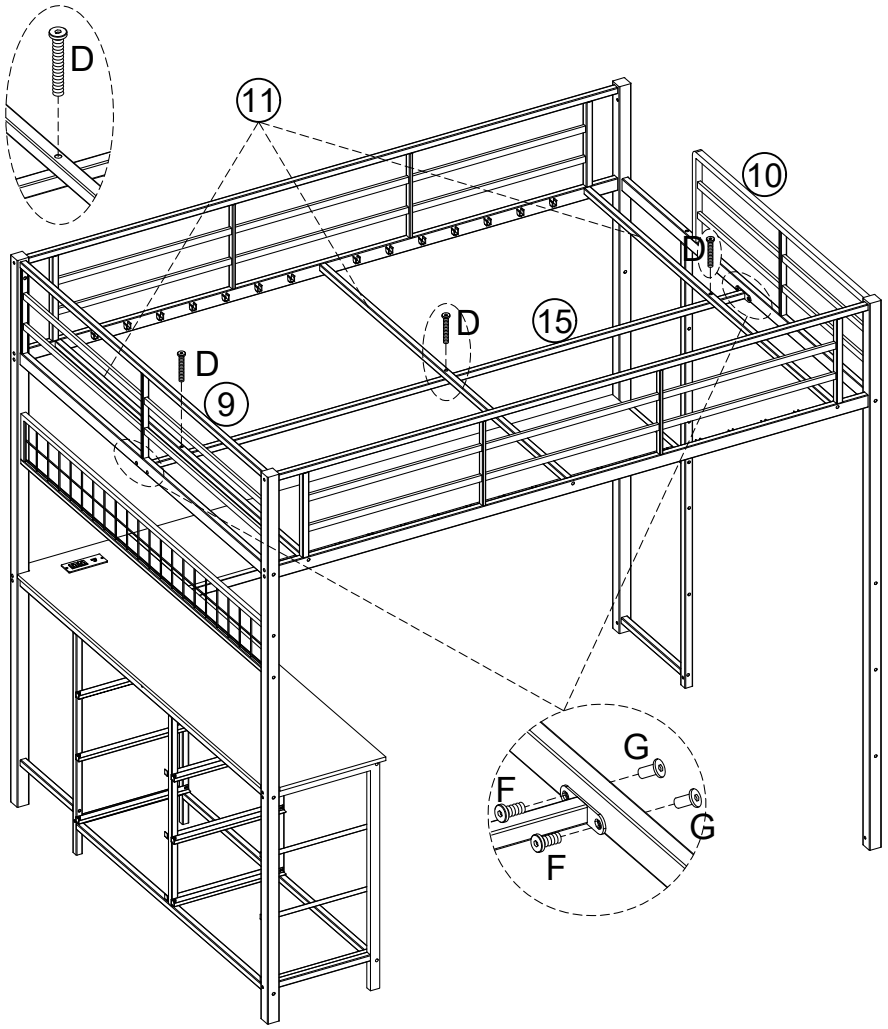

D×3pcs



M6×38mm

F×4pcs



M6×15mm

G×4pcs




M6×15mm


23



Step 1.

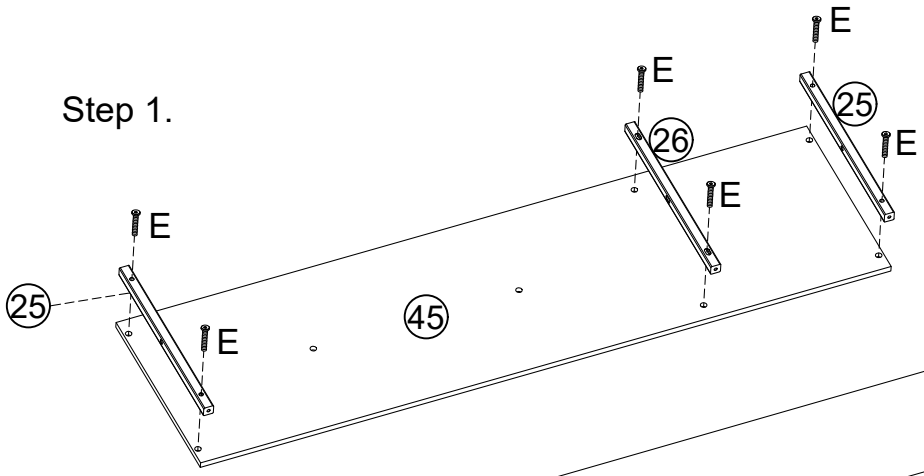


Step 2.

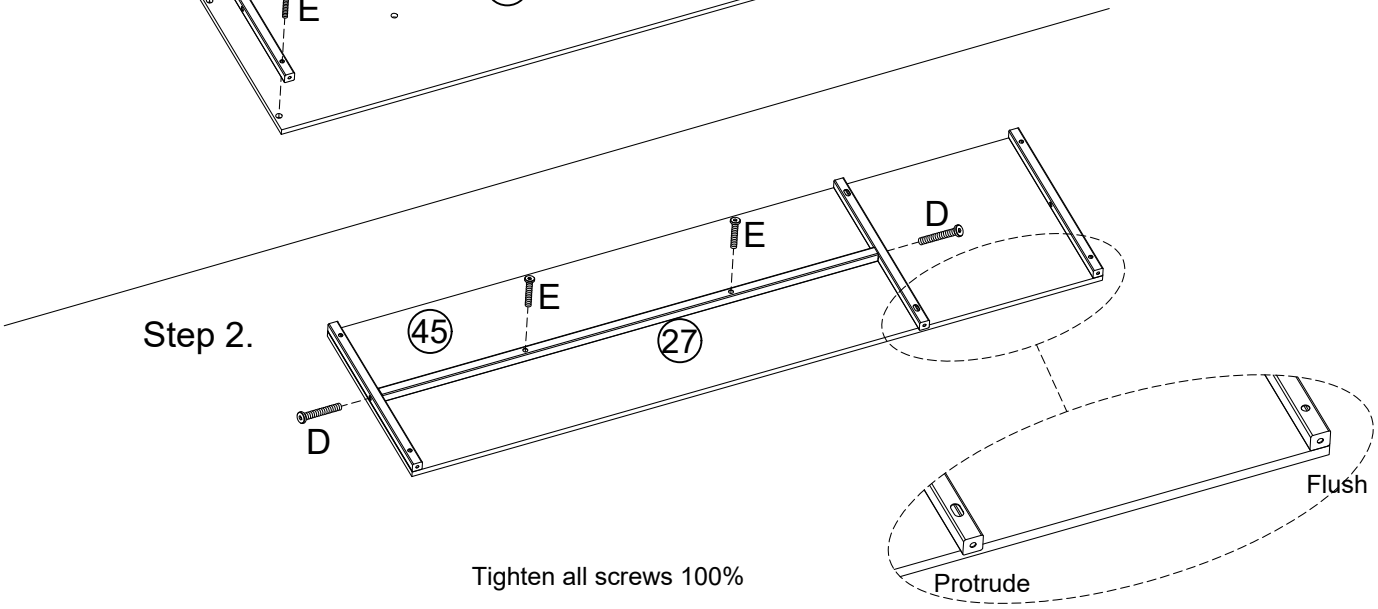

Tighten all screws 100%

D×2pcs



M6×38mm


E×8pcs



M6×28mm

24



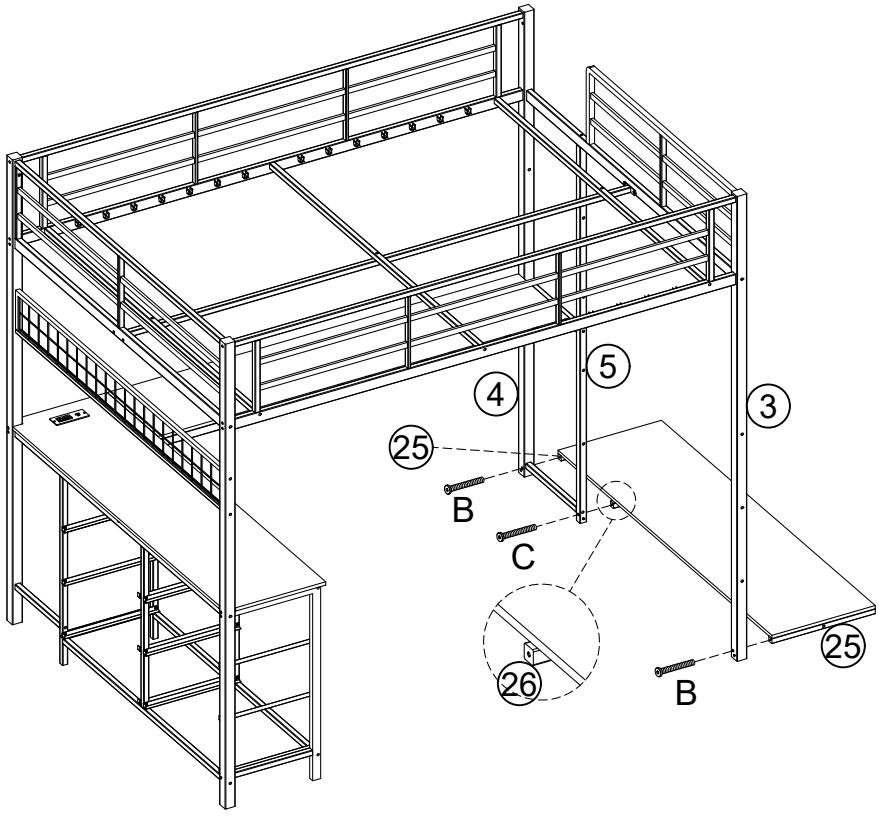

B×2pcs



M6×60mm

C×1pc




M6×50mm

25




B×1pc




M6×60mm

C×2pcs



M6×50mm

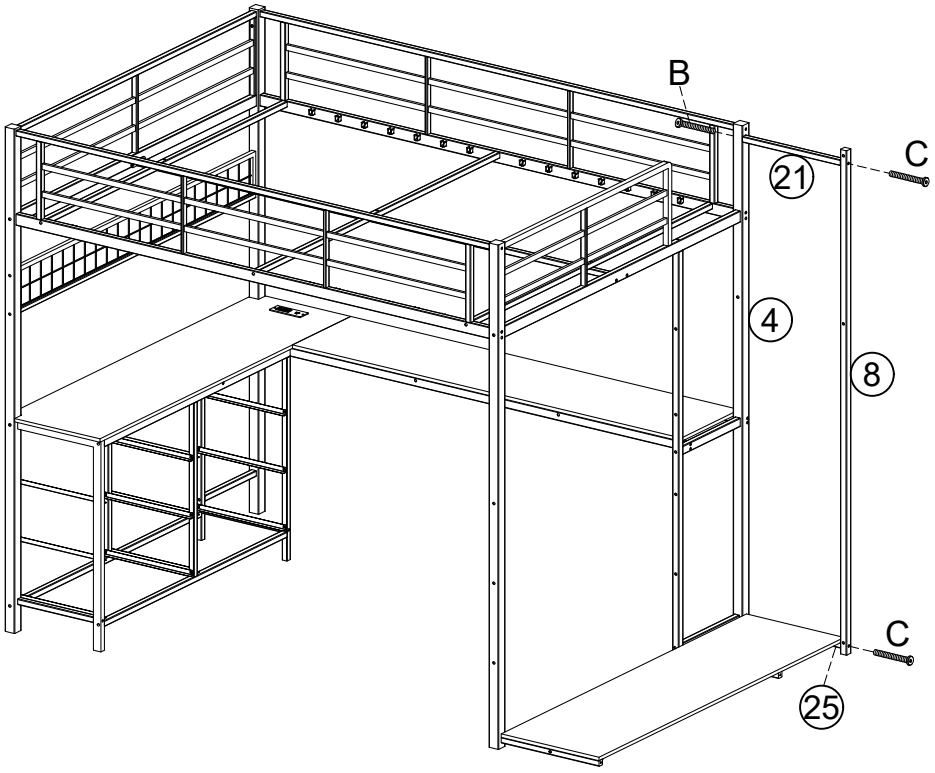


26




C×5pcs




M6×50mm

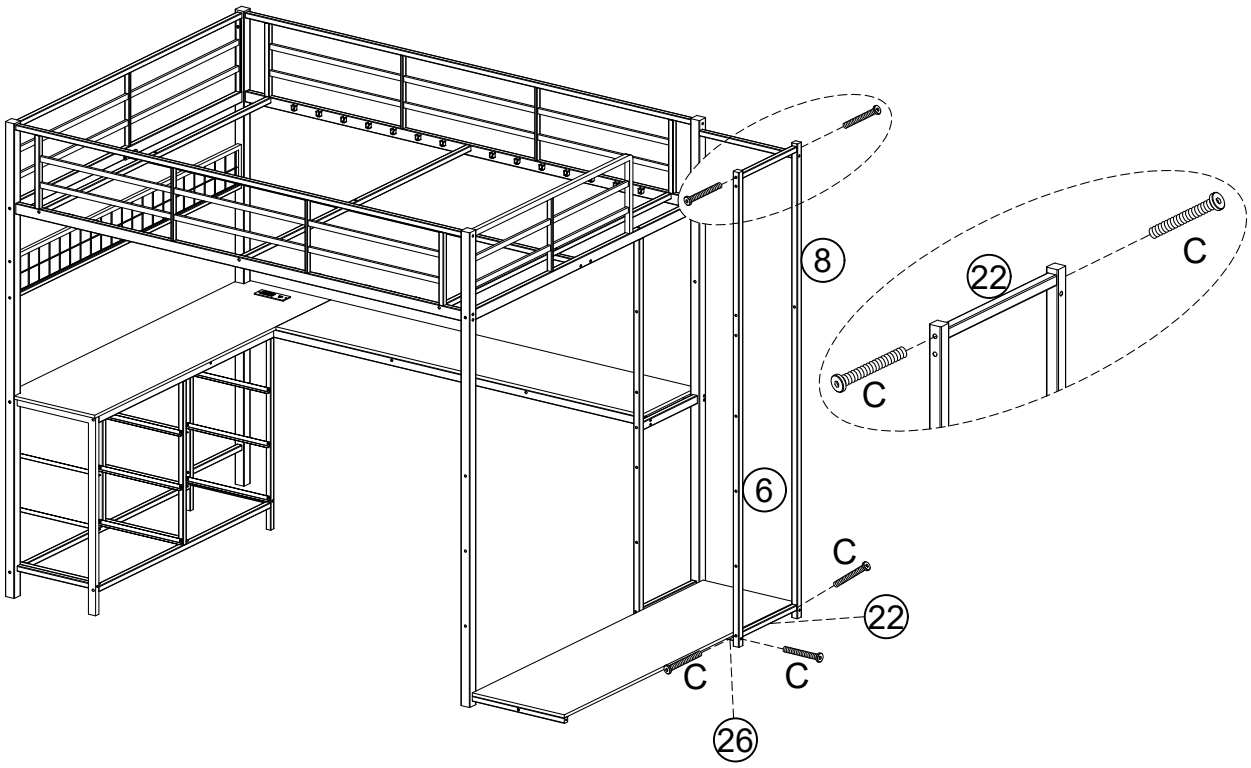

27

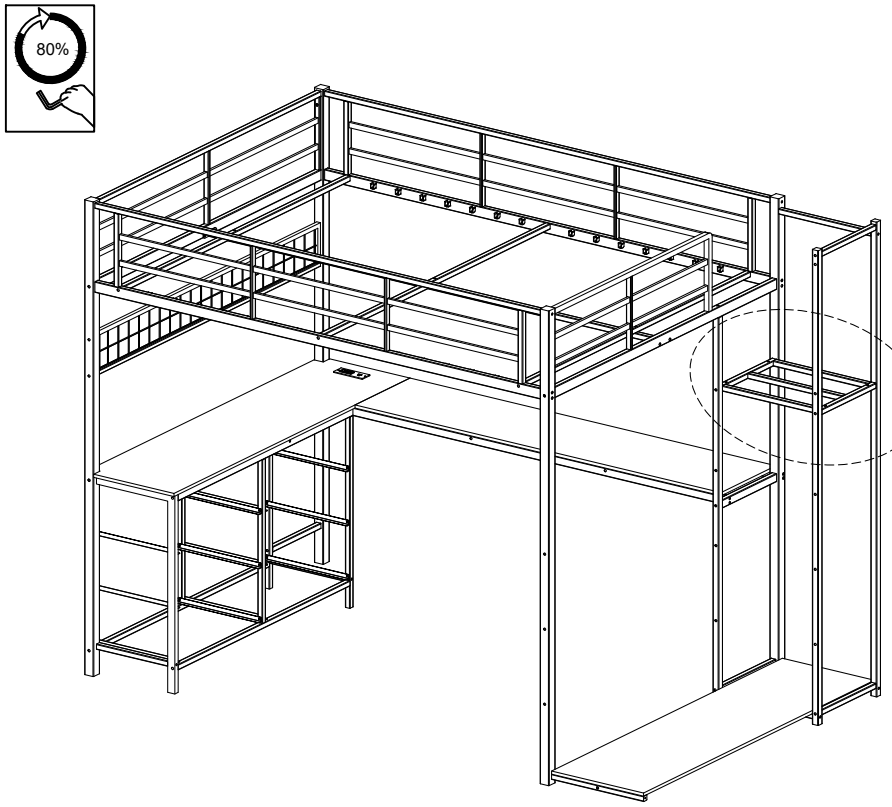


B×1pc




M6×60mm


C×3pcs



M6×50mm

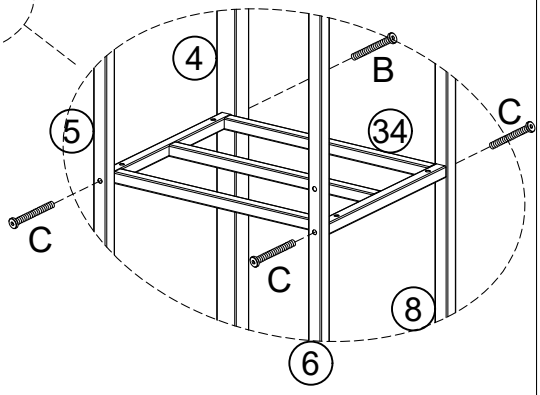


28

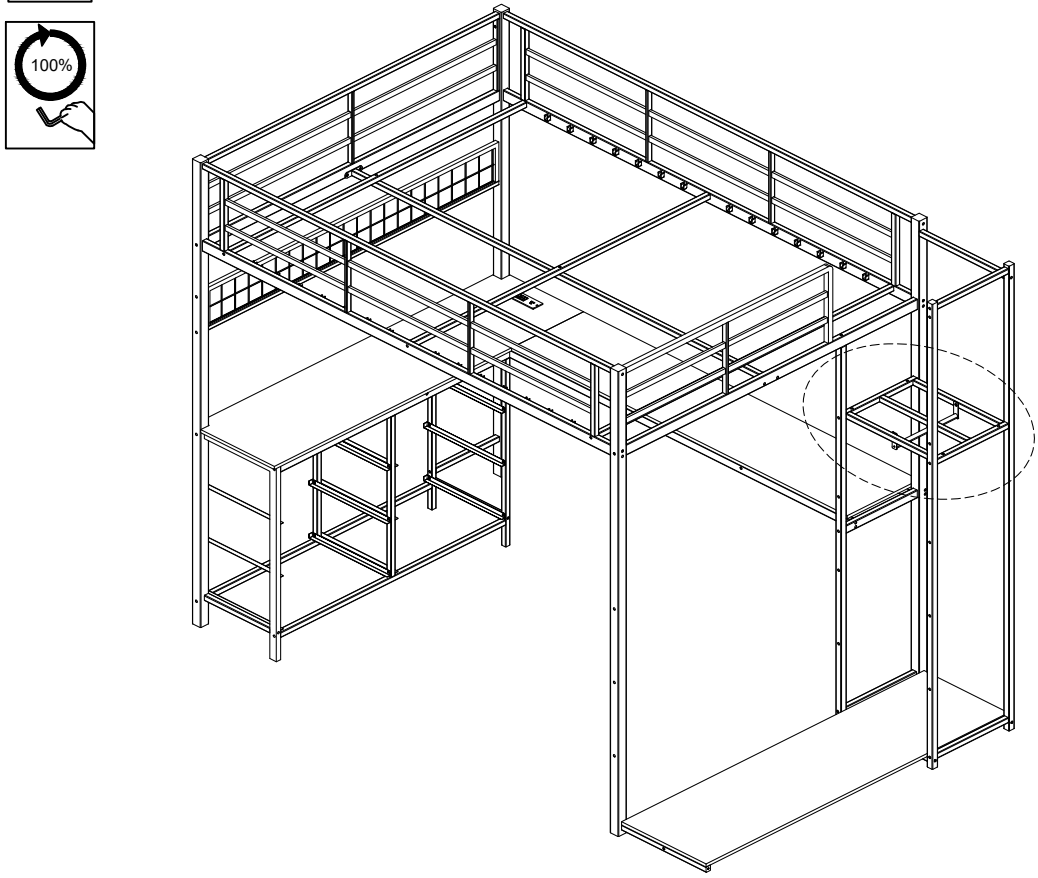

F×2pcs




M6×15mm

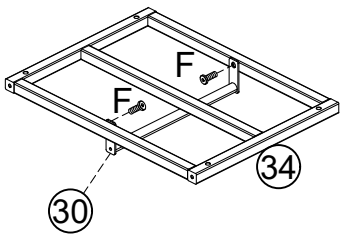


29


100%

E×4pcs



M6×28mm

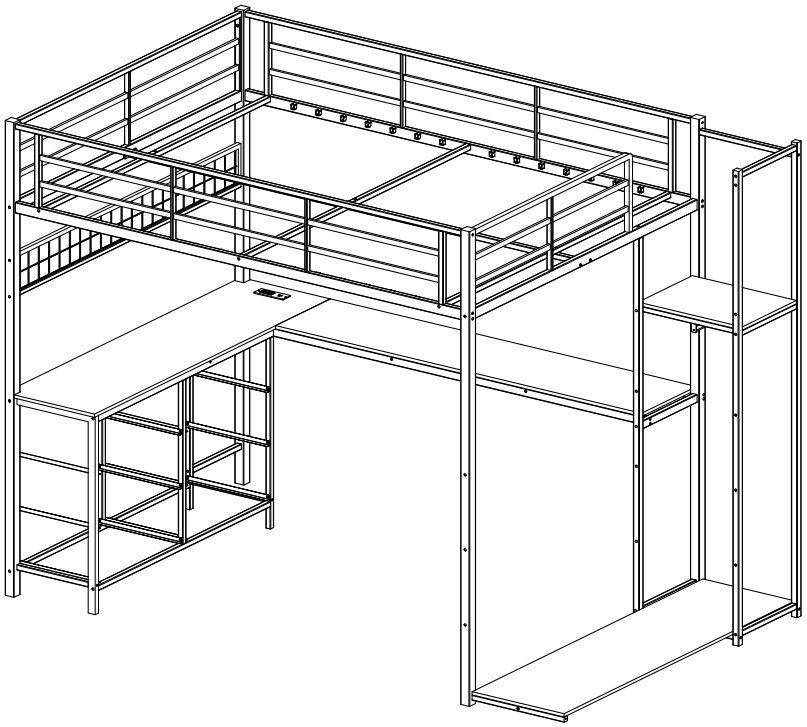


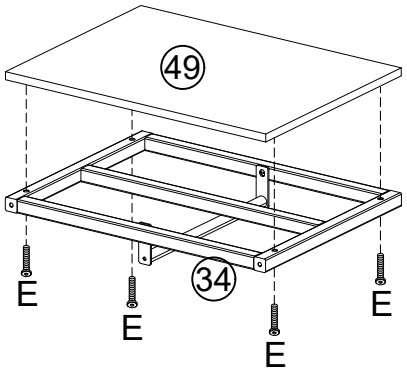


30

80%

B×5pcs



M6×60mm

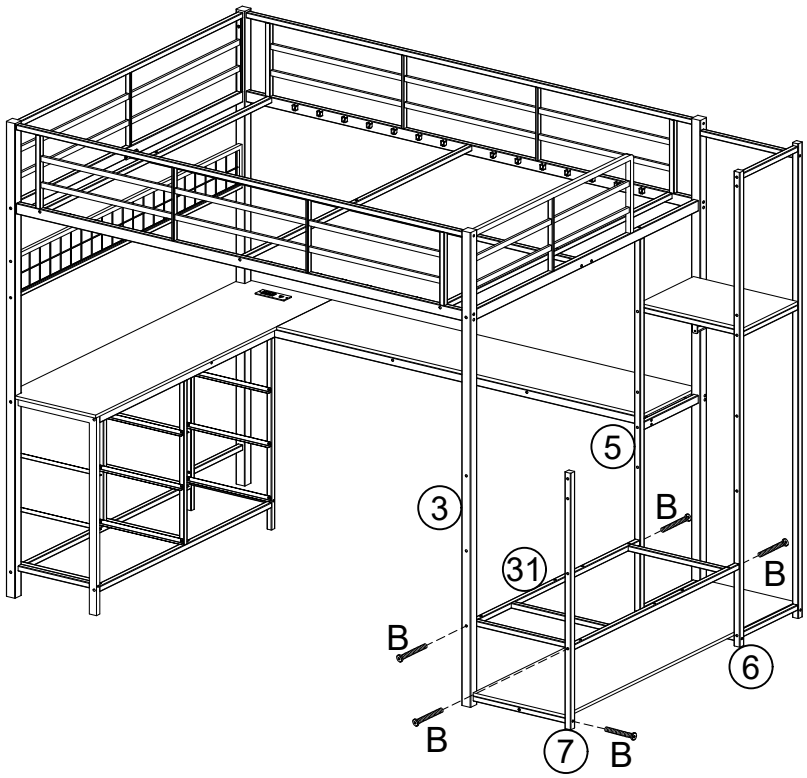

31

80%

B×2pcs





M6×60mm

E×6pcs



M6×28mm

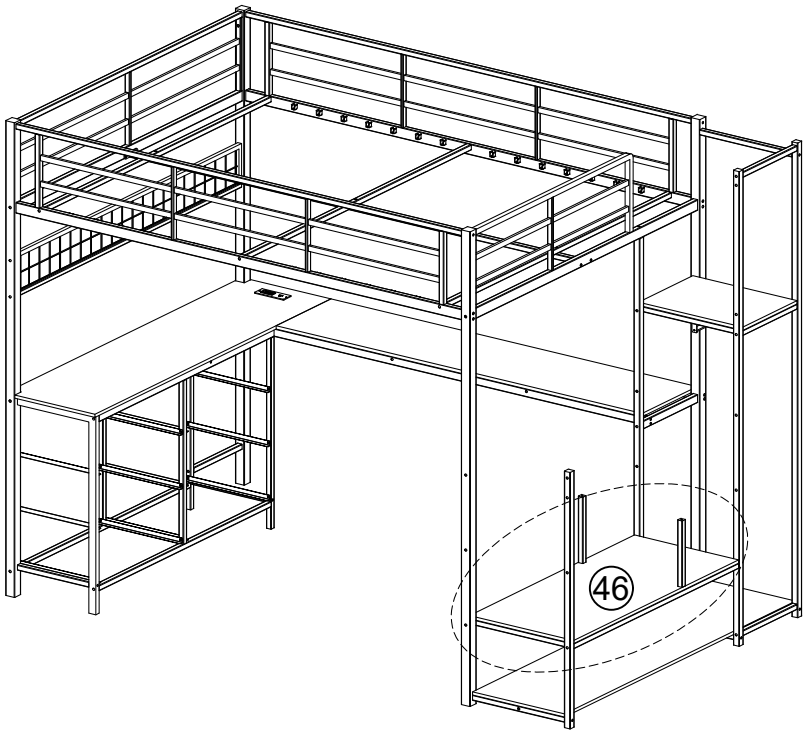

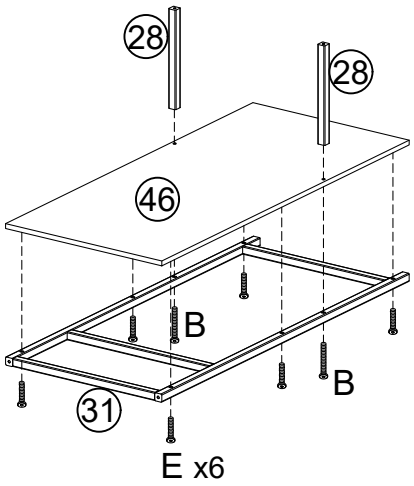

32

80%

B×4pcs



M6×60mm

D×2pcs




M6×38mm

33

80%

B×2pcs





M6×60mm

E×4pcs



M6×28mm

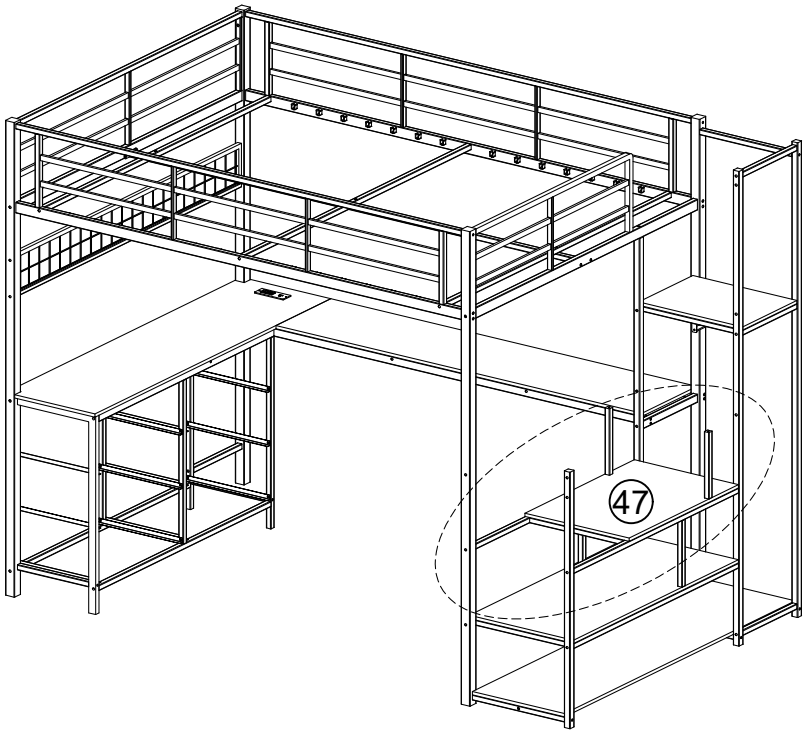

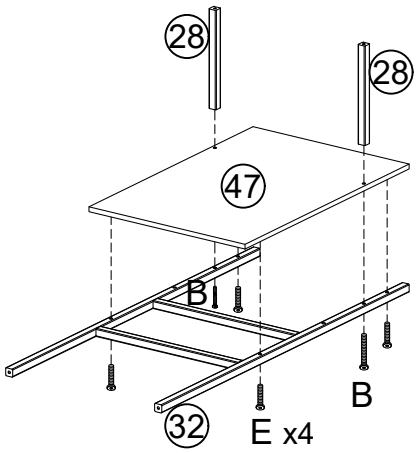

34


80%

B×4pcs





M6×60mm

D×2pcs



M6×38mm

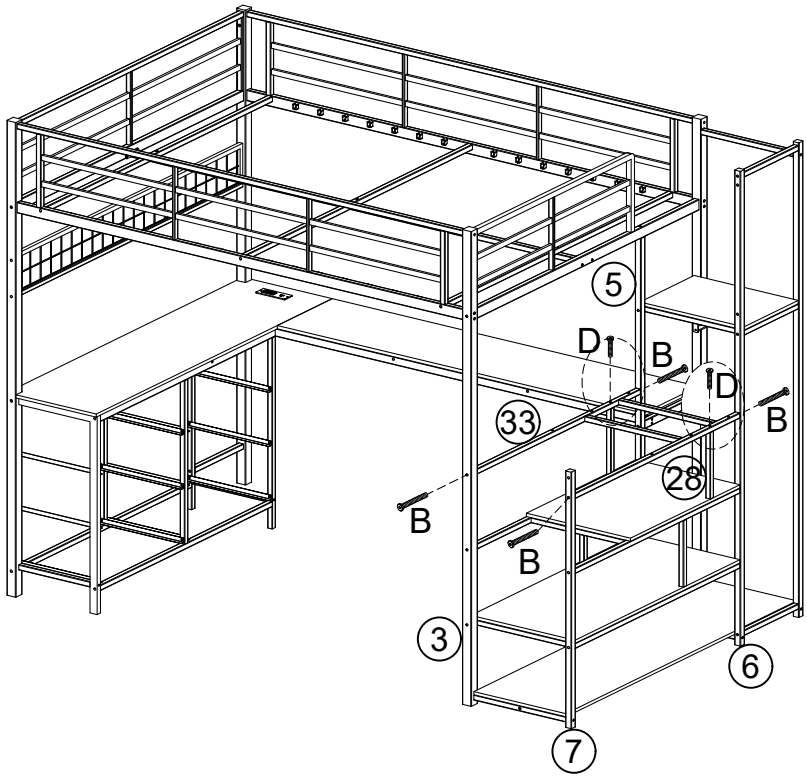

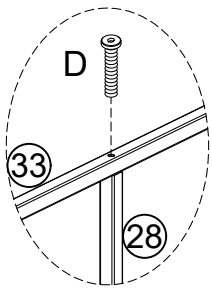


35


80%

E×4pcs



M6×28mm

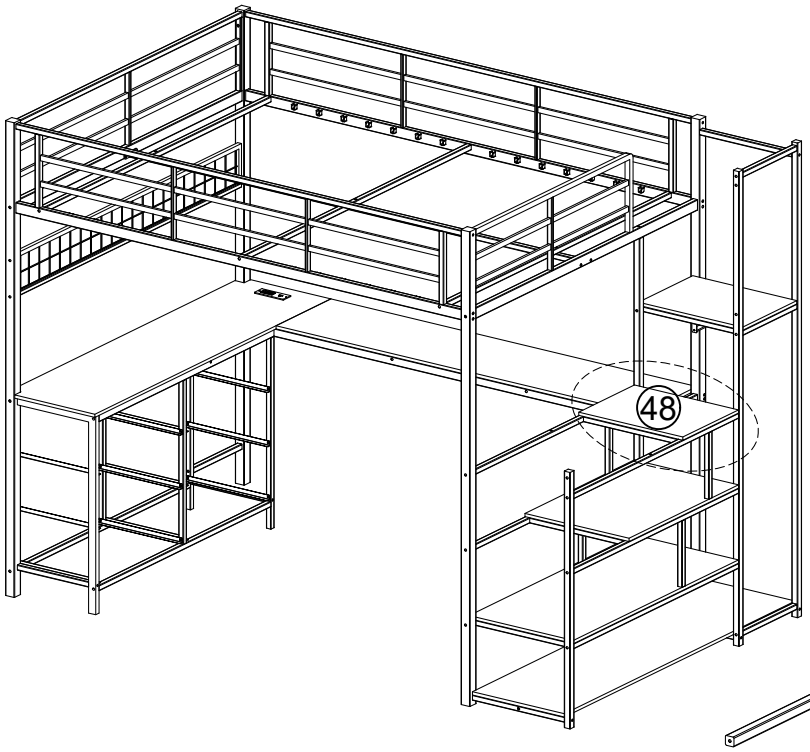

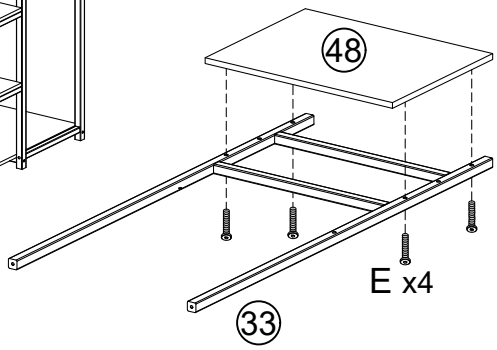


36

80%

C×3pcs




M6×50mm

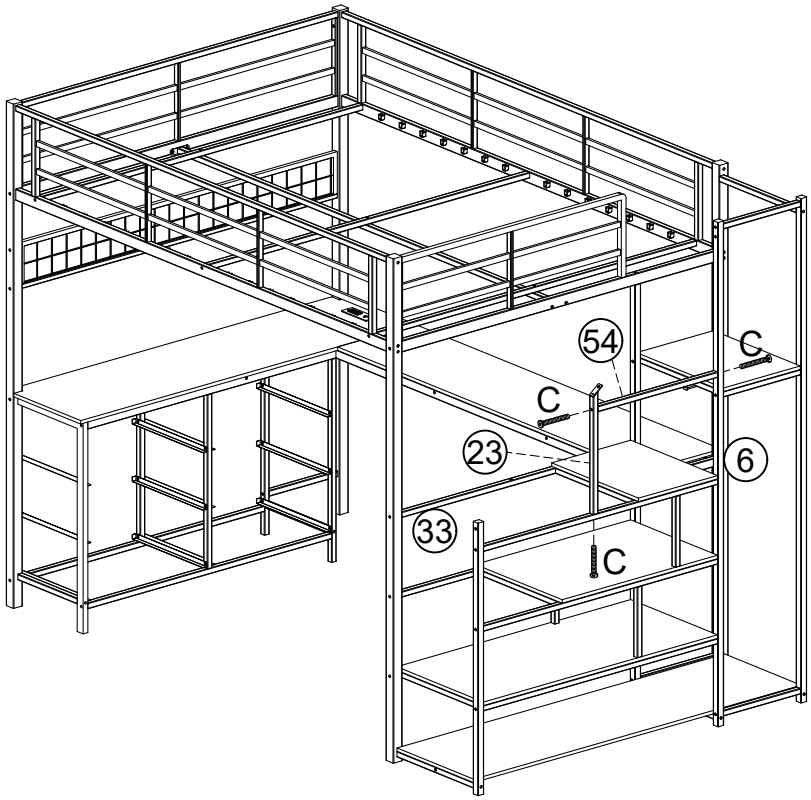

37



D×2pcs



M6×38mm

F×1pc




M6×15mm

38




K×12pcs




M4×10mm

L×6pcs



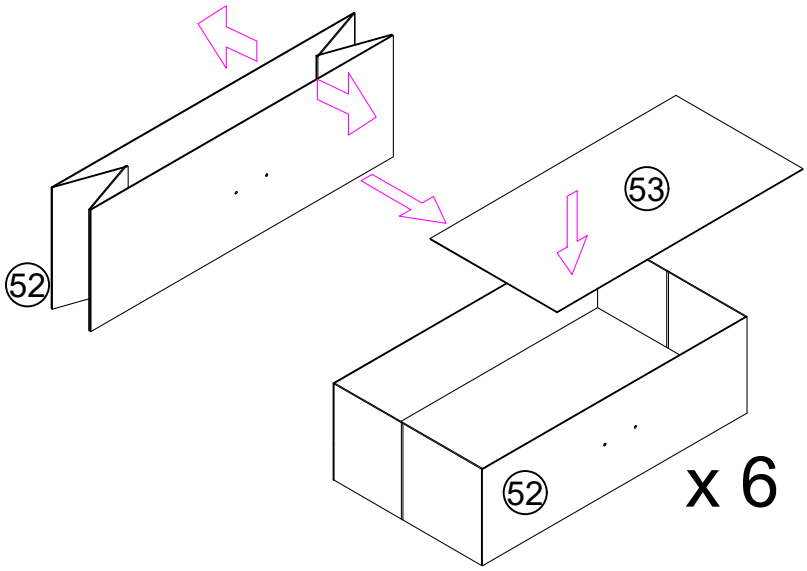


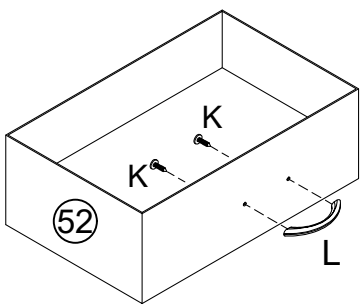

x 6


39



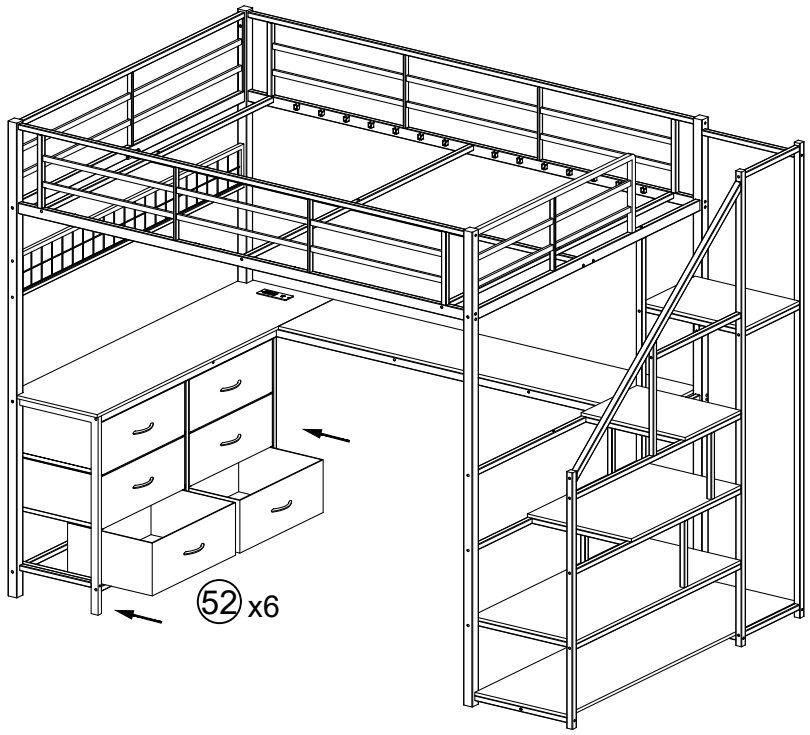


40



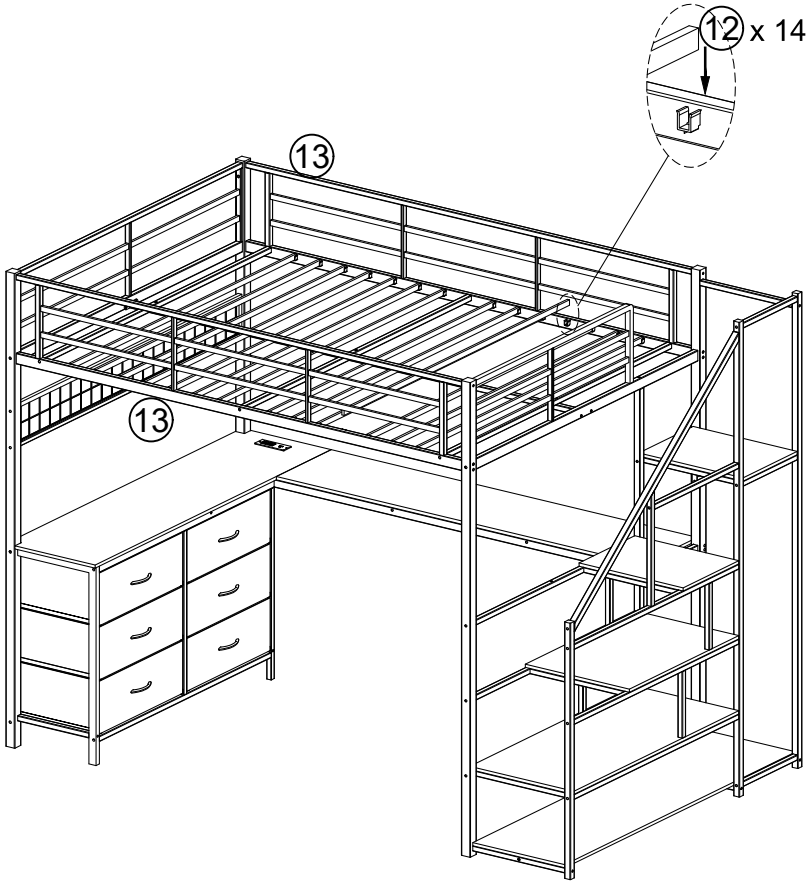


41



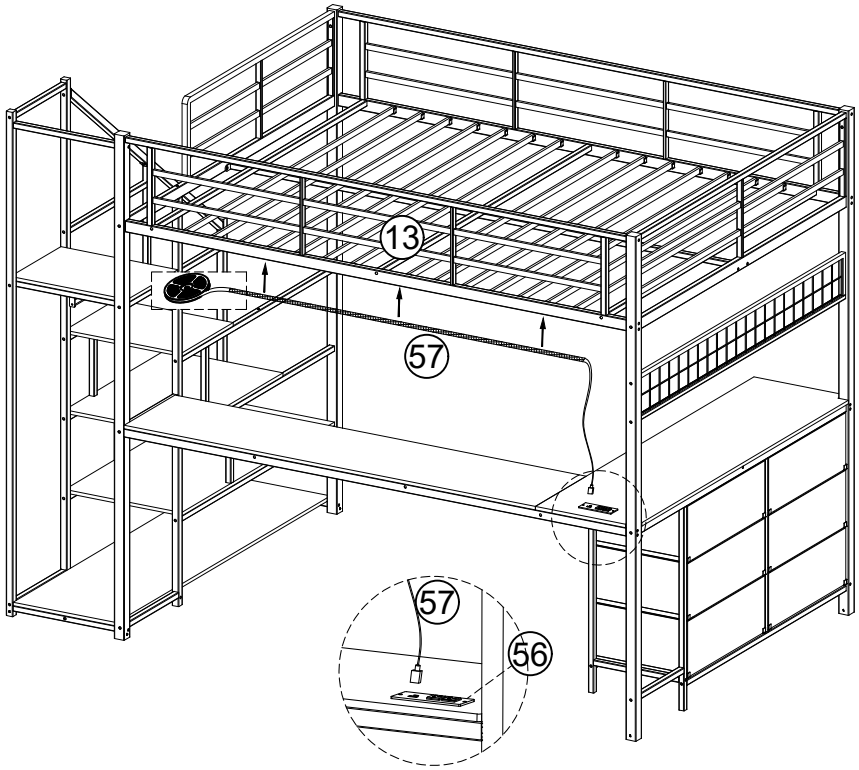

42



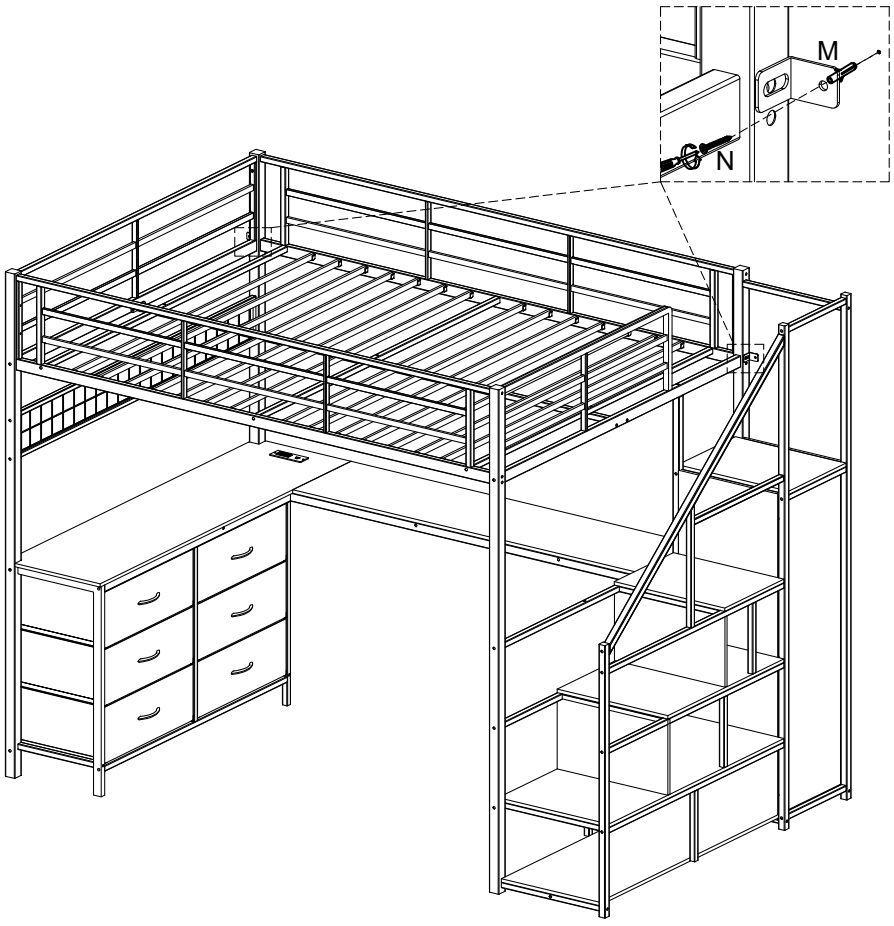

M×2pcs



M8×40mm

N×2pcs



M5×40mm

Tighten all screws 100%