

CABINET

Assembly Instructions - Please keep for future reference


N721P394507

Dimensions

Width-15.67inch

Depth-15.00inch

Height-66.06inch

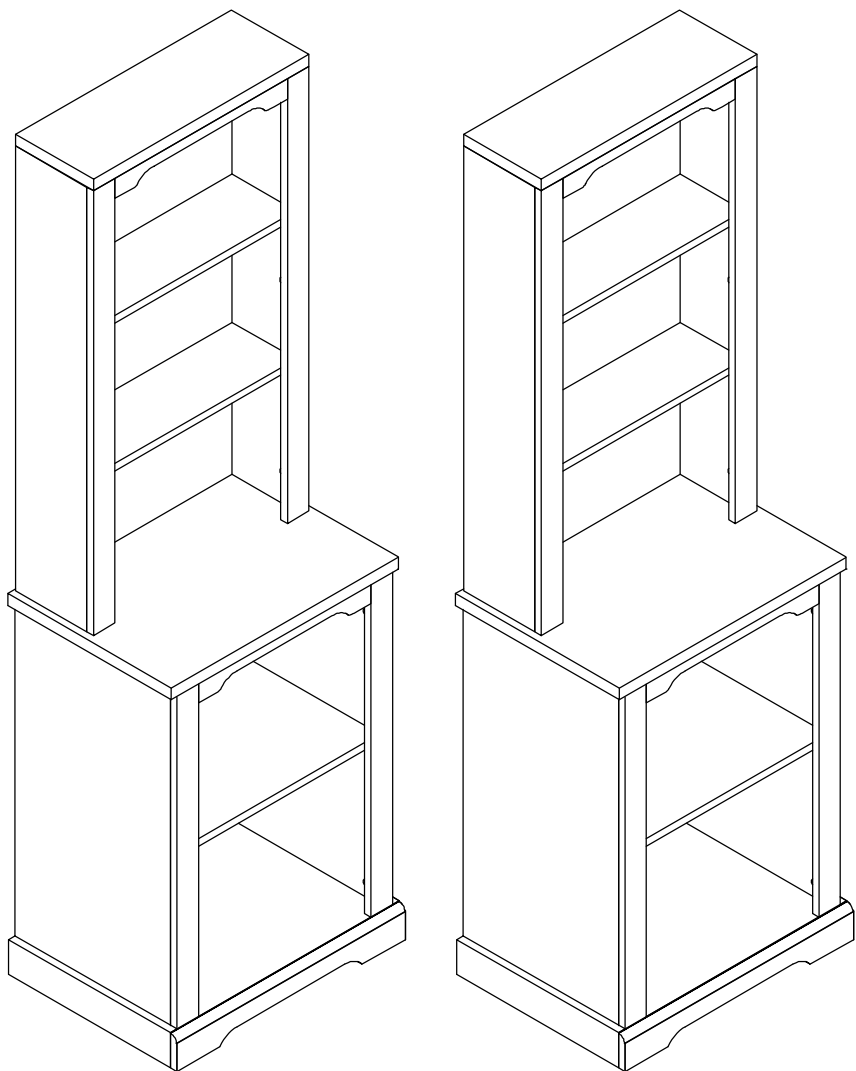

WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important - Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have **all** the components and tools listed on the following pages.
- Remove **all** fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to **layout** the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its **final** position (in the same room) as possible.
- Assemble on a **soft level** surface to avoid damaging the unit or your floor.
- Parts of the assembly **will** be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a **low torque** setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no **loose screws** on this unit.
- This product should not be discarded with household waste. Take to your **local authority** waste disposal centre.

Handy Hints

- Assemble **all** parts and bolts loosely during assembly, only once the product is complete should you **fully** tighten the bolts
- Regularly check and ensure That **all** bolts and fittings are tightend properly.




















WARNING
In order to help prevent overturning –
please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or **wall** fixing method provided (if applicable)
Do not **allow** children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not **place** heavy items in the top drawers
Do not **place** heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components - Fittings






Please check you have all the panels listed below

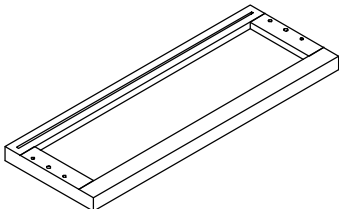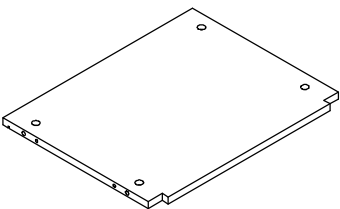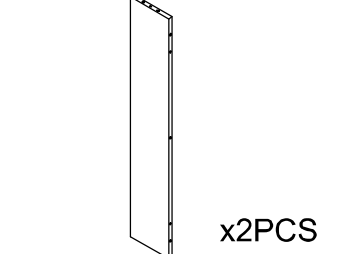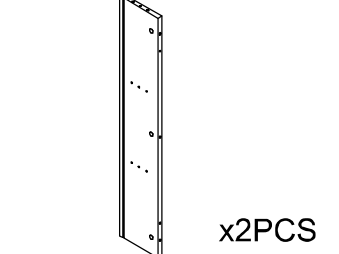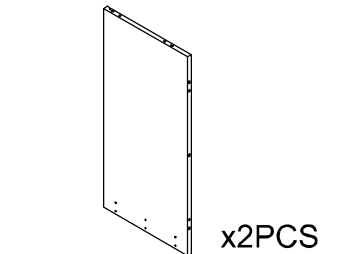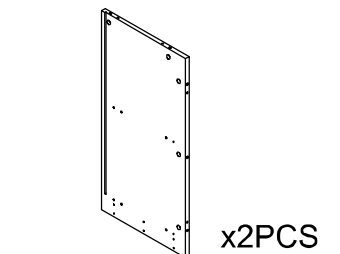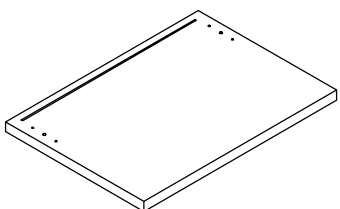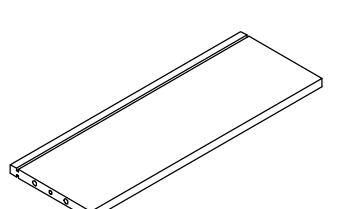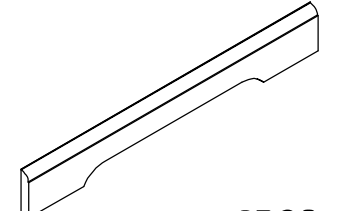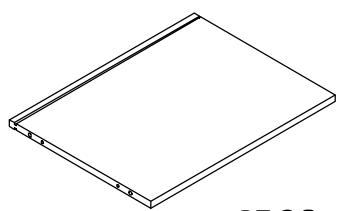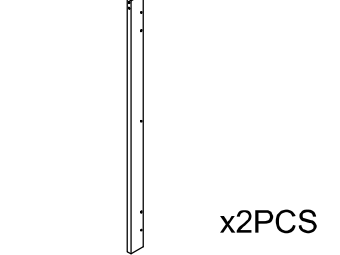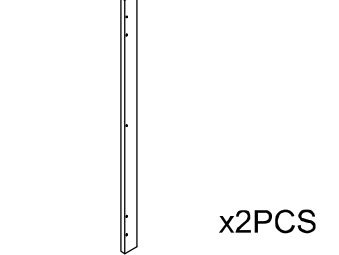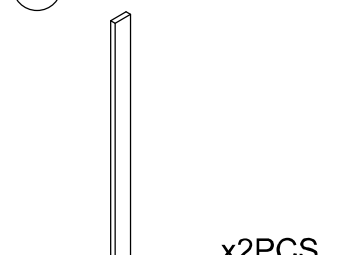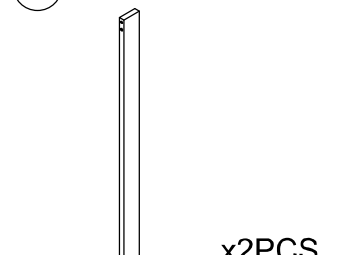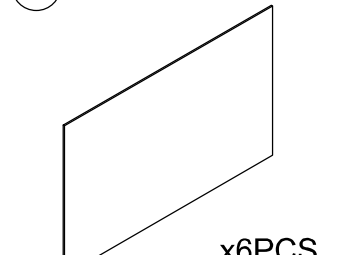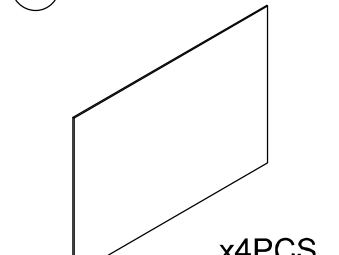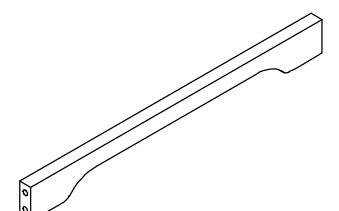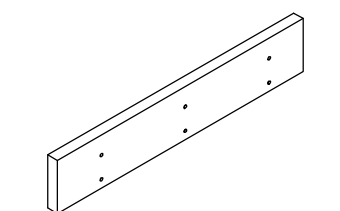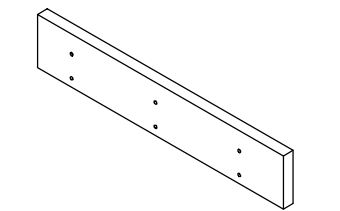① 498*178*24  x2PCS	② 468*371*12  x2PCS	③ 890*162*15  x2PCS	④ 890*162*15  x2PCS
⑤ 740*356*15  x2PCS	⑥ 740*356*15  x2PCS	⑦ 528*378*24  x2PCS	⑧ 468*162*12  x4PCS
⑨ 530*70*15  x2PCS	⑩ 468*356*12  x2PCS	⑪ 890*48*15  x2PCS	⑫ 890*48*15  x2PCS
⑬ 740*48*15  x2PCS	⑭ 740*48*15  x2PCS	⑮ 475*296*3  x6PCS	⑯ 475*342*3  x4PCS
⑰ 398*38*15  x4PCS	⑱ 371*68*15  x2PCS	⑲ 371*68*15  x2PCS	



Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

 M6*35mm Cam Bolt x 72+3	 M15*10mm Cam lock x 72+3	 M6*30mm Dowel x 72+3	 M4*25mm Screw x 32+2
 M3*12mm Screw x 4	 M4*40mm Screw x 8+1	 Plastic Connector x 40+2	 M3*16mm Screw x 40+2
 M4*35mm Screw x 4	 Anti-Inverted Iron x 4	 M4*12mm Screw x 4	 WALL ANCHOR x 4
 Metal Plate x 2			

Tools required



Phillips screwdriver
(medium & large)


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

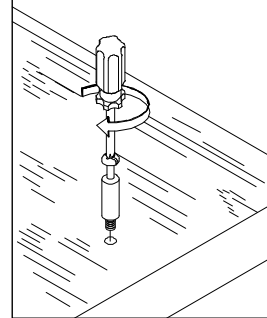

Step 2

Push the male camlock into the entry hole.

2

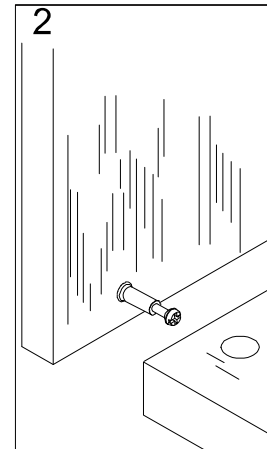


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

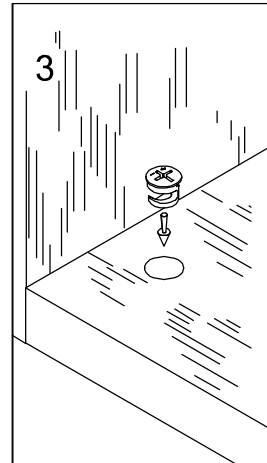


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

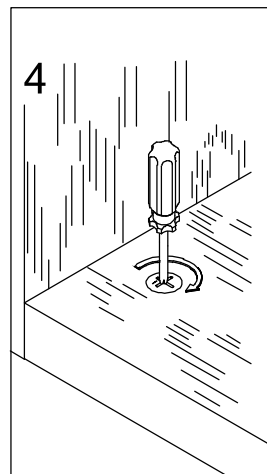


Assembly Instructions

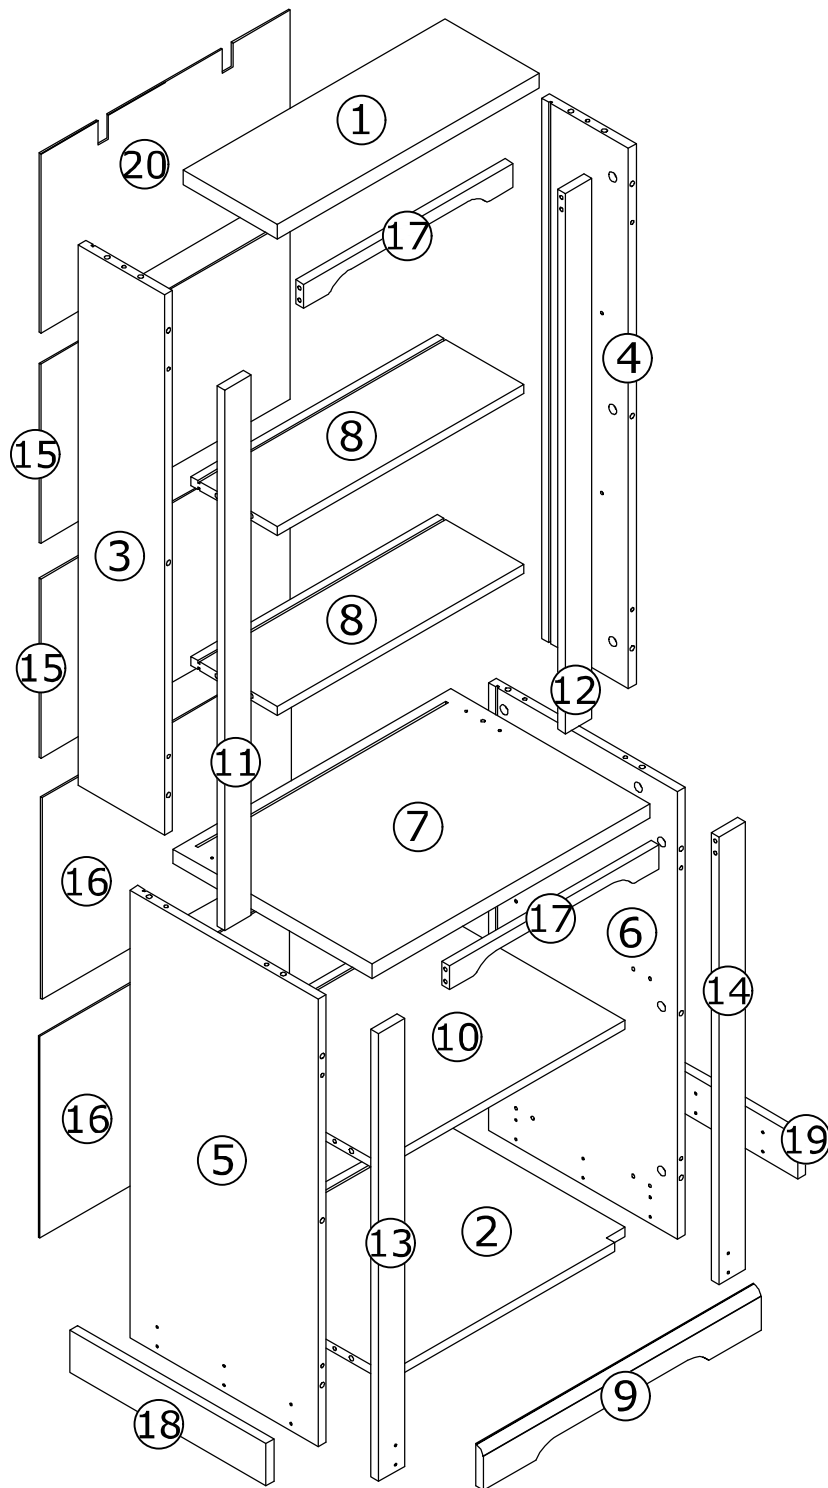

X2

Assembly Instructions

Step 1

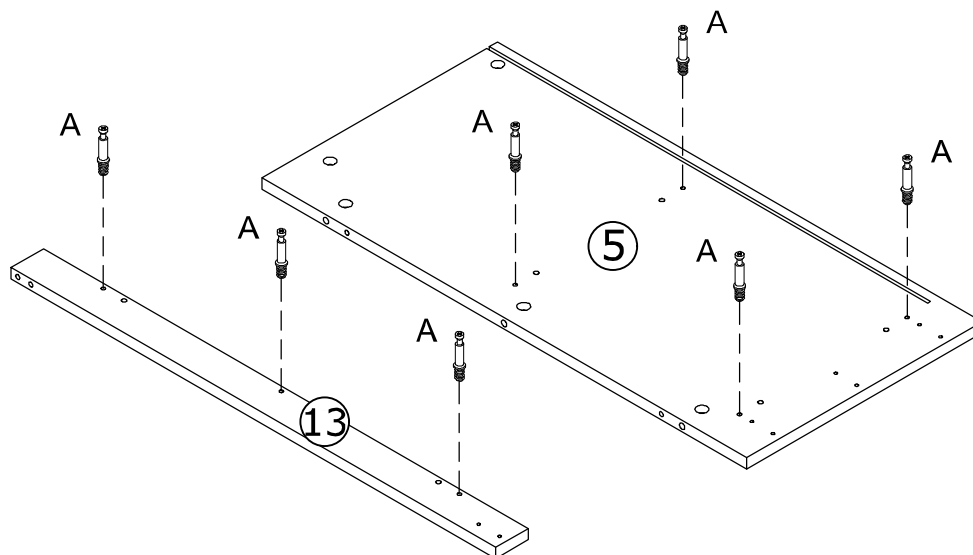


A



M6*35 Cam Bolt x 14

X2

Step 2

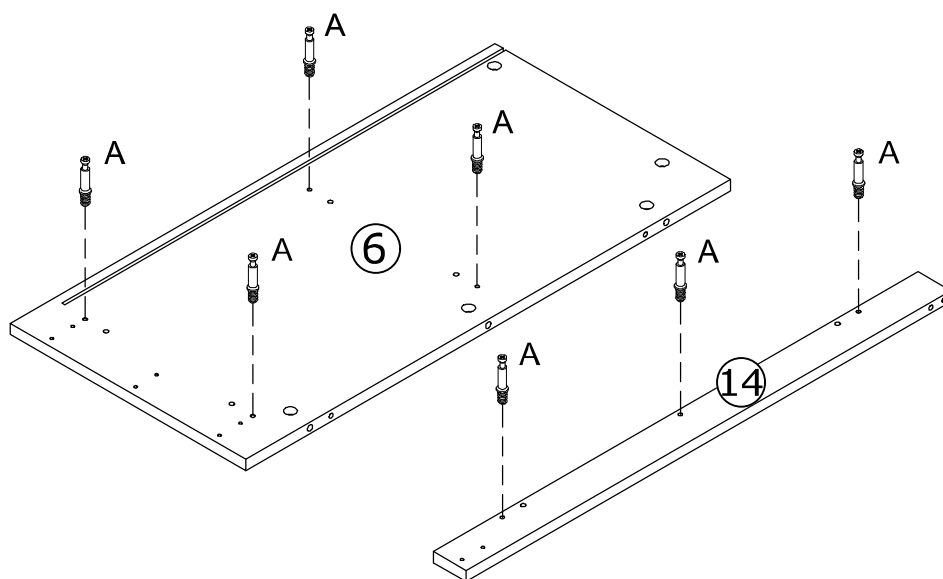

A





M6*35 Cam Bolt x 14

X2

6

Assembly Instructions

Step 3

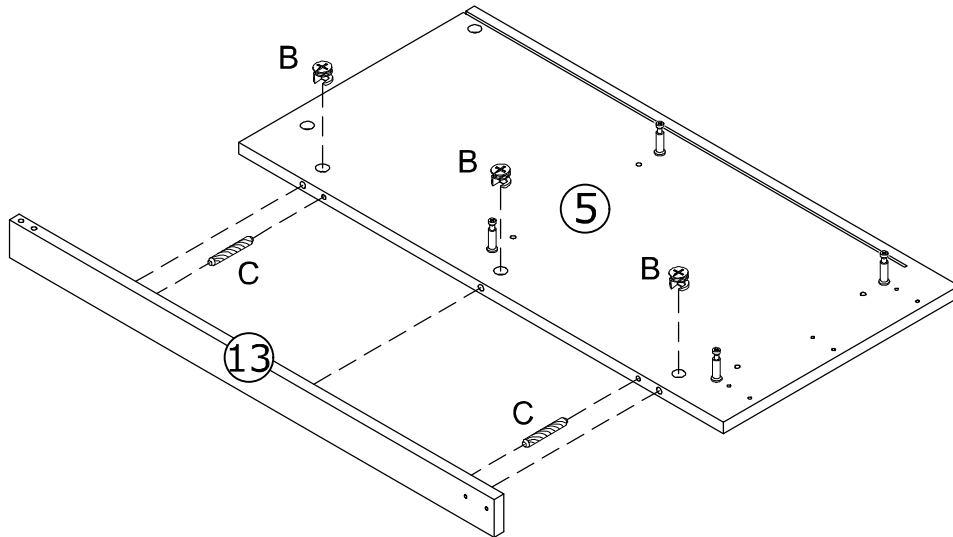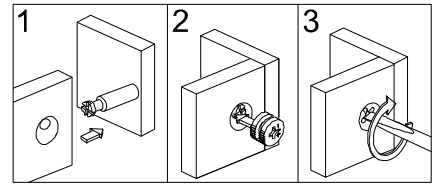

(B)



M15*10mm Cam lock x 6



(C)



M6*30mm Dowel x 4

X2

Step 4

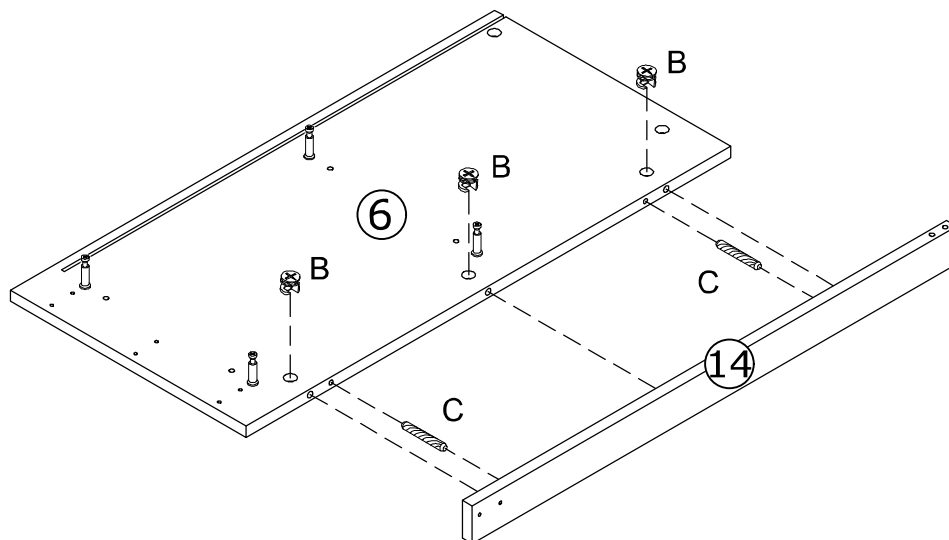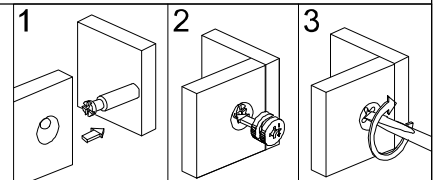

X2

7

(B)



M15*10mm Cam lock x 6



(C)



M6*30mm Dowel x 4

Assembly Instructions

Step 5

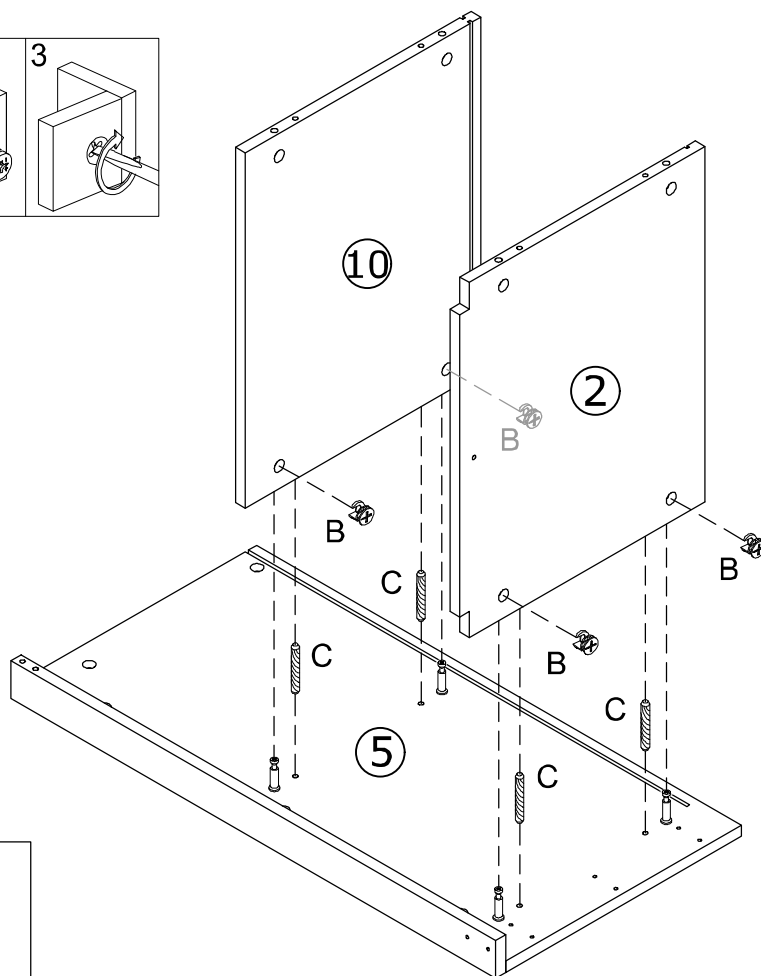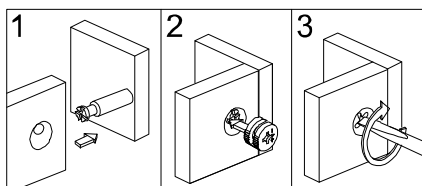

X2

(B)




M15*10mm Cam lock x 8

(C)



M6*30mm Dowel x 8

Step 6


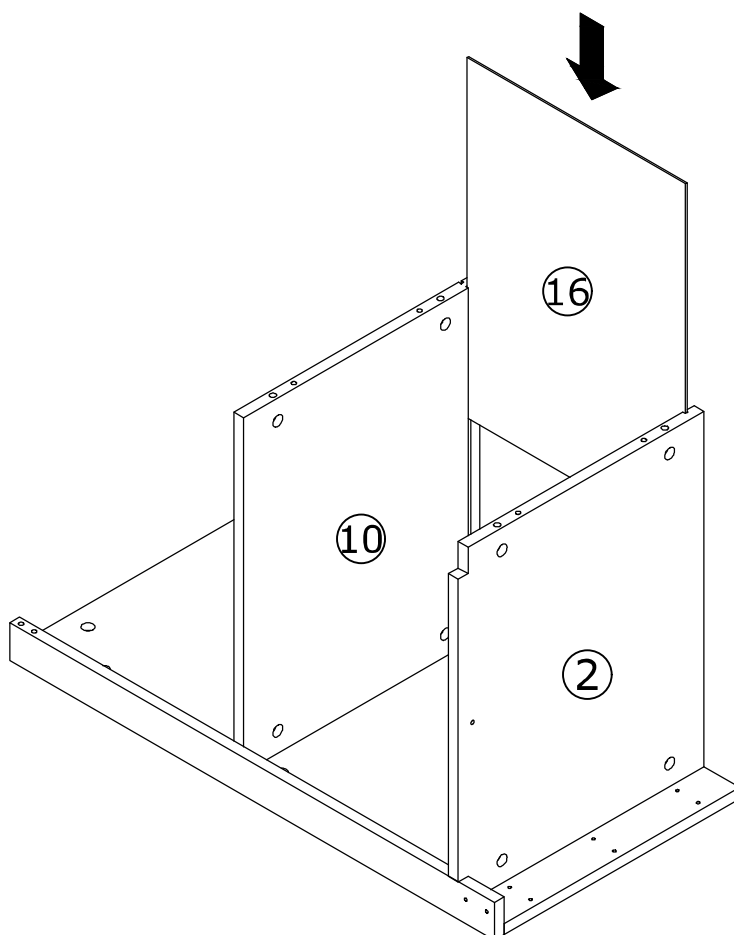


X2

8

Assembly Instructions



Step 7

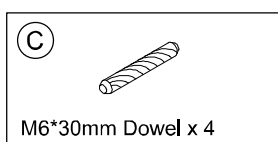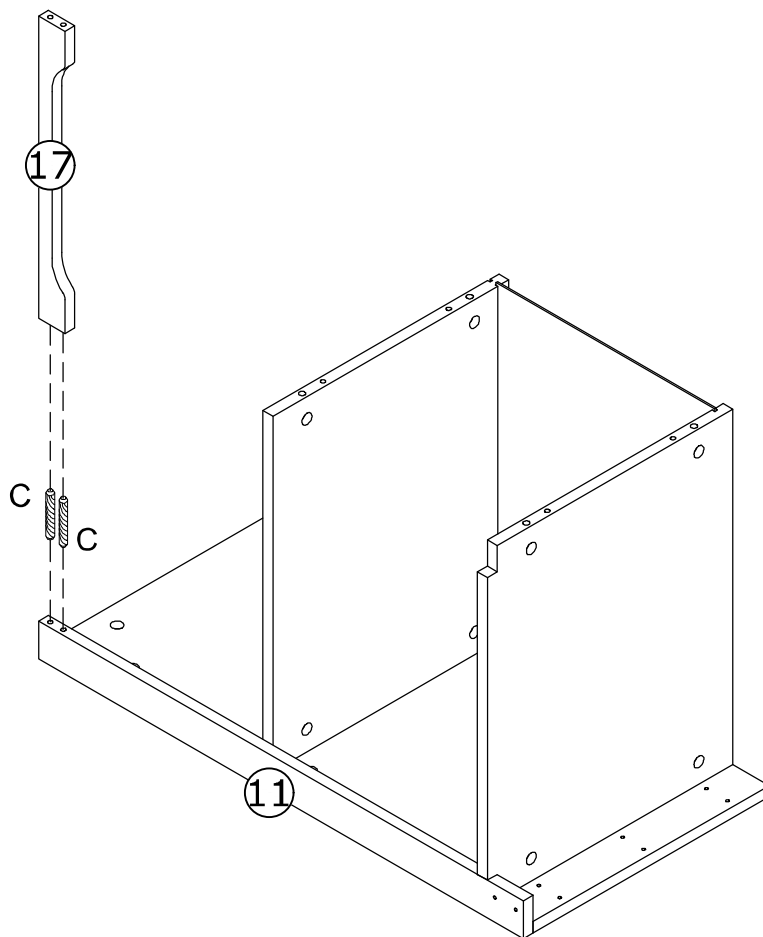

X2
9

Assembly Instructions

Step 8

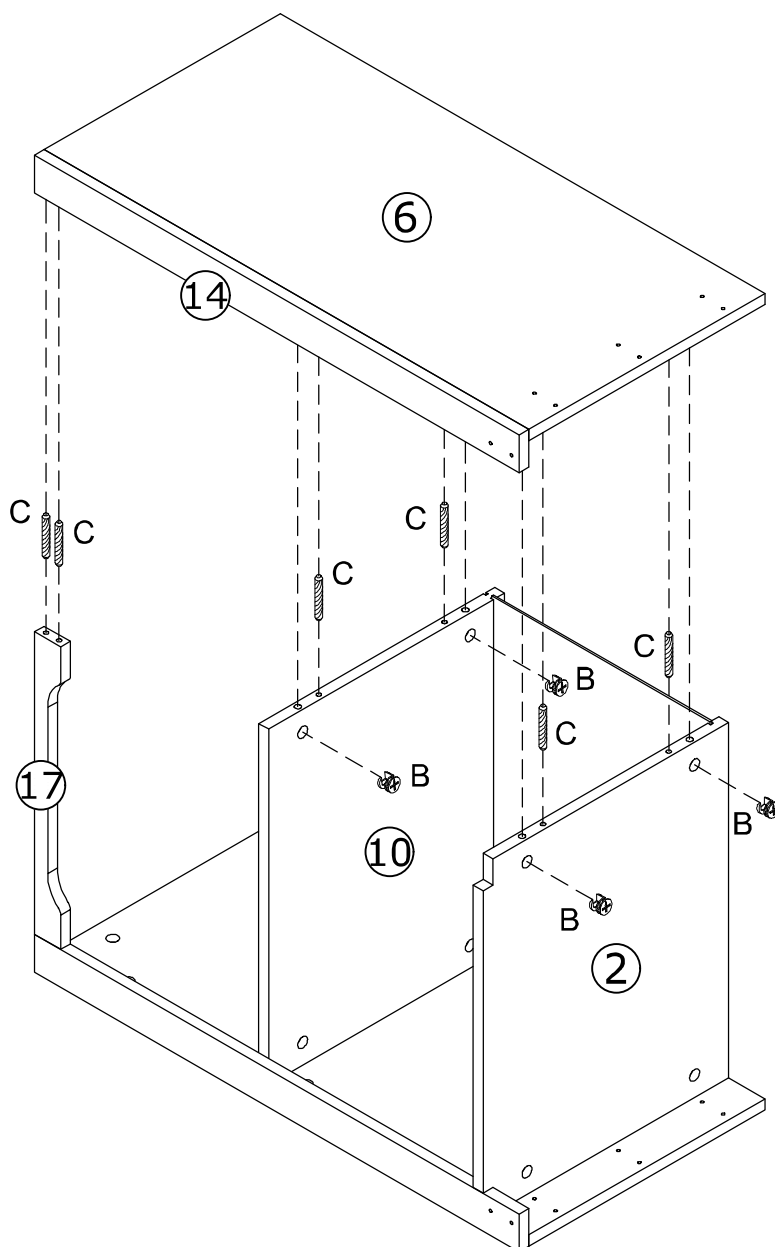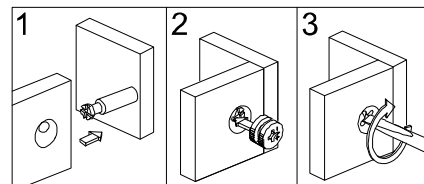

(B)  M15*10mm Cam lock x 8	(C)  M6*30mm Dowel x 12
---	--


X2
10

Assembly Instructions

Step 9




Be careful! At least two people are required

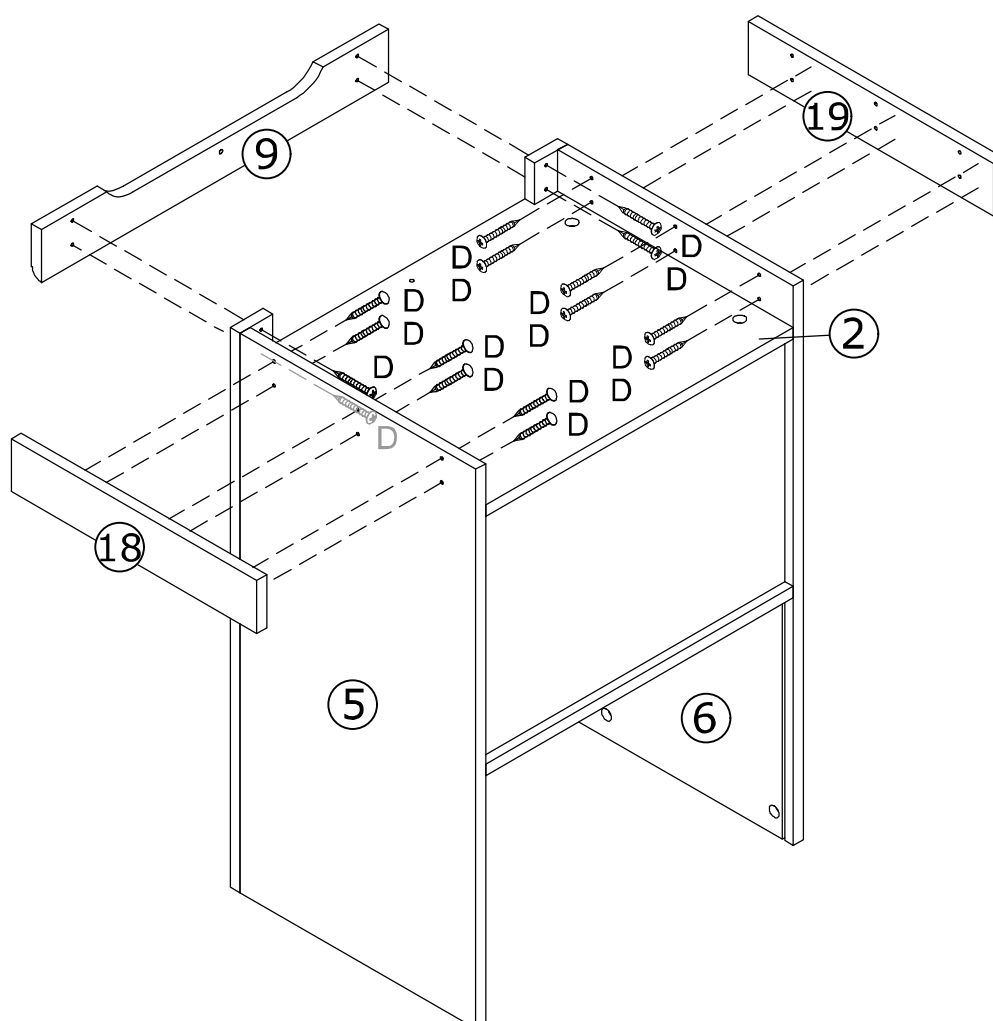

X2
11

Assembly Instructions

Step 10

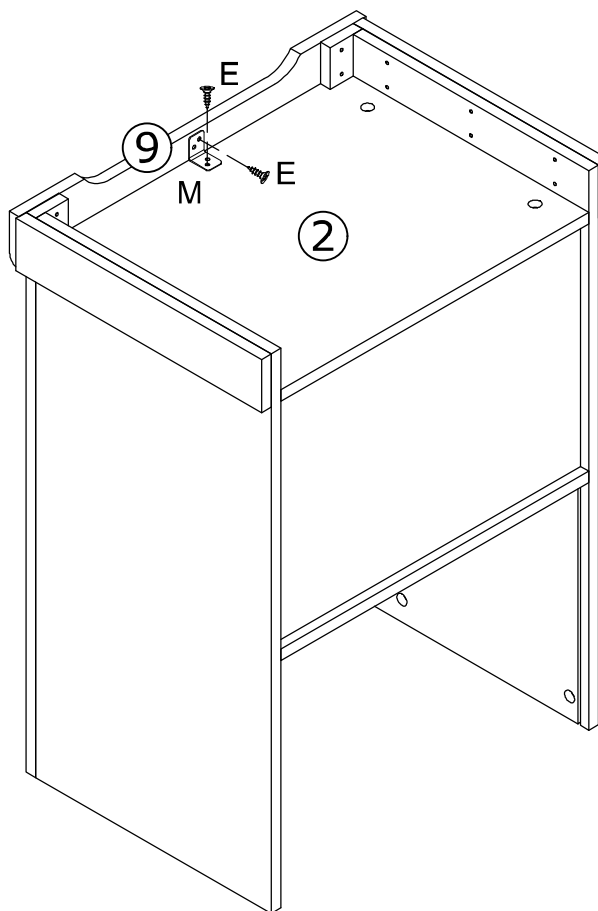

X2

(E)




M3*12mm Screw x 4

(M)



Metal Plate x 2

Step 11

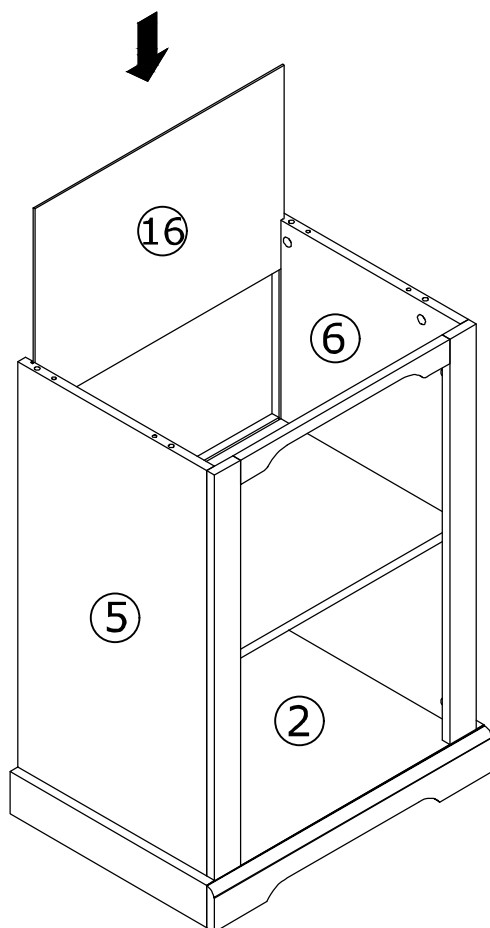

180°


Be careful! At least two people are required

X2

12

Assembly Instructions

Step 12

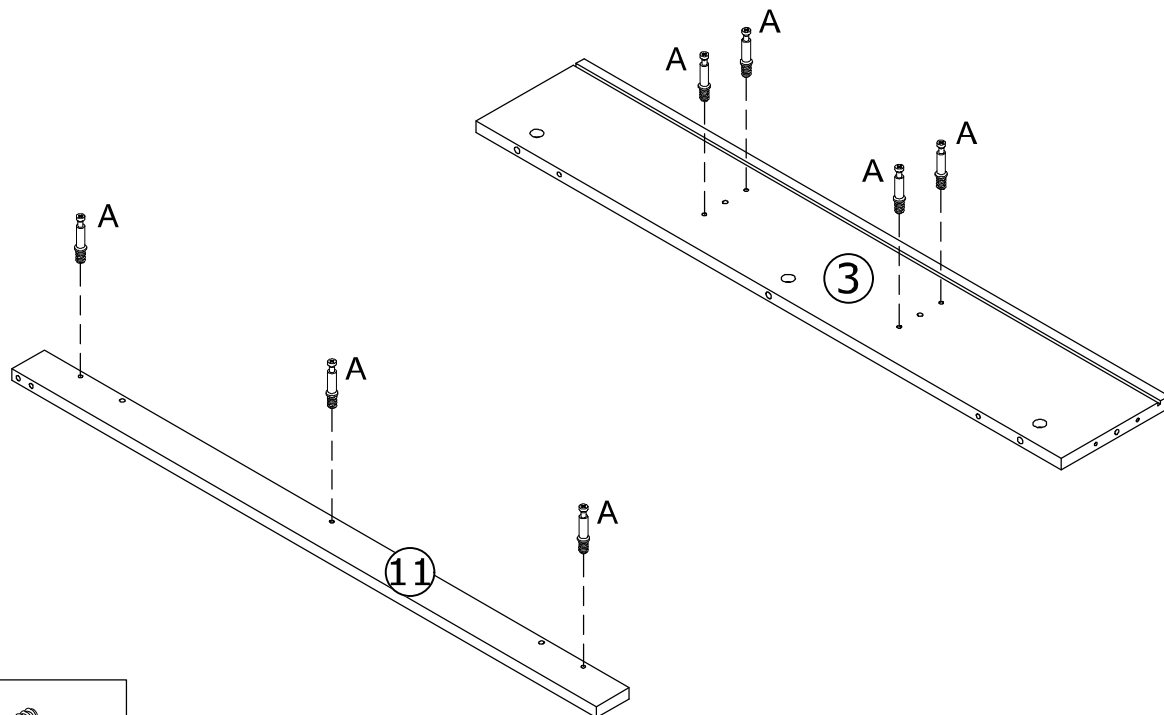


(A)



M6*35 Cam Bolt x 14

X2

Step 13

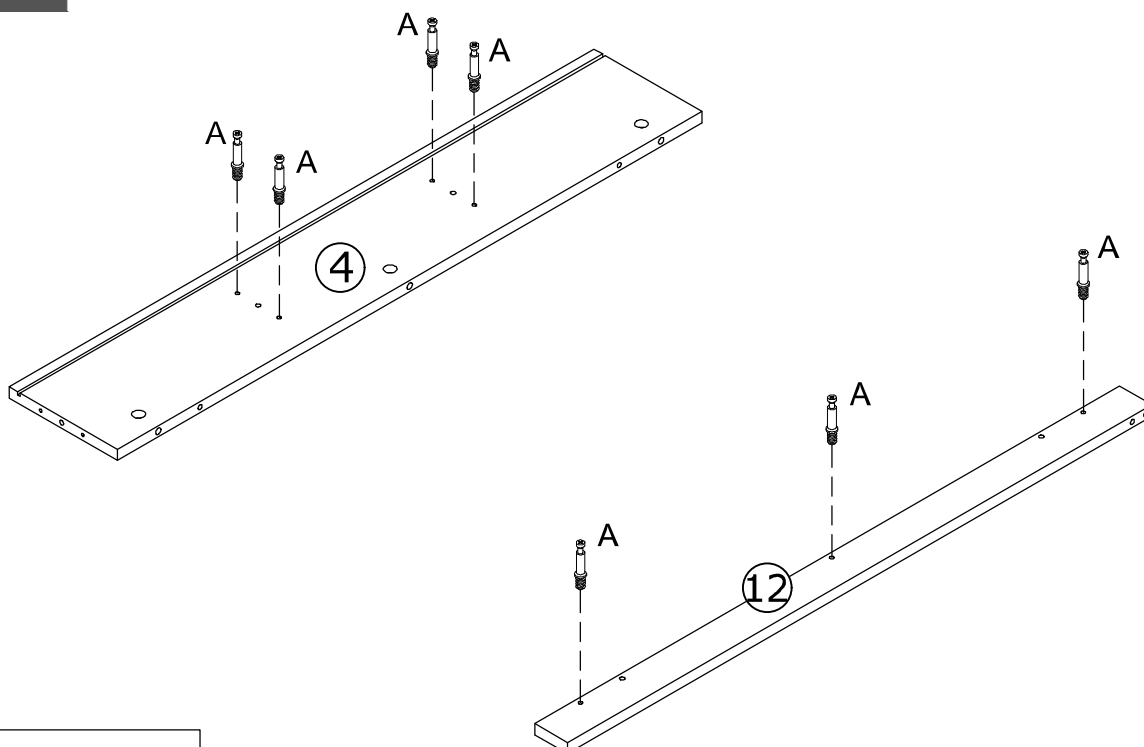

(A)





M6*35 Cam Bolt x 14

X2

13

Assembly Instructions

Step 14

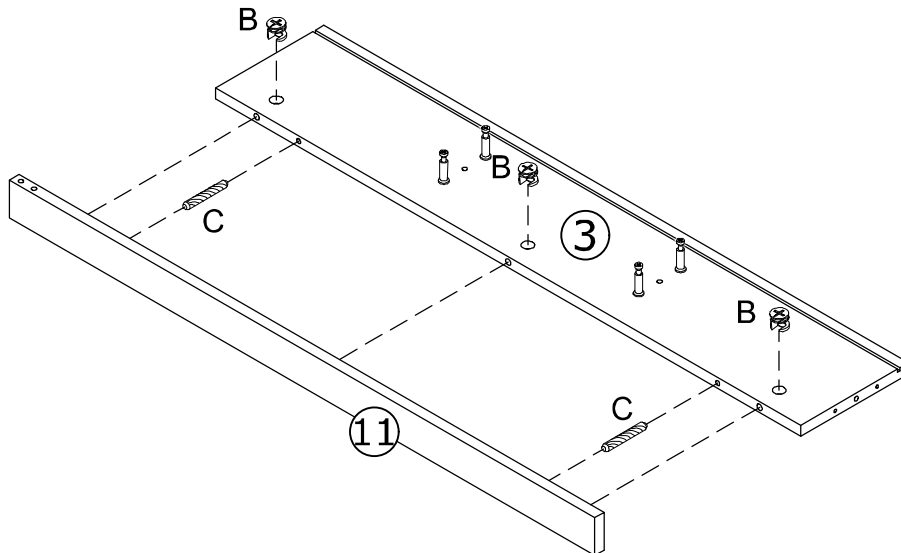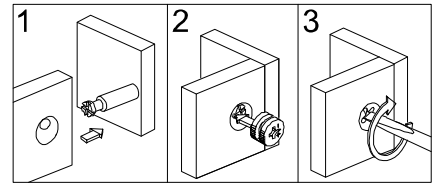

(B)



M15*10mm Cam lock x 6



(C)



M6*30mm Dowel x 4

X2

Step 15

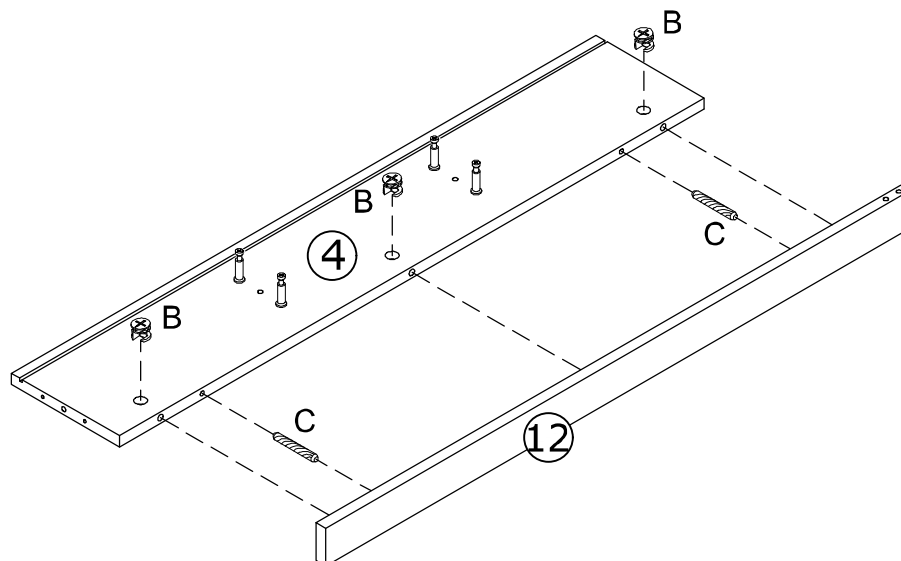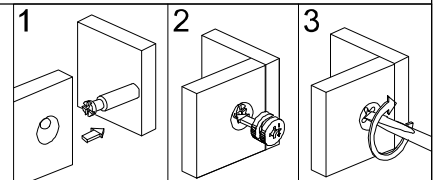

(B)



M15*10mm Cam lock x 6

(C)





M6*30mm Dowel x 4

X2

14

Assembly Instructions

Step 16

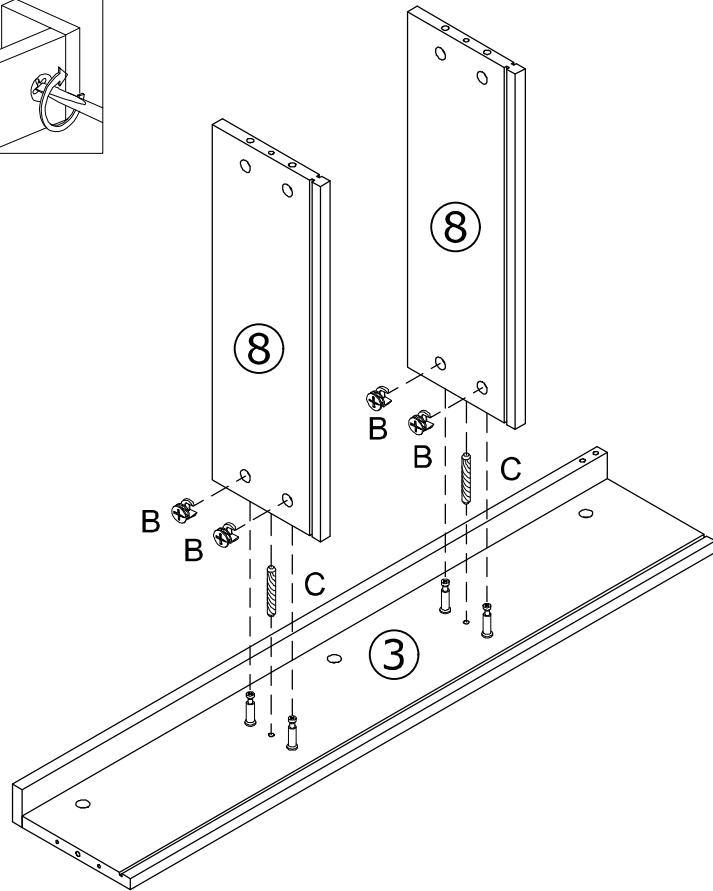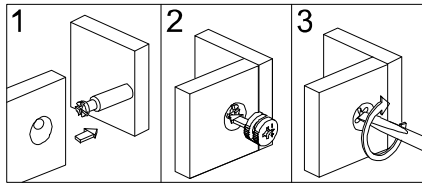

(B)



M15*10mm Cam lock x 8


(C)



M6*30mm Dowel x 4

X2

Step 17

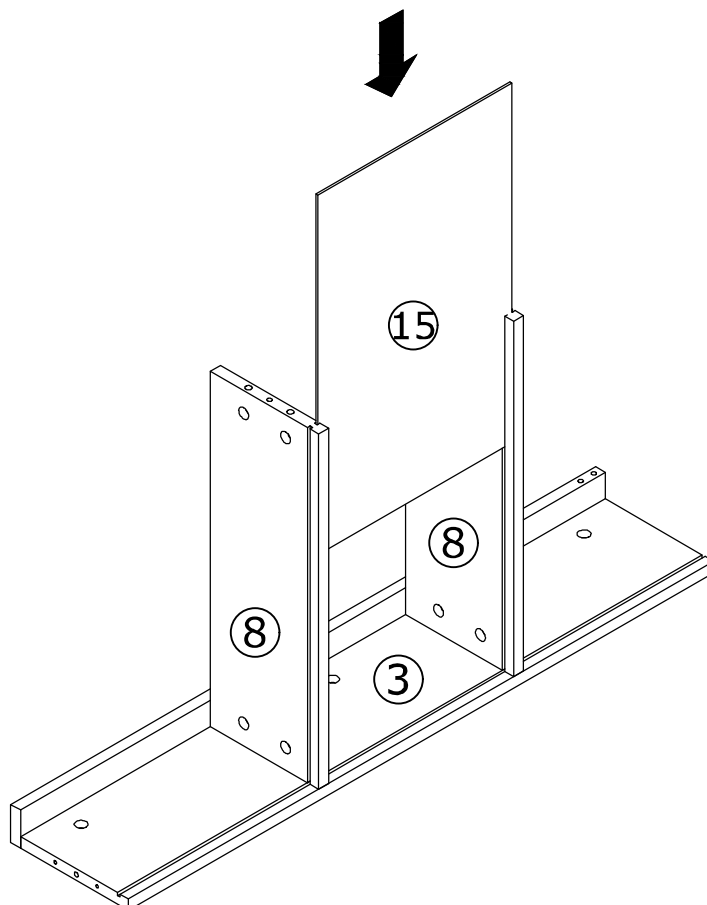


X2

15

Step 18



Step 19

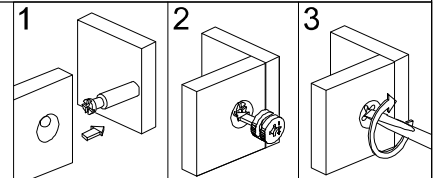


16

Assembly Instructions

Step 20






Be careful! At least two people are required

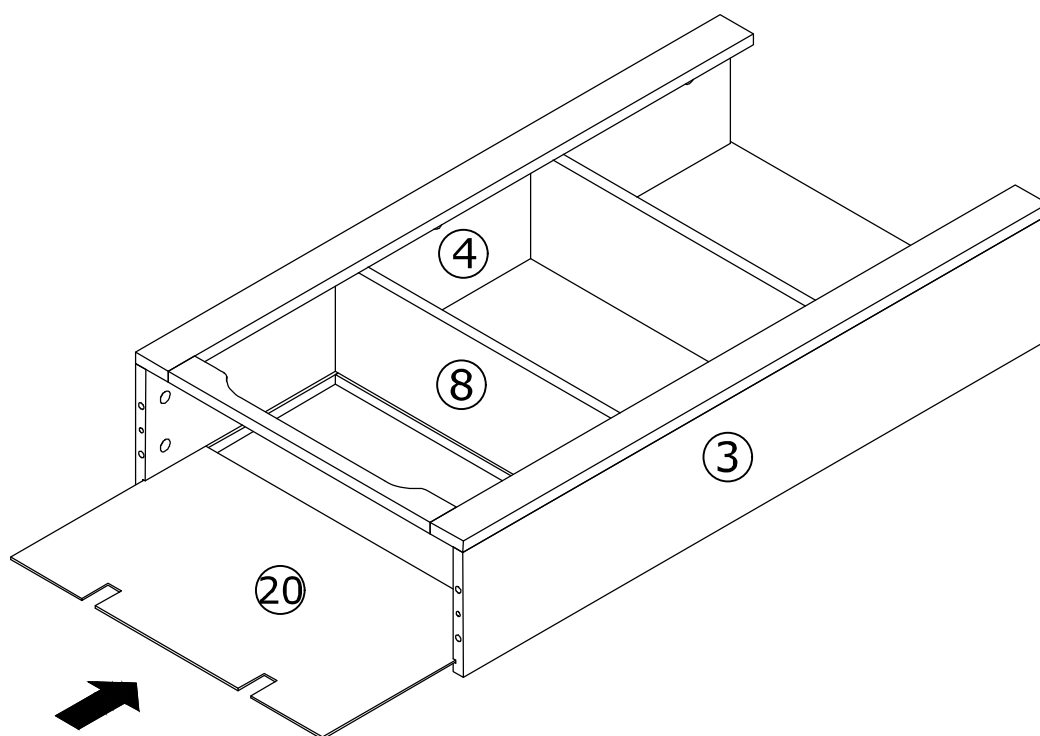

X2
17

Assembly Instructions

Step 21

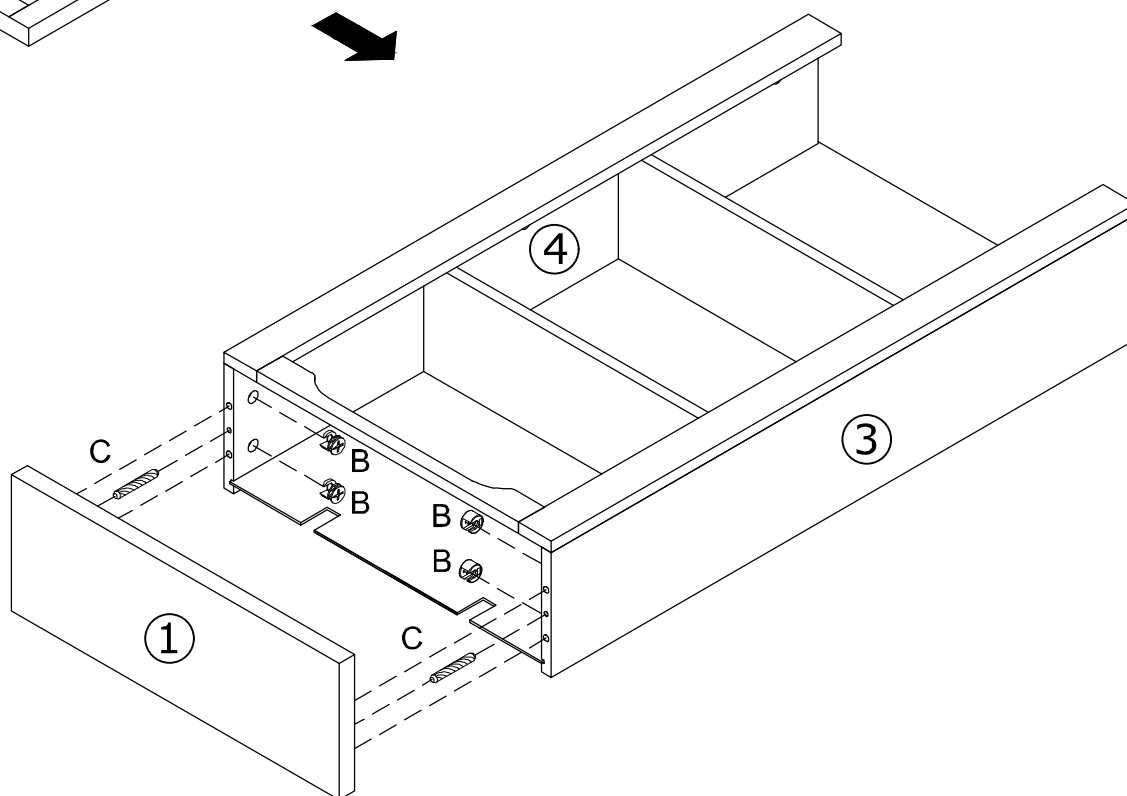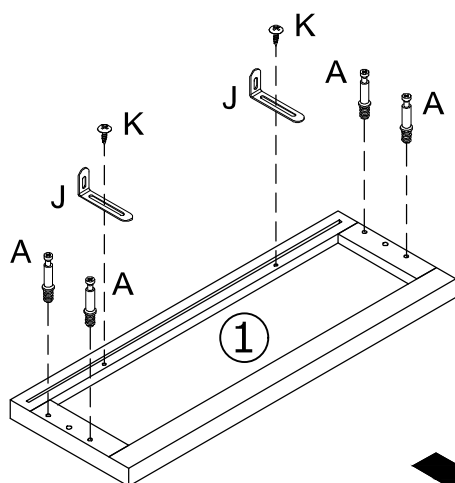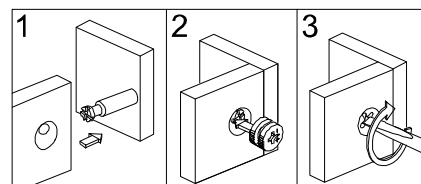


(A)  M6*35 Cam Bolt x 8	(B)  M15*10mm Cam lock x 8
--	---

(C)  M6*30mm Dowel x 4	(J)  Anti-Inverted Iron x 4	(K)  M4*12mm Screw x 4
---	--	---

X2
18

Assembly Instructions


Step 22

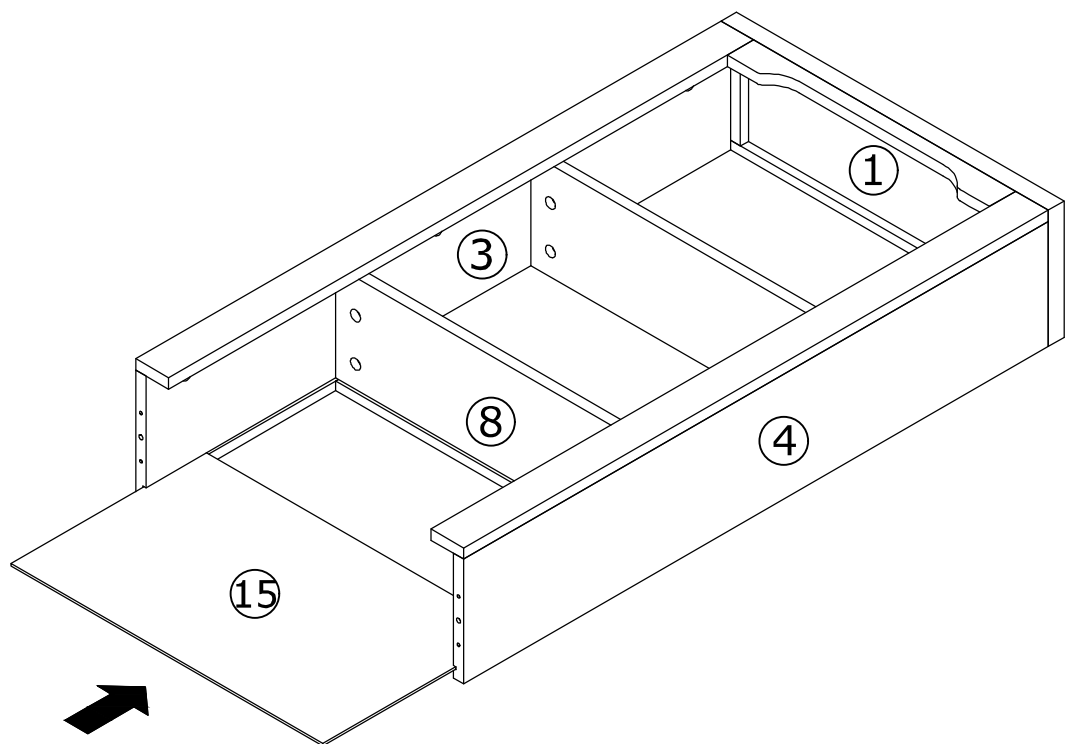


X2
19

Assembly Instructions

Step 23


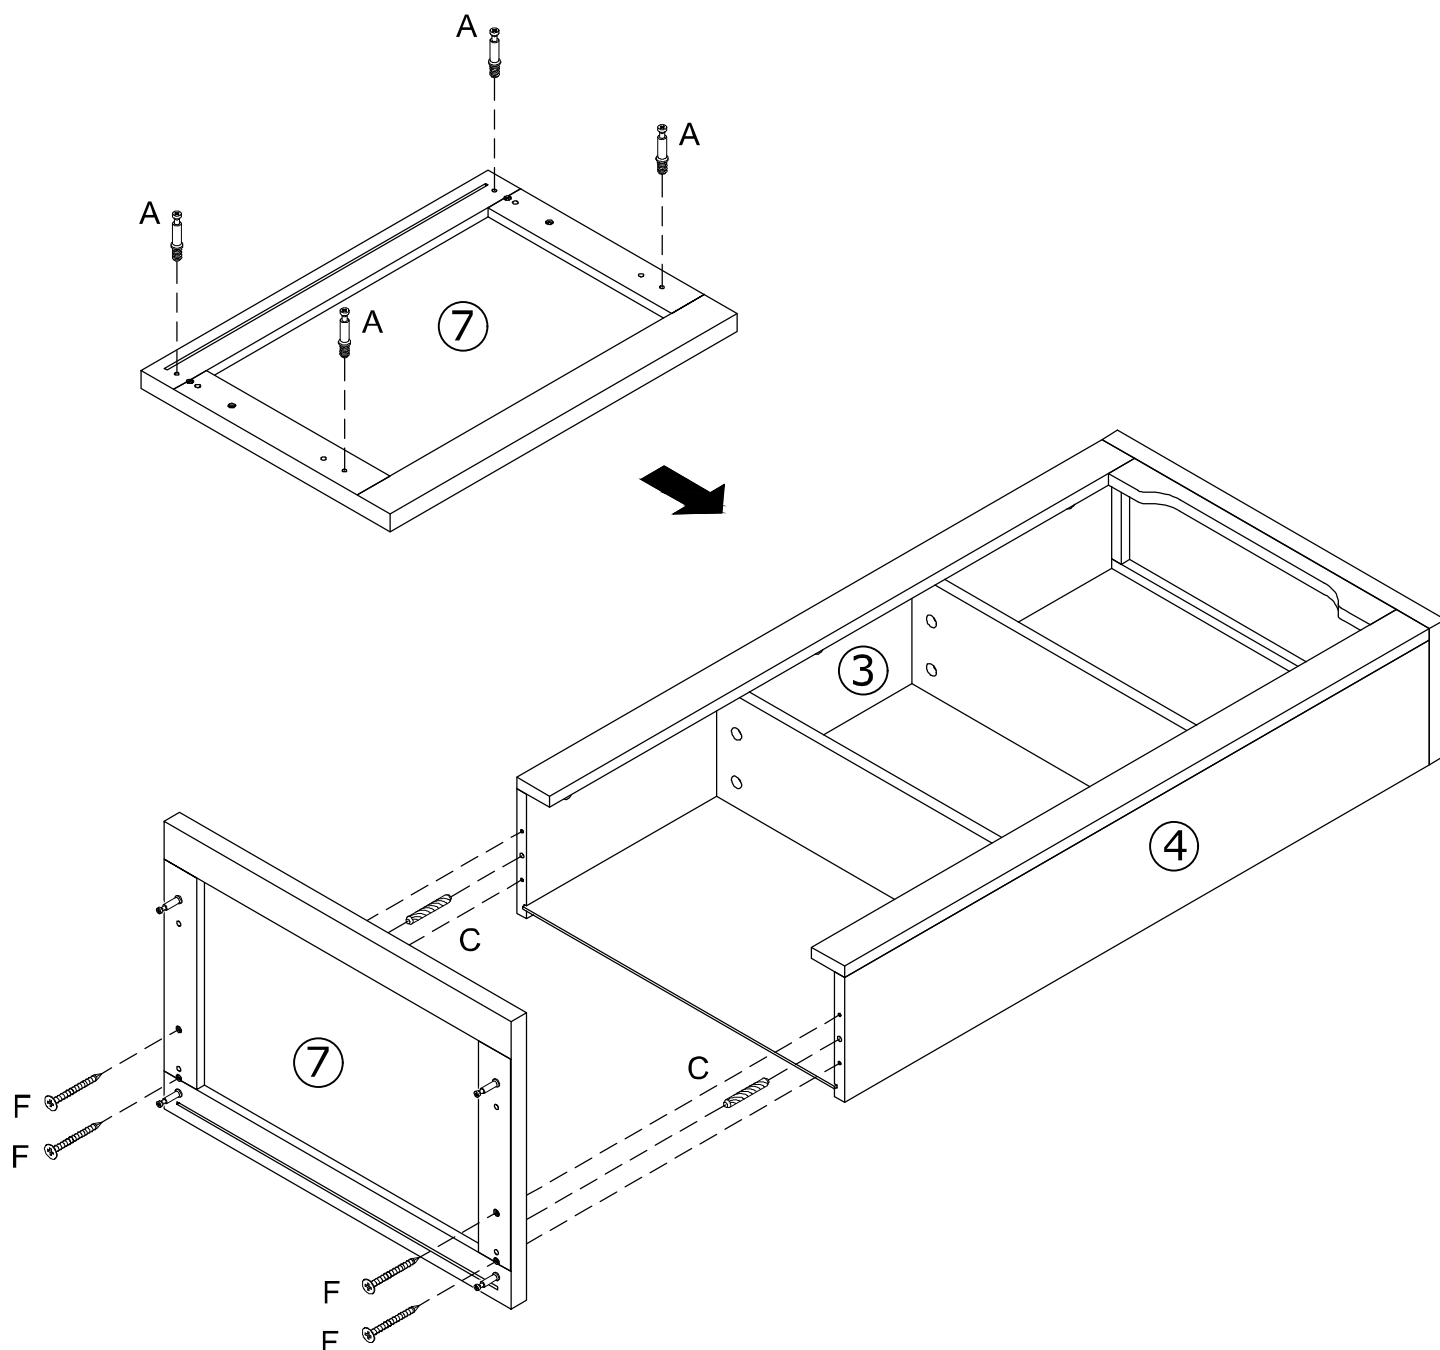


(A)	
M6*35 Cam Bolt x 8	
(C)	
M6*30mm Dowel x 4	
(F)	
M4*40mm Screw x 8	

X2
20

Assembly Instructions

Step 24

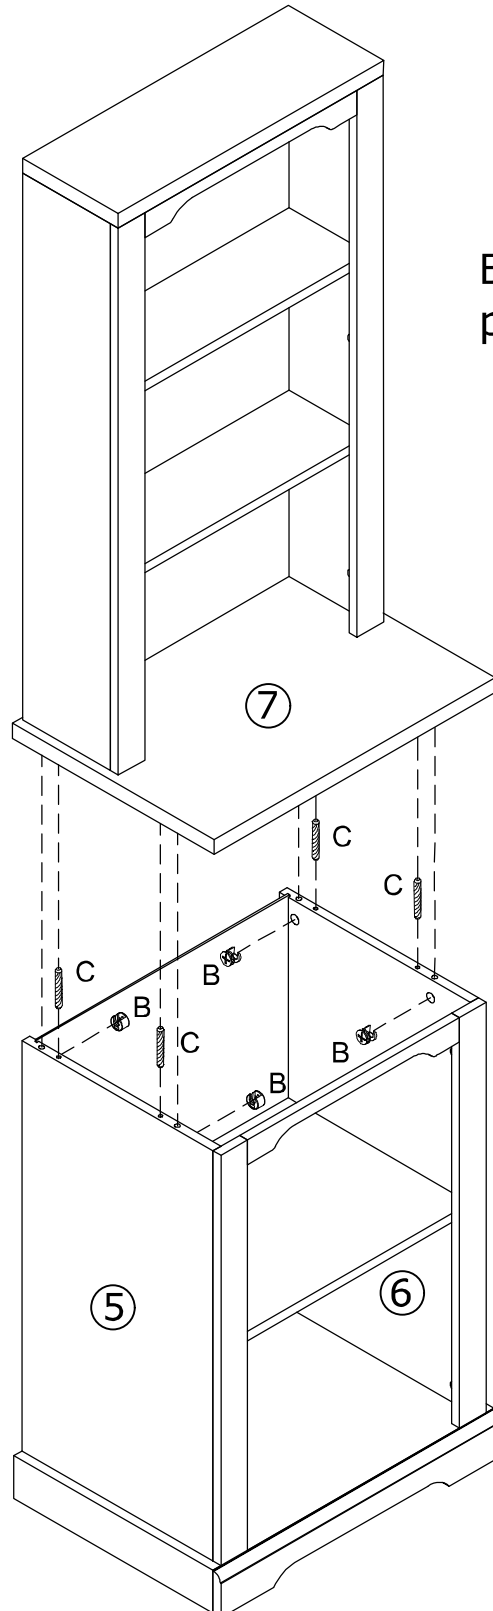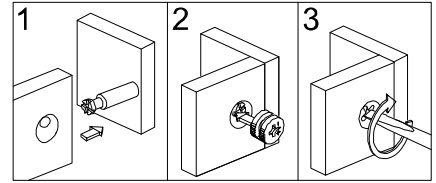

Be careful! At least two people are required

X2
21

(B)



M15*10mm Cam lock x 8


(C)



M6*30mm Dowel x 8

Assembly Instructions

Step 25



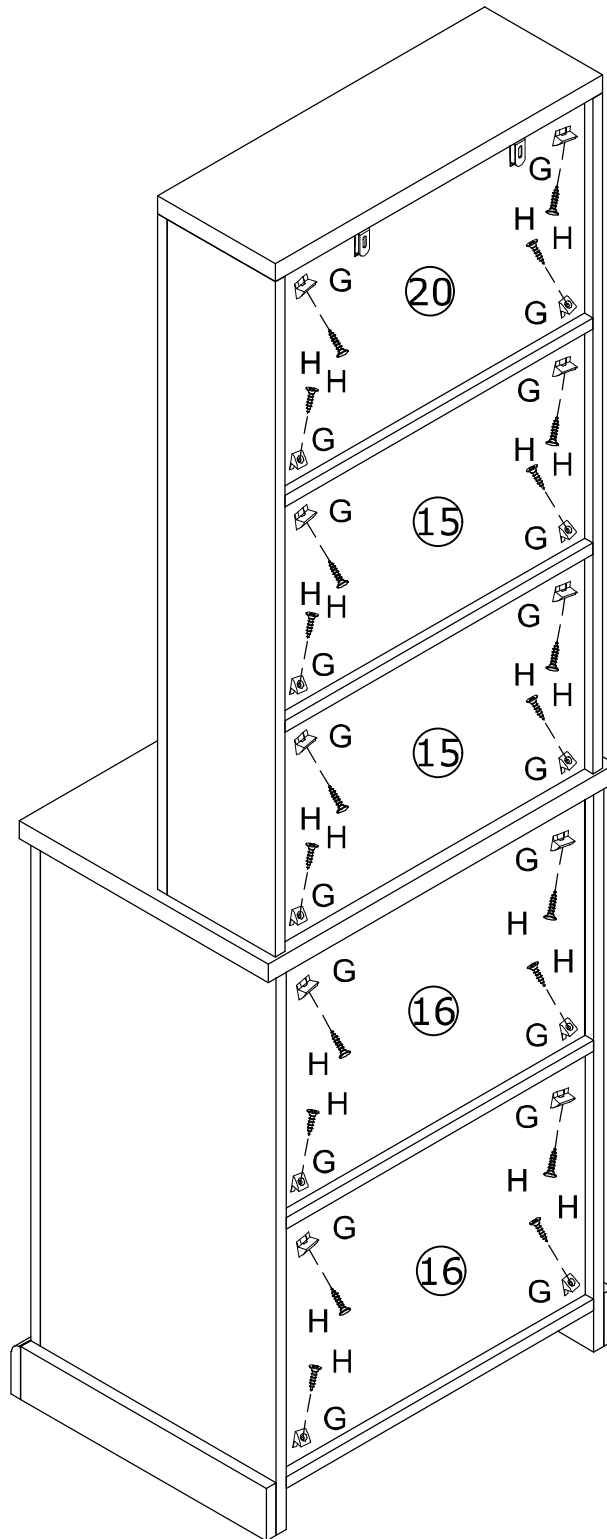


X2
22

(G)  Plastic Connector x 40	(H)  M3*16mm Screw x 40
--	--

Assembly Instructions

Step 26

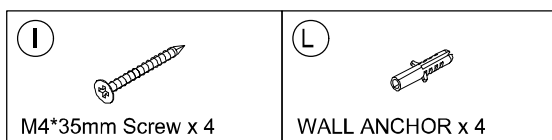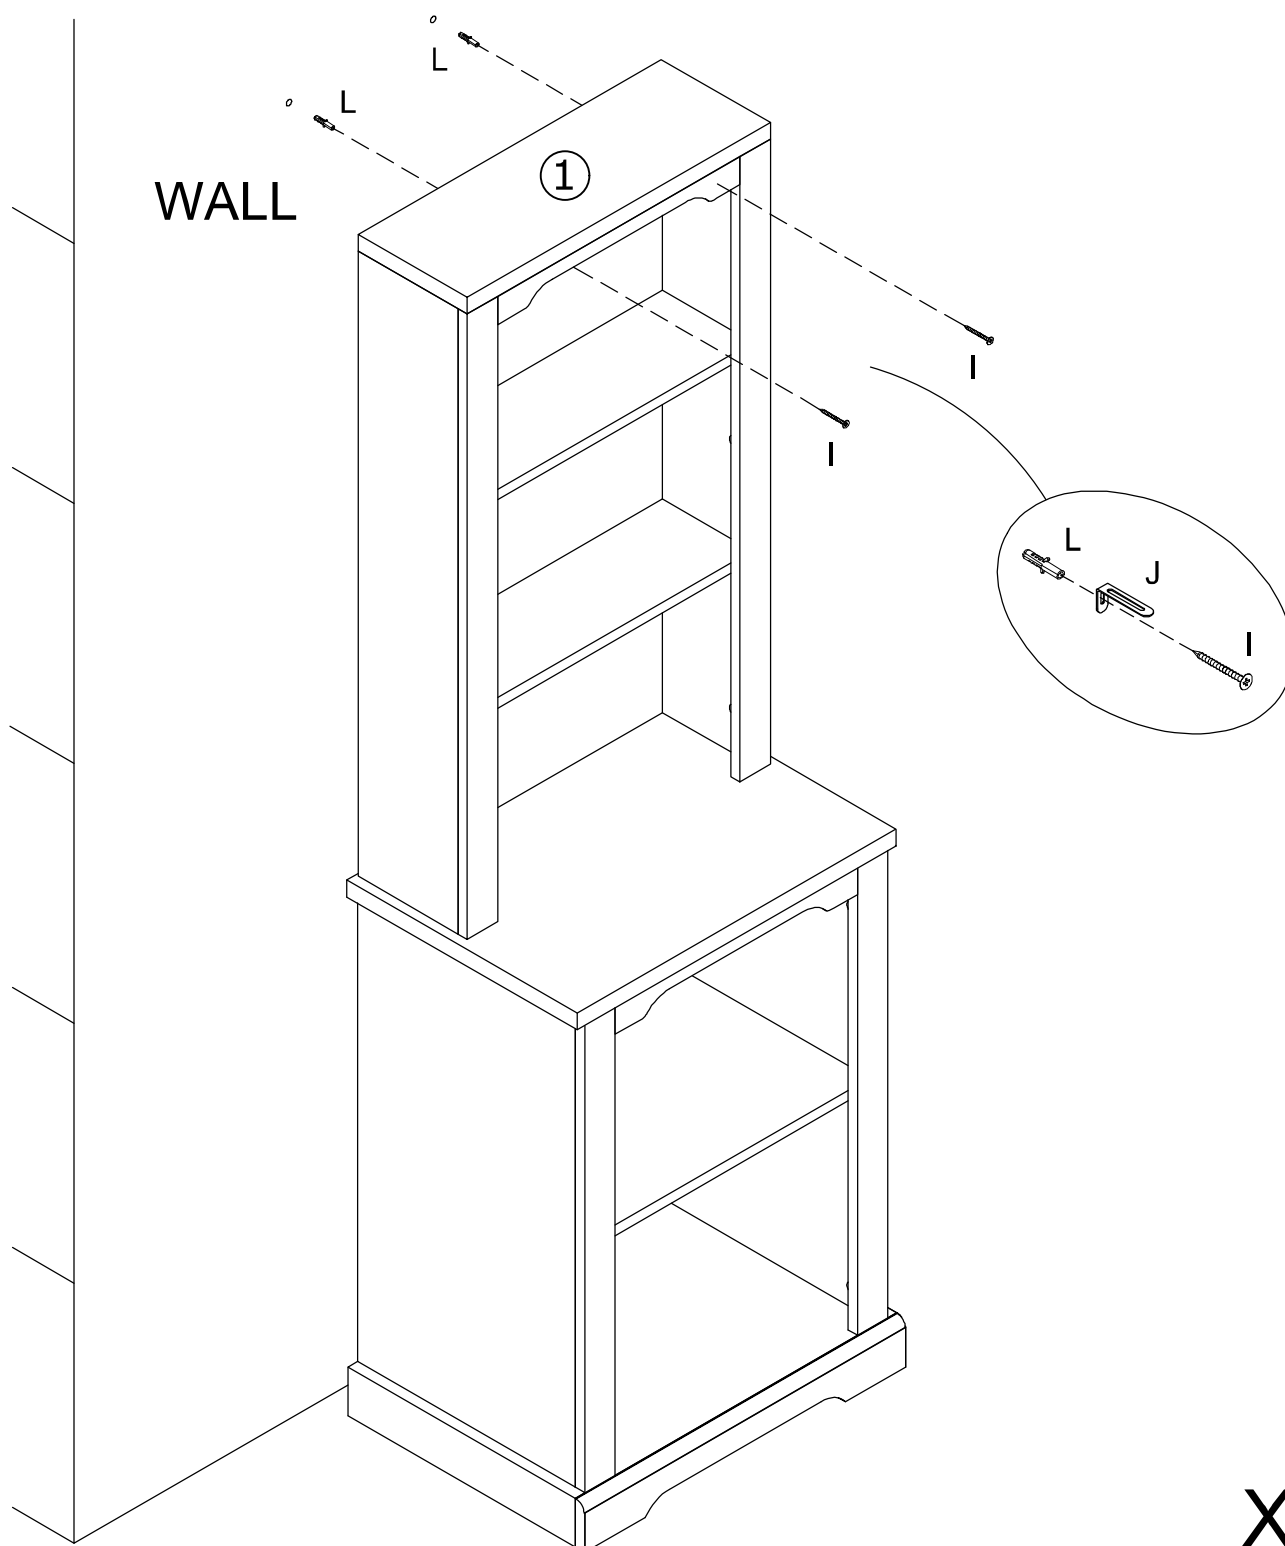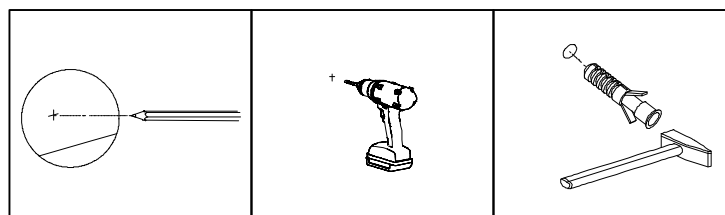

X2
23

Assembly Instructions

Finish

