


Installation & Assembly

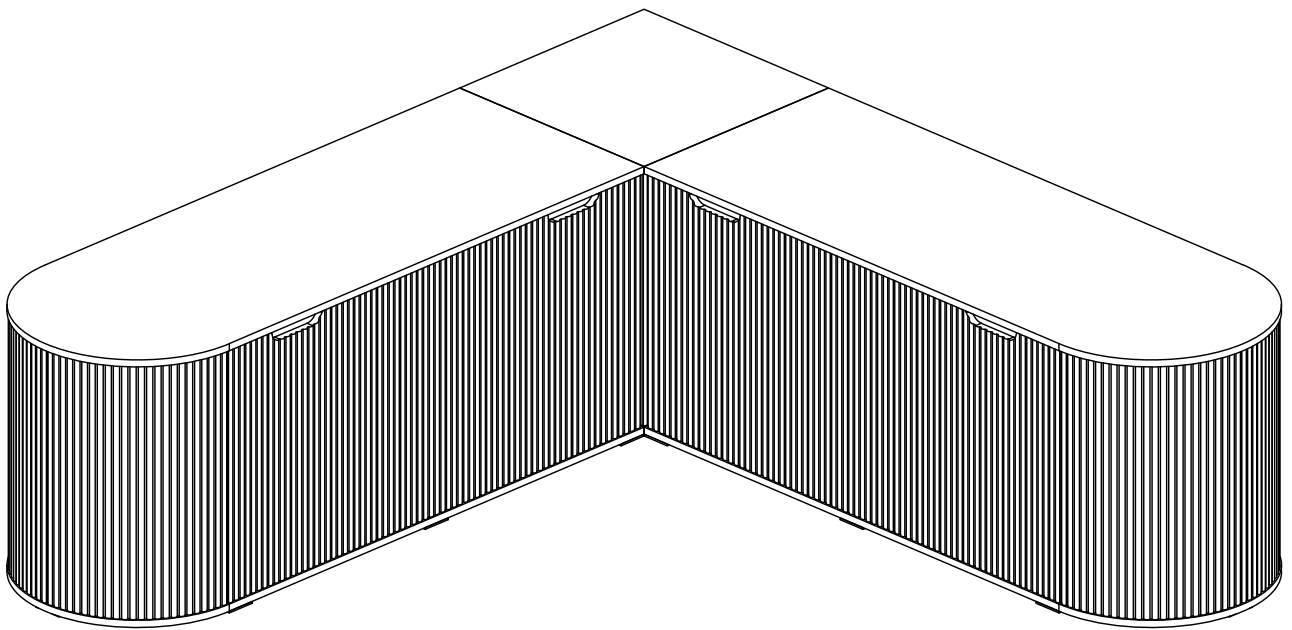


Before Assembly

Tips Before Your Start:

Remove all wrapping material, including staples & packing straps before you start to assemble.


DO NOT tighten all screws and bolts until the assembly is completely assembled.

Keep all hardware parts out of reach of children.

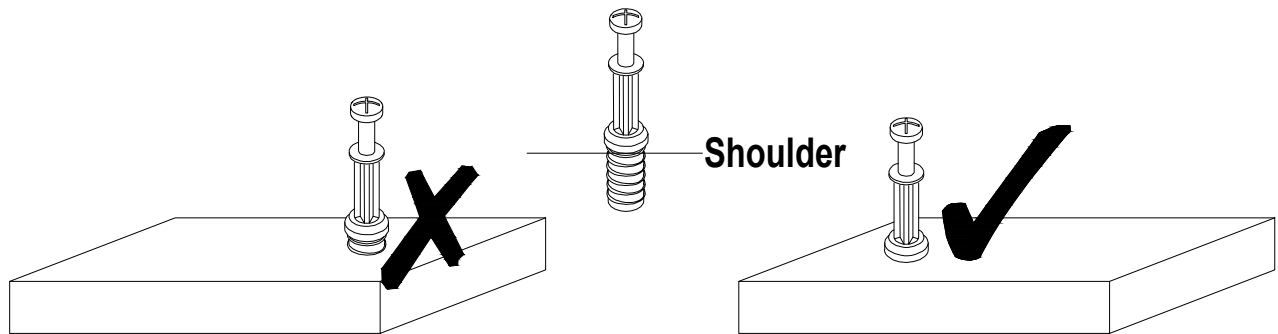

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

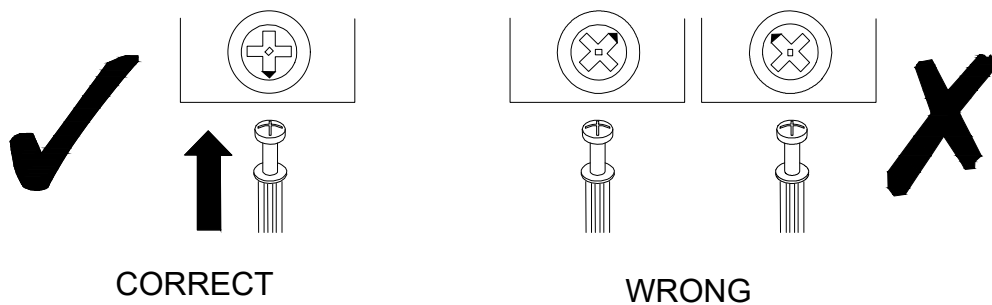













When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUICKFIT

Quickfit head should be in the centre of the cam lock when the two panels are joined.


Cam lock should be inserted before quickfit.

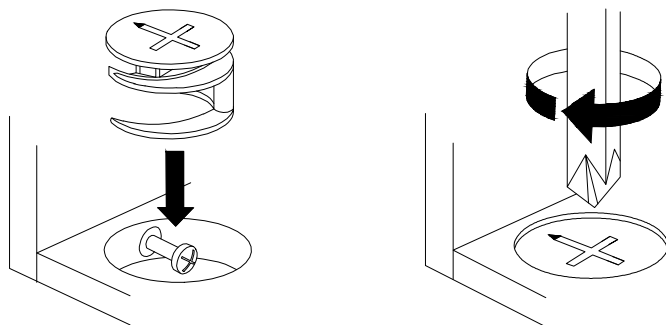


Part List

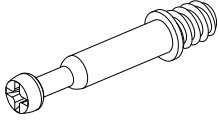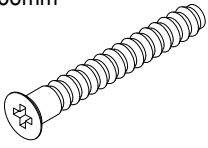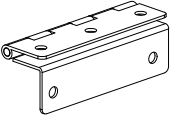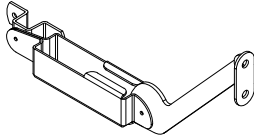No. A Quantity: 16+1 PCS Cam Bolt ø6x33.5mm 	No. B Quantity: 16+1 PCS Cam ø15x9.5mm 	No. C Quantity: 16+1 PCS Sticker ø20mm 	No. D Quantity: 56+2 PCS Dowel ø6x30mm 
No. E Quantity: 38+2 PCS Screw ø3.5x12mm 	No. F Quantity: 4 +1 PCS Bolt M4x12mm 	No. G Quantity: 12+1 PCS Bolt M6x10mm 	No. H Quantity: 36+2 PCS Screw ø5x38mm 
No. I Quantity: 1 PCS Hex Key 4mm 	No. J Quantity: 18+2 PCS Foot Pad 35x35mm 	No. K Quantity: 2 PCS Iron Plate 48x16mm 	No. L Quantity: 6 PCS Hinge 
No. M Quantity: 2 PCS Support rod - left 	No. N Quantity: 1 PCS Support rod - right 		


Product structure

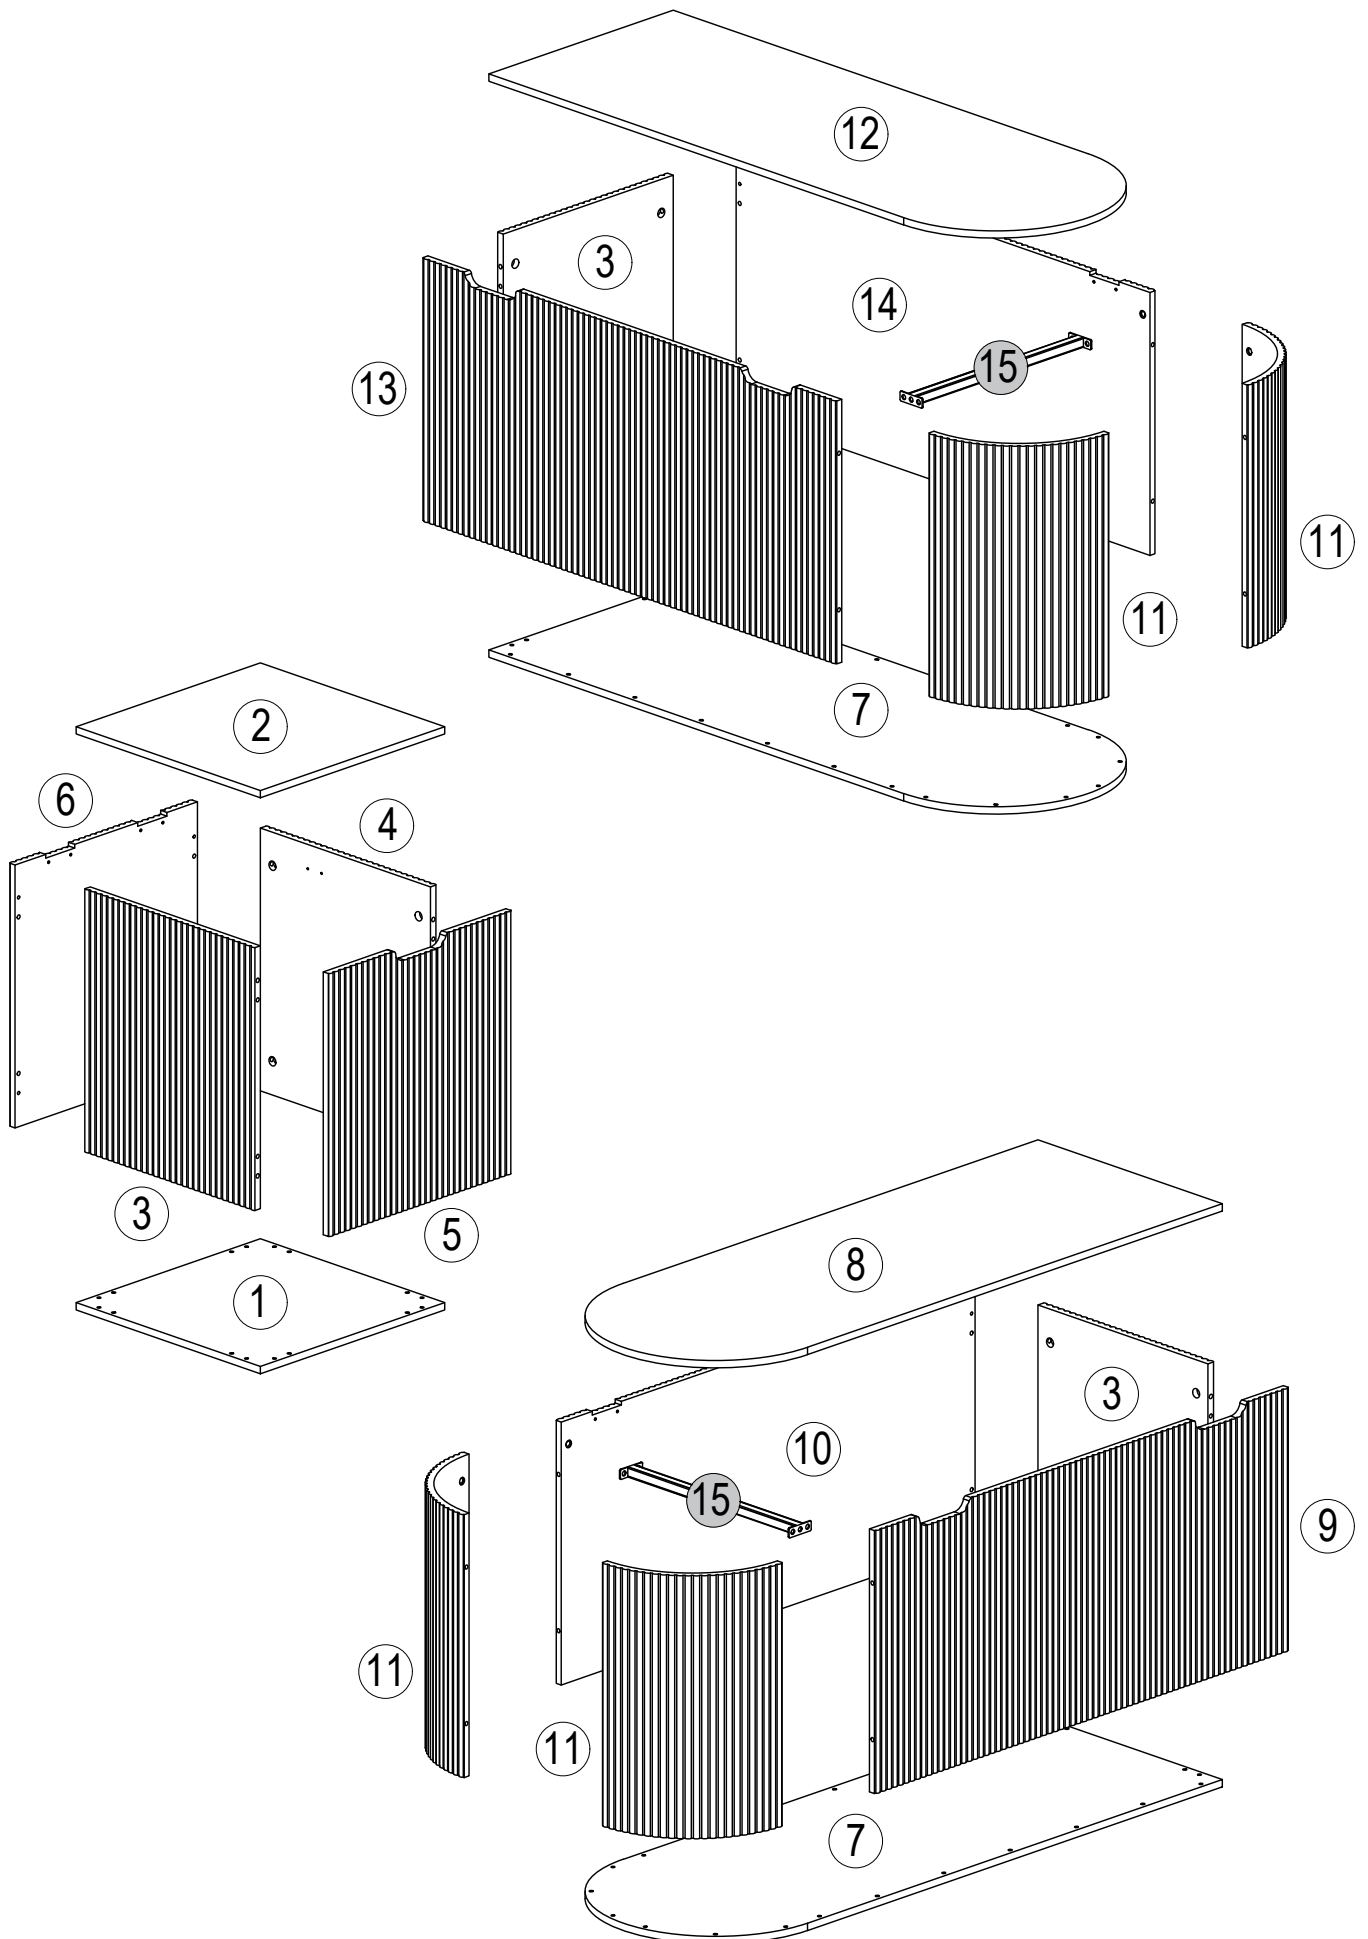



STEP 1

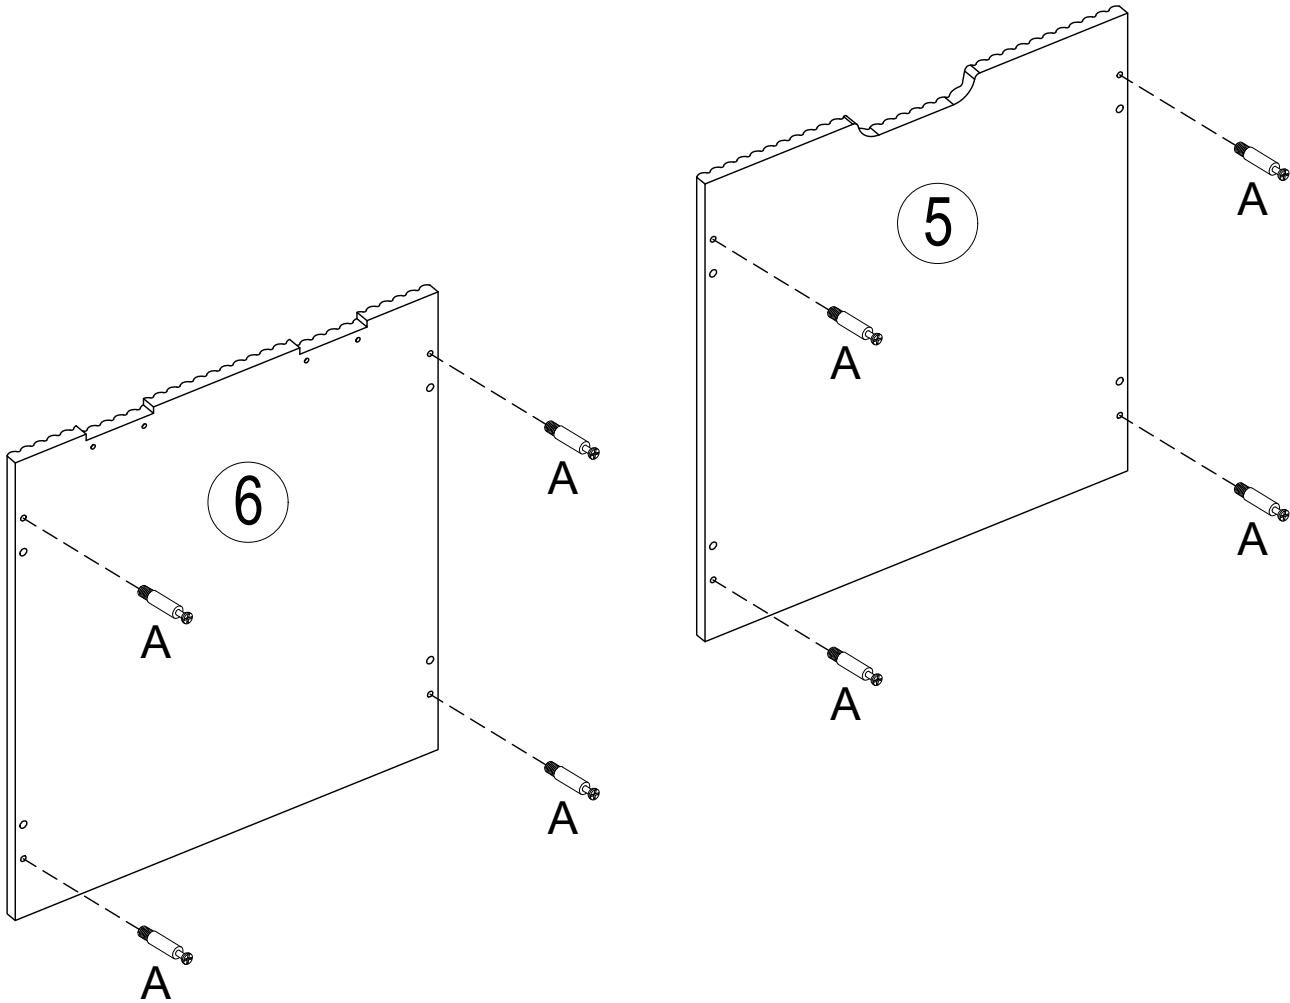

No. A
Quantity: 8 PCS
Cam Bolt
ø6x33.5mm



STEP 2

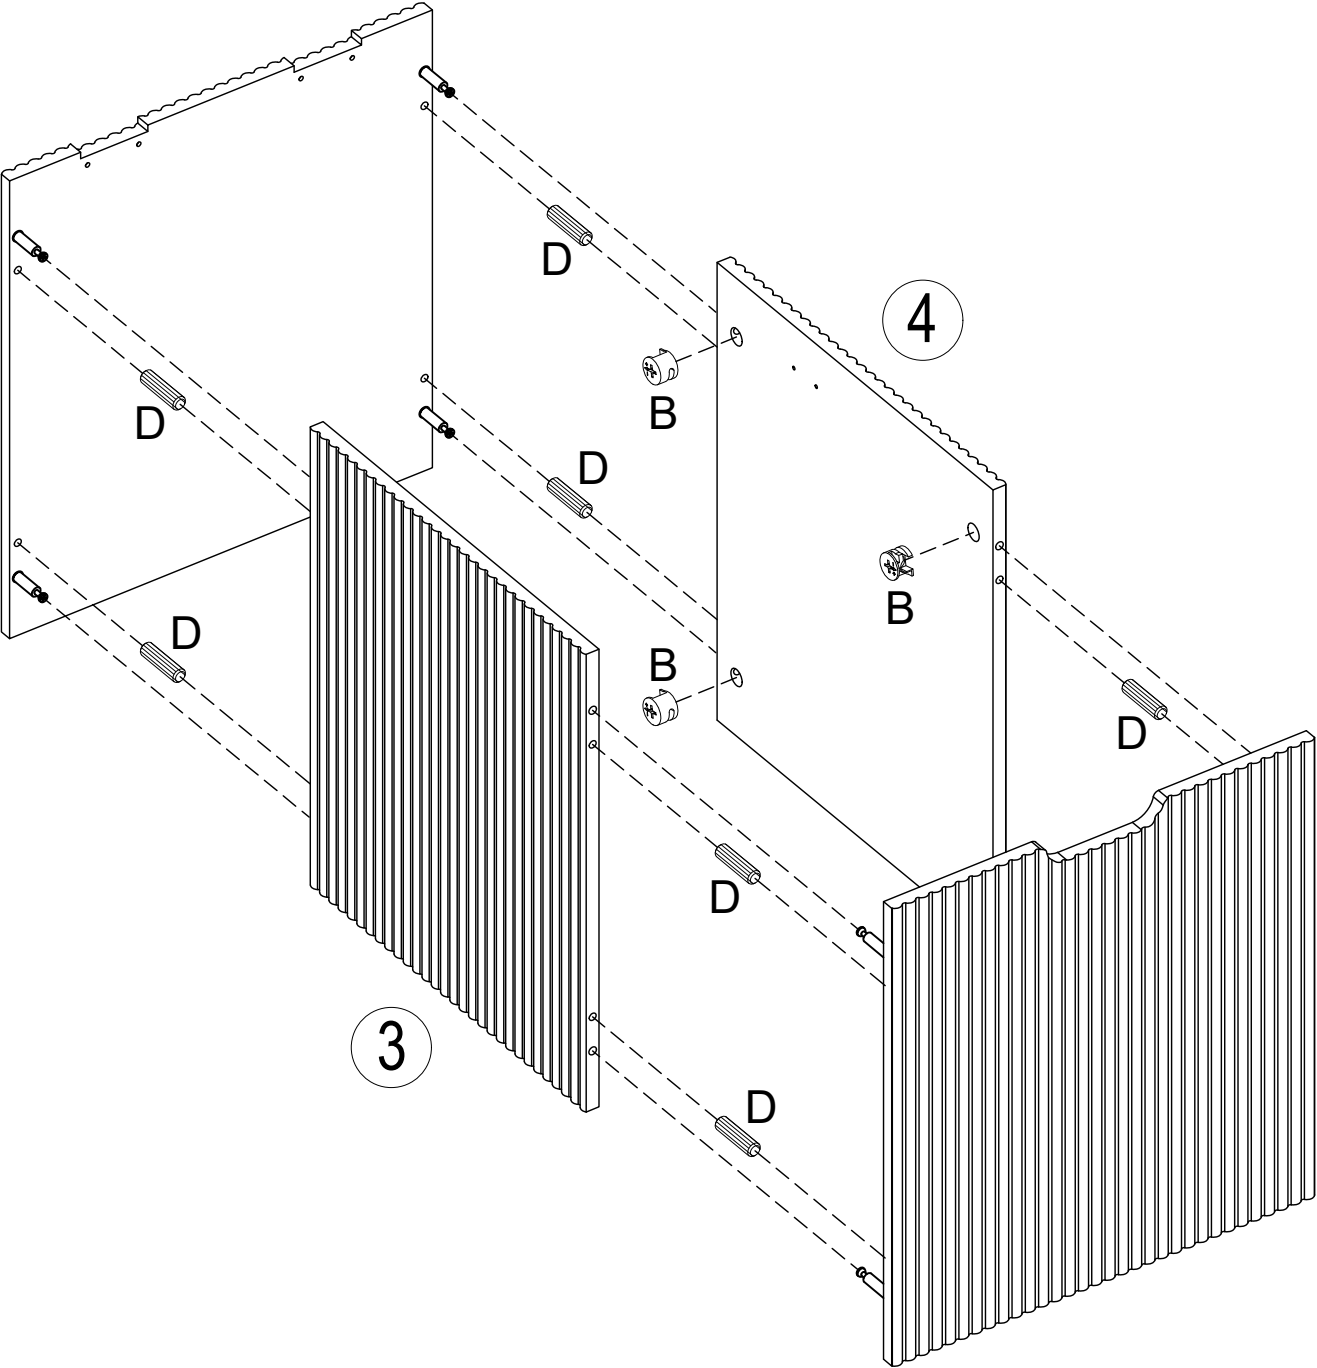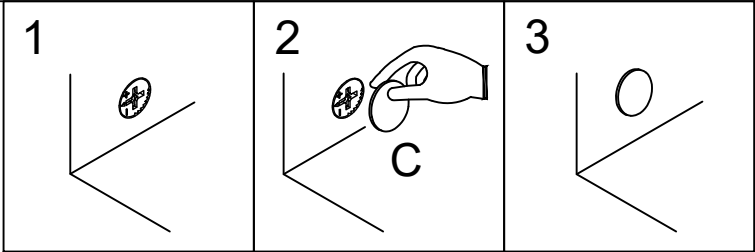


No. B
Quantity: 8 PCS
Cam
ø15x9.5mm




No. C
Quantity: 8 PCS
Sticker
ø20mm




No. D
Quantity: 8 PCS
Dowel
ø6x30mm




STEP 3

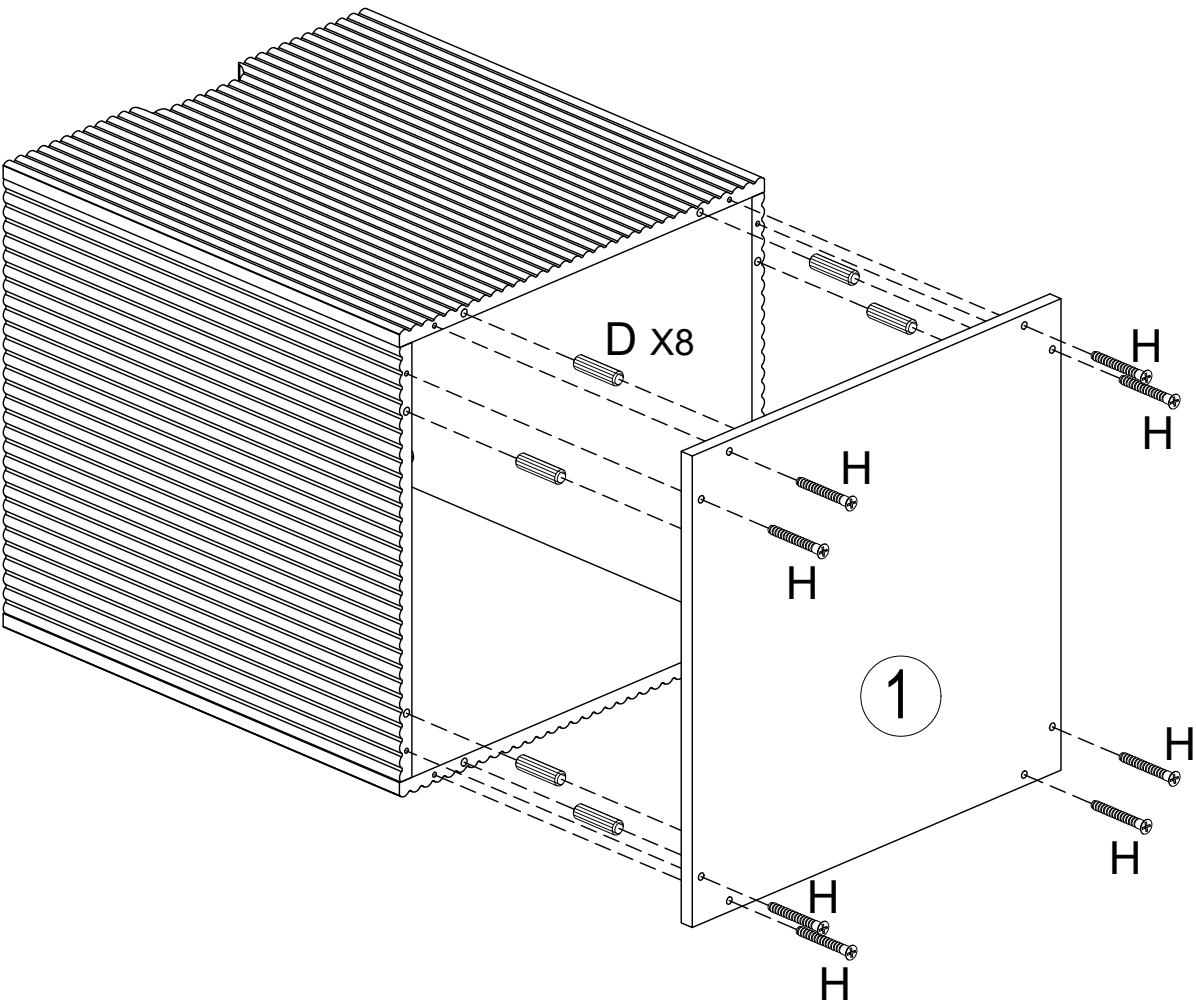


No. D
Quantity: 8 PCS
Dowel
ø6x30mm



No. H
Quantity: 8 PCS
Screw
ø5x38mm




STEP 4

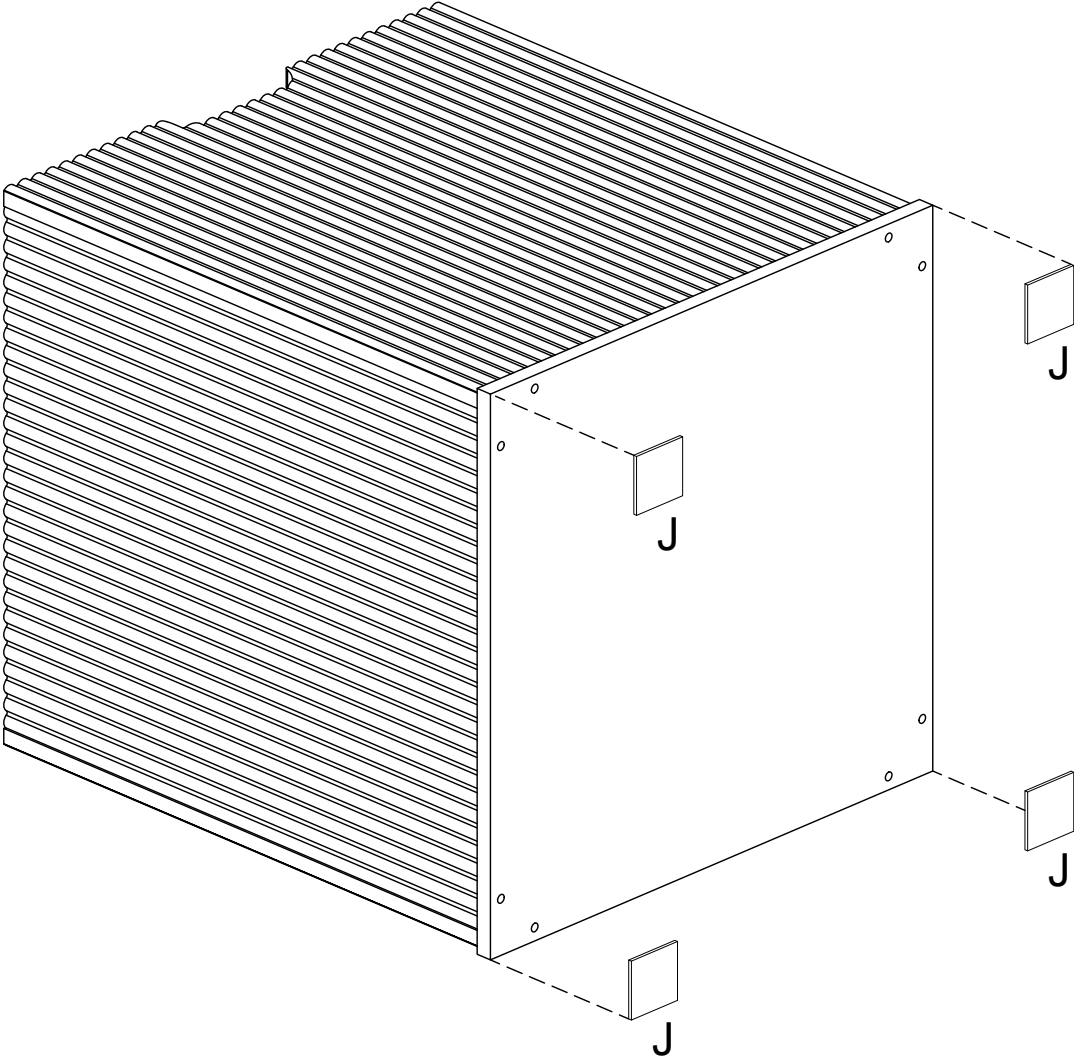


No. J


Quantity: 4 PCS
foot pad
35*35mm




STEP 5

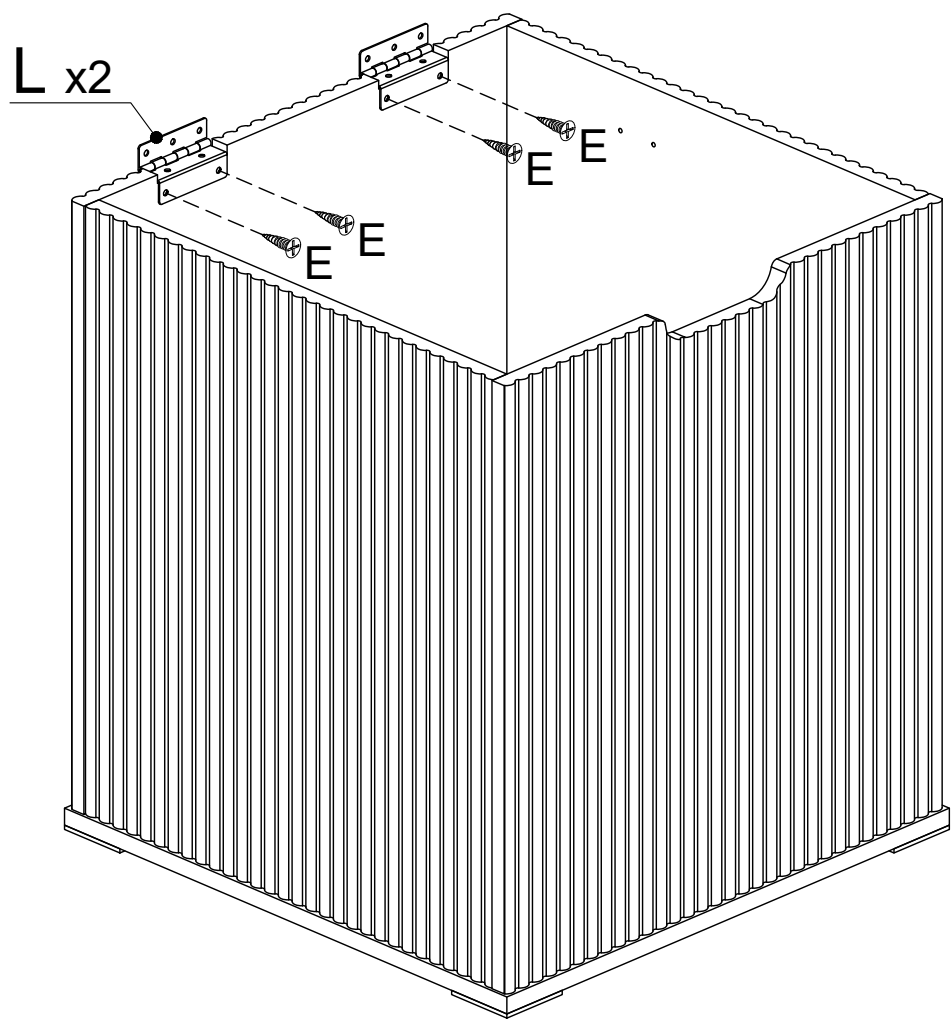


No. E
Quantity: 4 PCS
Screw
ø3.5x12mm




No. L
Quantity: 2 PCS
Hinge

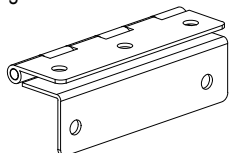



STEP 6

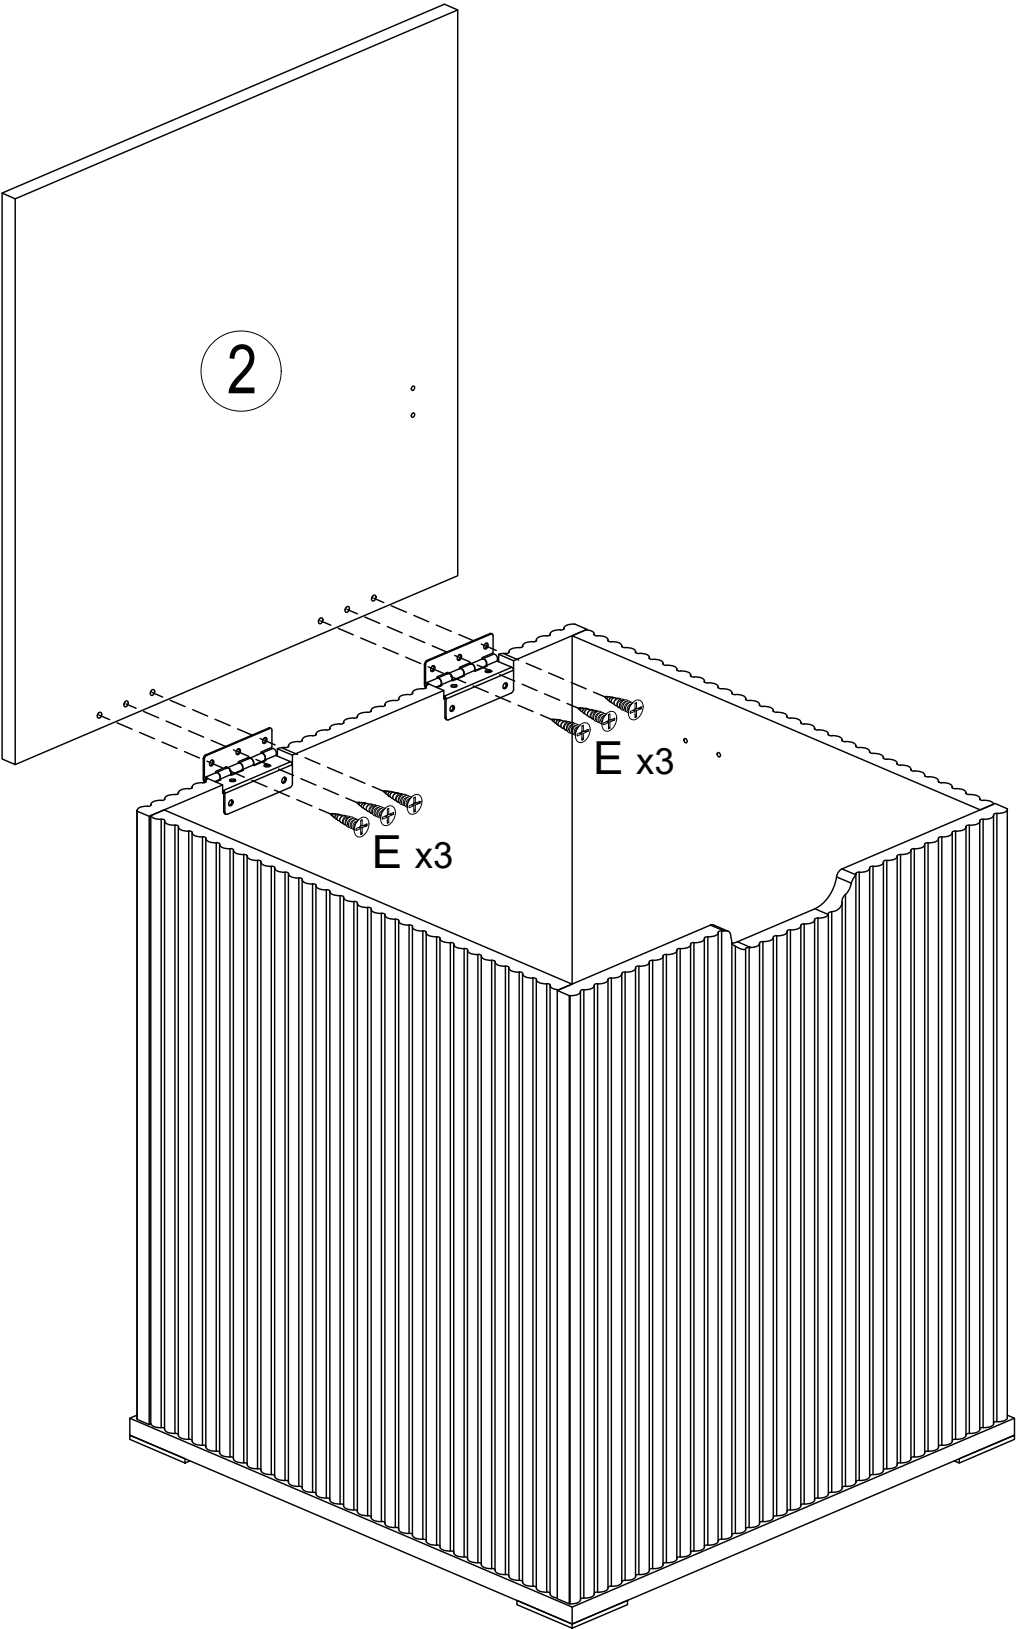


No. E
Quantity: 6 PCS
Screw
ø3.5x12mm




STEP 7

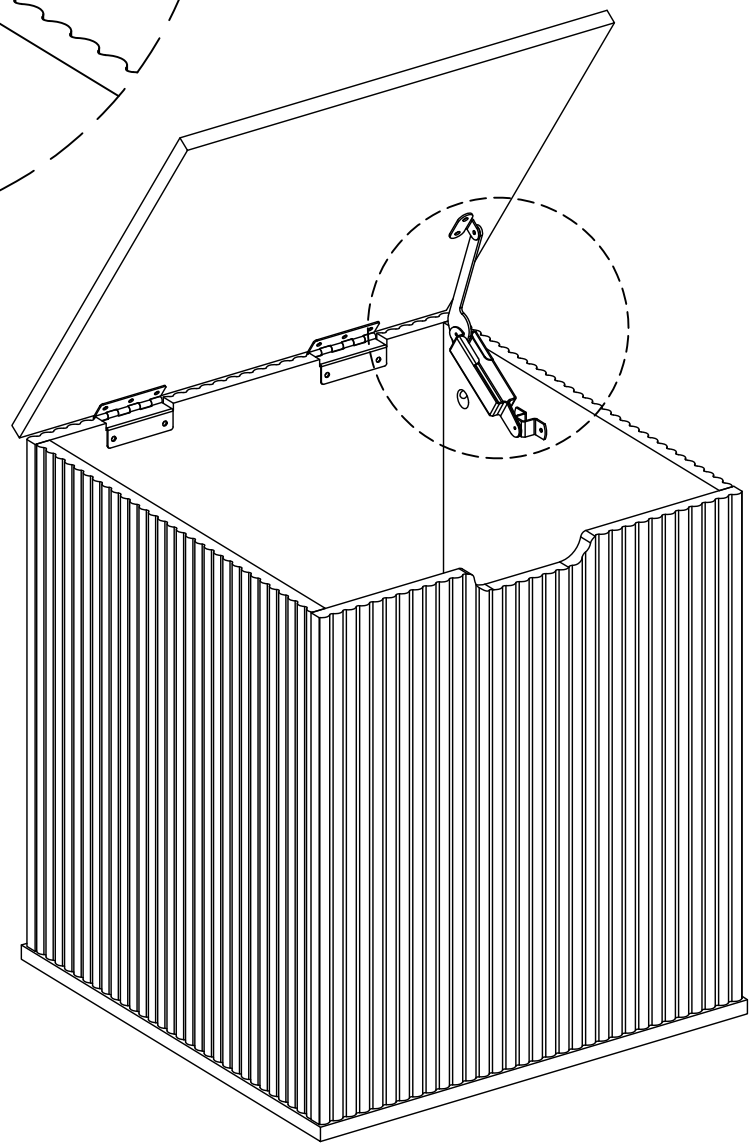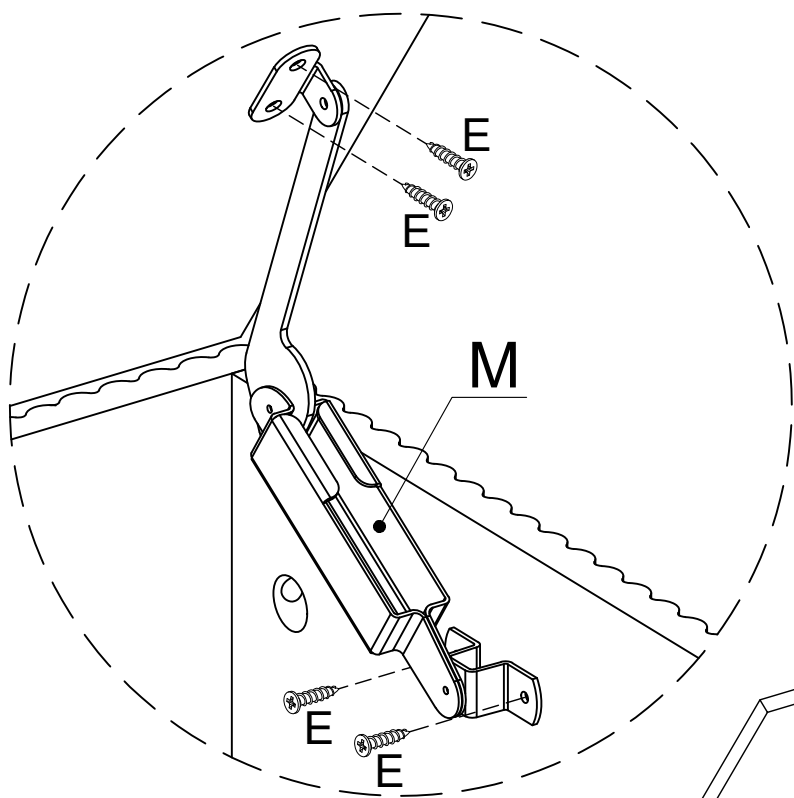


No. E
Quantity: 4 PCS
Screw
ø3.5x12mm




No. M
Quantity: 1 PCS
Support rod - left




STEP 8

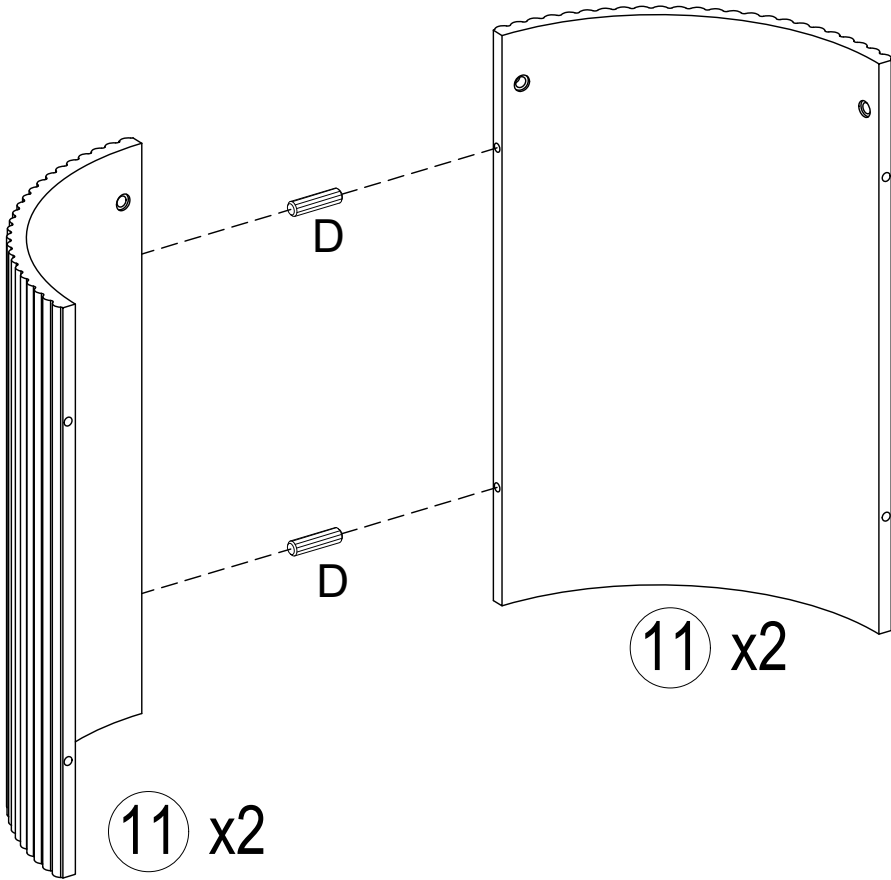


No. D
Quantity: 4 PCS
Dowel
ø6x30mm





STEP 9

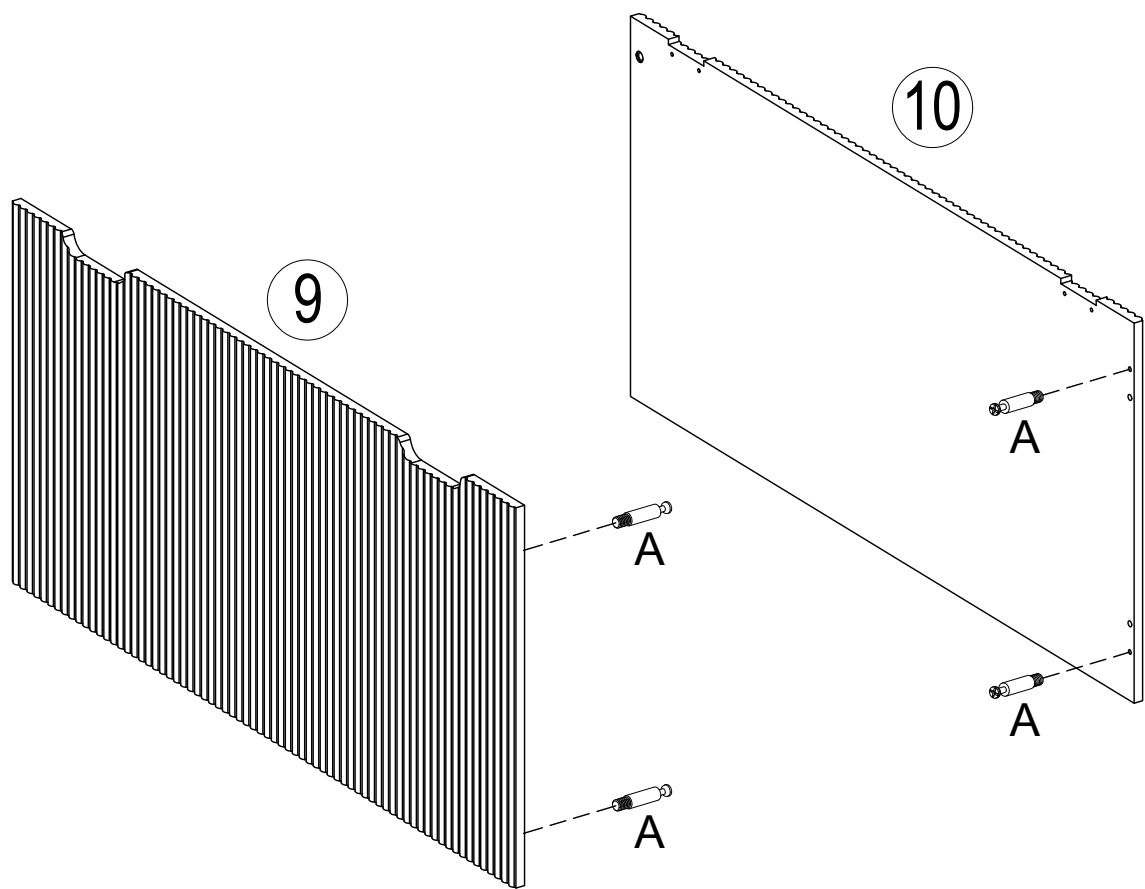

No. A
Quantity: 4 PCS
Cam Bolt
ø6x33.5mm



STEP 10

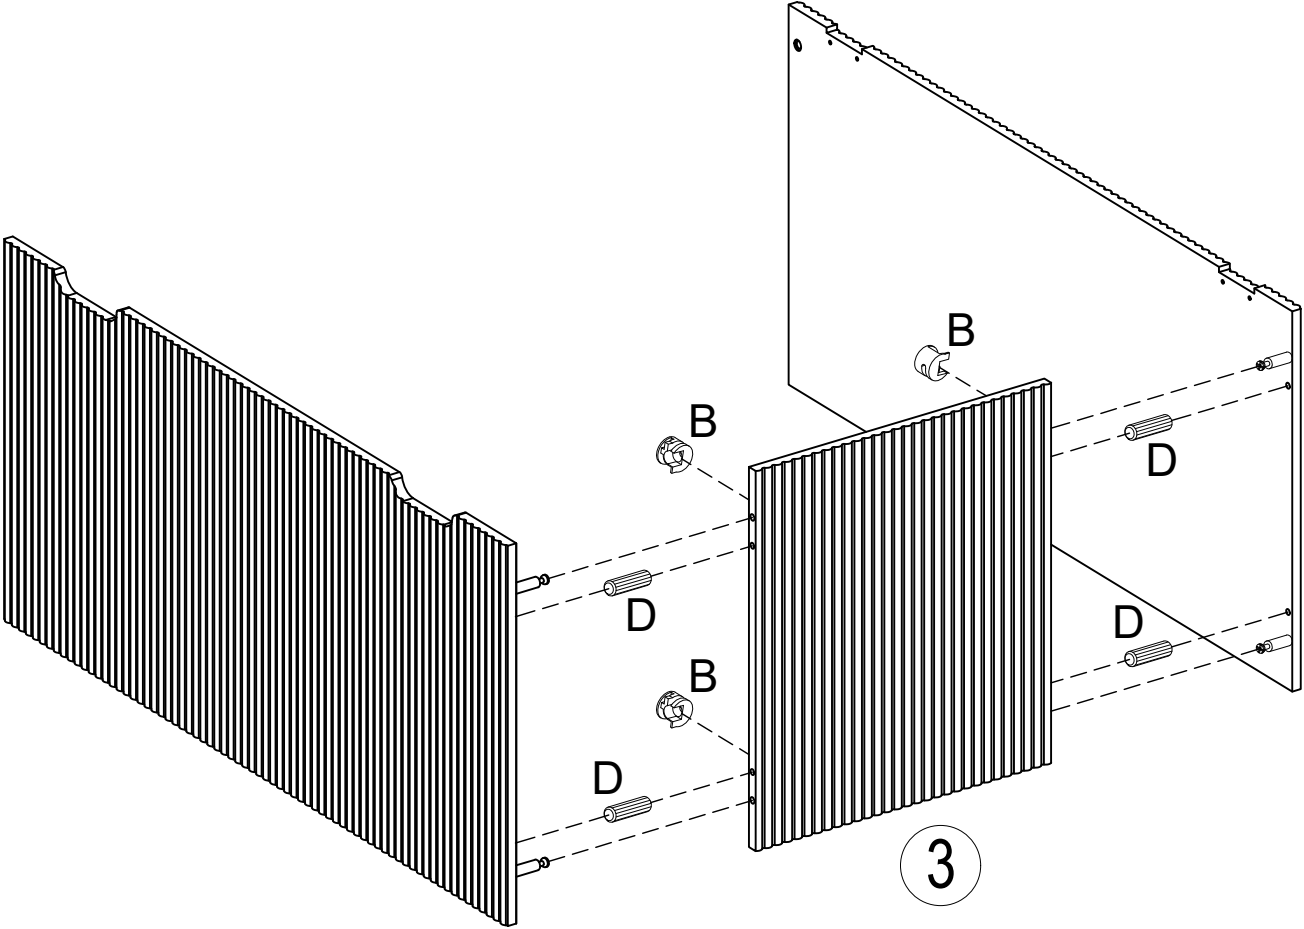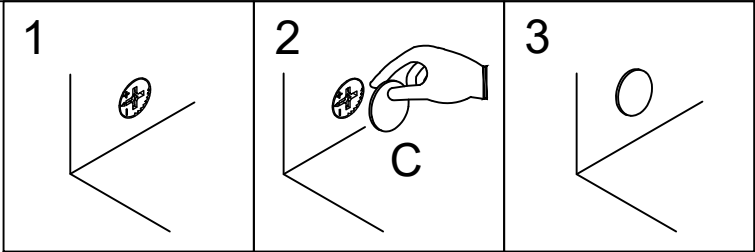


No. B
Quantity: 4 PCS
Cam
ø15x9.5mm




No. C
Quantity: 4 PCS
Sticker
ø20mm




No. D
Quantity: 4 PCS
Dowel
ø6x30mm




STEP 11

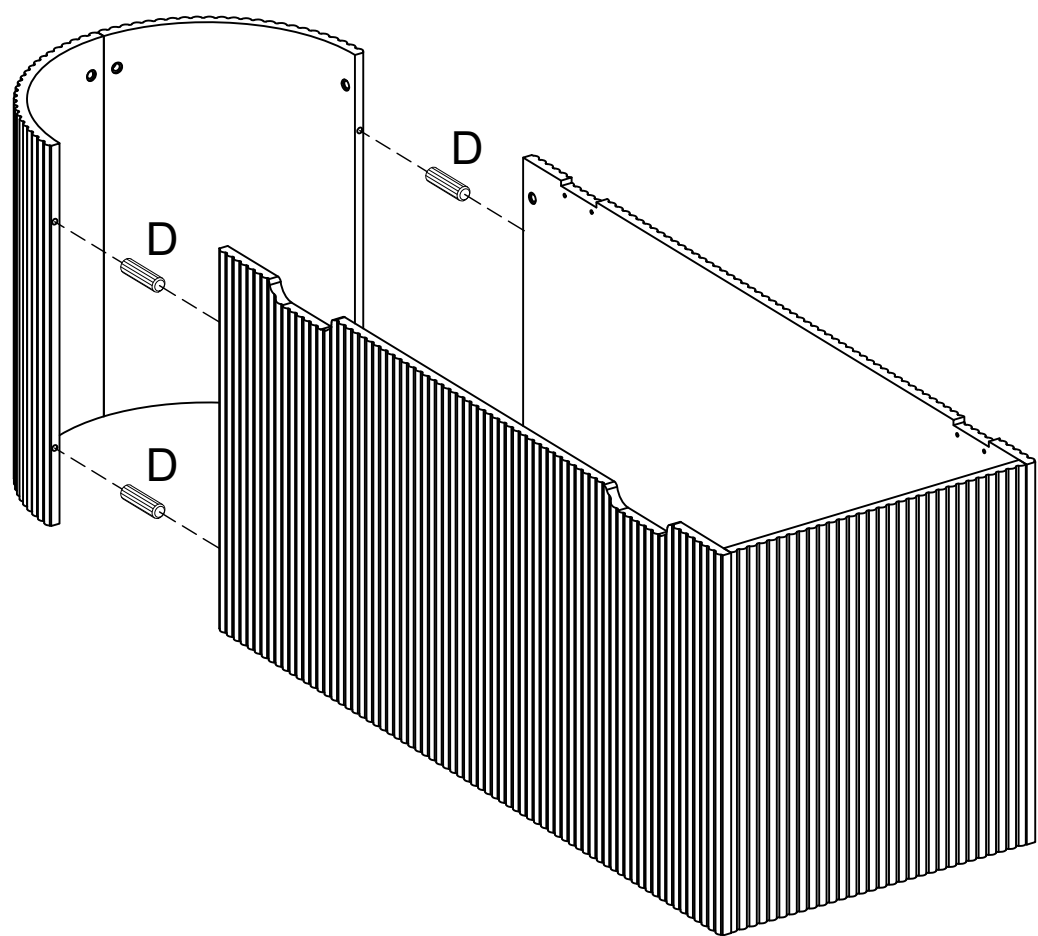


No. D
Quantity: 4 PCS
Dowel
ø6x30mm




STEP 12

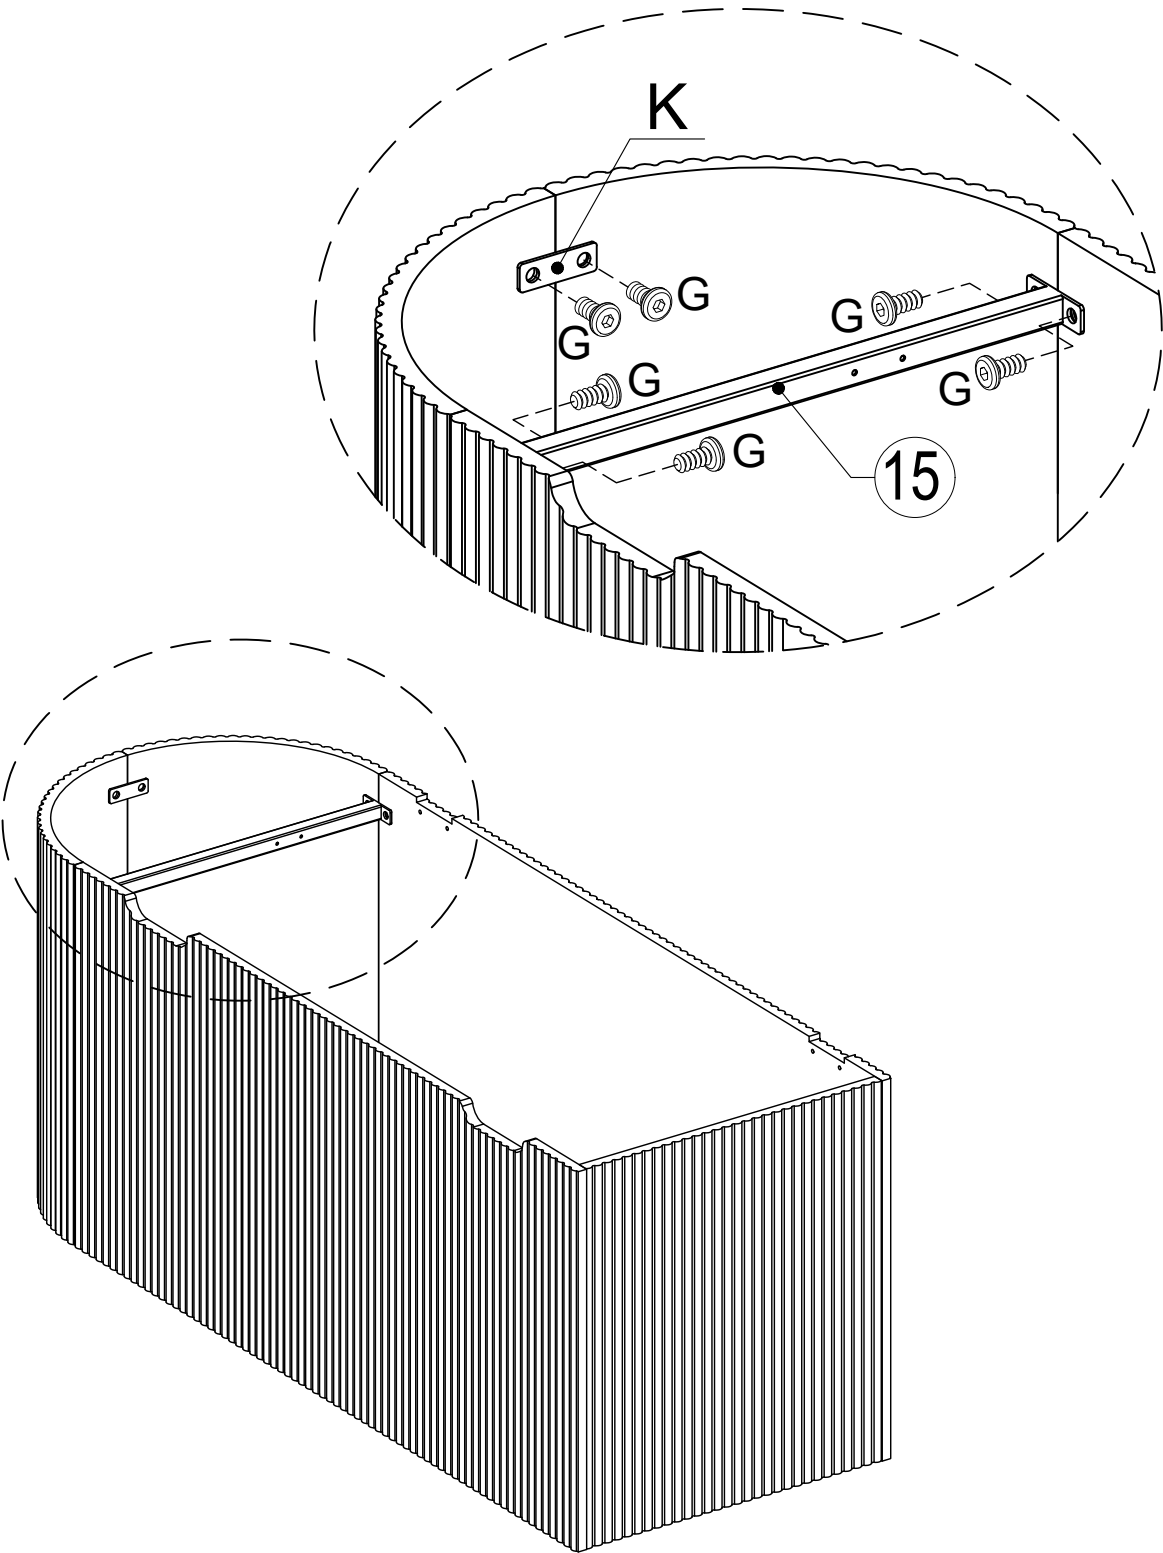


No. G
Quantity: 6 PCS
Screw
M6x12mm



No. K
Quantity: 1 PCS
Iron Plate
48x16mm




STEP 13

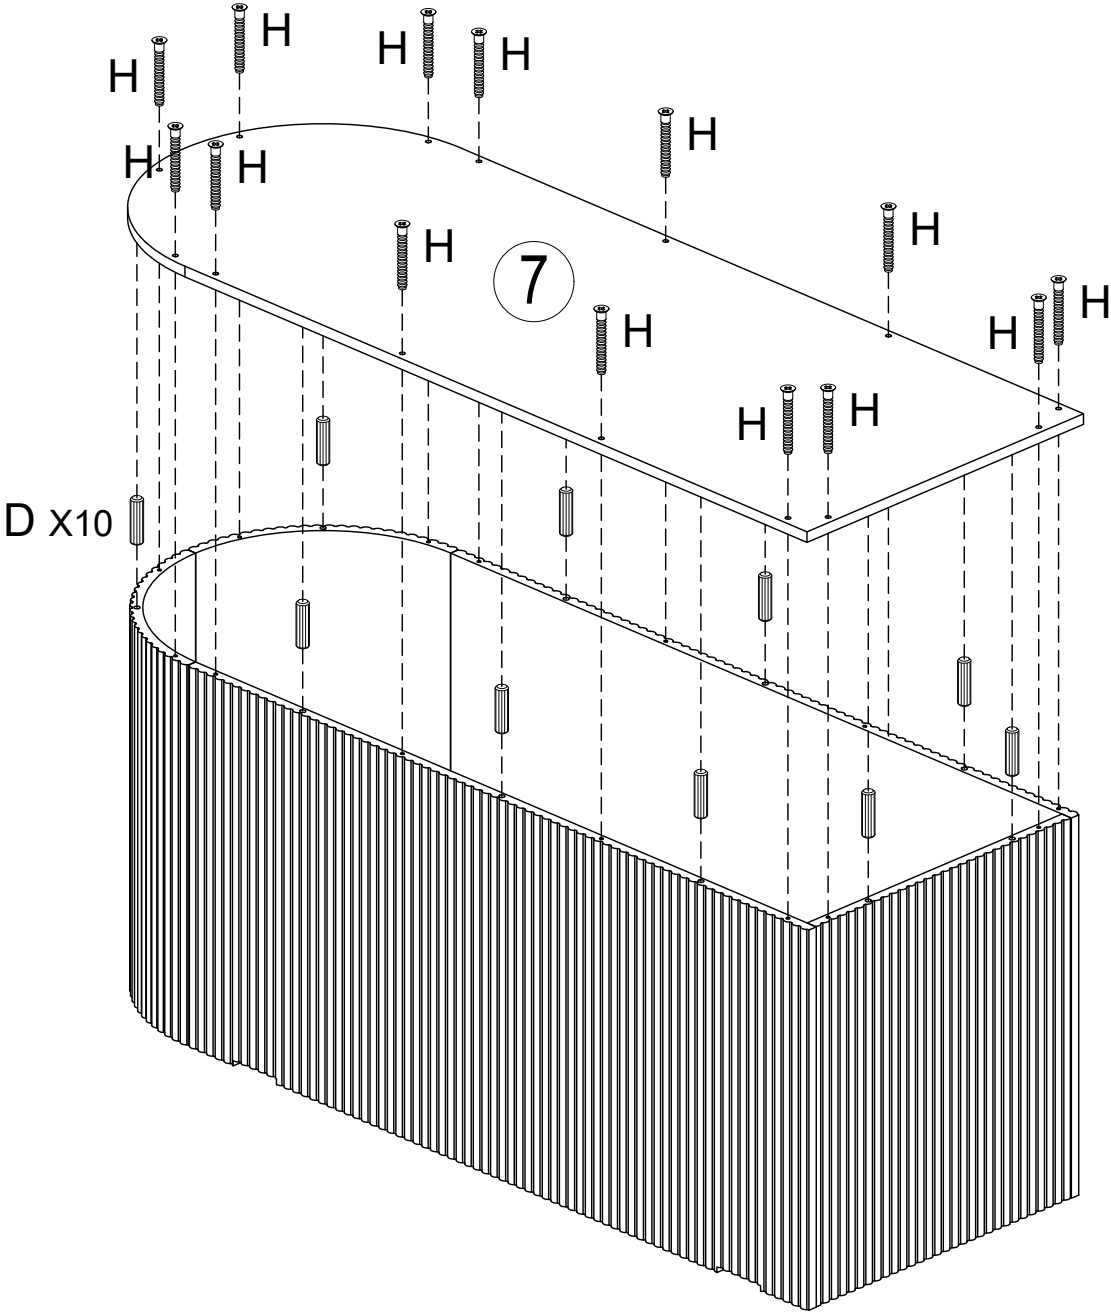


No. D

Quantity: 10 PCS
Dowel
ø6x30mm




No. H


Quantity: 14 PCS
Screw
ø5x38mm




STEP 14

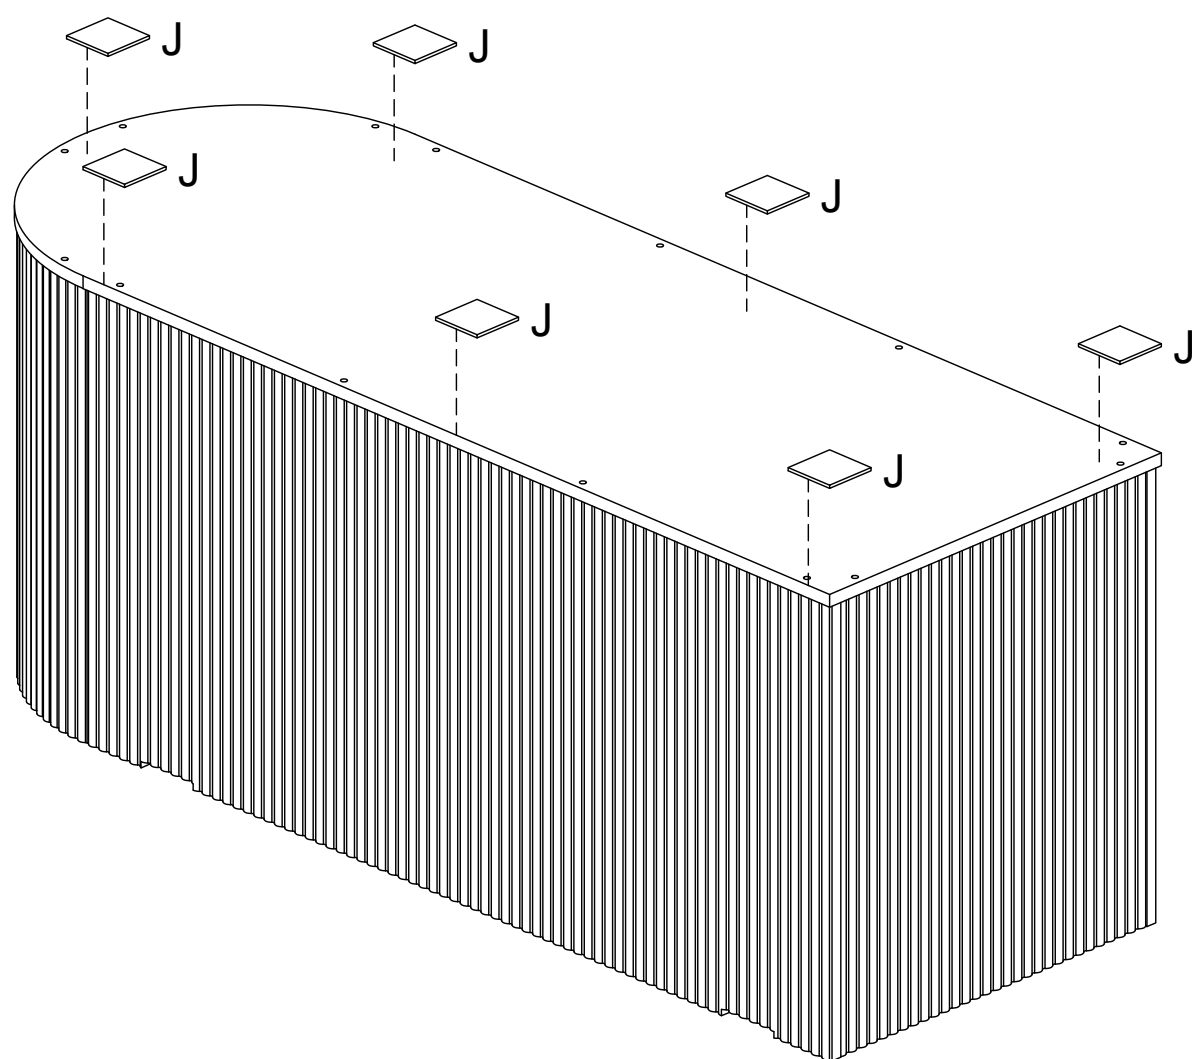


No. J
Quantity: 7 PCS
foot pad
35*35*3mm




STEP 15

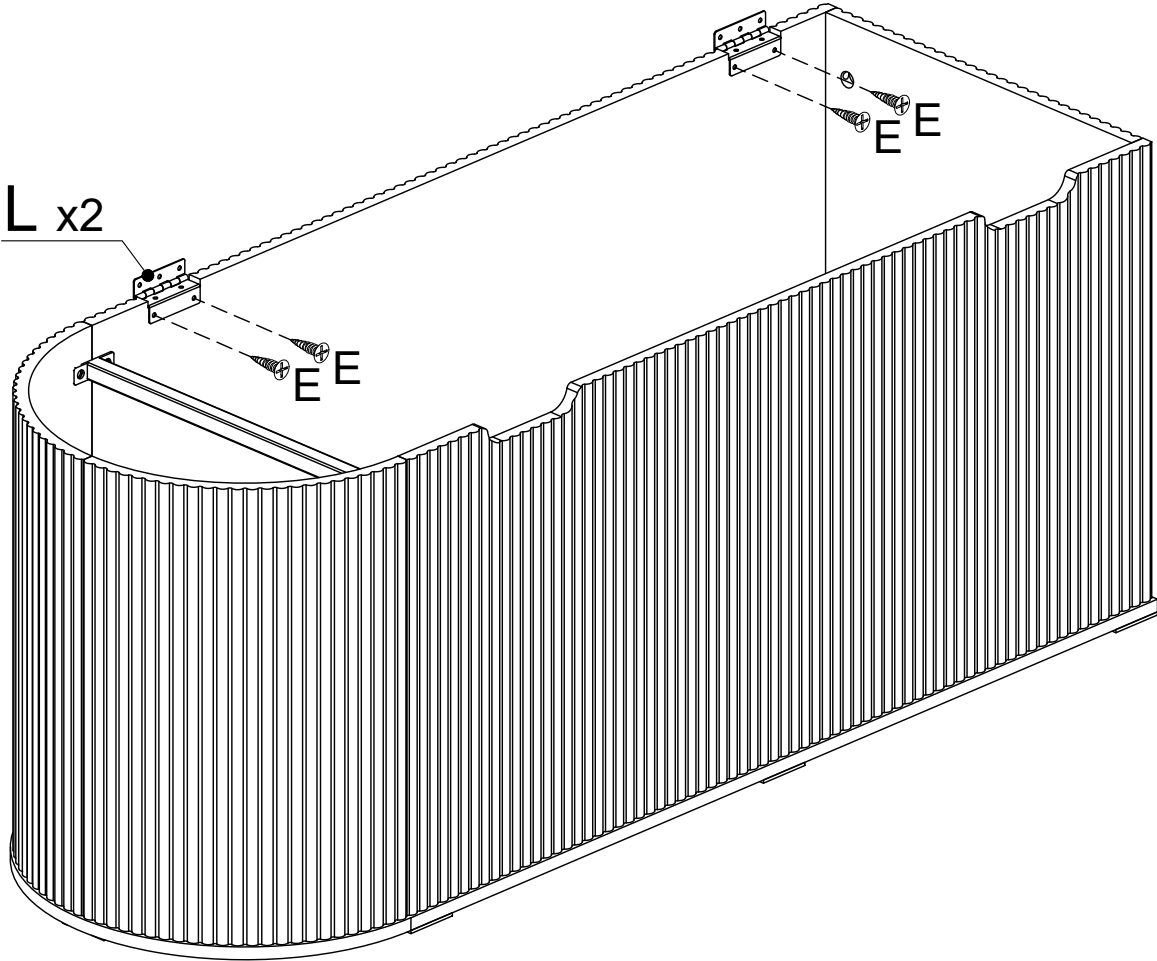


No. E
Quantity: 4 PCS
Screw
ø3.5x12mm



No. L
Quantity: 2 PCS
Hinge

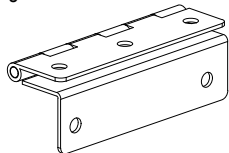


STEP 16

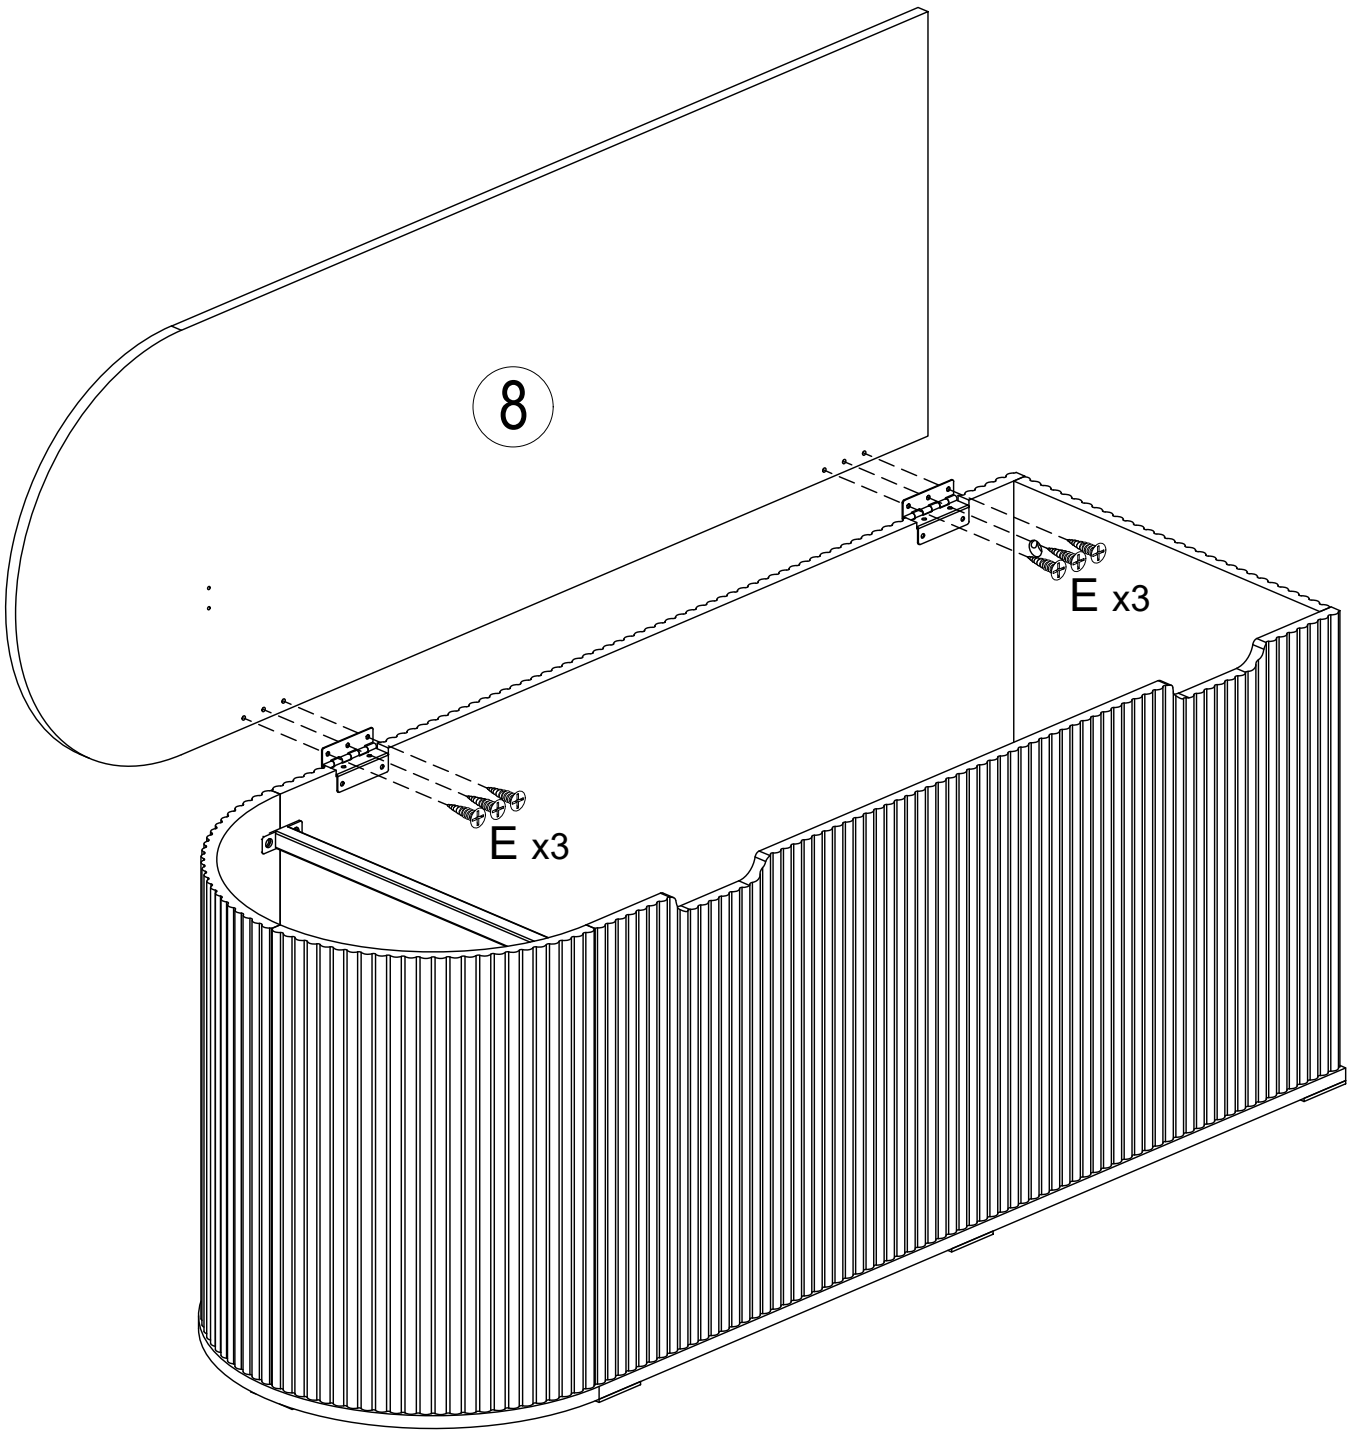


No. E

Quantity: 6 PCS


Screw
ø3.5x12mm




STEP 17

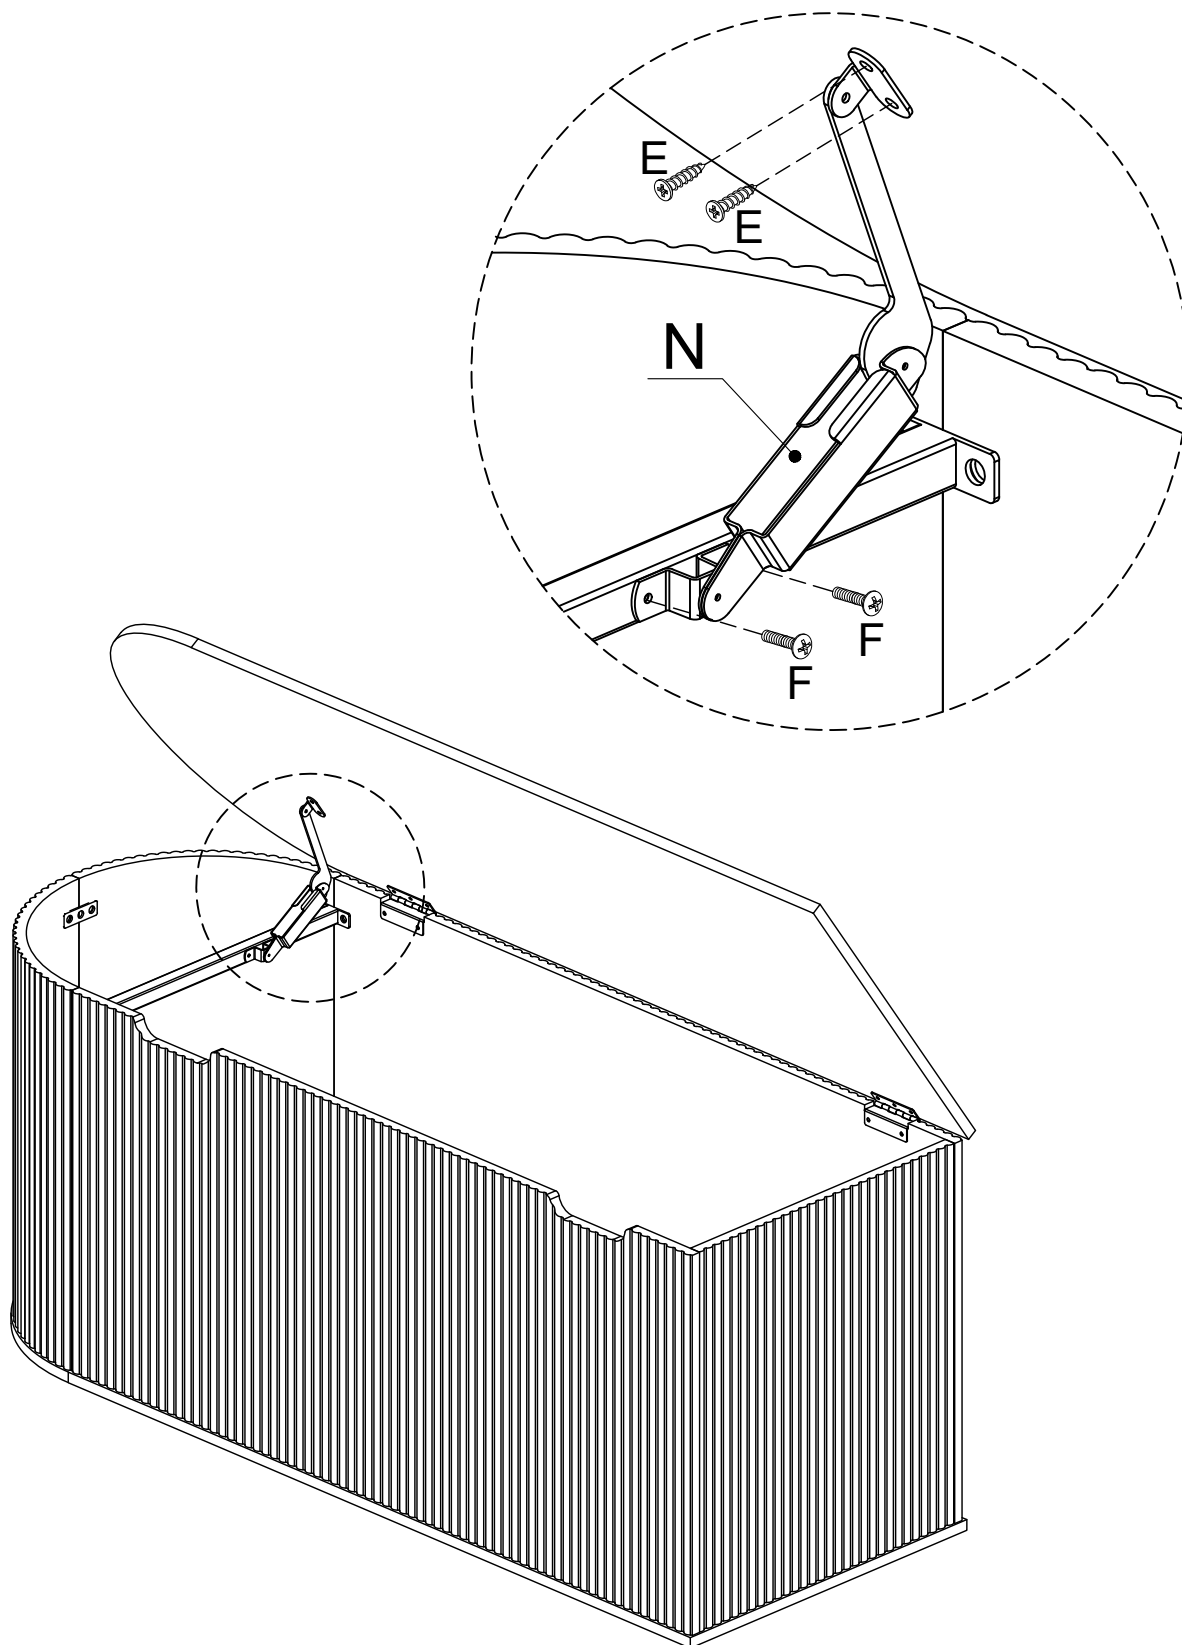


No. E
Quantity: 2 PCS
Screw
ø3.5x12mm




No. F
Quantity: 2 PCS
Bolt
M4x12mm




No. N
Quantity: 1 PCS
Support rod - right

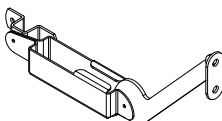



STEP 18

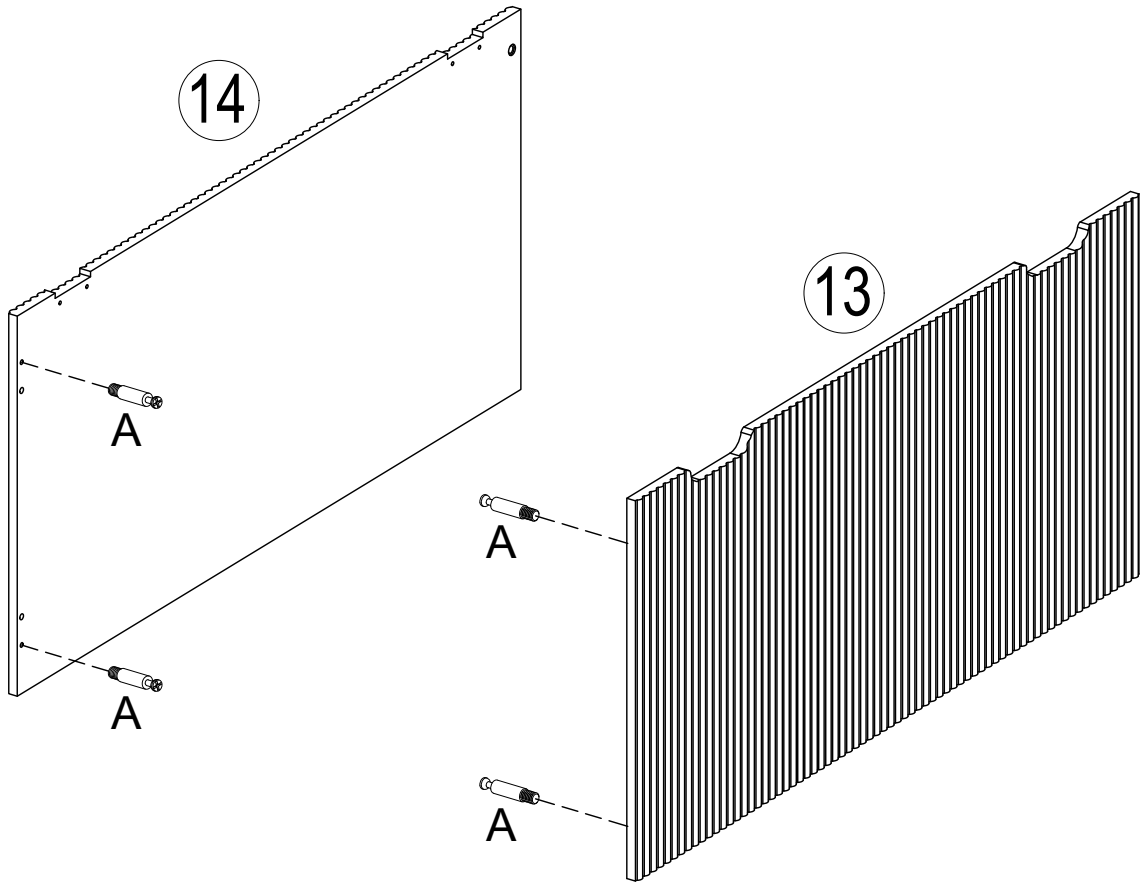

No. A
Quantity: 4 PCS
Cam Bolt
ø6x33.5mm



STEP 19

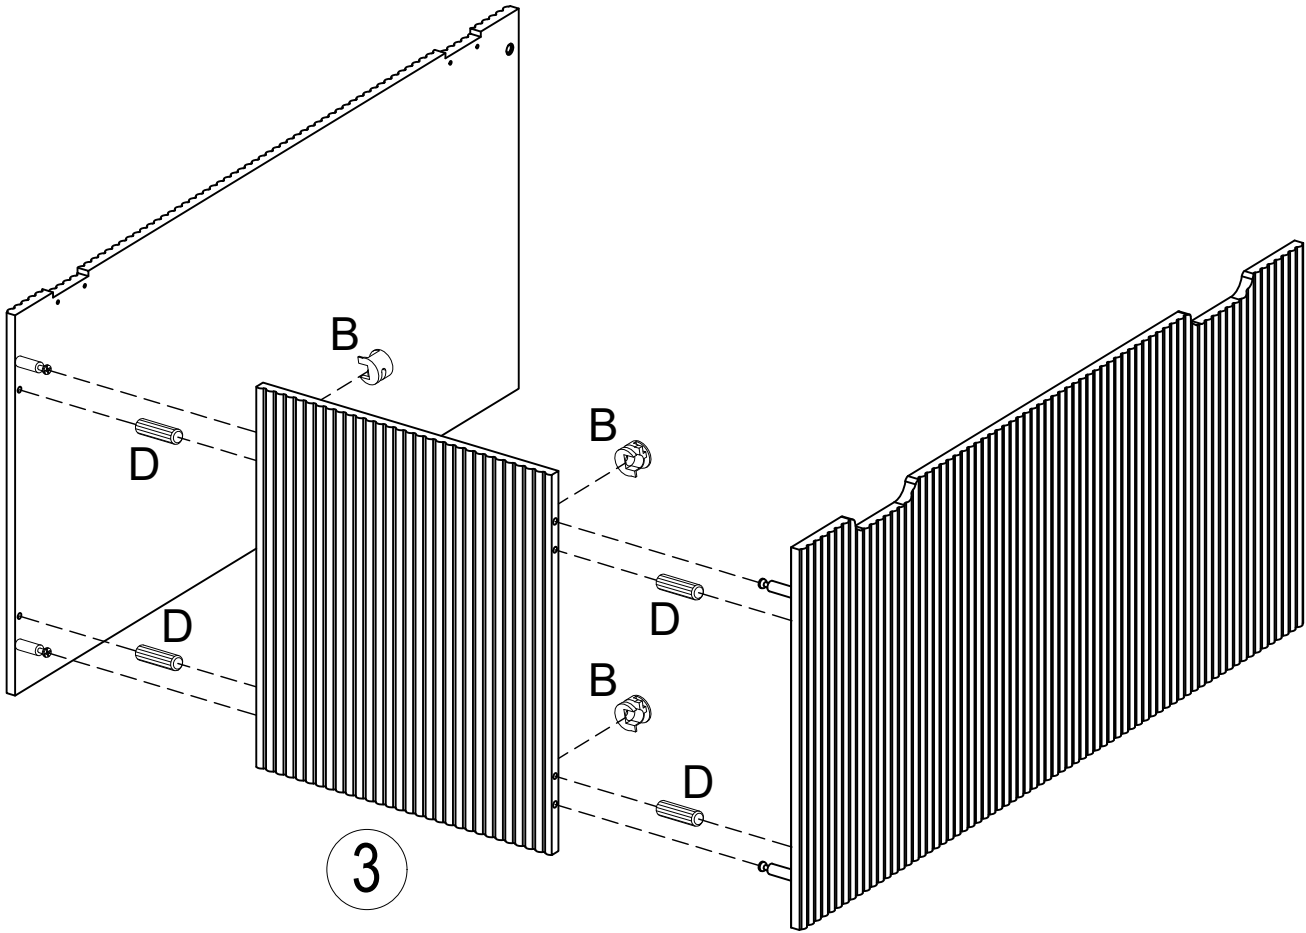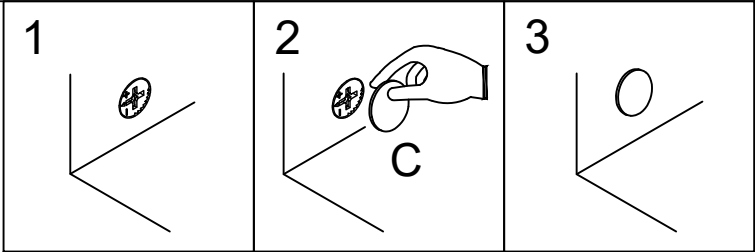


No. B
Quantity: 4 PCS
Cam
ø15x9.5mm




No. C
Quantity: 4 PCS
Sticker
ø20mm




No. D
Quantity: 4 PCS
Dowel
ø6x30mm




STEP 20

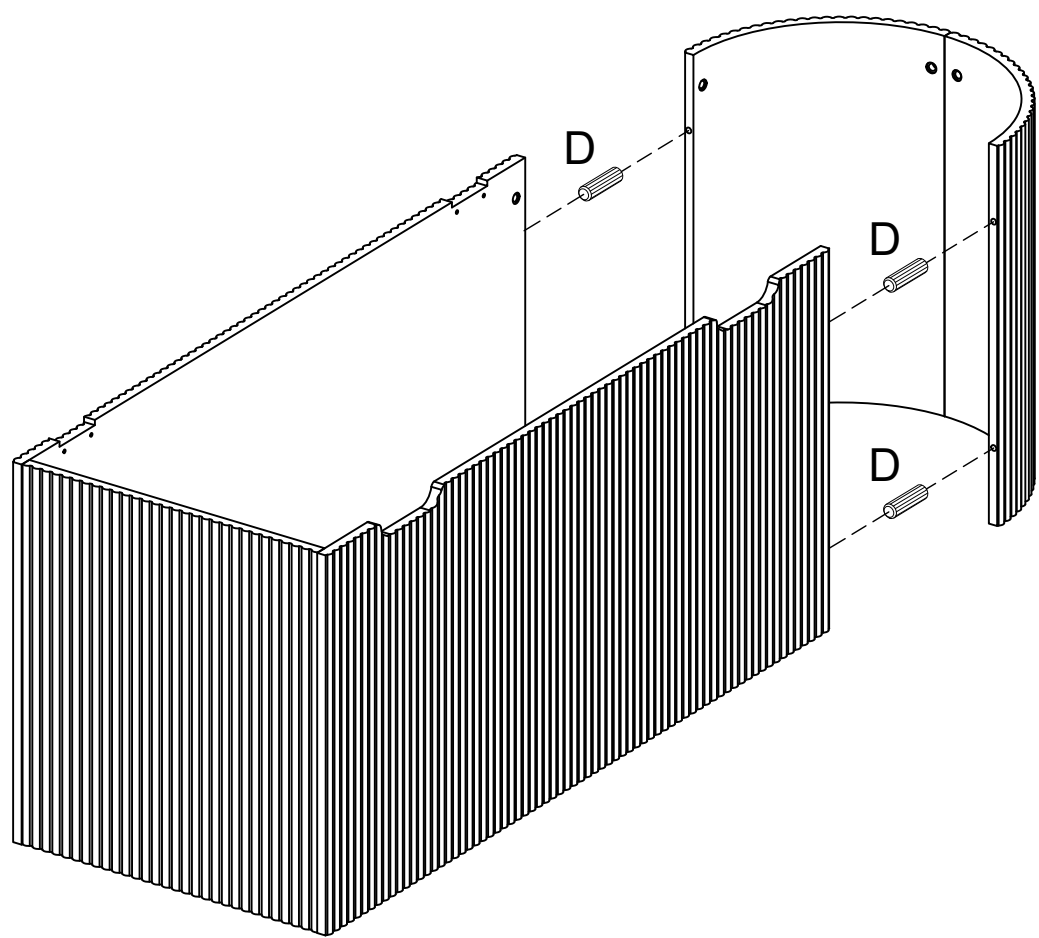


No. D
Quantity: 4 PCS
Dowel
ø6x30mm




STEP 21

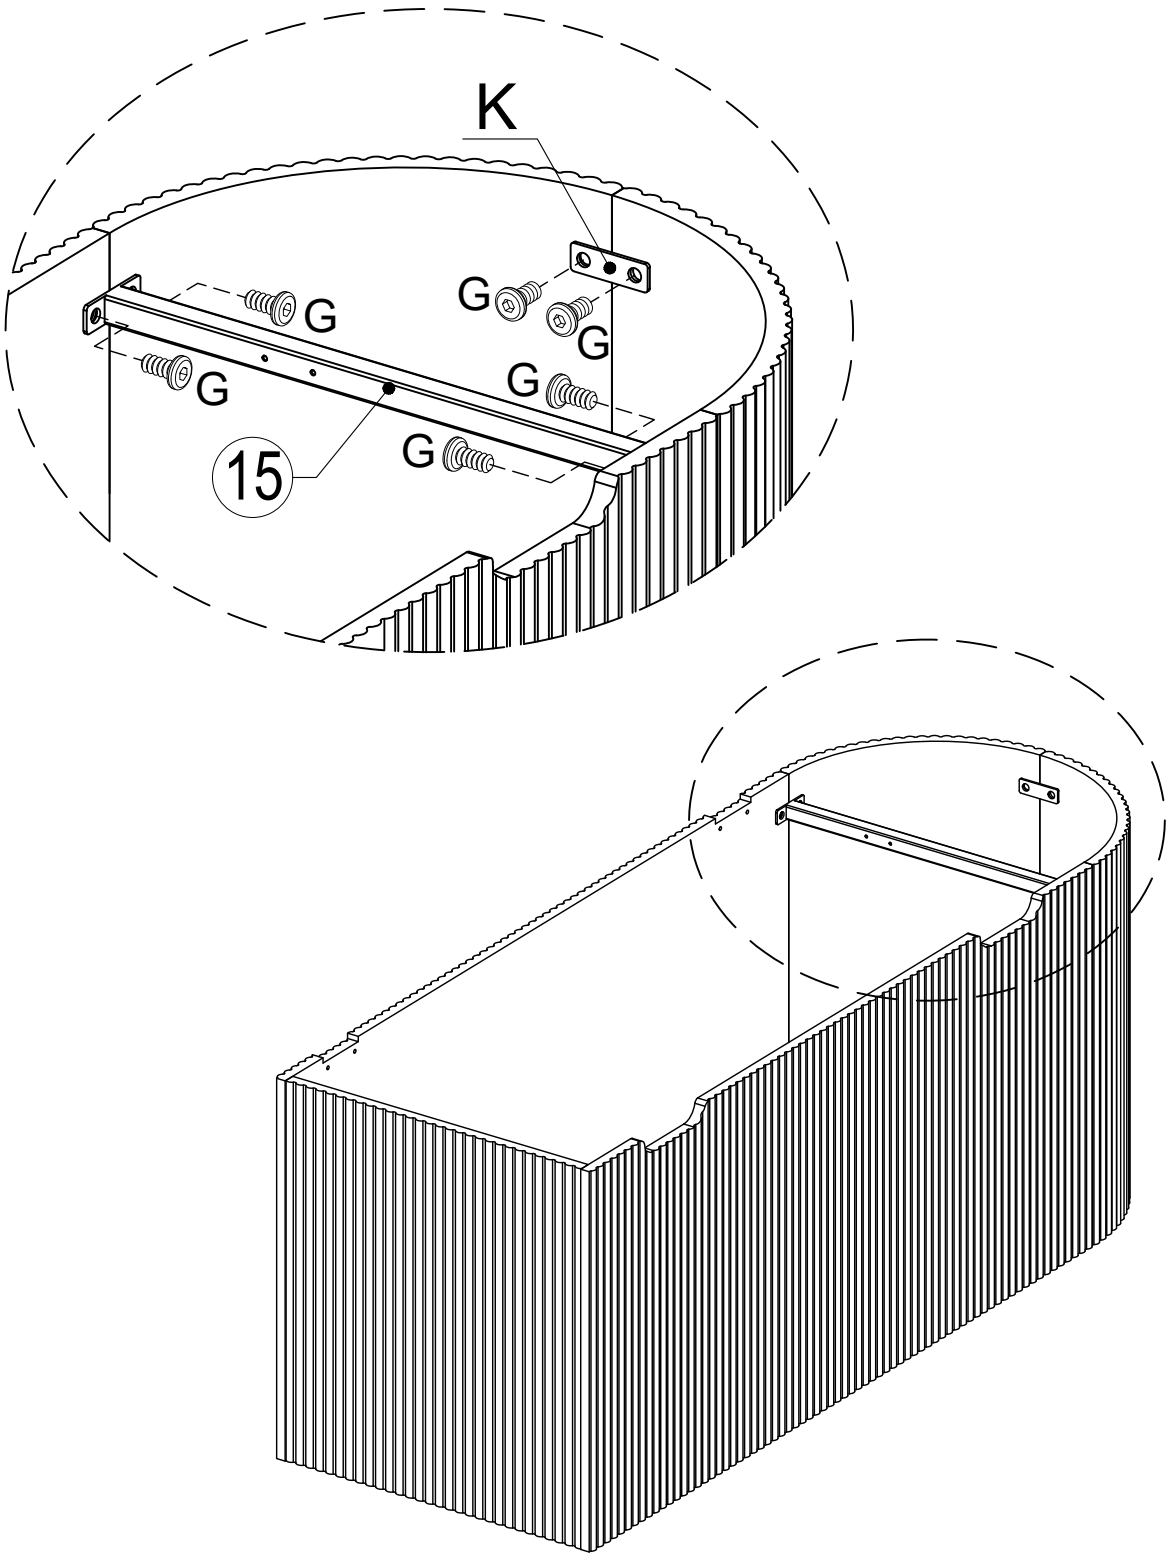


No. G
Quantity: 6 PCS
Screw
M6x12mm




No. K
Quantity: 1 PCS
Iron Plate
48x16mm




STEP 22

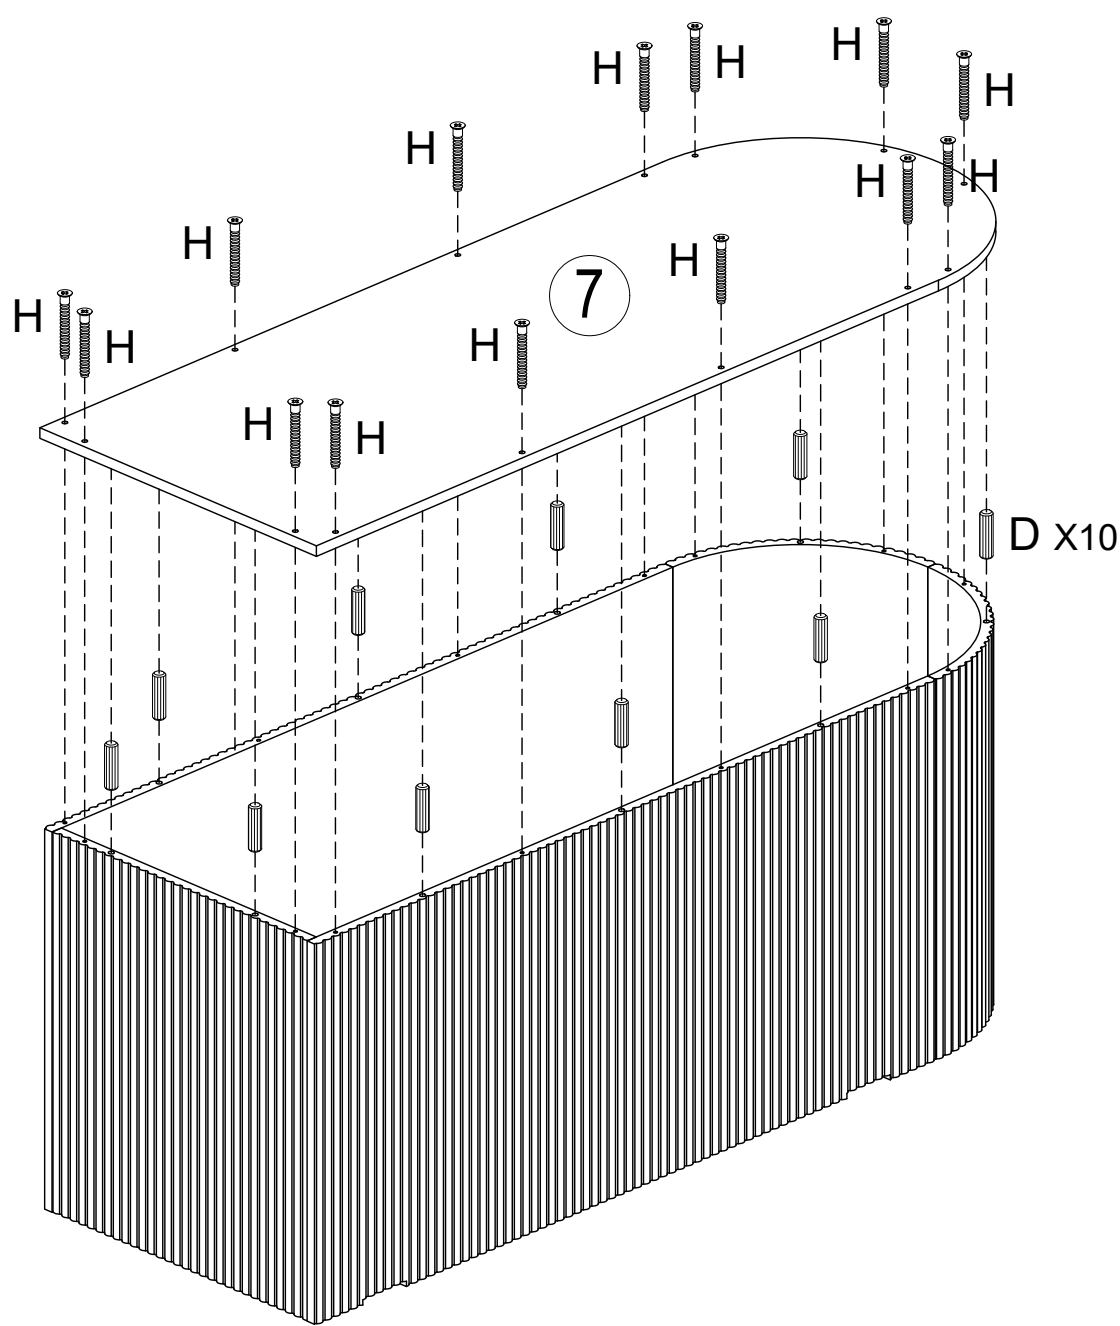


No. D
Quantity: 10 PCS
Dowel
ø6x30mm



No. H
Quantity: 14 PCS
Screw
ø5x38mm




STEP 23

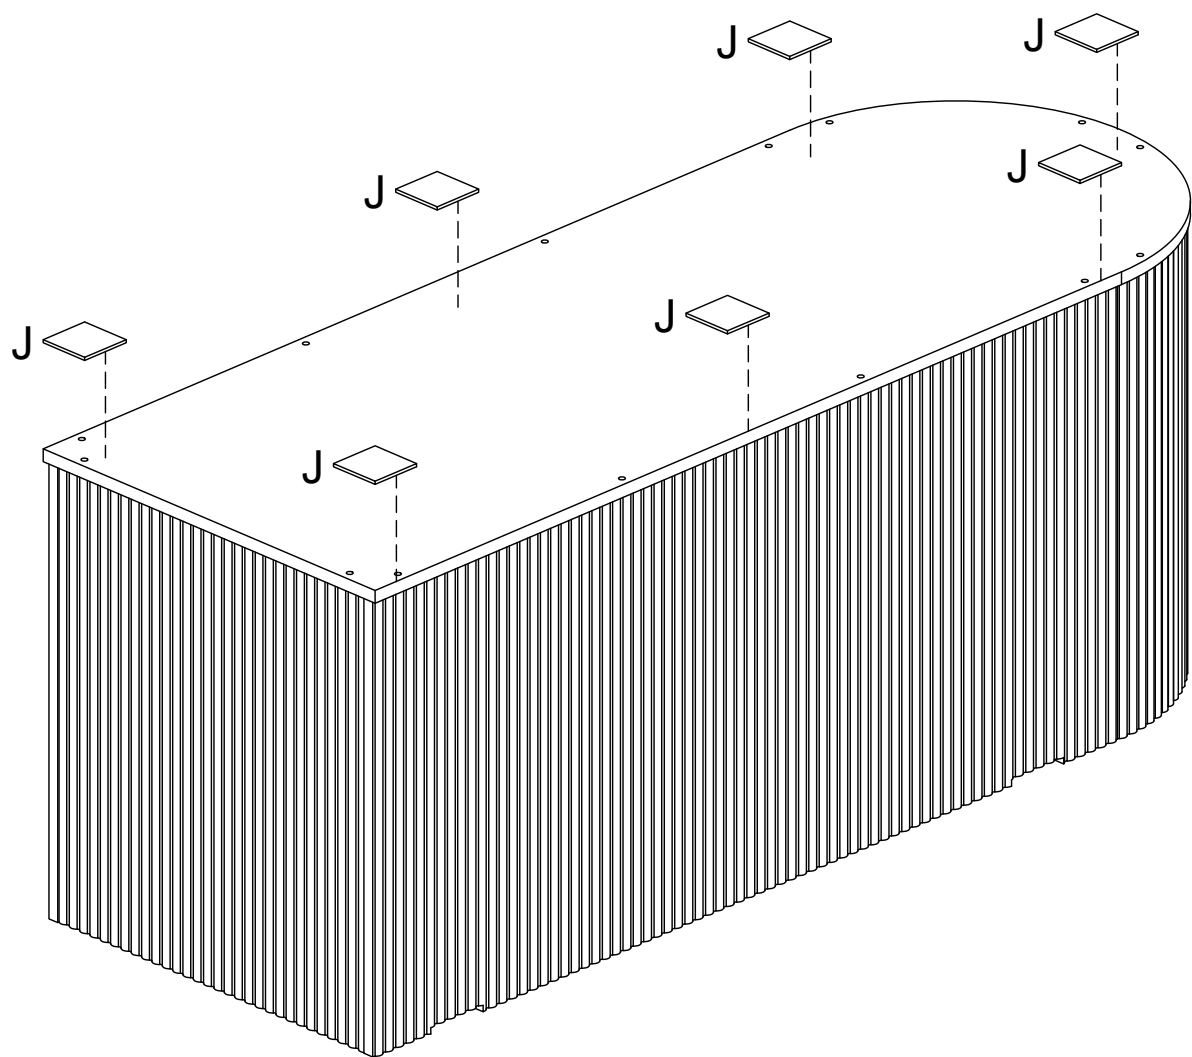


No. J


Quantity: 7 PCS
foot pad
35*35*3mm




STEP 24

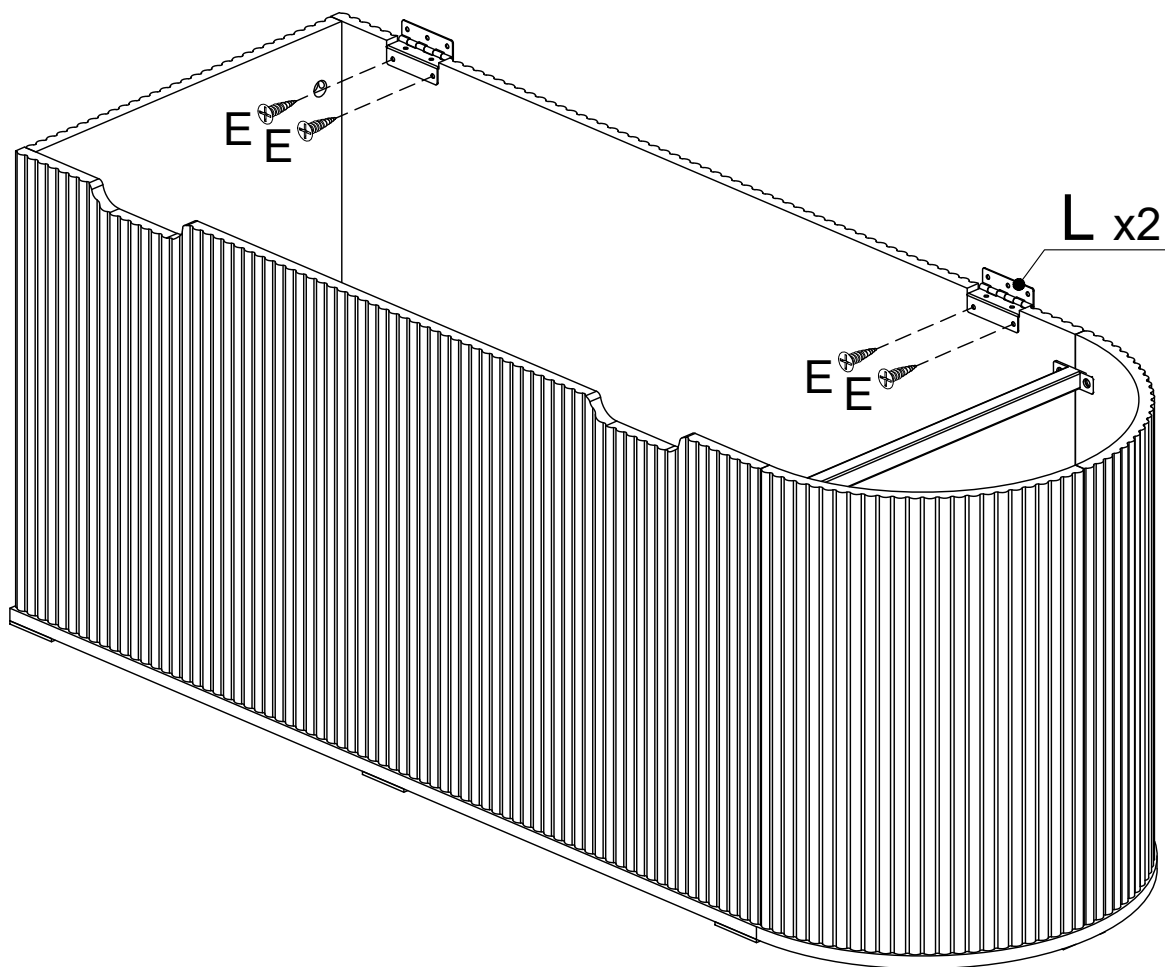


No. E
Quantity: 4 PCS
Screw
ø3.5x12mm




No. L
Quantity: 2 PCS
Hinge

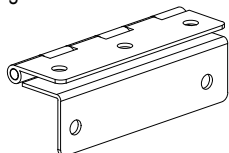



STEP 25

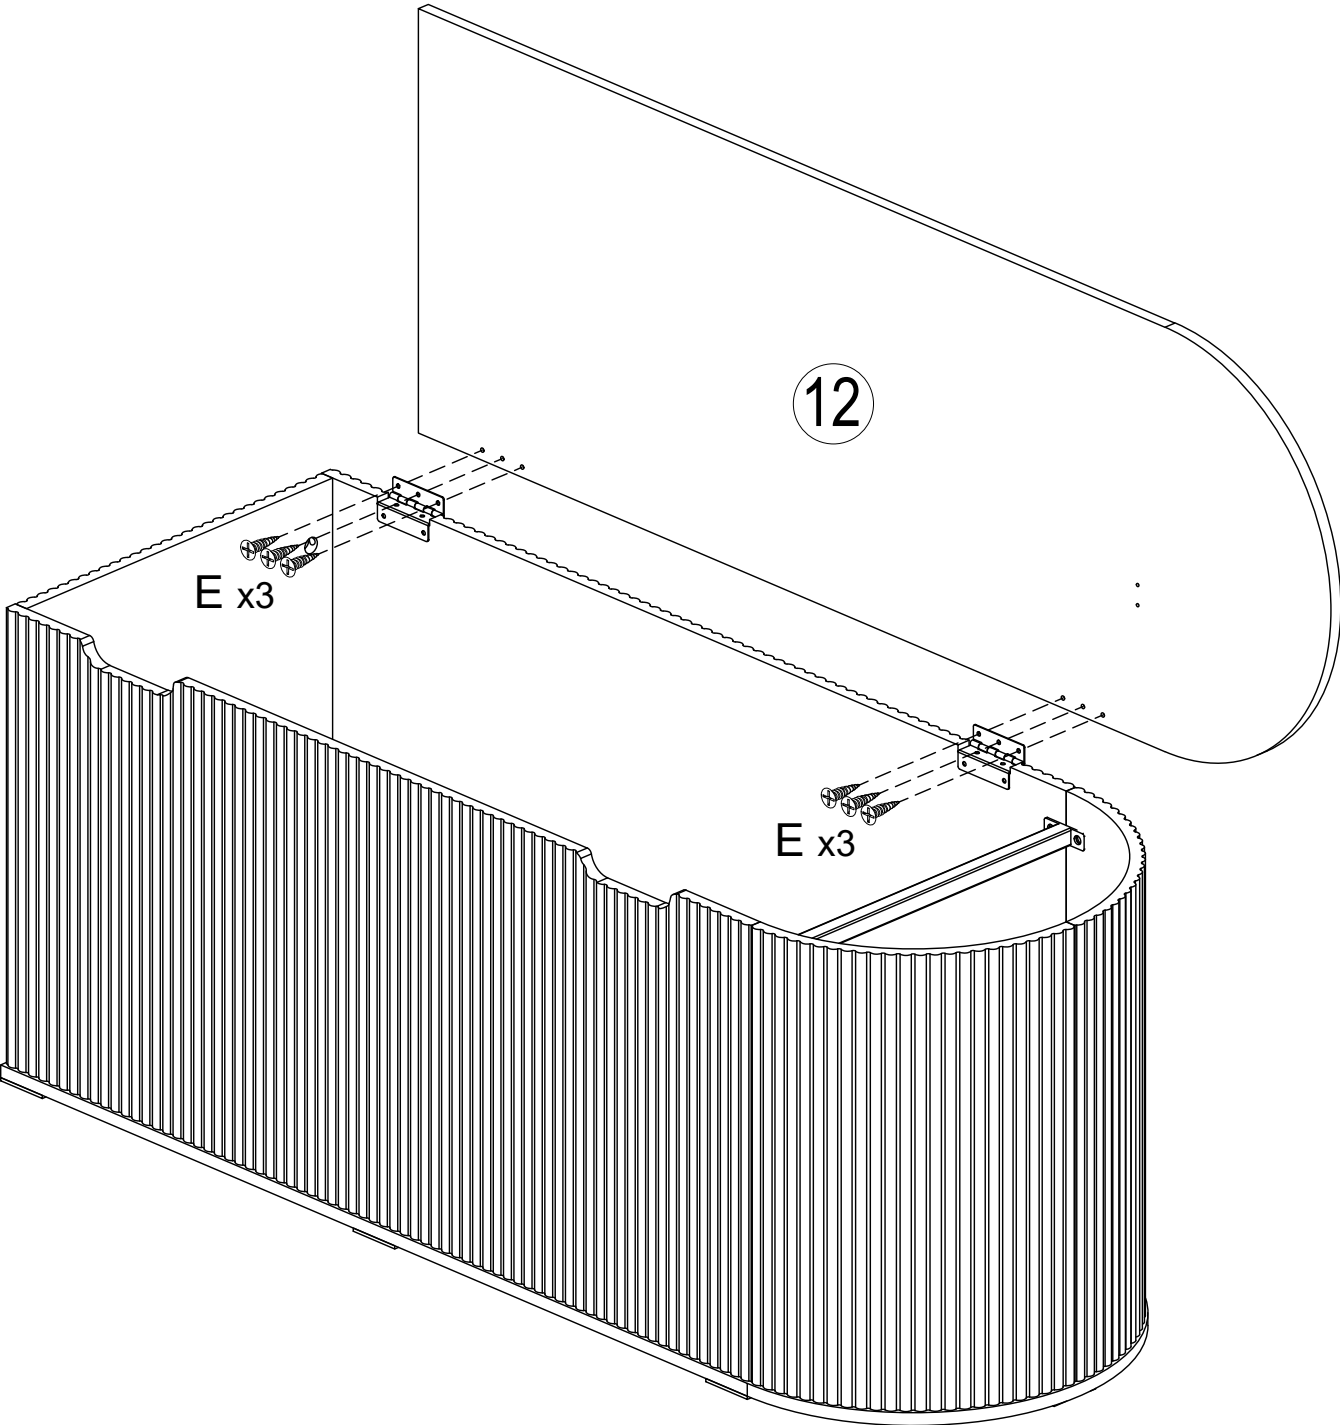


No. E
Quantity: 6 PCS
Screw
ø3.5x12mm




STEP 26

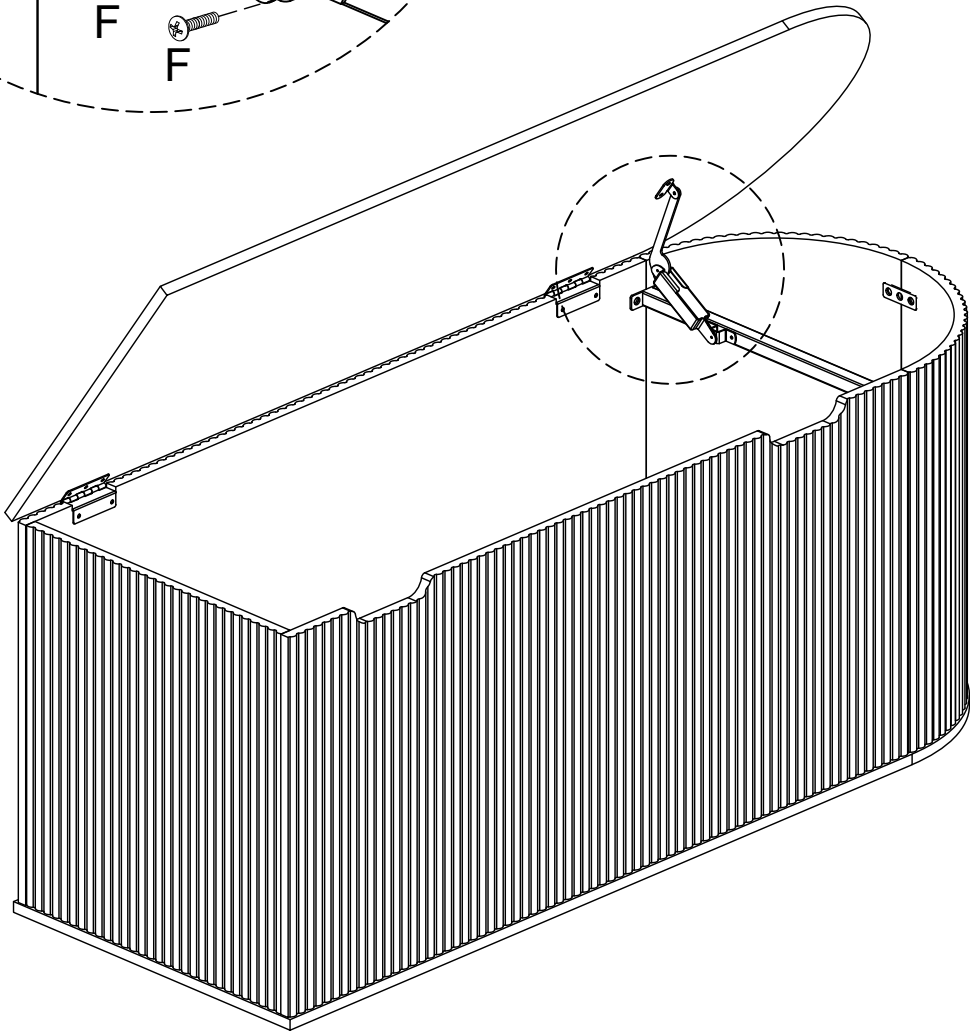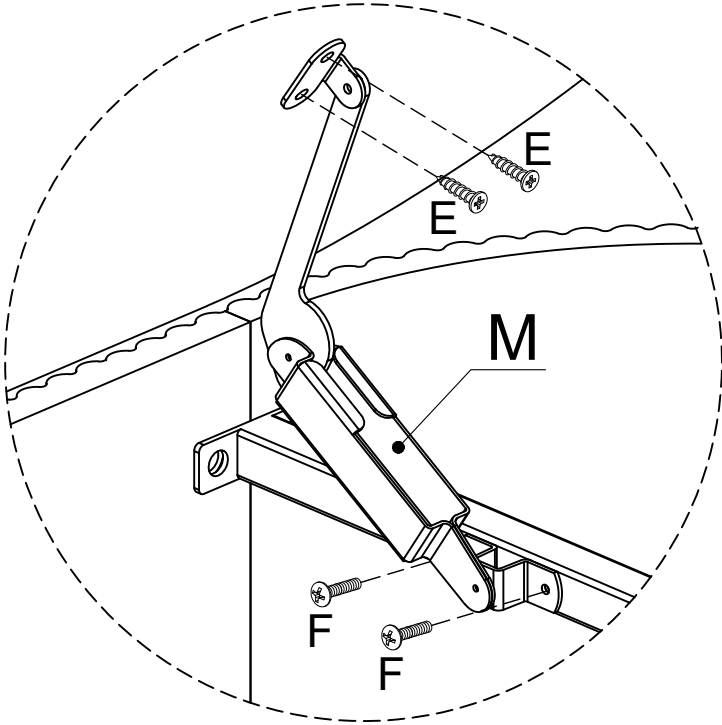


No. E
Quantity: 2 PCS
Screw
ø3.5x12mm



No. F
Quantity: 2 PCS
Bolt
M4x12mm



No. M
Quantity: 1 PCS
Support rod - left



STEP 27

