


Installation Step Diagram

Step 1


Wall

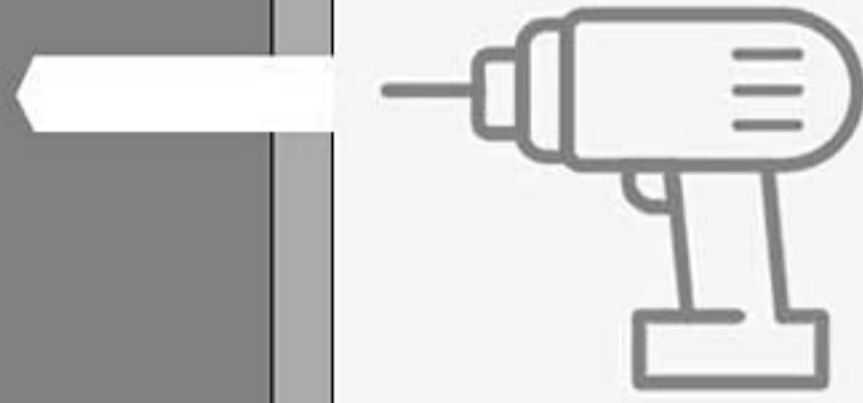

Drill a hole about 6mm deep.

Step 2


Wall

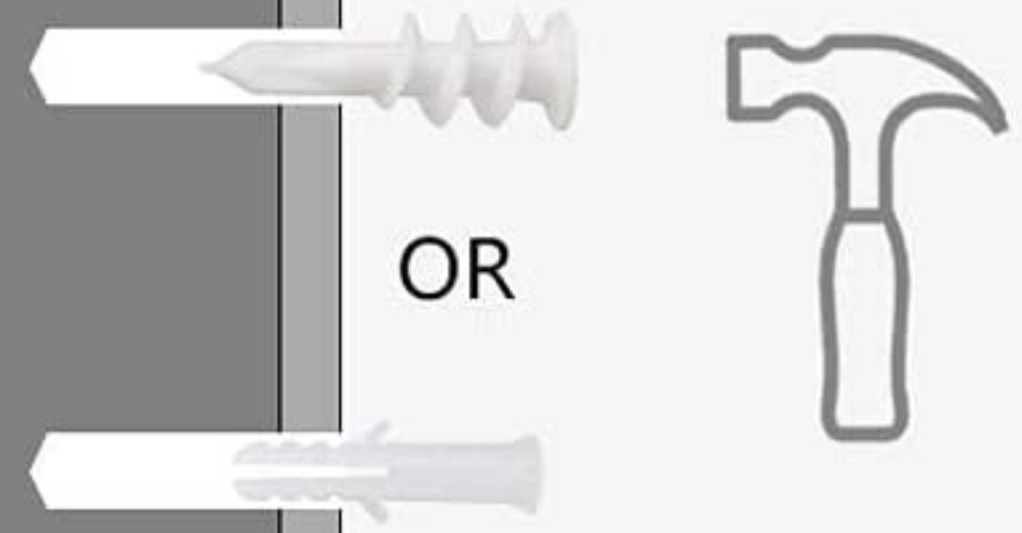

Punch the screw into hole with a hammer

Step 3

Wall

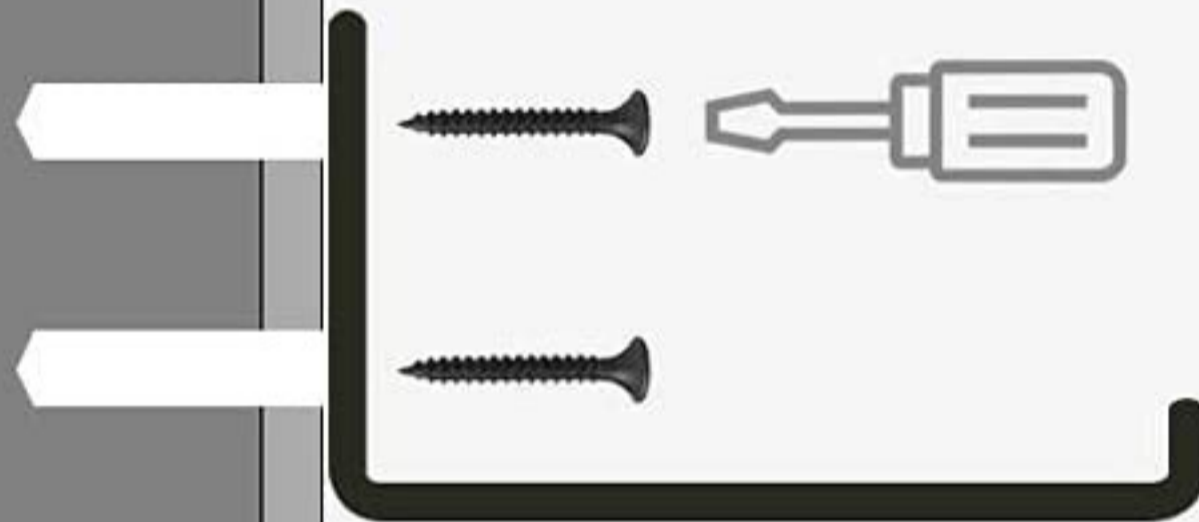

Attach the bracket to the wall, replace the long screws

Step 4


Wall



Place the board on the bracket .

Step 5

Wall

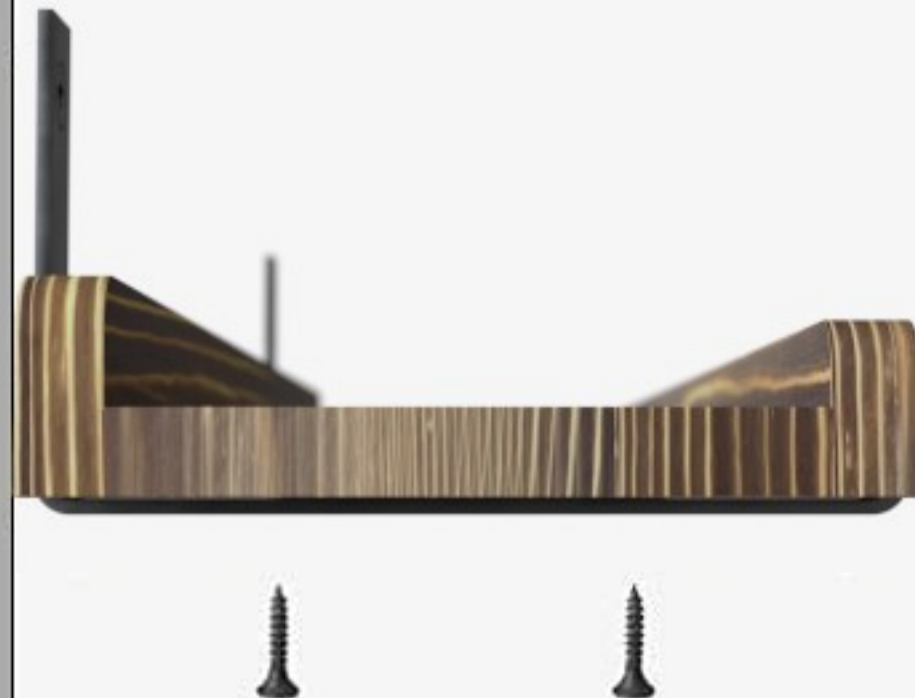

Replace the short screws.

Step 6



Finish