



ASSEMBLY INSTRUCTIONS






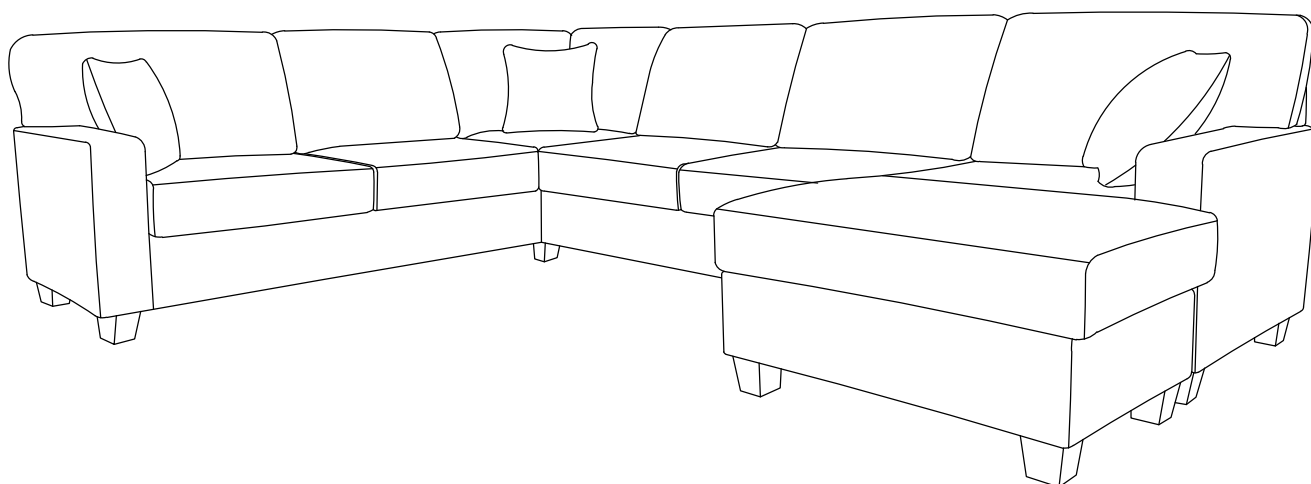









Sectional Sofa

Components:

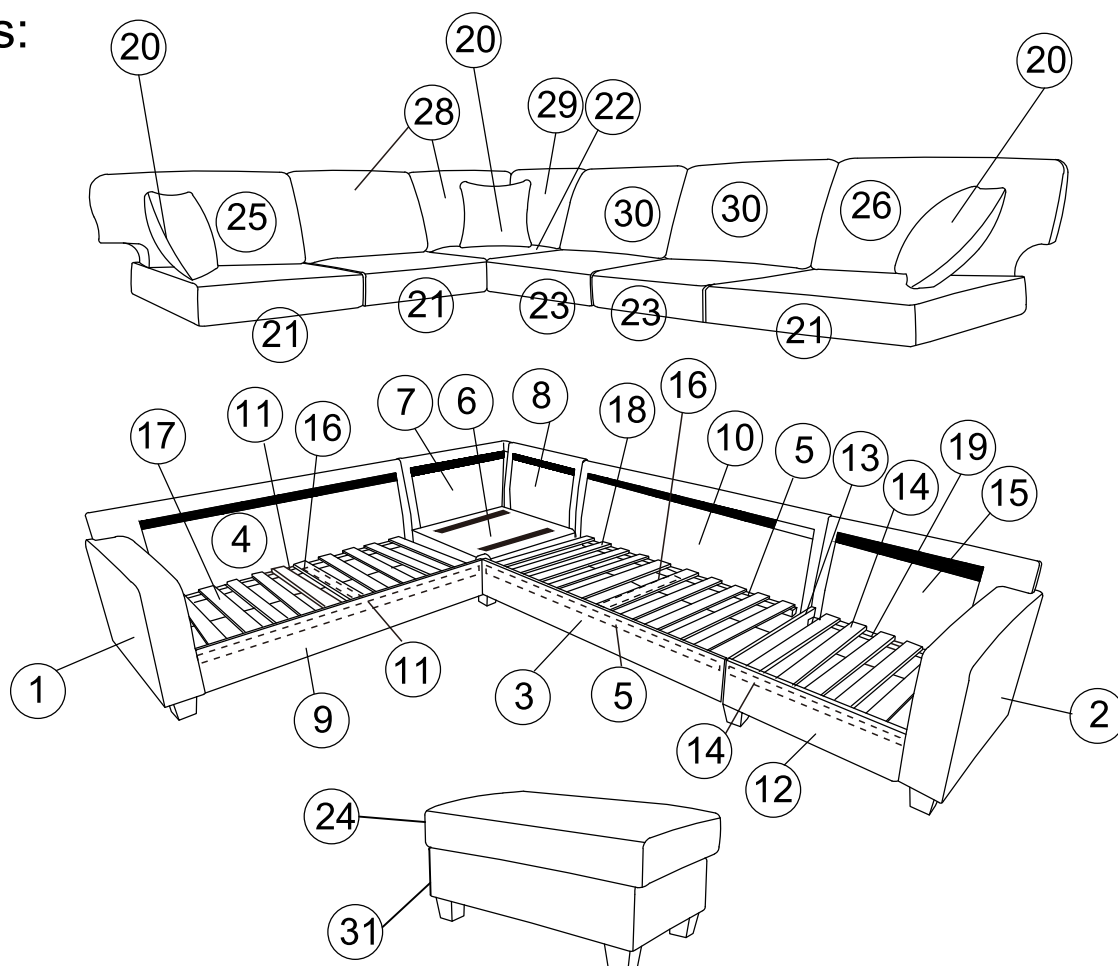


PACK LIST

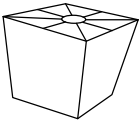 Left 2S Seat front panel 1PC	 Left 2S backrest 1PC	 Left 2S Seat wood brace 2 PC	 Armless 2S Seat front panel 1PC	 Armless 2S backrest 1PC	 Armless 2S Seat wood brace 2 PC
 Right 1S wood brace 2 PC	 LEG 4PC	 M8*70MM 14 PCS	 M8*35MM 20PCS	 M8*18MM 48PCS	 M8x19x2 60PCS
 Metal bracket 11PCS	 Metal bracket 1 PC	 Wrench 1PC	 Connect Bar 3PCS	 Right 1S front panel 1PC	 Connect panel 2PCS
 Right 1S side panel 1PC					
 Left Arm 1 PC	 Right Arm 1PC	 corner backrest 1PC	 corner backrest 1PC	 Armless 2S Back cushion 2PCS	


15  Right 1S wood brace 1PC	25  Left 2S side Back cushion 1PC	26  Right 1S Back cushion 1PC	28  corner back cushion and left 2S middle Back cushion 2PC	29  Corner Back cushion 1PC	
31  Stool base 1PC	20  Pillows 3 PCS	19  Right 1S Seat Slats 1PC	24  Stool Seat cushion 1PC	A  LEG 10 PCS	
6  corner base 1PC	17  Left 2S Seat Slats 1PC	18  Armless 2S Seat Slats 1PC	21  Seat cushion 3PCS	22  Corner Seat cushion 1PC	23  Armless 2s Seat cushion 2PCS

Assemble the Corner.

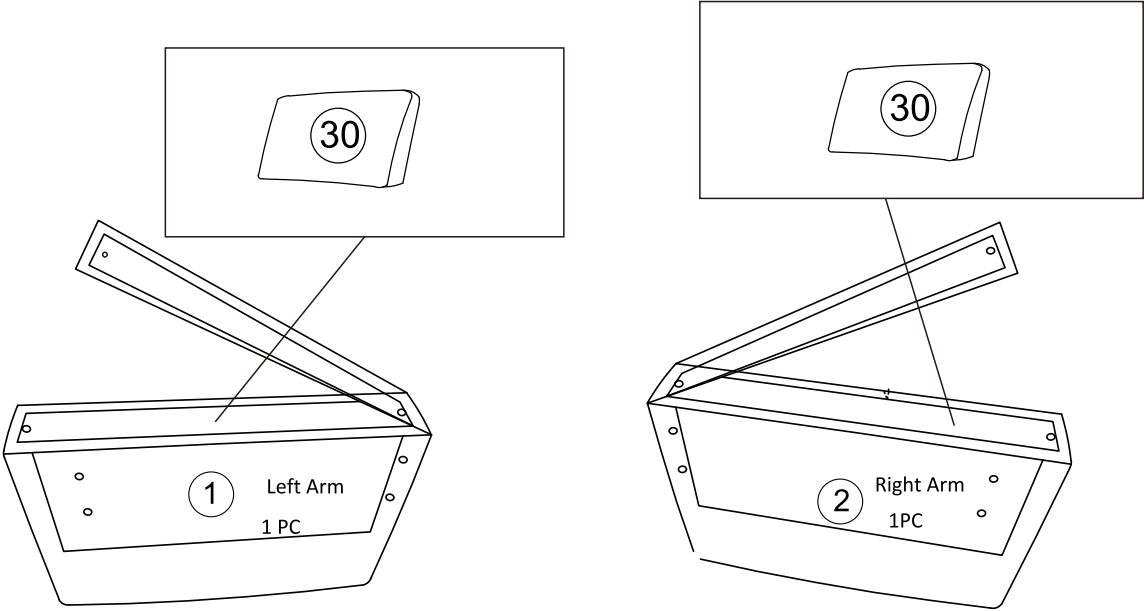


STEP 1:

	A X 4
	B X 4
	E X 4
	H X 1

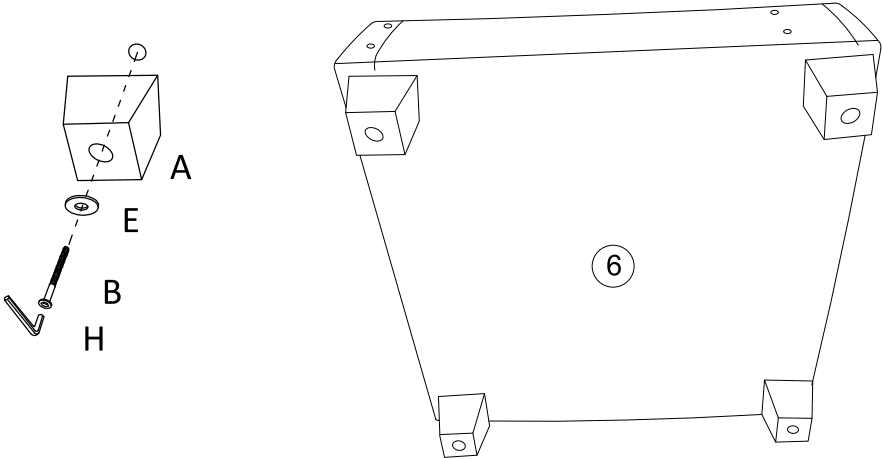


STEP 2:

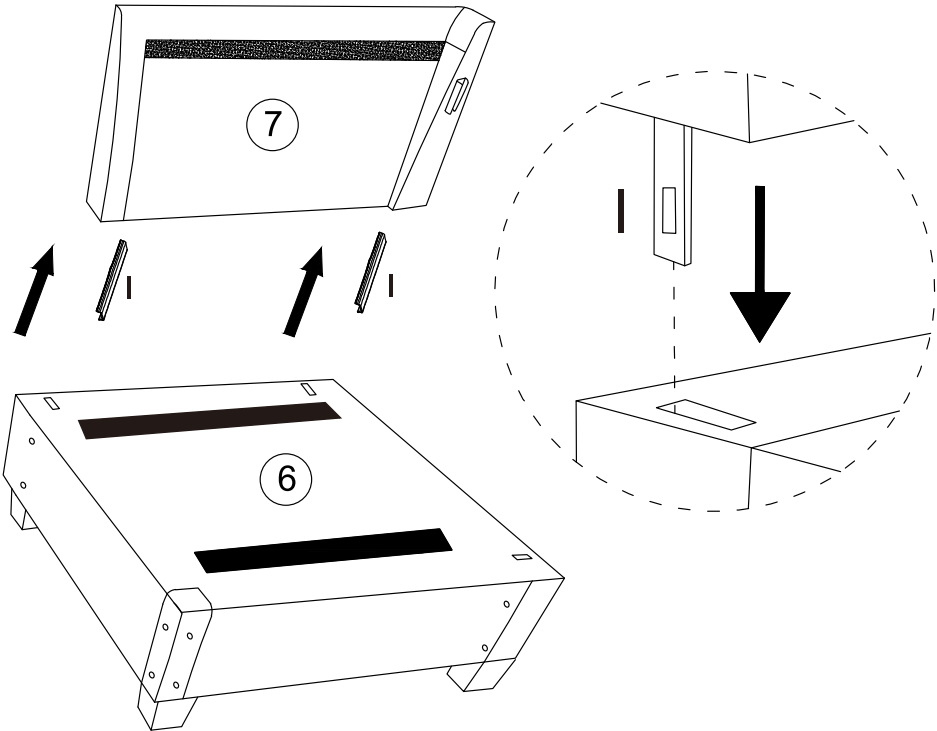



	I X 2
--	-------

STEP 3:

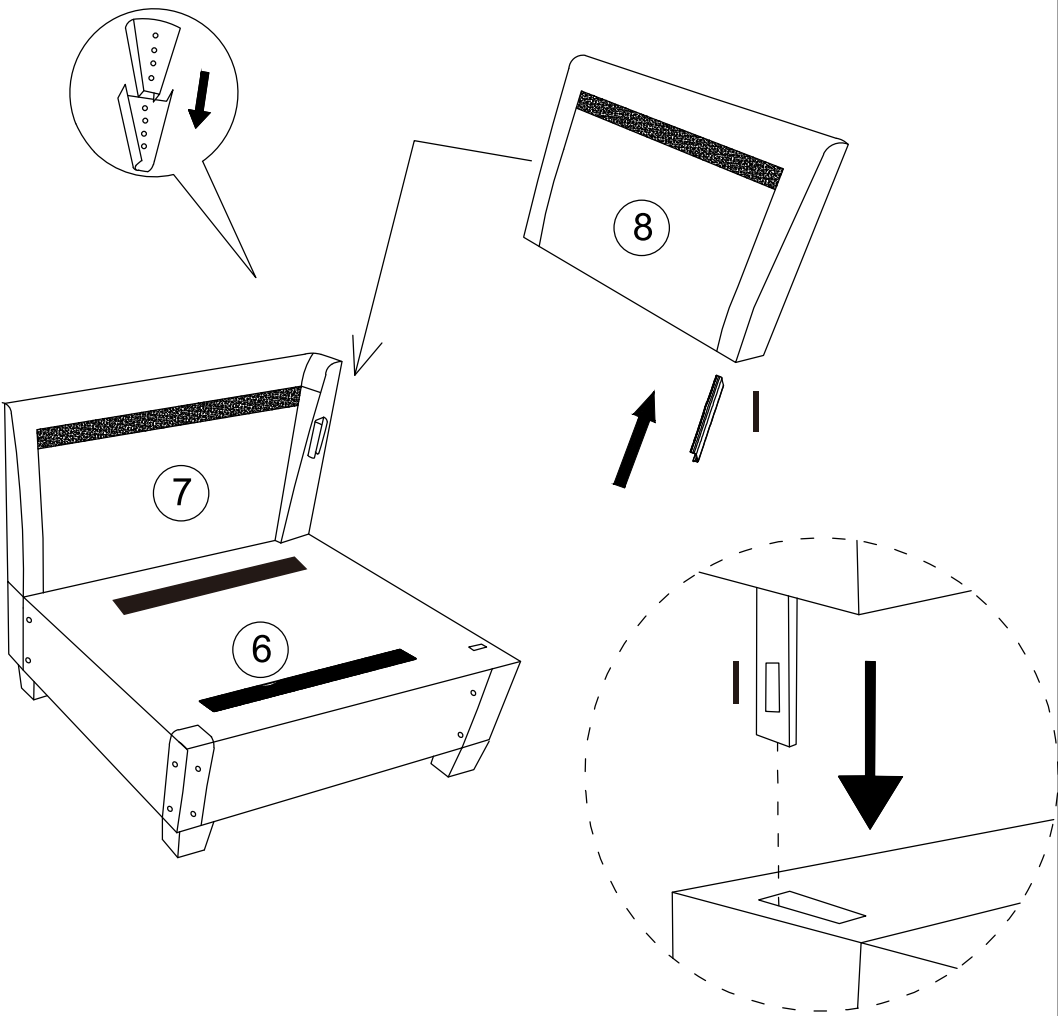

1 X 1


STEP 4: Tighten half.

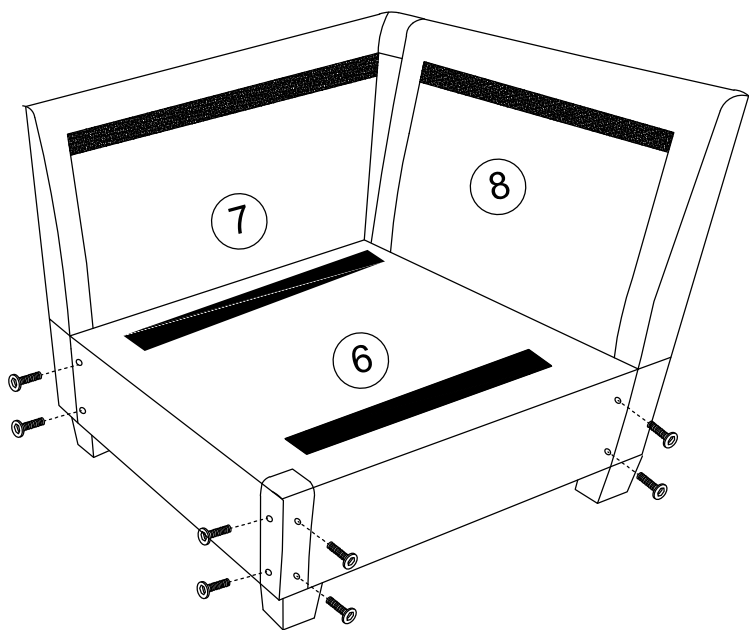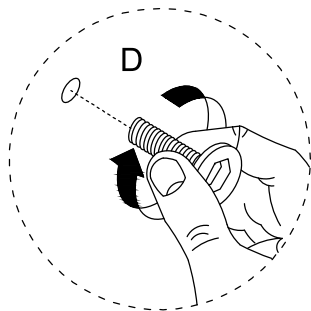

D X 8


Assemble the Left arm 2S.

STEP 5:

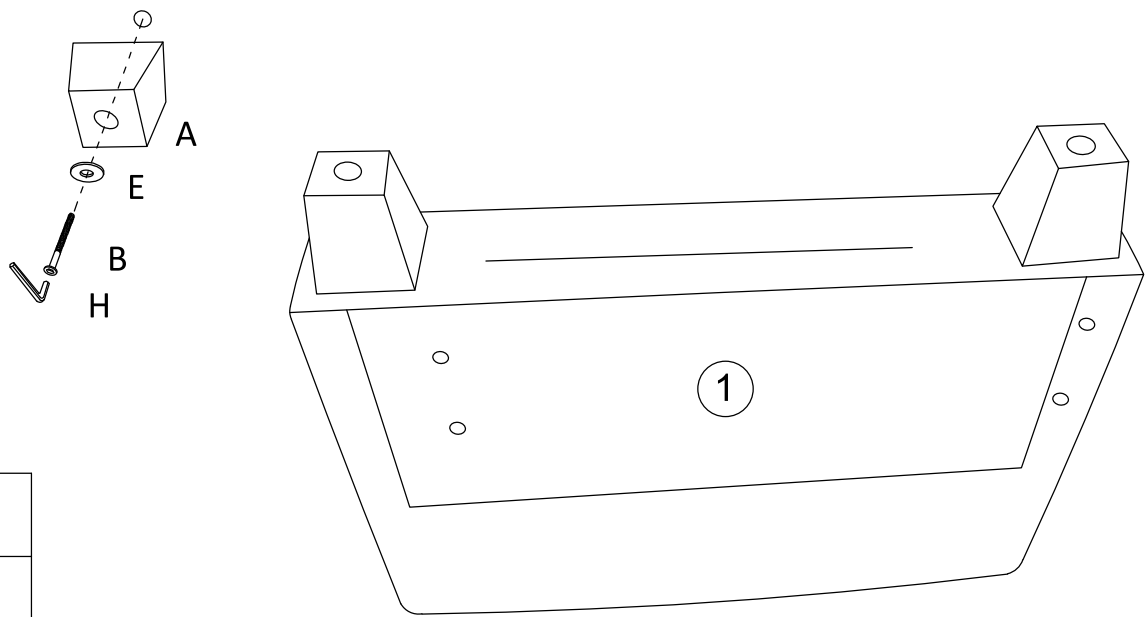



	A X 2
	B X 2
	E X 2
	H X 1

STEP 6:

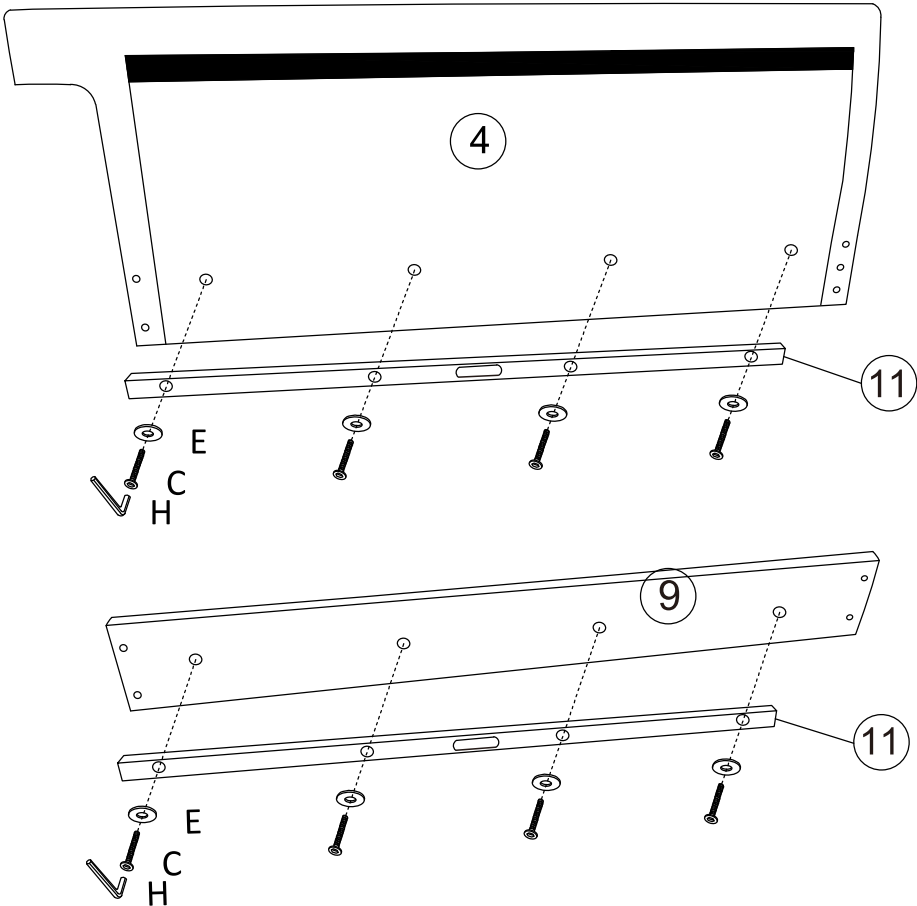



	C X 8
	E X 8
	H X 1

STEP 7:

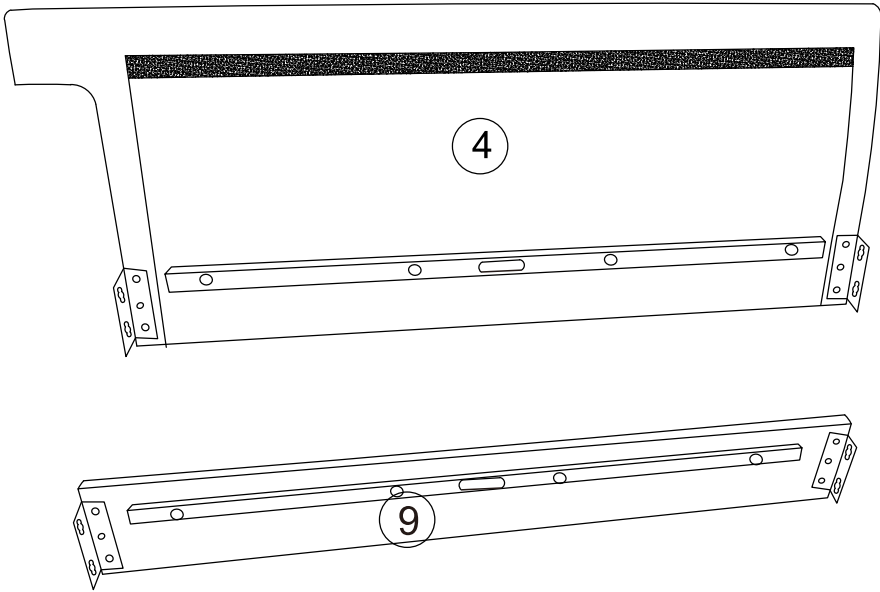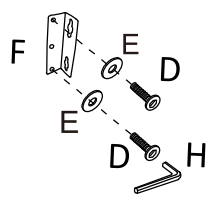


	E X 8
	F X 4
	D X 8
	H X 1

STEP 8:Tighten half.

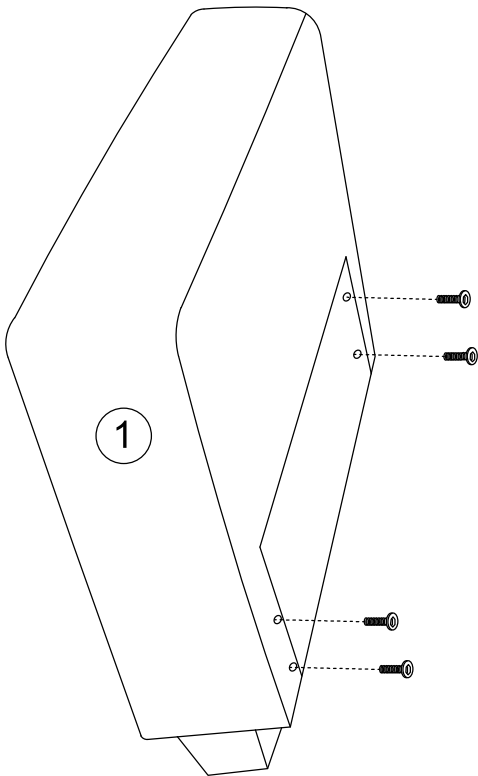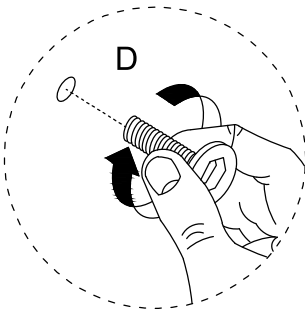

	D X 4
--	-------




STEP 9:

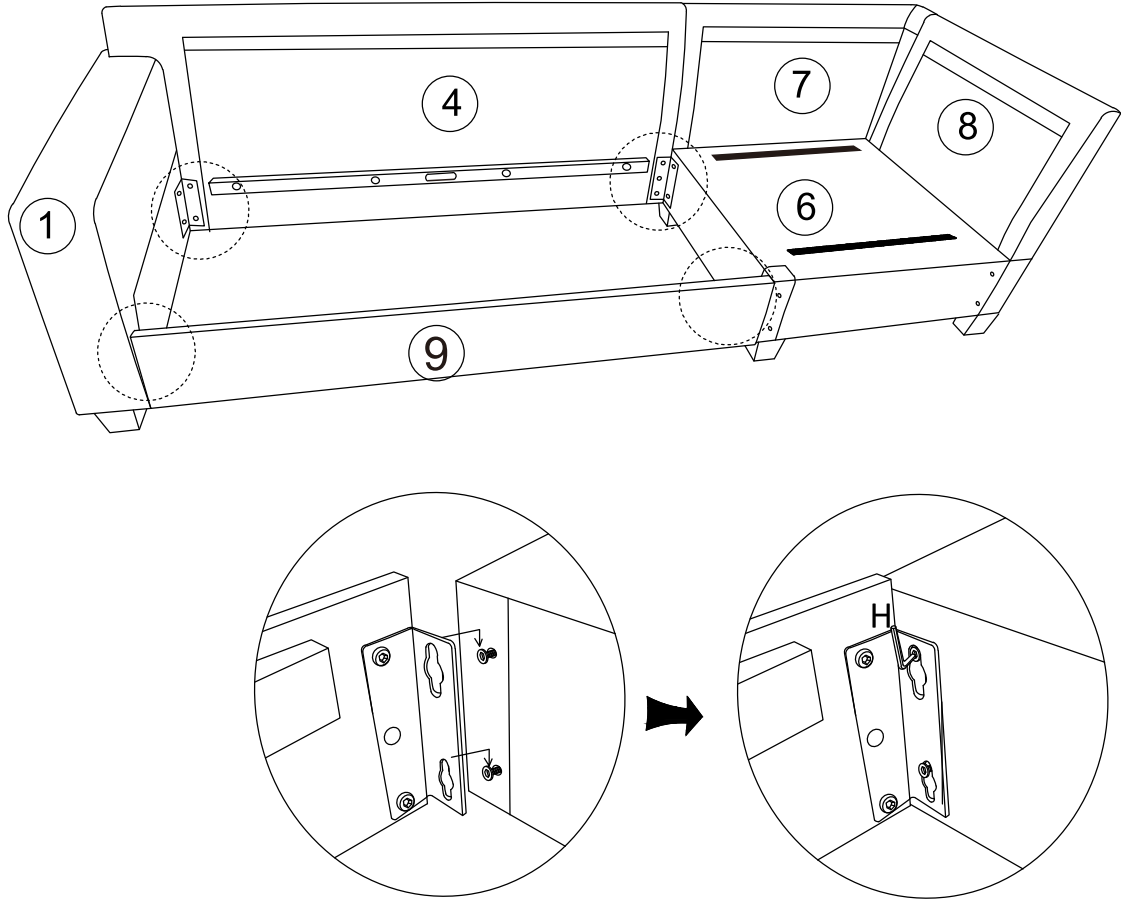

	H X 1
--	-------



Assemble the Right arm 1S.

STEP 10:

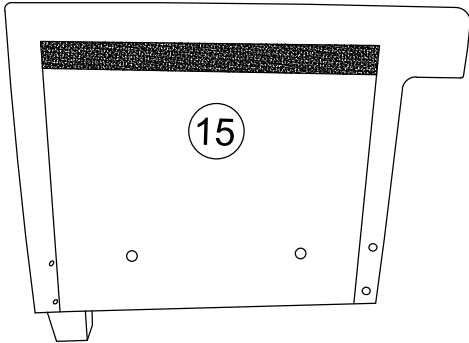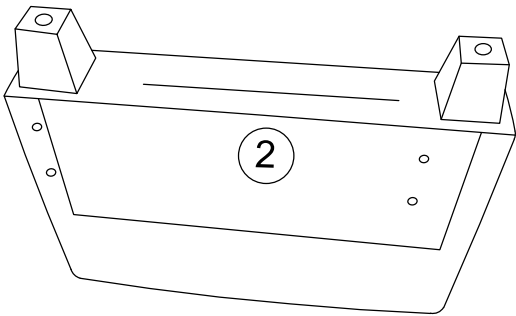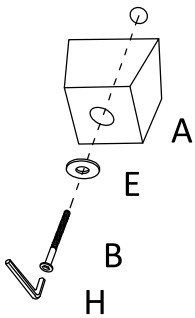




	A X 3
	B X 3
	E X 3
	H X 1

STEP 11:

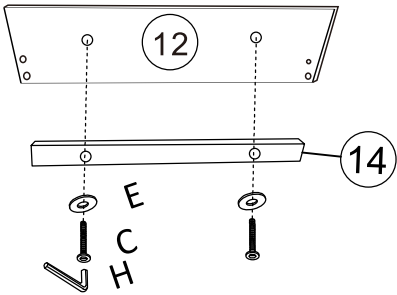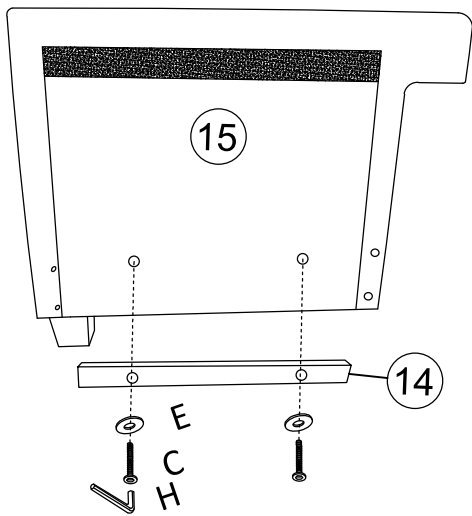





	CX4
	EX4
	HX1

STEP 12: Tighten half.

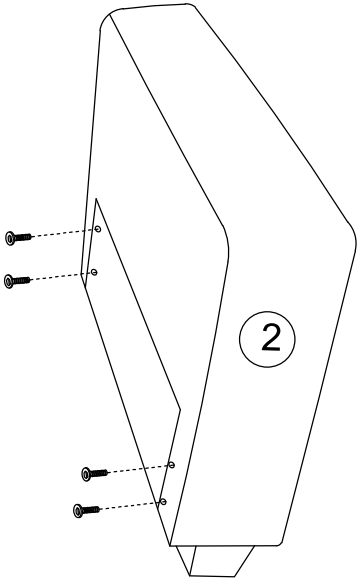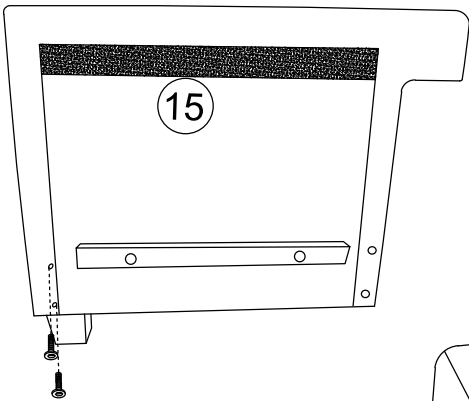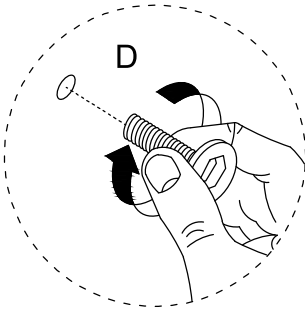



	DX6
--	-----

STEP 13:

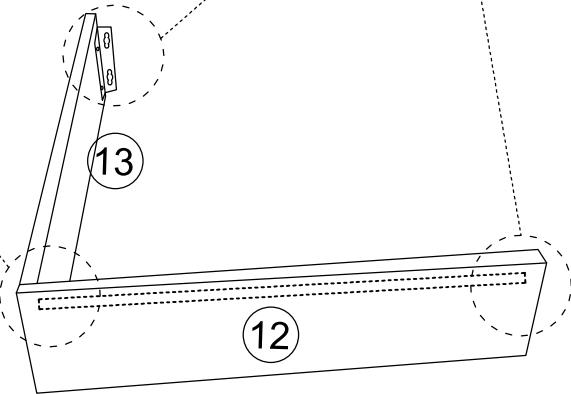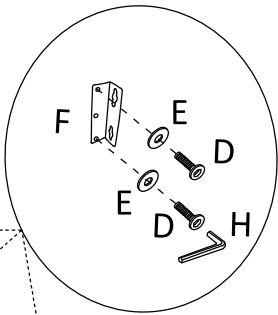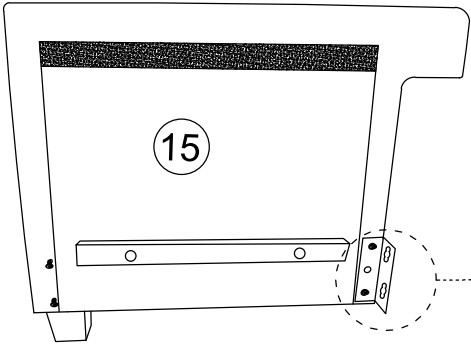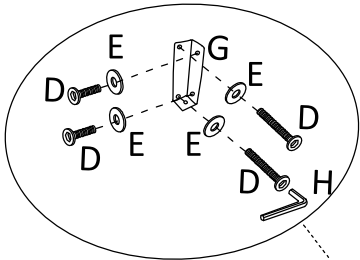


	E X 10
	G X 1
	F X 3
	D X 10
	H X 1

STEP 14:

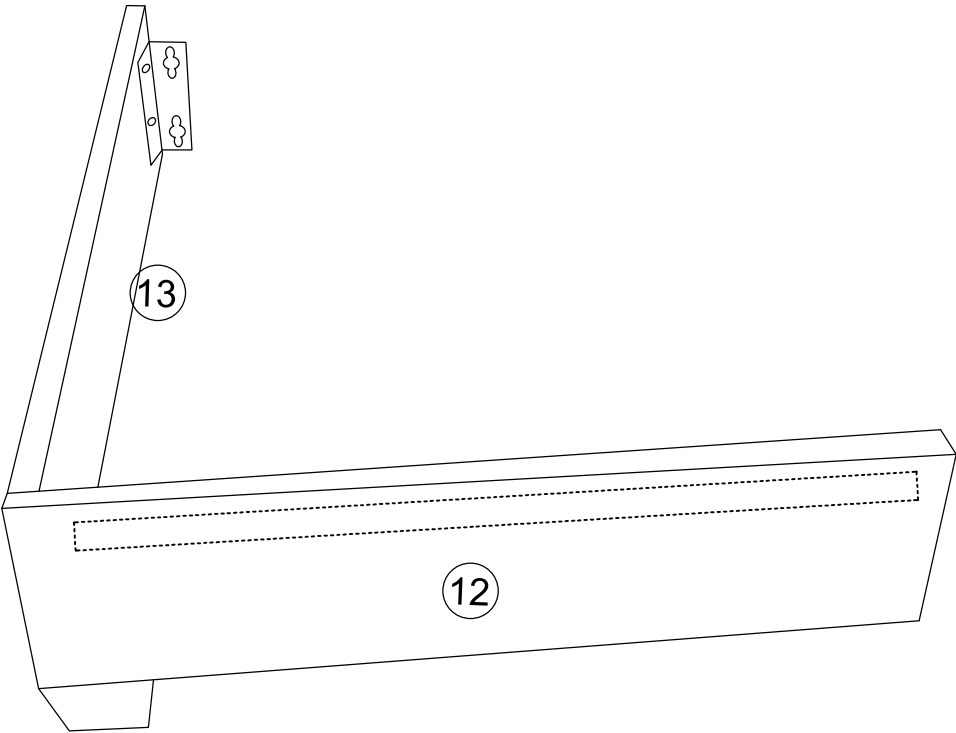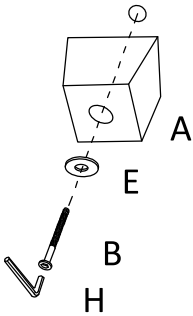

	A X 1
	B X 1
	E X 1
	H X 1


STEP 15:

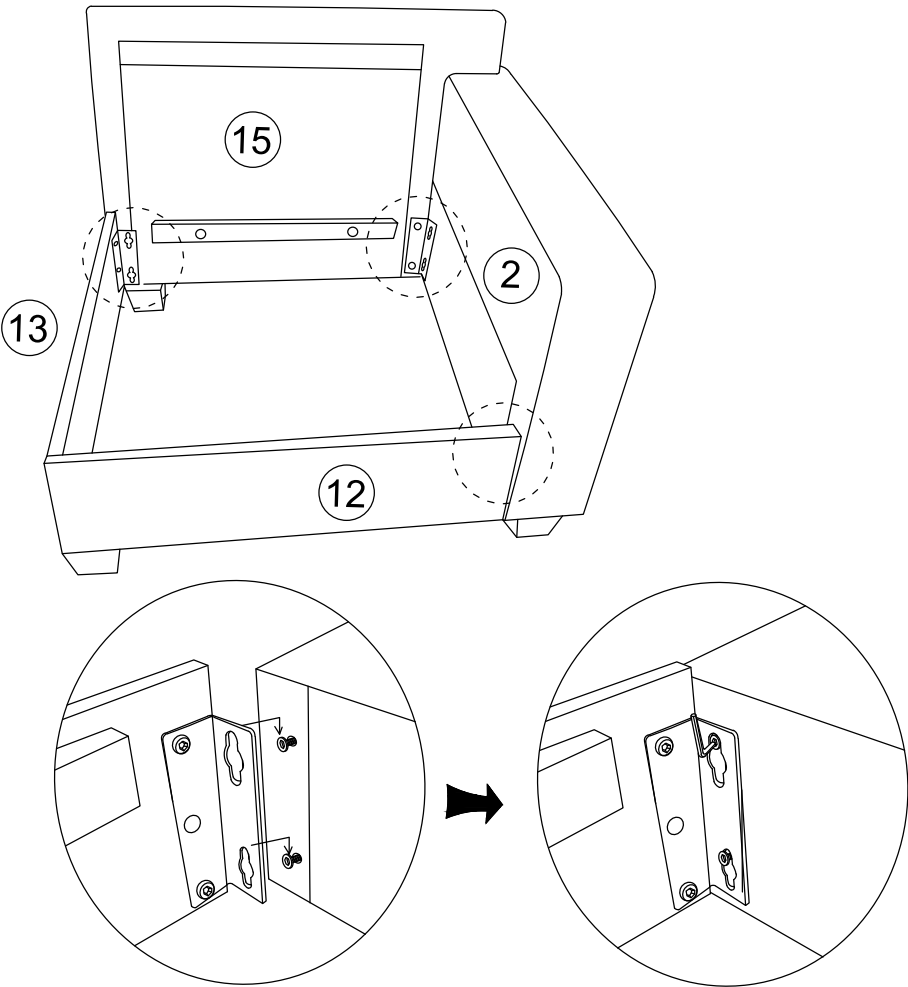

H X 1


Assemble the Armless 2S.

STEP 16:Tighten half.

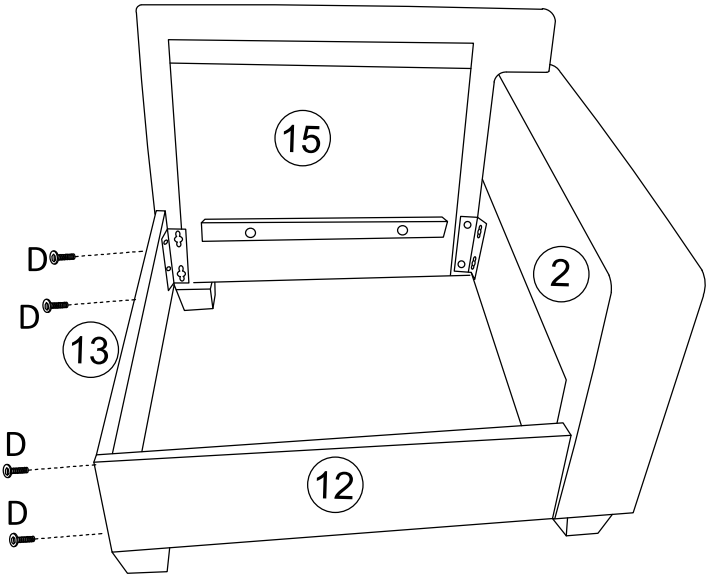



D X 4

STEP 17:

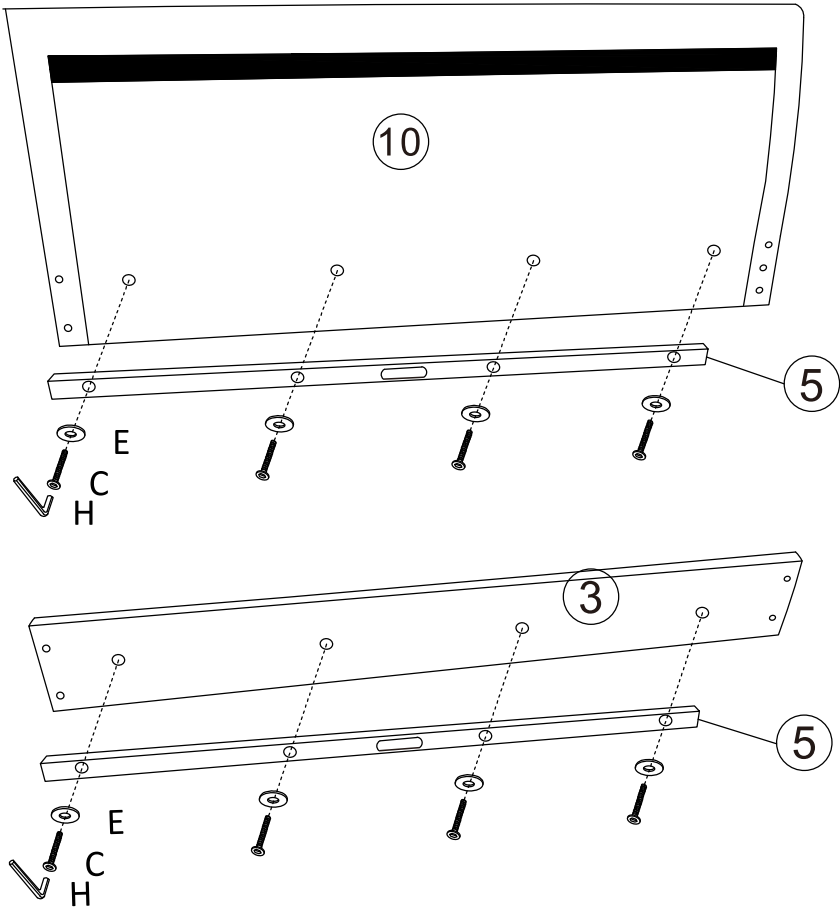


	CX8
	EX8
	HX1

STEP 18:

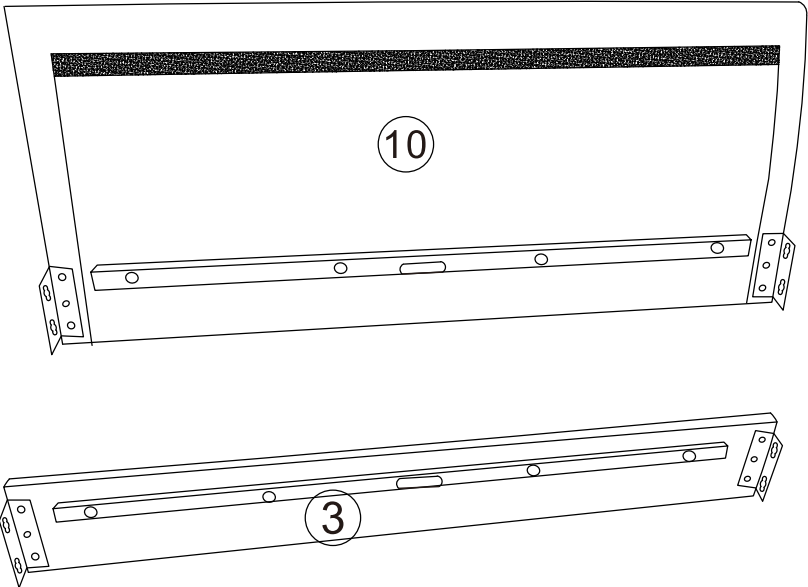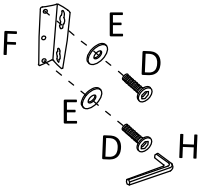


	EX8
	FX4
	DX8
	HX1

STEP 19:

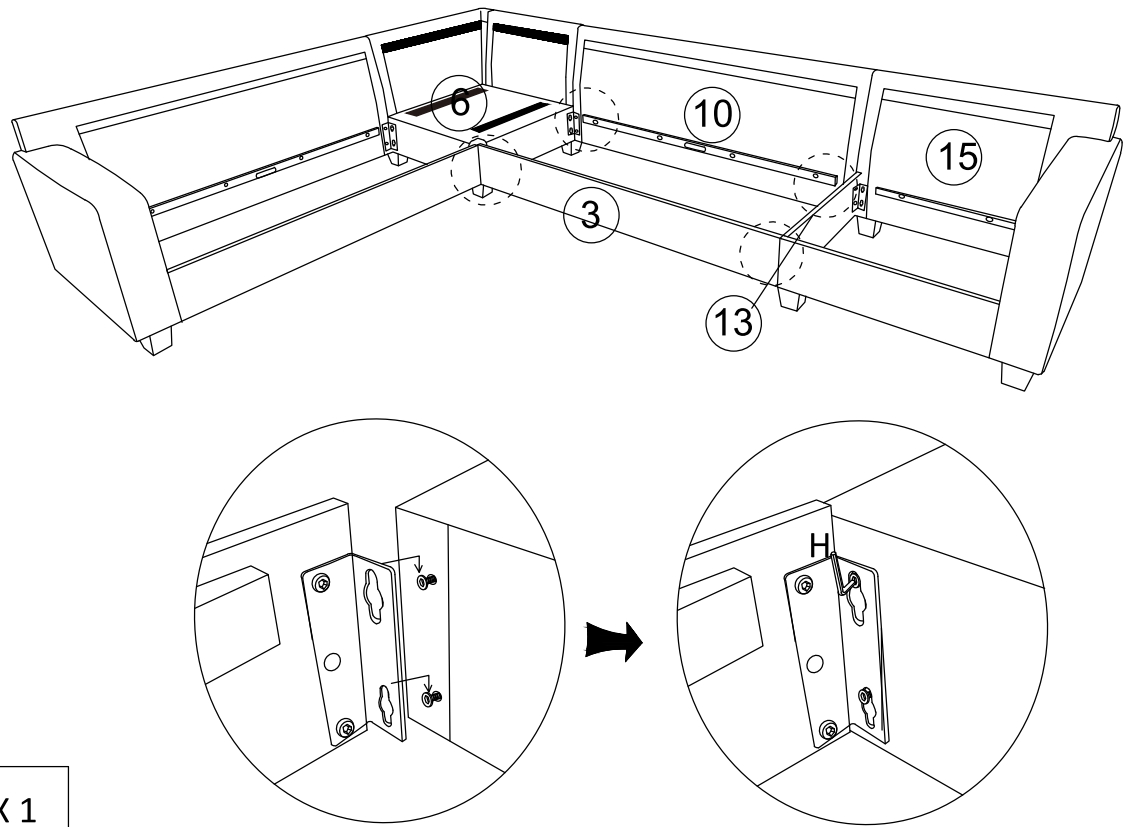


H X 1

STEP 20:

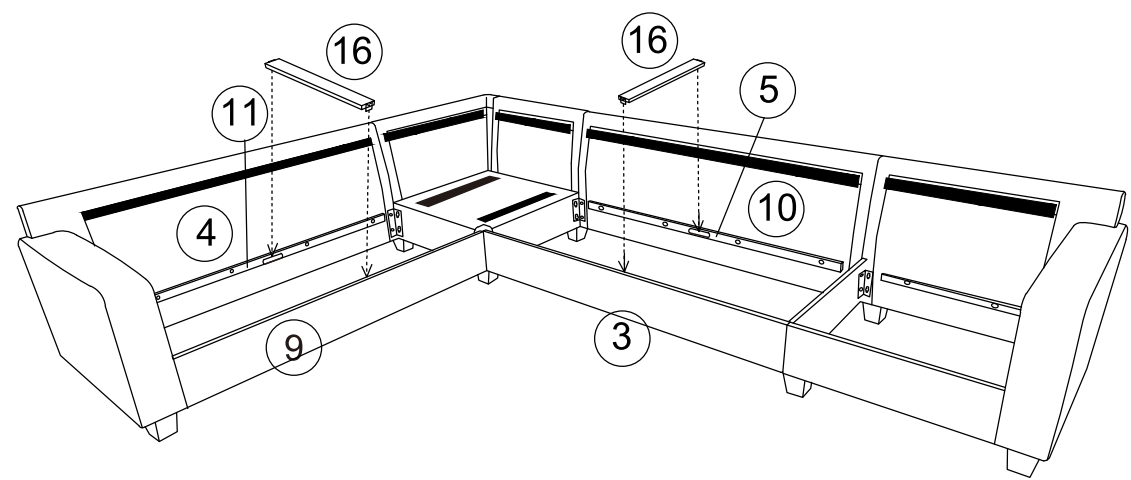

TIPS:

- 1, Please do not open the compress packaging until your sofa frame is completely assembled.
- 2, Compress cushions or pillows need to fully fluffed within 72 hours for your perfect use.
- 3, Please keep children away from plastic bag or any small pieces of stuff.
- 4, After assembly is completed, don't forget to pat the back cushions and seat cushions, make them recovering better. And wait 72 hours for fully rebound.

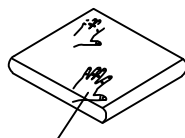


Pat and tidy the cushions

- 5, Cushions should be regularly maintained for perfect use.

STEPS for compressed pack:

(1) open the carton -- (2) take out the compressed pack -- (3) cut from edge and take out the cushion -- (4) Put the cushion on floor -- (5) Pat and tidy the cushion -- (6) Wait to rebound completely after 72 hours.

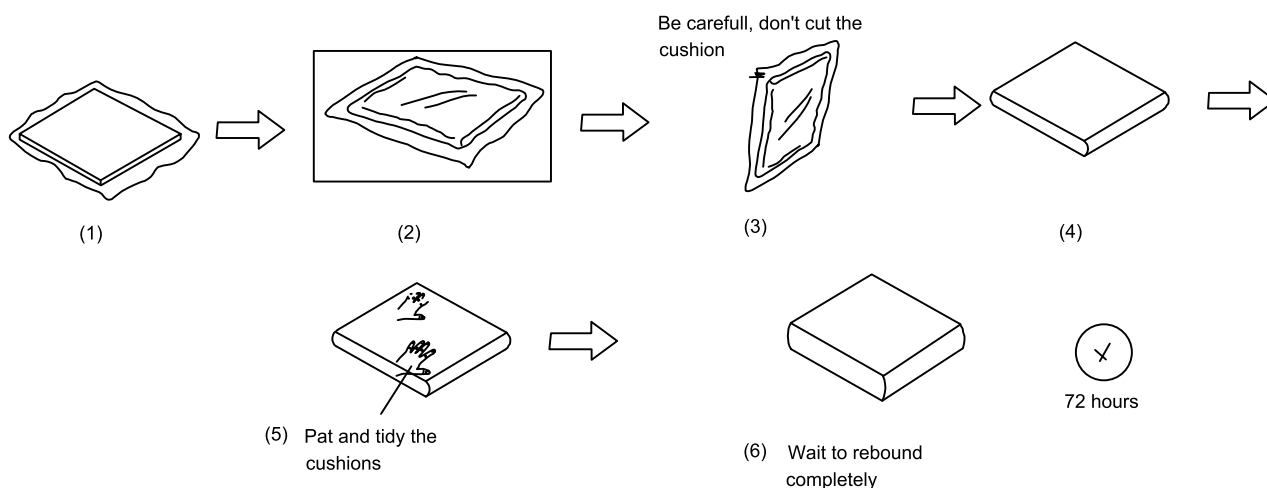


CAUTION


:

PLEASE DO NOT OPEN COMPRESSED PLASTIC CUSHION BACK UNTIL YOUR SOFA FRAME IS COMPLETELY ASSEMBLED, OTHERWISE, IT CAN'T BE REPACKED IN ORIGINAL PACKING WAY TO RETURN.


STEP 21:

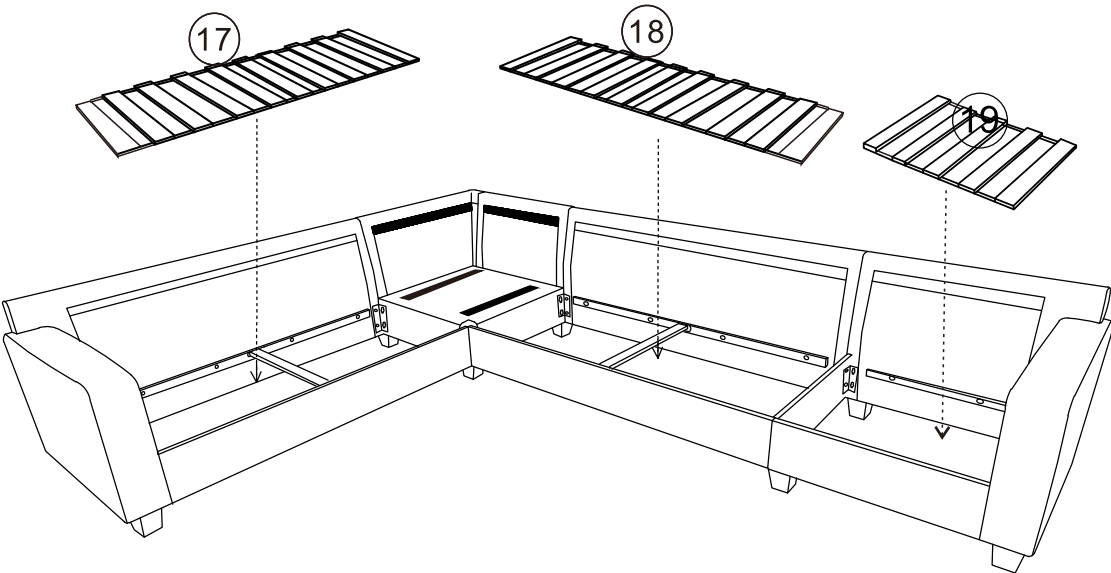

STEP 22:

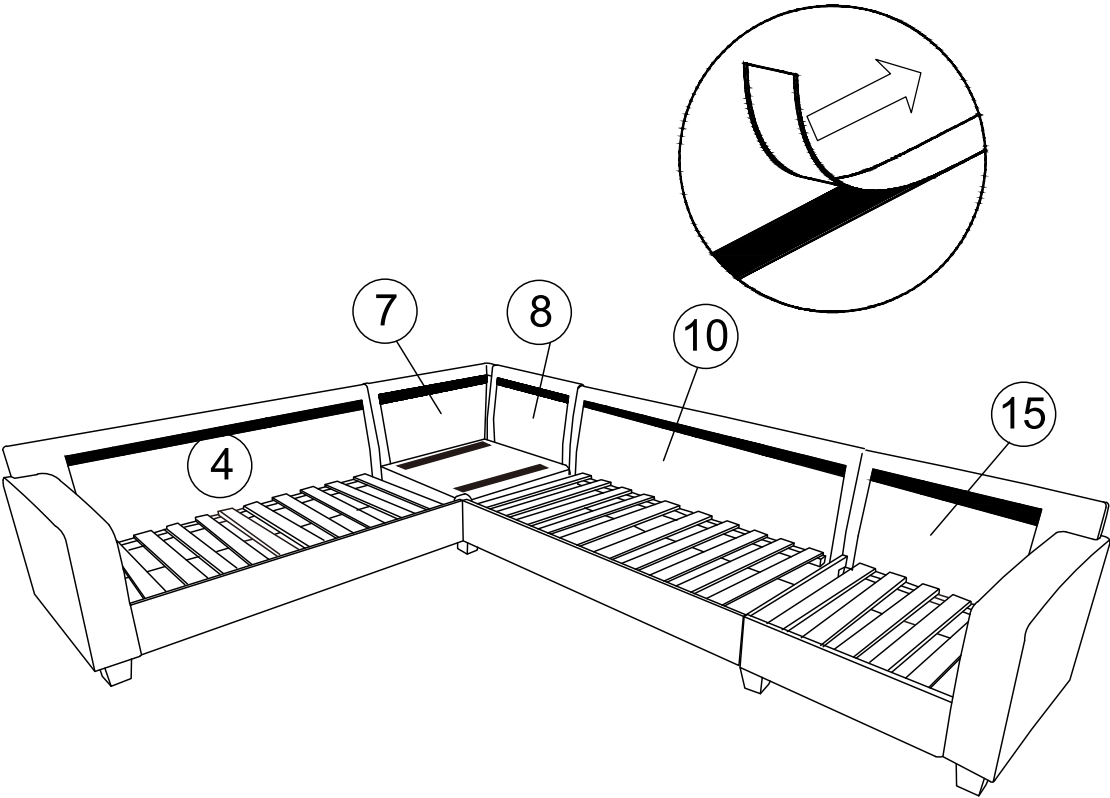


STEP 23:

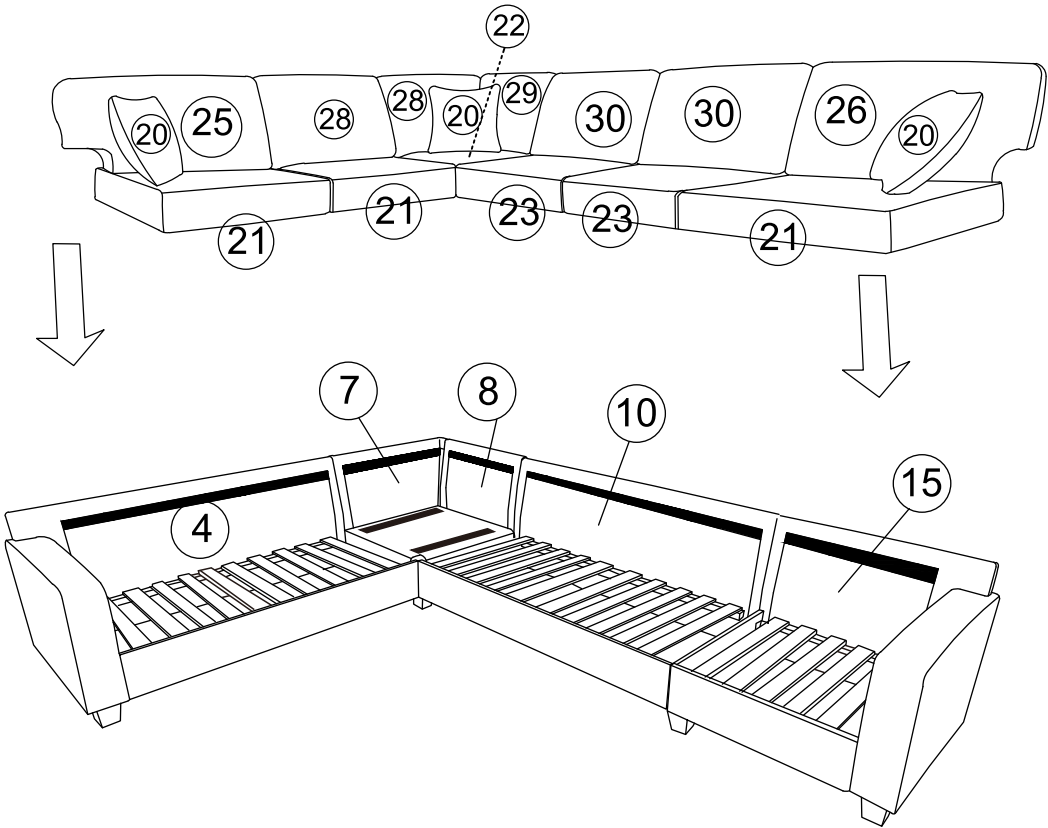


Assemble the Stool.

STEP 24:

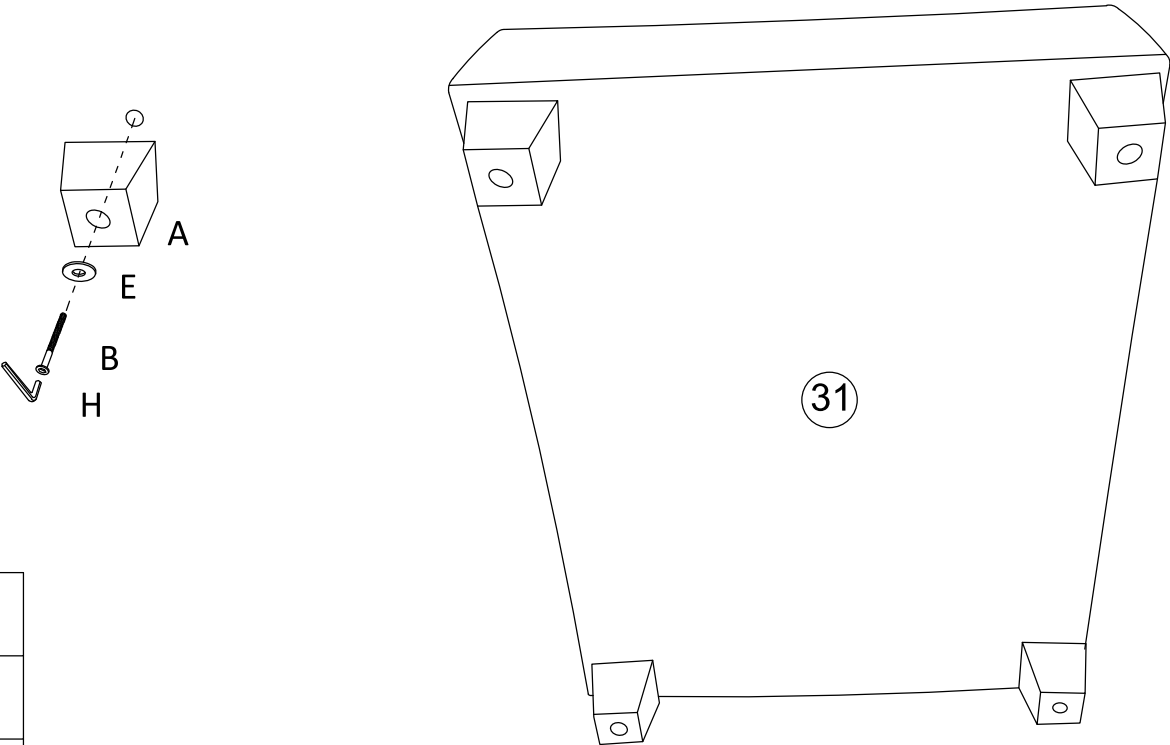

	A X 4
	B X 4
	E X 4
	H X 1

STEP 25:

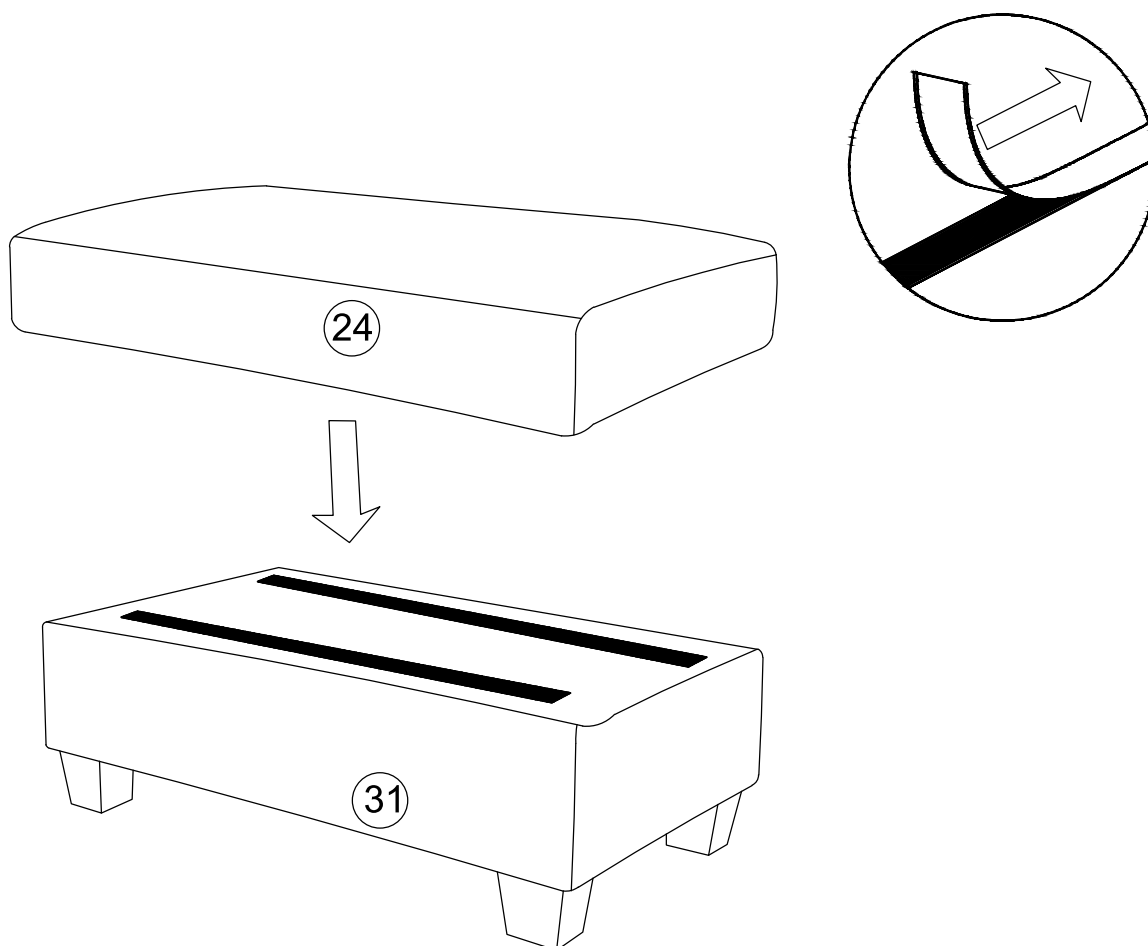

Complete

