

KINGSTON

Freestanding Toilet Roll Holder

Installation Instructions

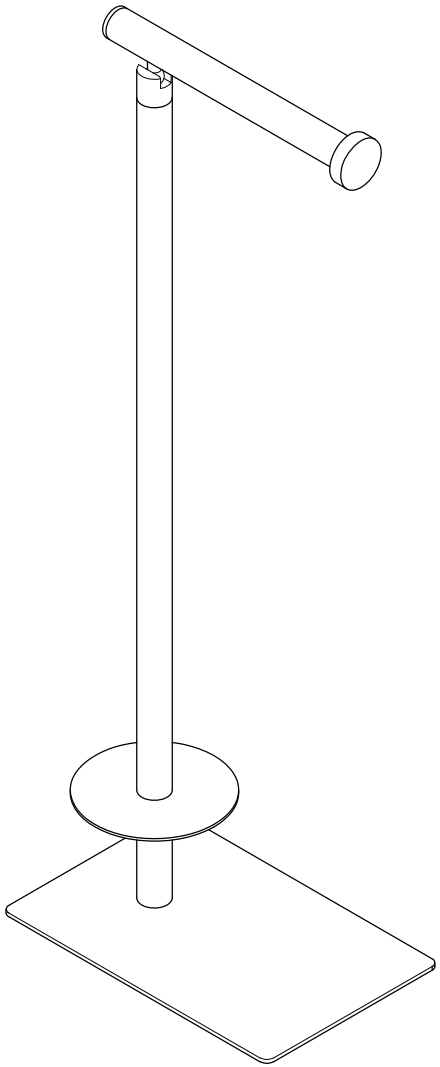

Parts:

Bolt & O-ring

1 Pc

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710


Tools Required



Allen Wrench


Installation Steps :

1

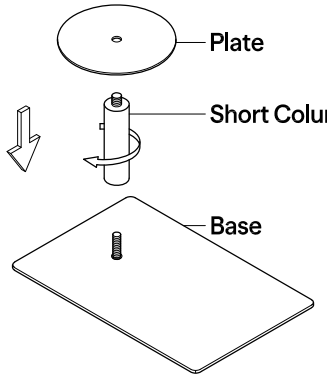


1. Insert screw through bottom base plate and thread to the short column, insert small round plate making sure that finished side is facing up.

2

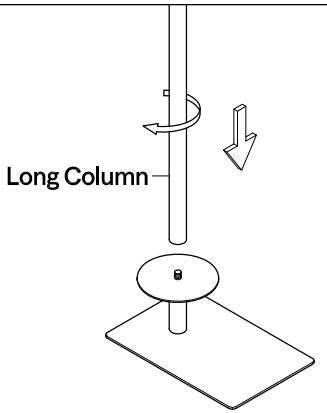

2. Thread long column into short column screw as it protrudes from round base plate.

3

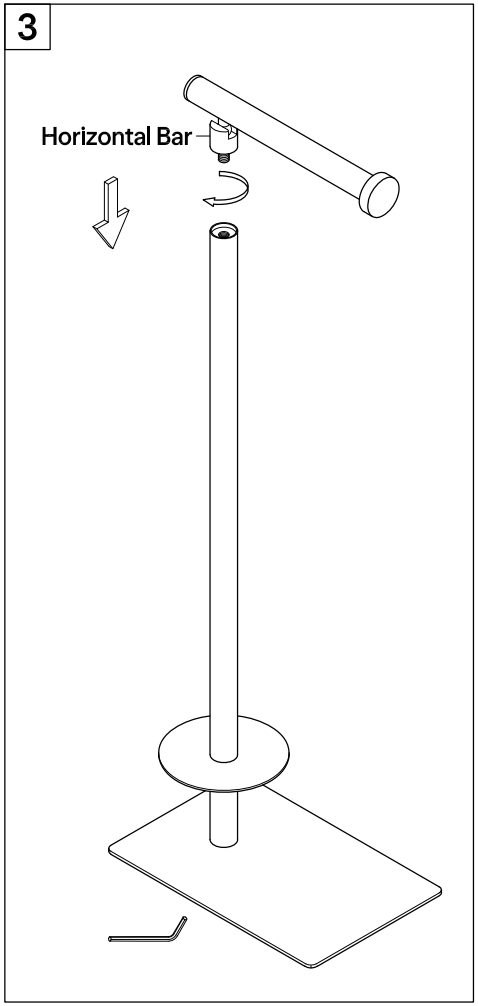

3. Thread top horizontal bar, adjust the orientation of the horizontal bar and re-tighten bottom screw using Allen wrench.

Cleaning

Clean with a damp cloth only.
Avoid using metal or abrasive polishes.

©2025 LVC Kingston LLC. All Rights Reserved.

2025-05-KB