


ASSEMBLY INSTRUCTIONS


TWIN LOW LOFT

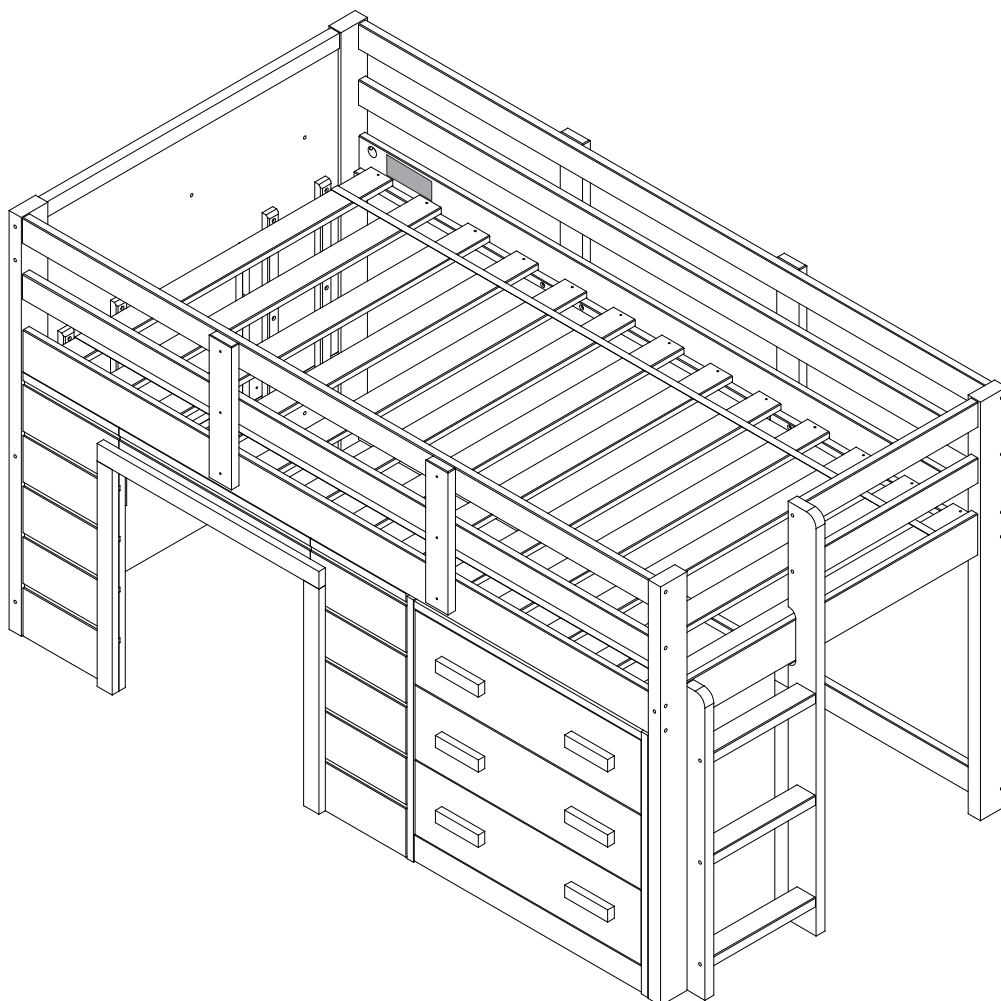



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

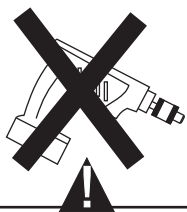


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

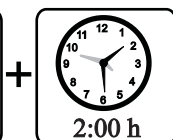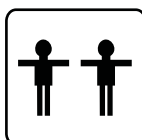

Tools Required



(Not included)



(Not included)

IMPORTANT:


PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Part List - TWIN LOW LOFT



RUSTIC
OUTSIDE




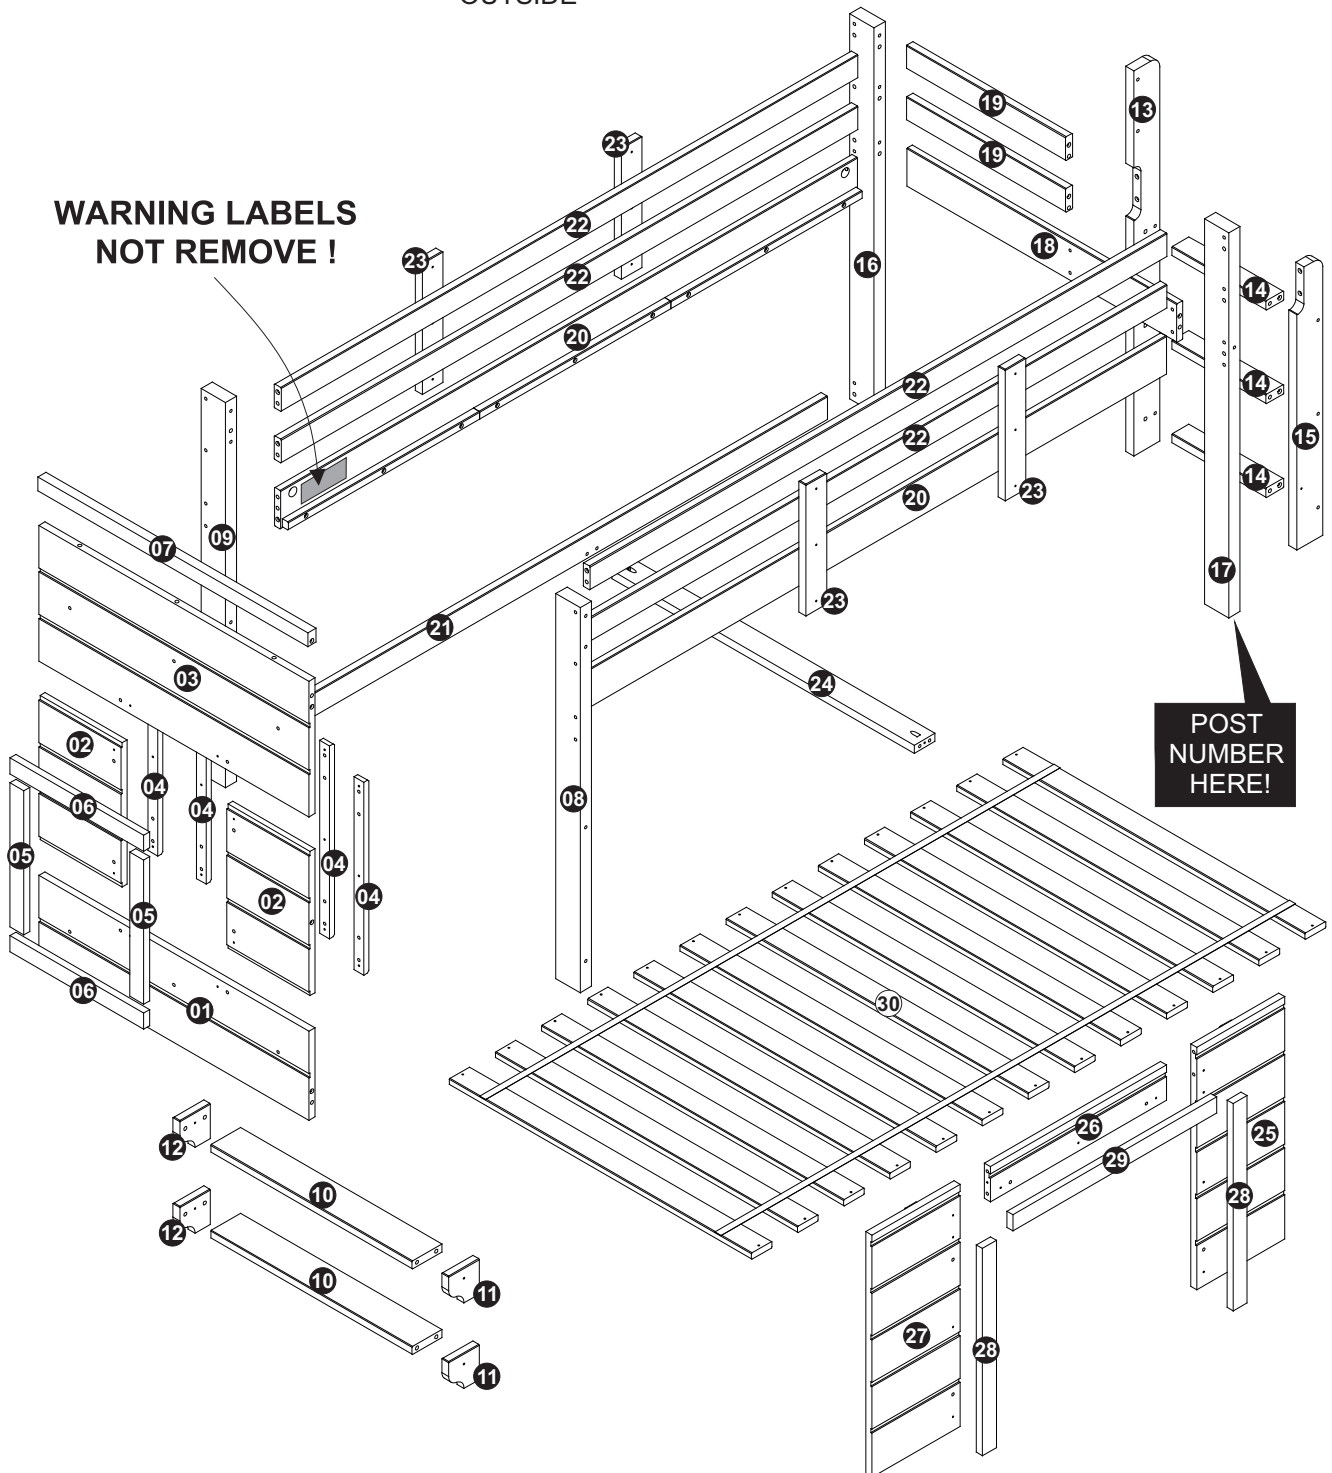









WARNING LABELS
NOT REMOVE !





Caution



Please be careful when assembling this product due the parts are extremely heavy. Also, please do not allow kids around when assembling this bed to avoid injuries.

Identifying the Hardware-Identify the hardware using the illustrations below.


A	 Ø 10x40	41
B	 Ø 8x25	38
C	 Ø 3,5X16	14
D	 Ø 4X30	31
E	 Ø 1/4X80 Cab 17	04
F	 Ø 7X110 Cab 17	12
G		04
H		02
I	 Ø 7X70 Cab 17	14
J	 Ø 4X30	26
K		07
L	 Ø 4X35	21
M	 Ø 7X60 Cab 17	18


01


A		41
B		38

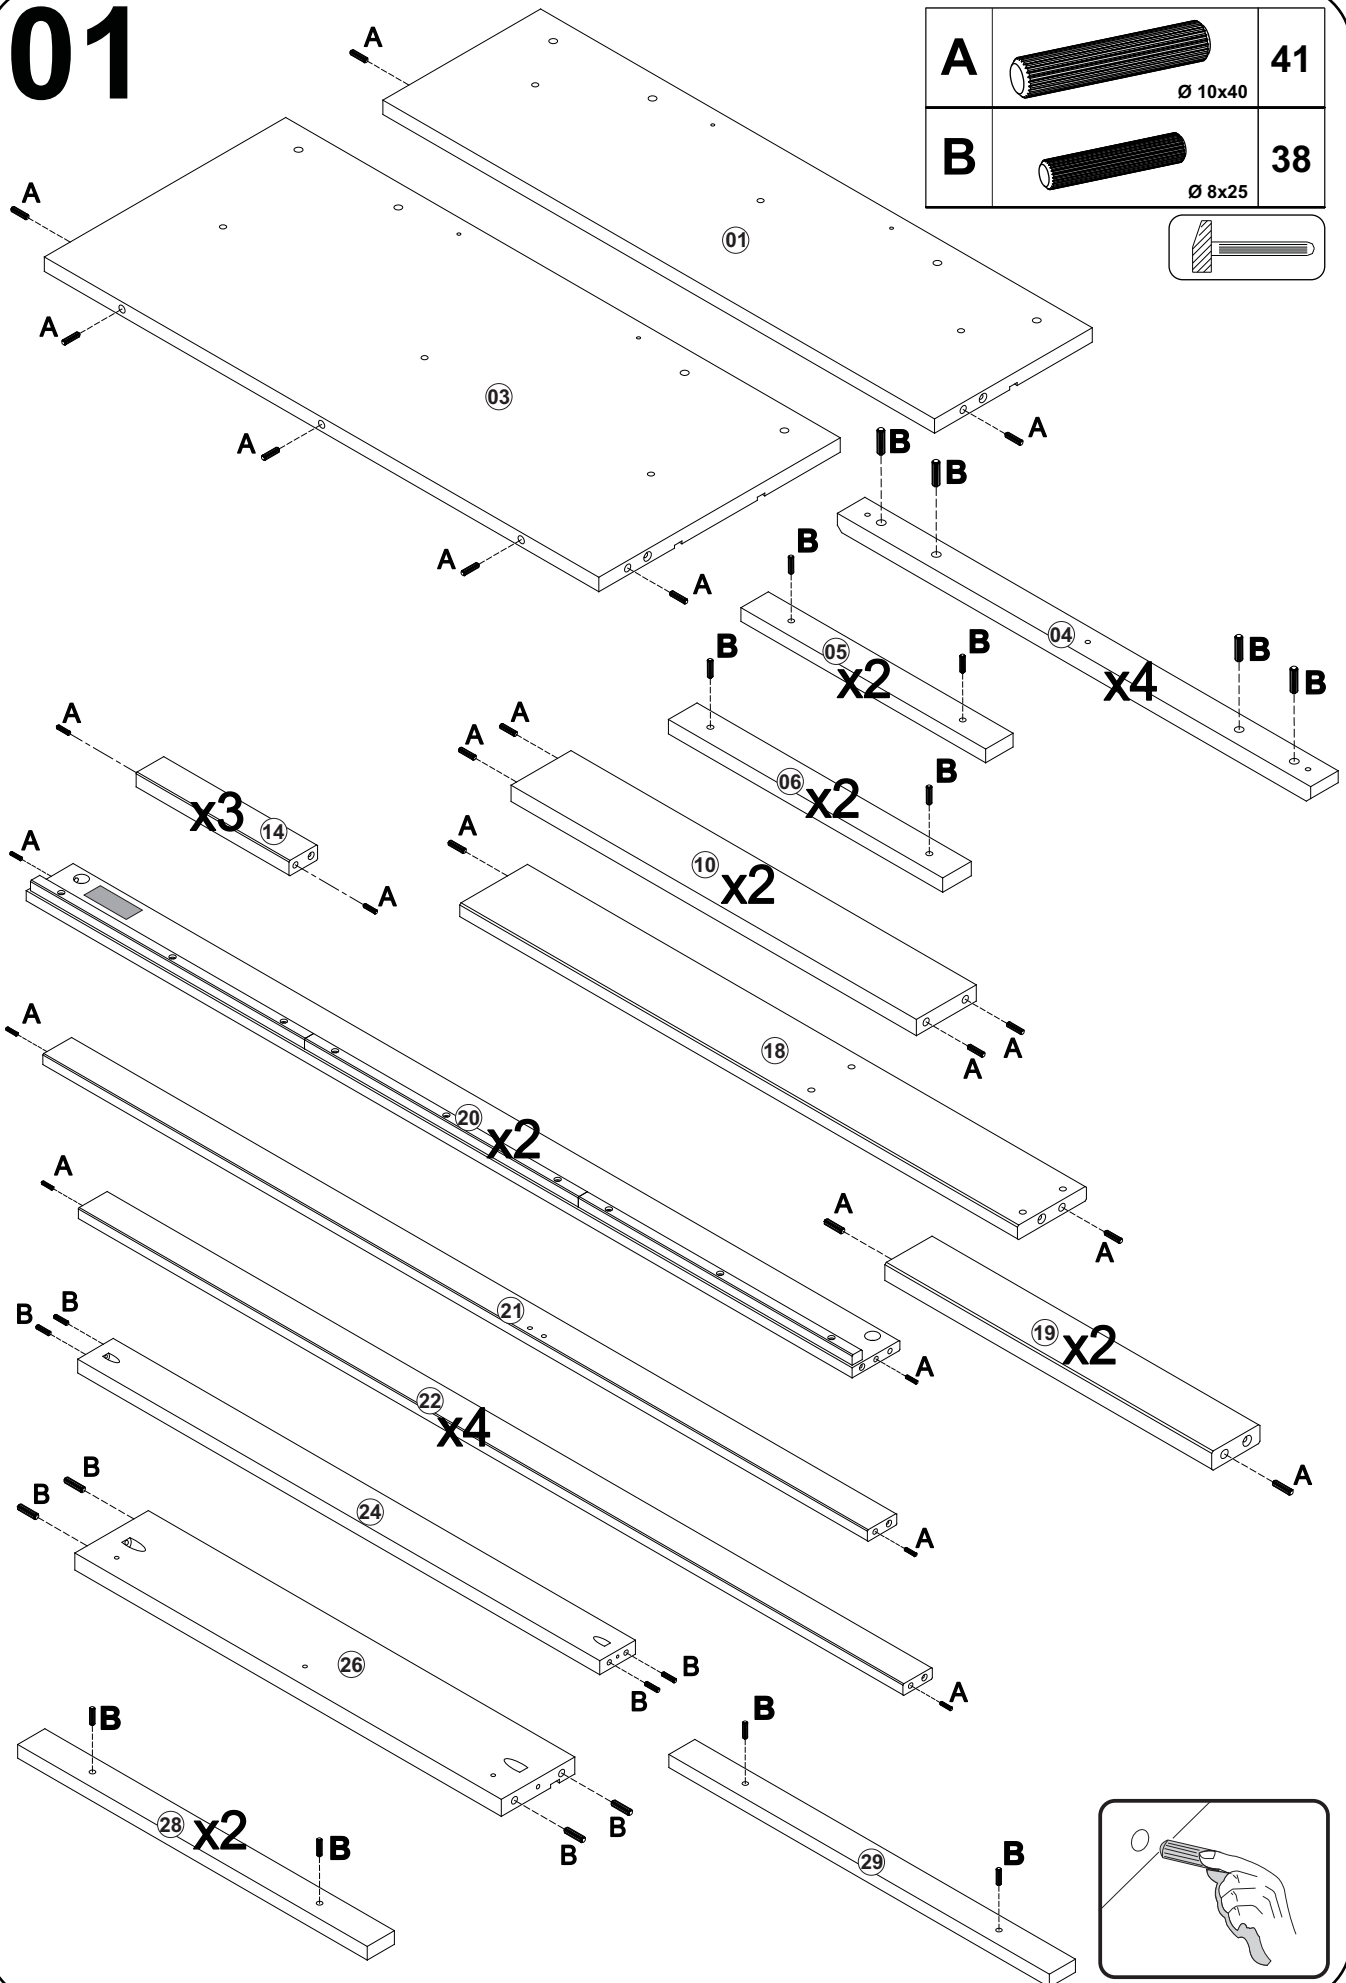

02

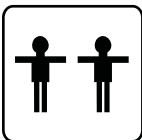


D	 Ø 4X30	12
---	---	----




PLEASE ASSEMBLY THE
HEADBOARDS ON THE FLOOR




SCREW

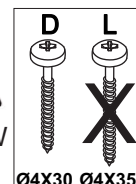


RUSTIC
OUTSIDE

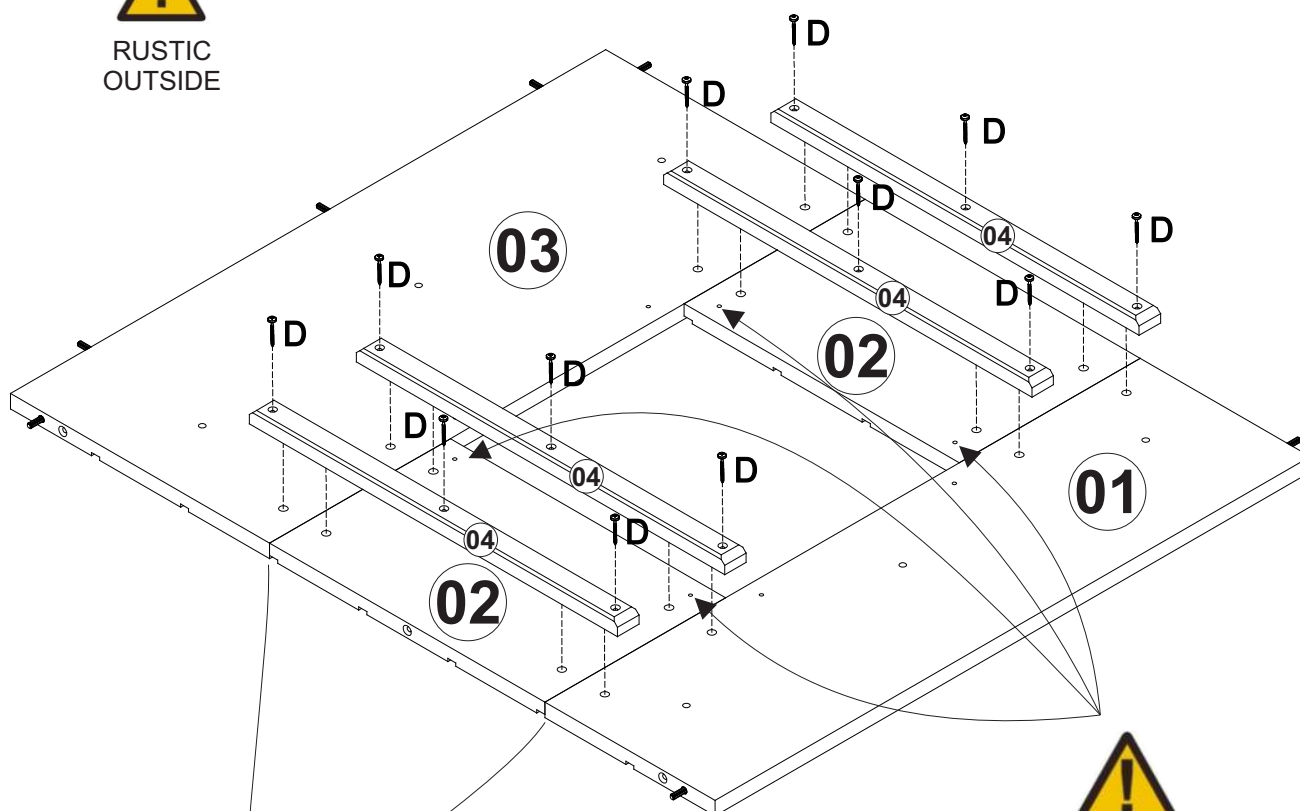


ATTENTION
HOLES

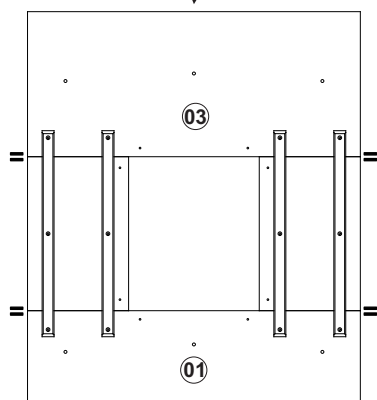

03

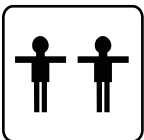


D




Ø 4X30


08




STEP 1

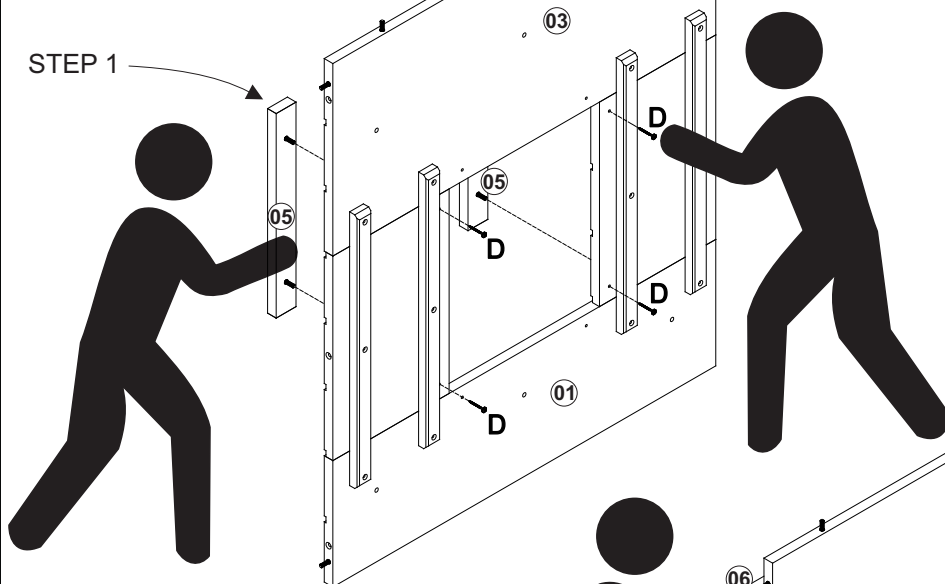

SCREW

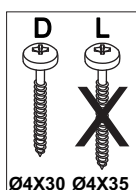


Ø4X30 Ø4X35

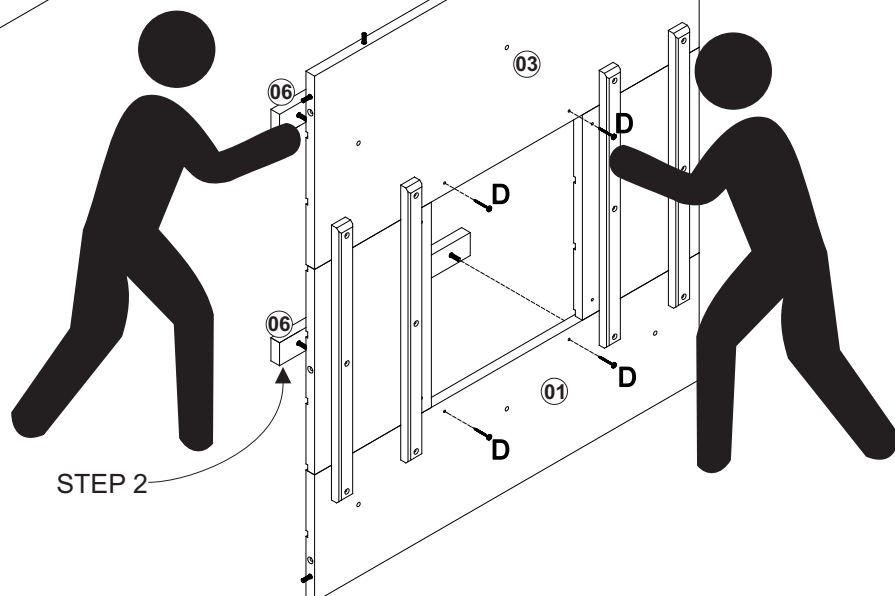


STEP 2

04

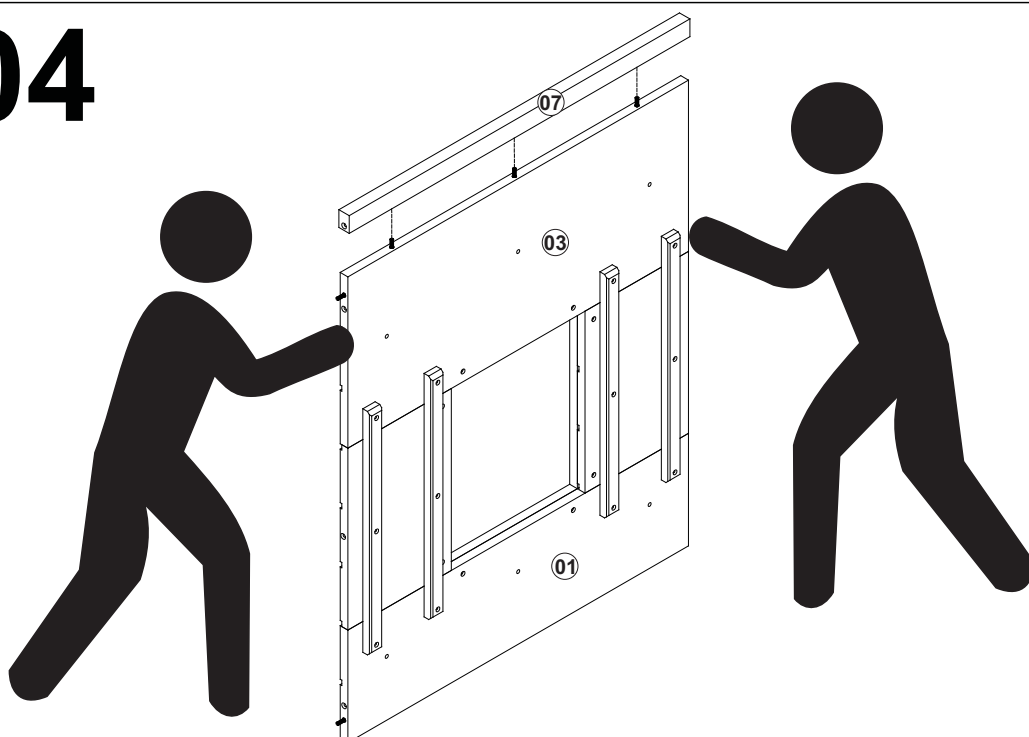


05

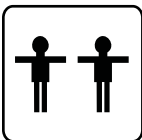



PLEASE ASSEMBLY THE
HEADBOARDS ON THE FLOOR

F		08
H		01

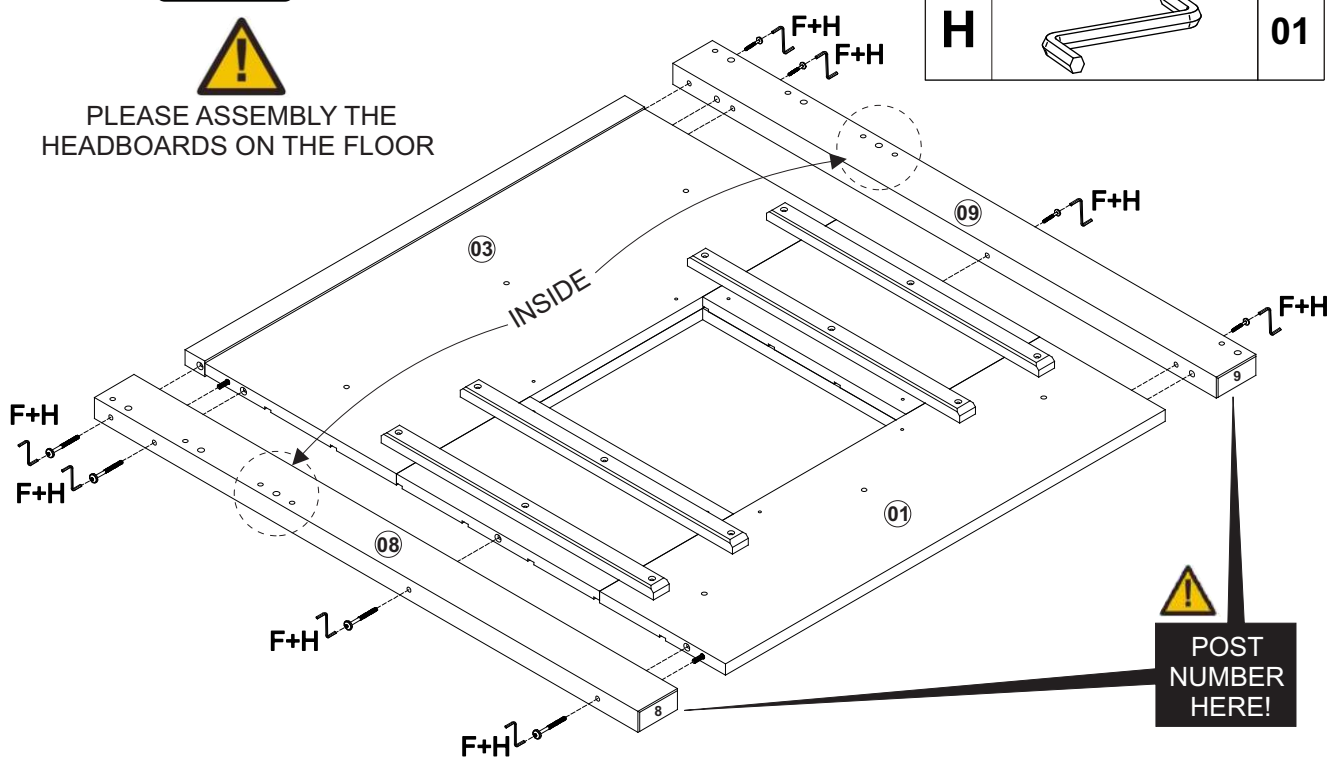


06 SHELVES



L		04
---	--	----

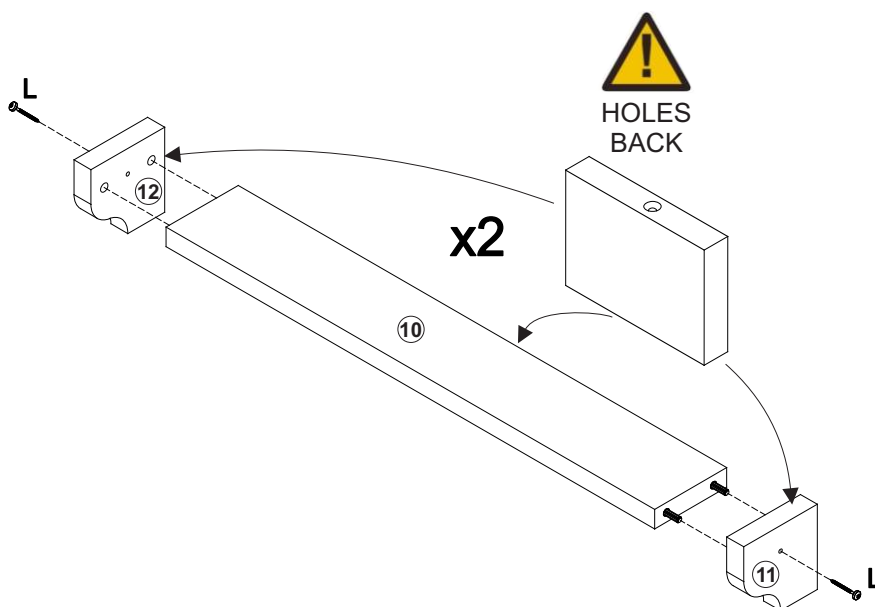

SCREW

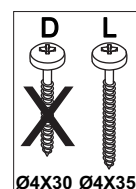


07

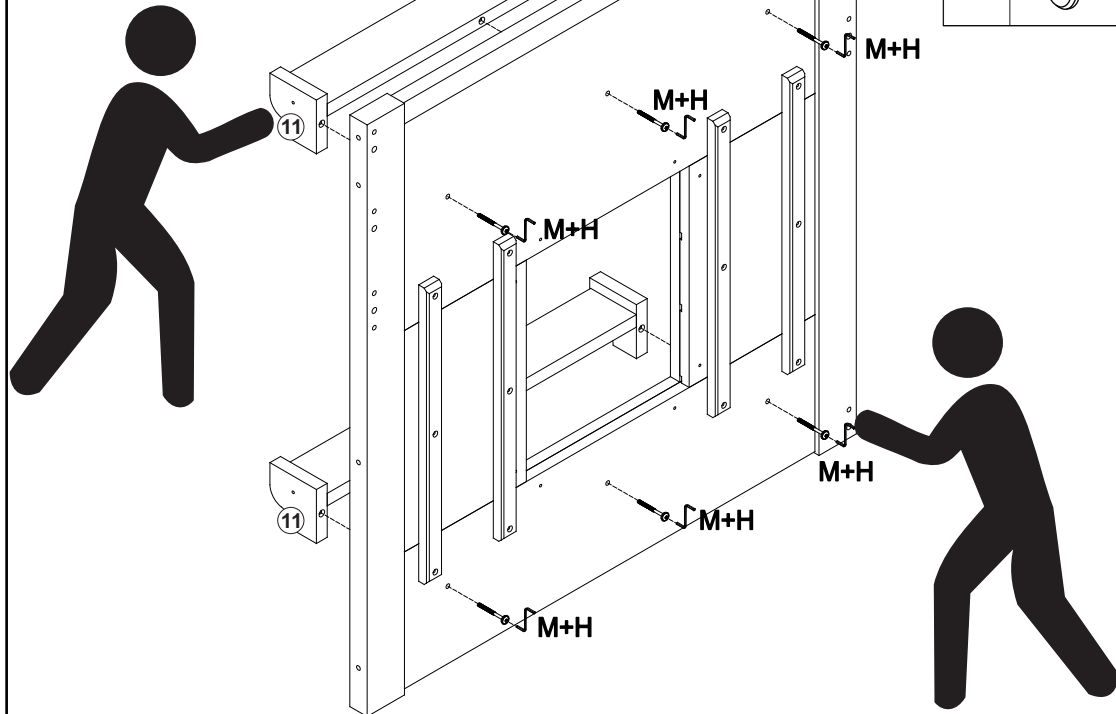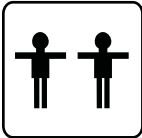


H		01
M	 Ø 7X60 Cab 17	06

08 LADDER

H		01
M	 Ø 7X60 Cab 17	06

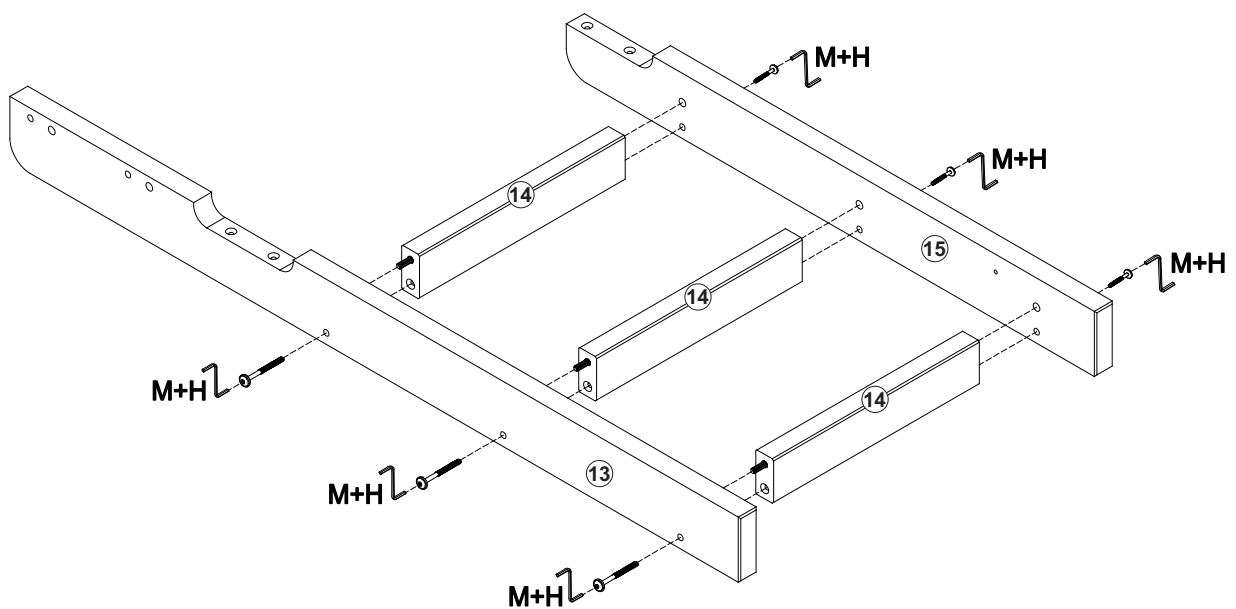

09

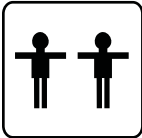


PLEASE ASSEMBLY THE HEADBOARDS ON THE FLOOR



RUSTIC OUTSIDE



F		04
H		01

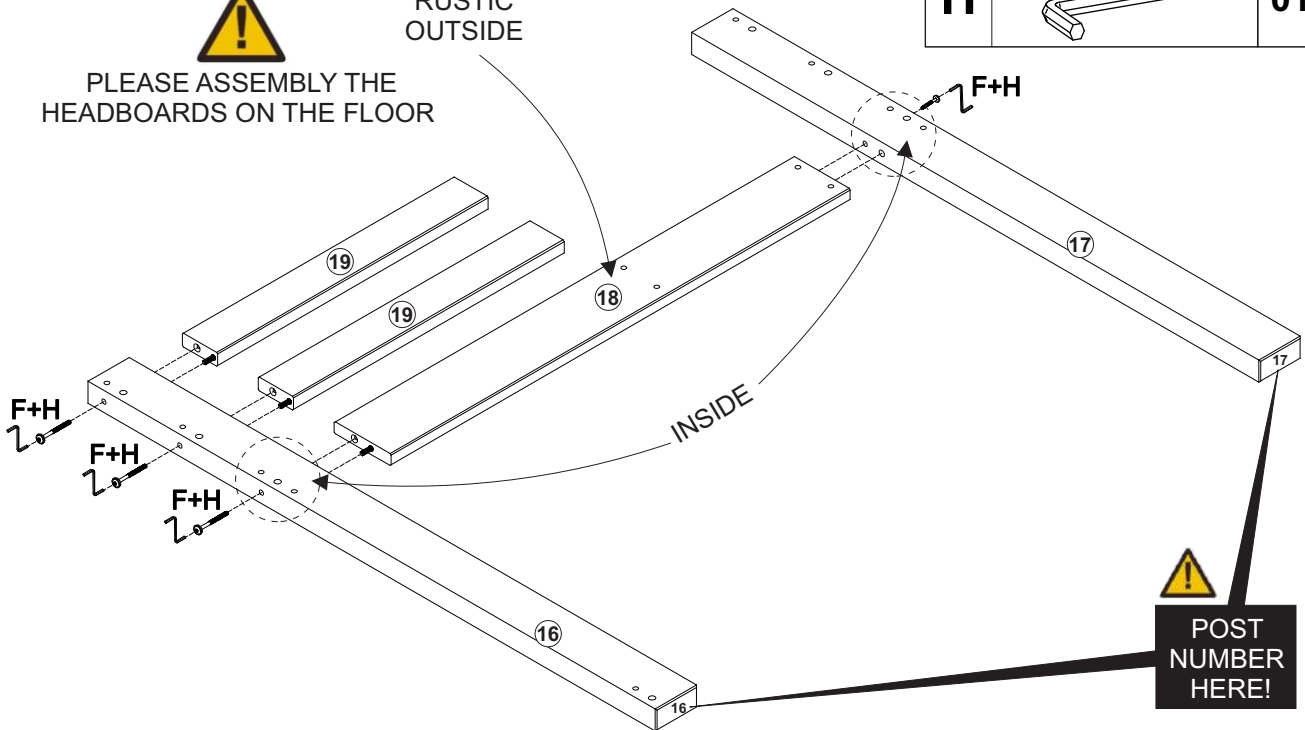


10





H		01
L		01
M		06

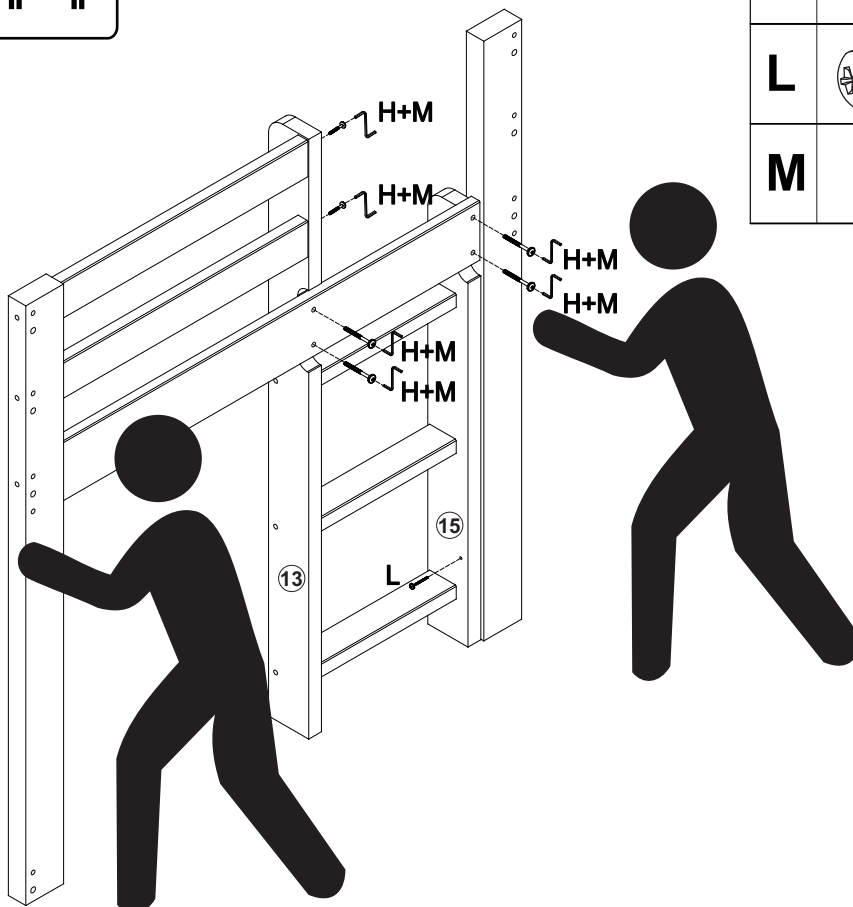

SCREW

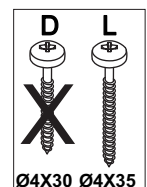


11

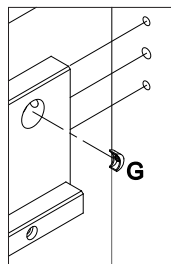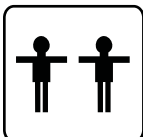

E	 Ø 1/4X80 Cab 17	04
G		04
H		01
I	 Ø 7X70 Cab 17	04

E+H
I+H

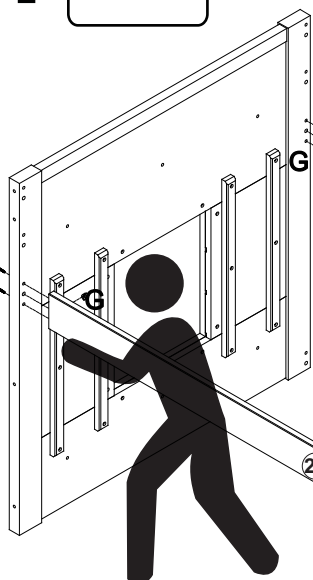

G

20

20

G

E+H
I+H






E+H
I+H




INSERT AND ATTACH BOLTS E+G & I,
BUT DO NOT TIGHTEN UNTIL STEP #14

12

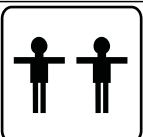

H		01
I	 Ø 7X70 Cab 17	02

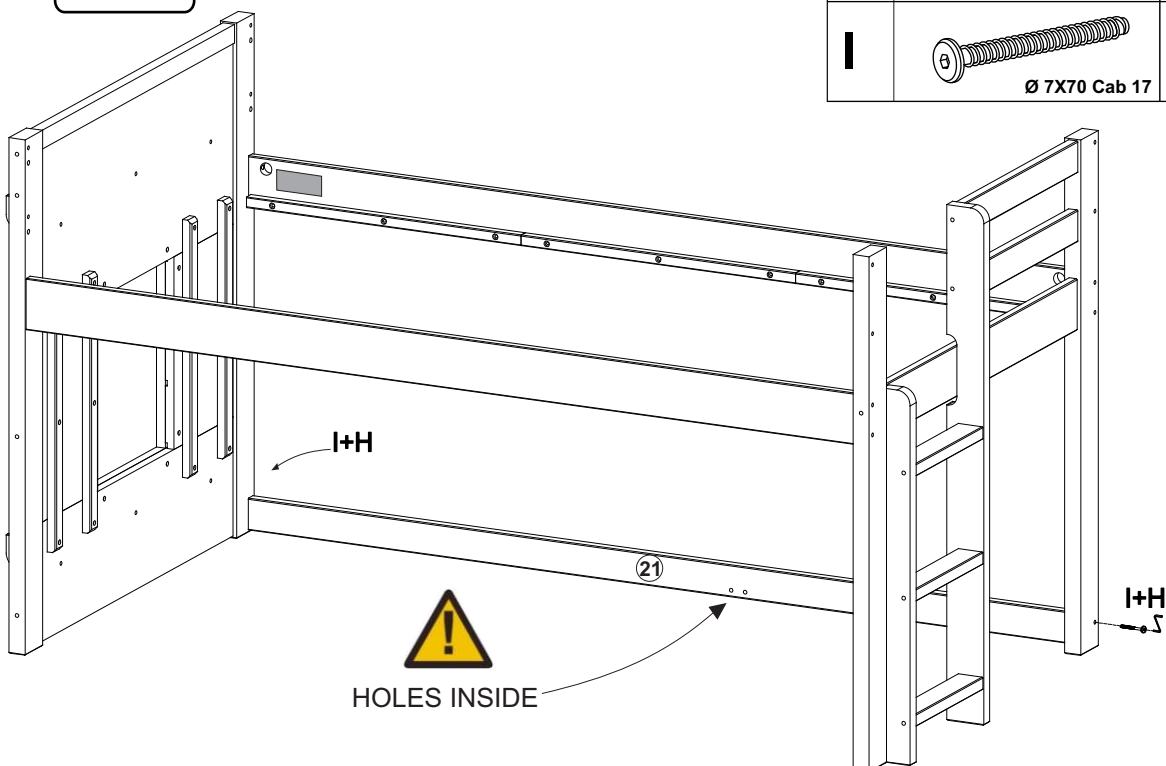

I+H


21






HOLES INSIDE

I+H

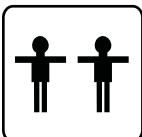13





H		01
I	 Ø 7X70 Cab 17	08

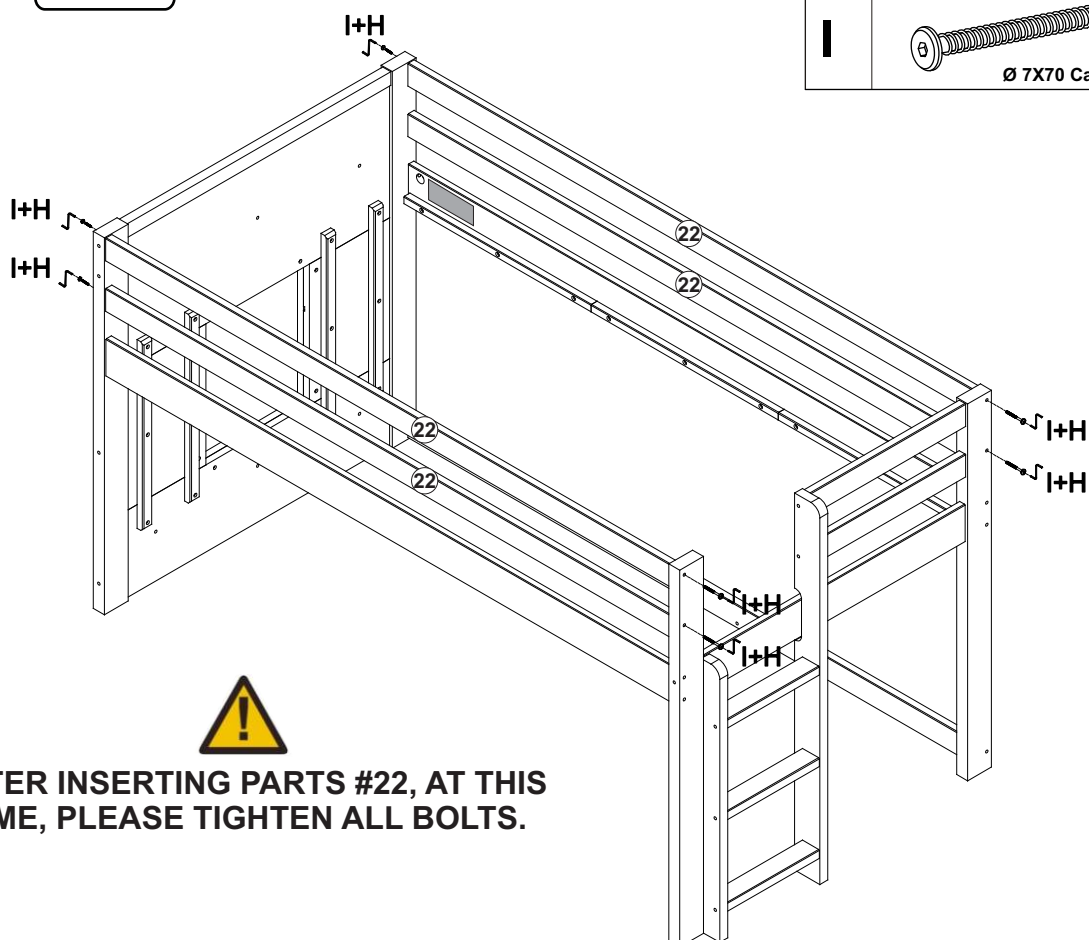


AFTER INSERTING PARTS #22, AT THIS TIME, PLEASE TIGHTEN ALL BOLTS.



14

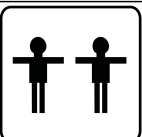


L	 Ø 4X35	13
---	---	----





SCREW

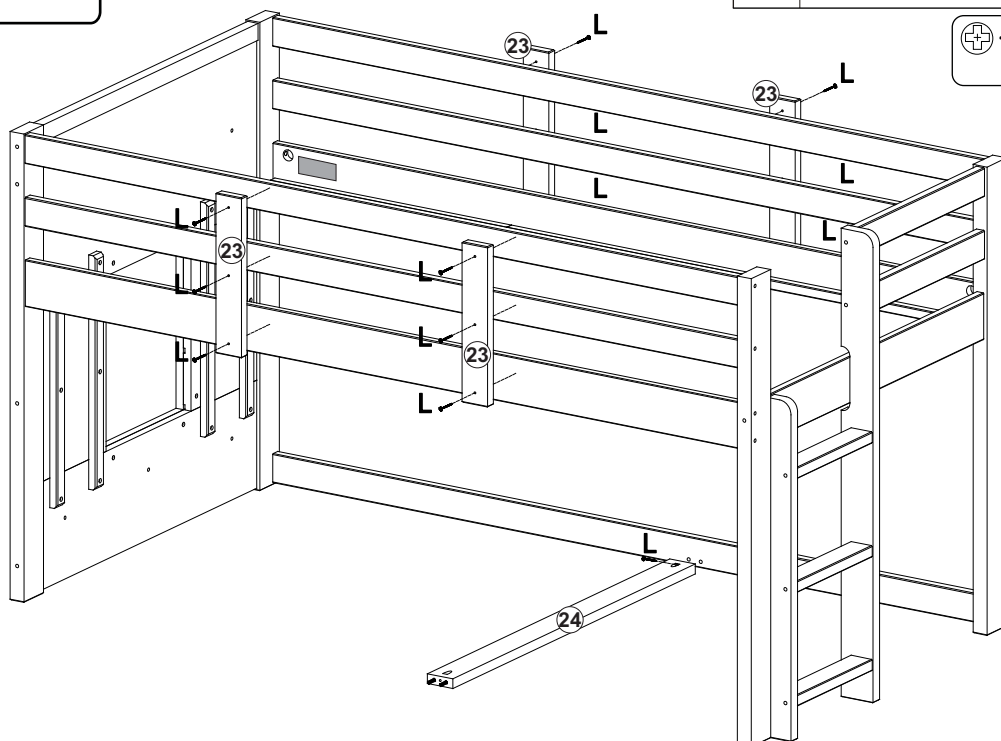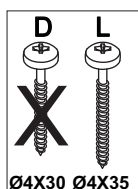



15

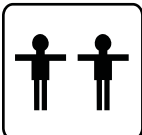

PLEASE ASSEMBLY THE
HEADBOARDS ON THE FLOOR





SCREW

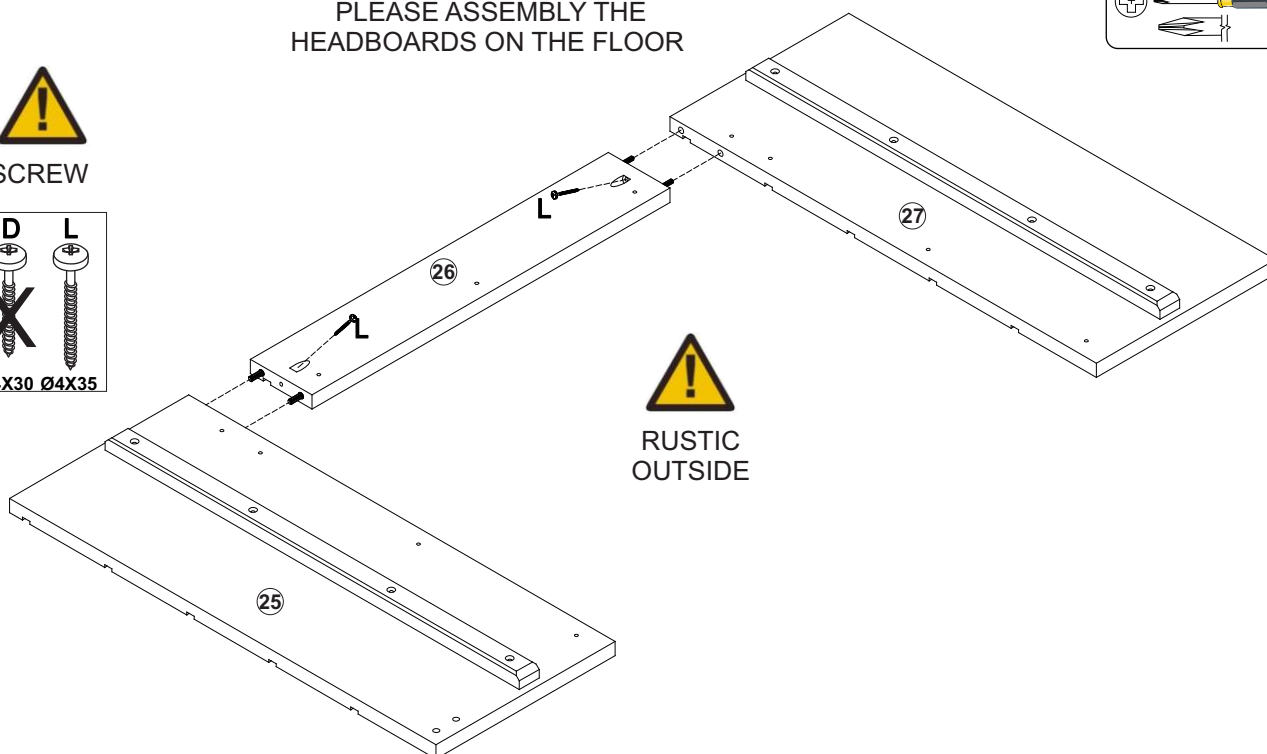
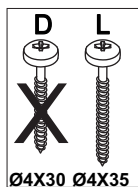


RUSTIC
OUTSIDE


16





SCREW

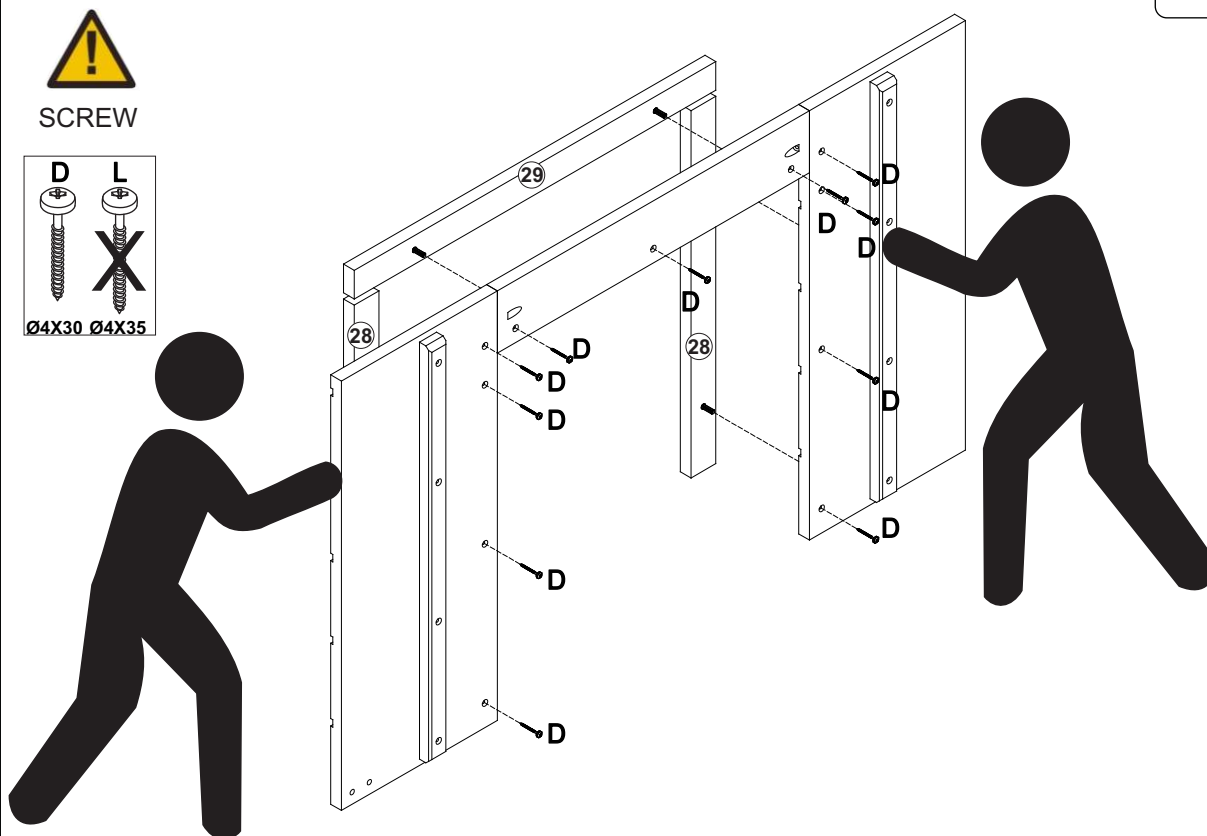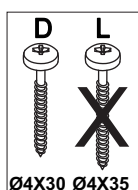



17

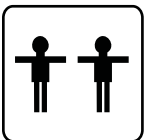

L		01
Ø 4X35		



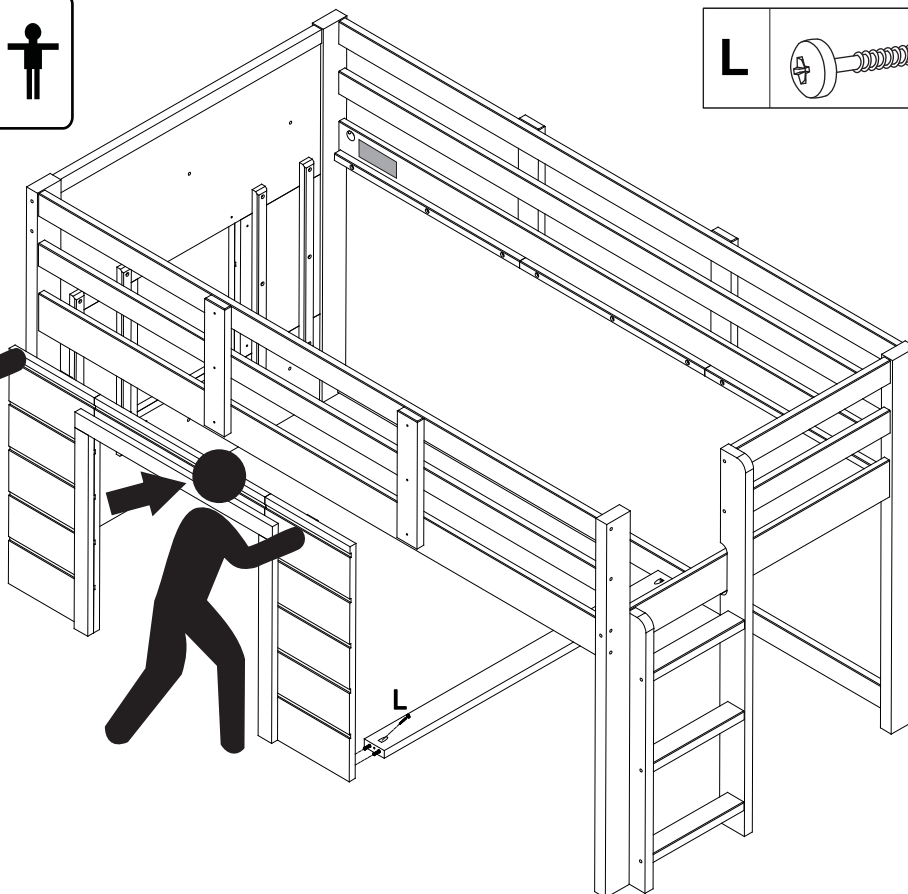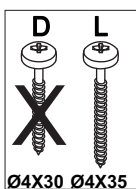


SCREW







18




C		14
Ø 3,5X16		
K		07











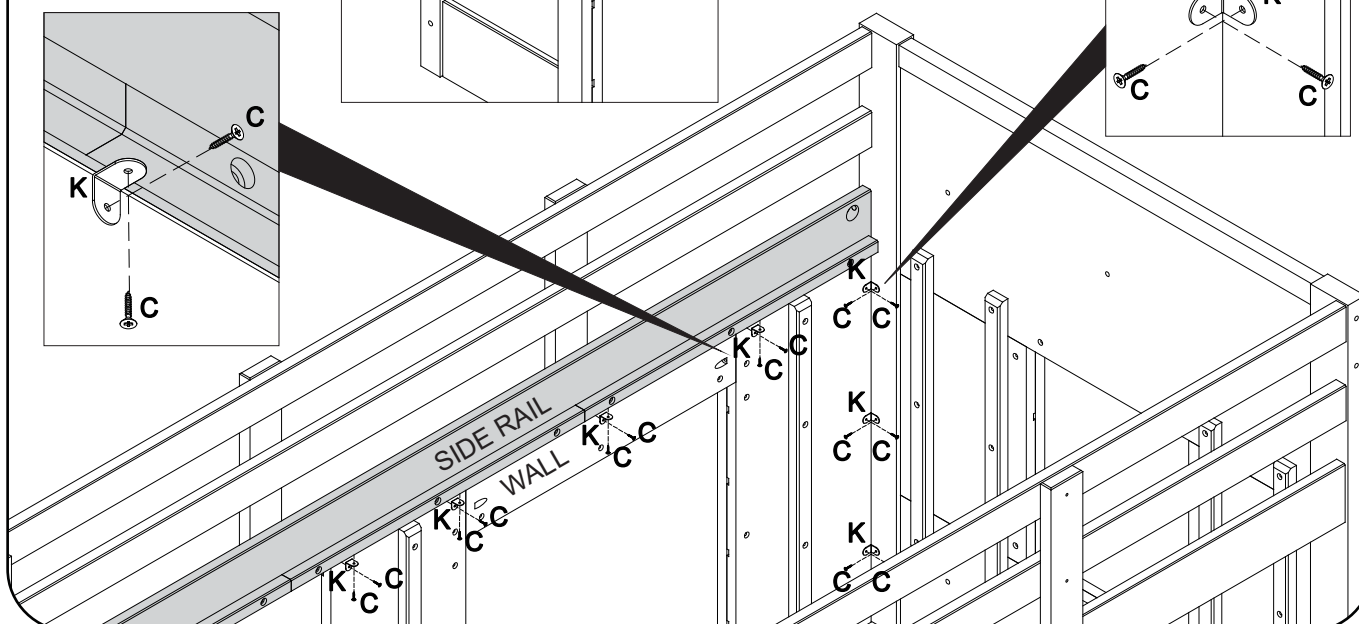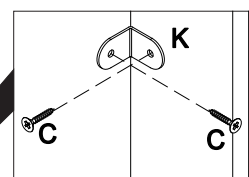
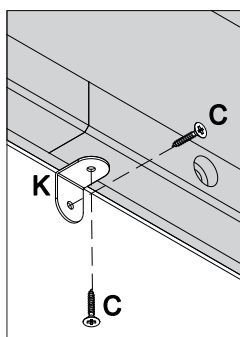
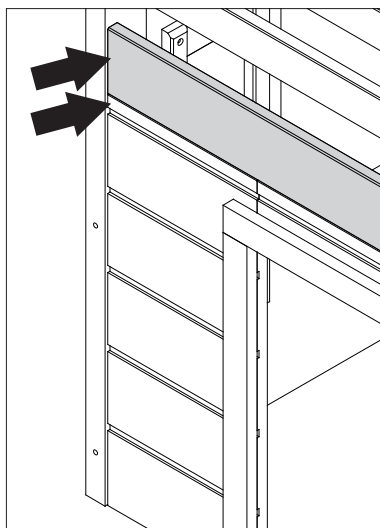

THE WALL NEEDS TO BE
UNDER AND ON THE SAME
LINE OF THE SIDE RAIL

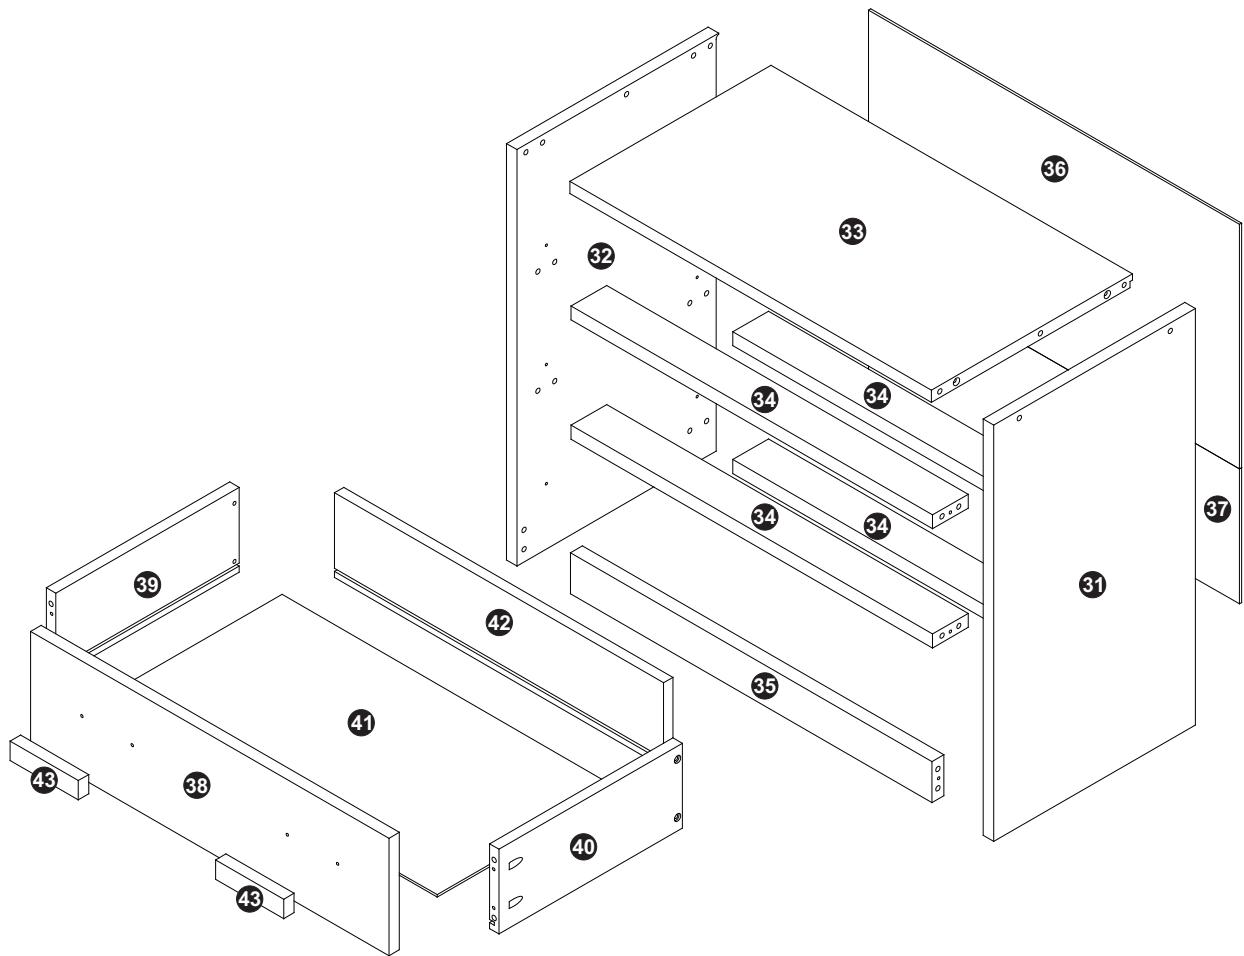


Part List - CHEST 3 DRAWERS LOW LOFT



Identifying the Hardware-Identify the hardware using the illustrations below.

H		01	Q		03
L	 Ø 4X35	34	R		03
M	 Ø 7X60 Cab 17	04	S		03
N	 Ø 6X10	24	T		23
O	 Ø 4X22	12	U		03
P		03	V	 Ø 8X30	38


19

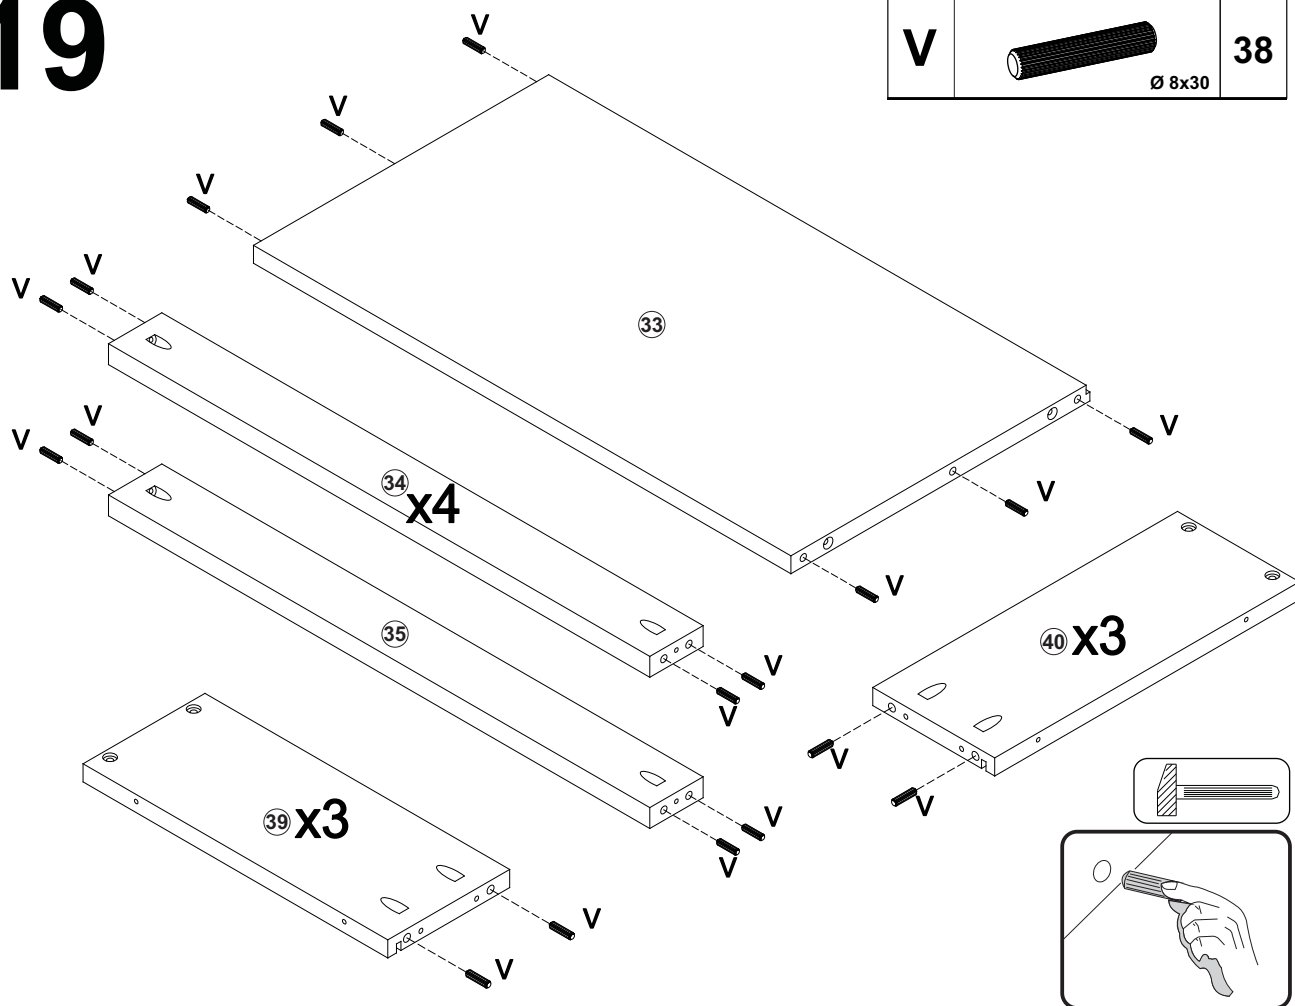




SET OF METAL SLIDES FOR THE DRAWERS



The metal glides hardware are all in one packed. Please separate the left and right pieces like a pair.

- The glides # P # Q are used on chest panel side and has a left and right pieces.
- The glides # R # S are used on drawers side, also has a left and right pieces.

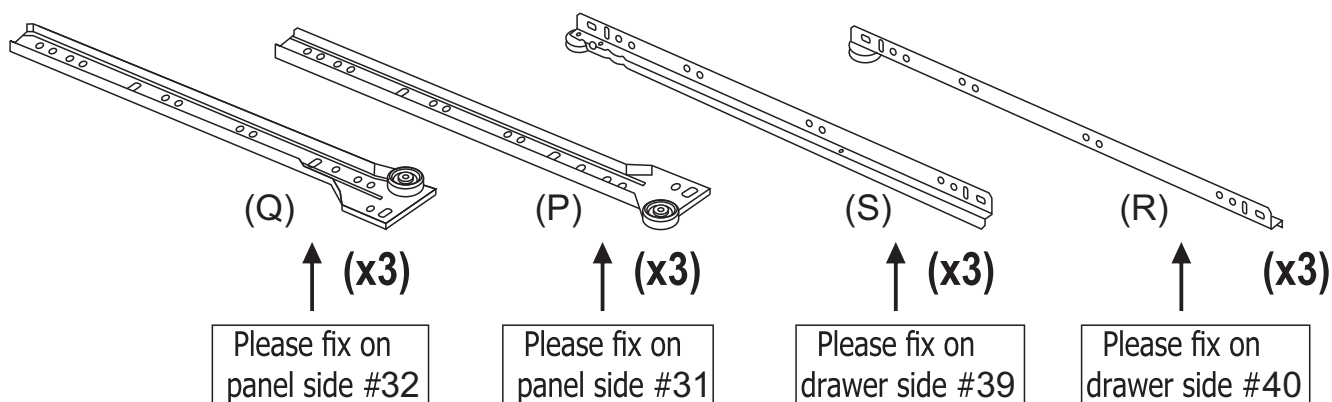


20


N	 Ø 6x10	12
P		03
Q		03

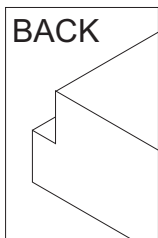


PRE-HOLES

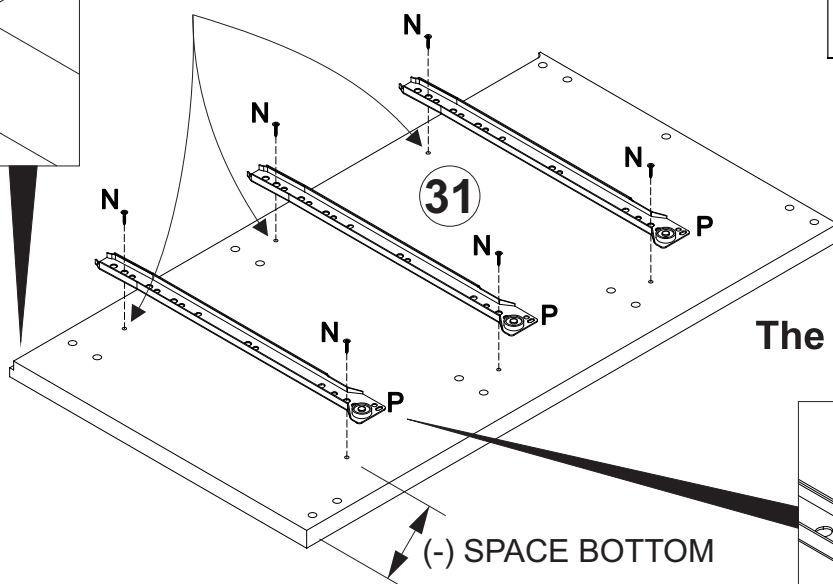



The wheel to the front !

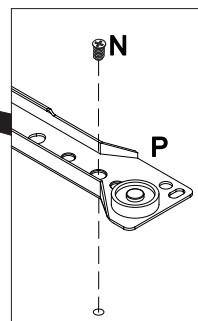



The wheel to the front !

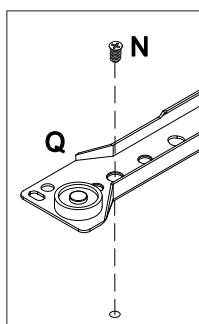



PRE-HOLES

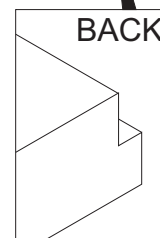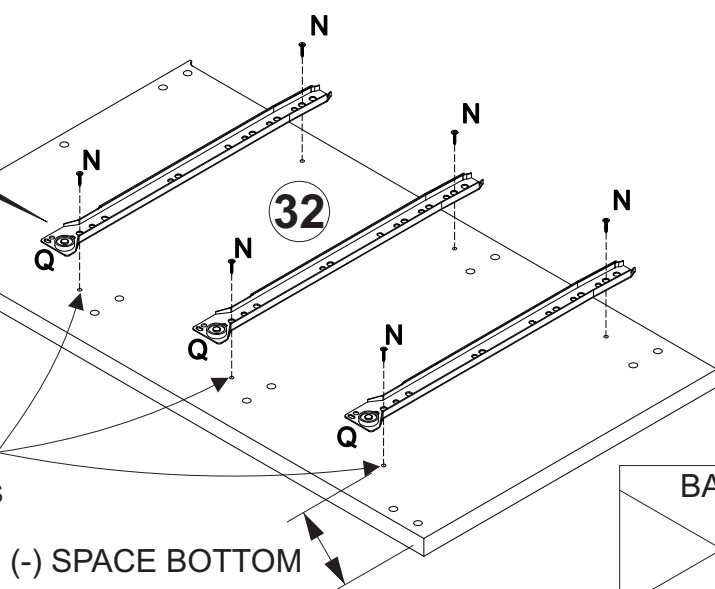

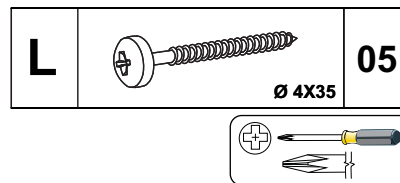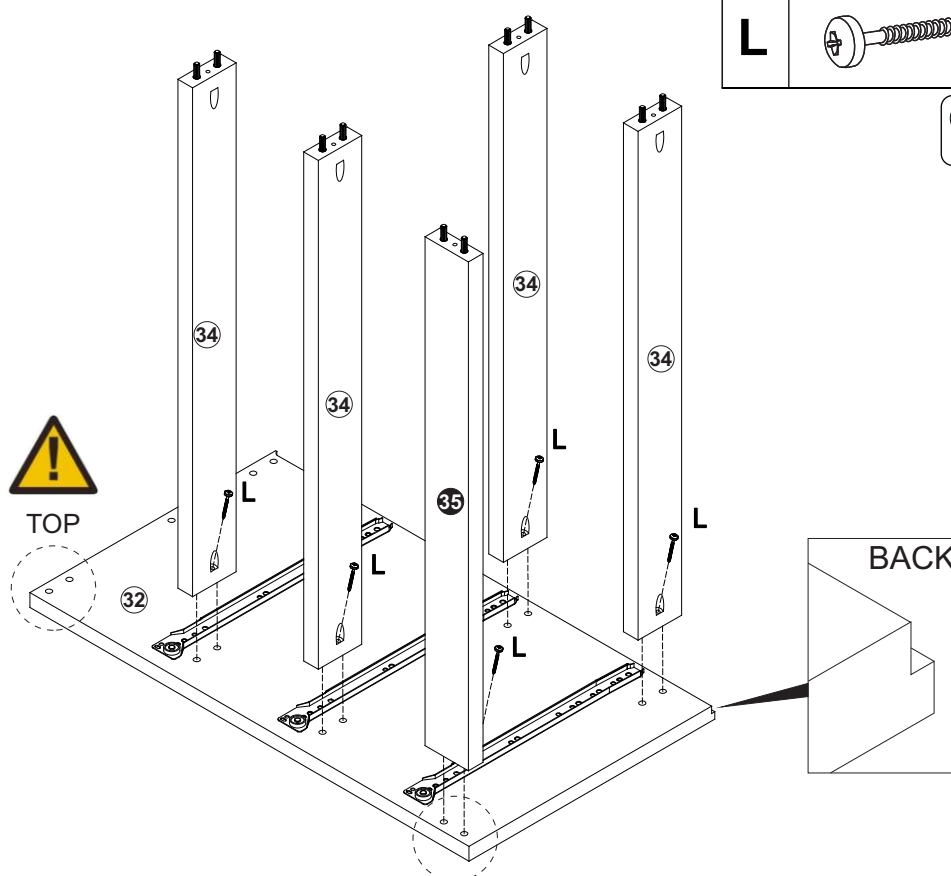

21

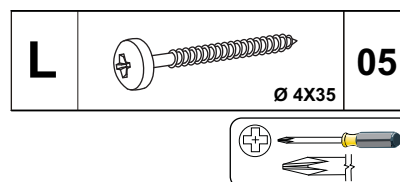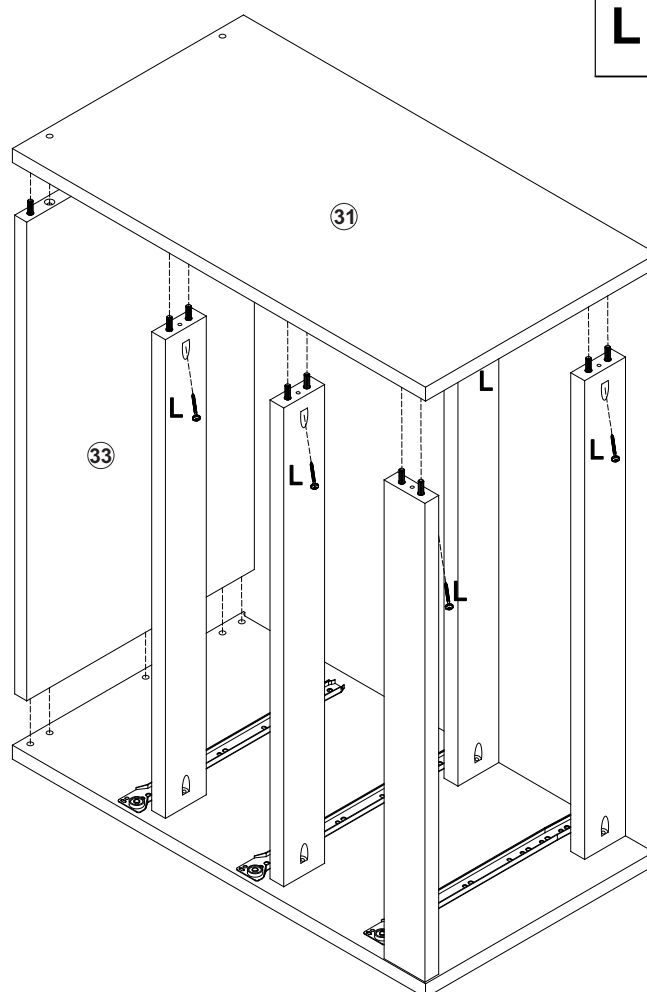


22








H		01
M	 Ø 7X60 Cab 17	04



25

L		24
Ø 4X35		

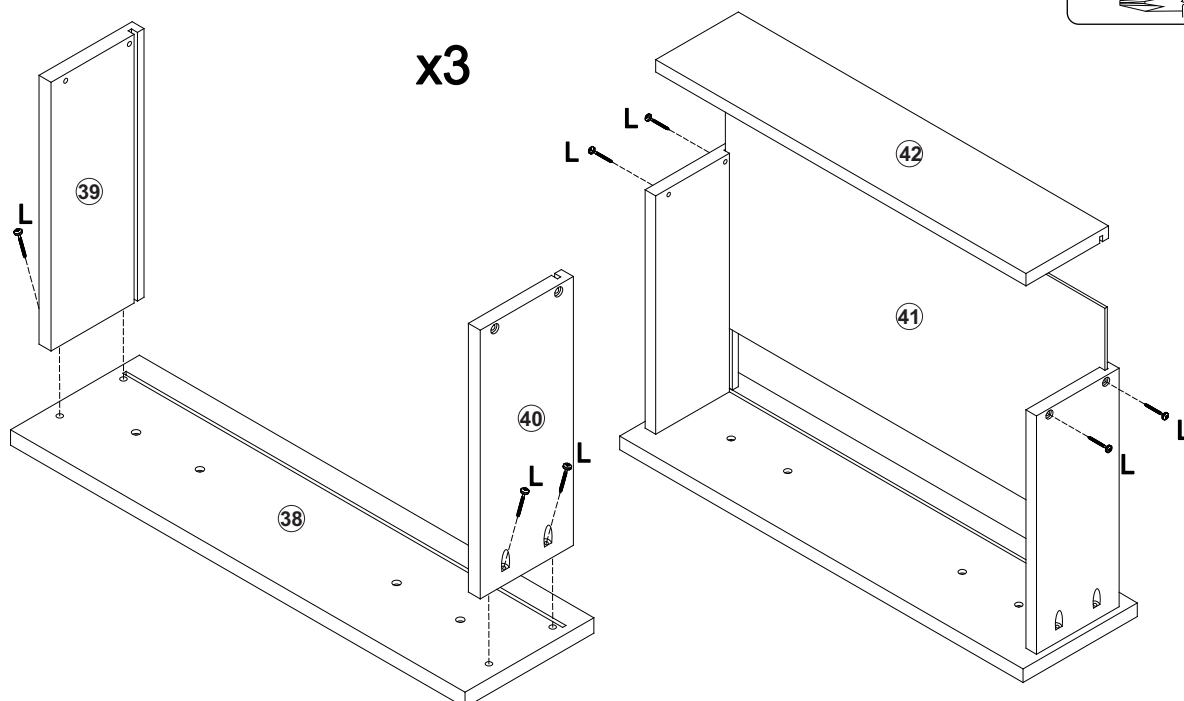


26


O		12
Ø 4X22		

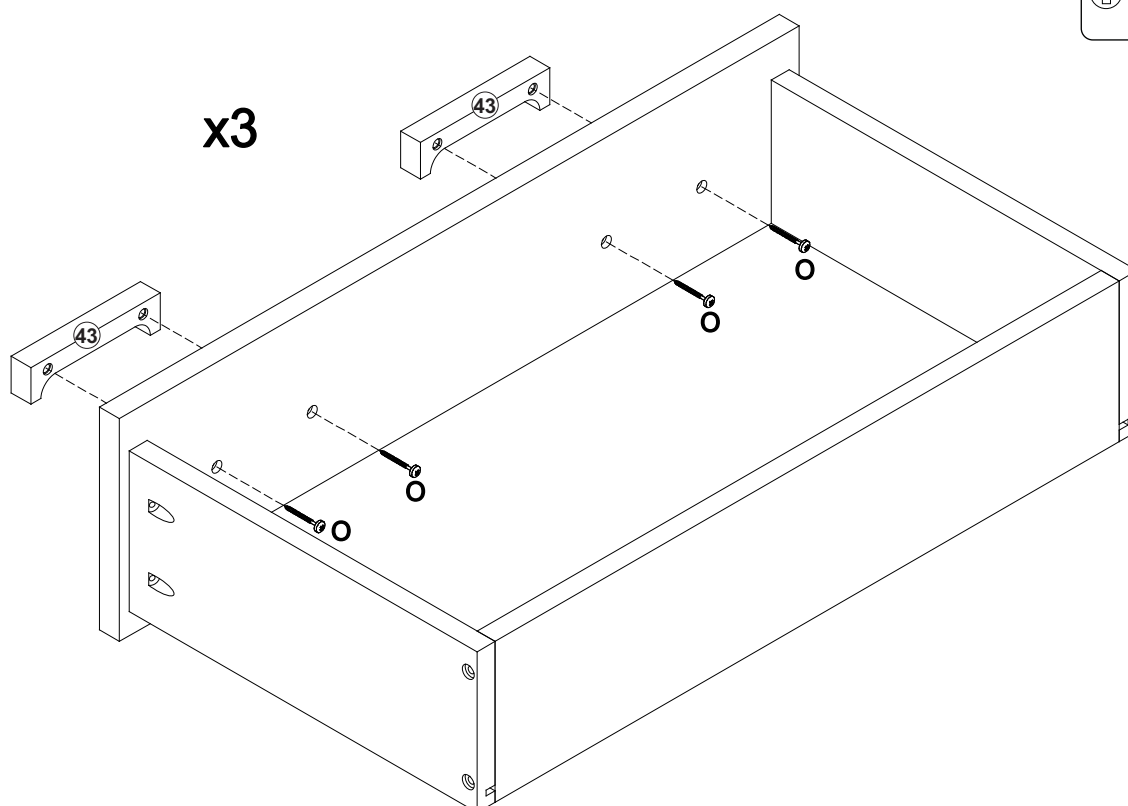



27

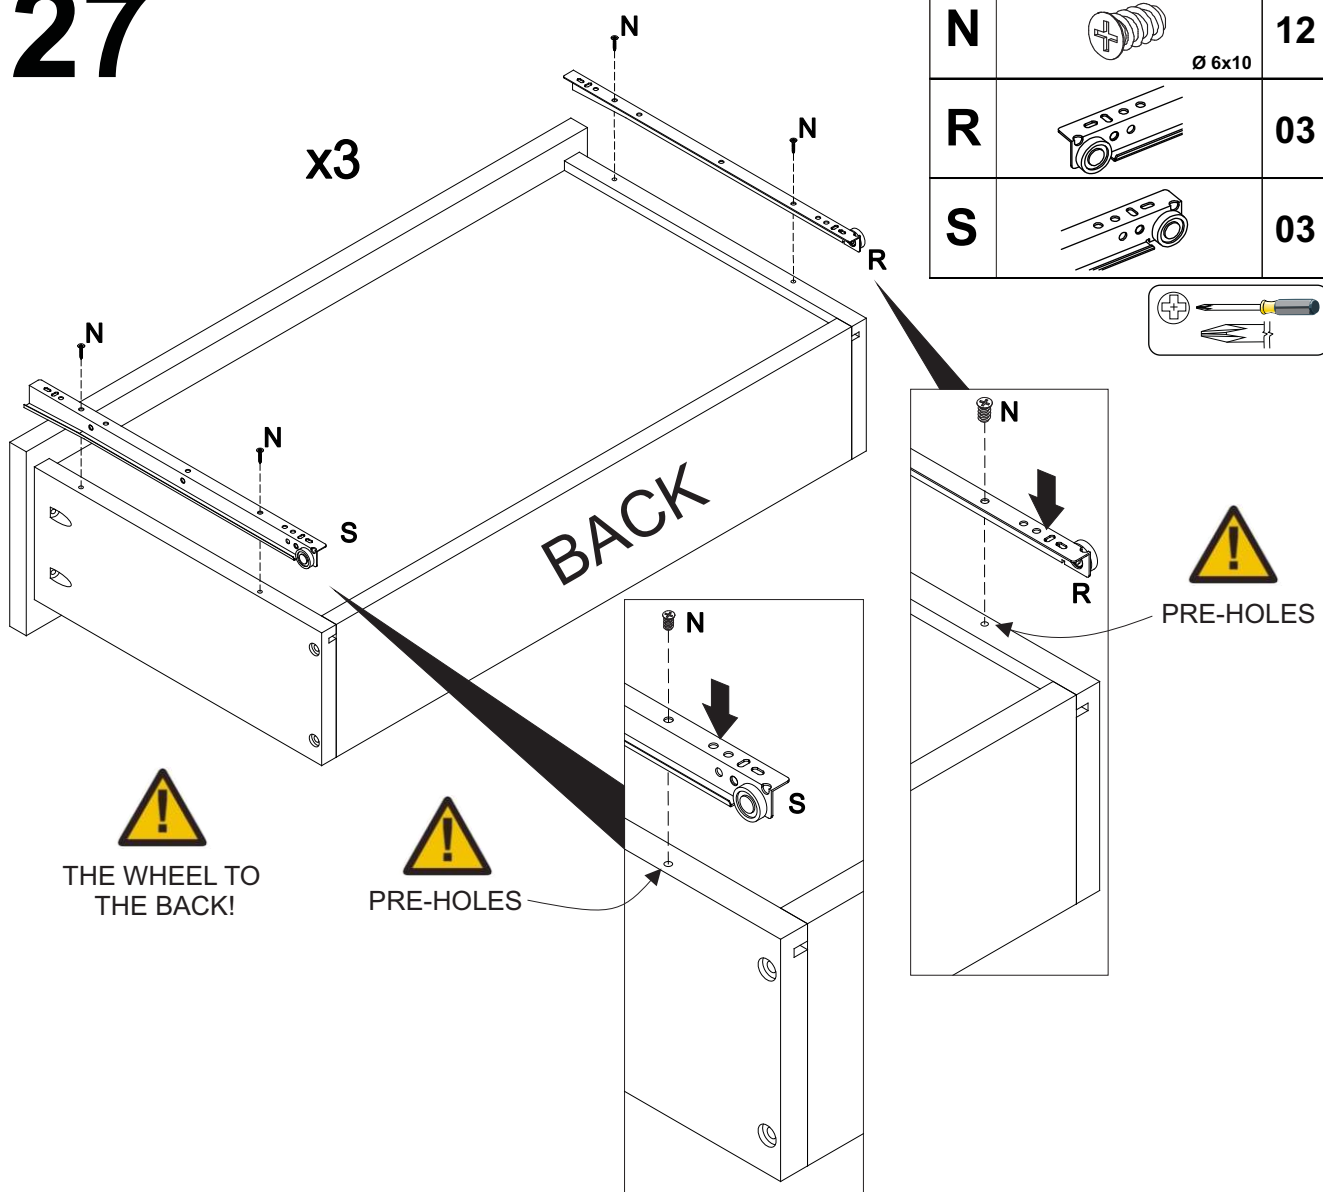

28

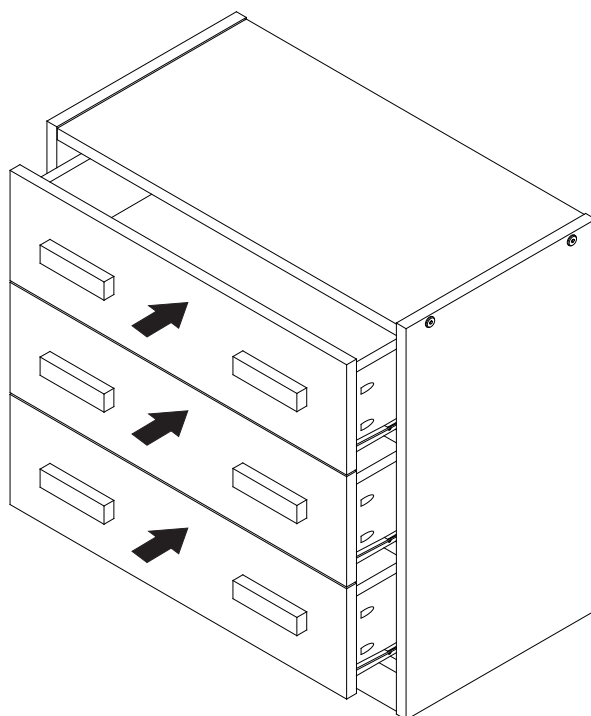

29

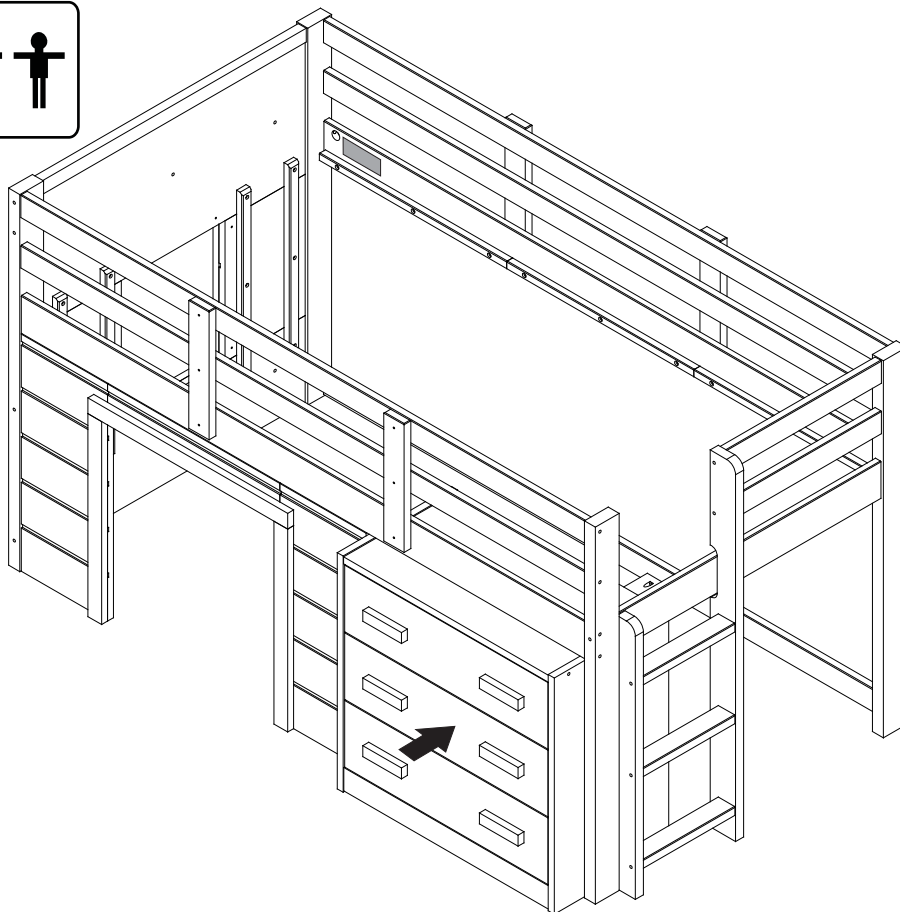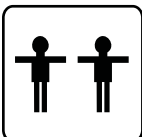

30



ATTENTION

THERE MUST BE A LEAST 5" INCHES
FROM TOP SURFACE OF MATTRESS TO
TOP EDGE OR GUARDRAILS.



"MATTRESS 9" HIGH LIMITED"

J



Ø 4X30

26

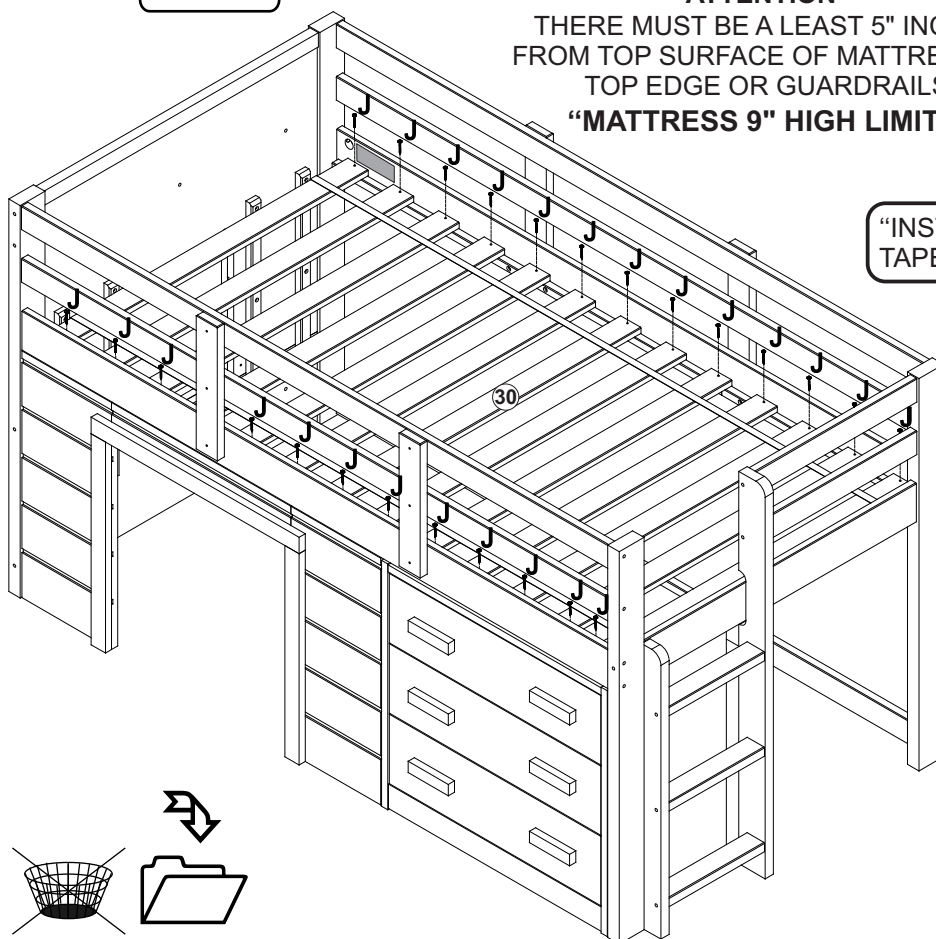

**"INSTALL SLAT KIT WITH SPACER
TAPE ON TOP (FACING UP)"**

