


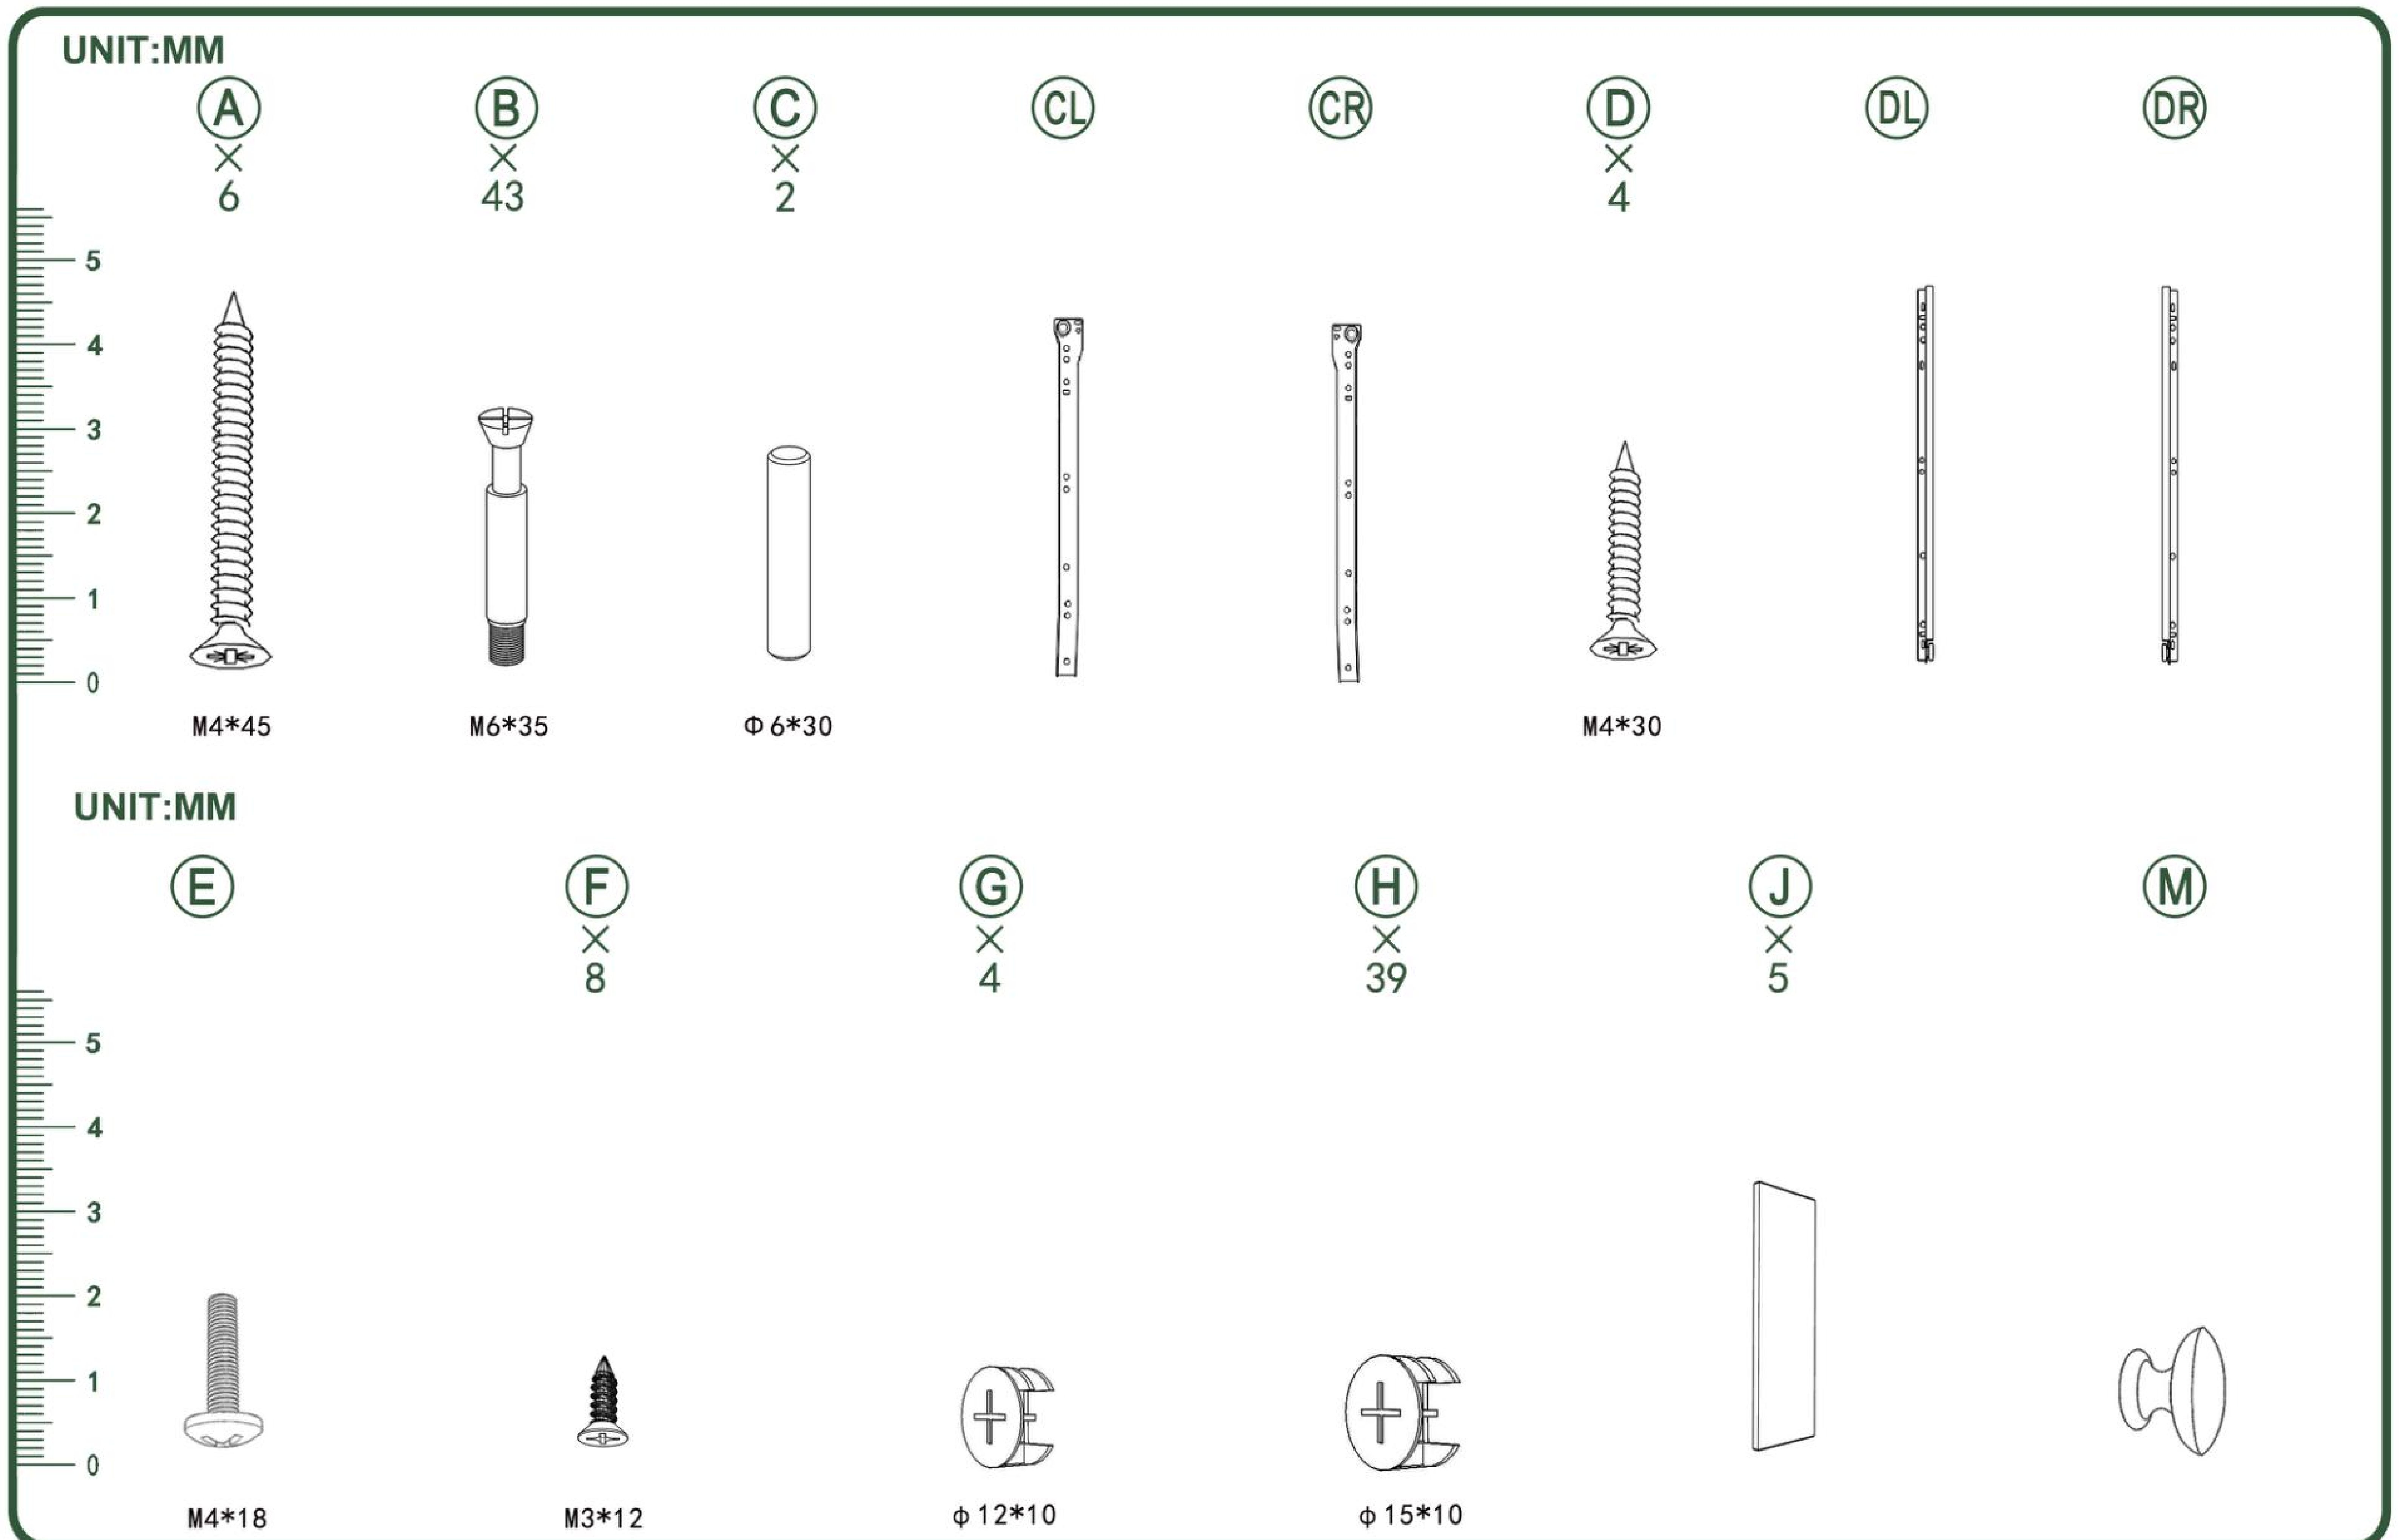
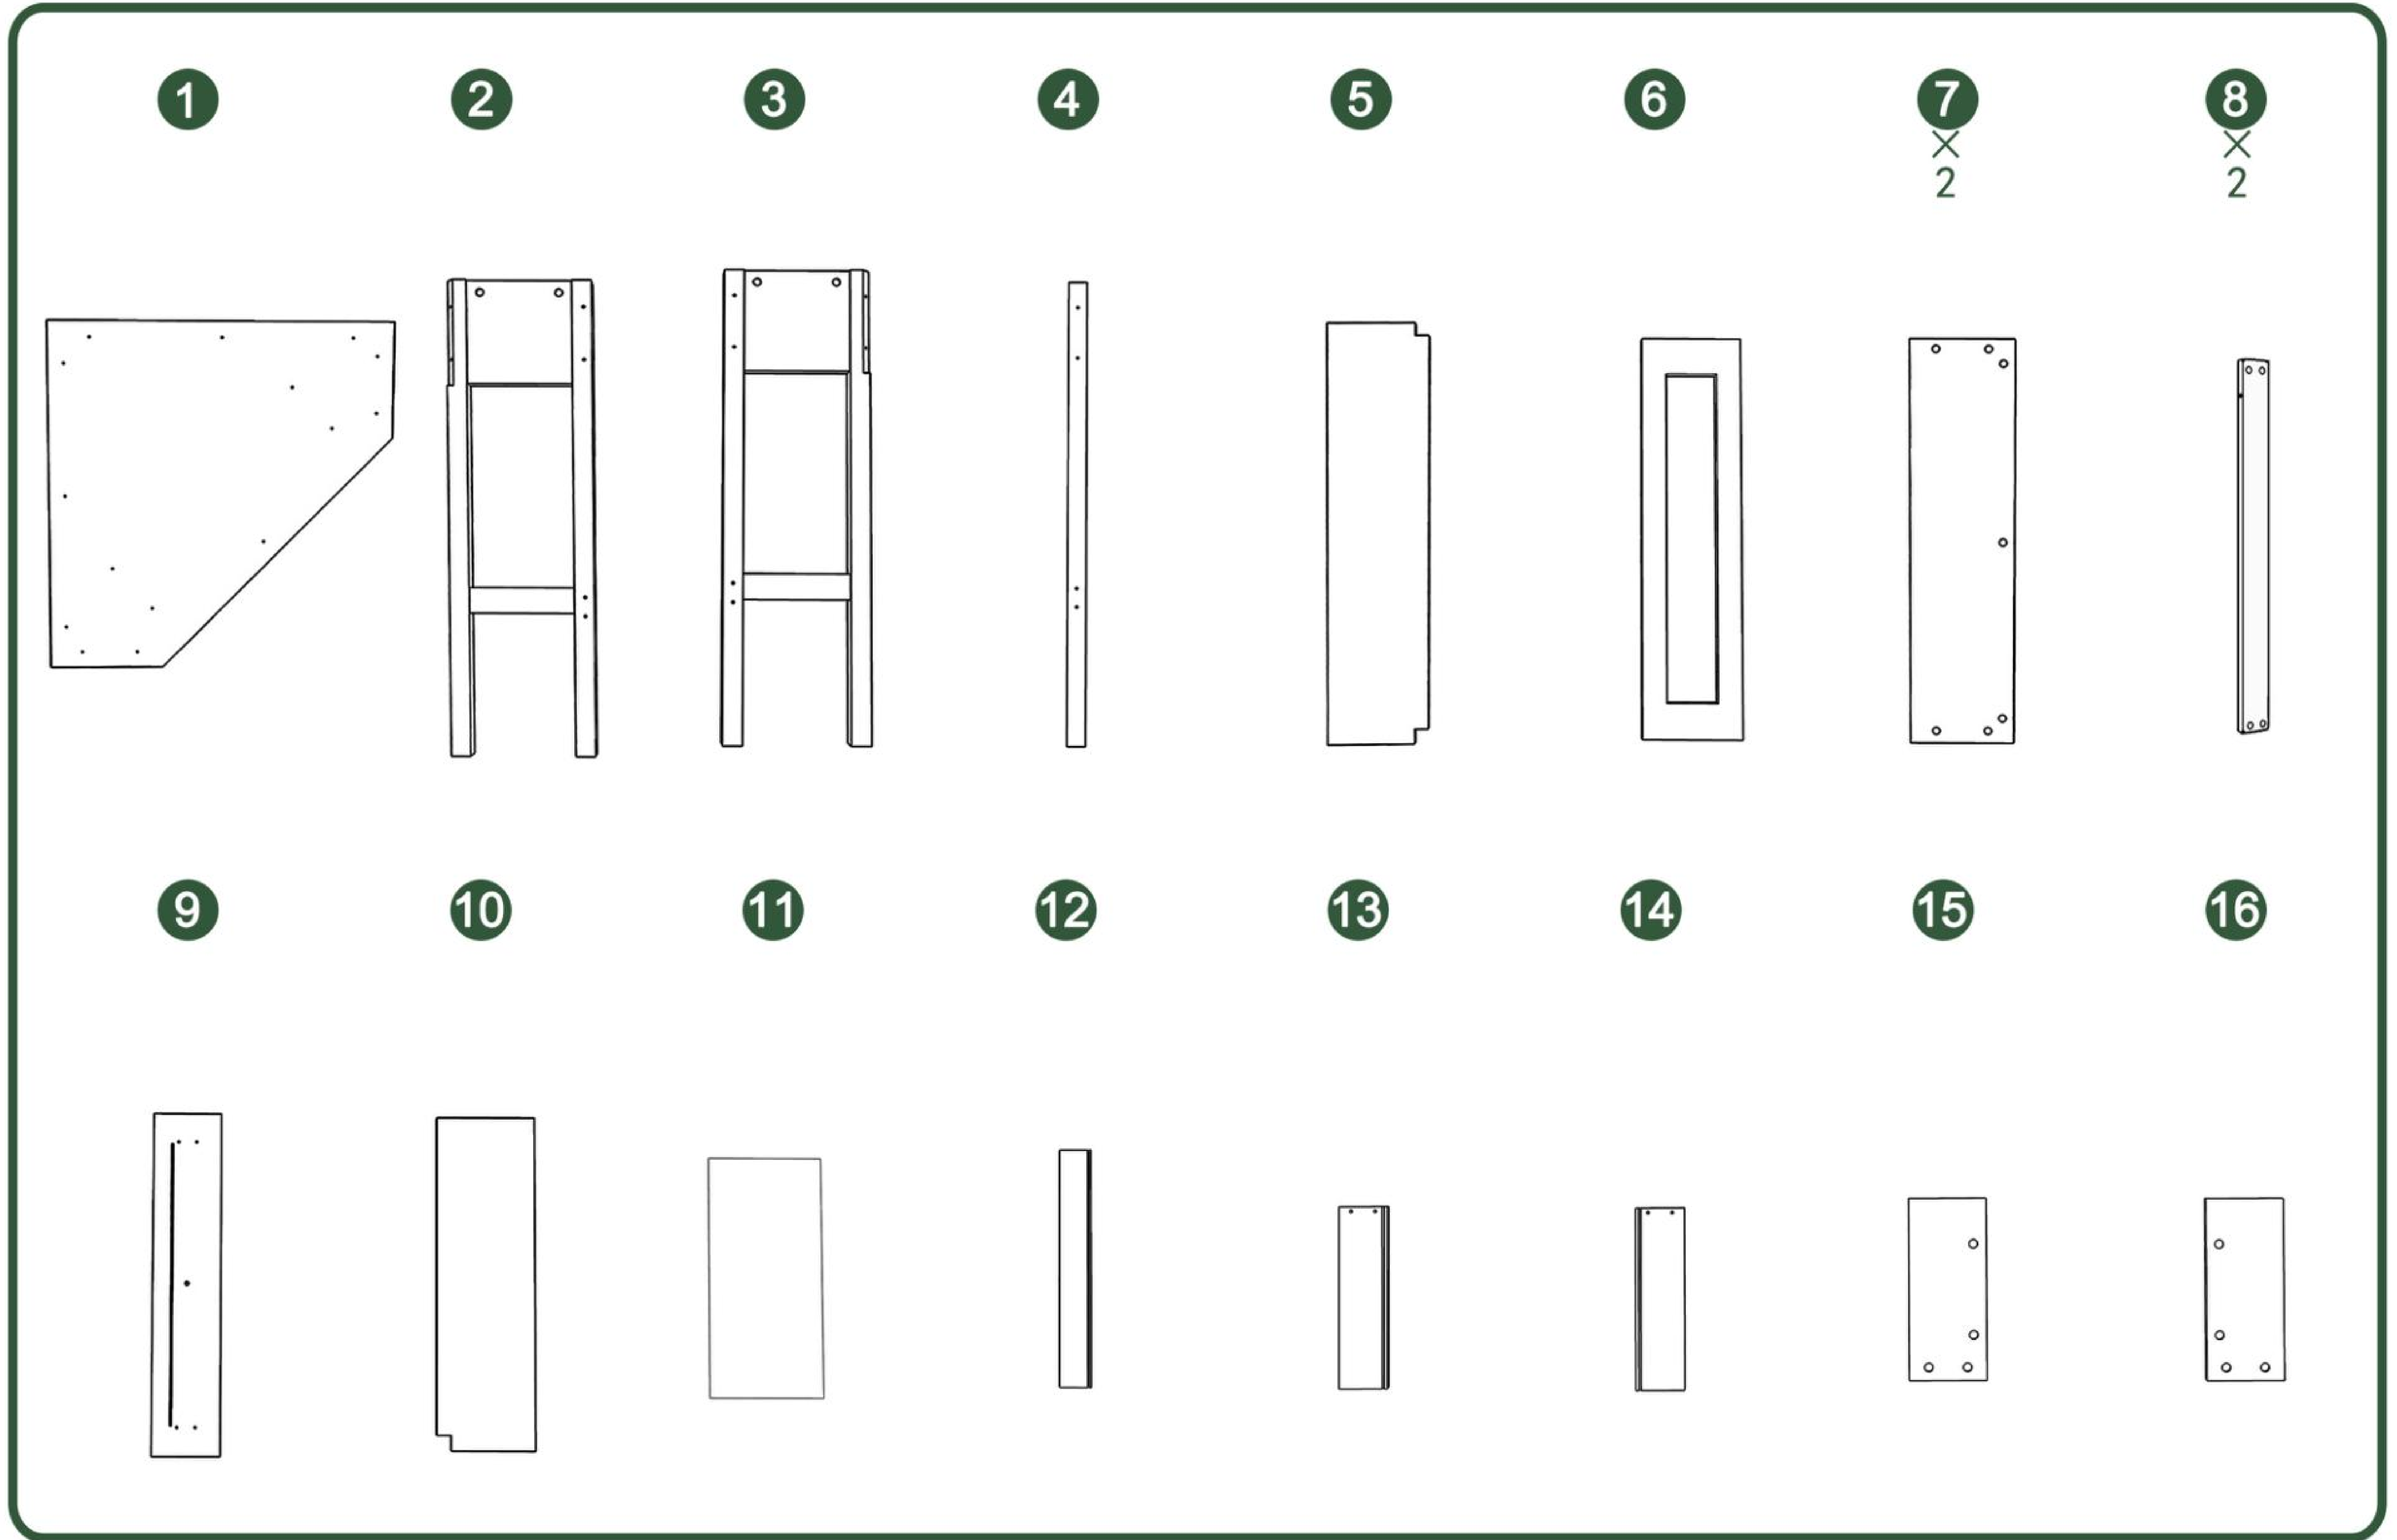
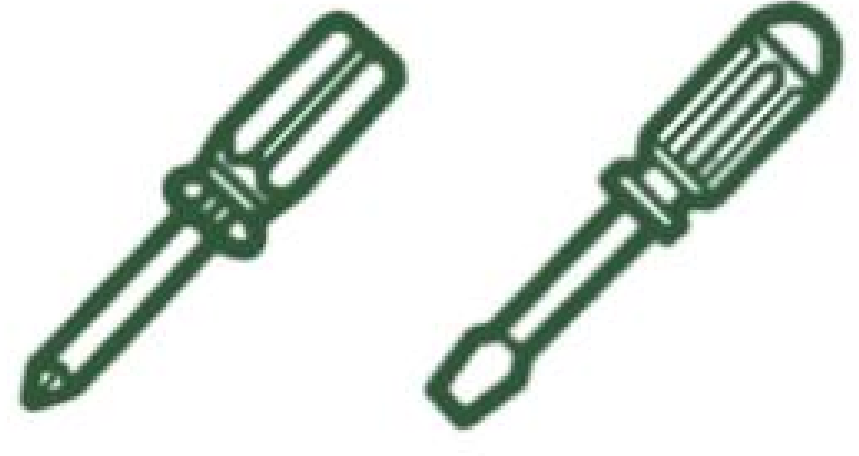
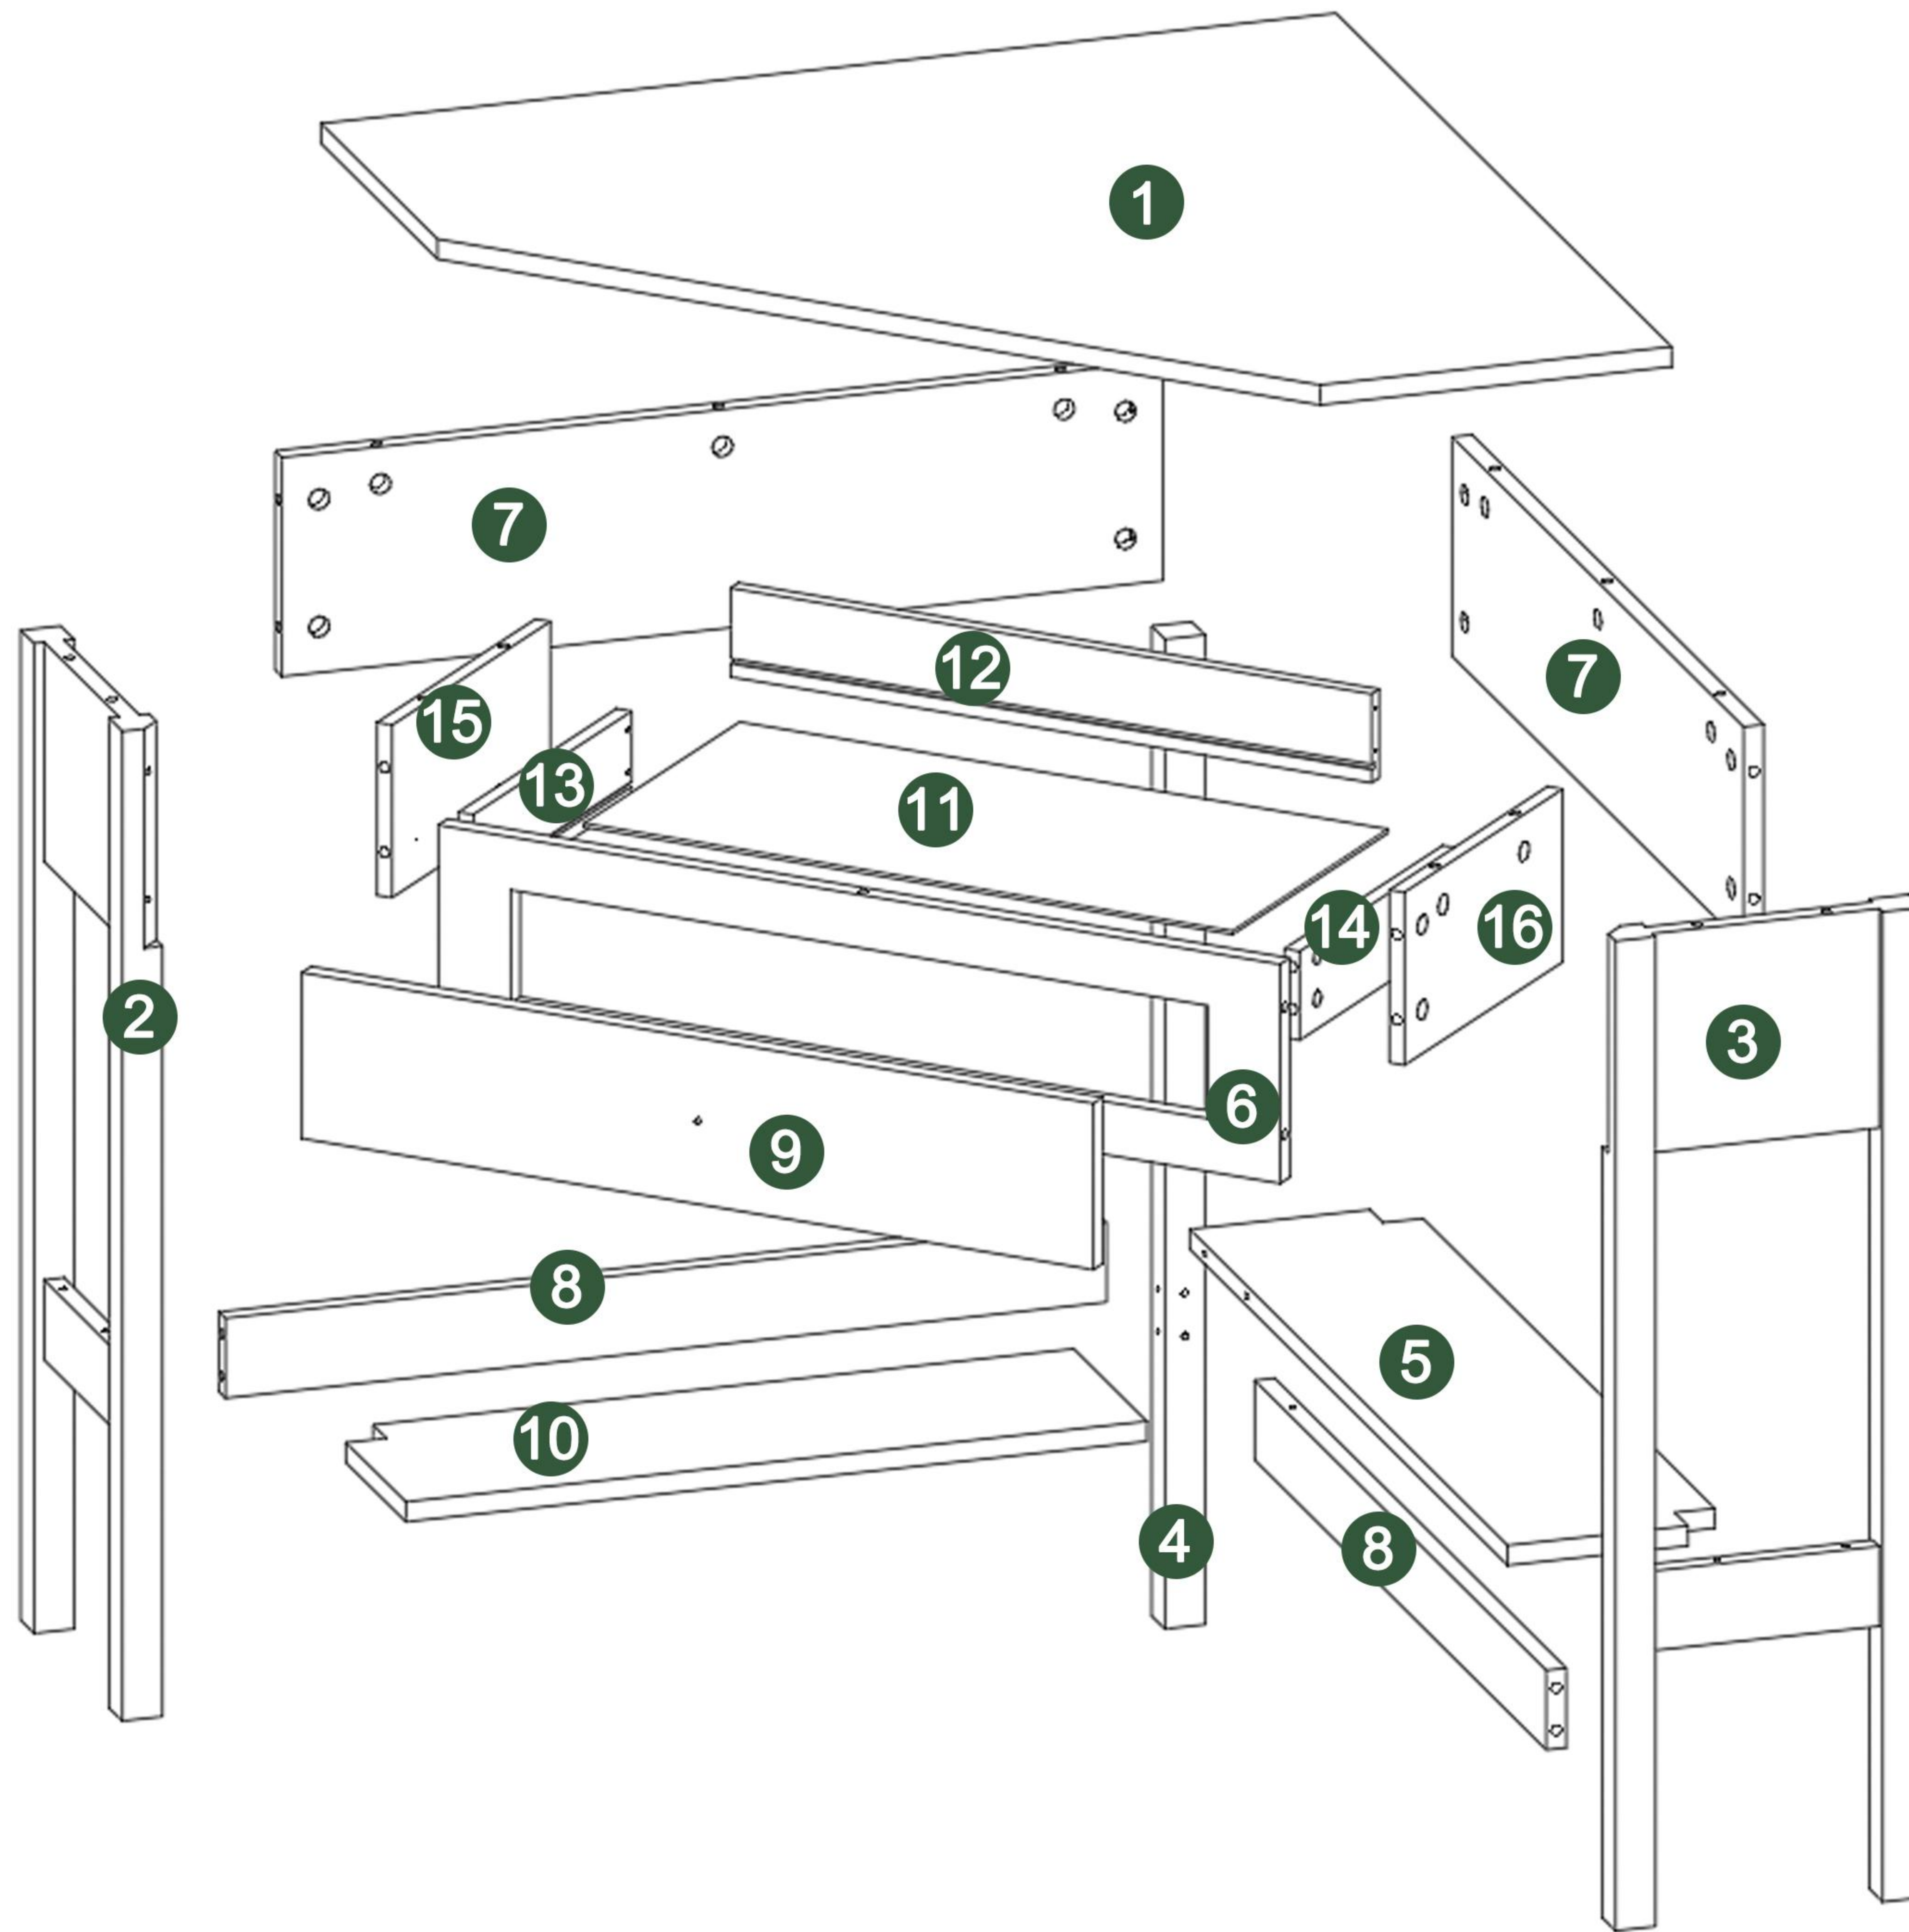


TOOLS:

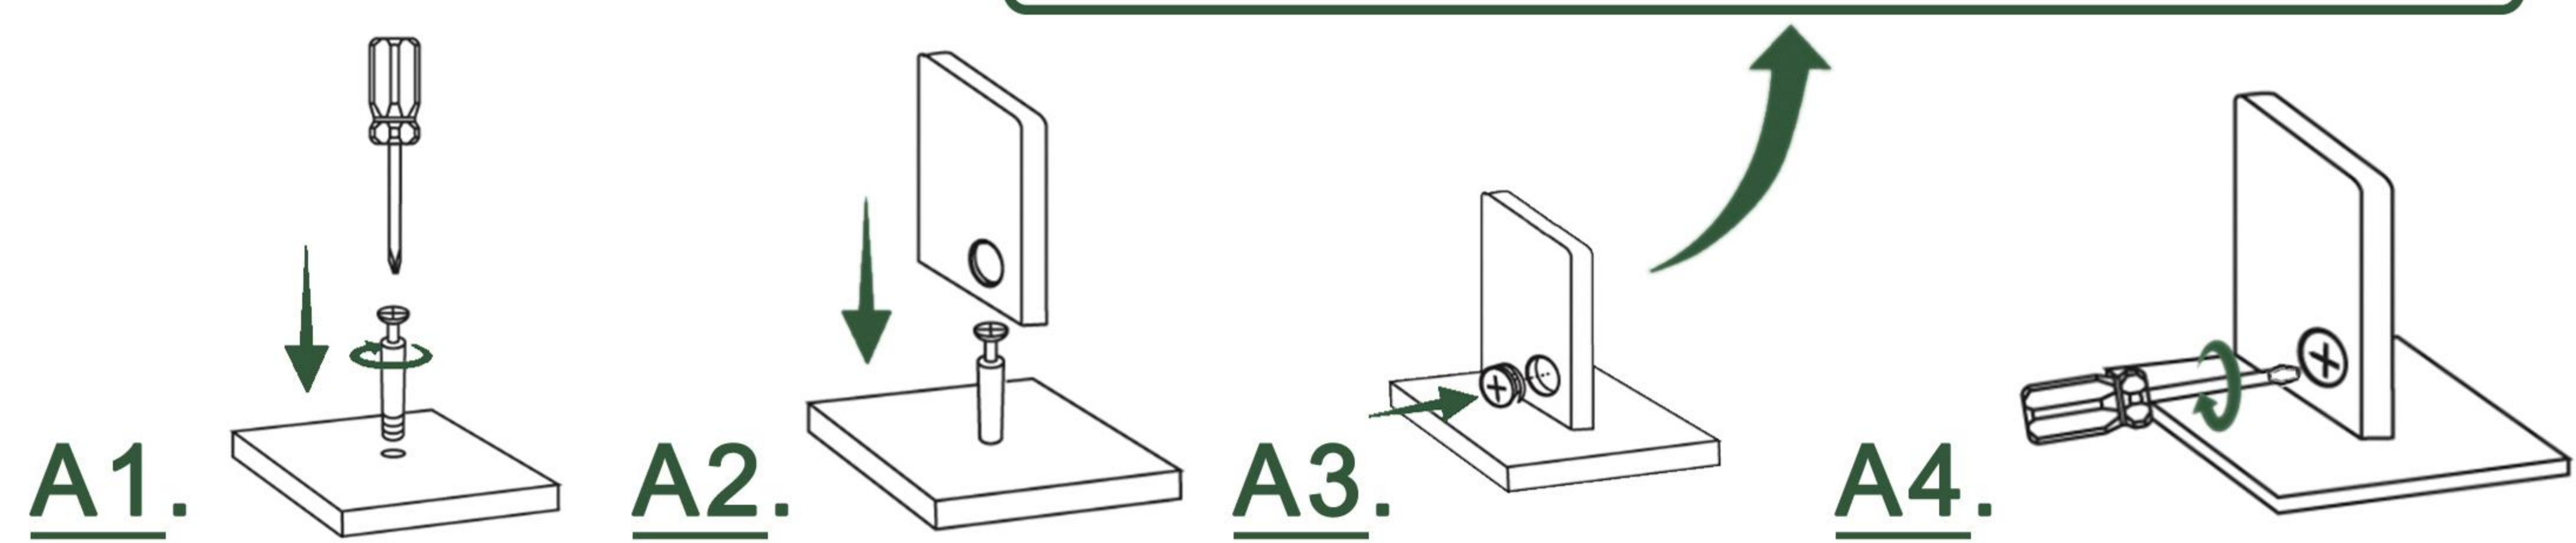


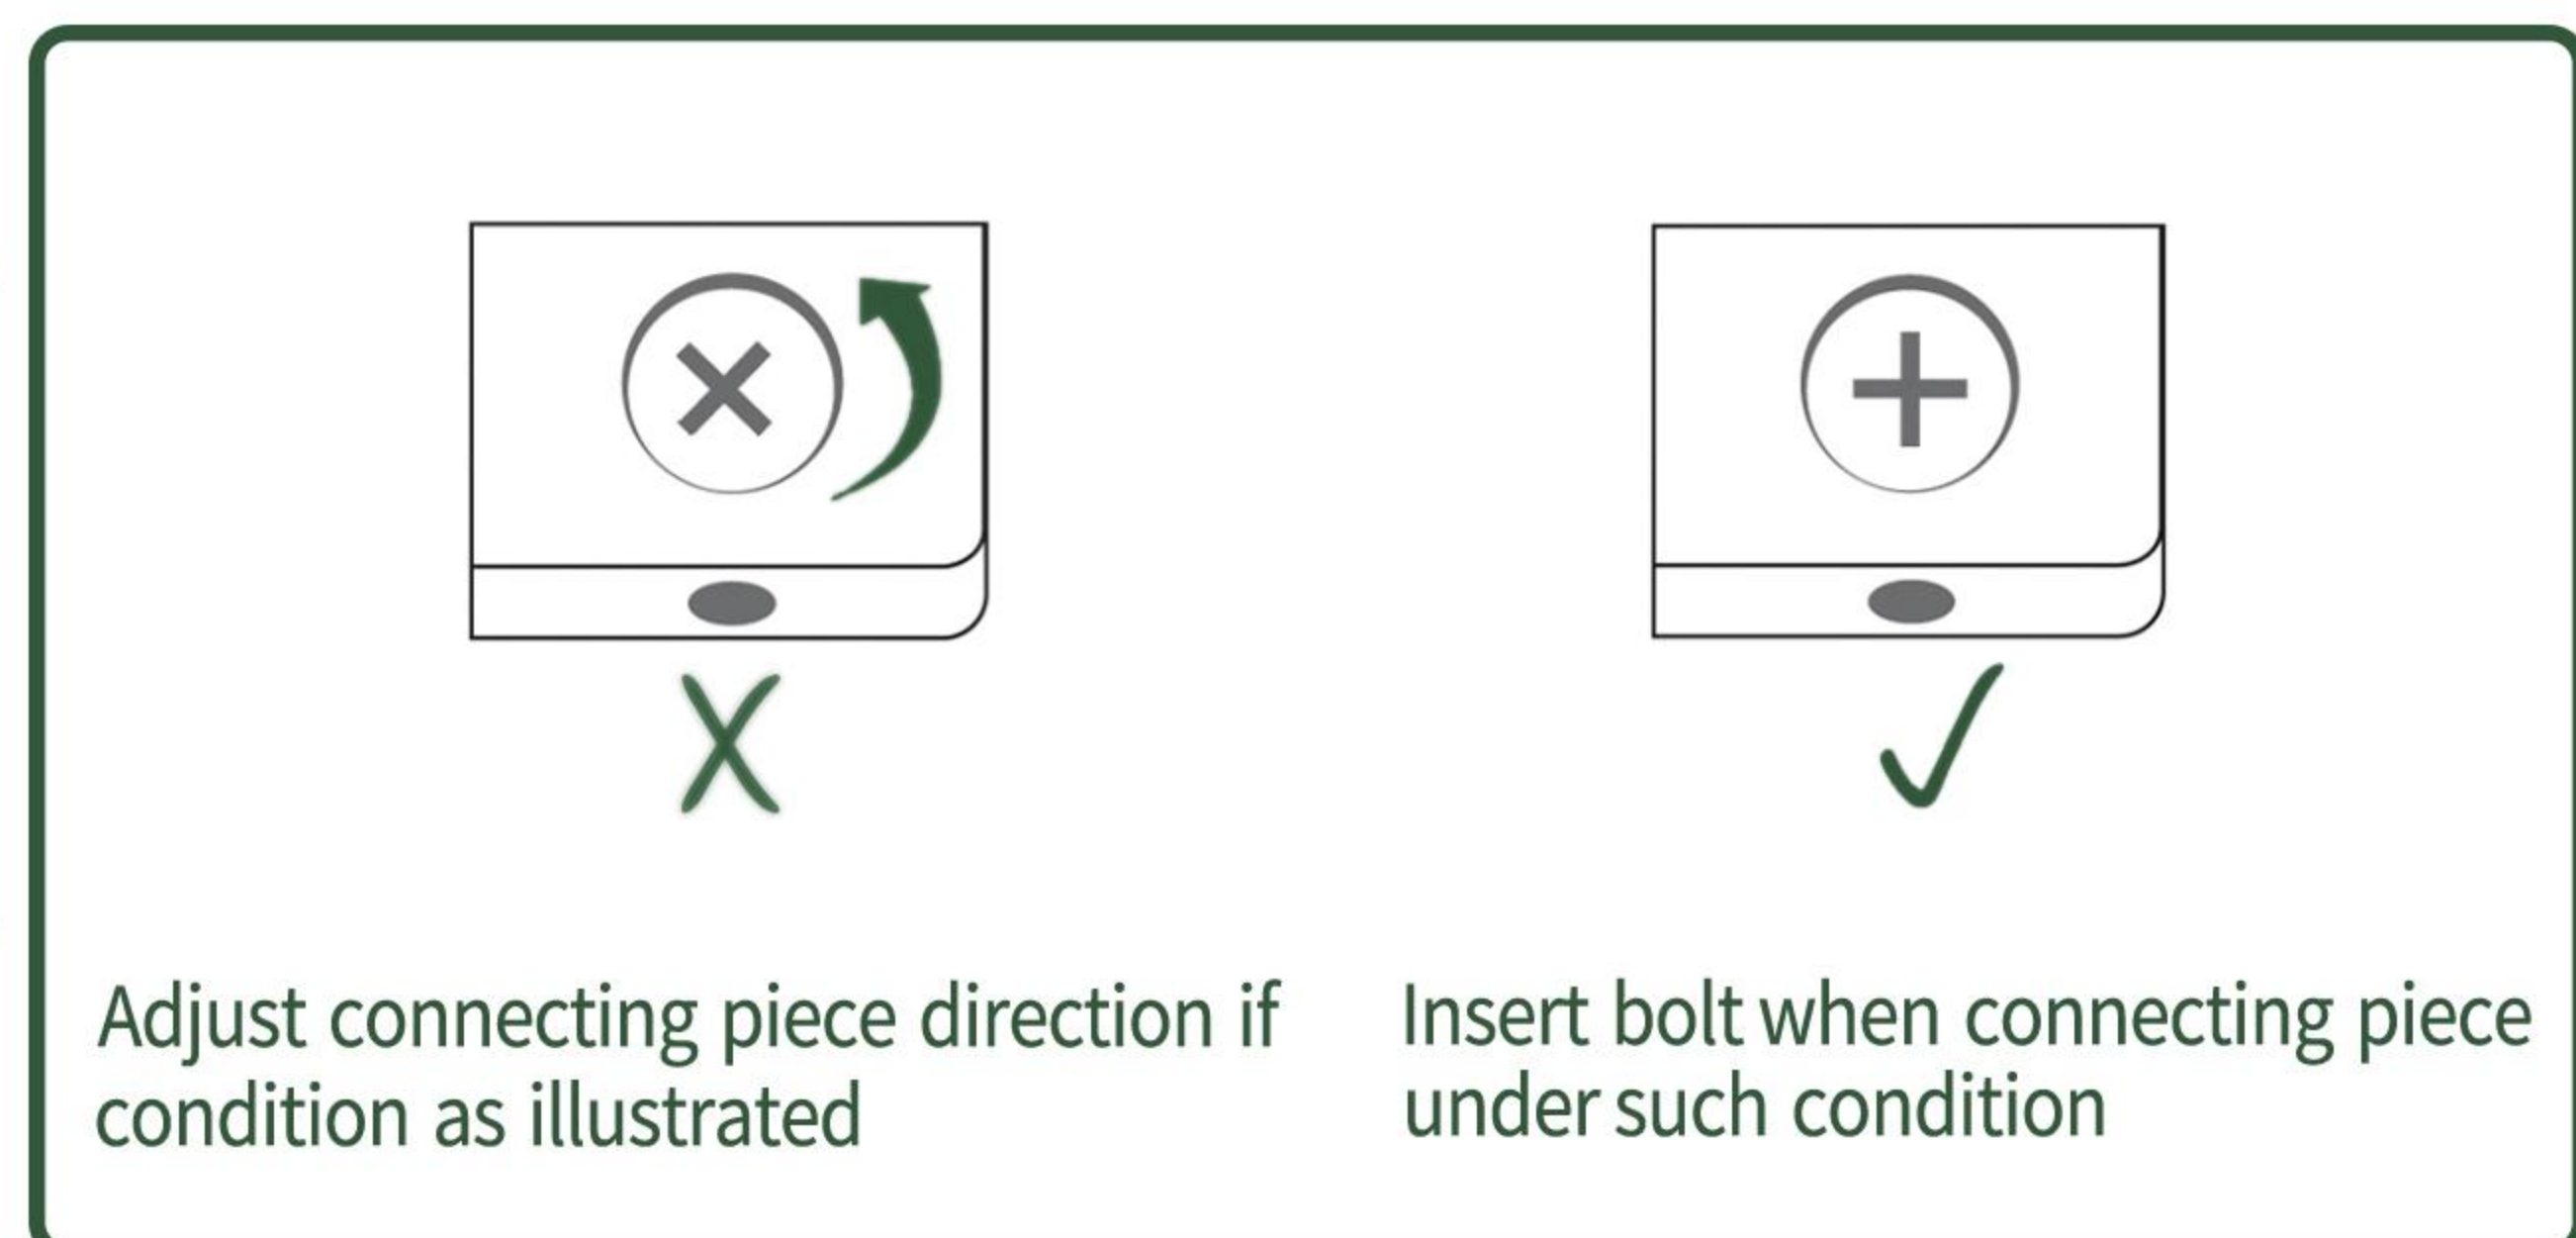


**BOLT INSTALLATION AS BELOW:**

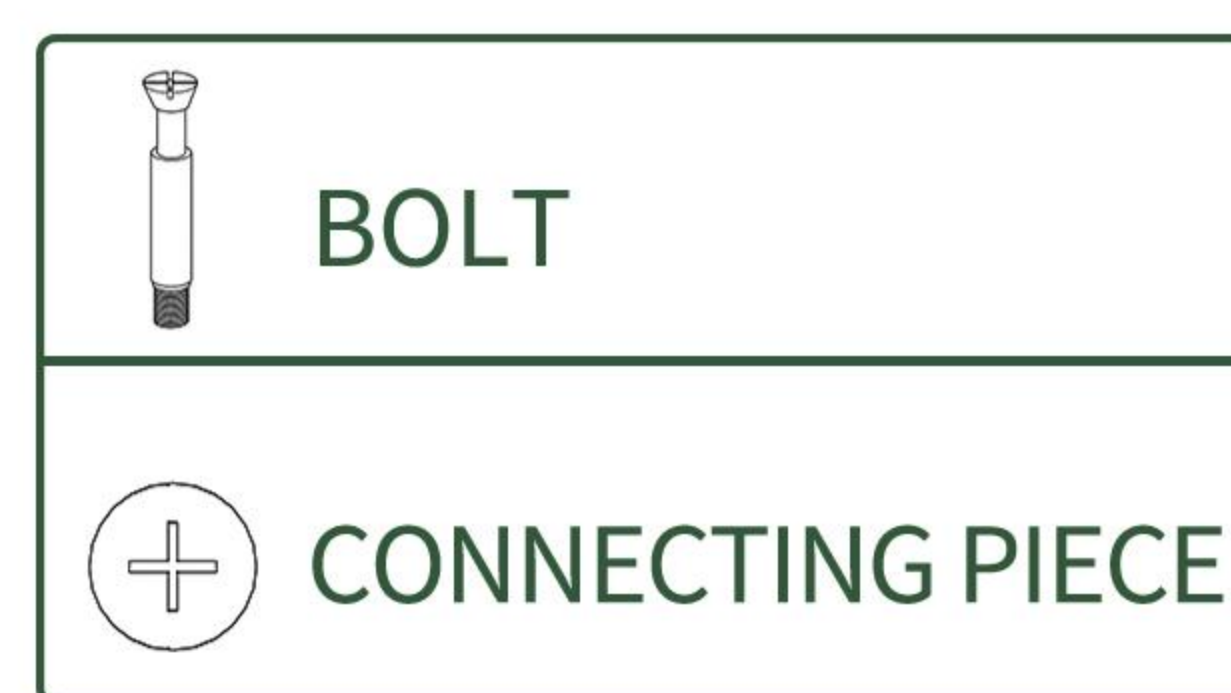


1.

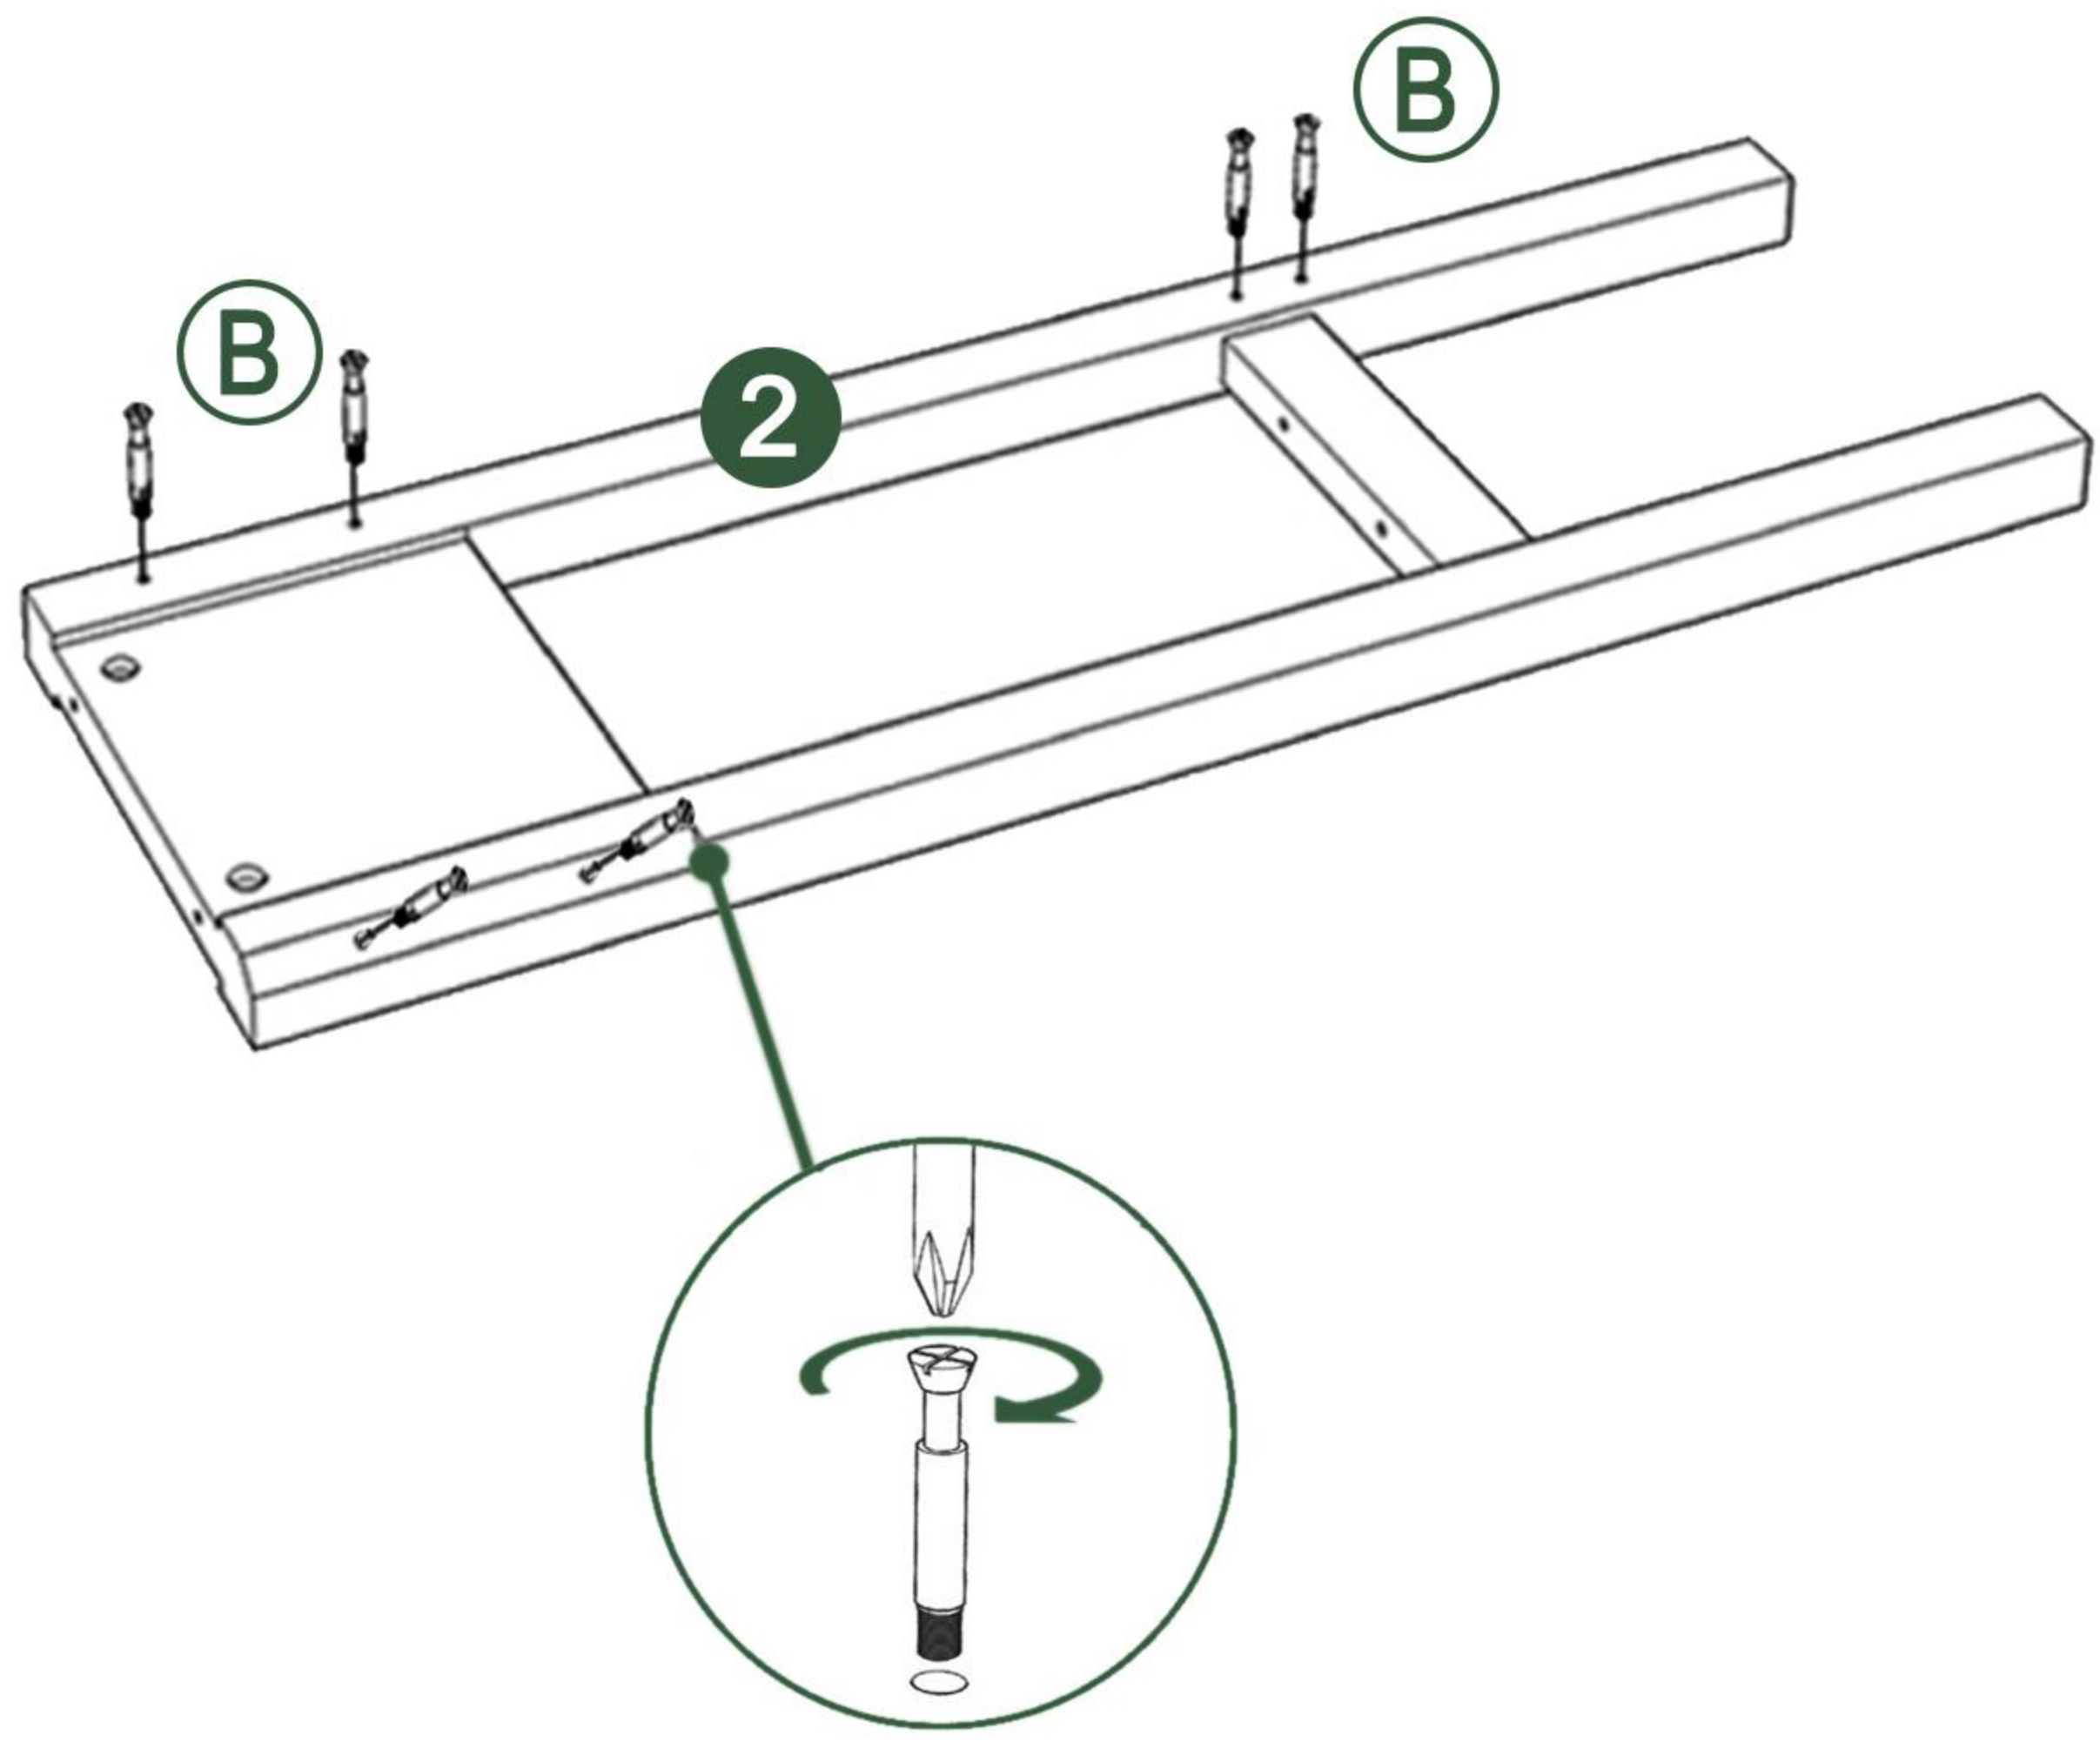


2.

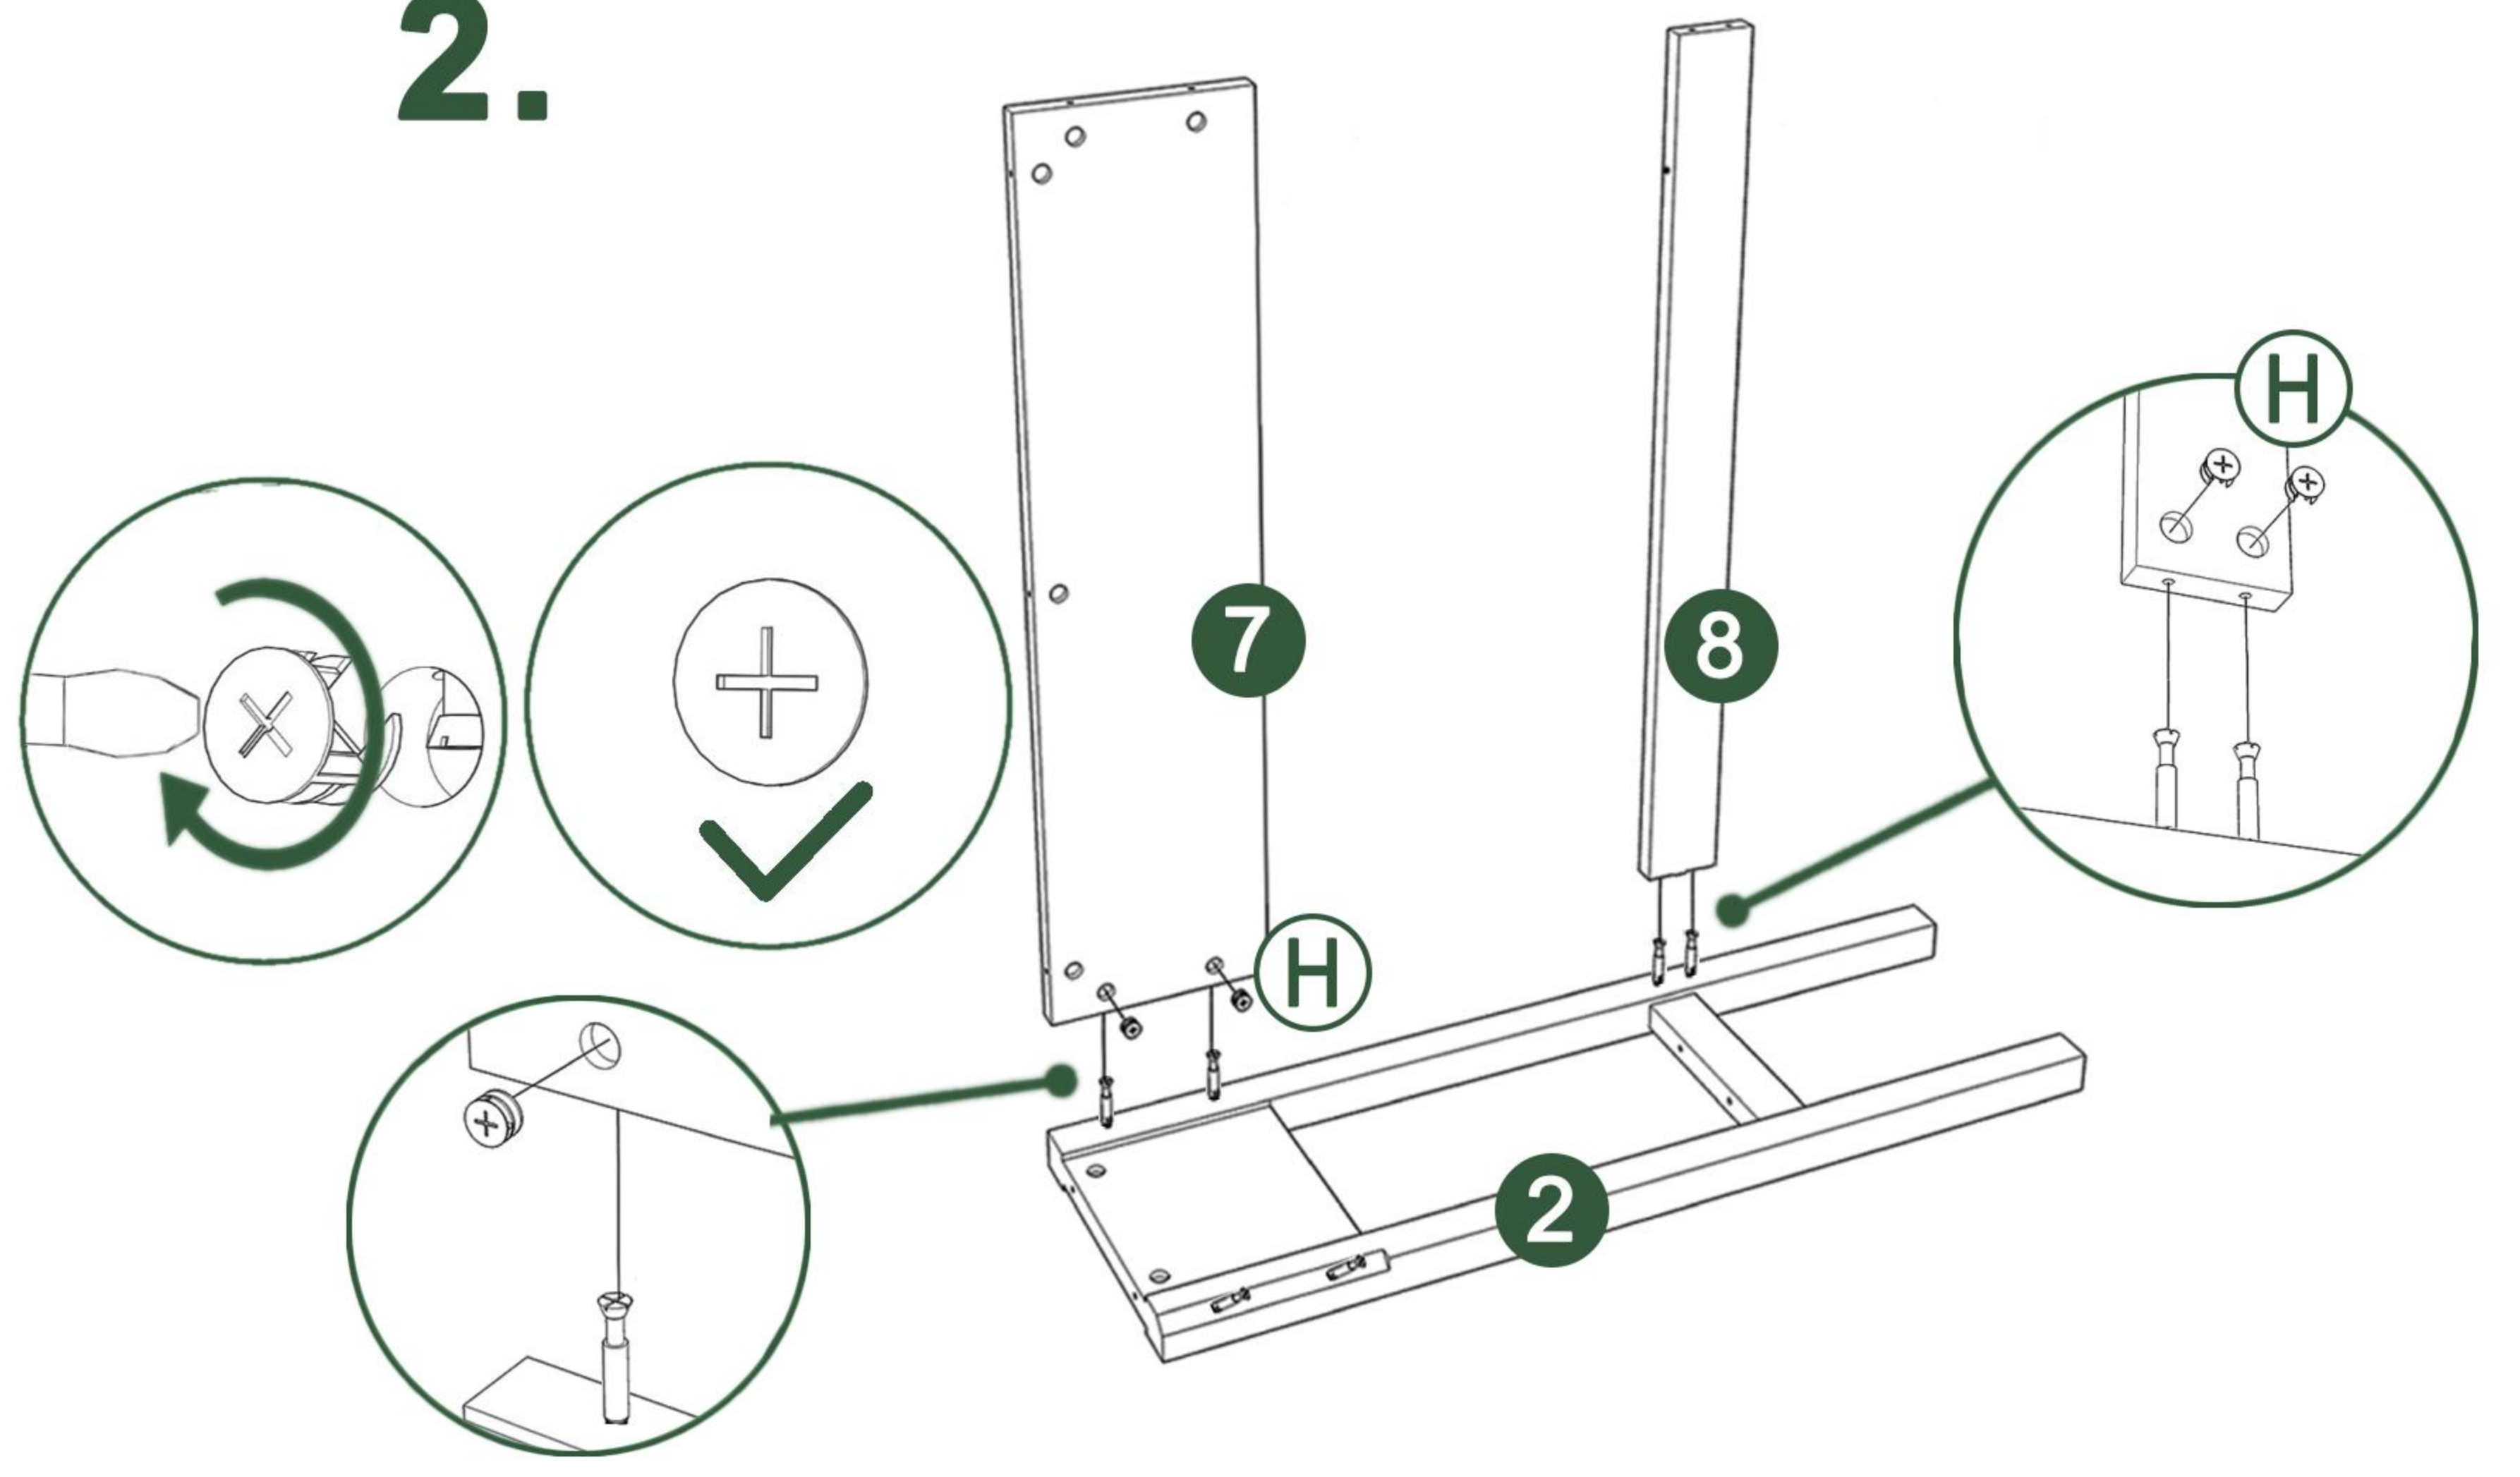


3.

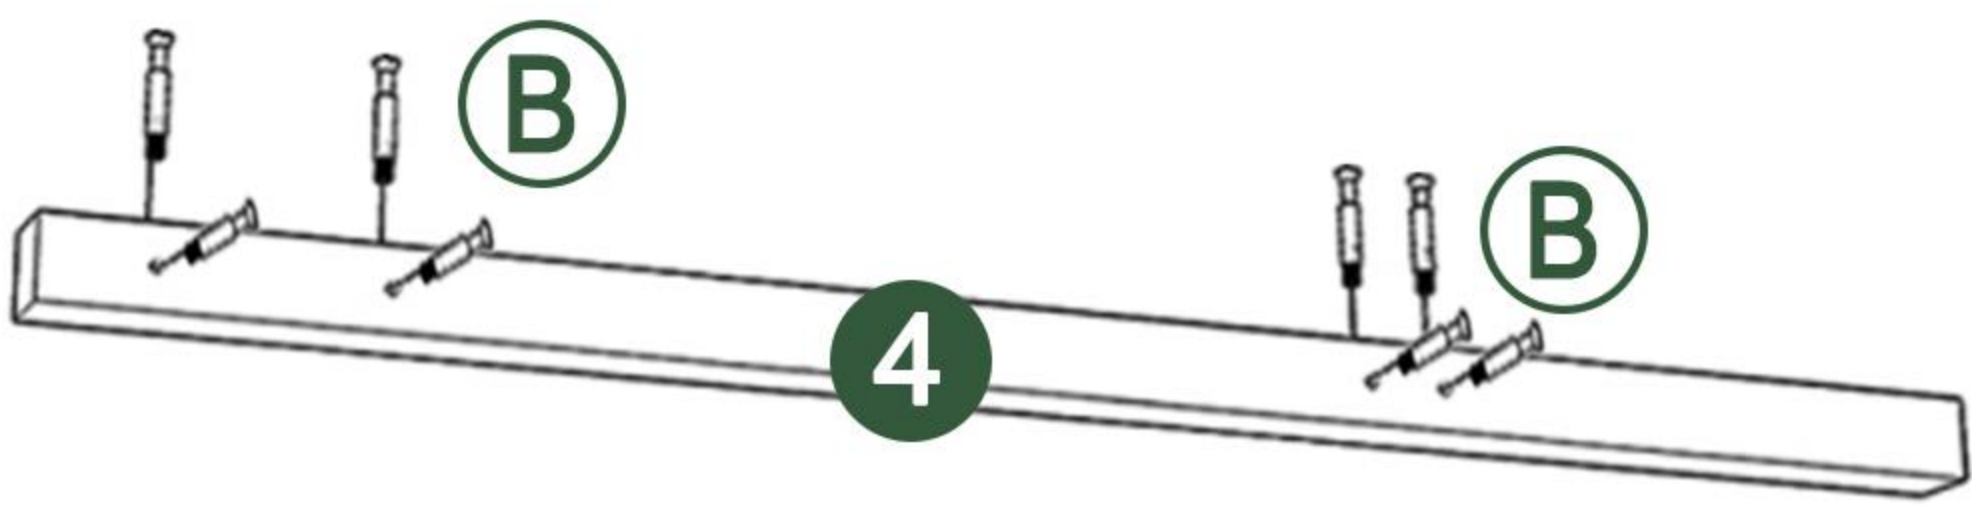


4.

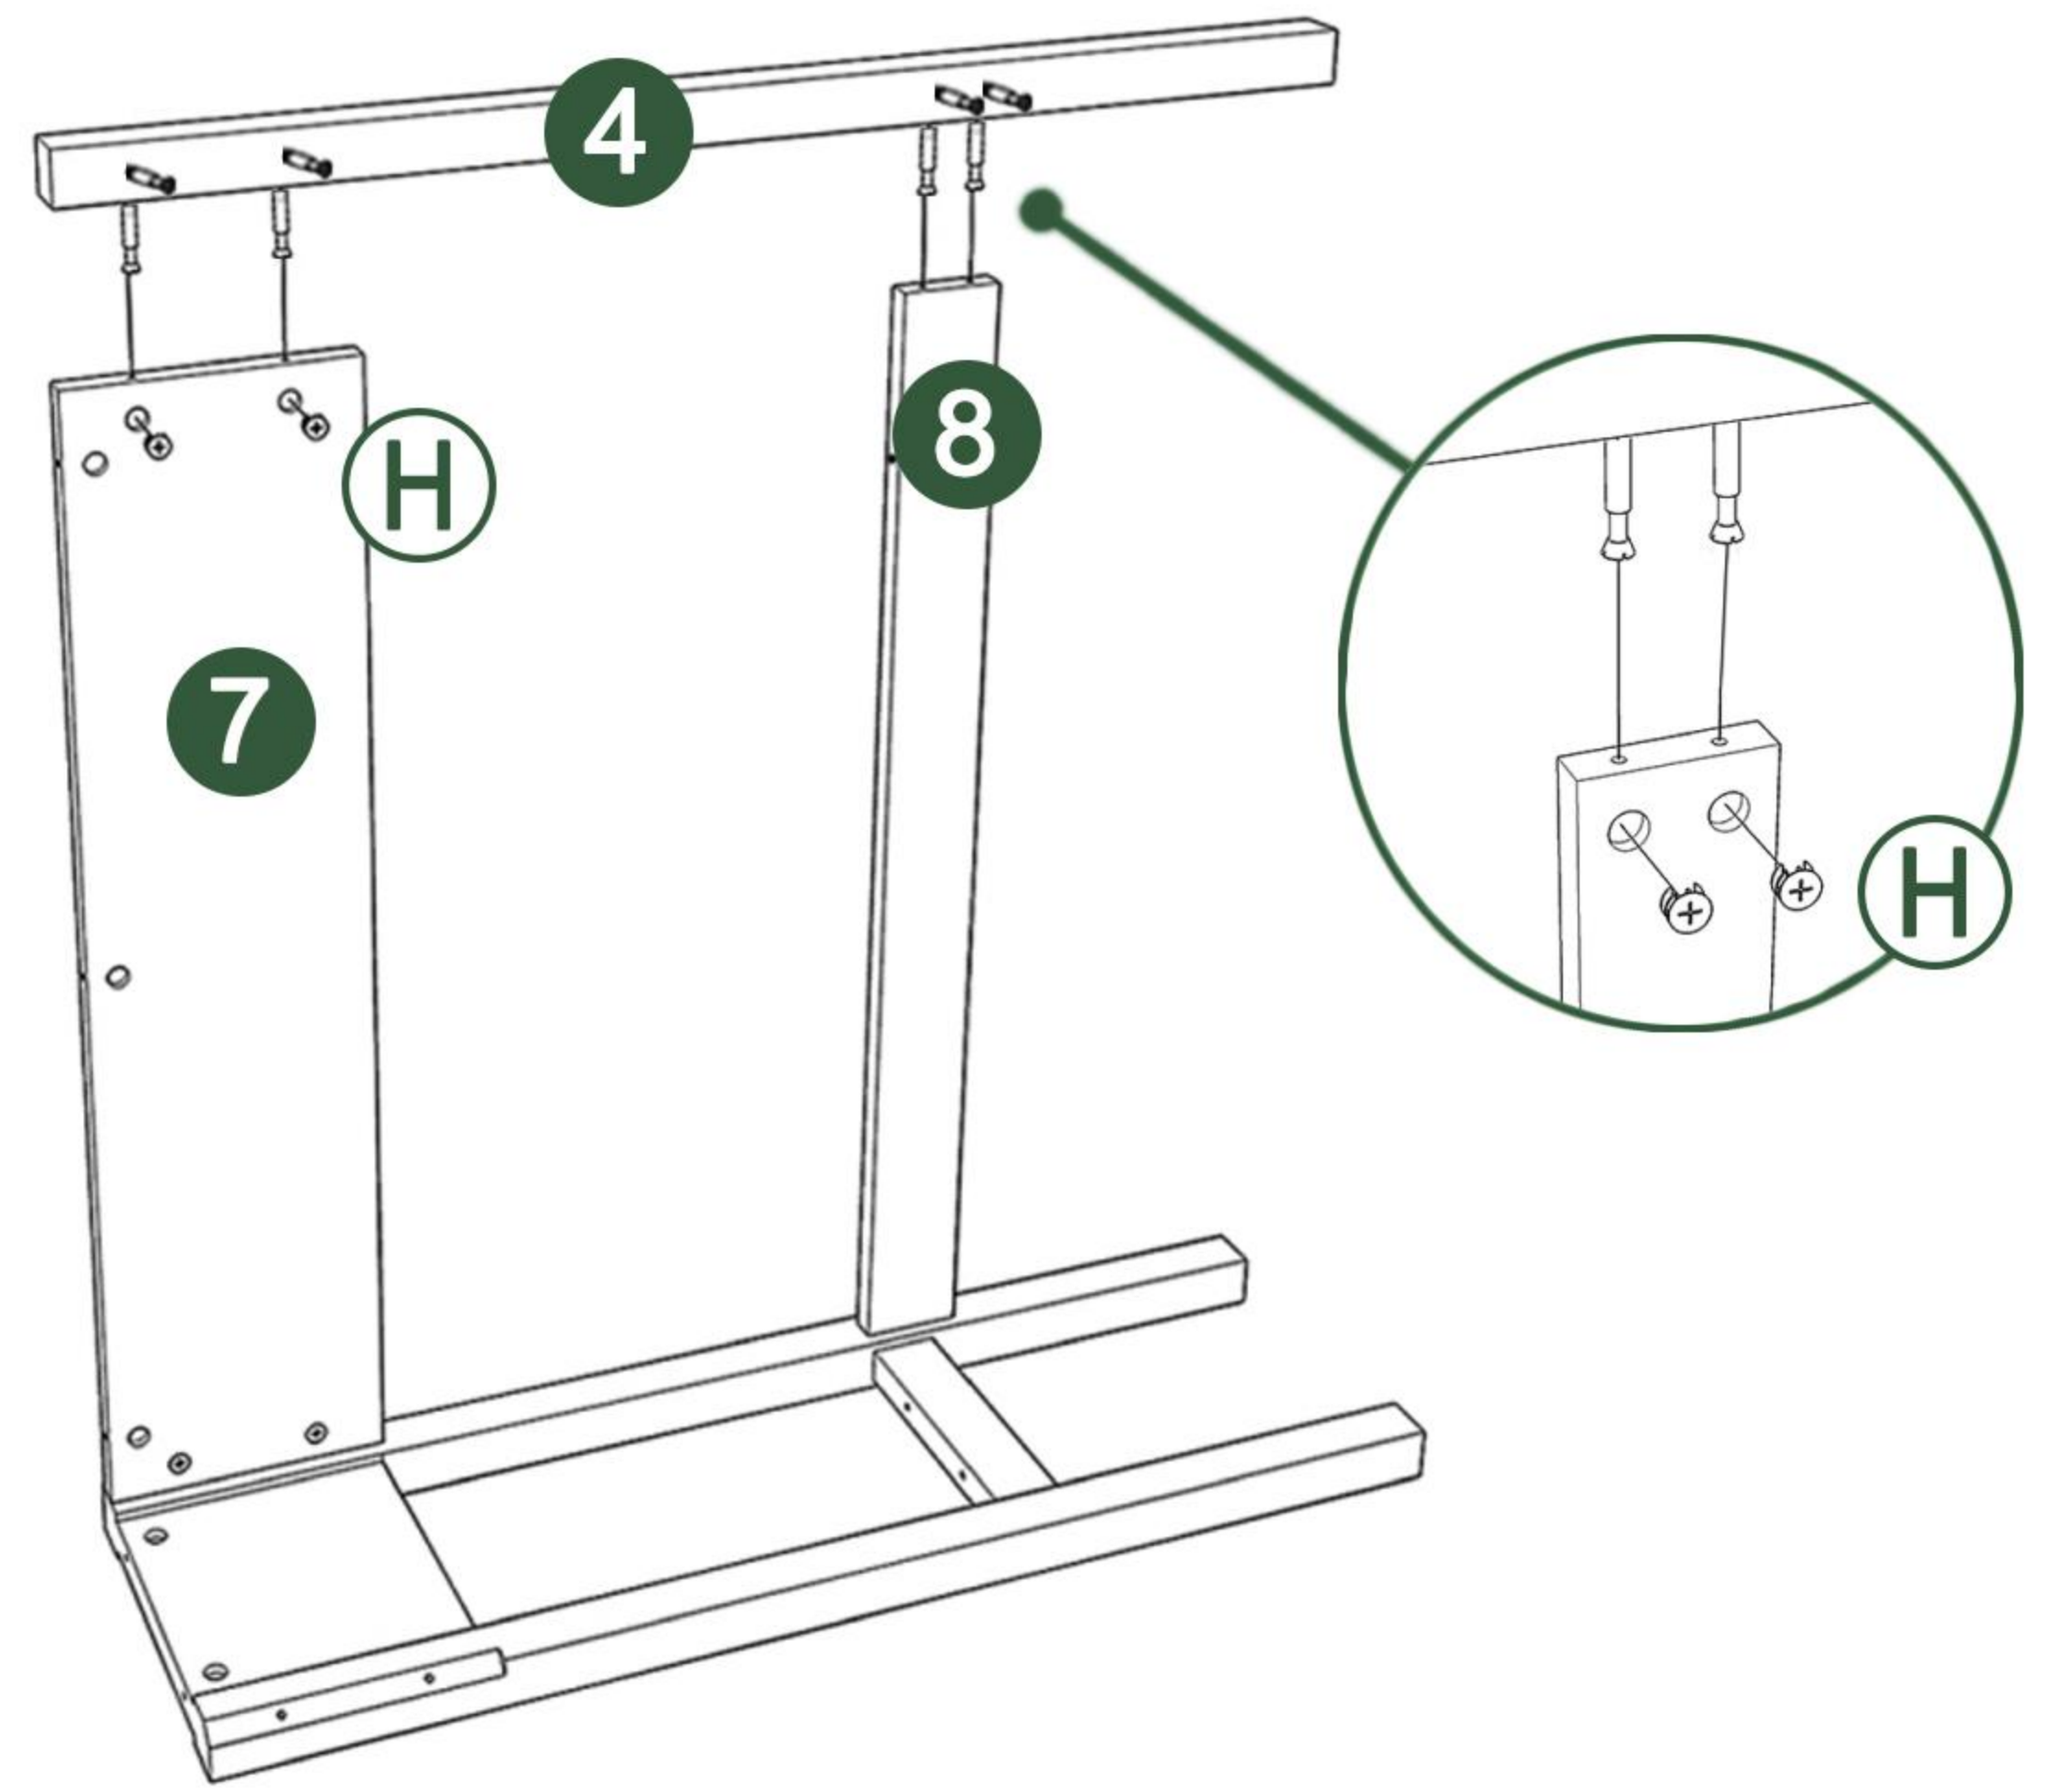


5.

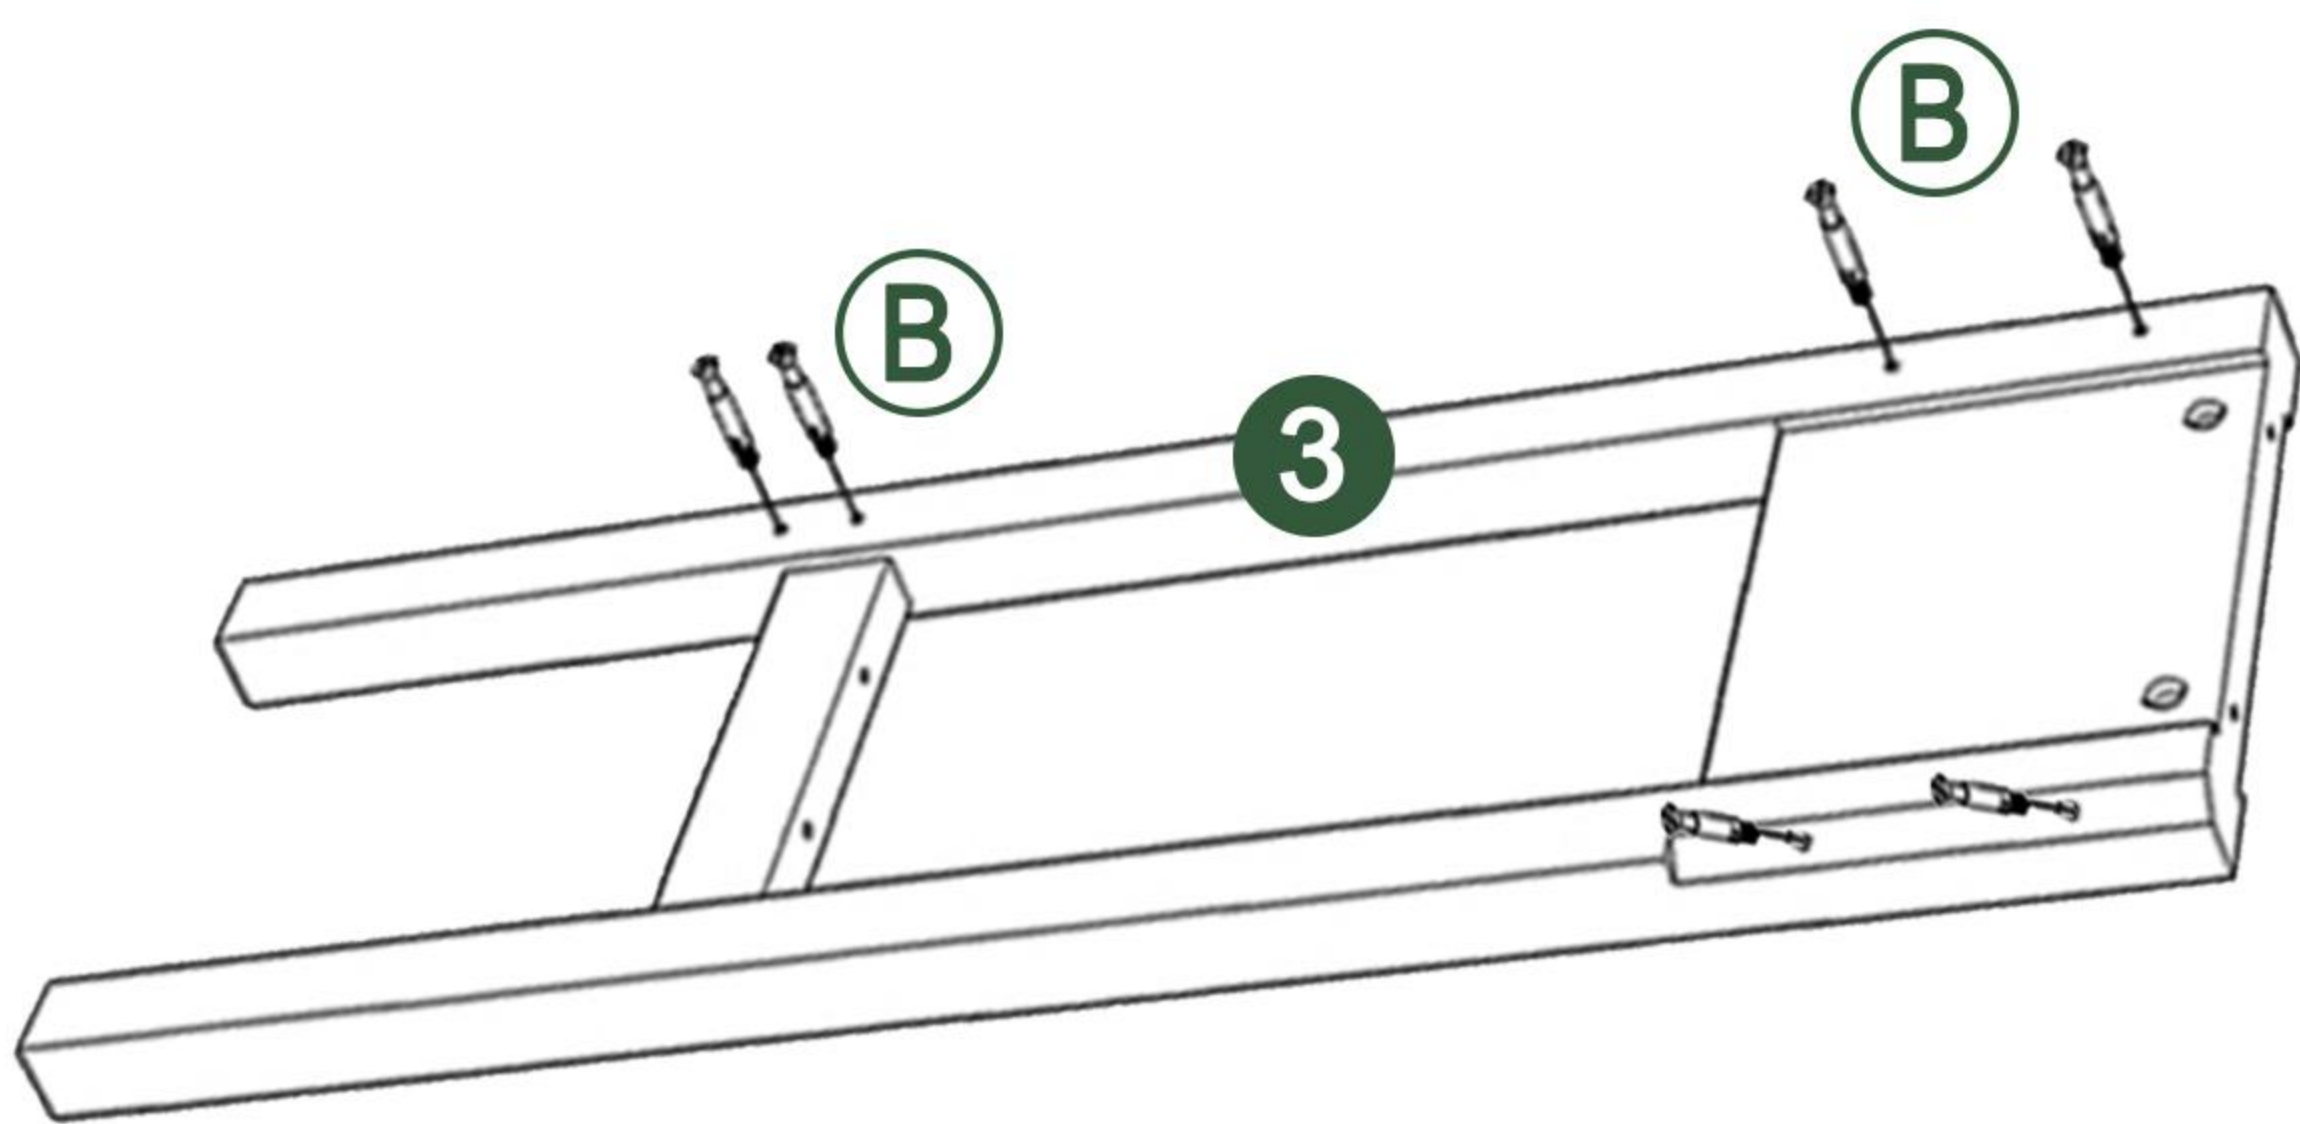


6.

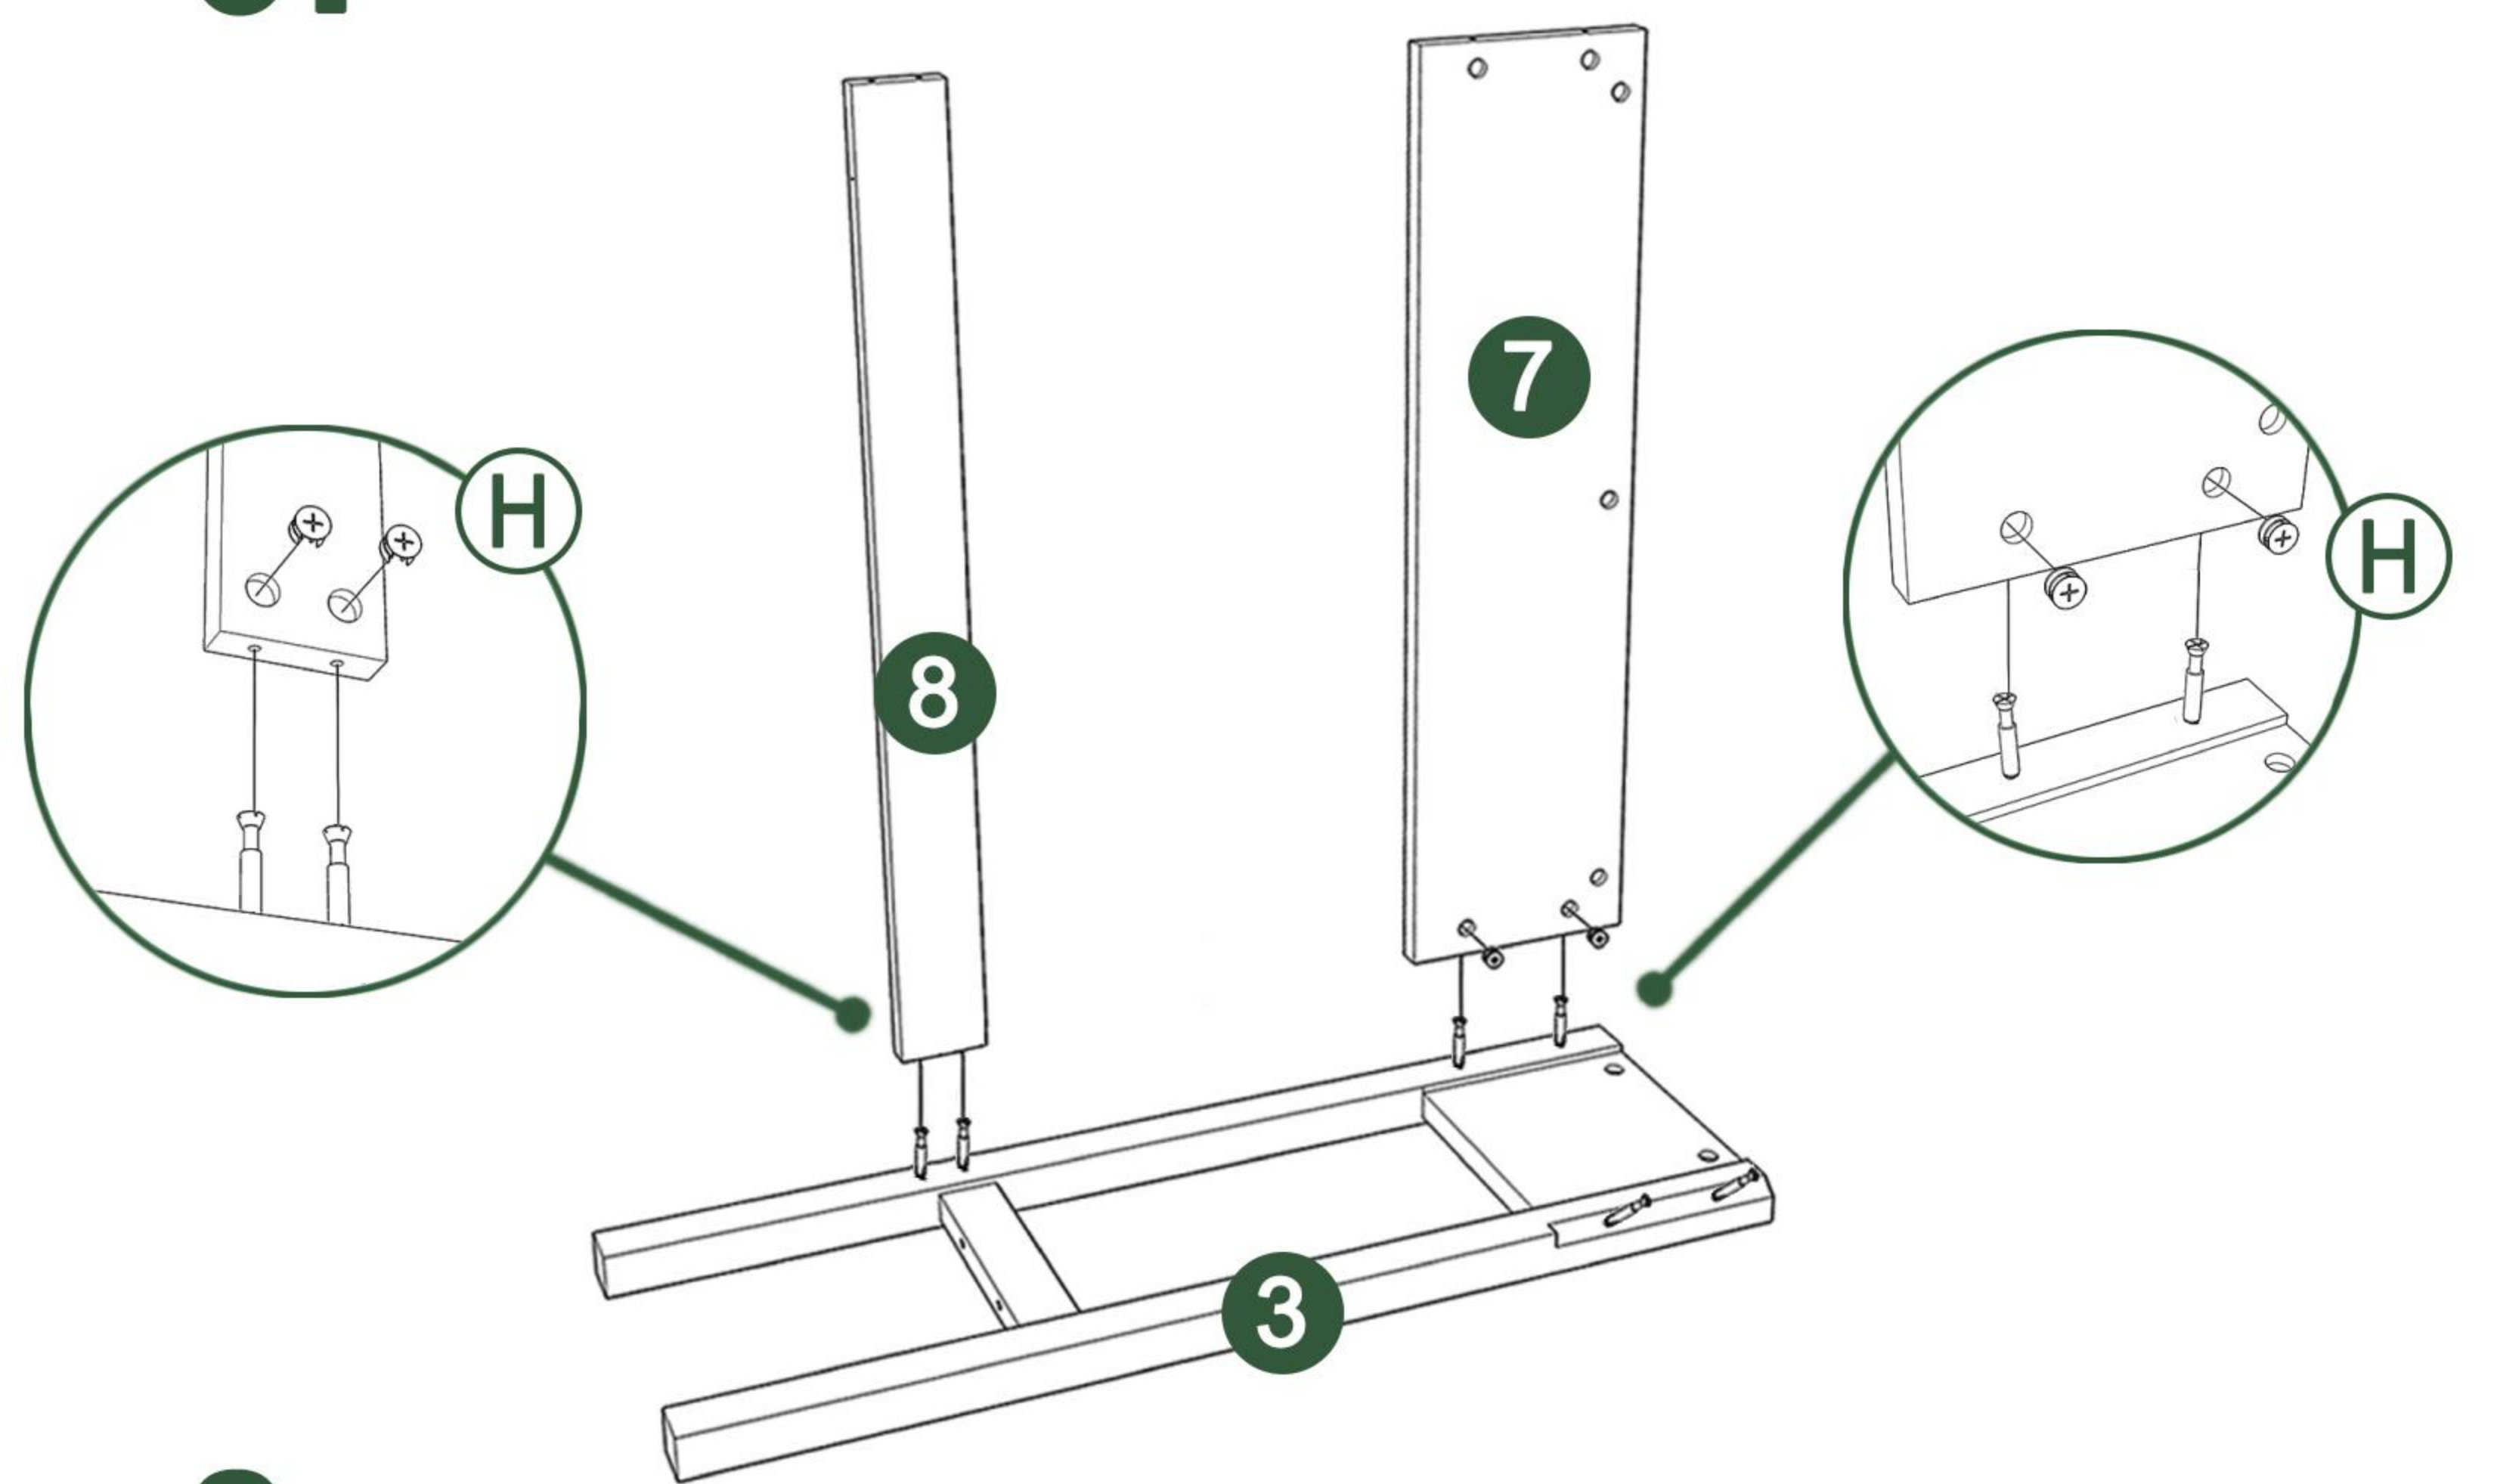


7.

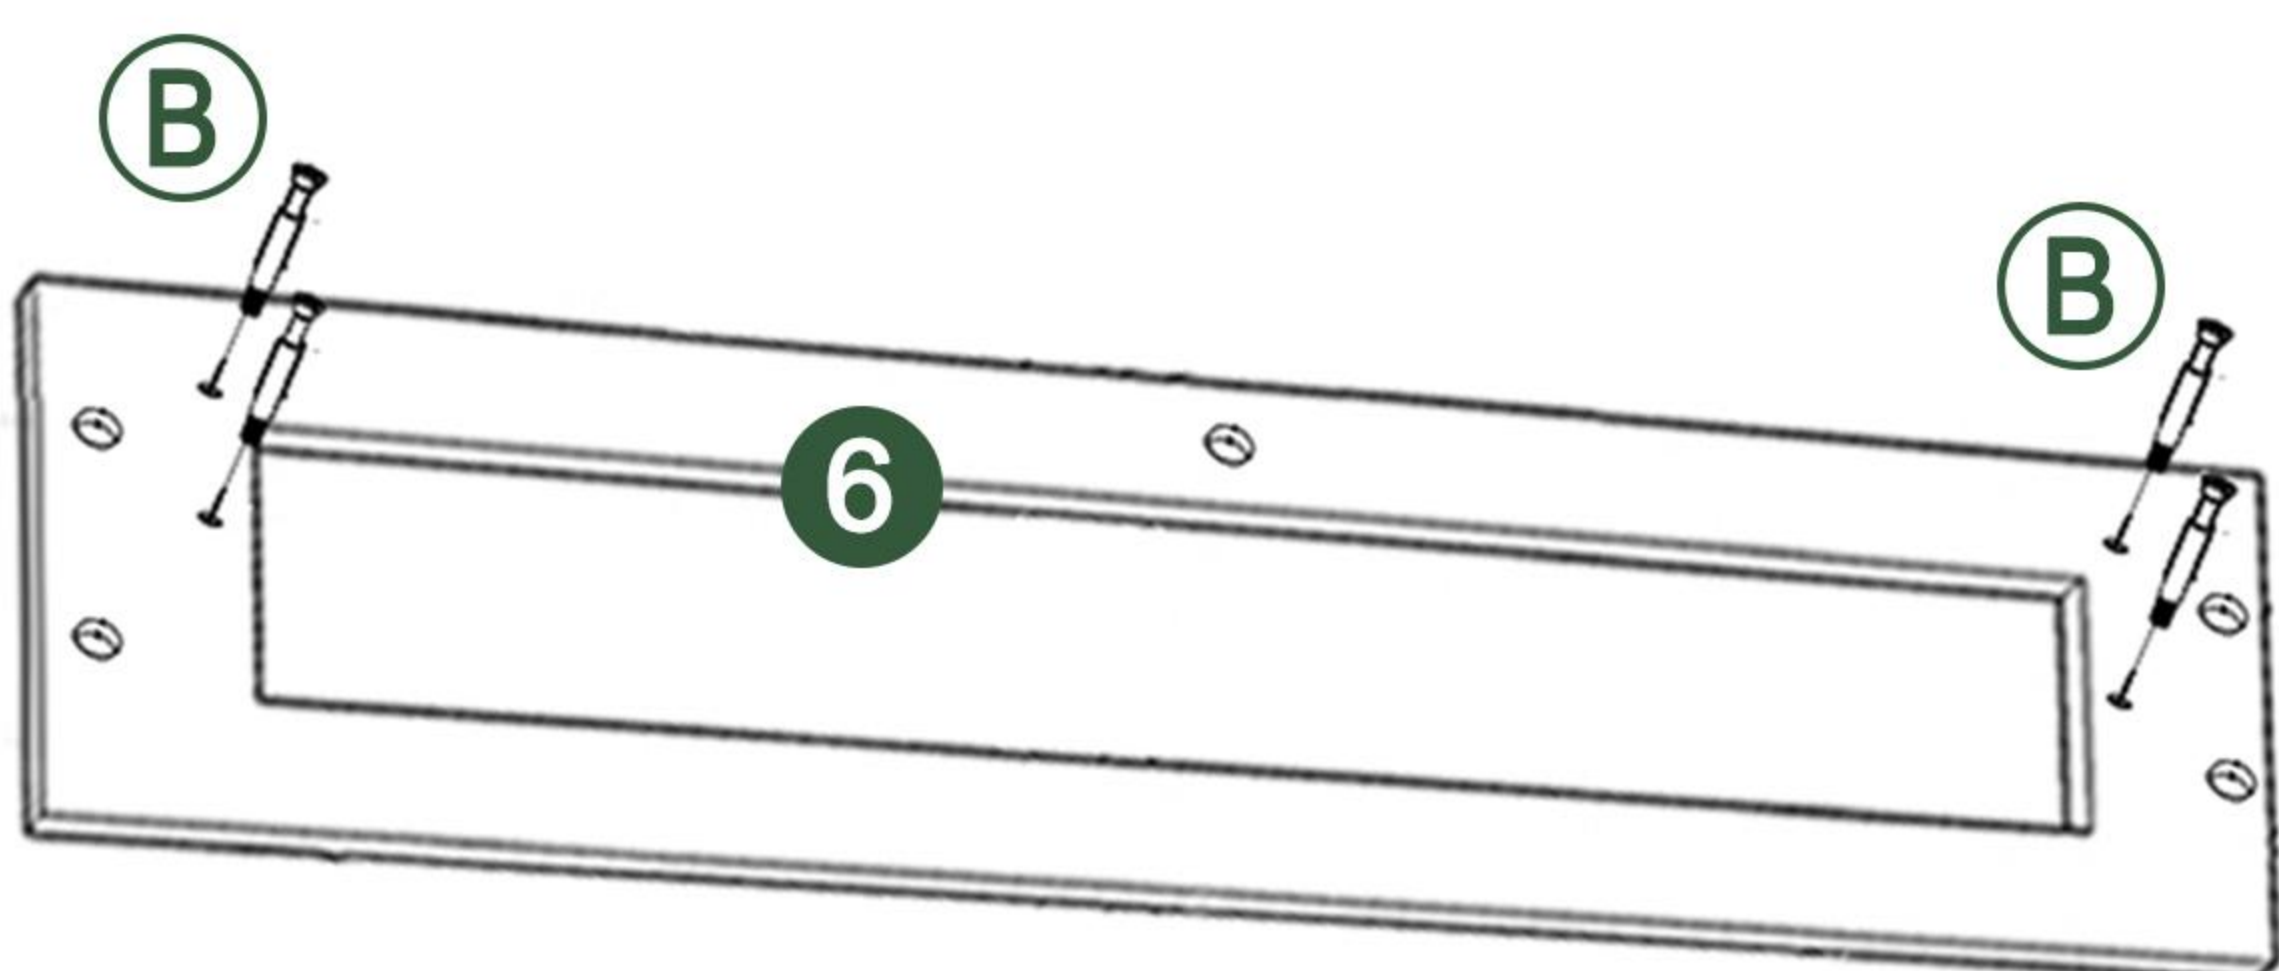


8.

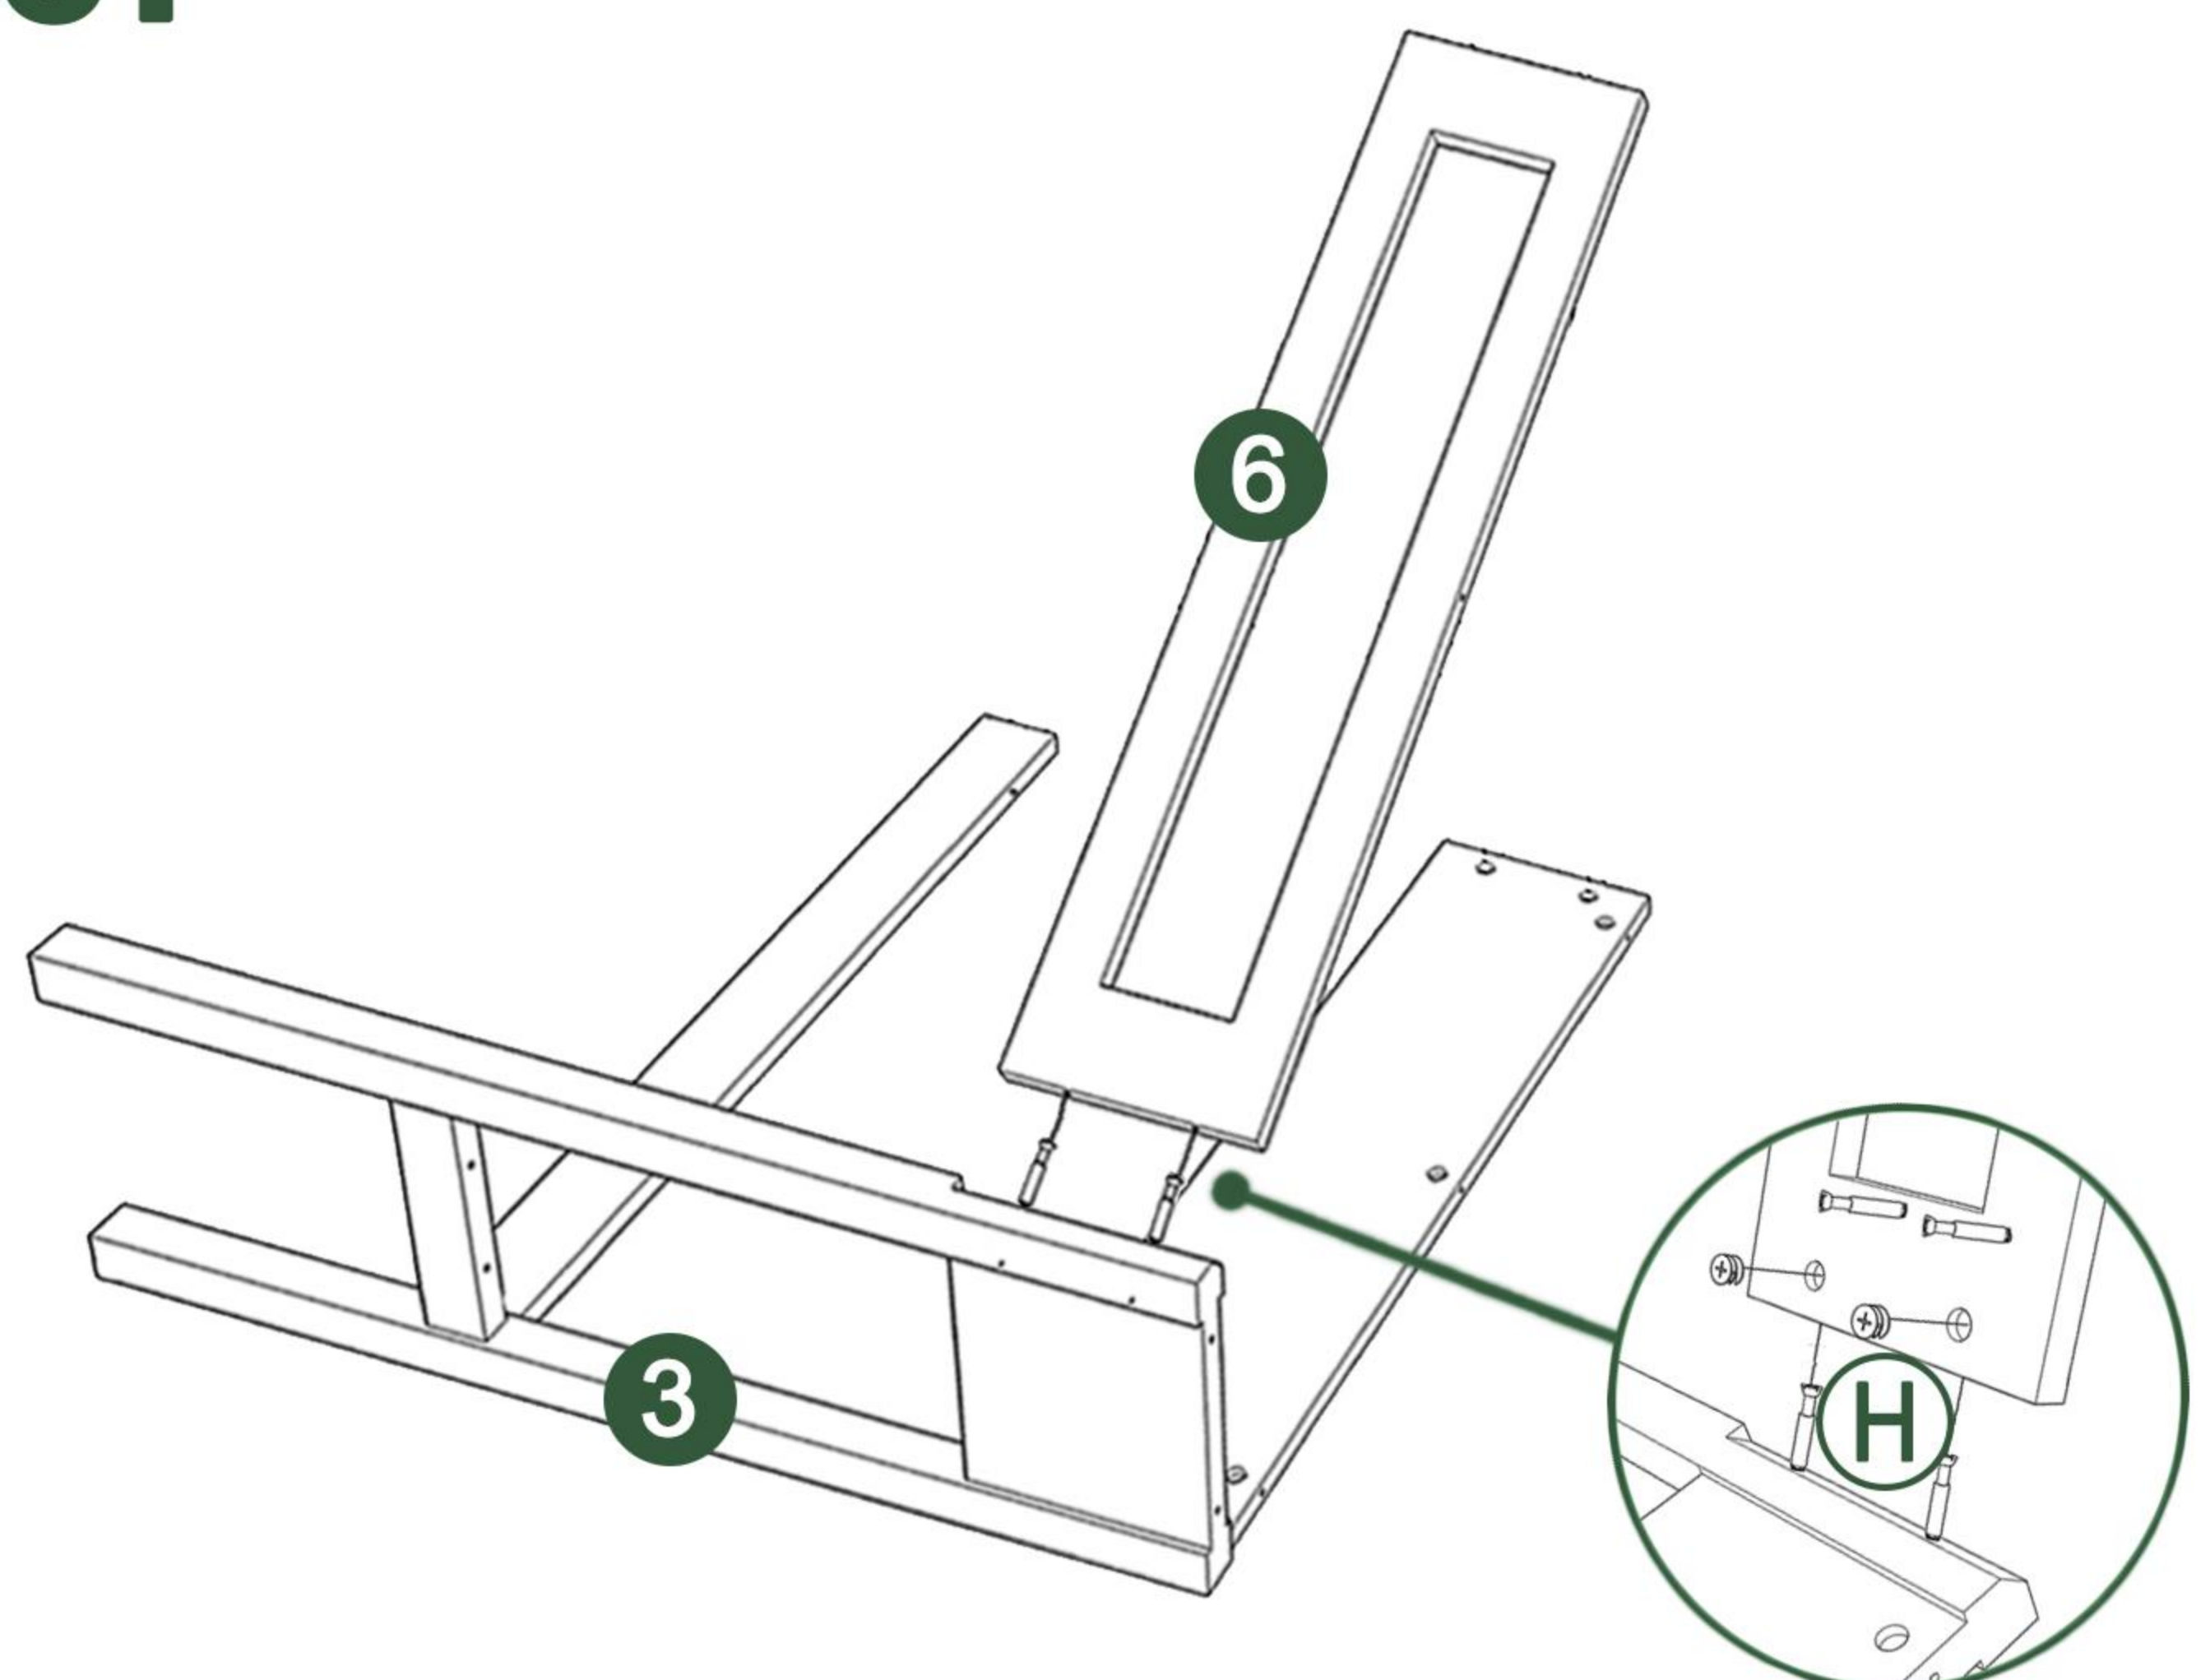


9.

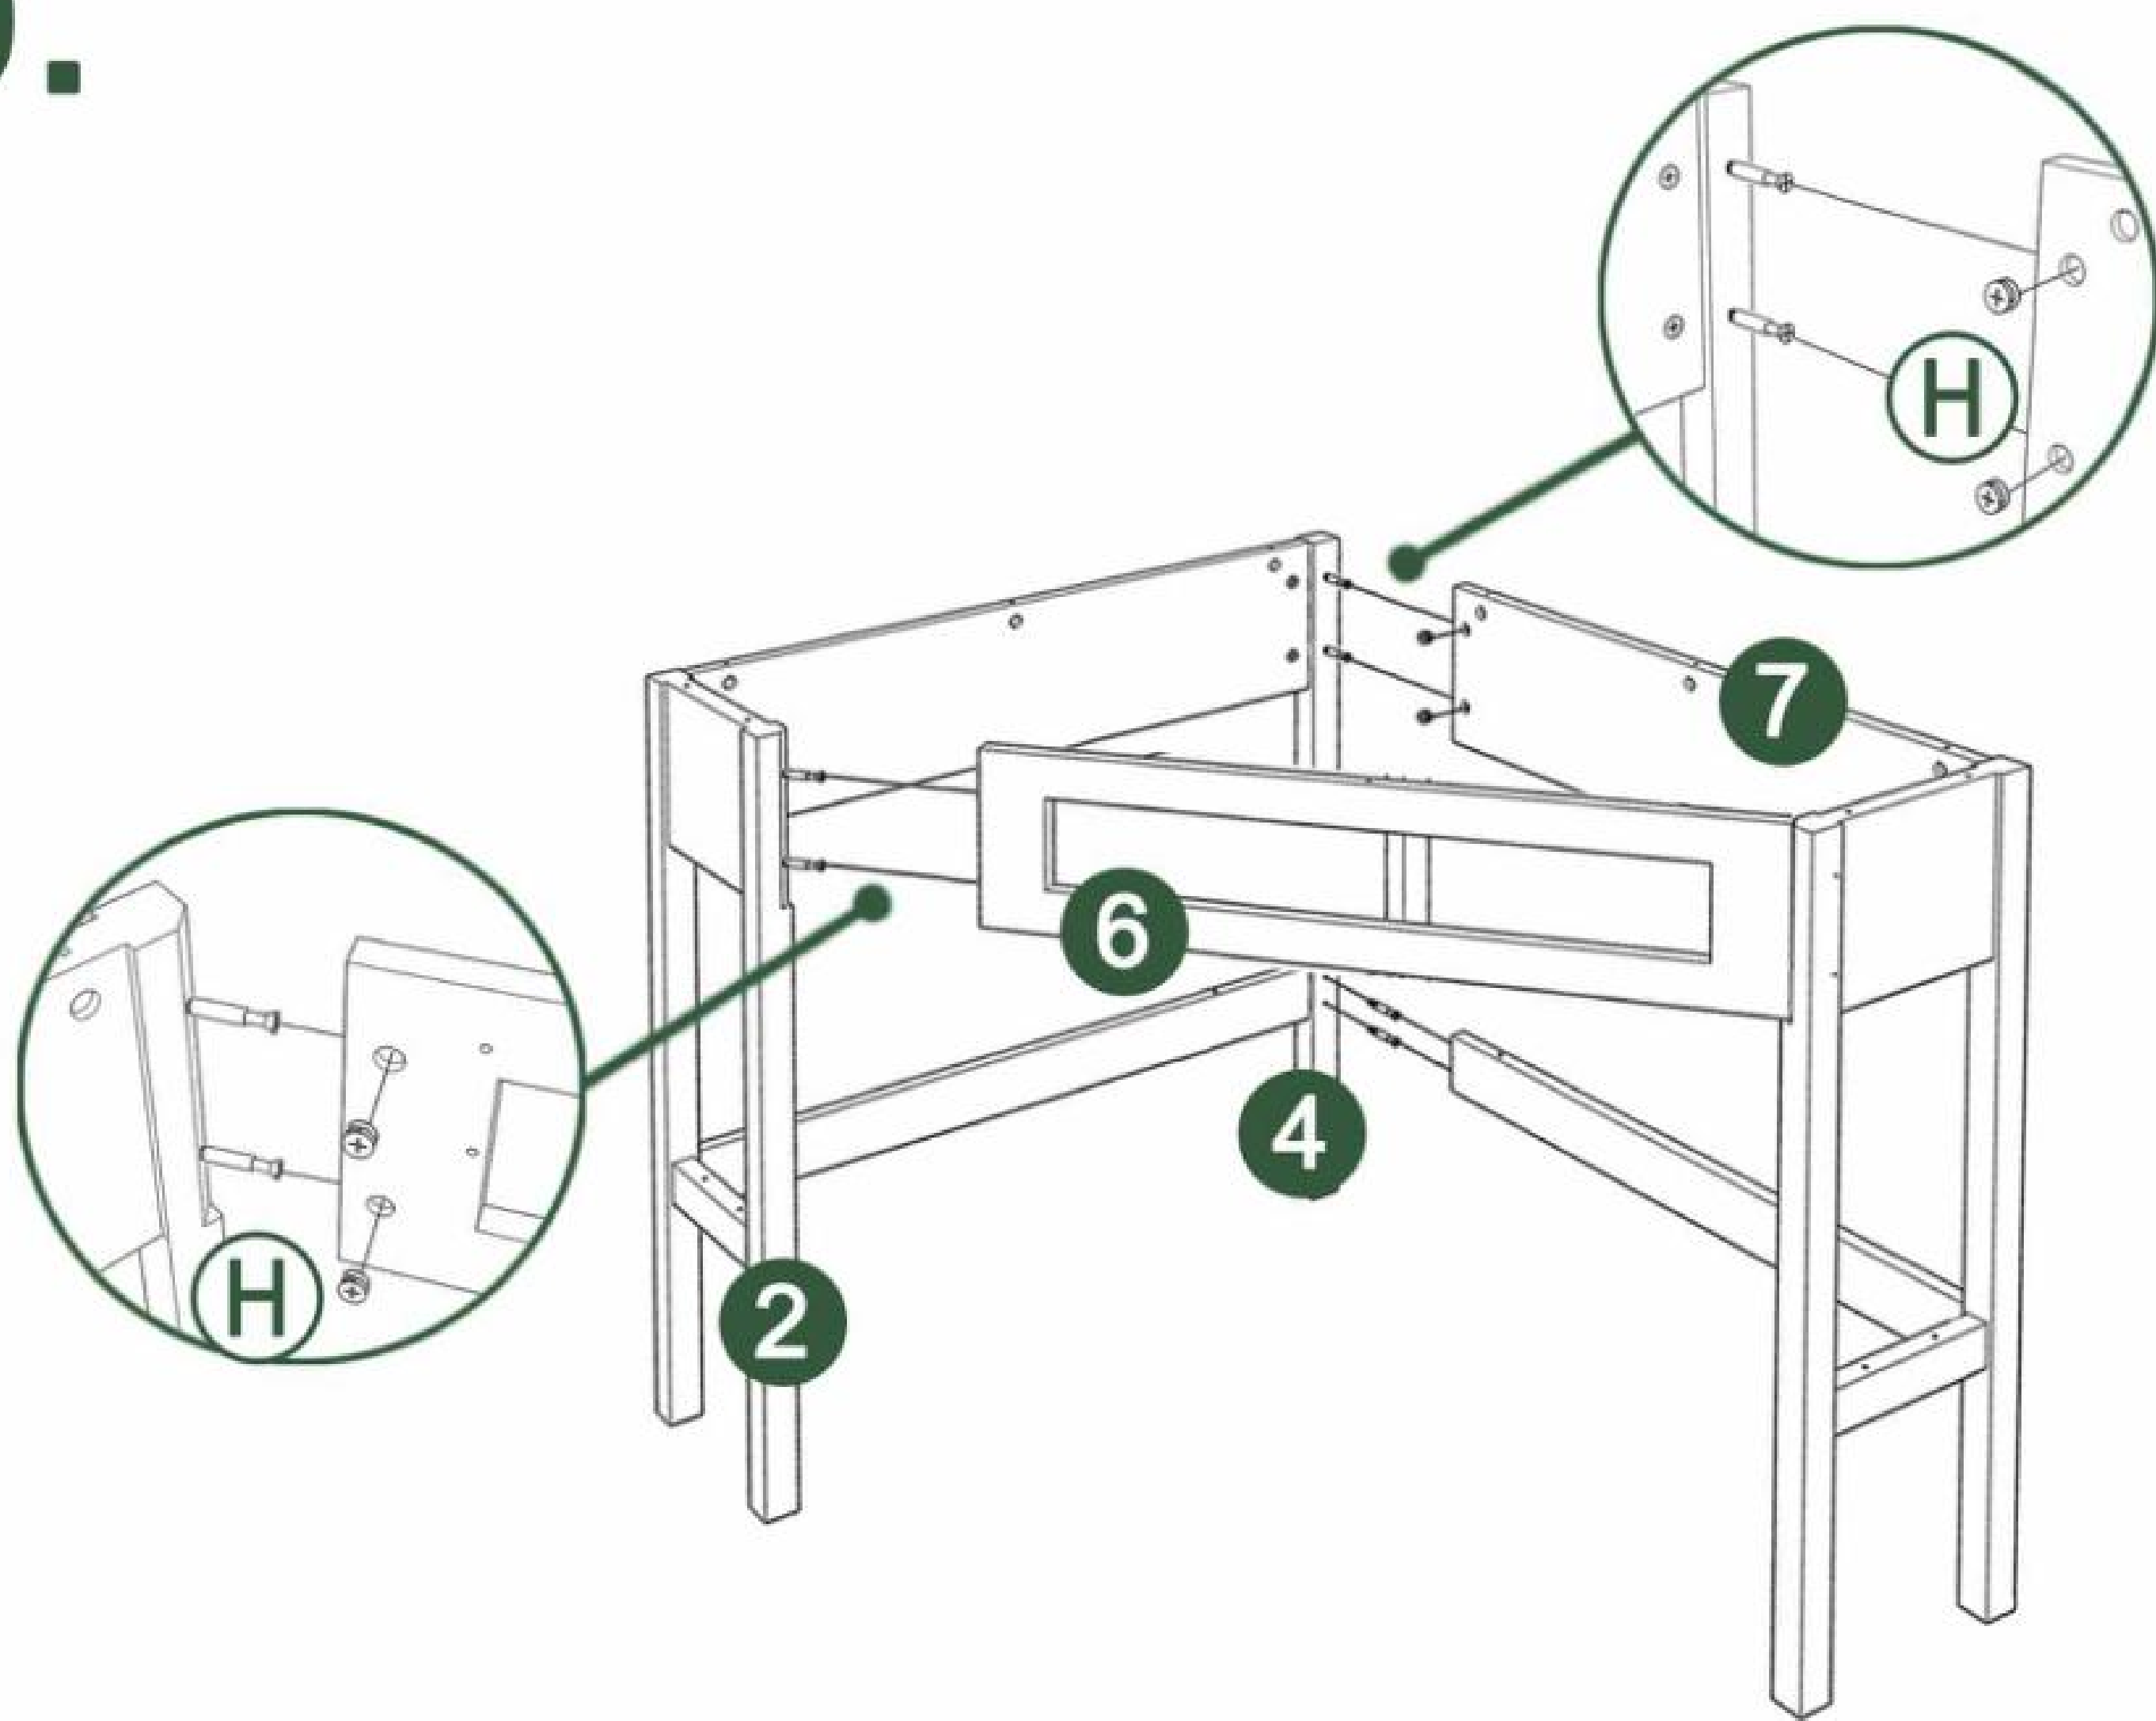


10.

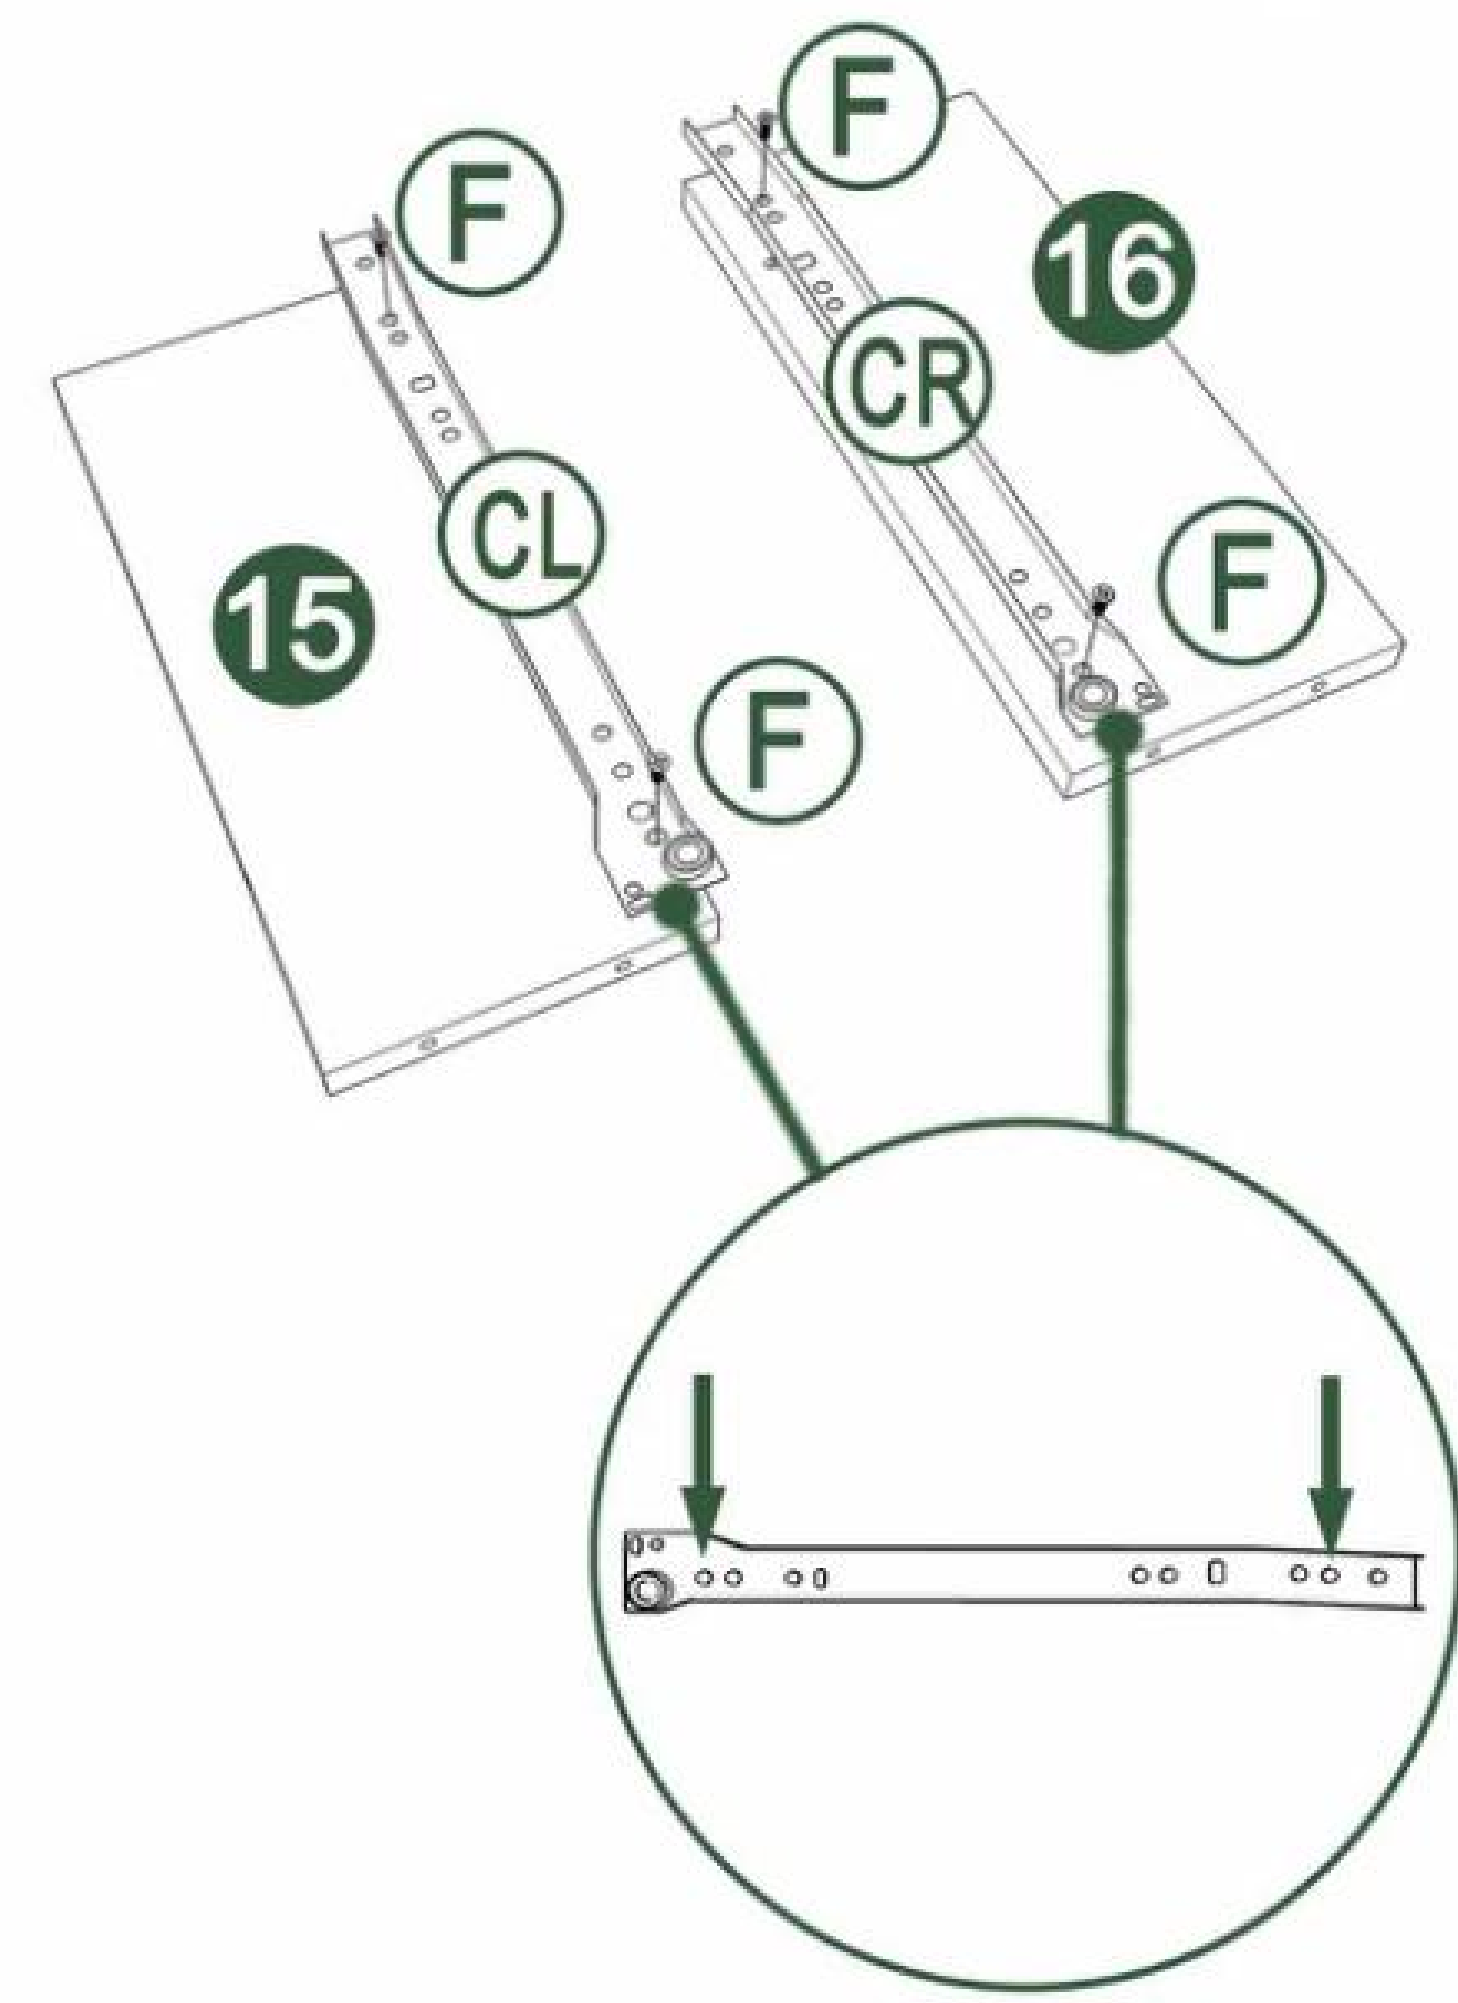


11.

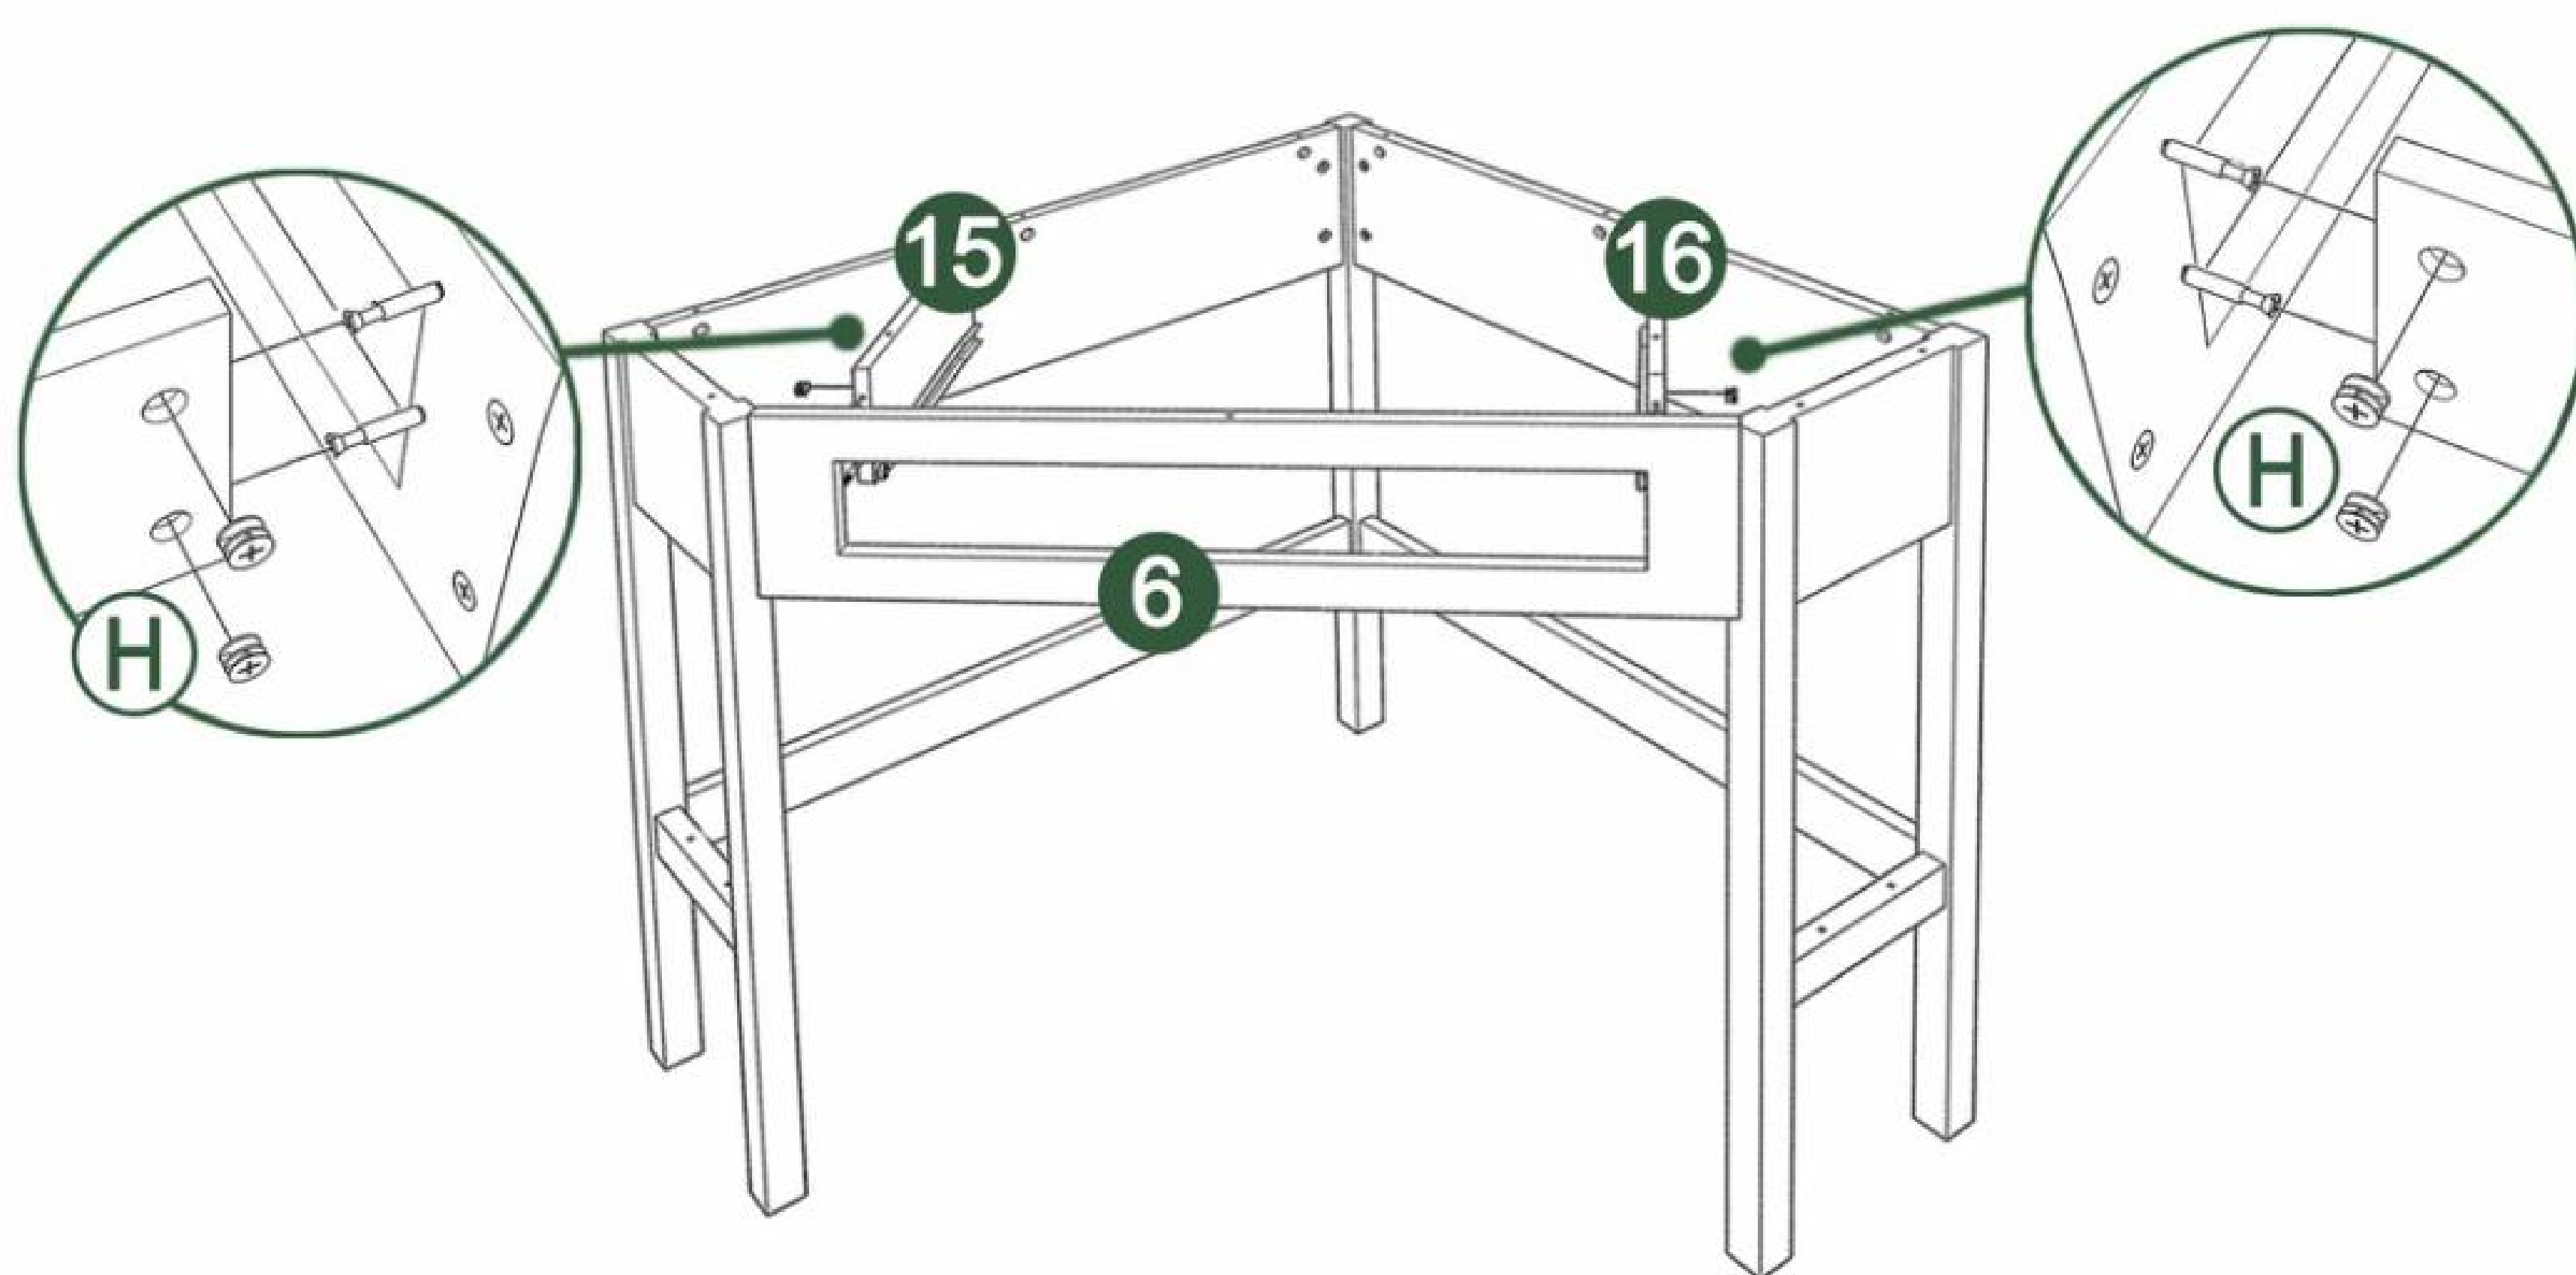


12.

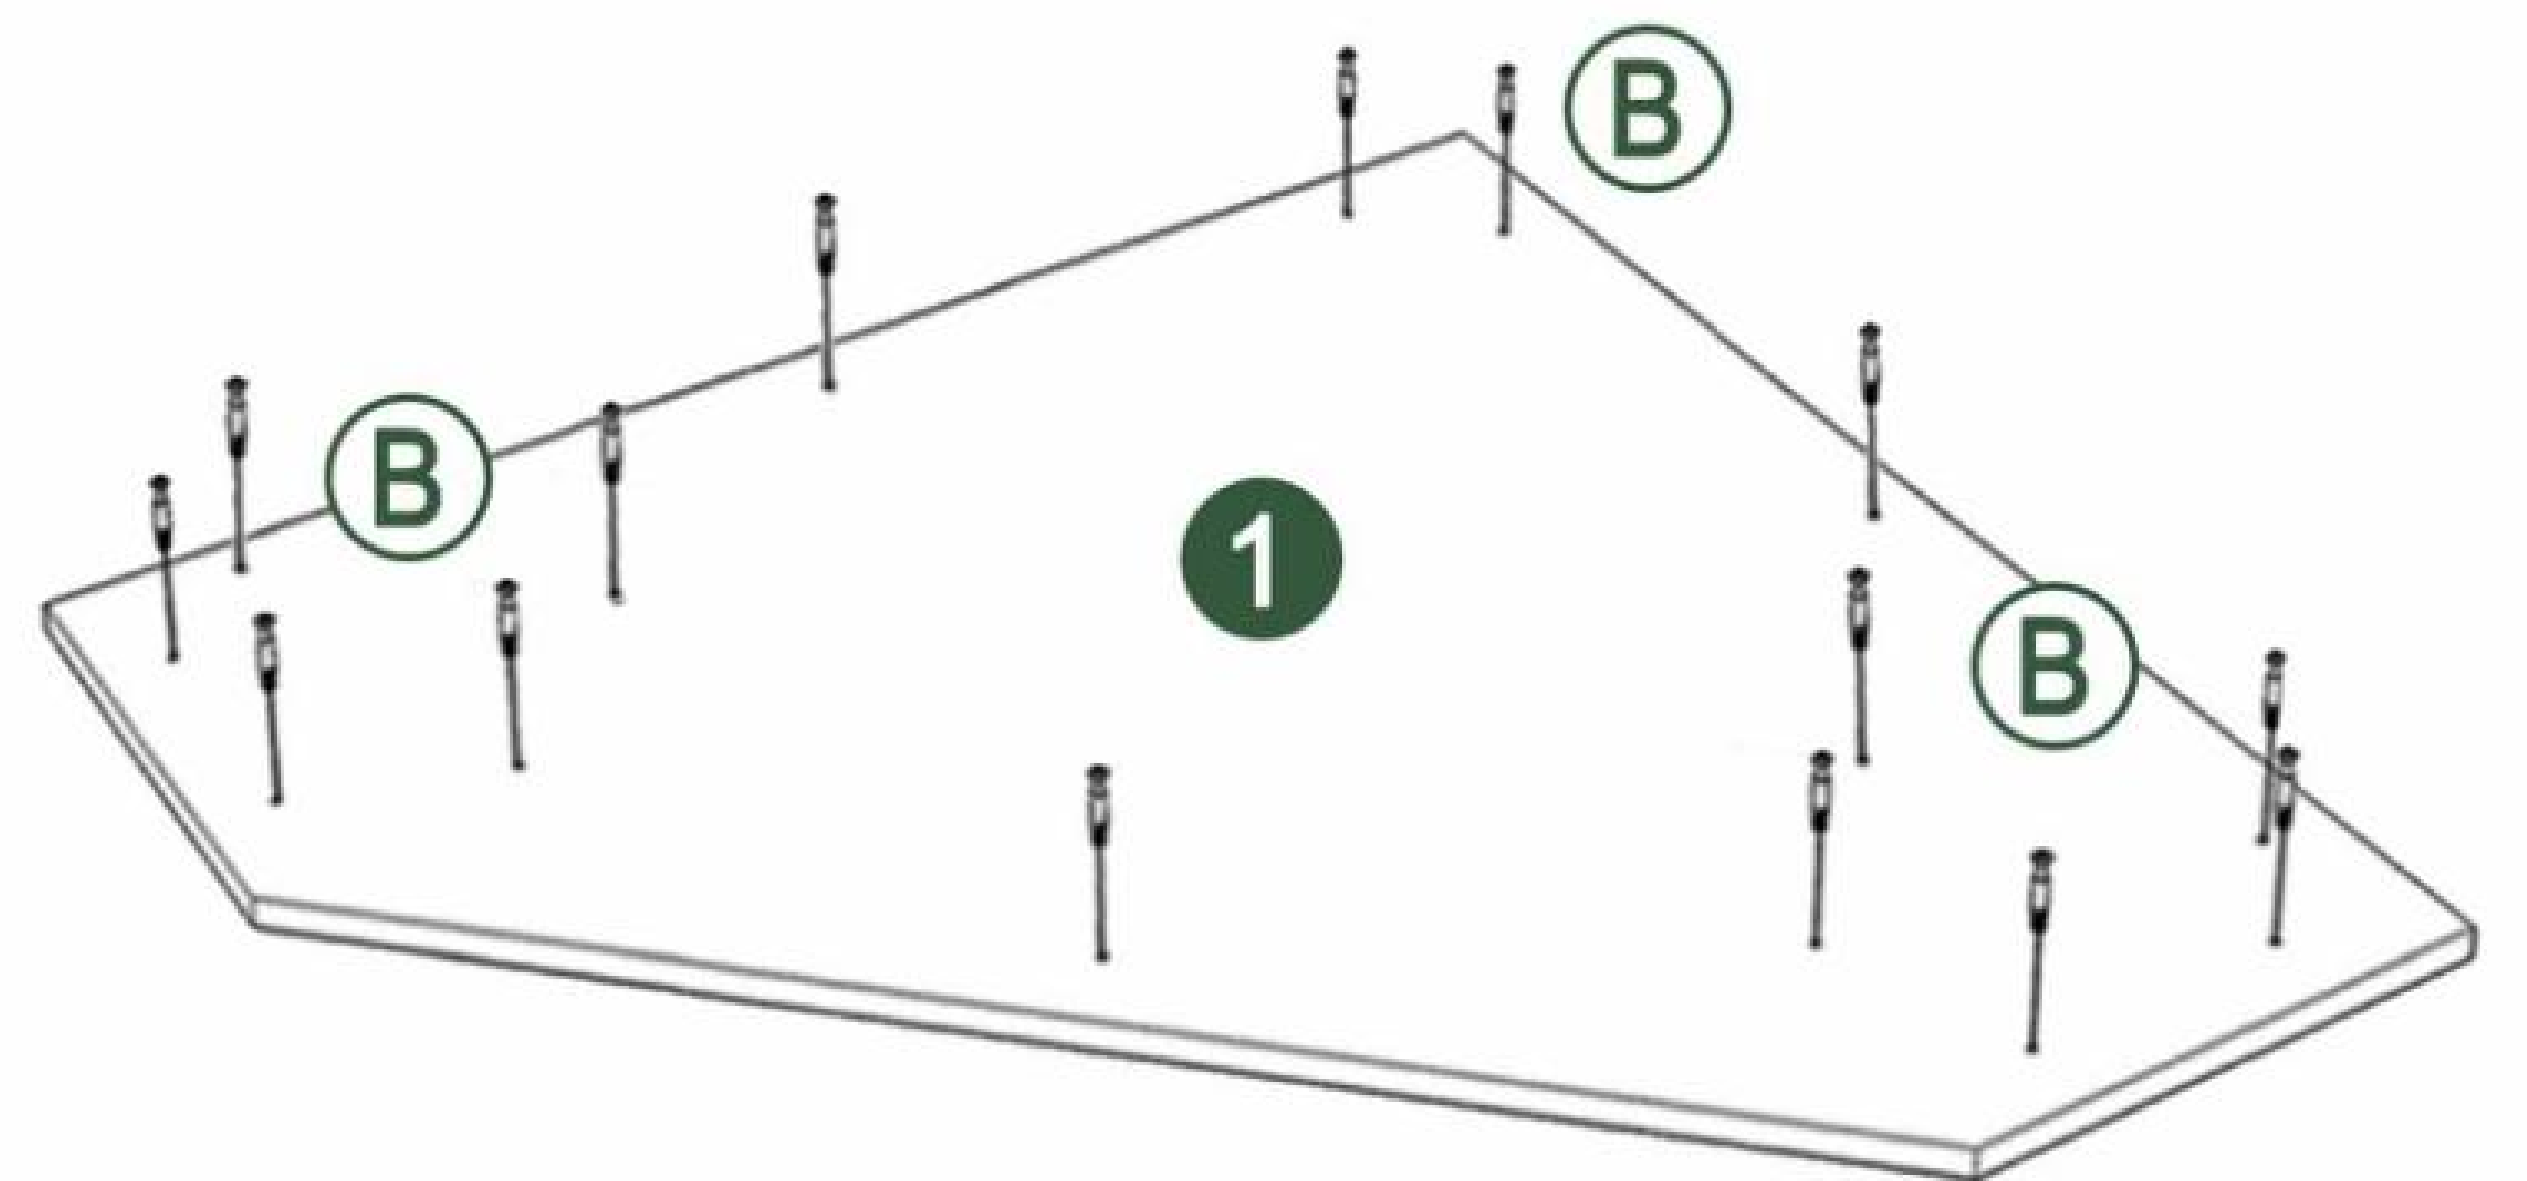


13.

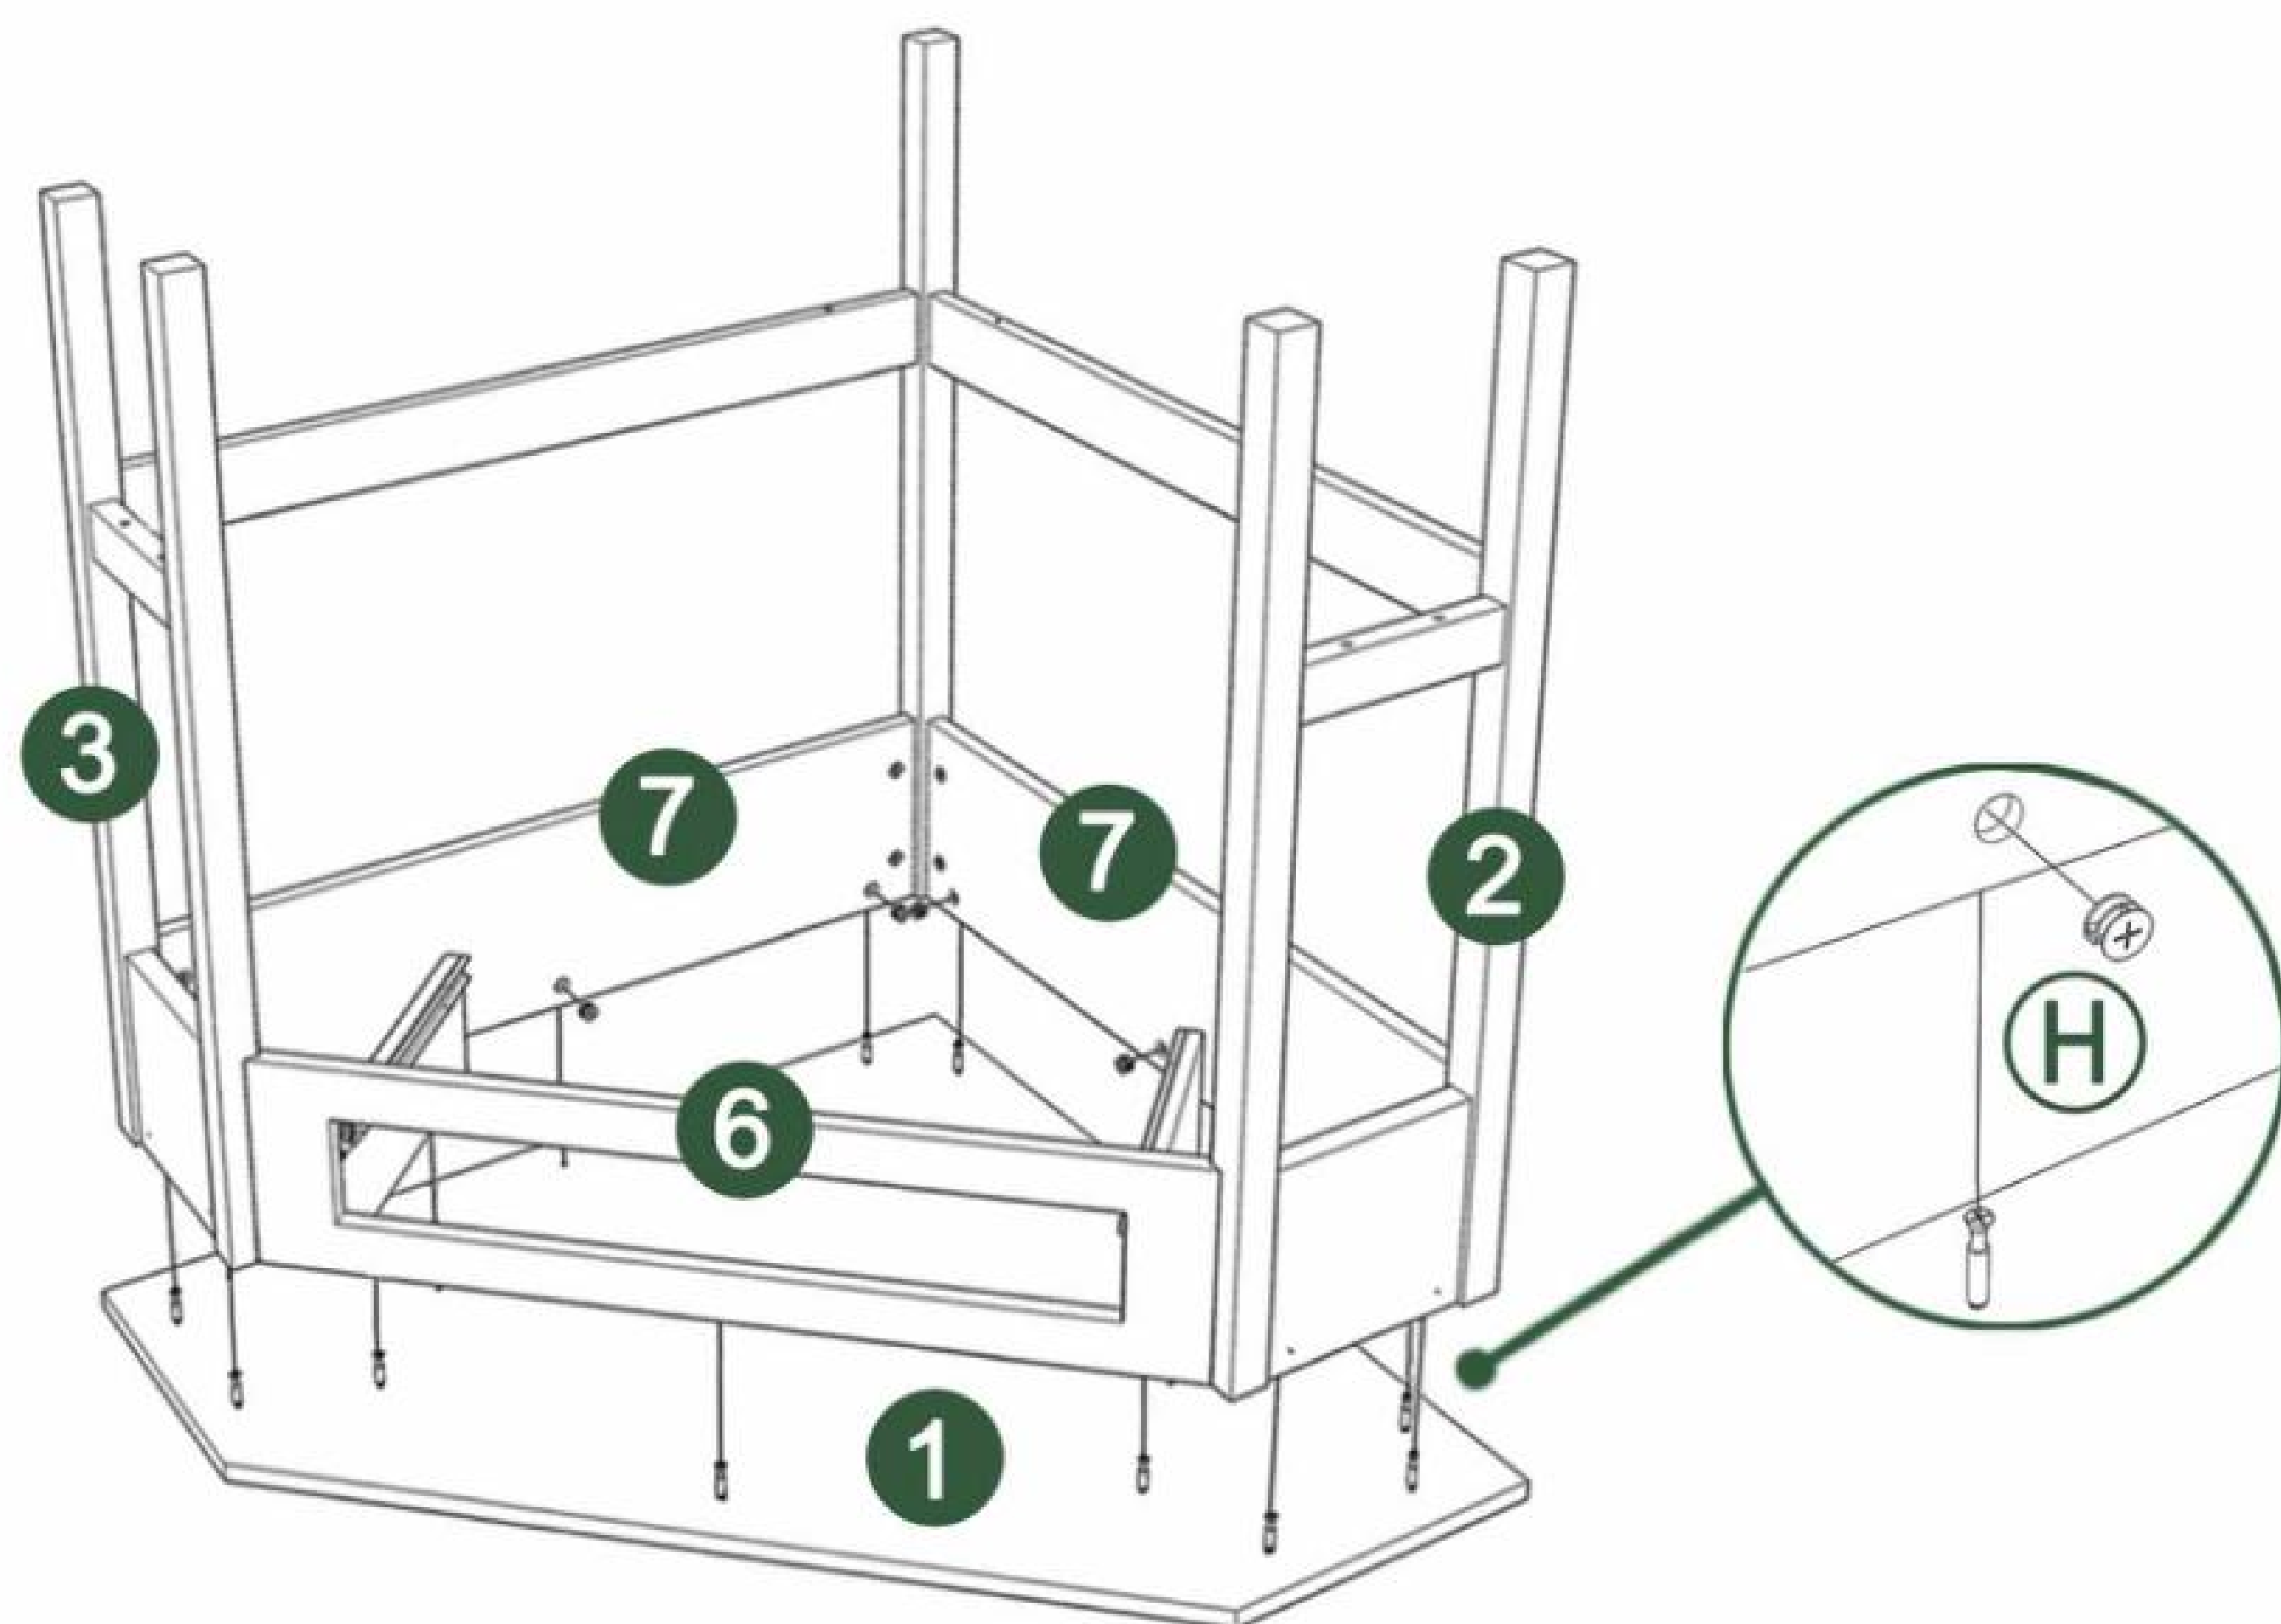


14.

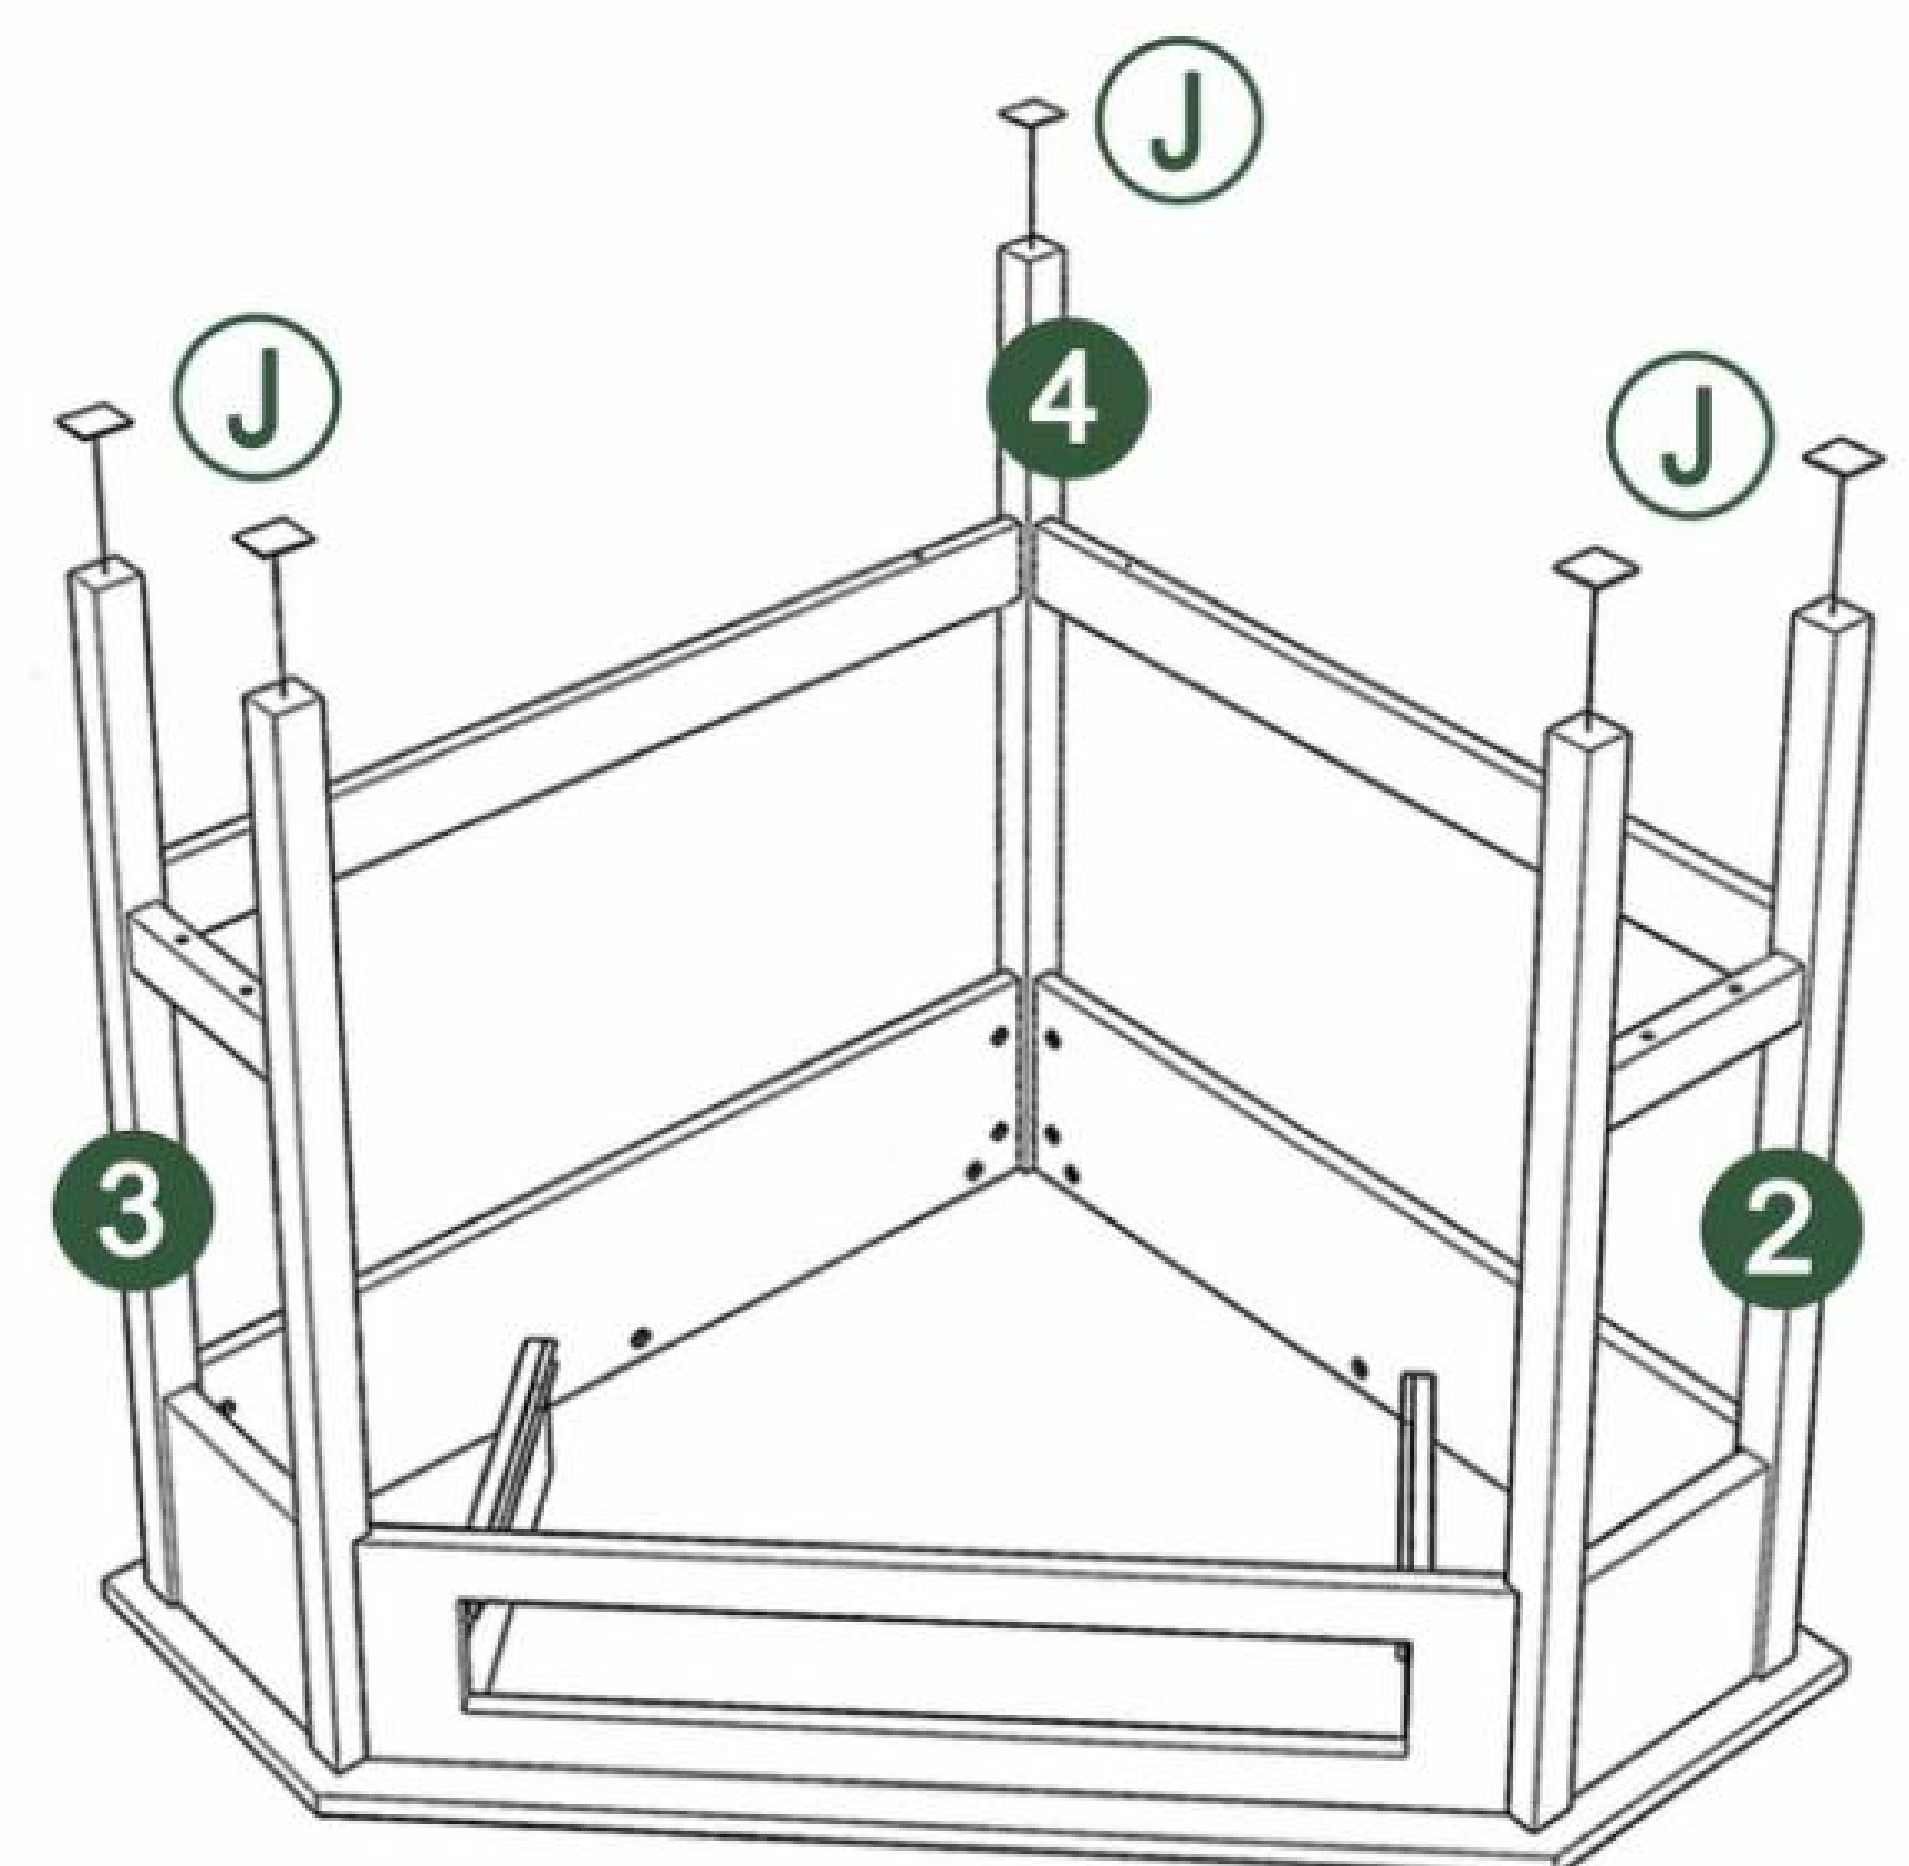


15.

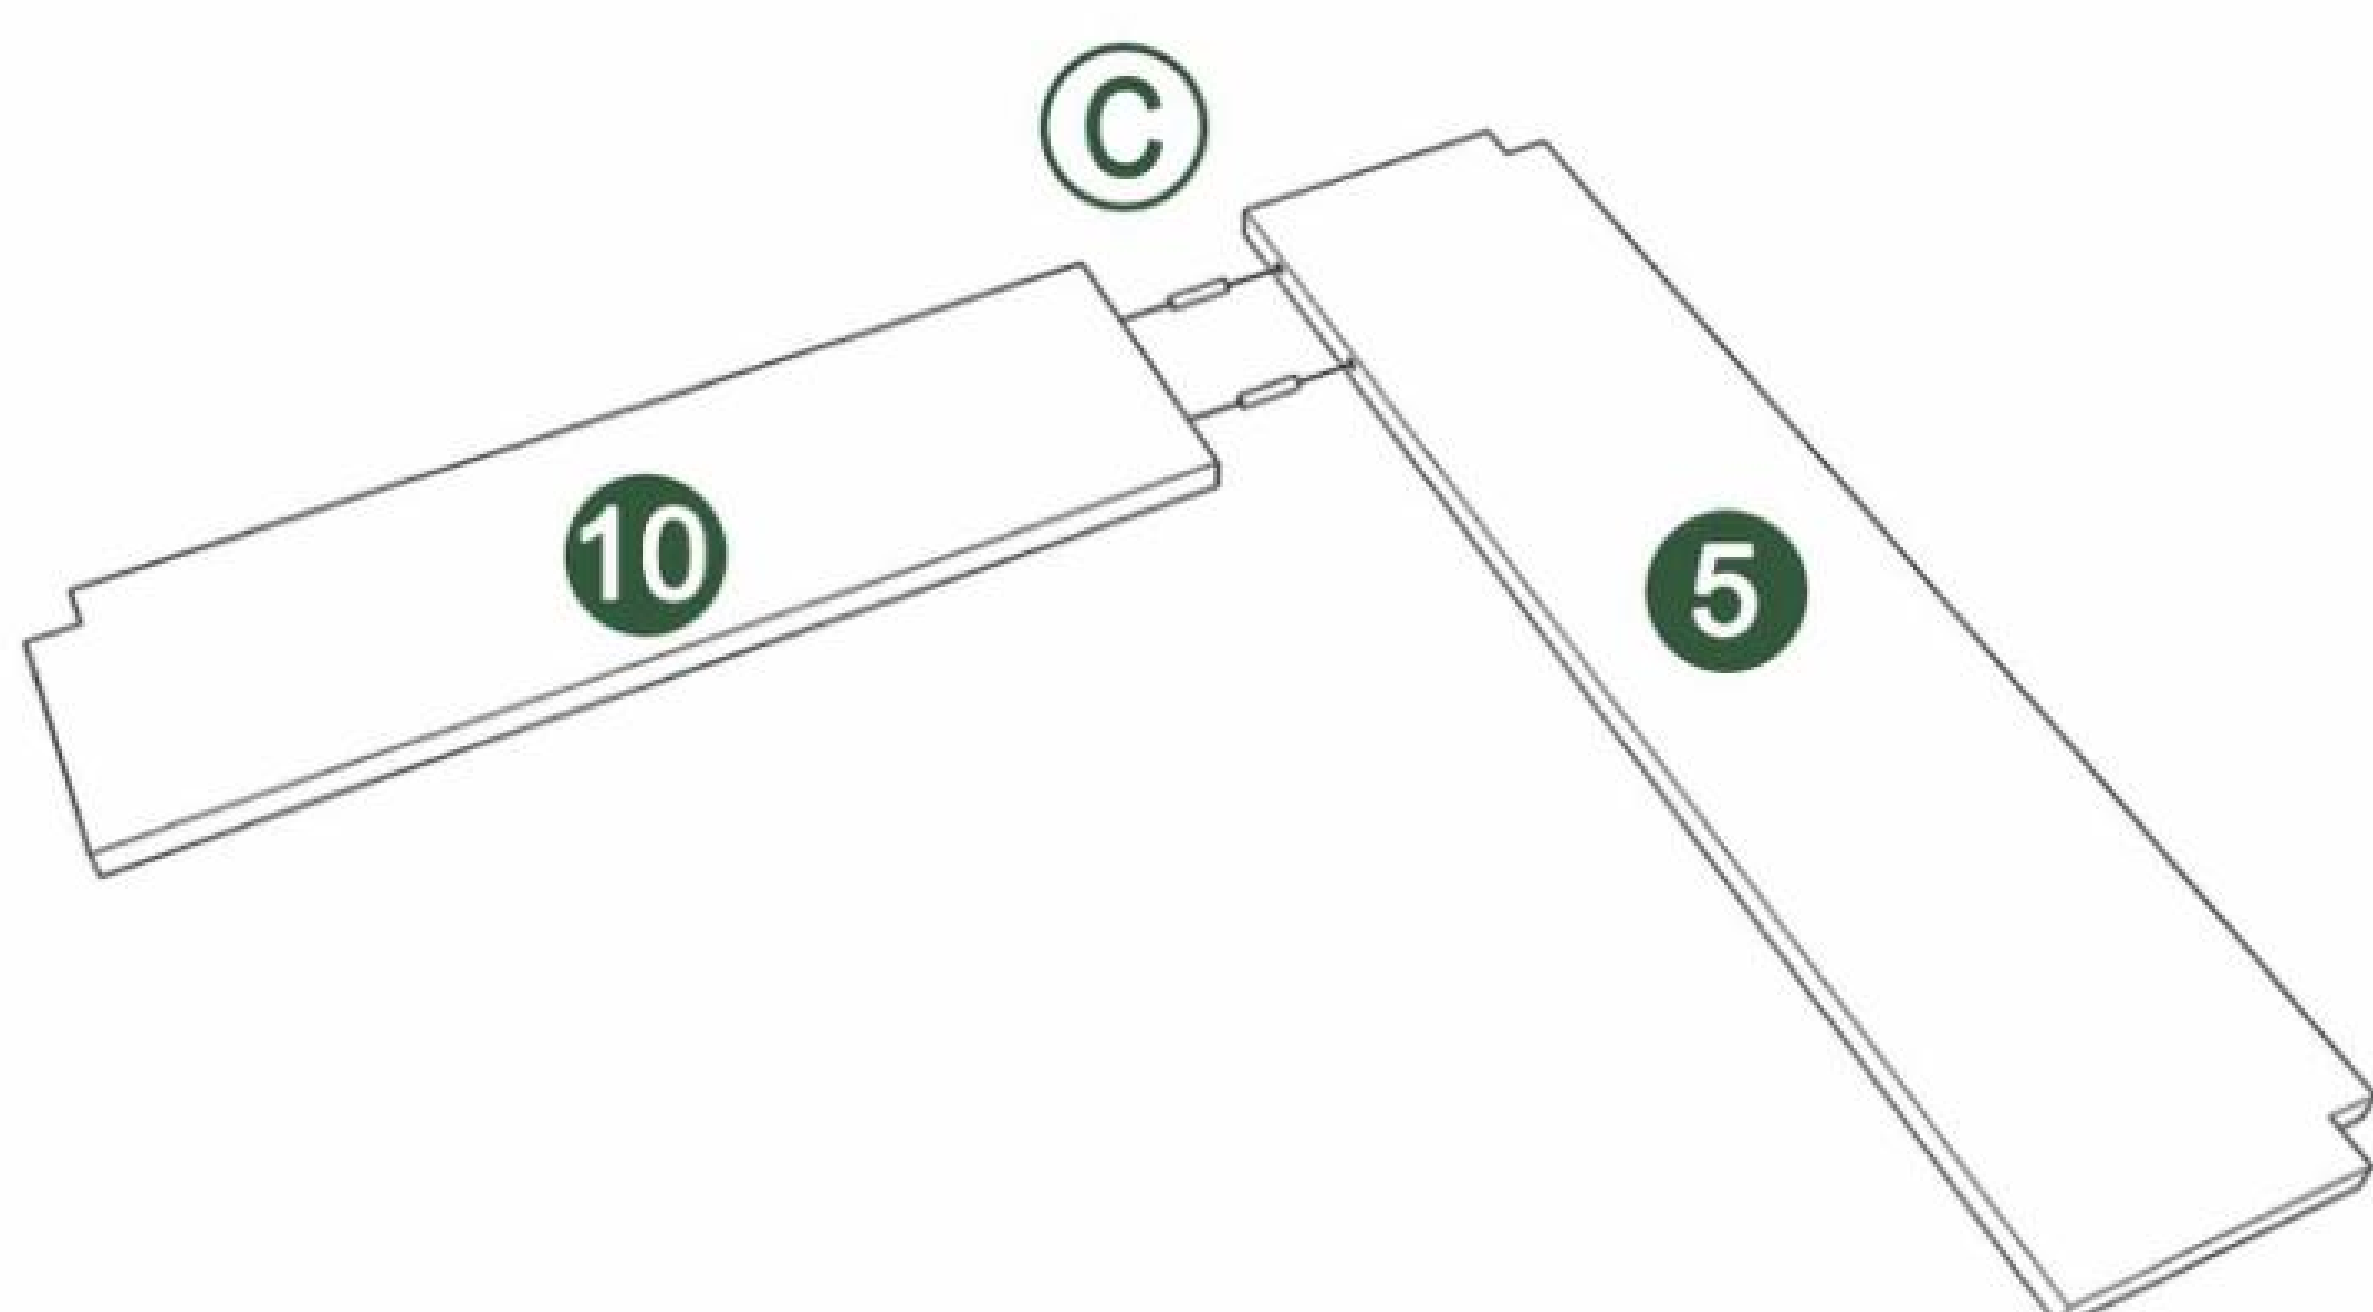


16.

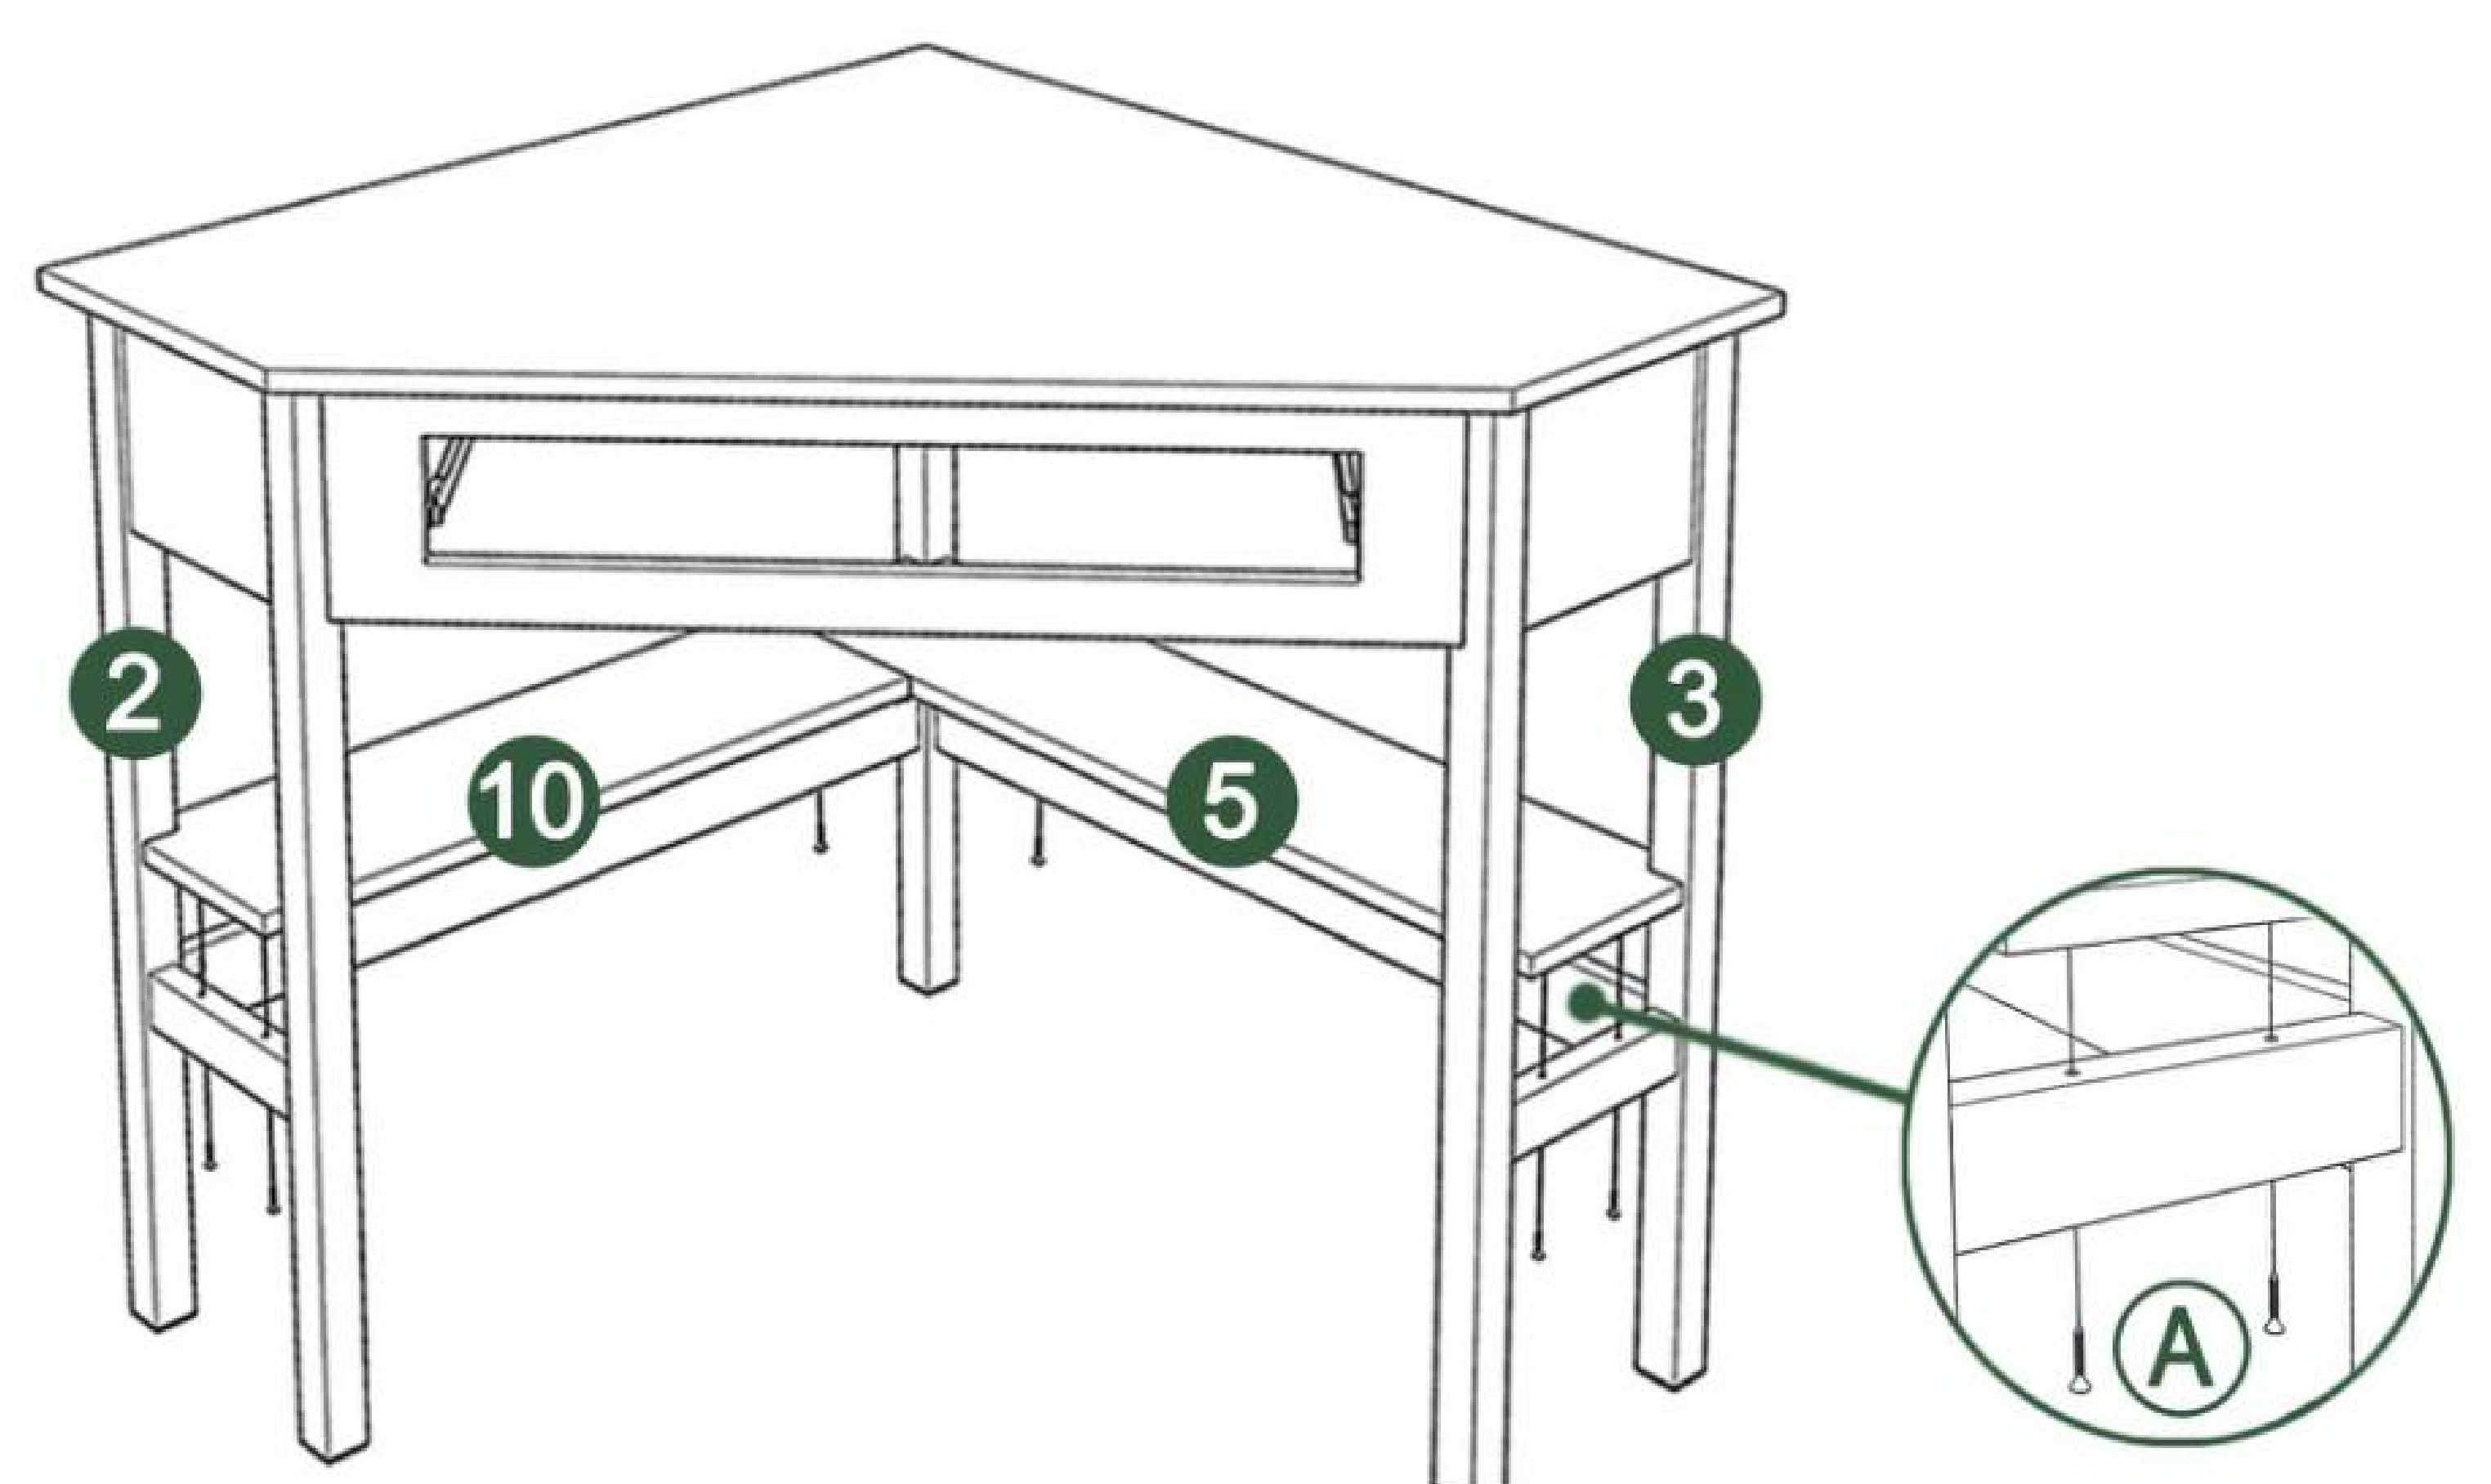


17.

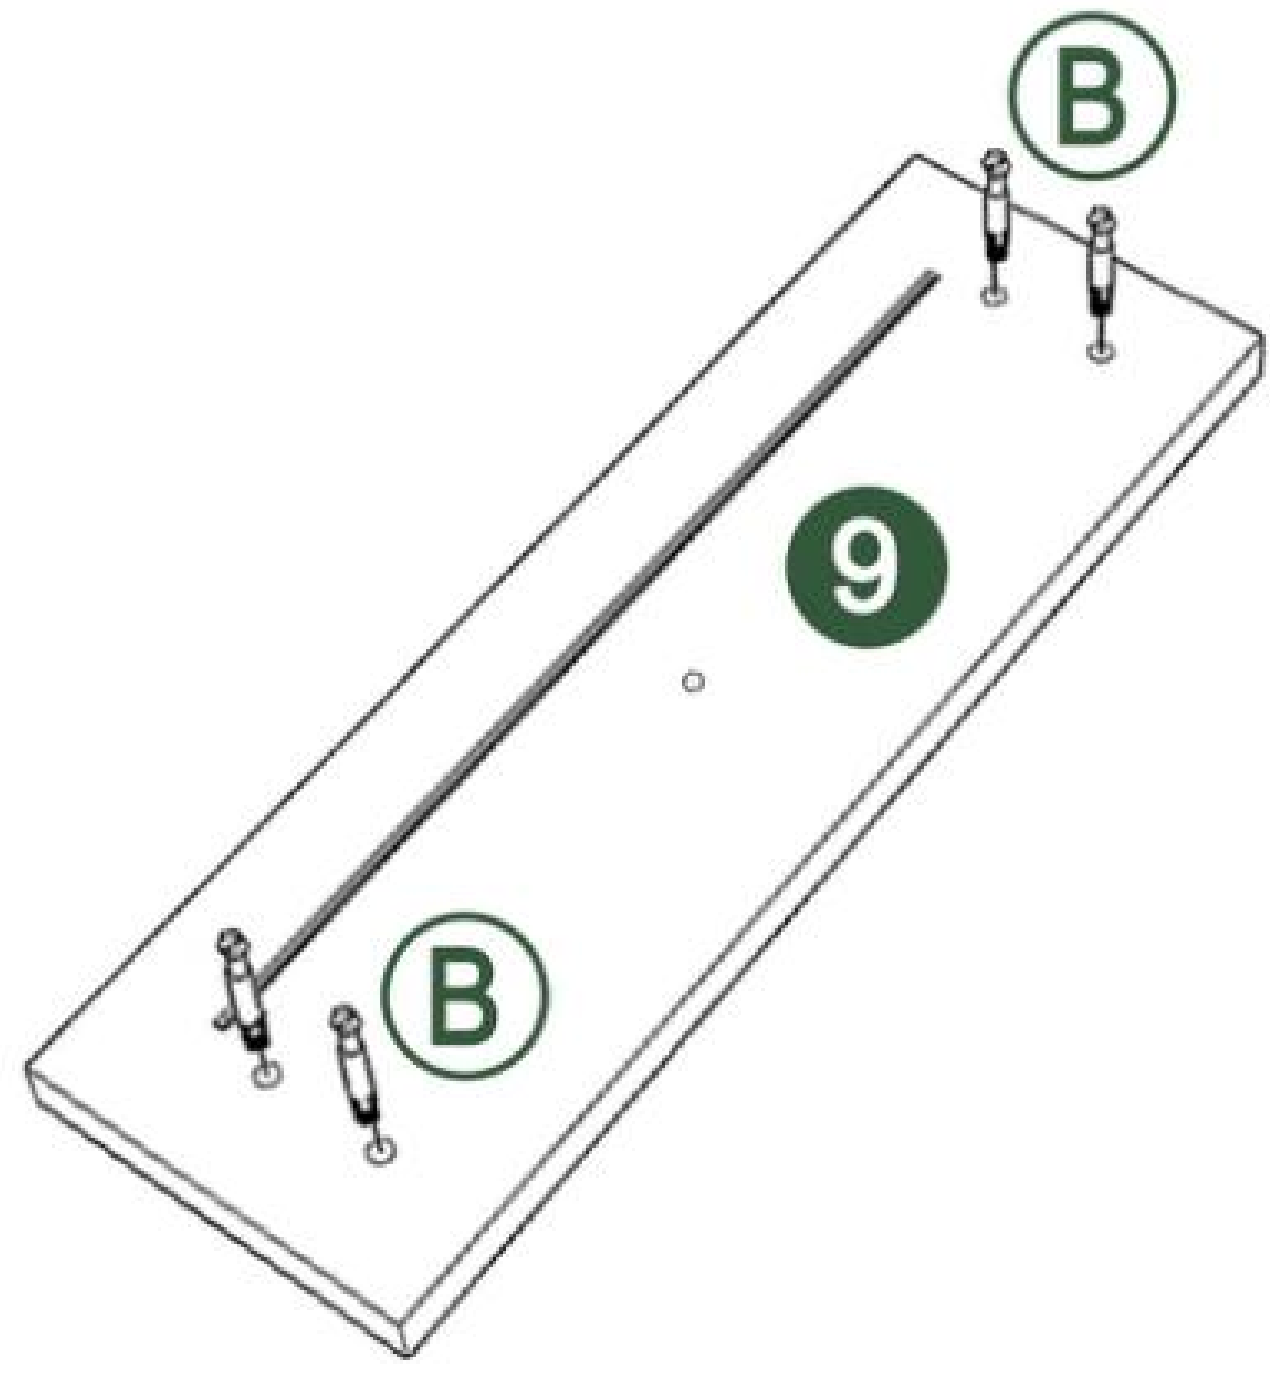


18.

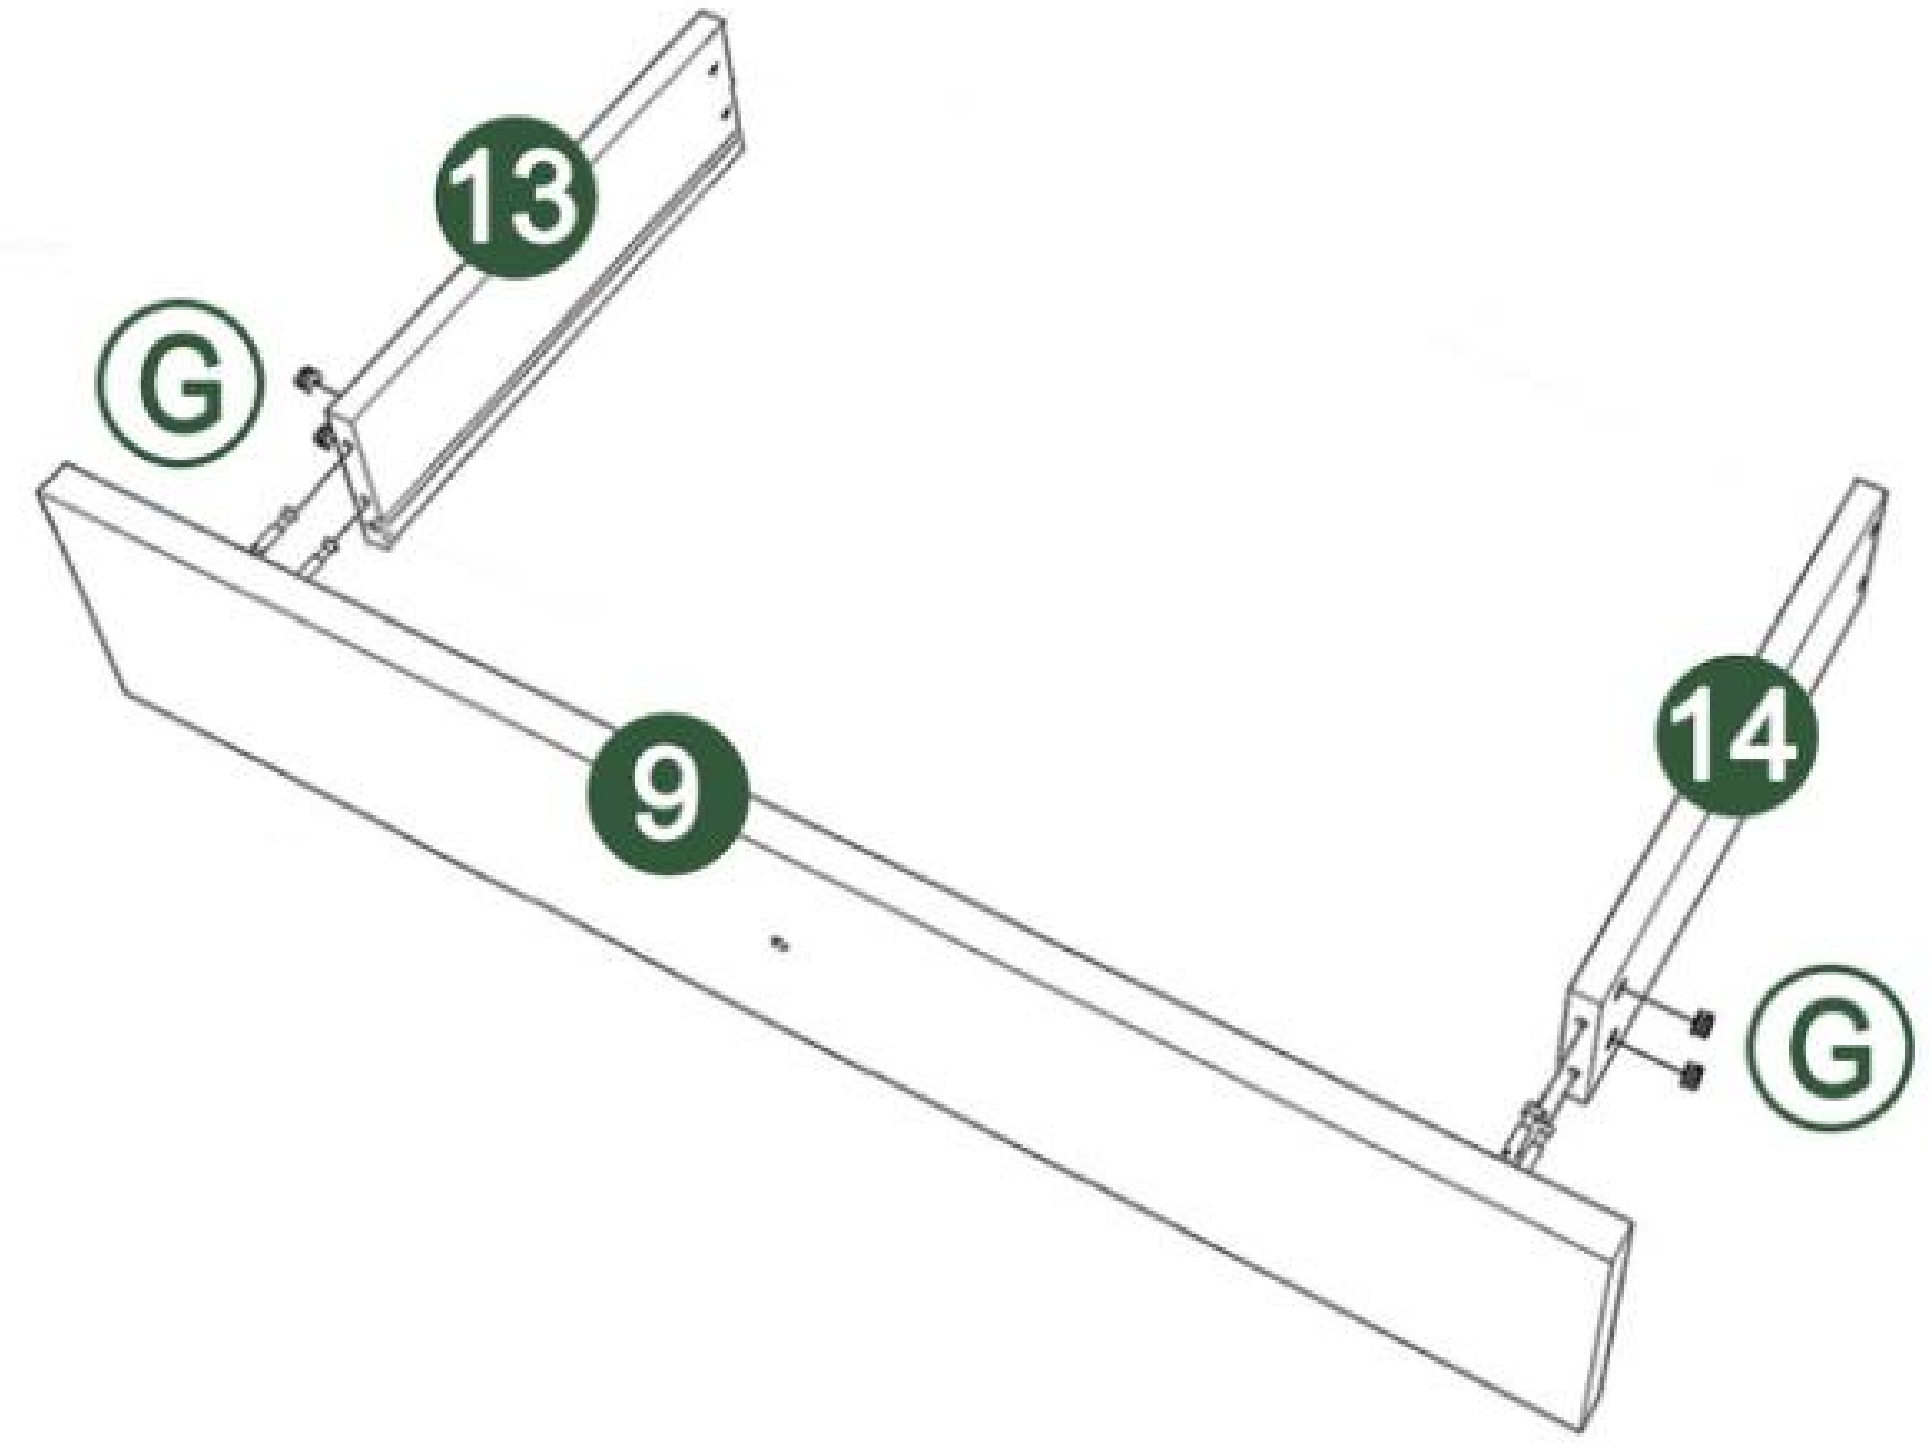


19.

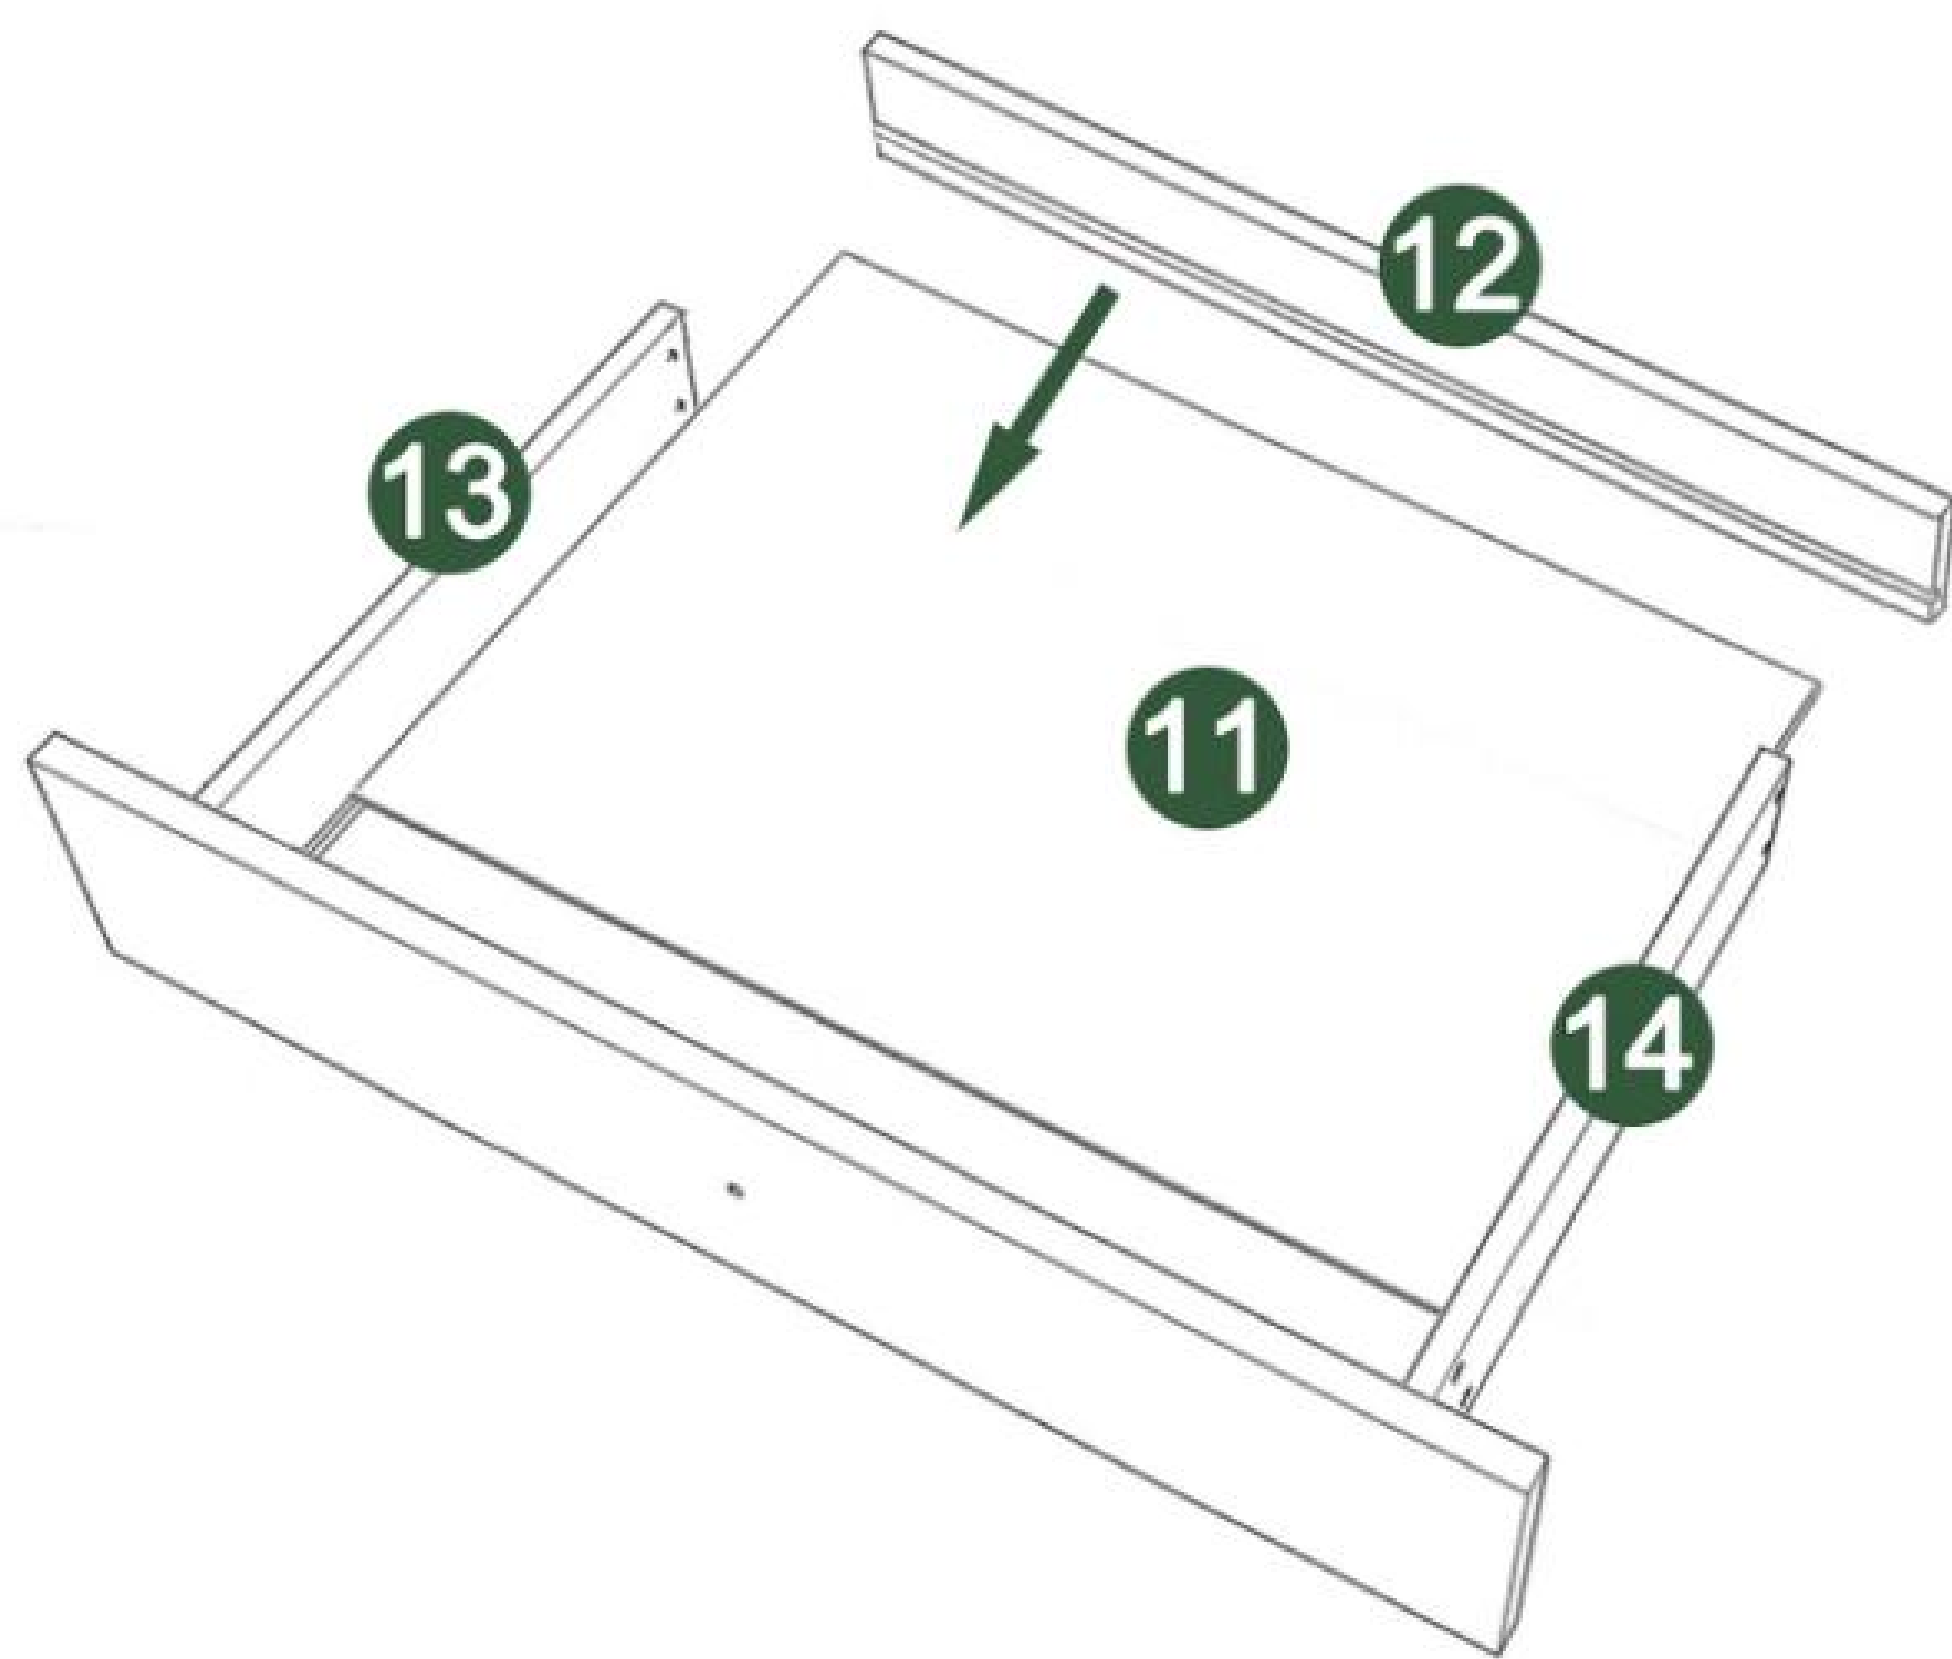


20.

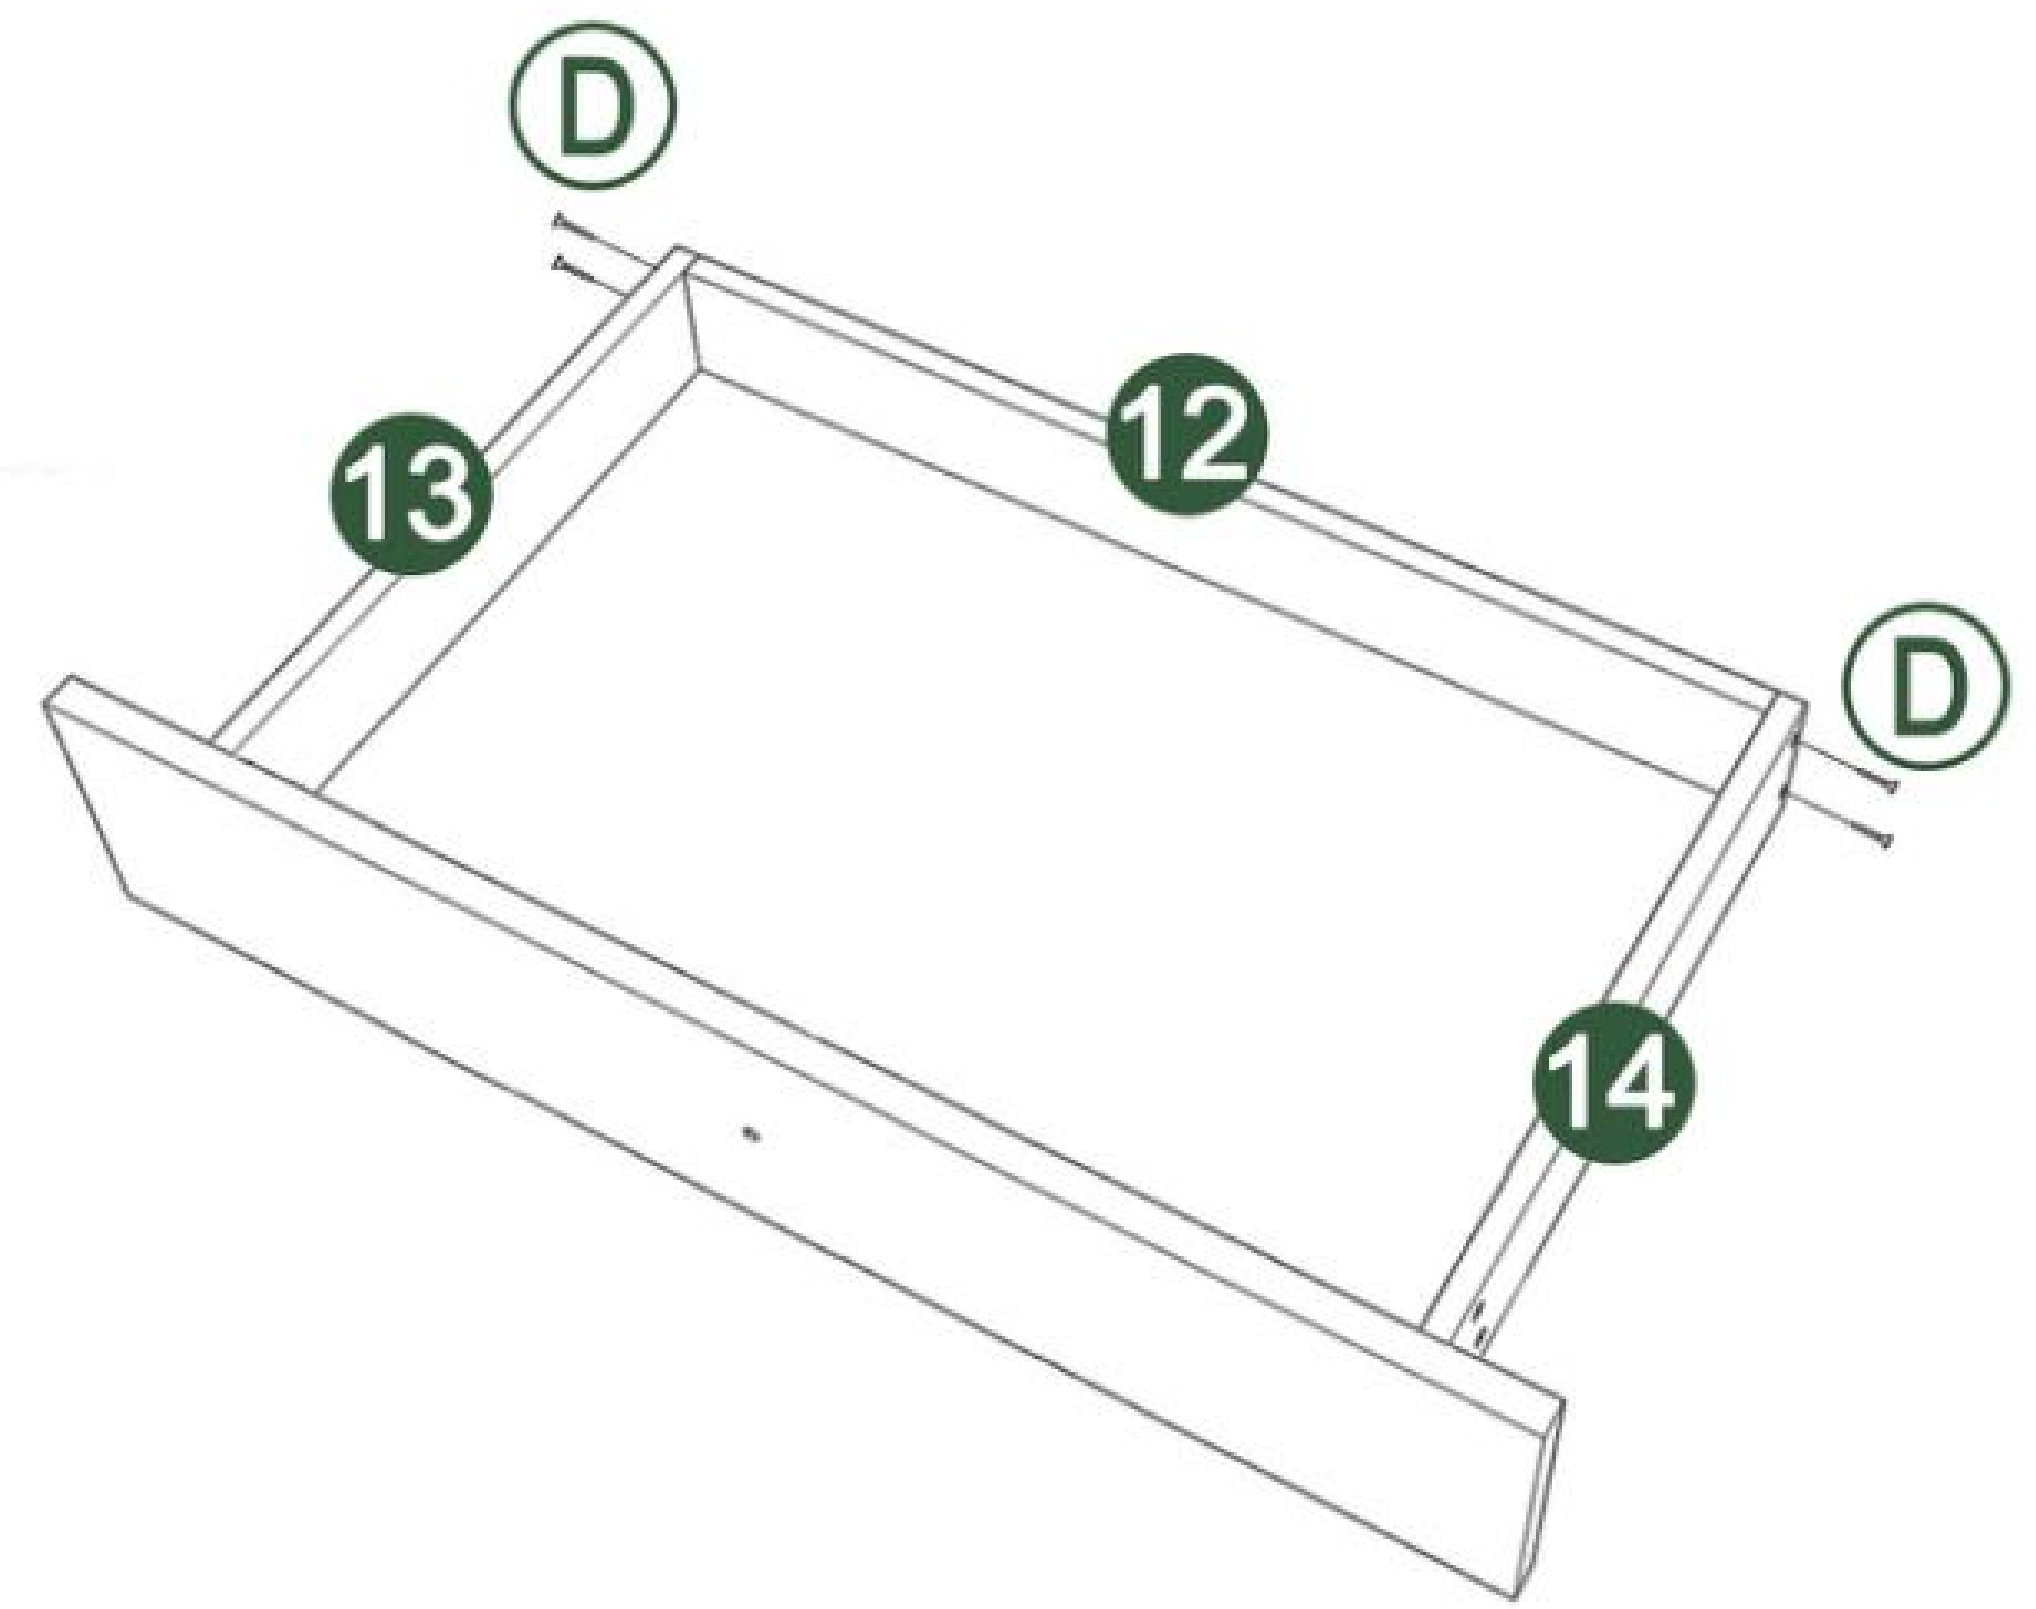

21.

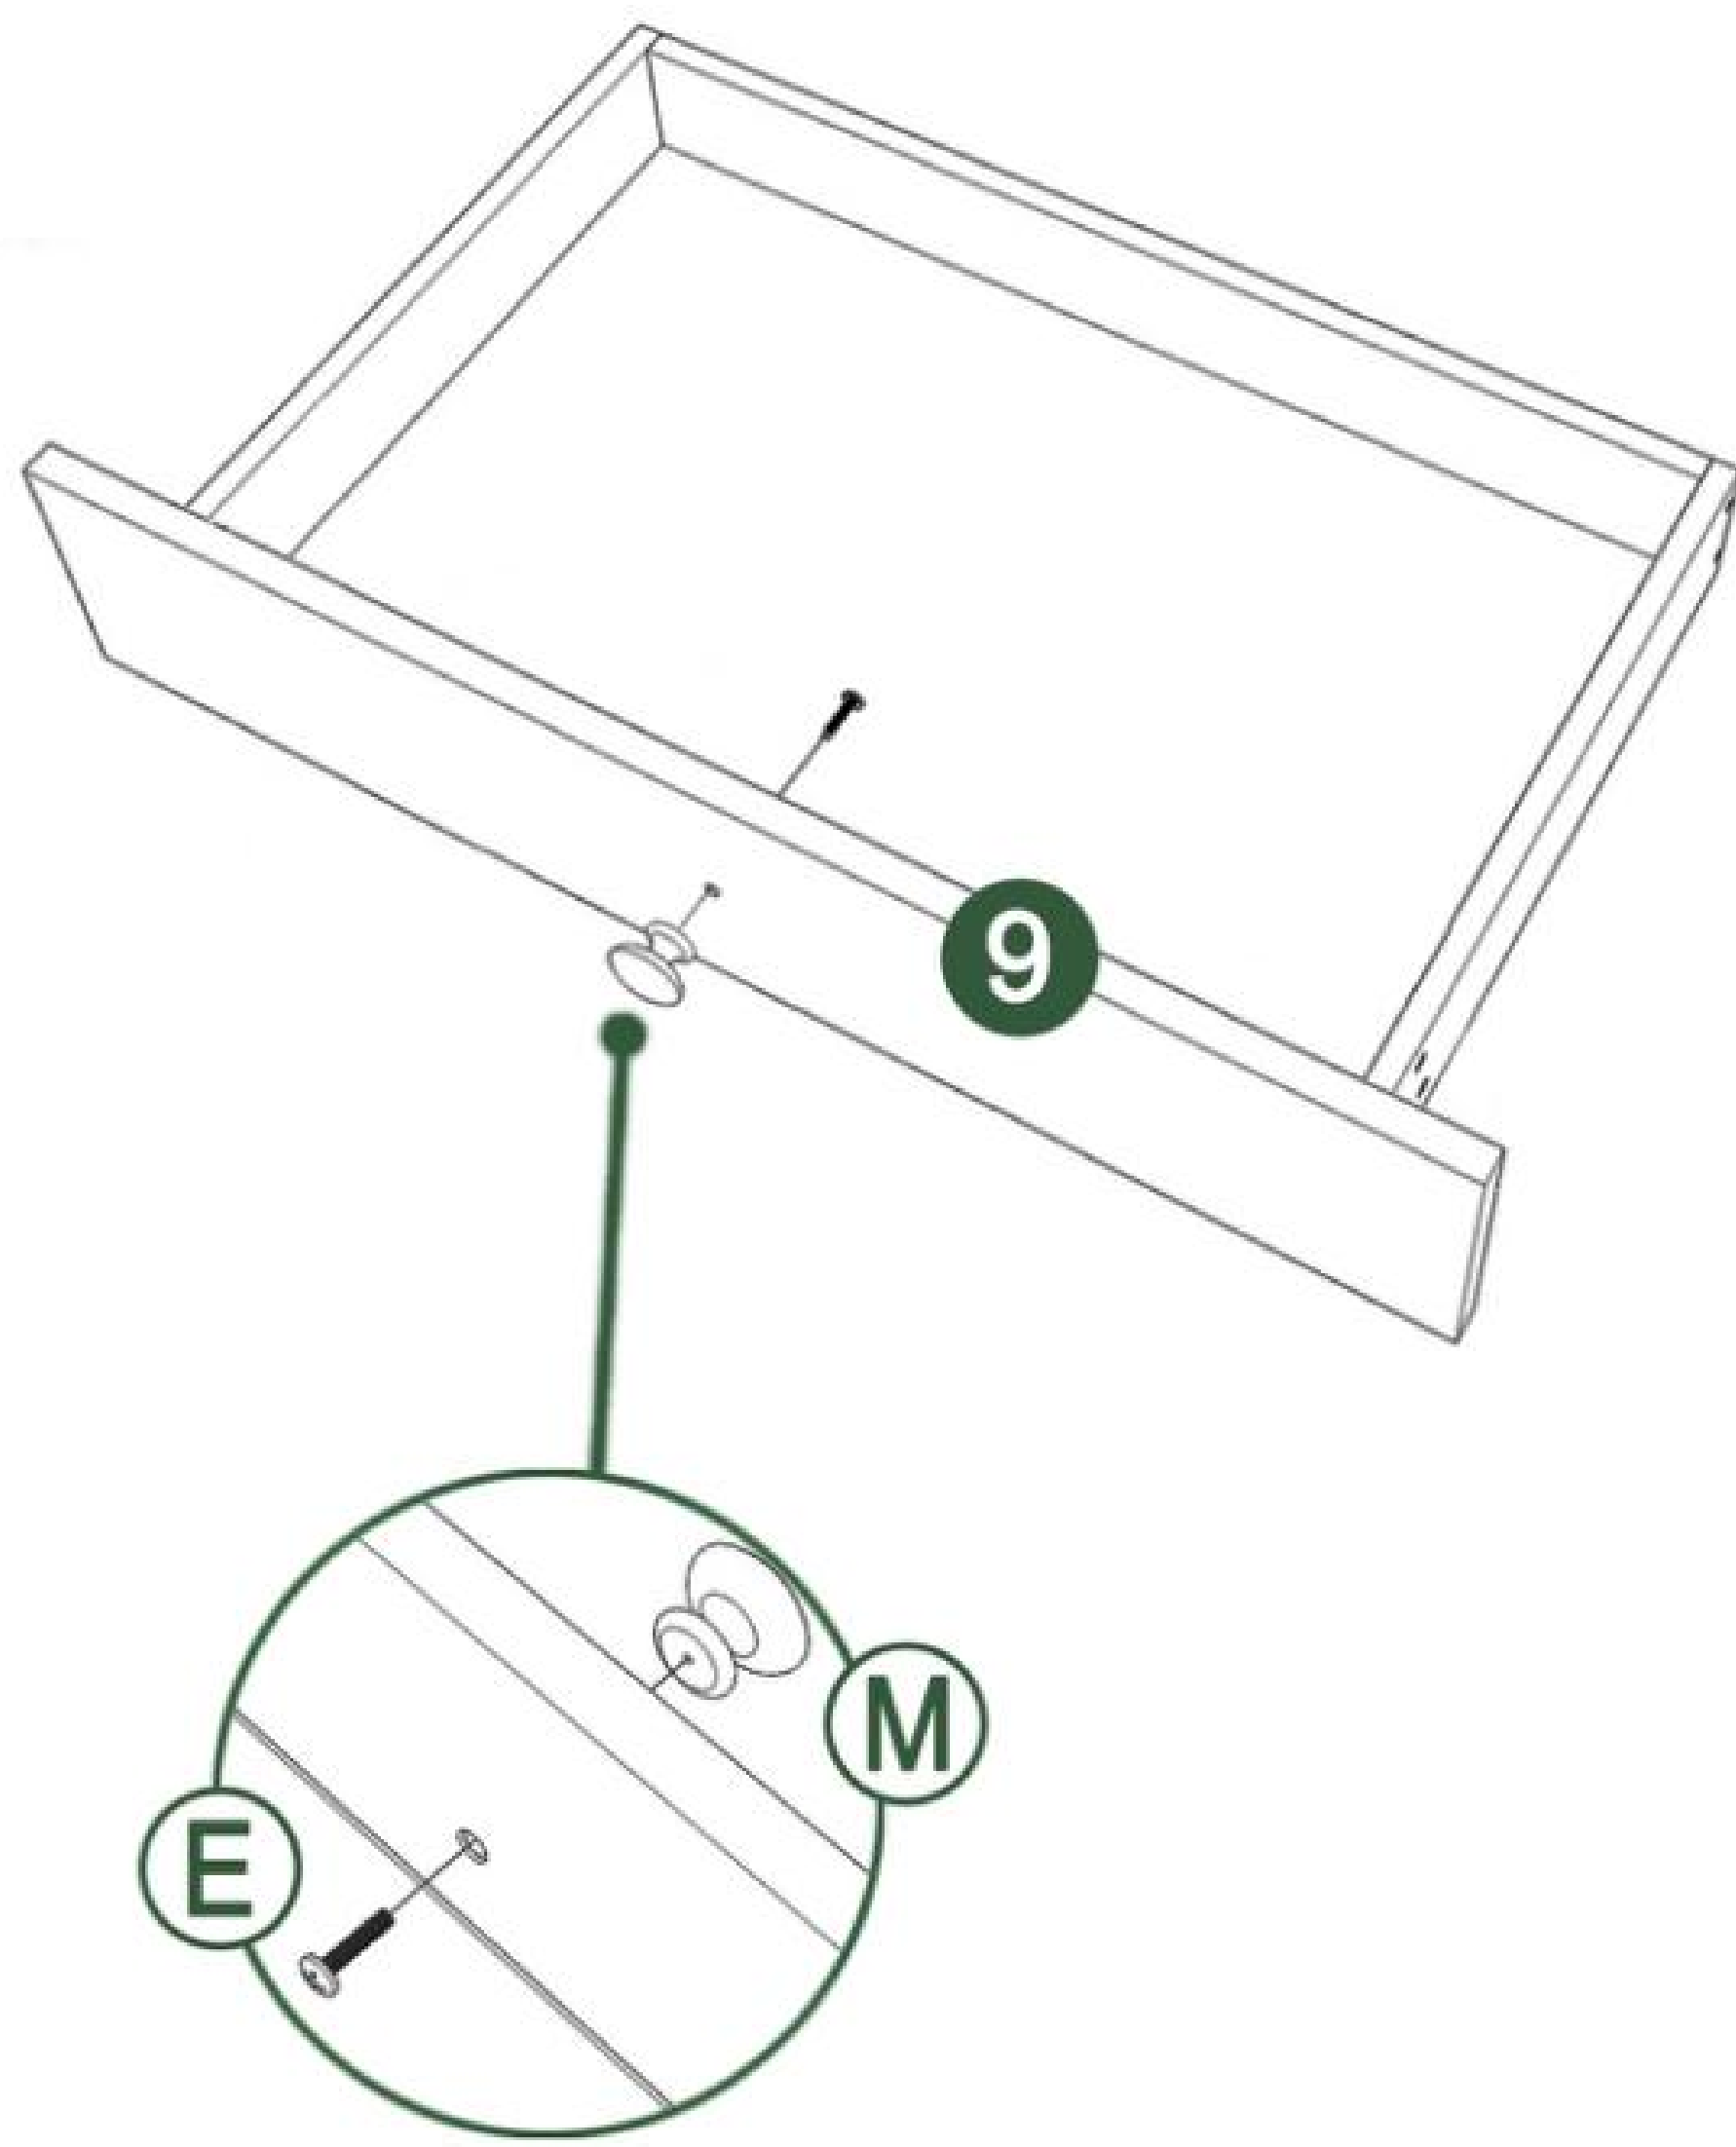

22.

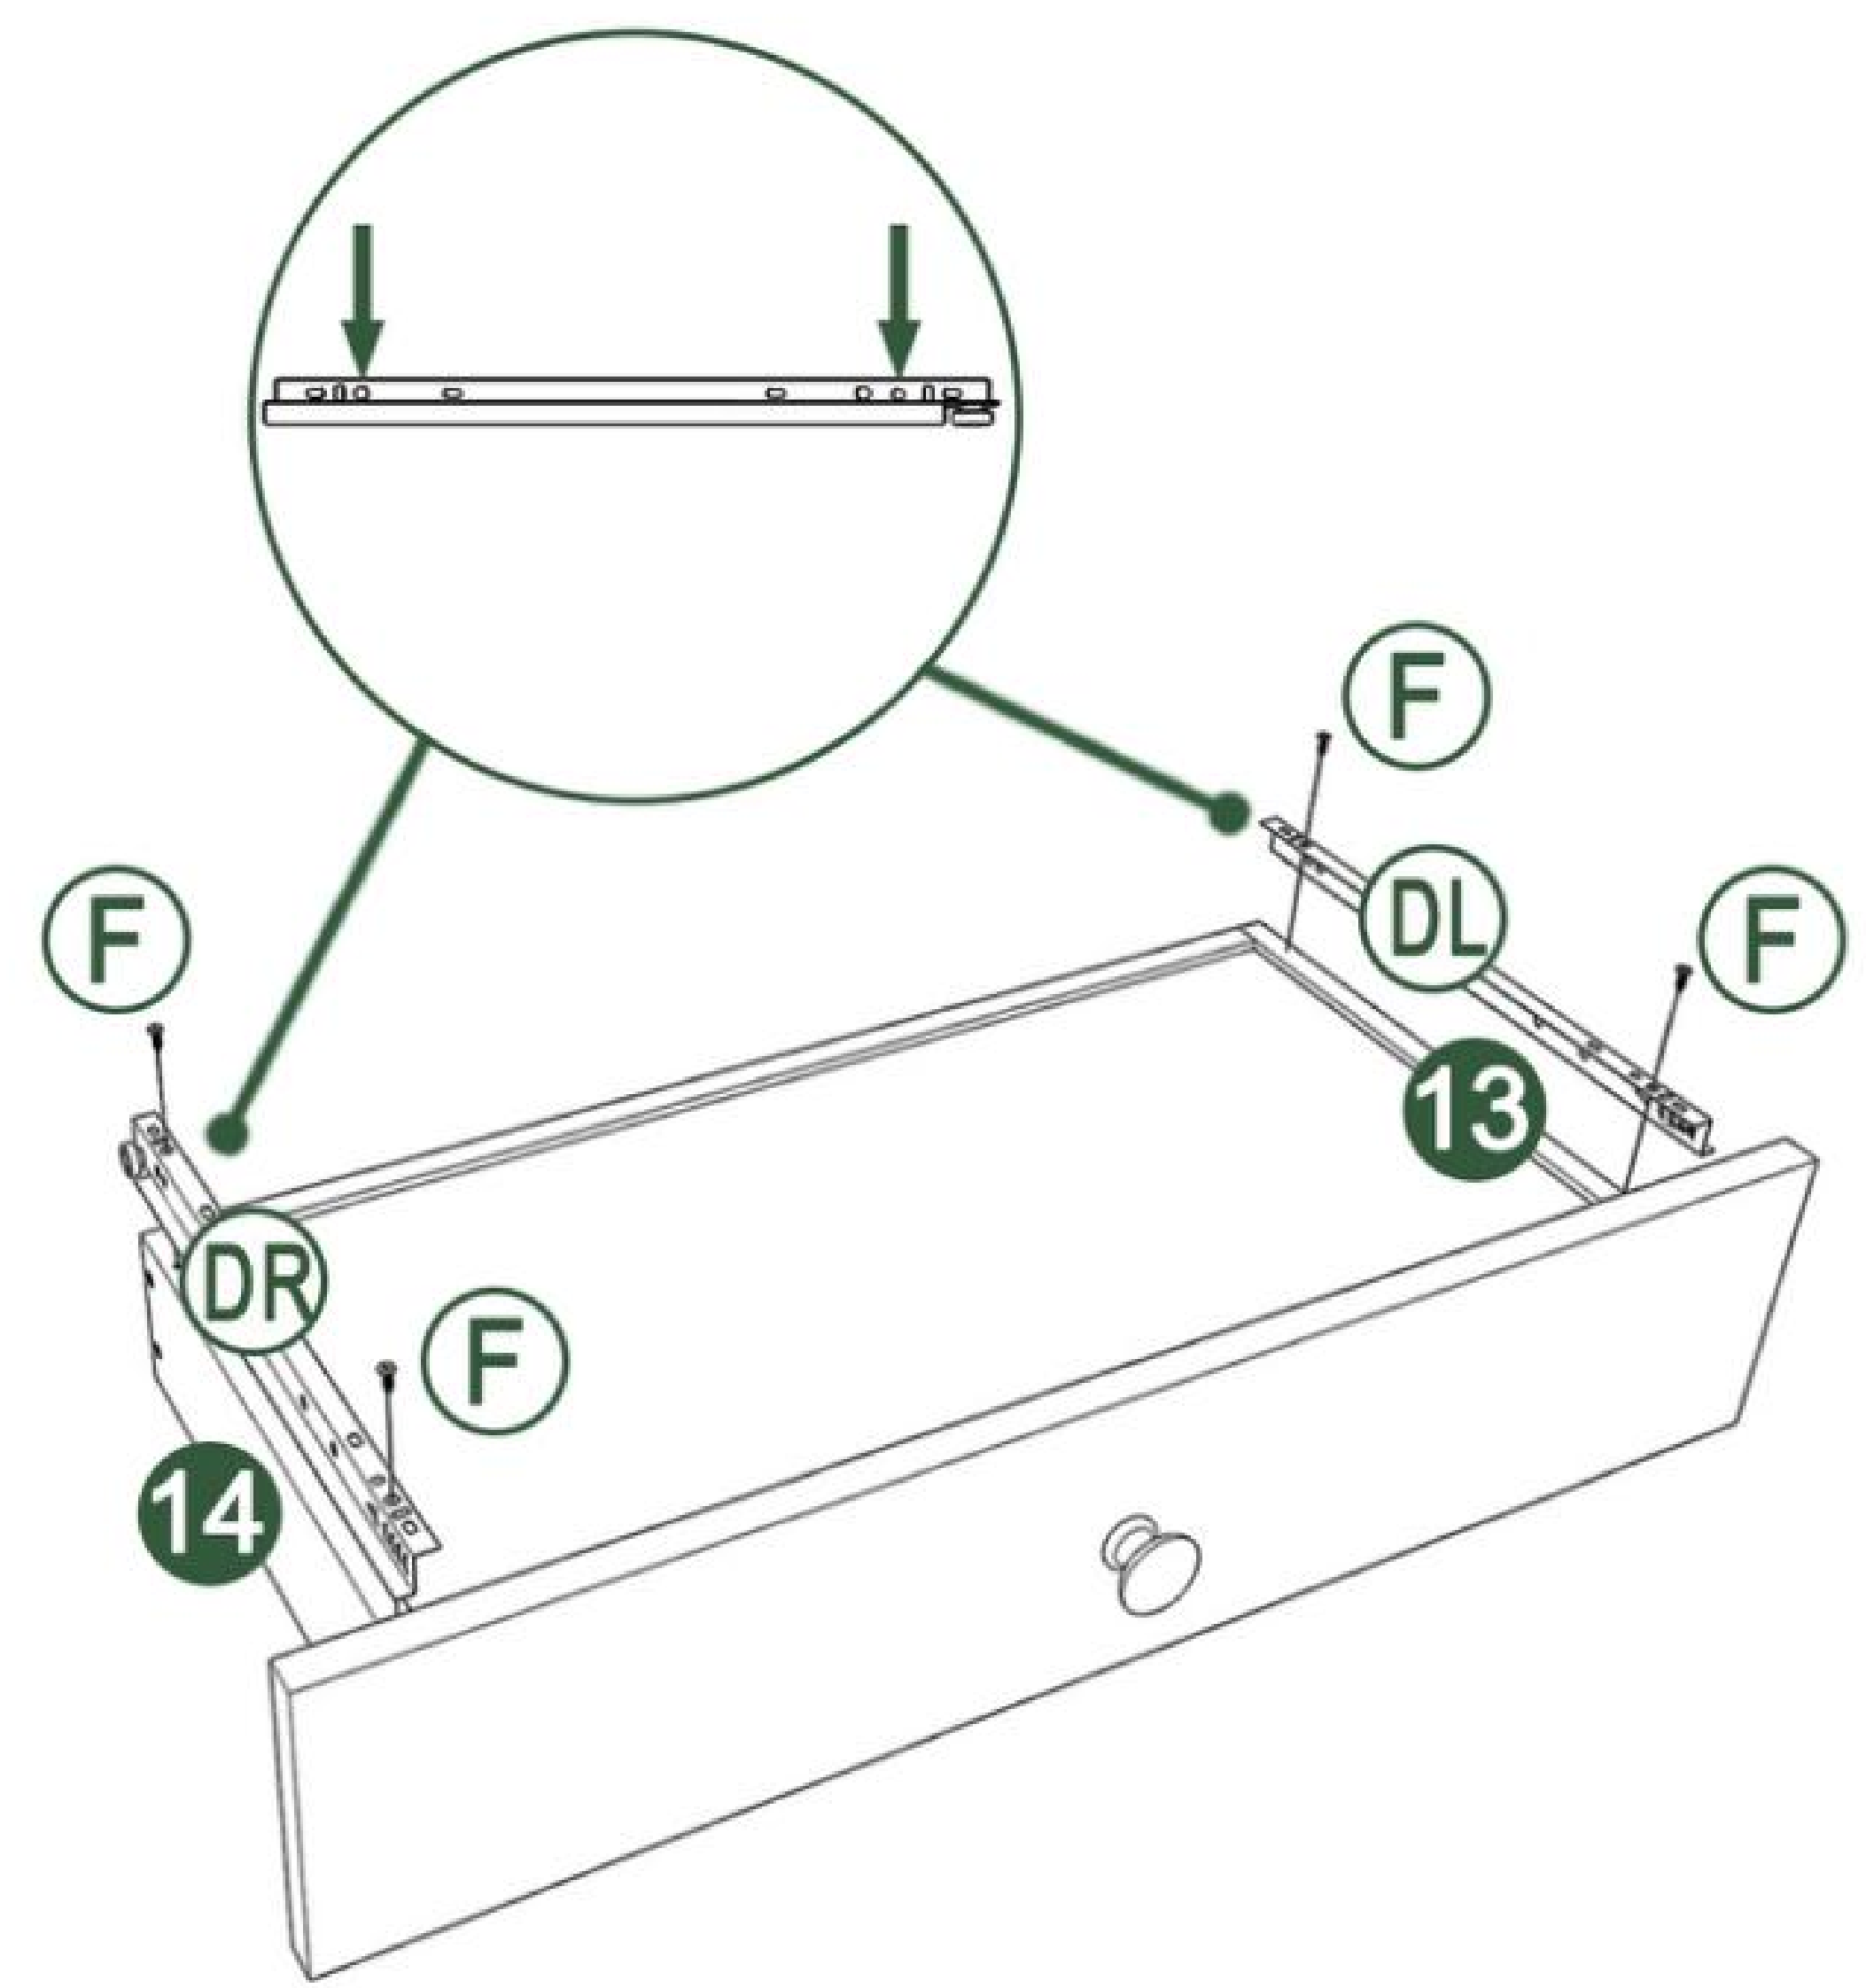

23.

