


Assembly Instruction


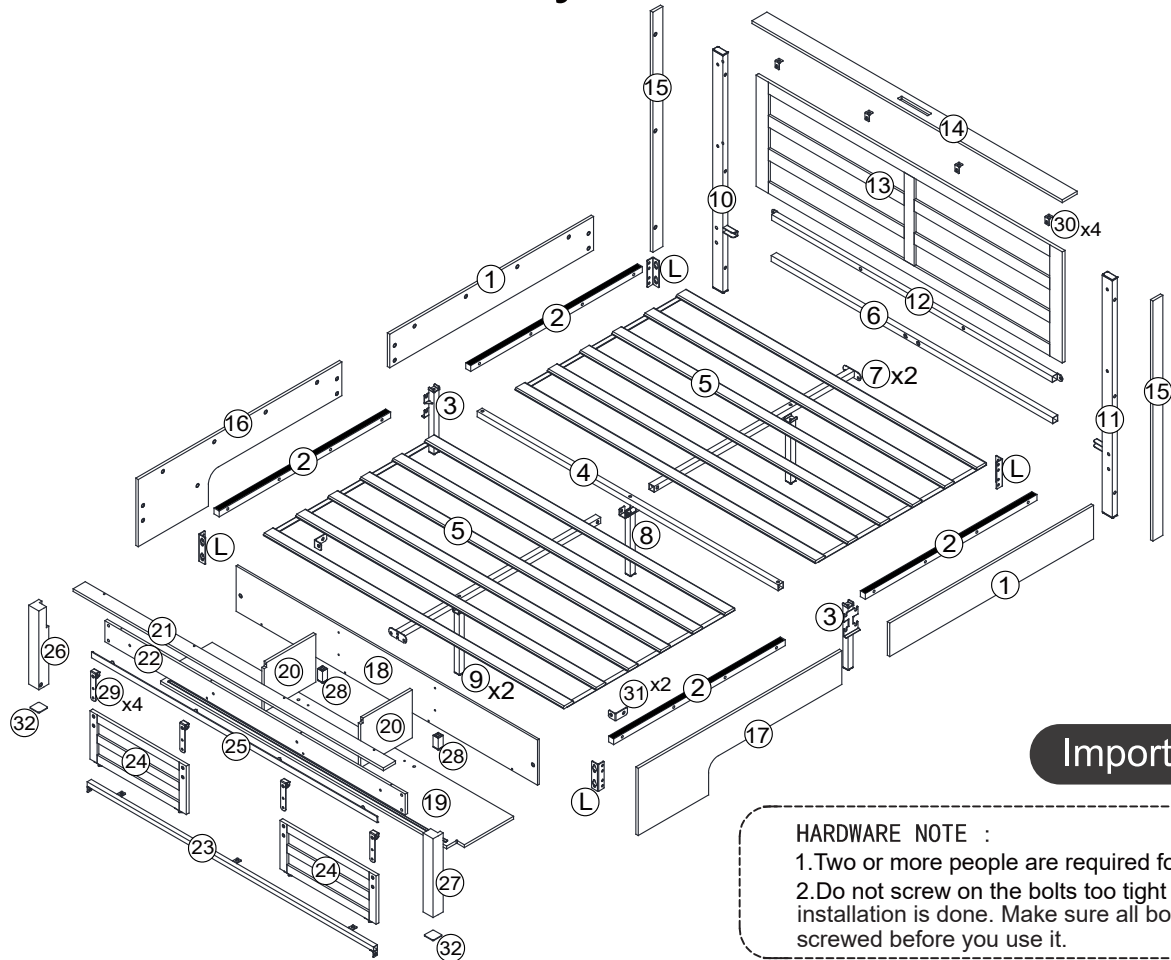






Important Note

HARDWARE NOTE :


1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

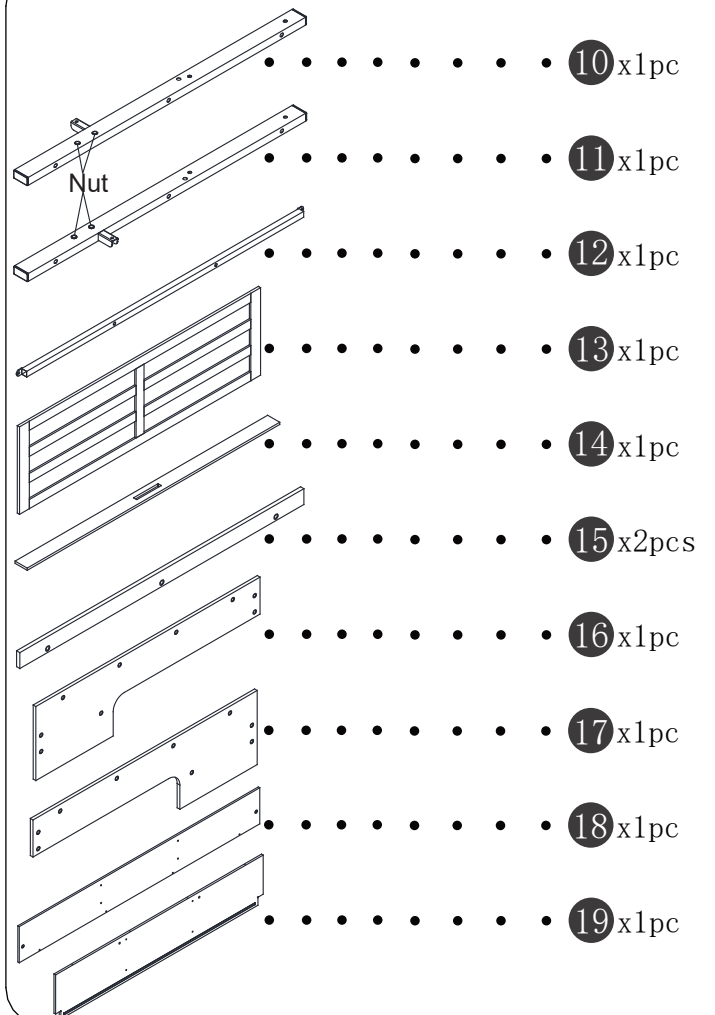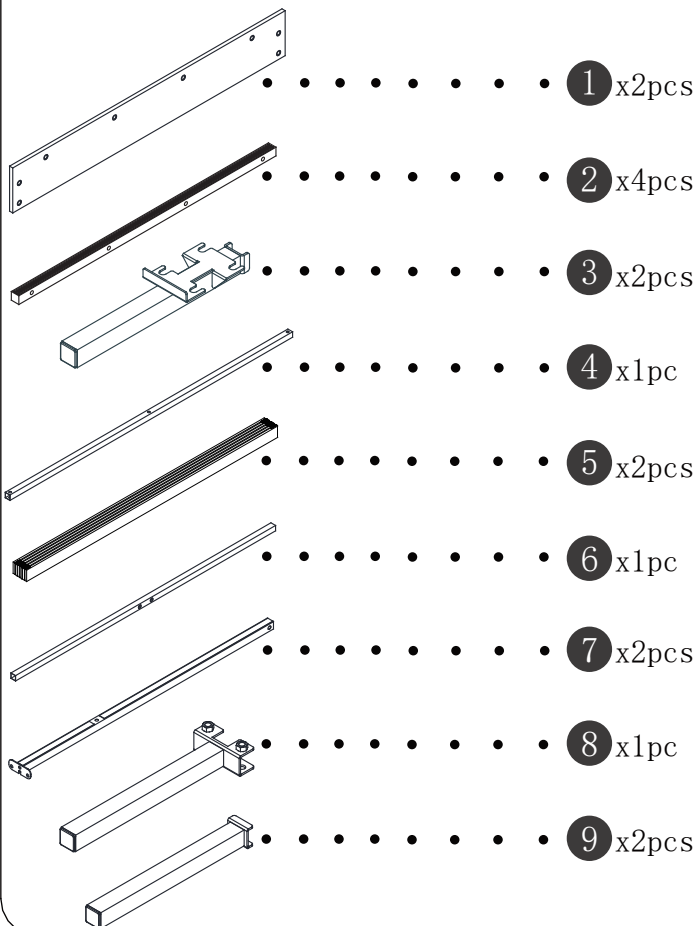

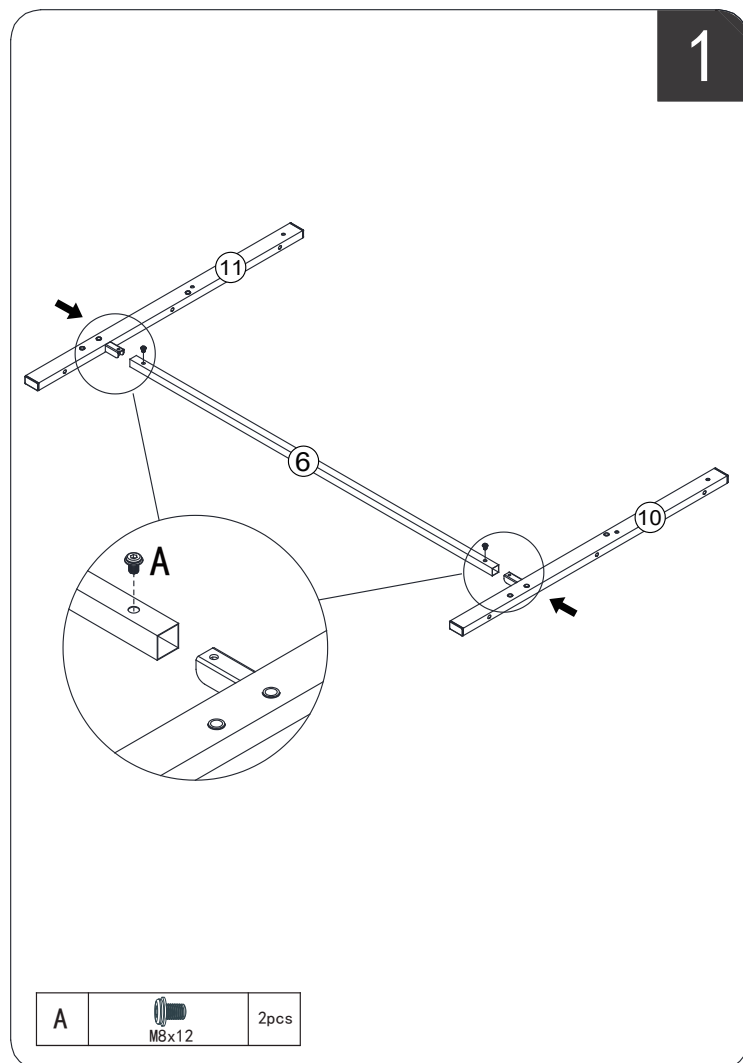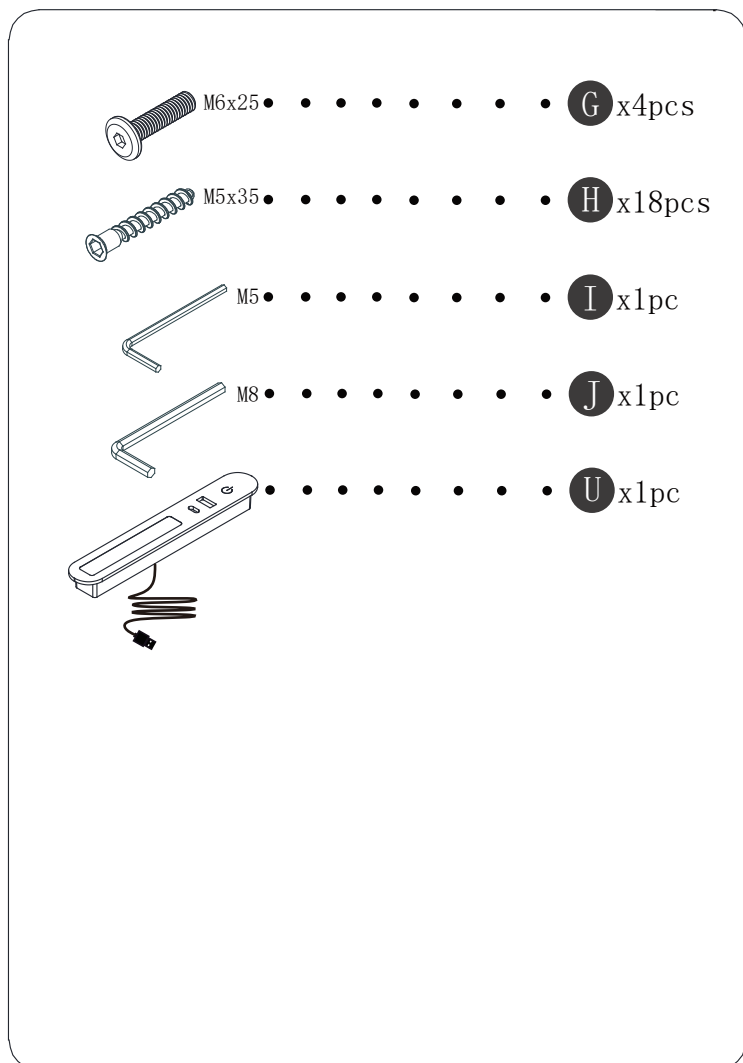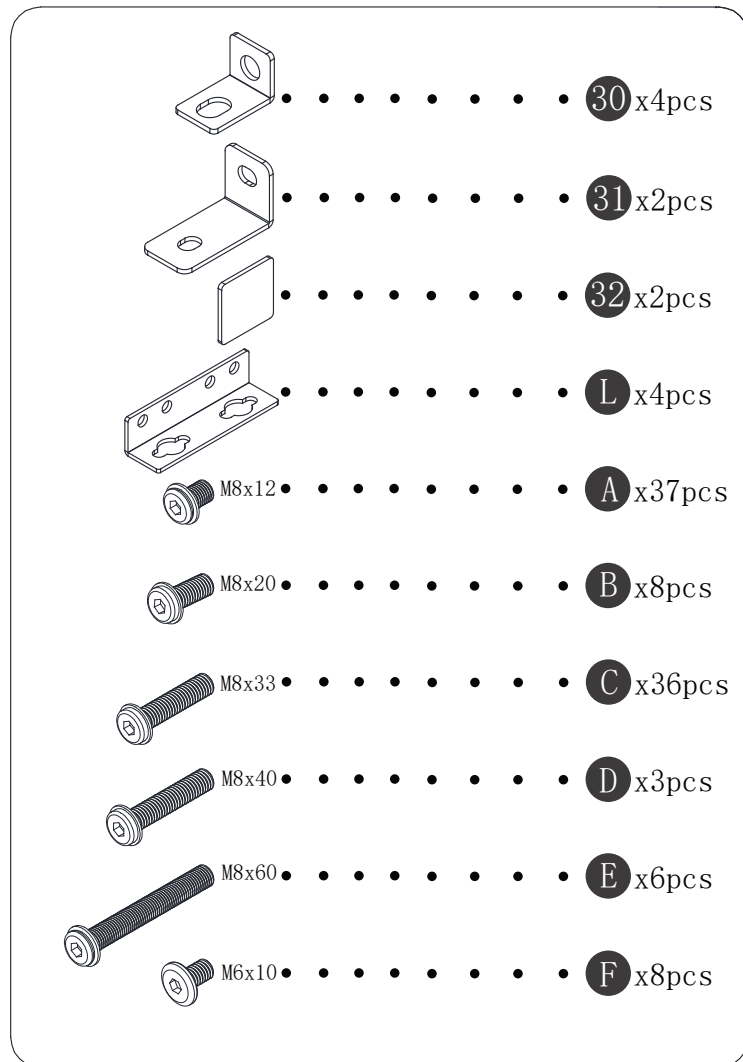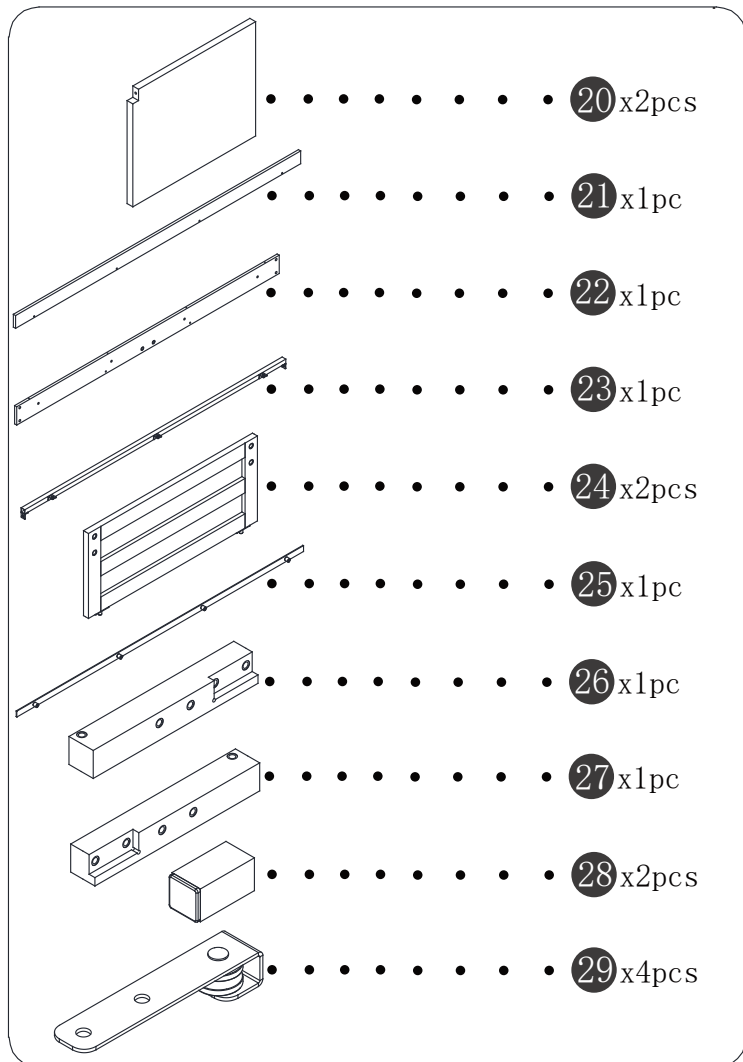


2

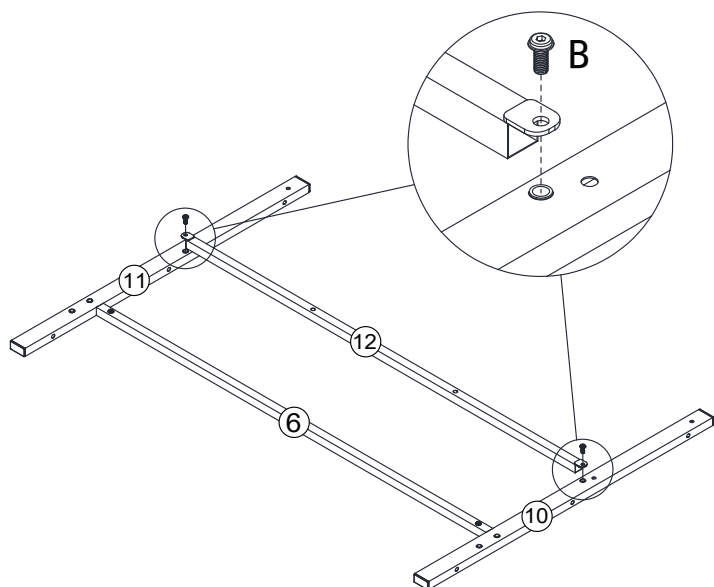

B		2pcs
	M8x20	


3

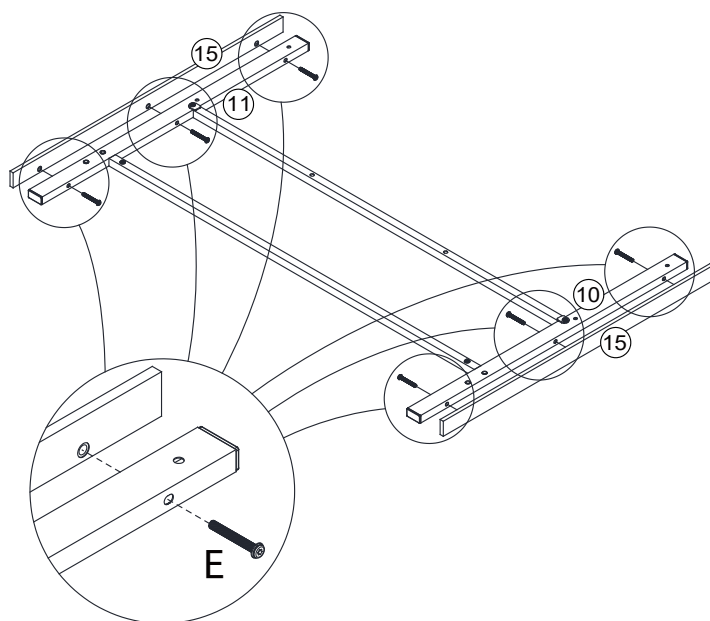

! Do not fully tighten the screws yet.


E		6pcs
	M8x60	

4

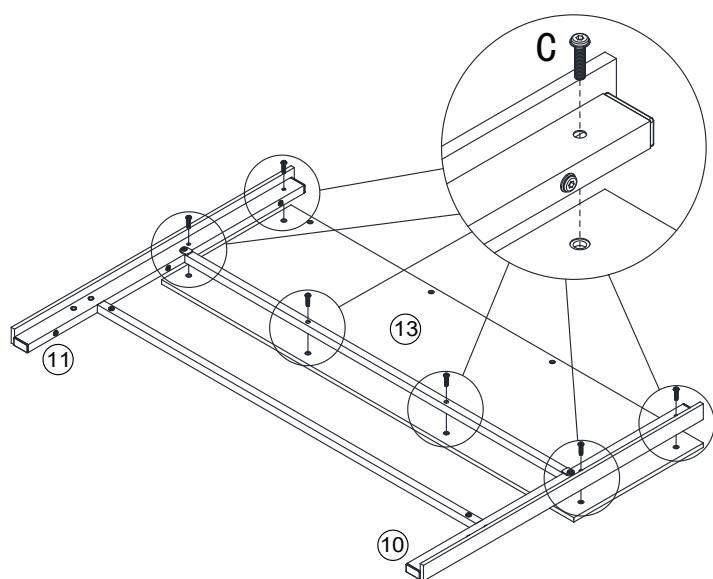

C		6pcs
	M8x33	

5

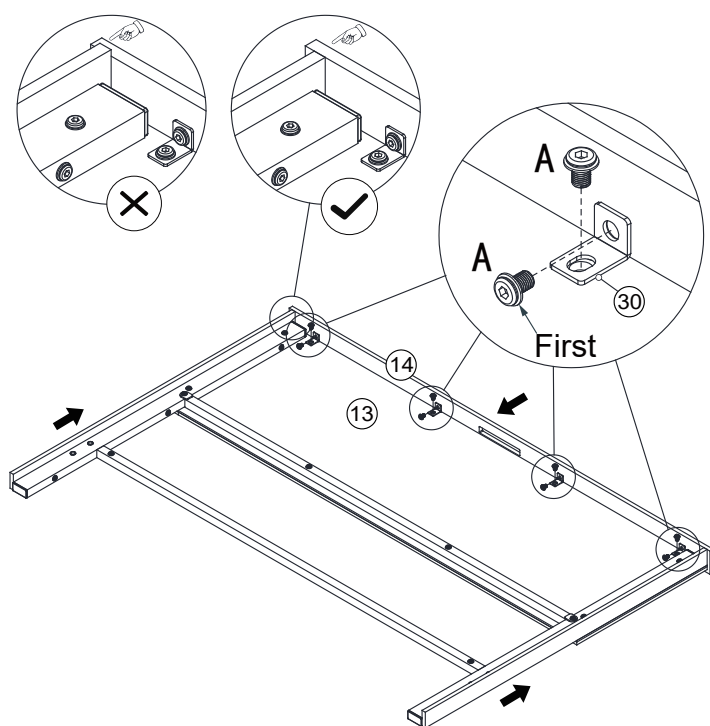


! Fully tighten all the screws.

A		8pcs
	M8x12	


6

x2

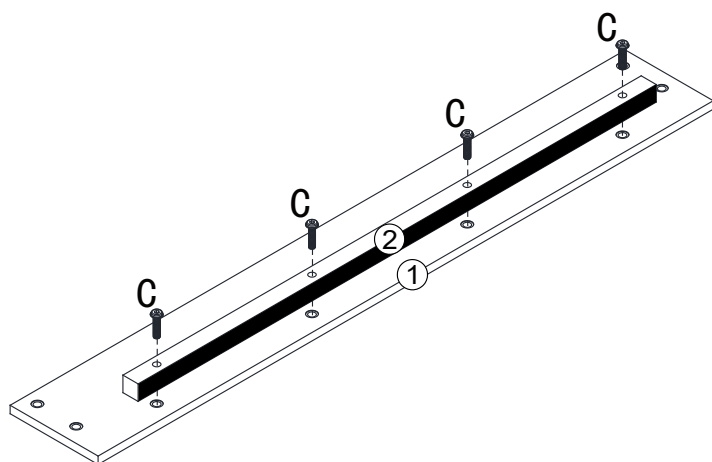


C		8pcs
M8x33		

7

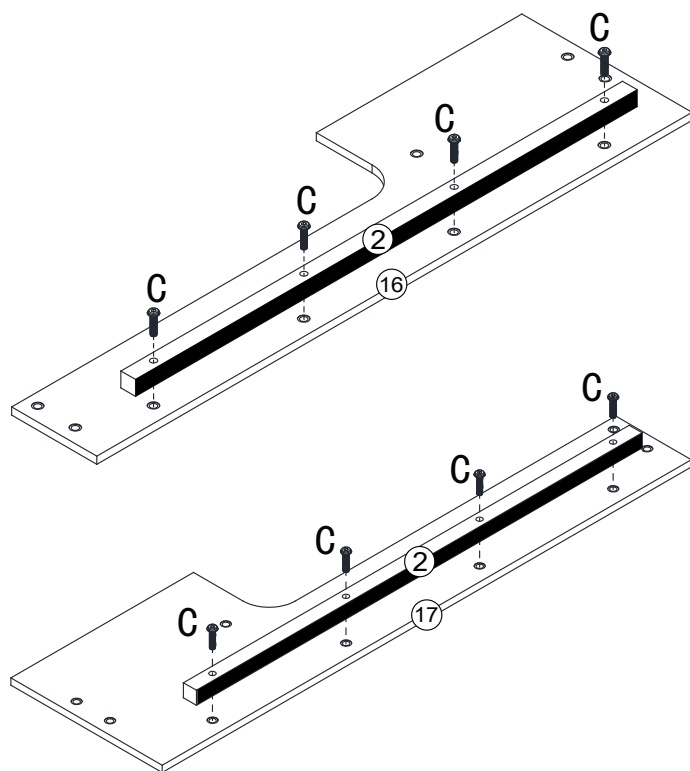


C		8pcs
M8x33		

8

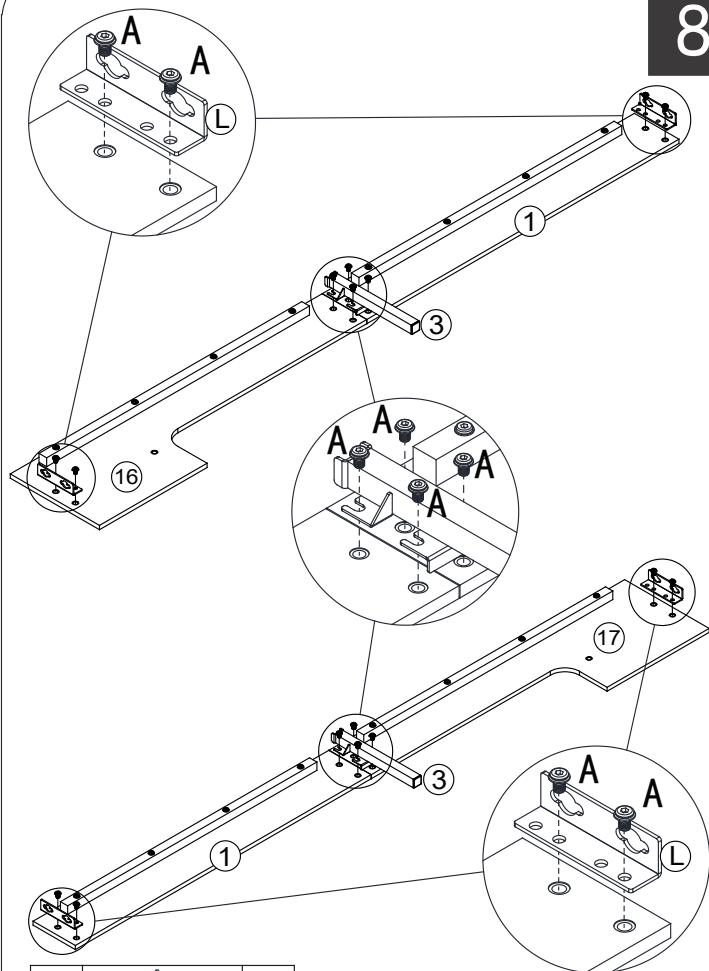


A		16pcs
M8x12		

9

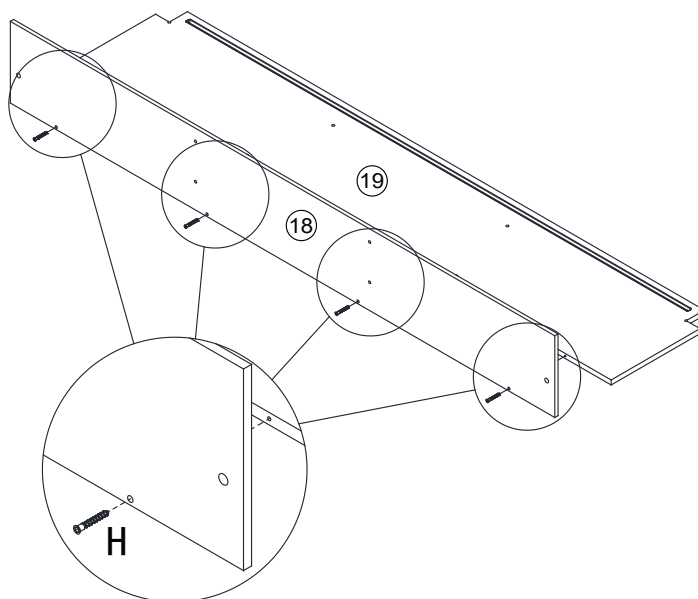


H		4pcs
M5x35		

10

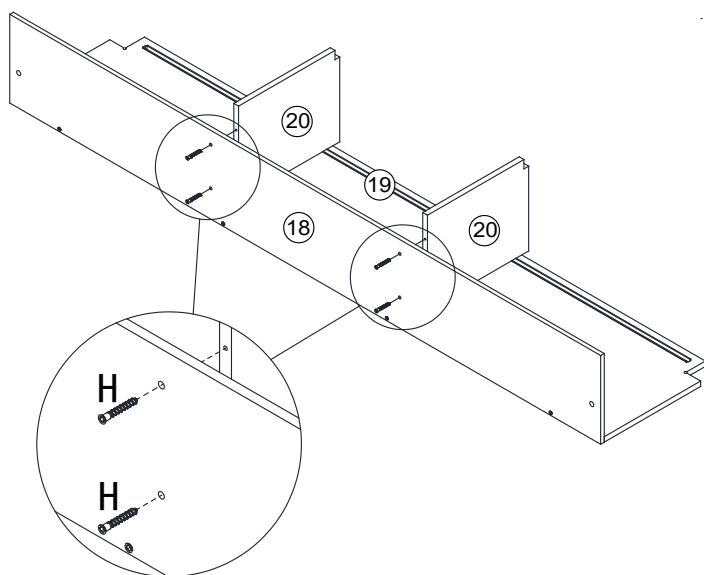


H		4pcs
M5x35		

11

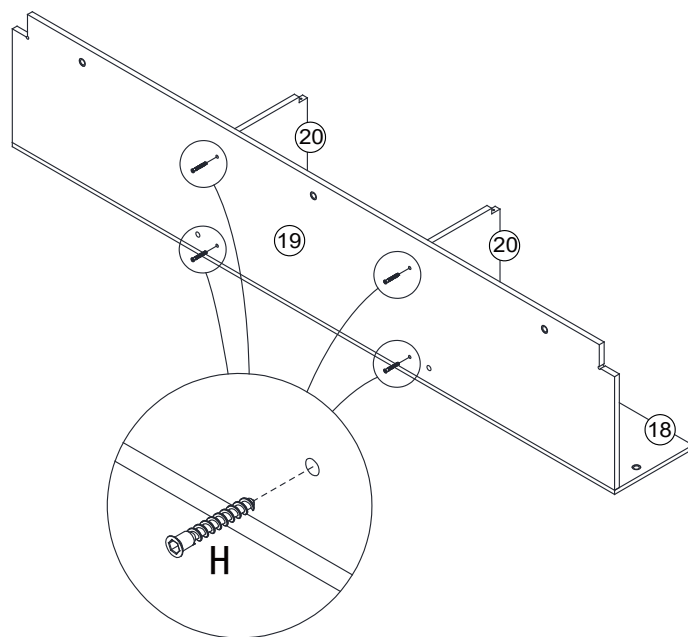


H		4pcs
M5x35		

12

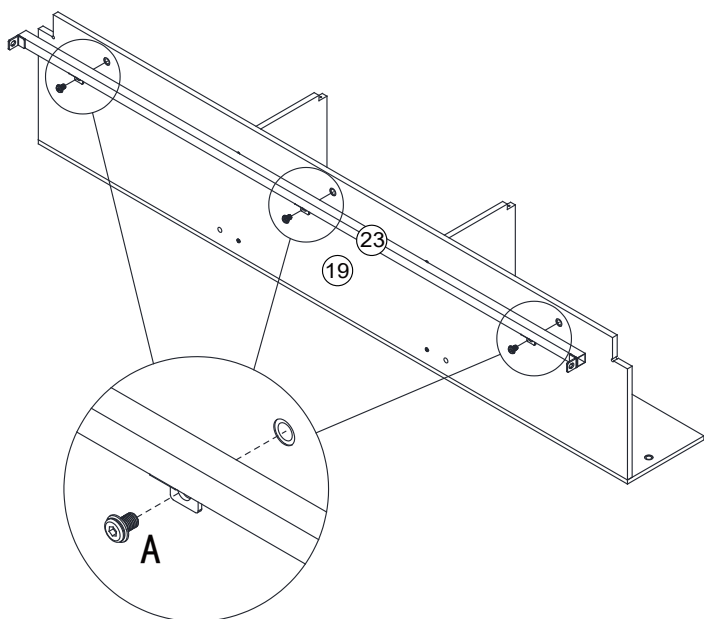


A		3pcs
M8x12		

13

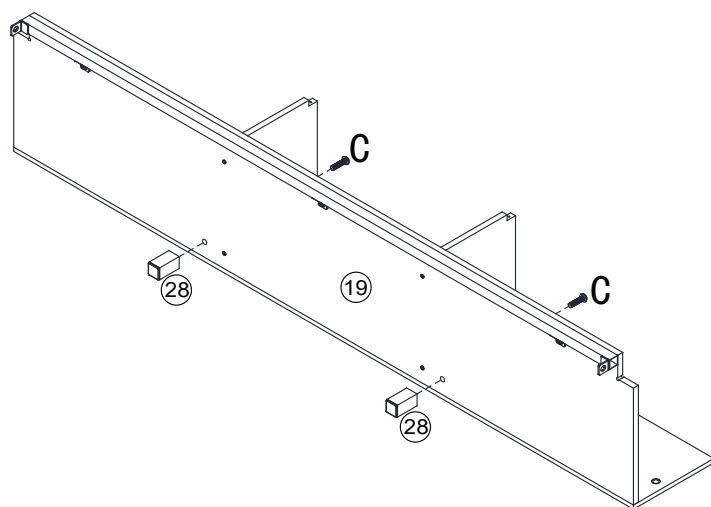

C		2pcs
M8x33		


14

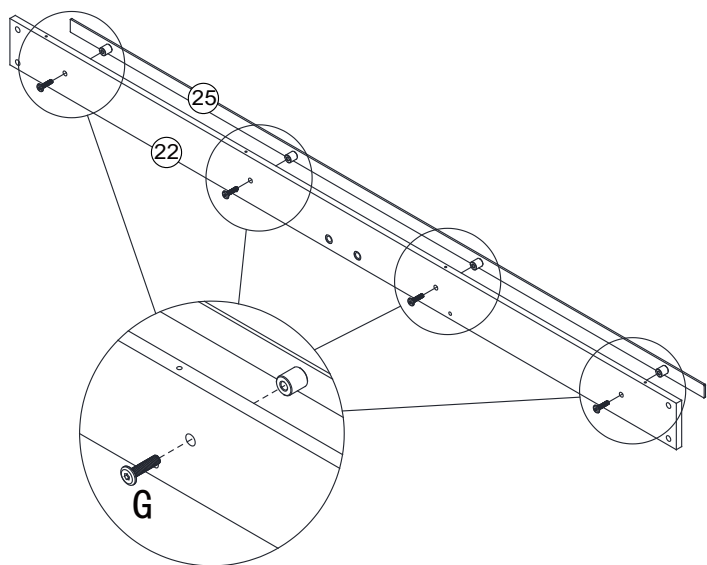

G		4pcs
	M6x25	


15

! Do not fully tighten the screws yet.

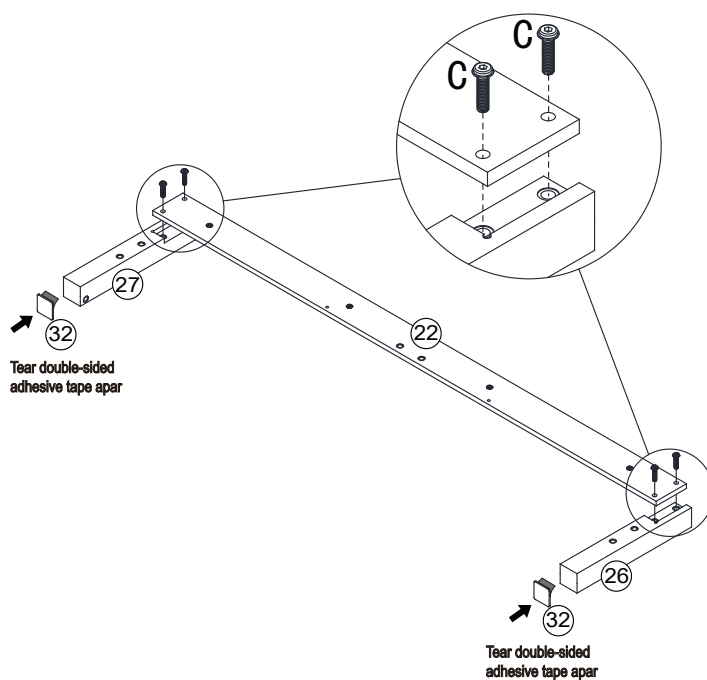

C		4pcs
	M8x33	


16

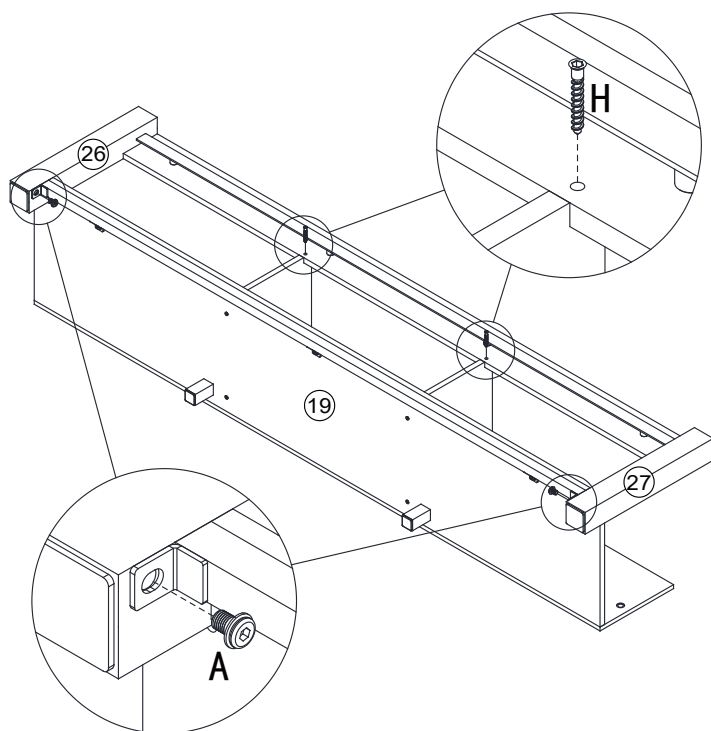

A		2pcs
	M8x12	
H		2pcs
	M5x35	


! Fully tighten all the screws.

17

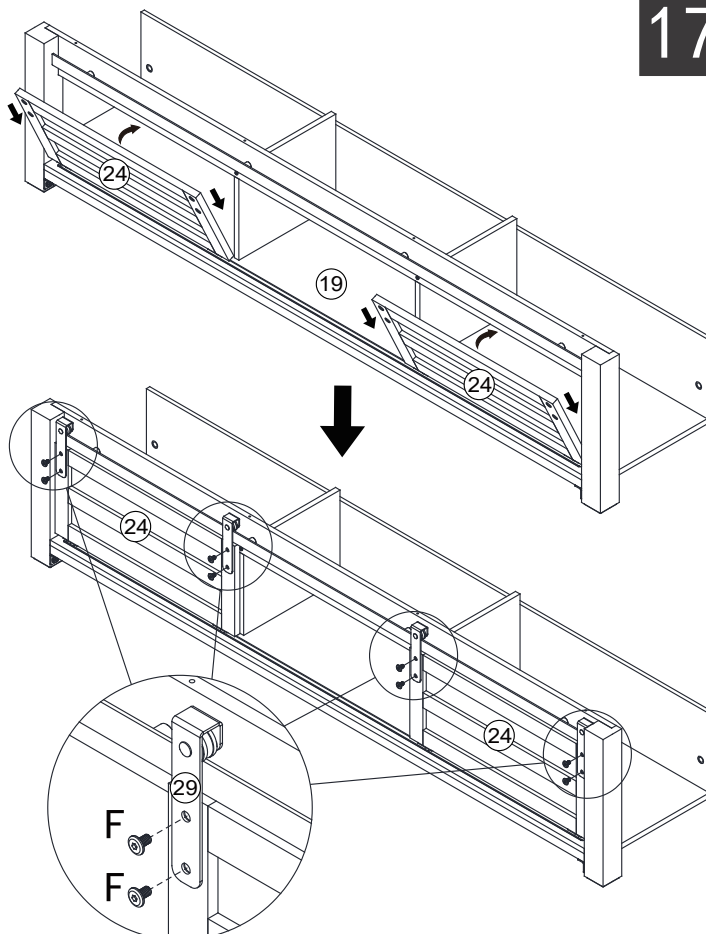


F		8pcs
	M6x10	

18

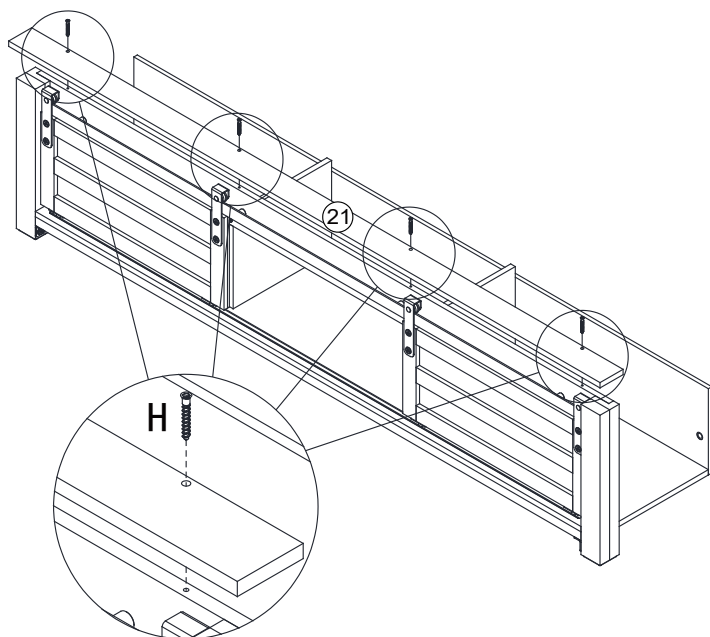


H		4pcs
	M5x35	

19

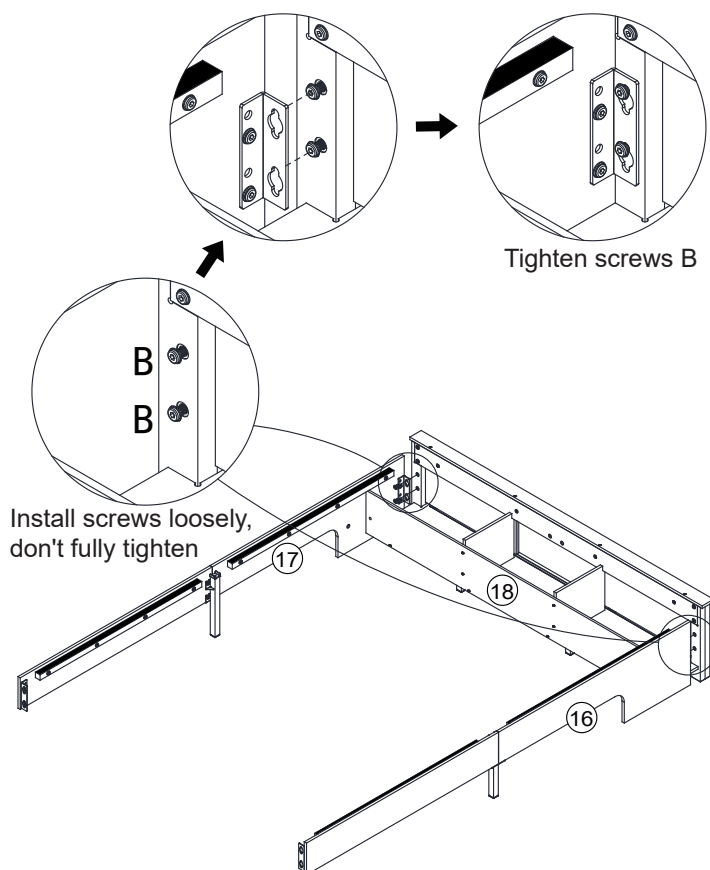


B		4pcs
	M8x20	

20

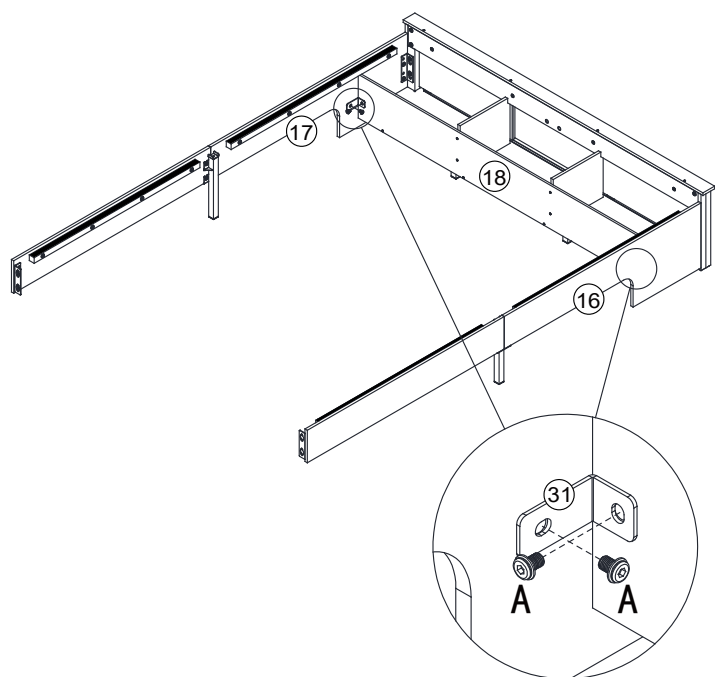


A		4pcs
	M8x12	

21

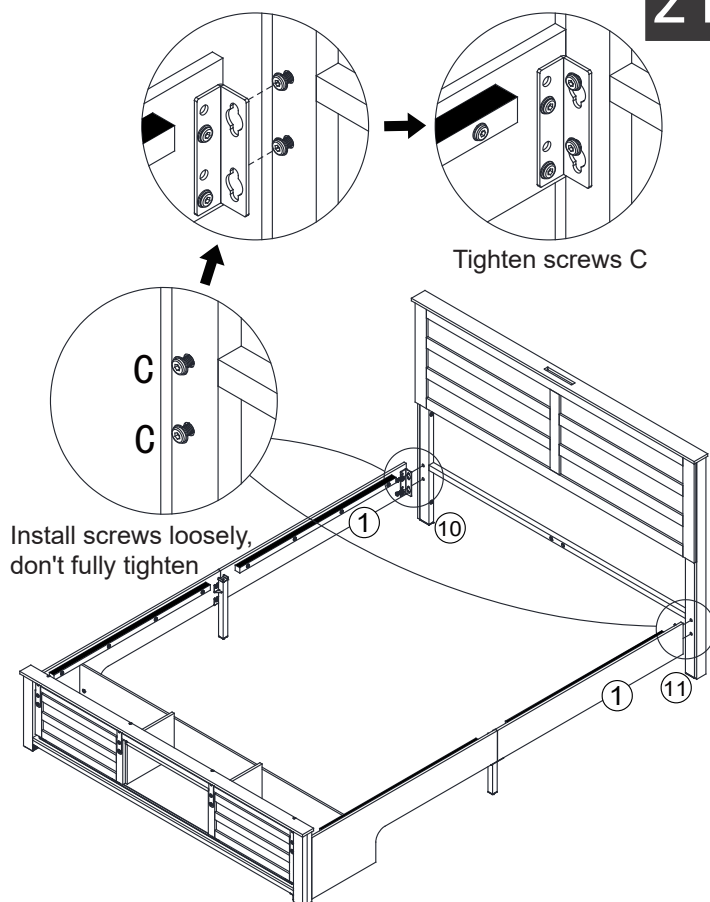

C		4pcs
	M8x33	

22

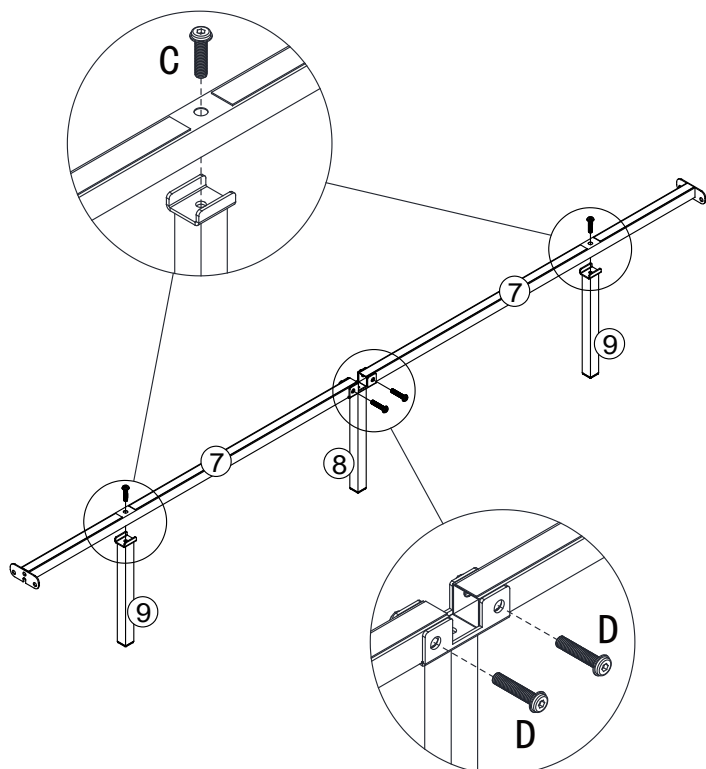


C		2pcs
D		2pcs

 Do not fully tighten the screws yet.

23


 Fully tighten all the screws.

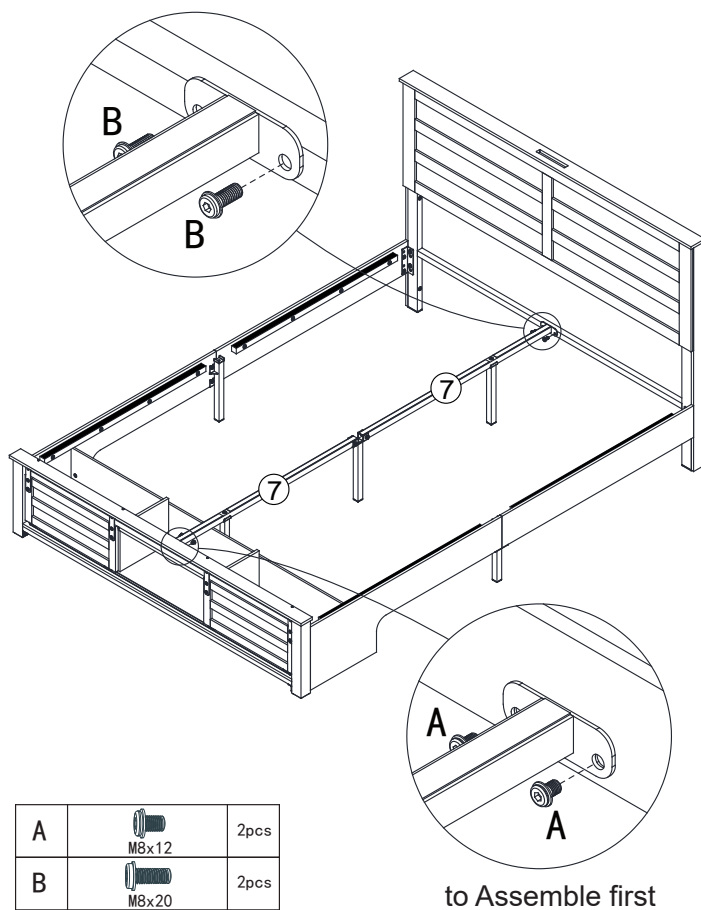

A		2pcs
B		2pcs


to Assemble first


24

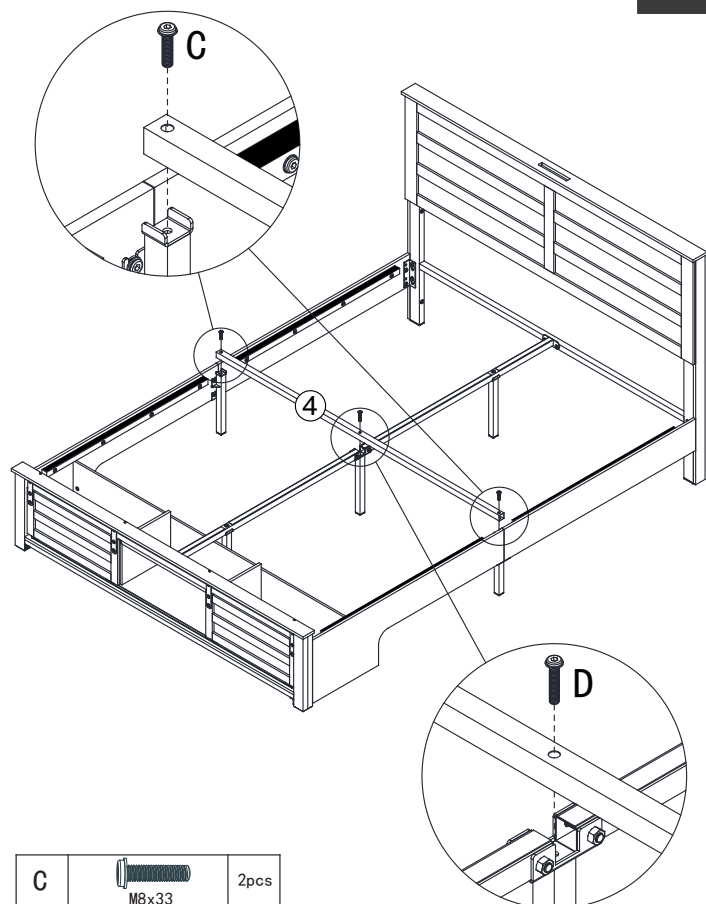

C		2pcs
D		1pc

25

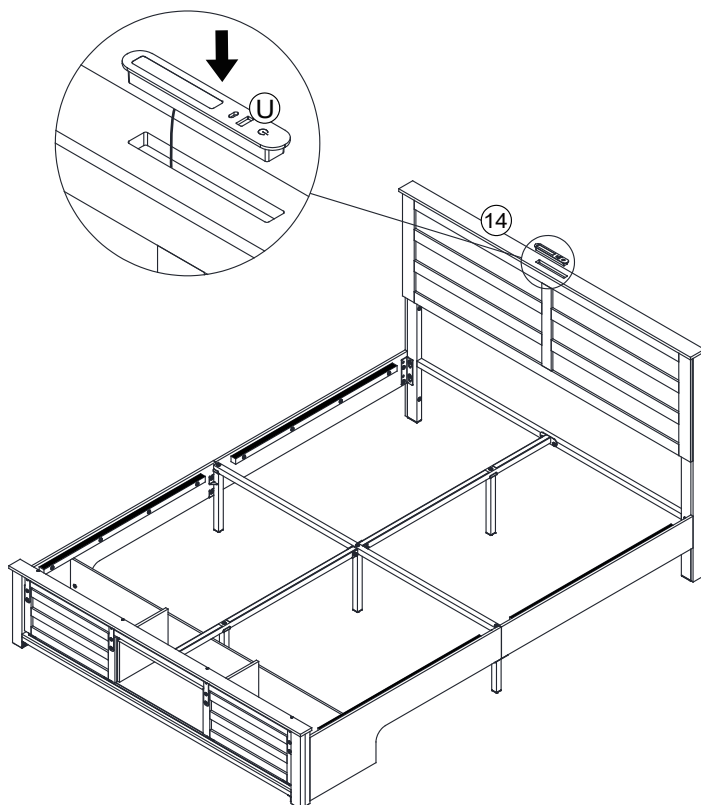

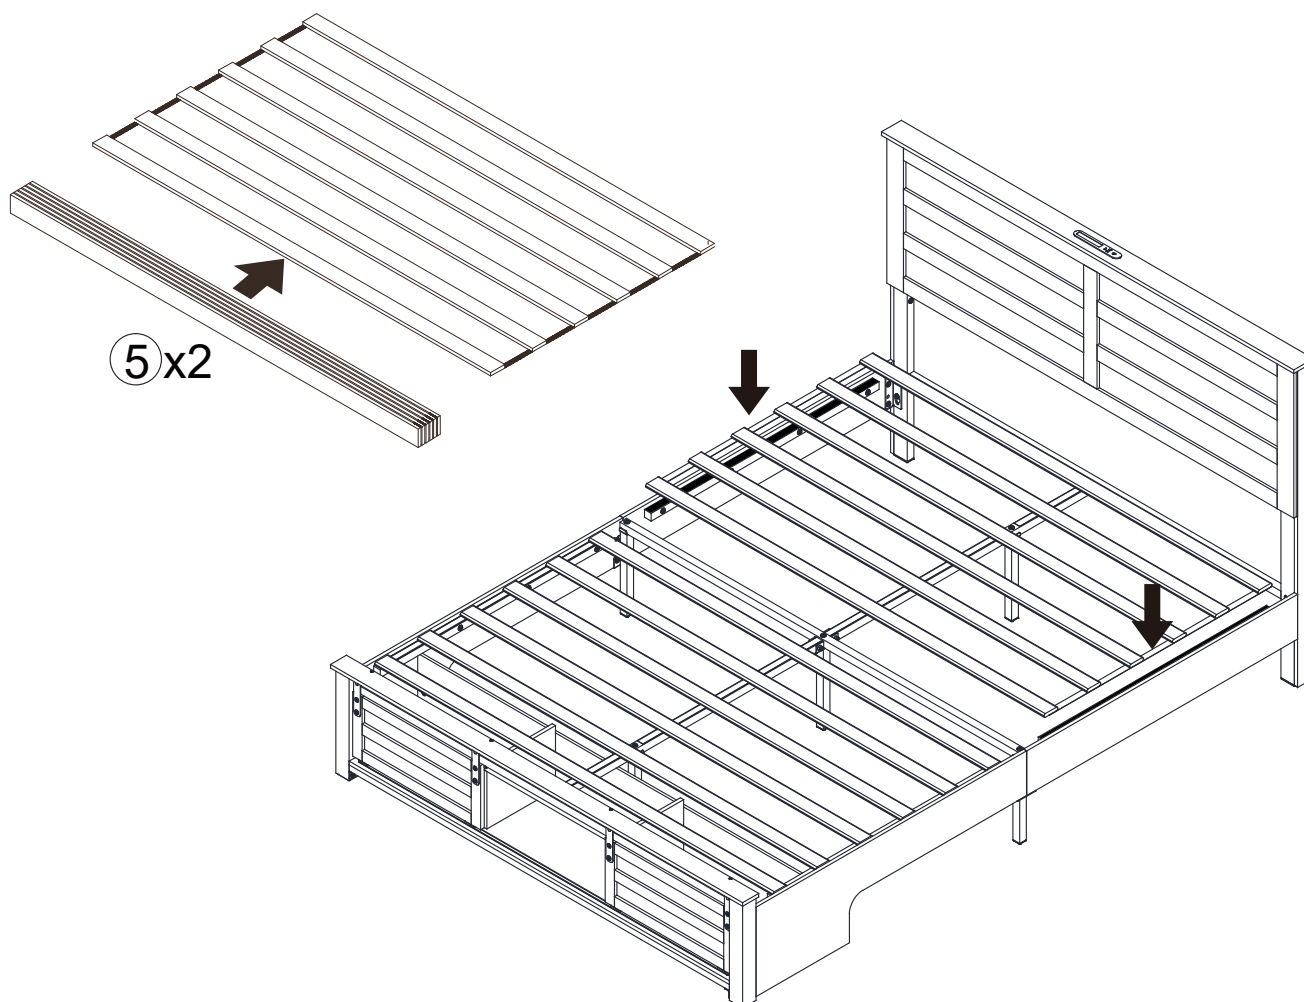

Finish

