


Button Tufted Accent Chair

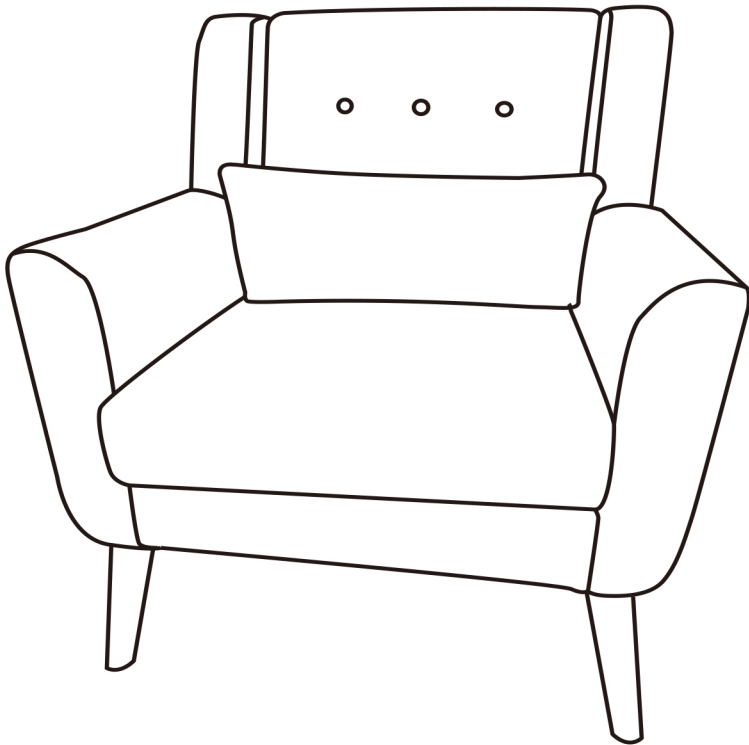

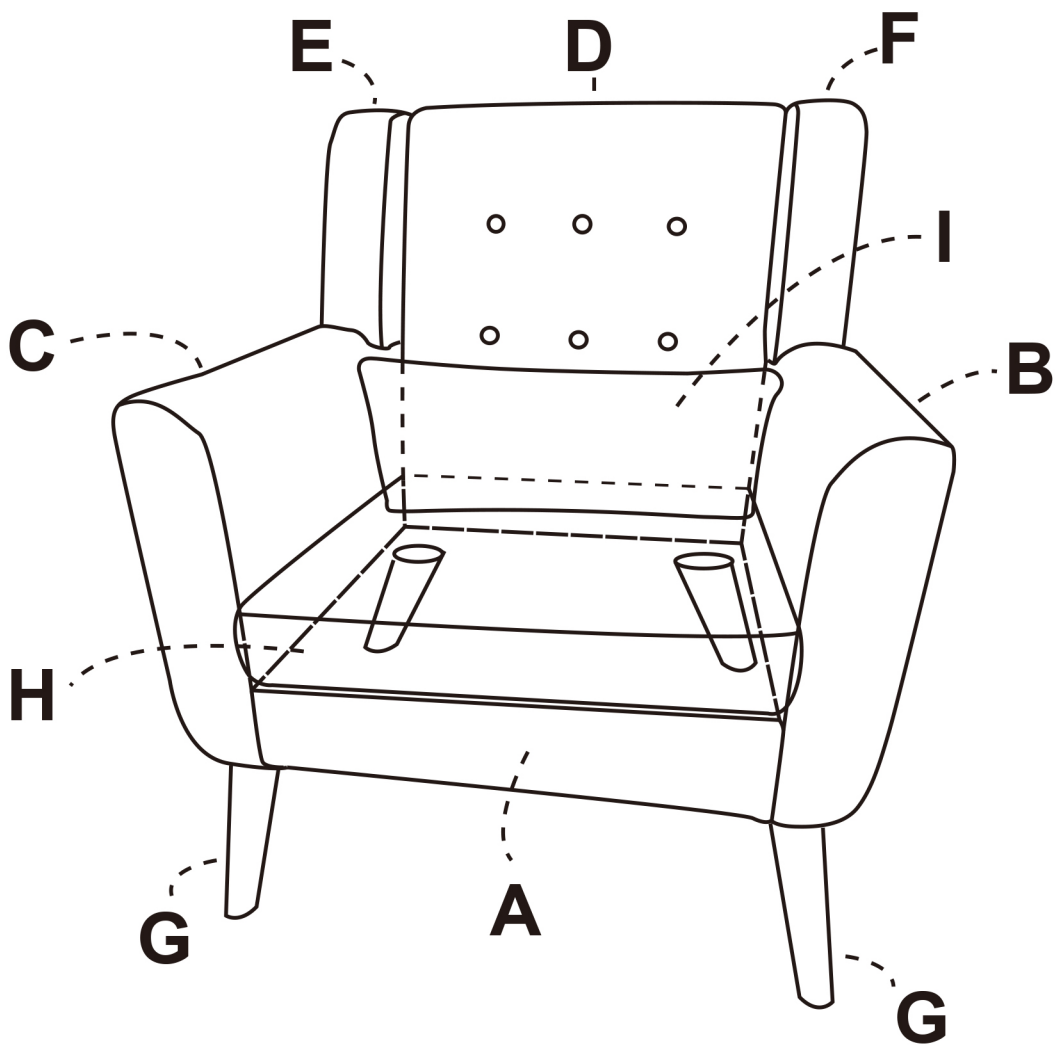

J



x7

K



x4

L



x11

M




x4

N




x1

O




x2

p




x 1

Q





x 2


Please make sure all screws are in the screw holes before tightening the screws

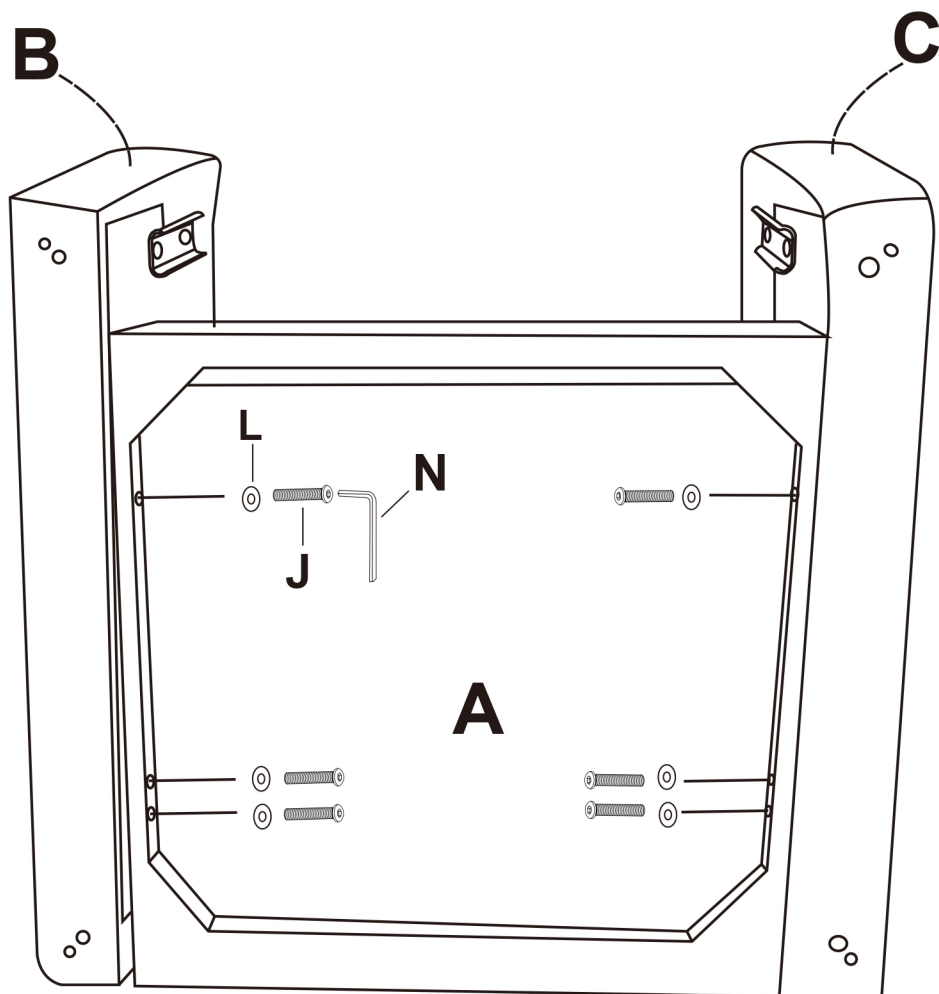



Make sure the round spacer is placed on the screw before tightening it

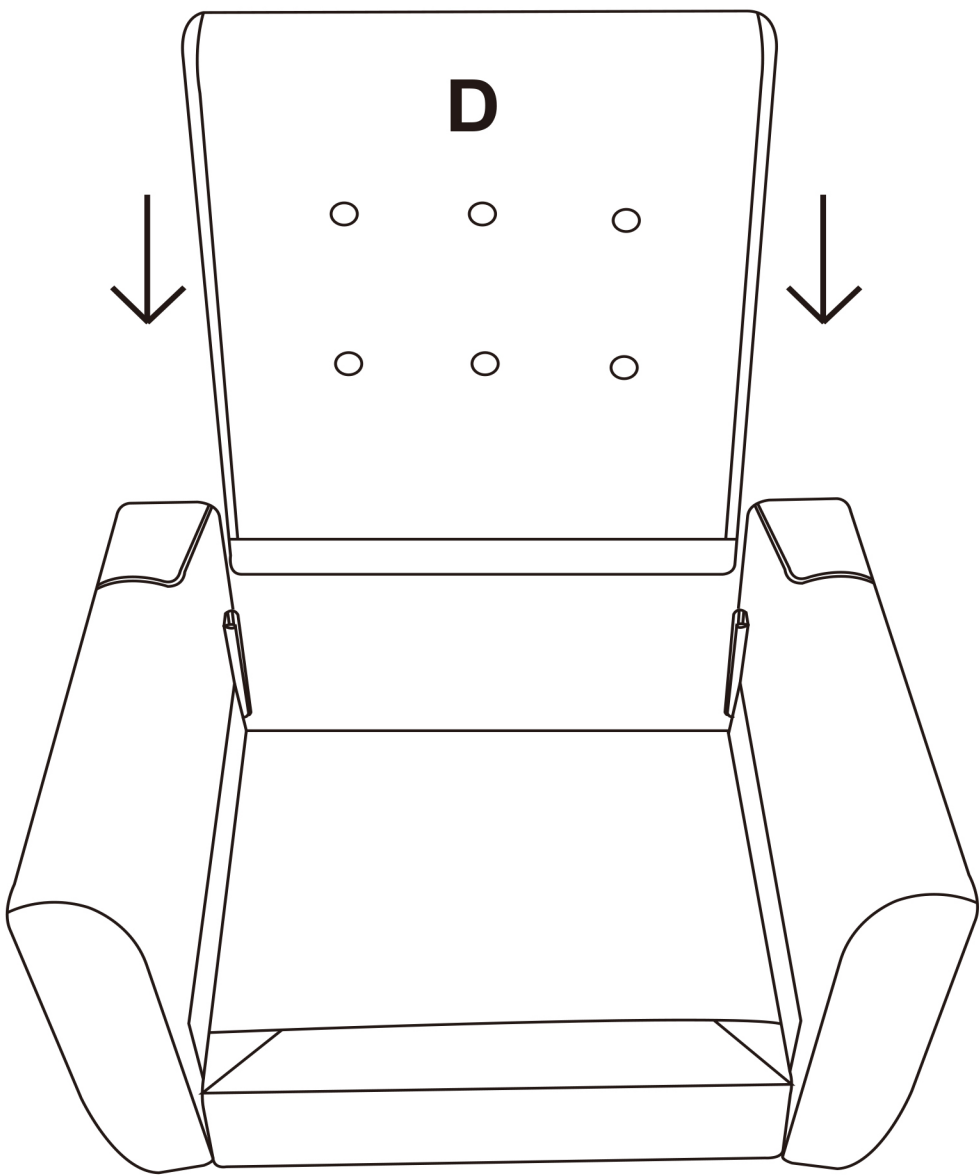

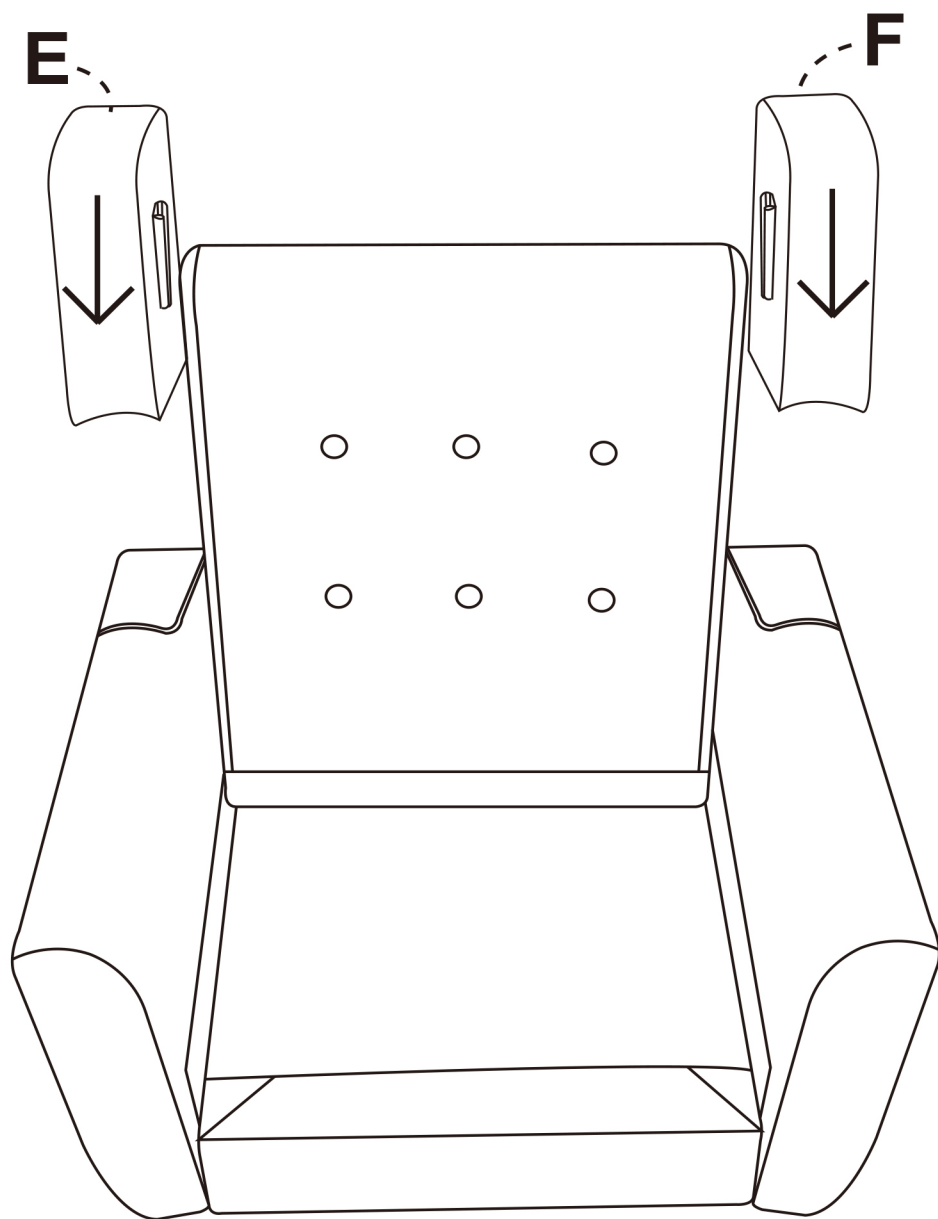

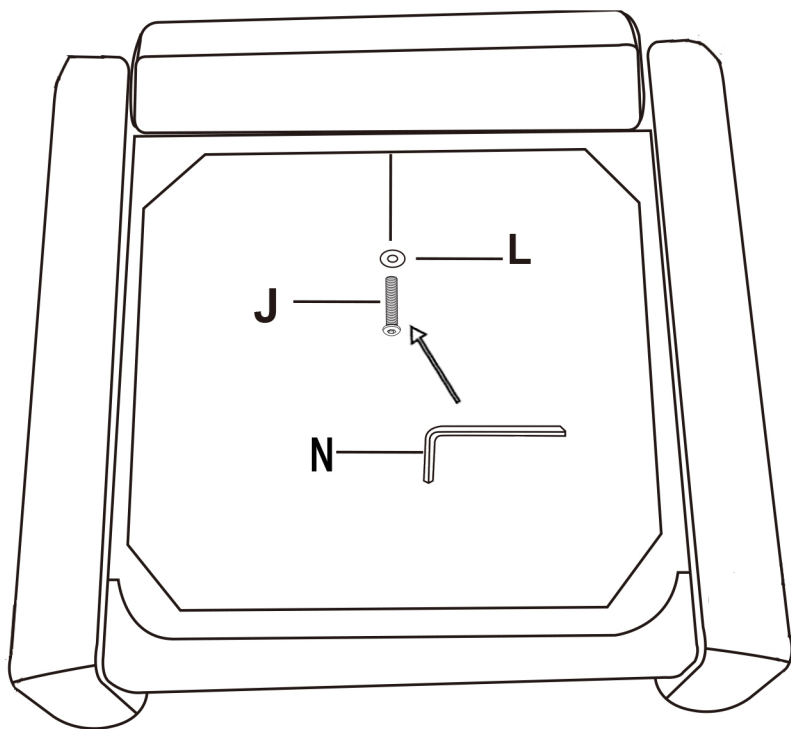

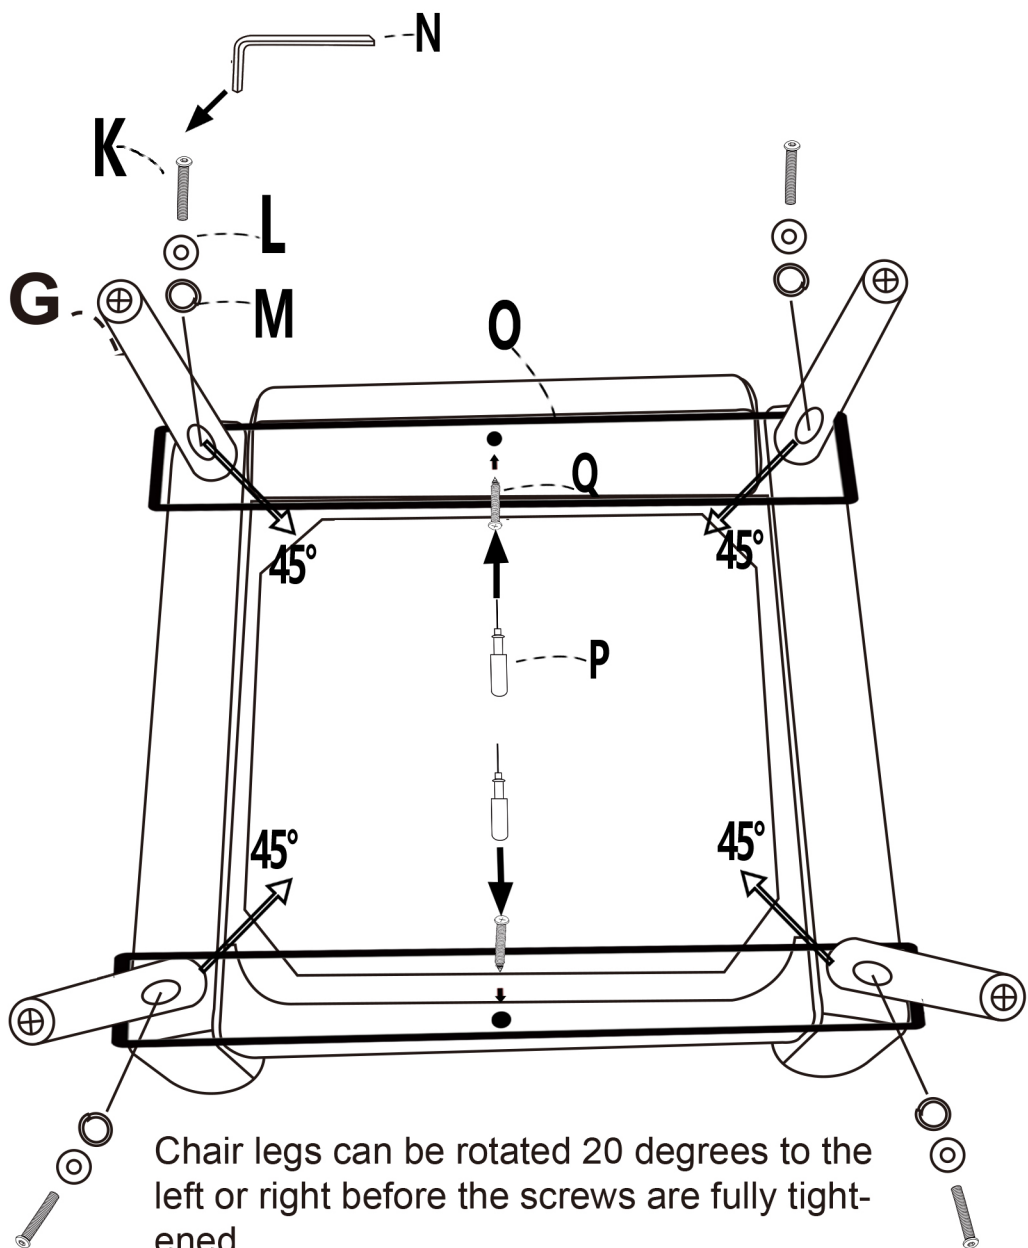

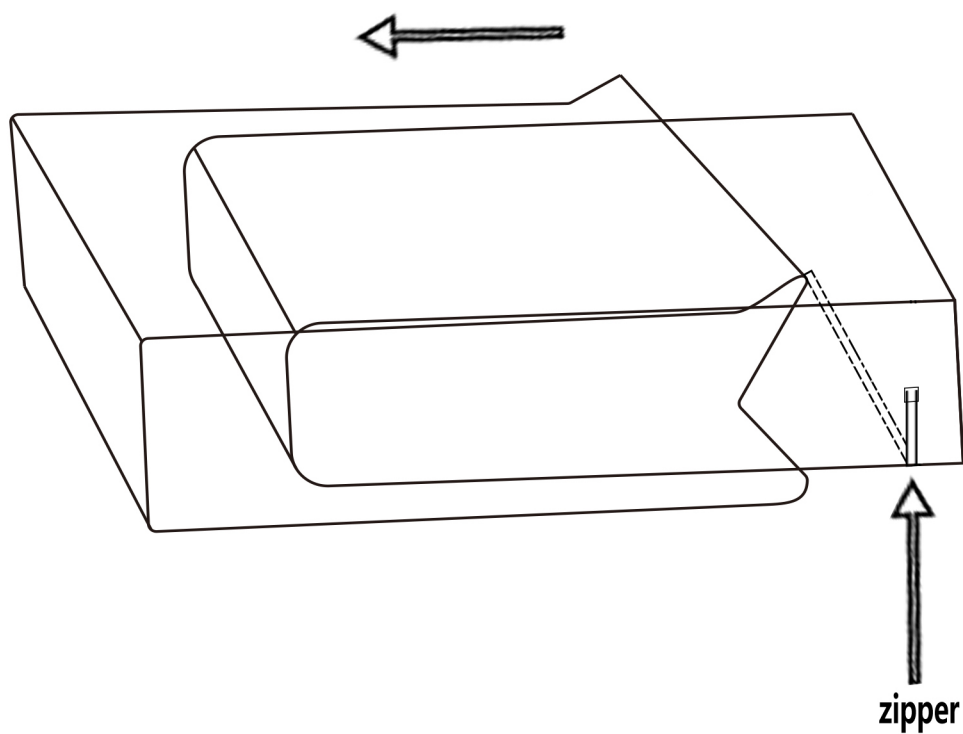

Place the cushion zipper in the lower right and plug it into the sleeve

