
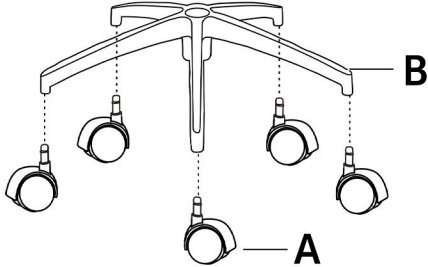
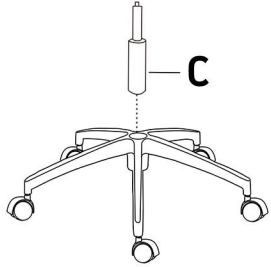


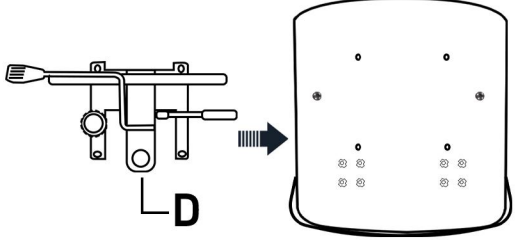
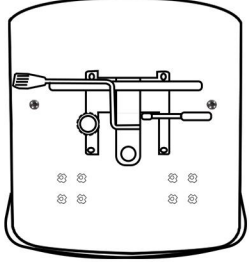


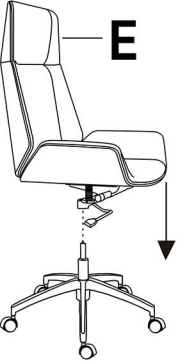


# Installation Diagram

A		5	<p><b>1</b></p>  <p>Align the caster with the mounting holes and press it down firmly until it clicks into place.</p>	<p><b>2</b></p>  <p>Insert the hydraulic rod directly into part B, as shown in the figure above.</p>
B		1		
C		1	<p><b>3</b></p>  <p>Align accessory D according to the diagram, position it to match the four screw mounting holes under the chair base, and secure it into place.</p>	<p><b>4</b></p>  <p>Secure the screws as illustrated in the diagram.</p>
D		1		
E		1	<p><b>5</b></p>  <p>Align the mounting holes in section D with the hydraulic rod, and gently press down to connect them. The installation is now complete.</p>	<p><b>6</b></p> 