

# ITEM NO.: LS-8875

## ASSEMBLY INSTRUCTIONS

### ※ VERY IMPORTANT


**PLEASE READ THOROUGHLY. MAKE SURE YOU PROPERLY ALIGN POLES BEFORE SCREWING TO SCREW THEM TOGETHER. TO AVOID DAMAGING THE CONNECTION THREADS. NOT ADHERING TO THIS PROCEDURE MAY VOID YOUR WARRANTY!**

1. Carefully place all parts on a smooth surface and line them up as per the sketch.  
Begin the assembly at the bottom of the lamp. Screw the bottom tube (F) onto the base (G) and turn clockwise to tighten.
2. Screw the middle tube (E) onto the bottom tube (F) and turn clockwise to tighten.
3. Screw the upper tube (D) onto the middle tube (E) and turn clockwise to tighten.
4. Screw the socket assembly (C) onto the upper tube (D) and turn clockwise to tighten.
5. Remove the ring (A) from socket, then put the shade (B) onto the socket and turn to tighten with the ring (A).
6. Install the bulb and insert the polarized plug into a wall outlet and enjoy your lamp.  
Turn the light on and off using step-on/off switch on the cord.
7. To clean, use a soft dry cloth only. Never use chemical or abrasive cleaners.

**Use a 23W CFL Type bulb or 100W (Maximum) Incandescent A Type bulb.**

### “IMPORTANT SAFETY INSTRUCTIONS”

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

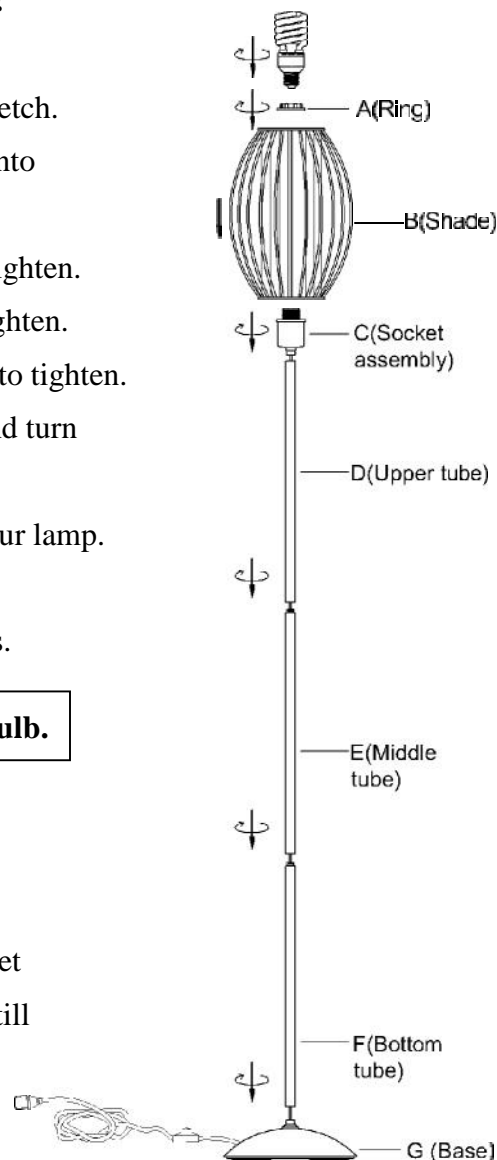

※ PLEASE INFORM YOUR DEALER IMMEDIATELY IN CASE OF ANY PARTS SHORTAGE.

※ SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCES.