

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finished goods during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help.

PREPARATION

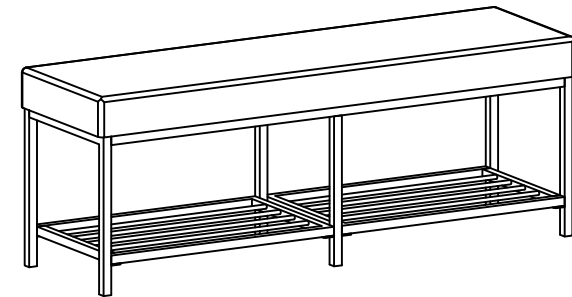
- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

INDOOR METAL/ALUMINUM FURNITURE: Wipe spills immediately. Maintain with regular dusting and clean with mild soap and water, dry thoroughly and do not use a brass cleaner. Adhesive felt pads should always be used/applied in order to prevent damage to the furniture or surfaces on which the furniture is placed.





UPHOLSTERY CARE: To prevent overall soiling, frequent vacuuming or light brushing is recommended. Cushions and pillows should be turned on a weekly basis. Down-filled cushions should be brushed rather than vacuumed. Spot clean, using a mild water-free solvent or dry cleaning product. Only a professional cleaner should undertake a complete overall cleaning. The use of steam or water-based cleaners may cause excessive shrinking or staining.




Product Dimensions: 48"W x 14.5"D x 17.75"H



Weight Capacity : 550 lbs
Warning : Do not stand on the product
Warning : Do not over torque bolts

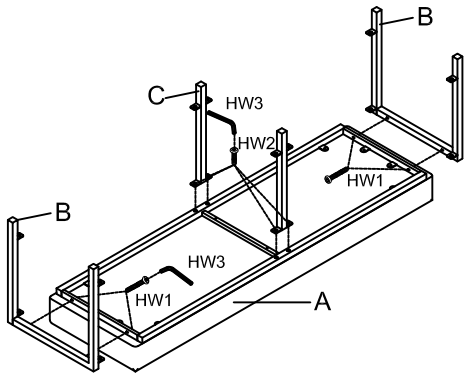
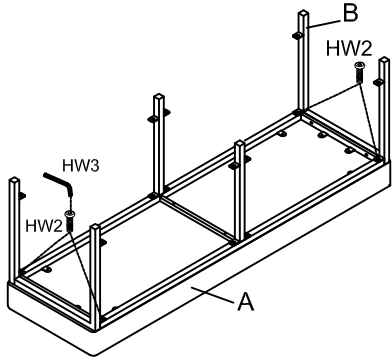
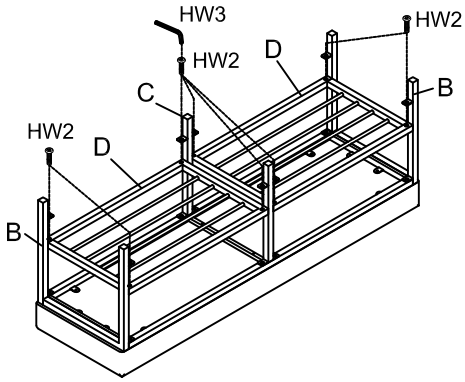
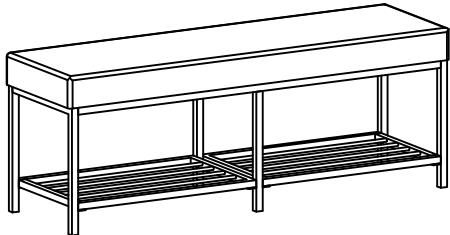
Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QTY
A	Seat Cushion		1x
B	Side Leg		2x
C	Mid Support Leg		2x
D	Shelf		2x

PIECE	DESCRIPTION	PICTURE	QTY
HW1	Hex Socket Bolt	 1/4"-20 x 1"	4x
HW2	Hex Socket Bolt	 1/4"-20 x 0.5"	16x
HW3	Allen Key	 4mm	1x

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you are having difficulty, our friendly Customer Care team is always here to help.

<div data-bbox="114 363 181 432" data-label="Text"> <p>1</p> </div>  <ul style="list-style-type: none"> • Do not fully tighten the bolts until the product is assembled. 	<div data-bbox="613 363 680 432" data-label="Text"> <p>2</p> </div>  <ul style="list-style-type: none"> • Do not fully tighten the bolts until the product is assembled. 	<div data-bbox="1113 363 1180 432" data-label="Text"> <p>3</p> </div>  <ul style="list-style-type: none"> • Do not fully tighten the bolts until the product is assembled. 	<div data-bbox="1612 363 1680 432" data-label="Text"> <p>4</p> </div>  <ul style="list-style-type: none"> • After properly adjusting the product level for stability, then fully tighten all bolts.
<p>Step 1</p> <p>Attach the 2*Side Leg (B) to the both ends of the bottom of the Seat Cushion (A) respectively, Then use the Allen Key (HW3) to screw in 4*Hex Socket Bolts (HW1) into the side legs (B) through the 4*holes in the iron side frame at the bottom of the seat cushion (A).</p> <p>Attach the 2*Mid Support leg (C) to the bottom of the Seat Cushion (A) respectively, Then use the Allen Key (HW3) to screw in 4*Hex Socket Bolts (HW2) into the iron frame at the bottom of the seat cushion (A) through the 4*holes in the mid support leg (C).</p>	<p>Step 2</p> <p>Use the Allen Key (HW3) to screw in 4*Hex Socket Bolts (HW2) into the iron frame at the bottom of the seat cushion (A) through the 4*holes in the Side leg (B).</p>	<p>Step 3</p> <p>Attach the 2*Shelf (D) to the assembled legs respectively, Then use the Allen Key (HW3) to screw in 8*Hex Socket Bolts (HW2) into the 2*Shelf (D) through the 8*holes in the bracket at the bottom of the 6*legs (B & C).</p>	<p>Step 4</p> <p>Turn the assembled product upright. Assembly is now complete.</p>