

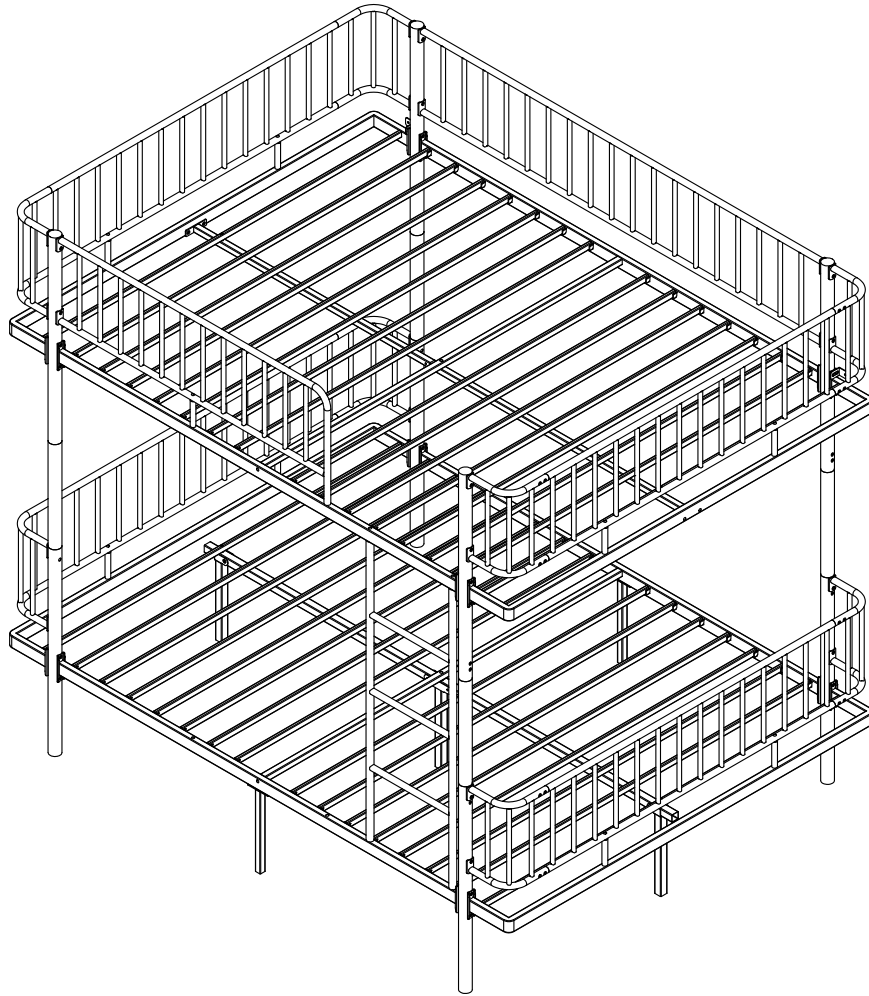
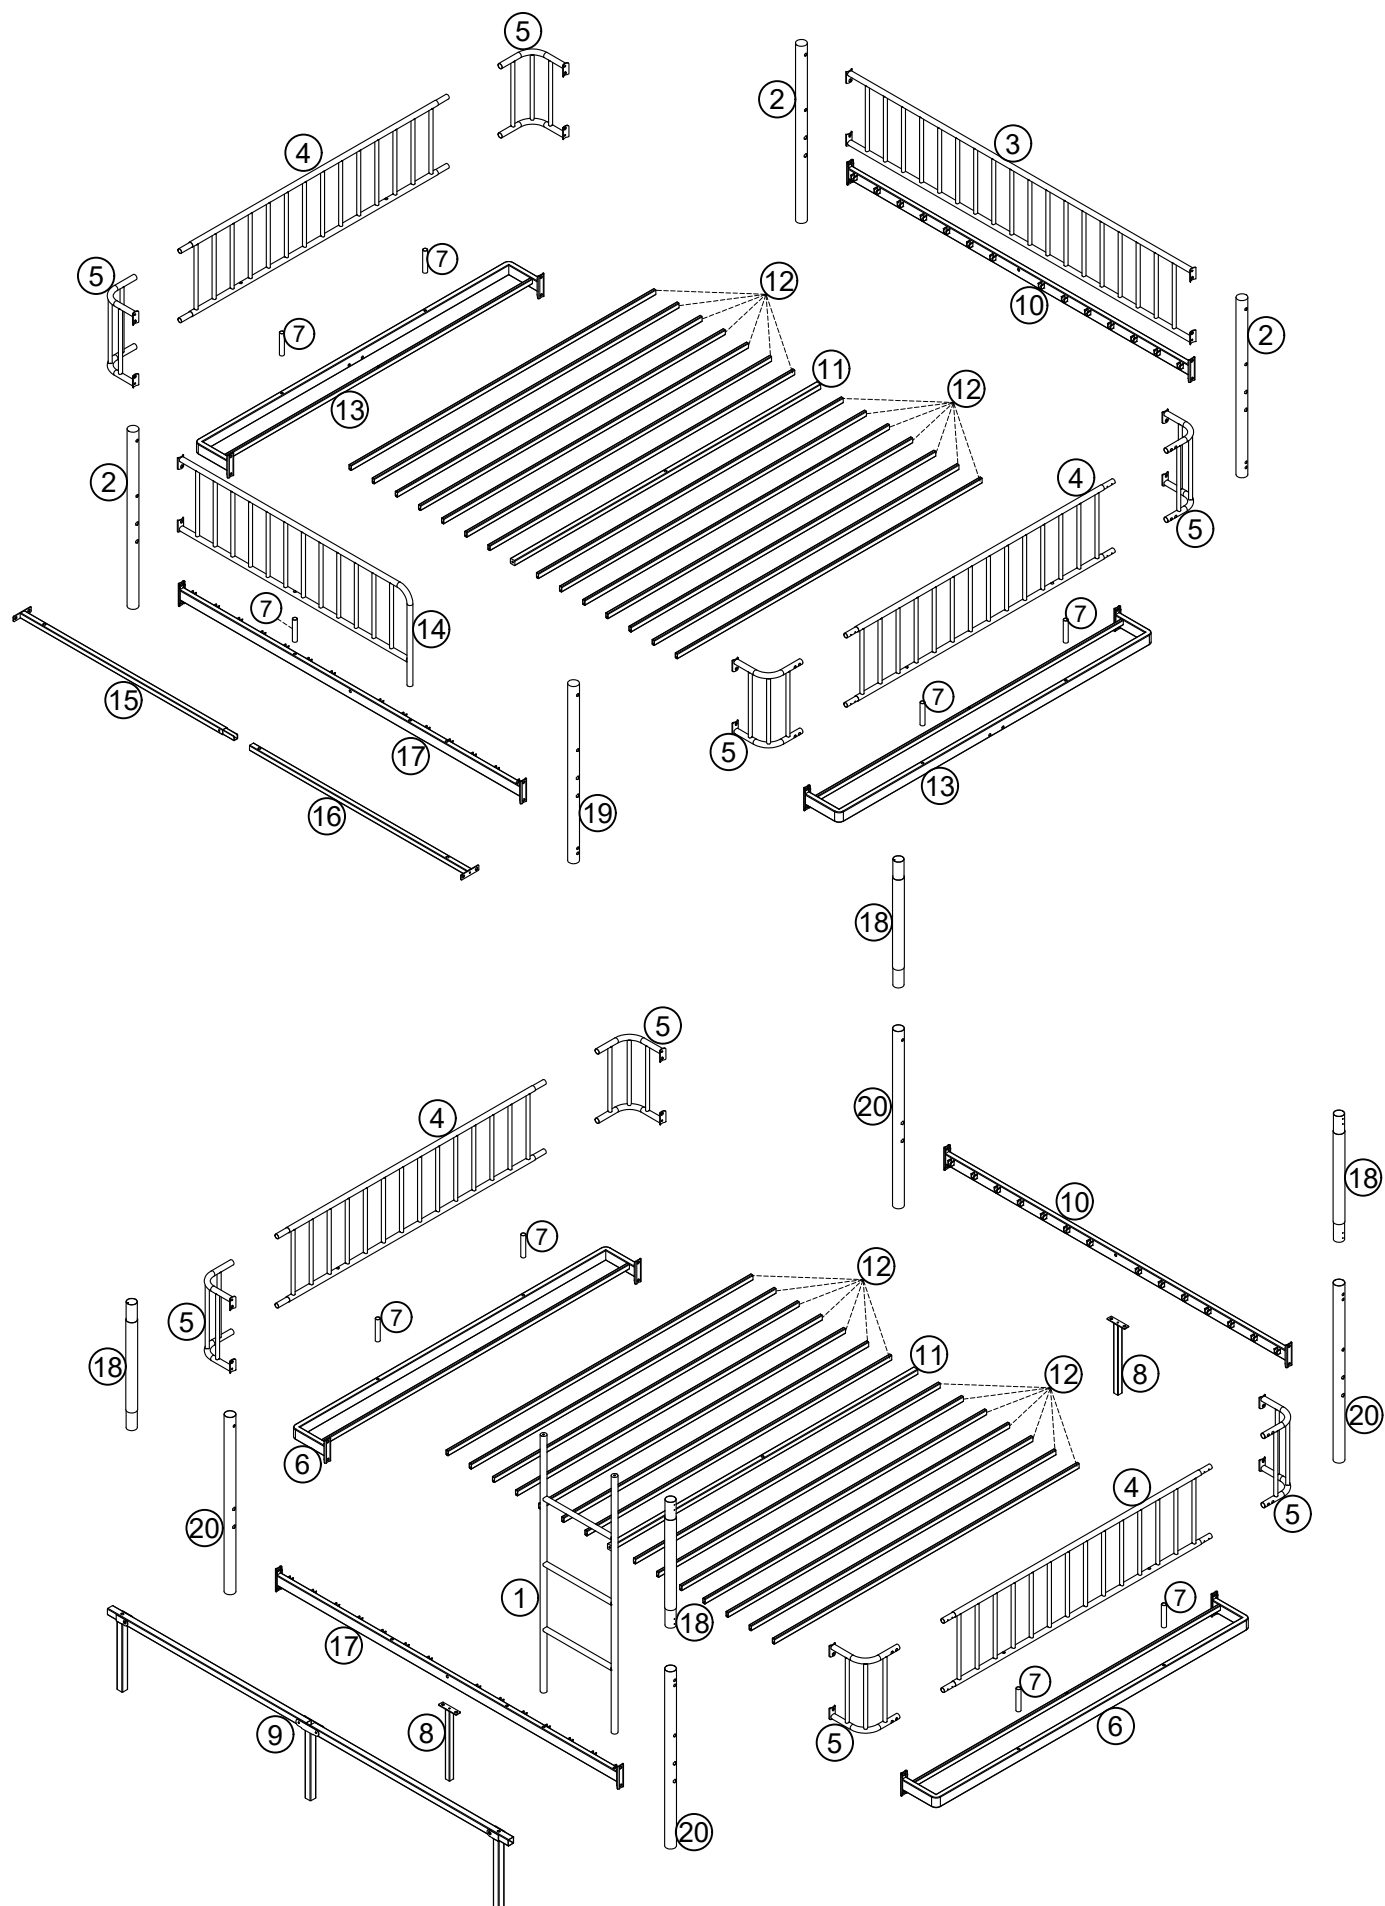
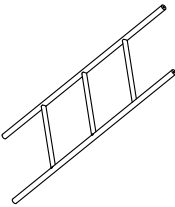
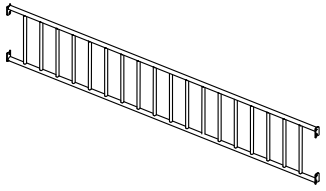
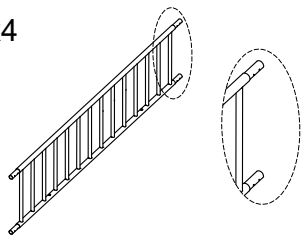
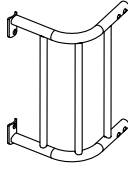
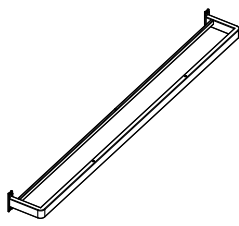

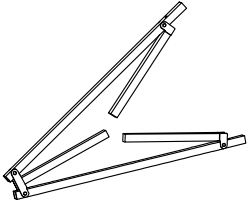
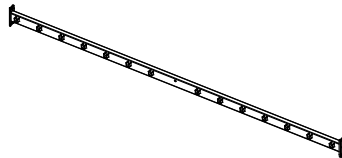
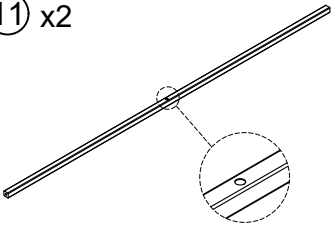
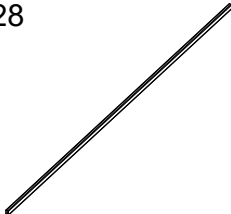
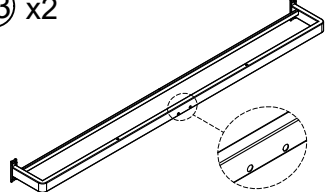
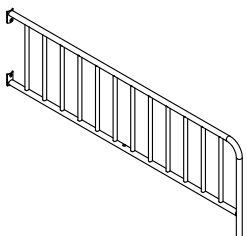
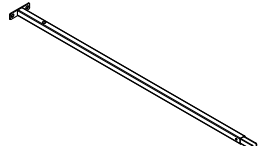
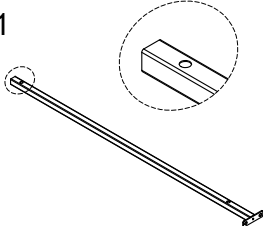


Assembly instruction A







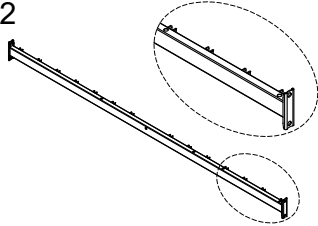


Assembly instruction A




① x1 	② x3 	③ x1 
④ x4 	⑤ x8 	⑥ x2 
⑦ x9 	⑧ x4 	⑨ x1 
⑩ x2 	⑪ x2 	⑫ x28 
⑬ x2 	⑭ x1 	⑮ x1 
⑯ x1 	⑰ x2 	⑱ x4 
⑲ x1 	⑳ x4 	㉑ x1 

Hardware List


A×32 (2+extra)  M8×20mm	B×17(1+extra)  M6×55mm	C×4  M6×40mm
D×15 (1+extra)  M6×32mm	E×26 (1+extra)  M6×15mm	F×49 (4+extra)  M6×10mm
G×8 (1+extra)  M6×15mm	H×2  M4	I×2 
J×2  M8×40mm	K×2  M5×40mm	

1

Step 1

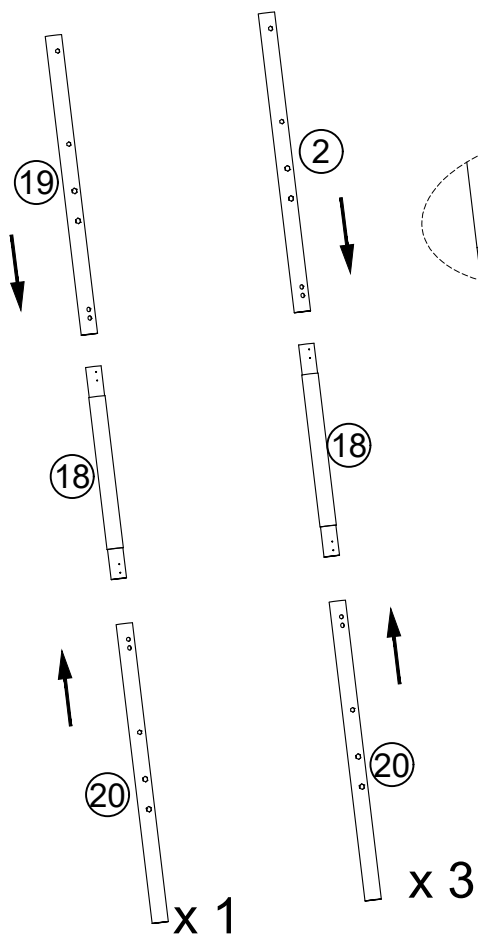

Step 2

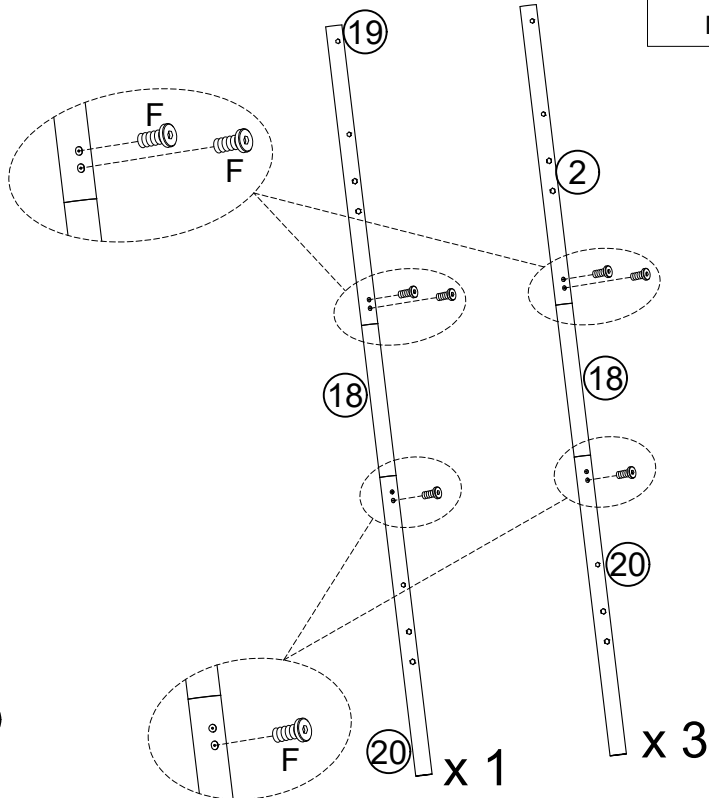


F×12pcs




M6×10mm

2



Step 1


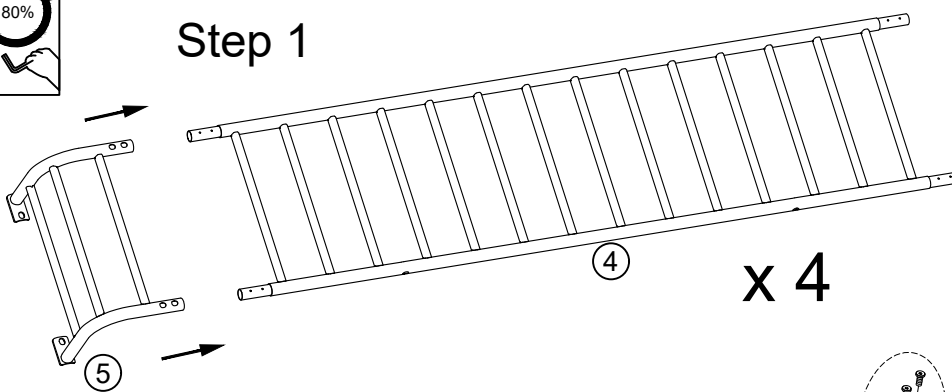










F×32pcs






M6×10mm

Step 2

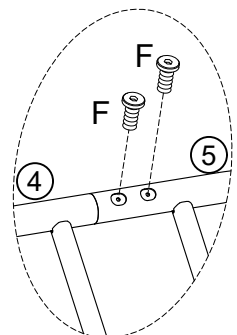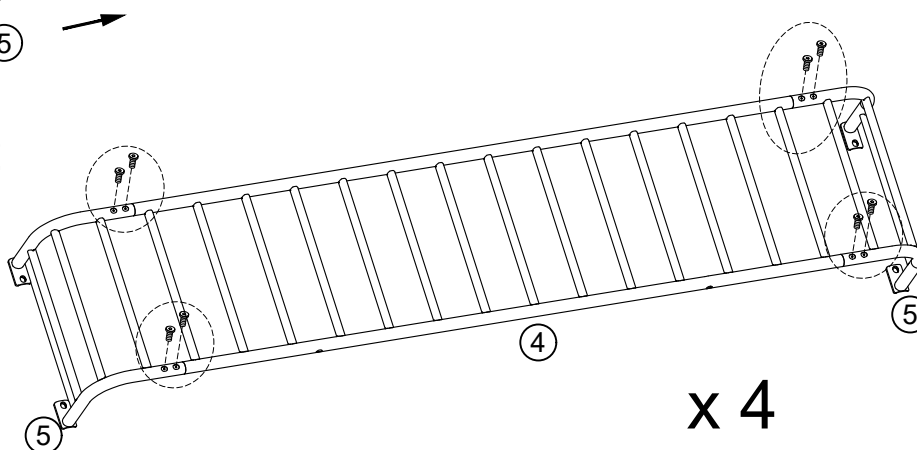

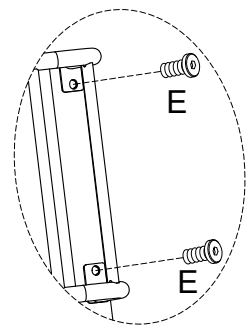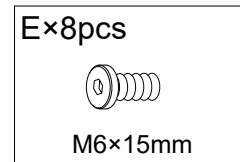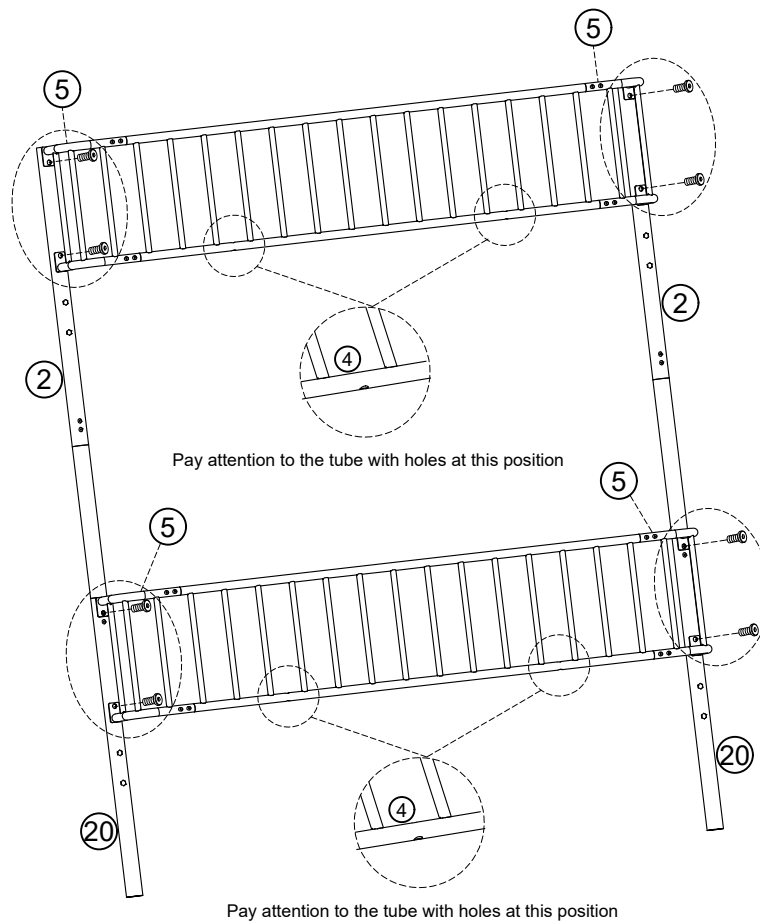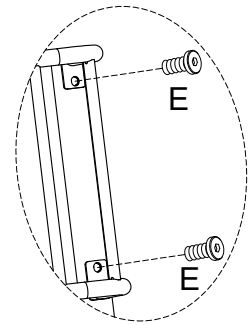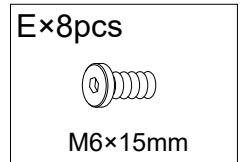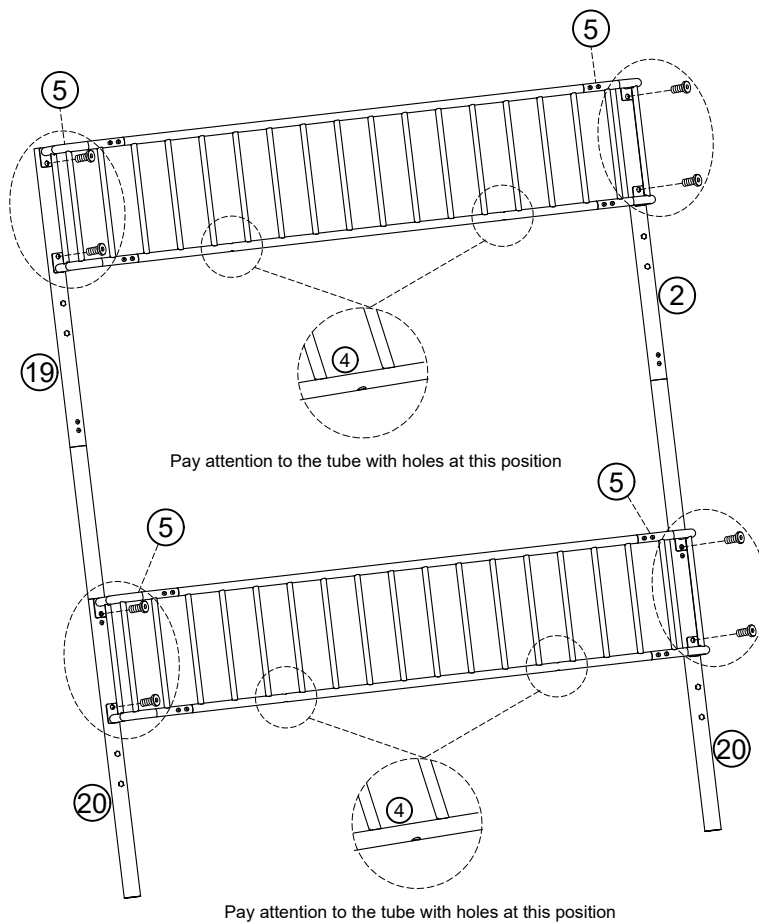

5

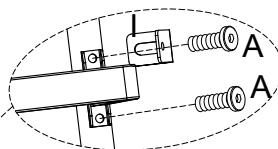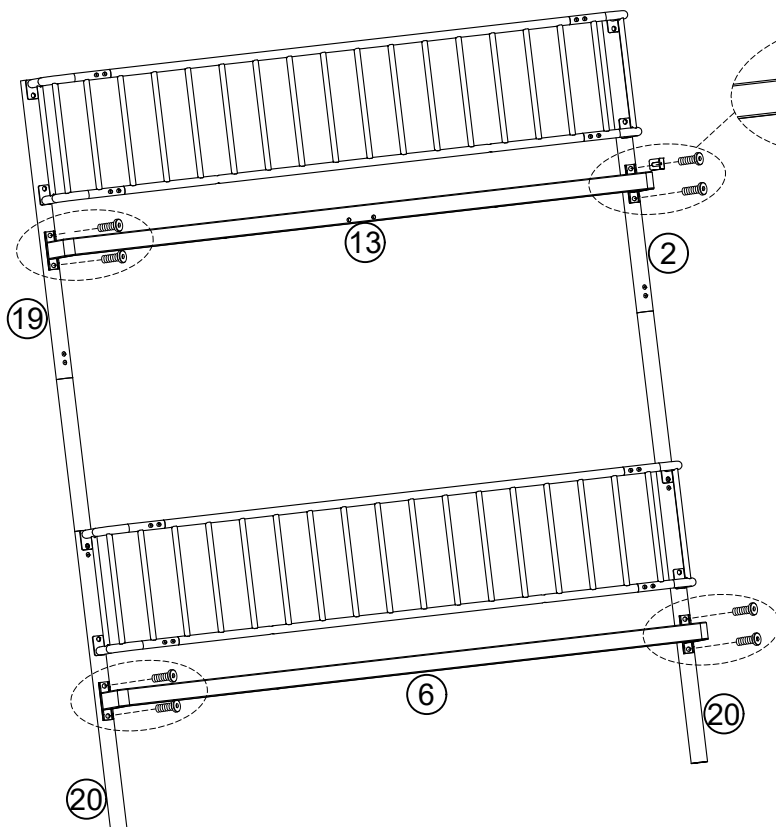



A×8pcs






M8×20mm

I×1pc

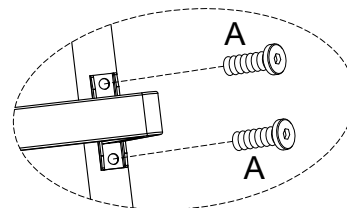

6

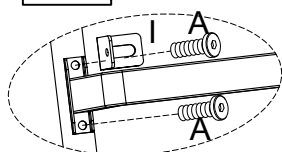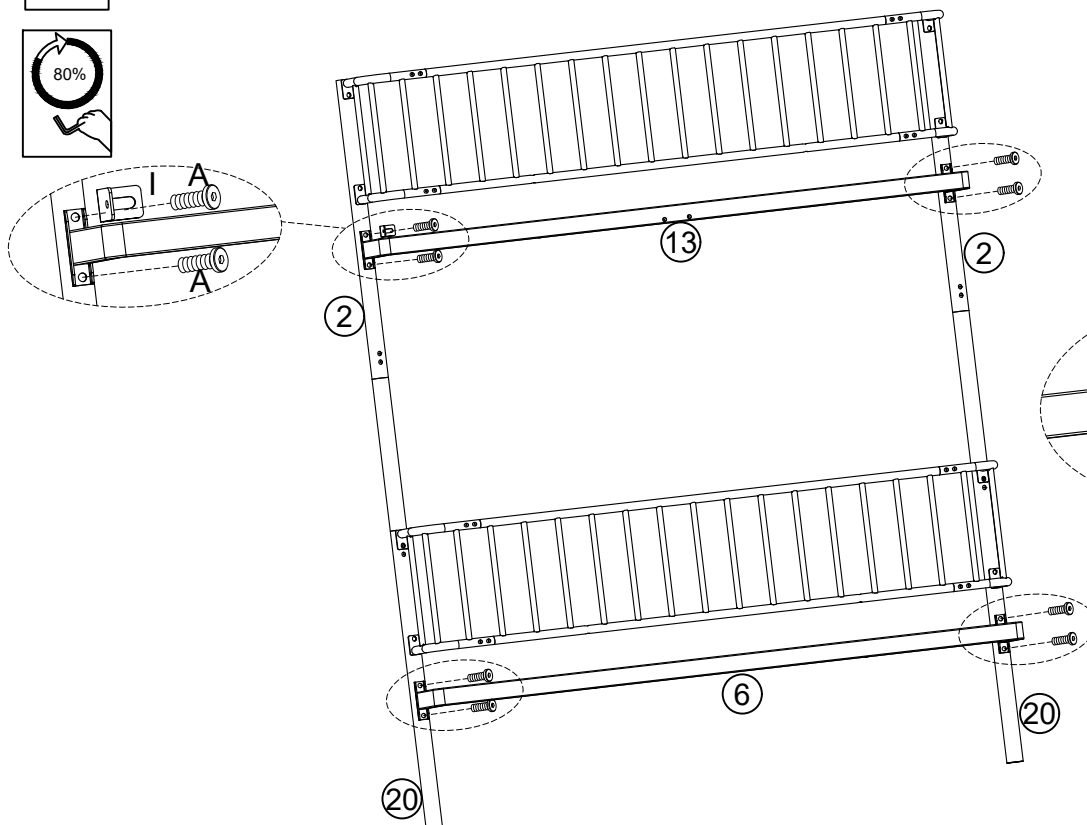



A×8pcs




M8×20mm

I×1pc

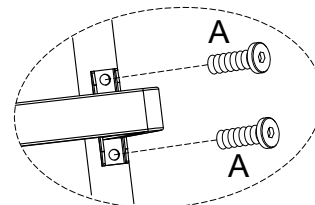

7

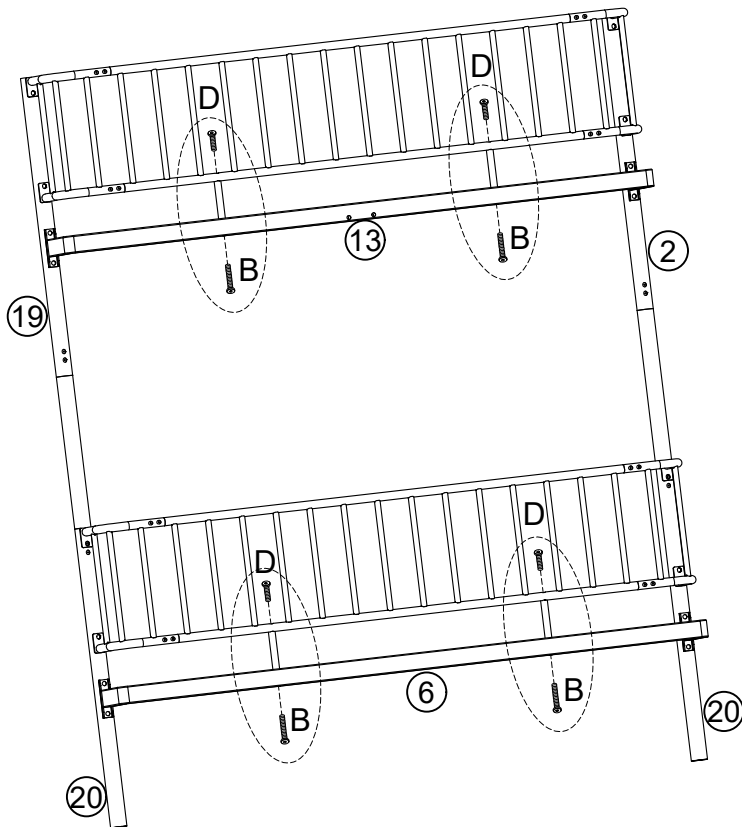


B×4pcs




M6×55mm


D×4pcs




M6×32mm

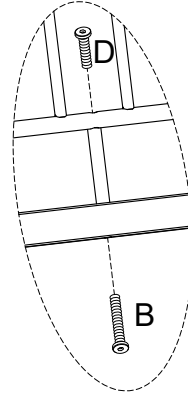

8

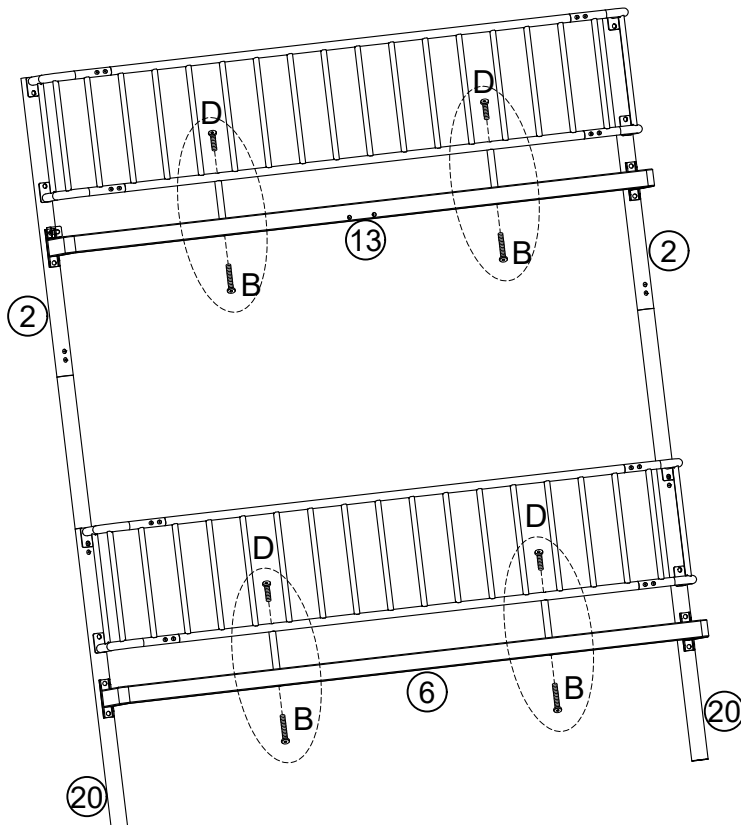

B×4pcs




M6×55mm

D×4pcs



M6×32mm

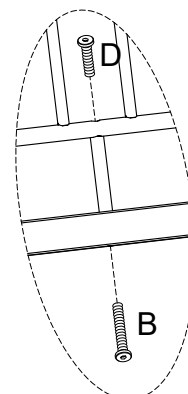


9


F×4pcs



M6×10mm

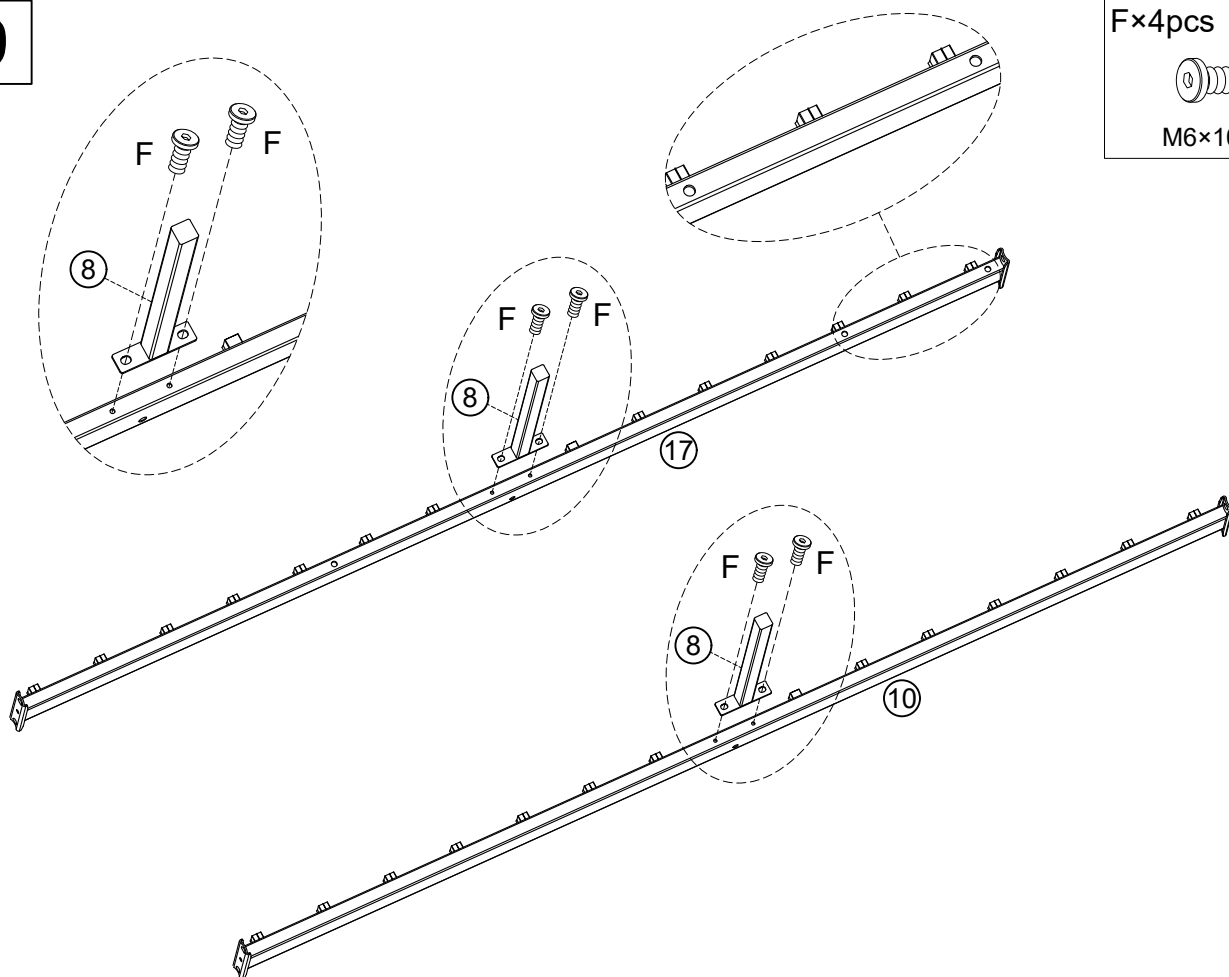


10





A×8pcs



M8×20mm

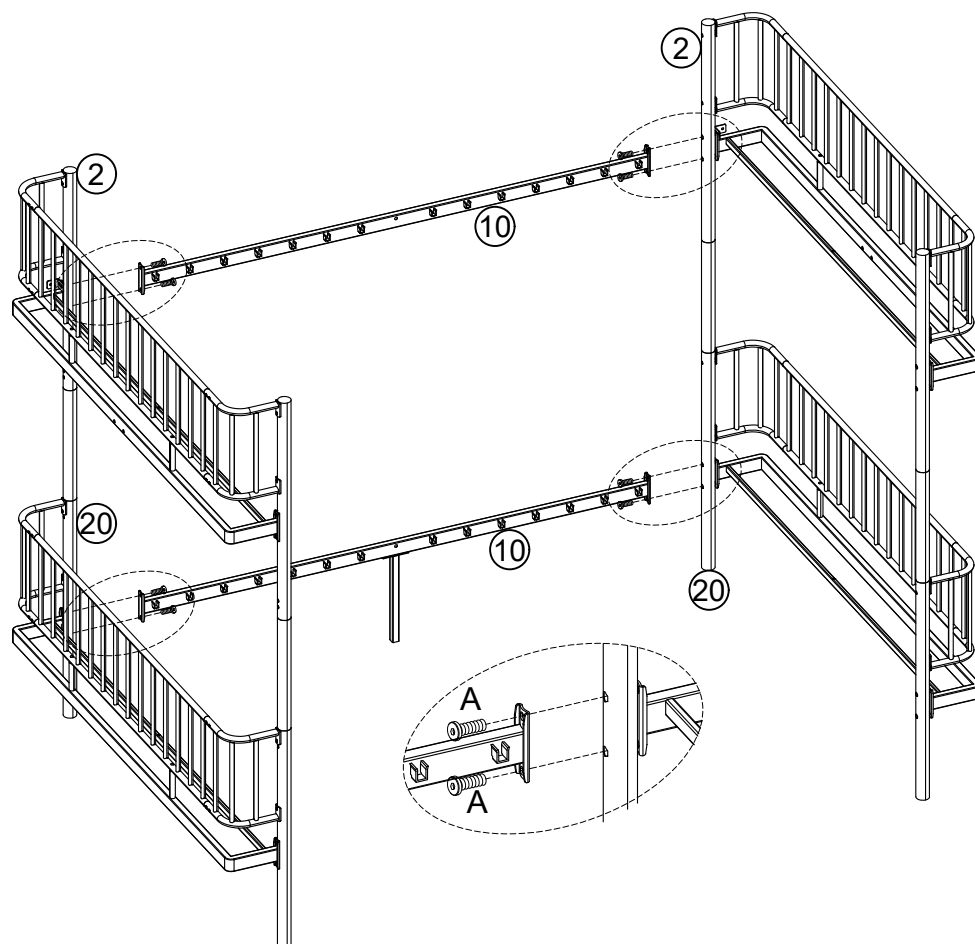


11

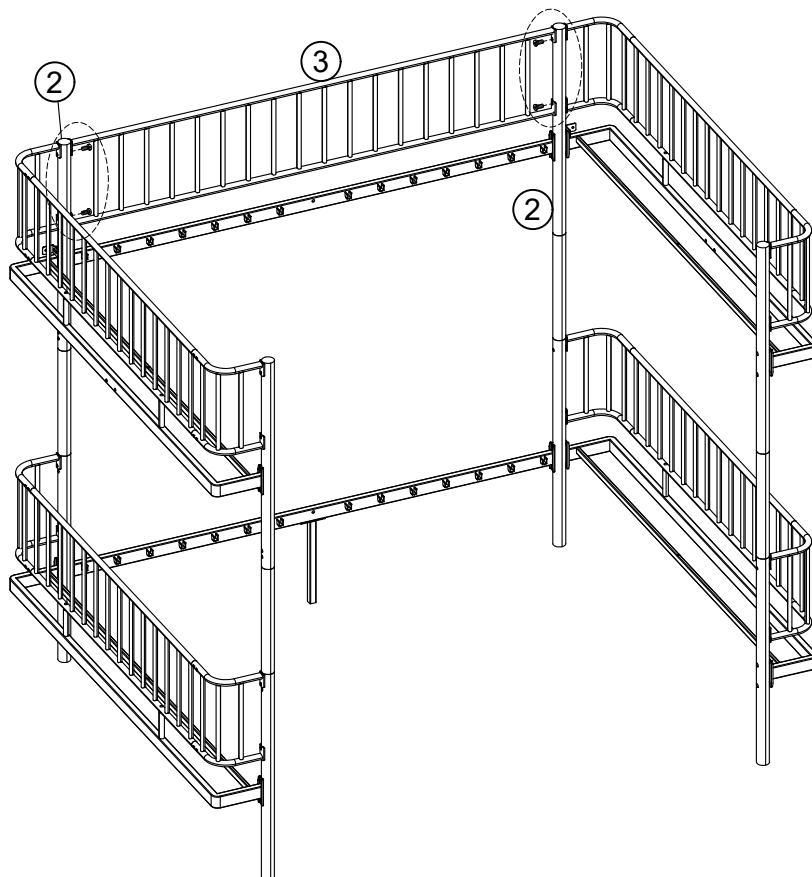



E×4pcs



M6×15mm

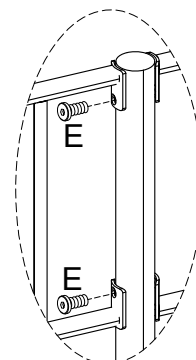


12

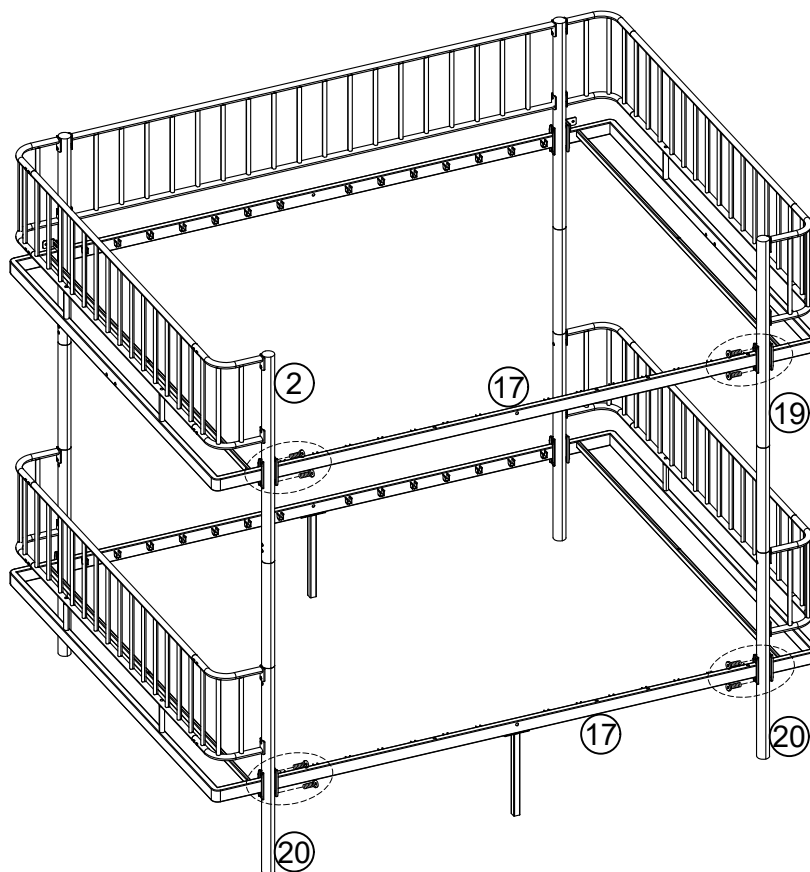


A×8pcs




M8×20mm


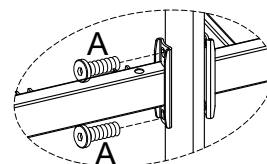


13




- B×1pc**

M6×55mm
- E×2pcs**

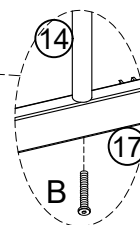
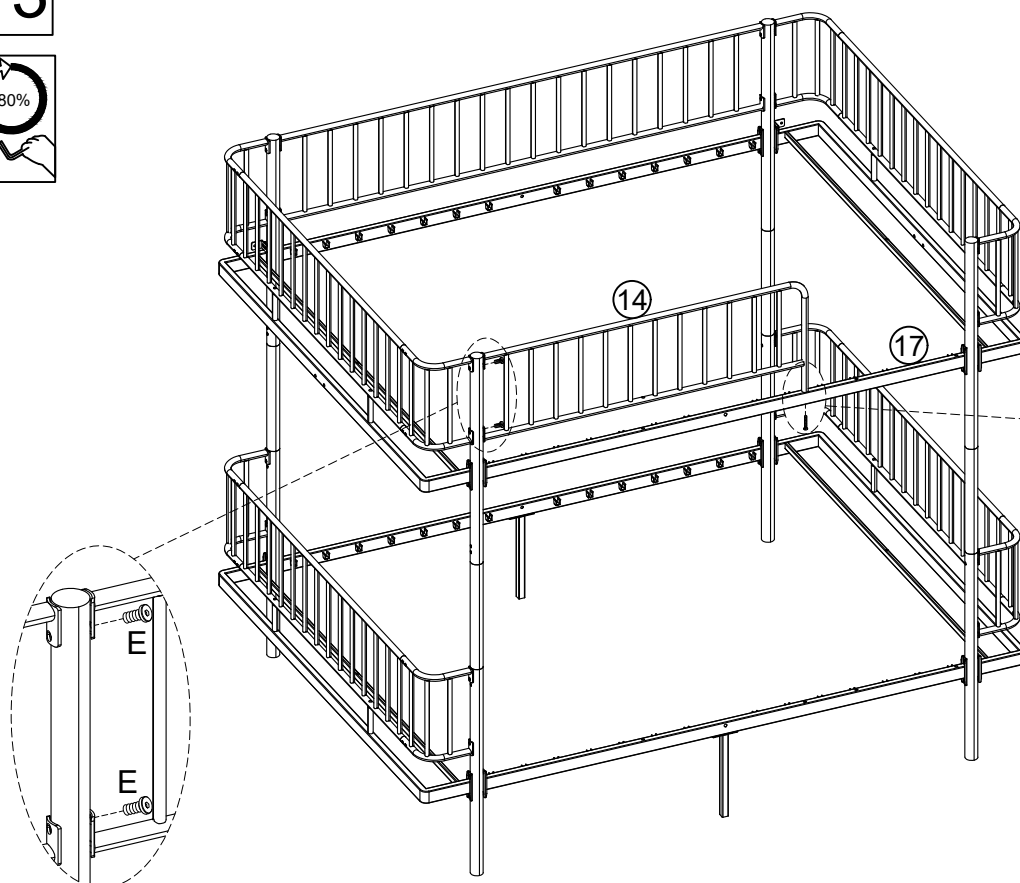
M6×15mm



14


- B×1pc**

M6×55mm
- D×1pc**

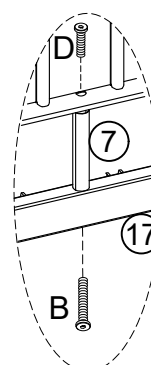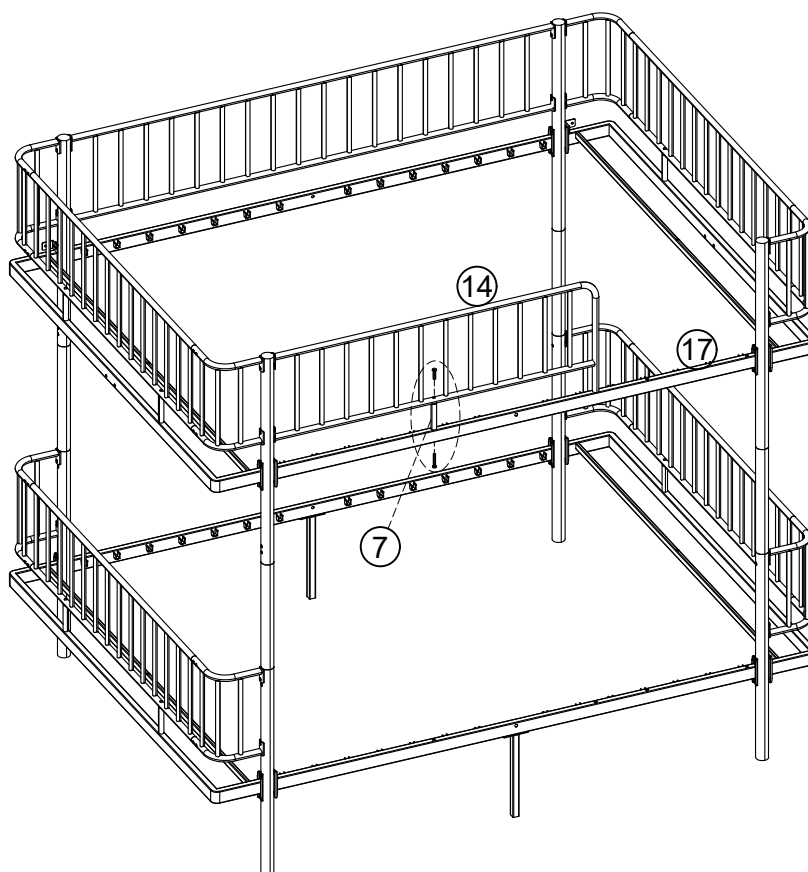M6×32mm




15

C×4pcs



M6×40mm

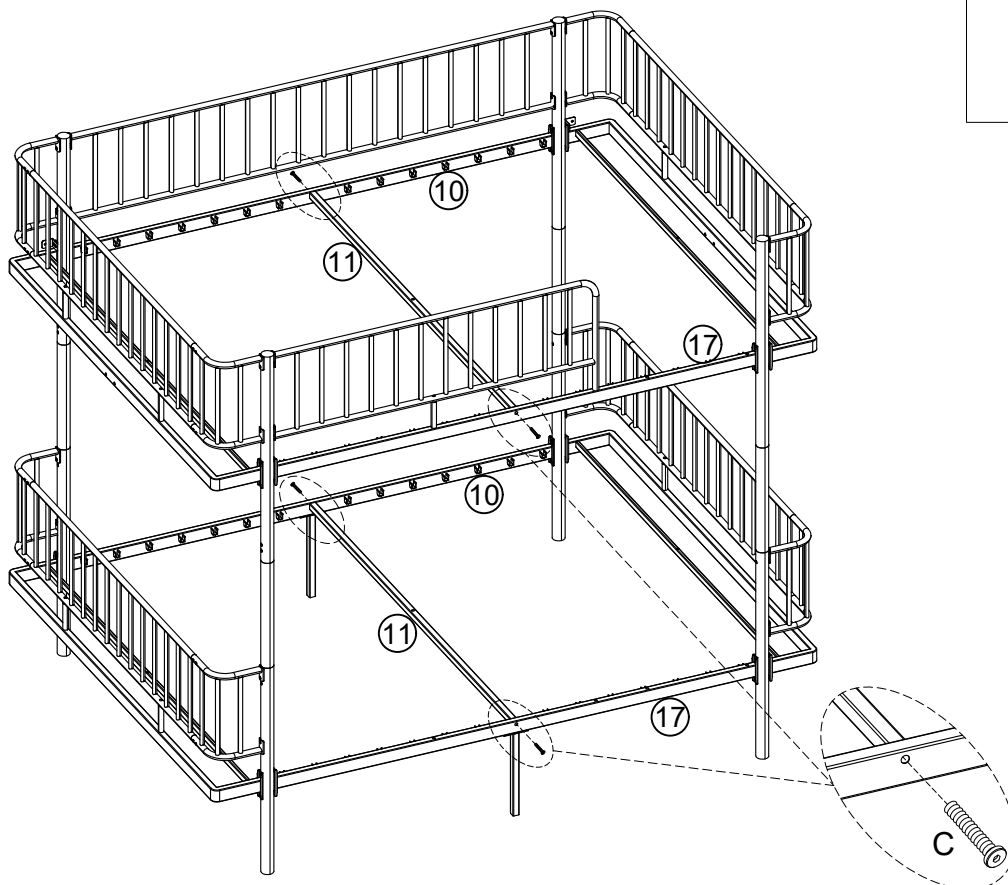


16

F×1pc




M6×10mm


Step 1

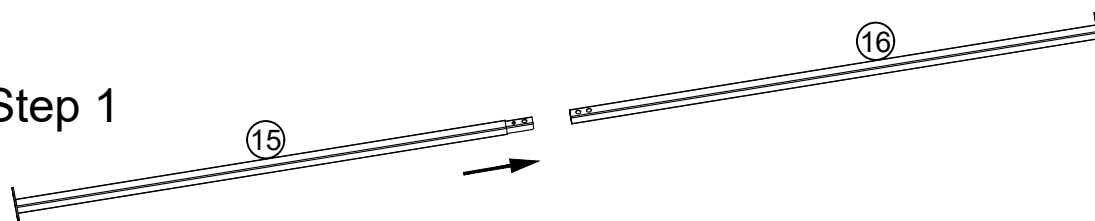


Step 2

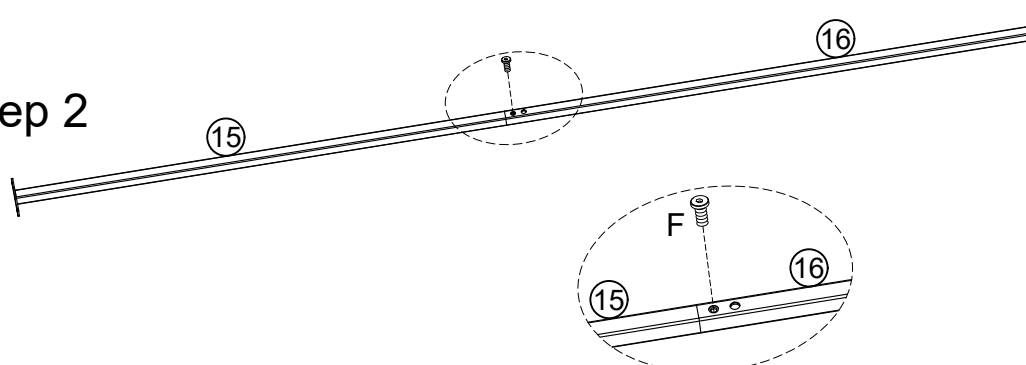

17

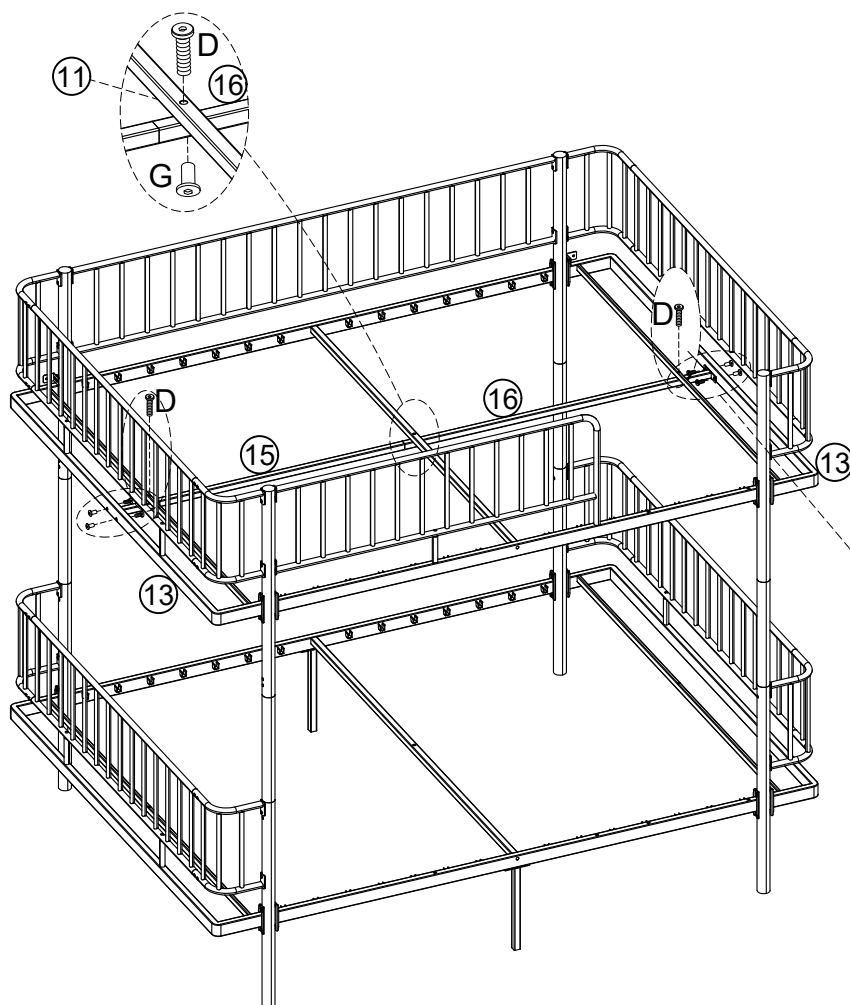

D x 3 pcs



M6 x 32 mm

E x 4 pcs




M6 x 15 mm

G x 5 pcs



M6 x 15 mm

18

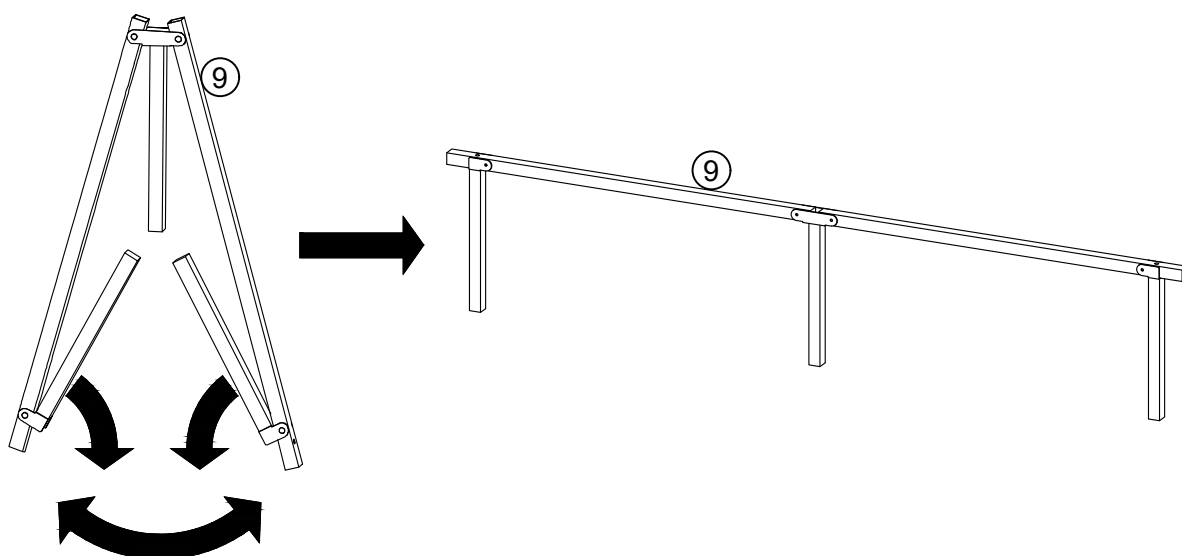


Watch out for pinching your hands

19



B×3pcs



M6×55mm

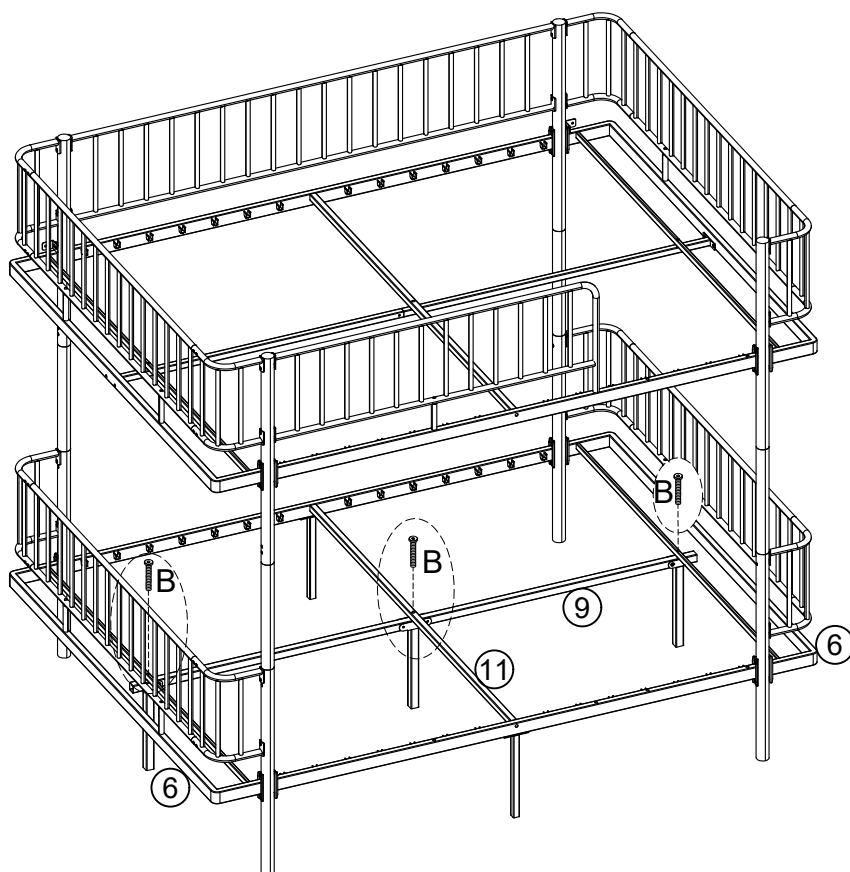


20

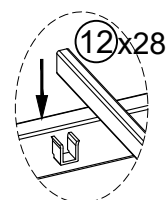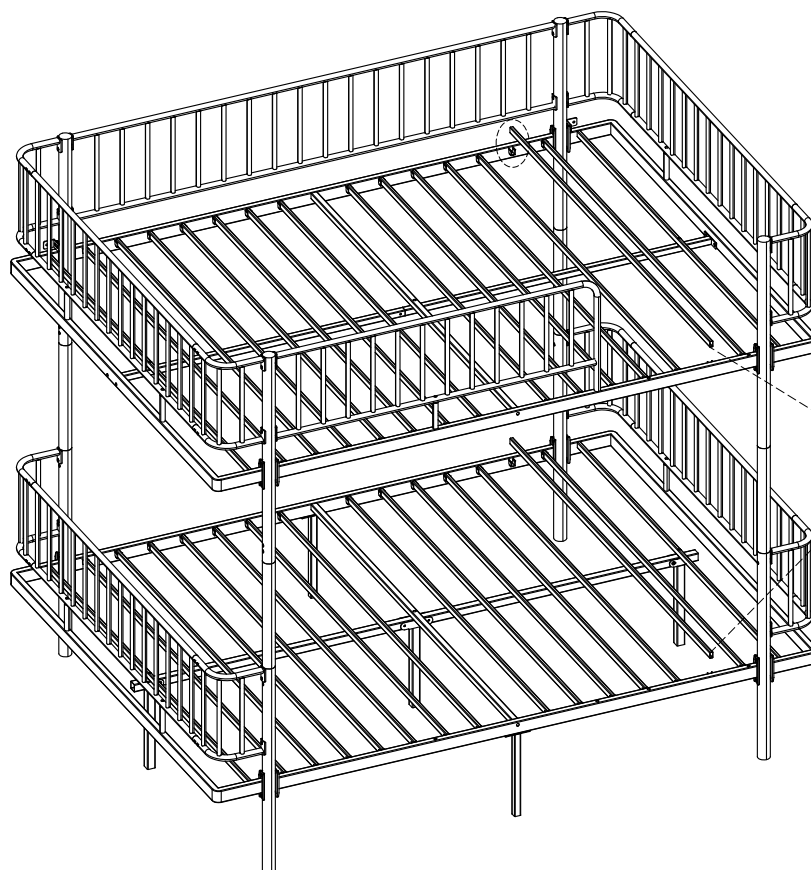

12x28


21

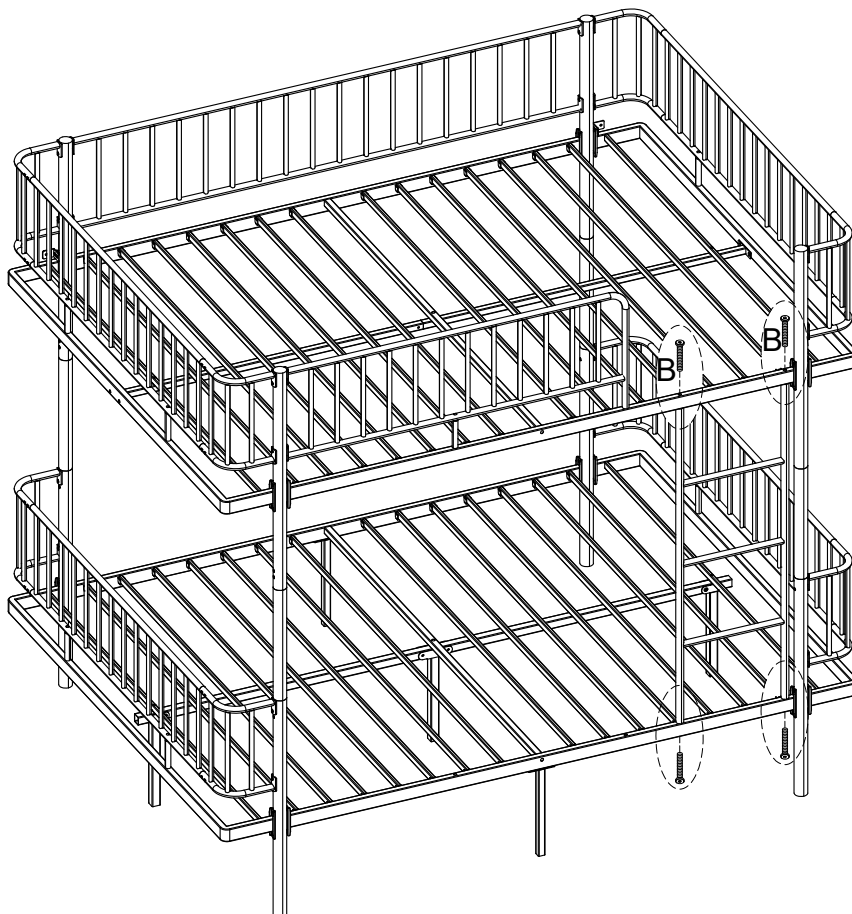

B×4pcs





M6×55mm

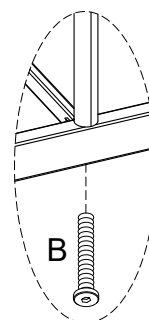

Tighten all screws 100%

22

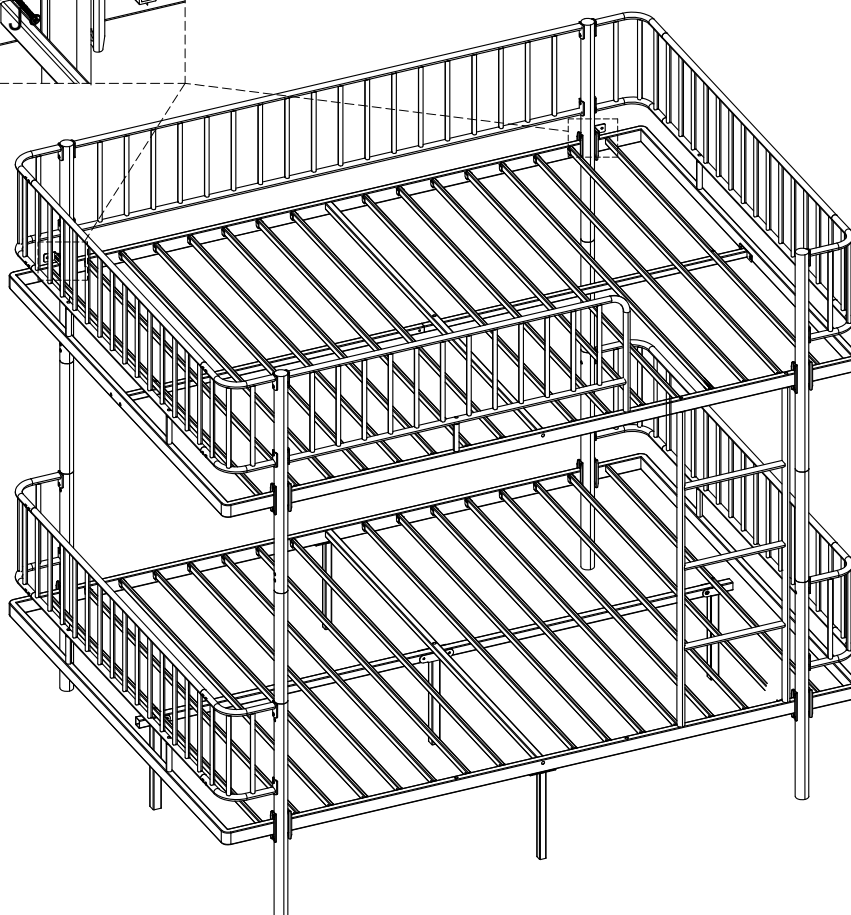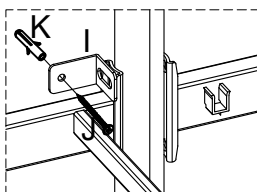

J×2pcs



M8×40mm

K×2pcs



M5×40mm