
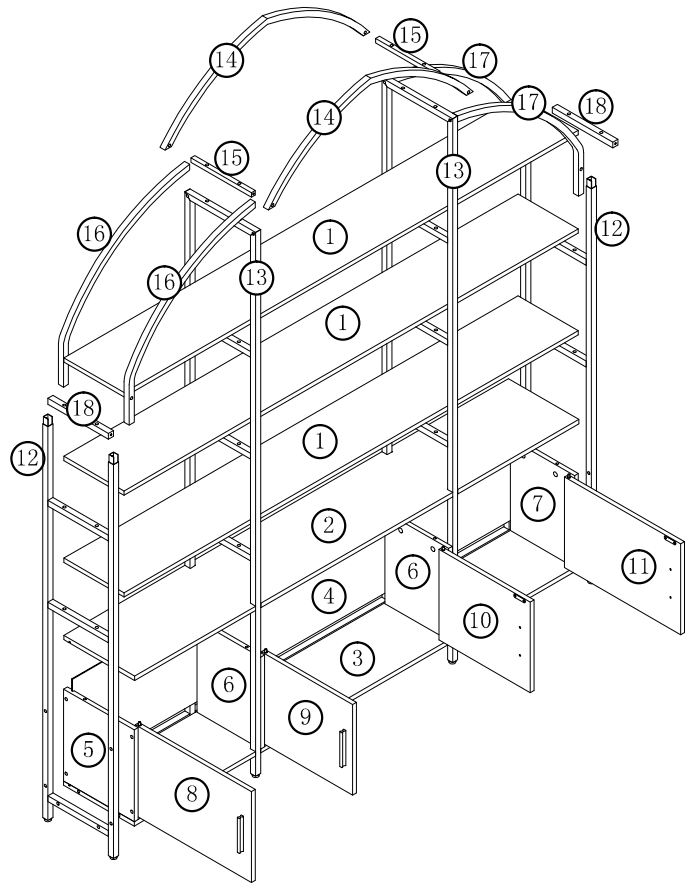
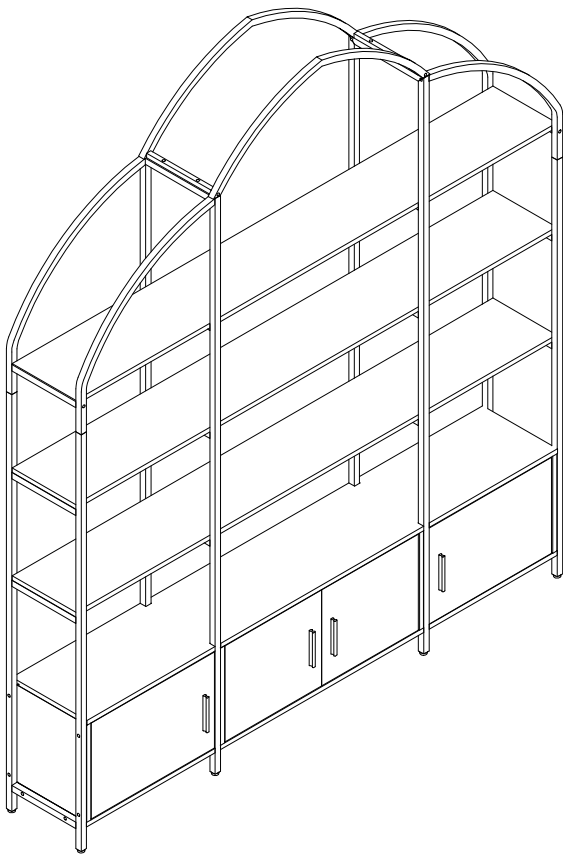




ASSEMBLY INSTRUCTION





















No.	PICTURE		SIZE	QTY
A			M6*10	8
B			M6*30	36
C			M6*40	16
D			ST7*40	8
E			ST5*50	4
F			M6*40	8
G			ST3*14	4
H			M6	4
I			M4*18	4

No.	PICTURE				SIZE	QTY
J					20*20	4
K					M6	8
L					M8	8
N		X1		X1	ST3. 5*14	8
M	 X2	 X2	 X2			1
	 → 8					1
	  					1


ASSEMBLY

INSTRUCTION

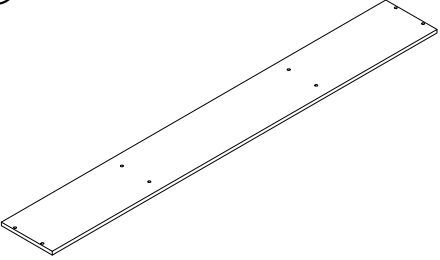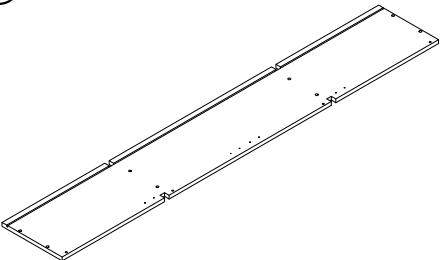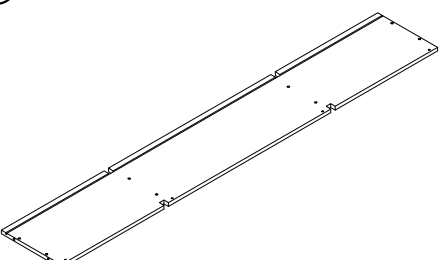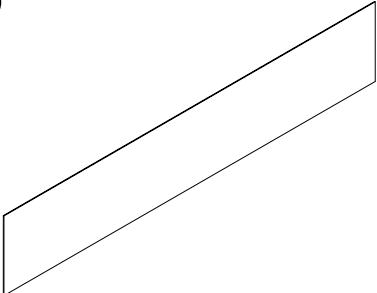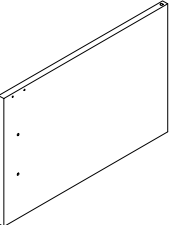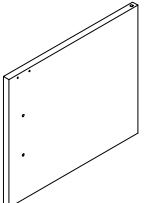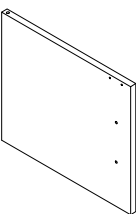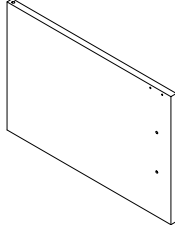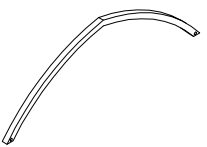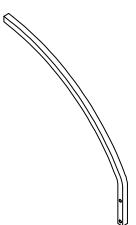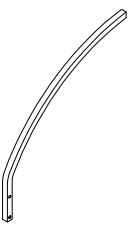①  X3	②  X1	③  X1
④  X1	⑤  X1	⑥  X2
⑦  X1	⑧  X1	⑨  X1
⑩  X1	⑪  X1	⑫  X2
⑬  X2	⑭  X2	⑮  X2
⑯  X2	⑰  X2	⑱  X2


ASSEMBLY INSTRUCTION


STEP 1

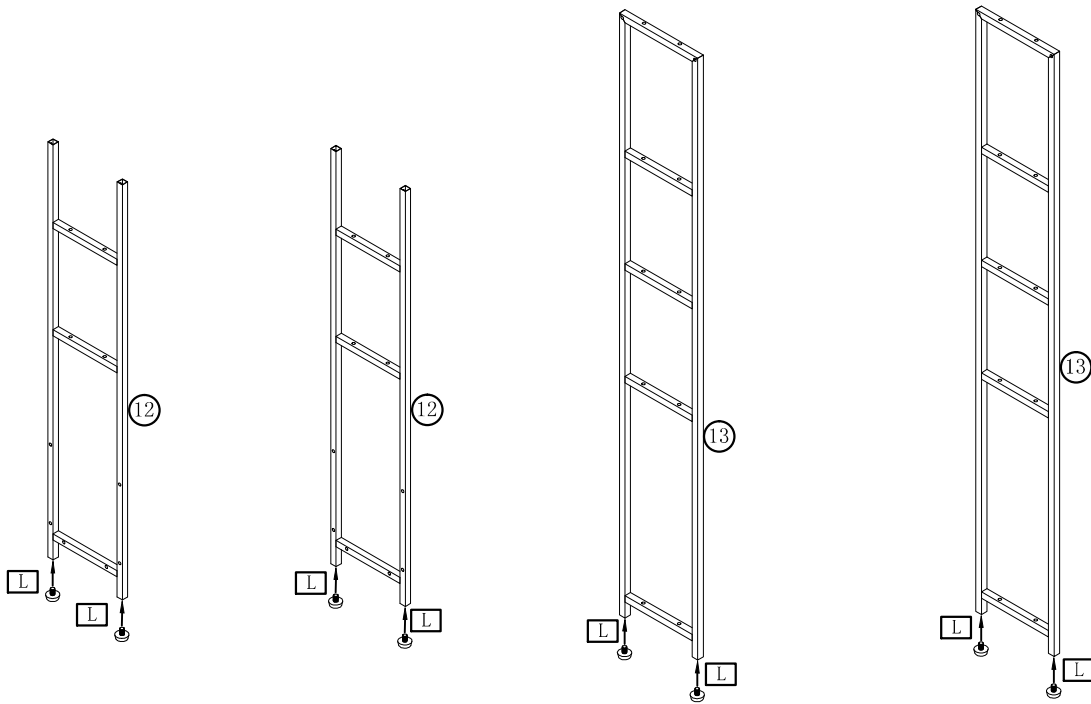

L	M8
	
	X8


STEP 2

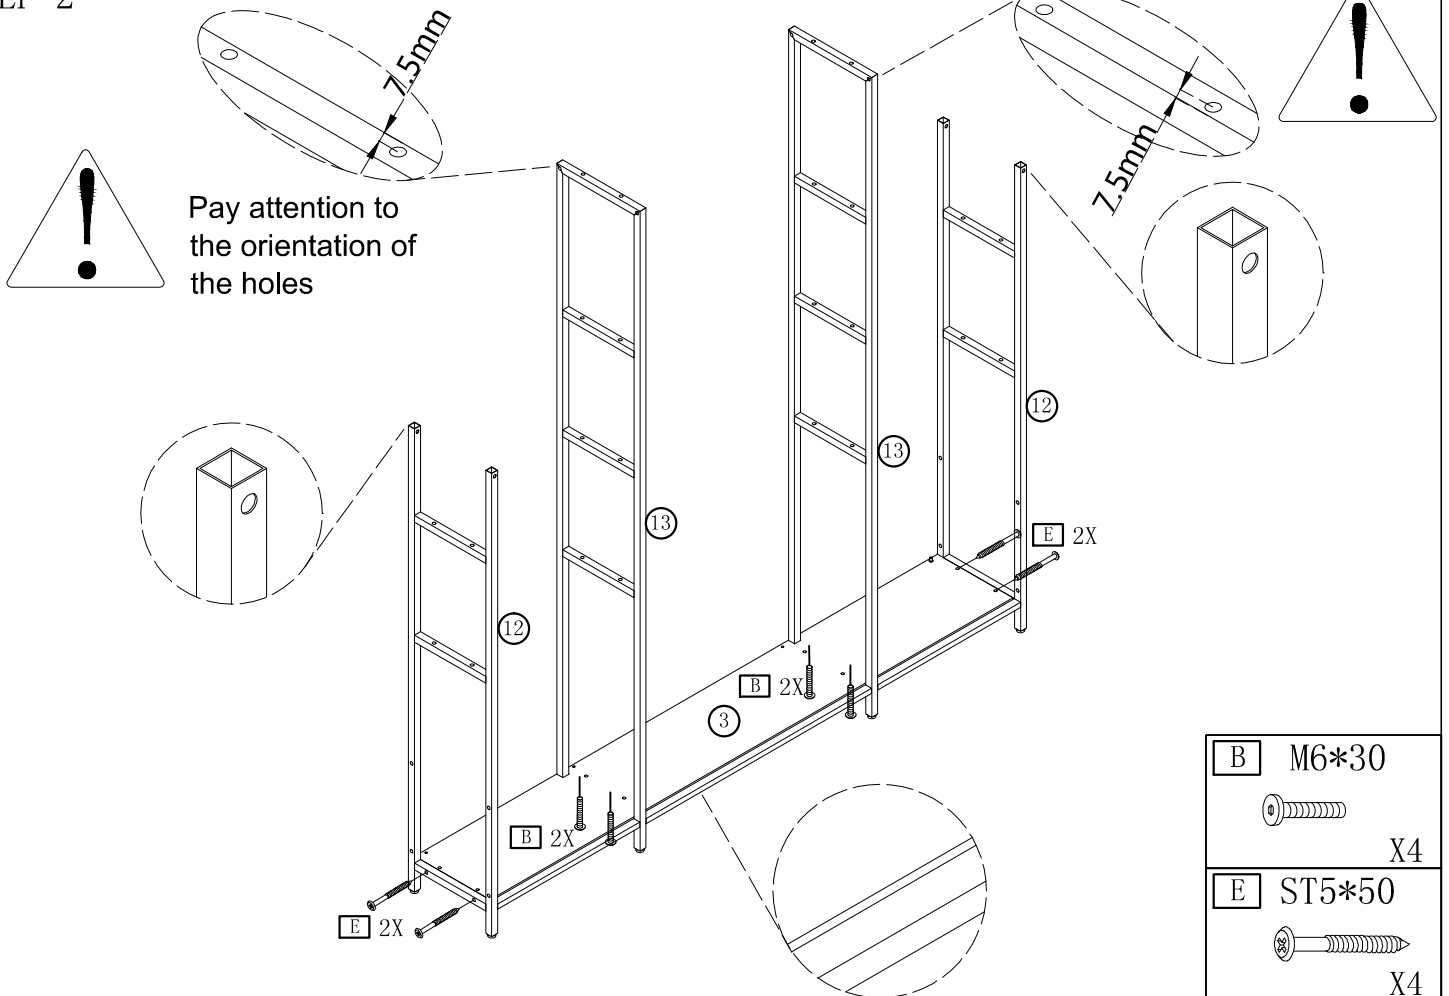


B	M6*30
	
	X4
E	ST5*50
	
	X4

ASSEMBLY INSTRUCTION

STEP 3

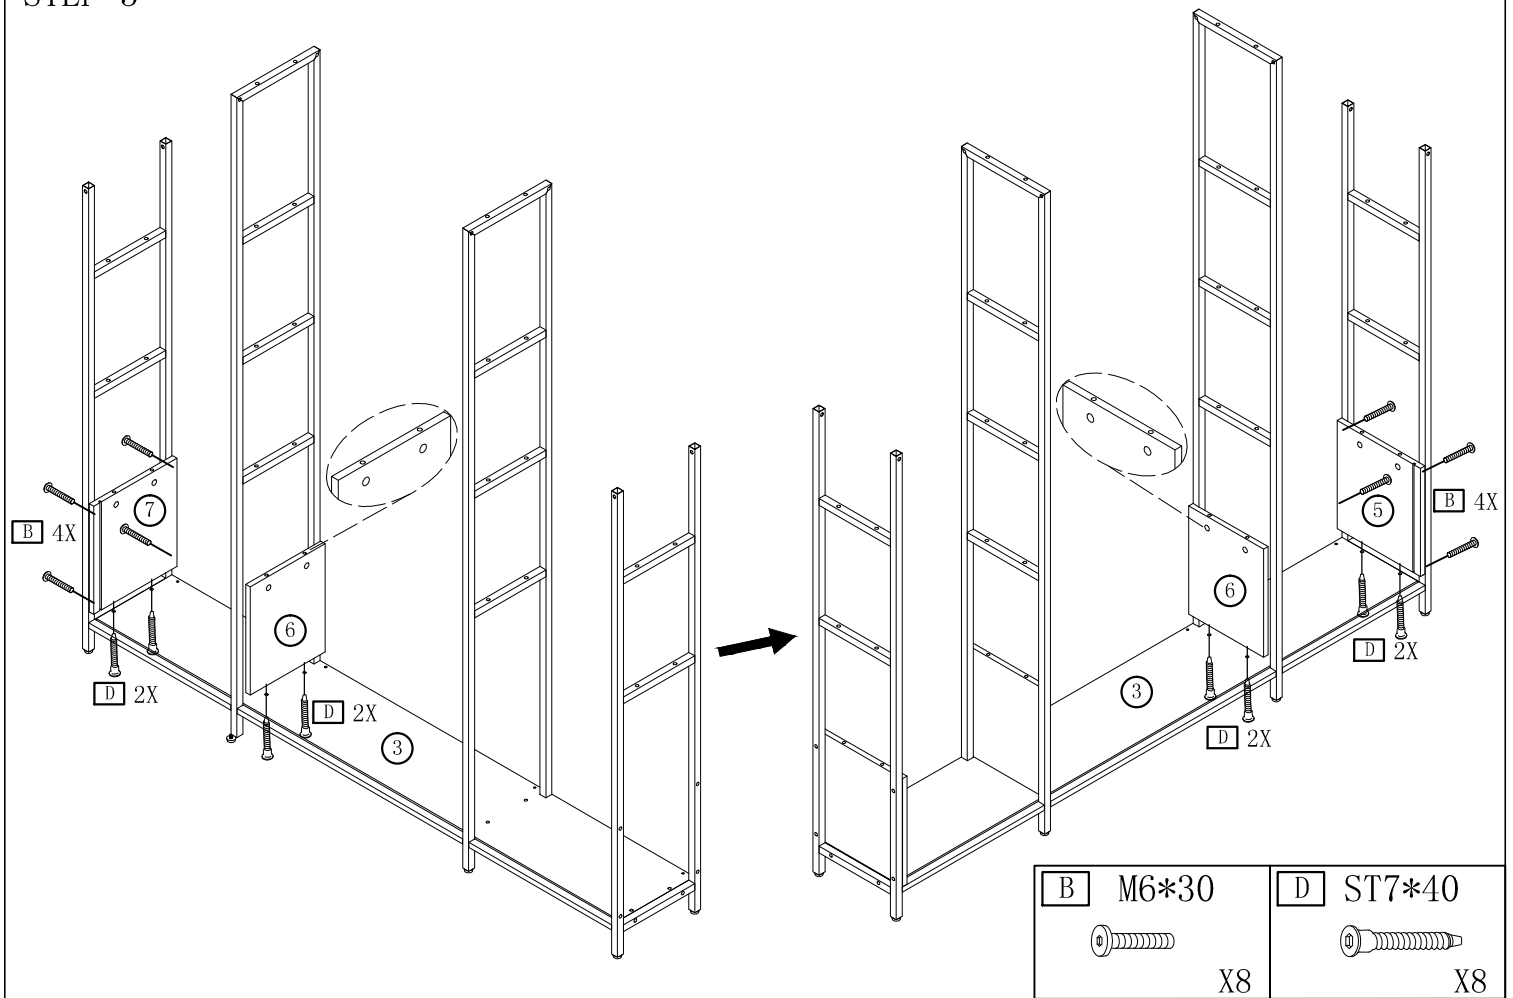




STEP 4

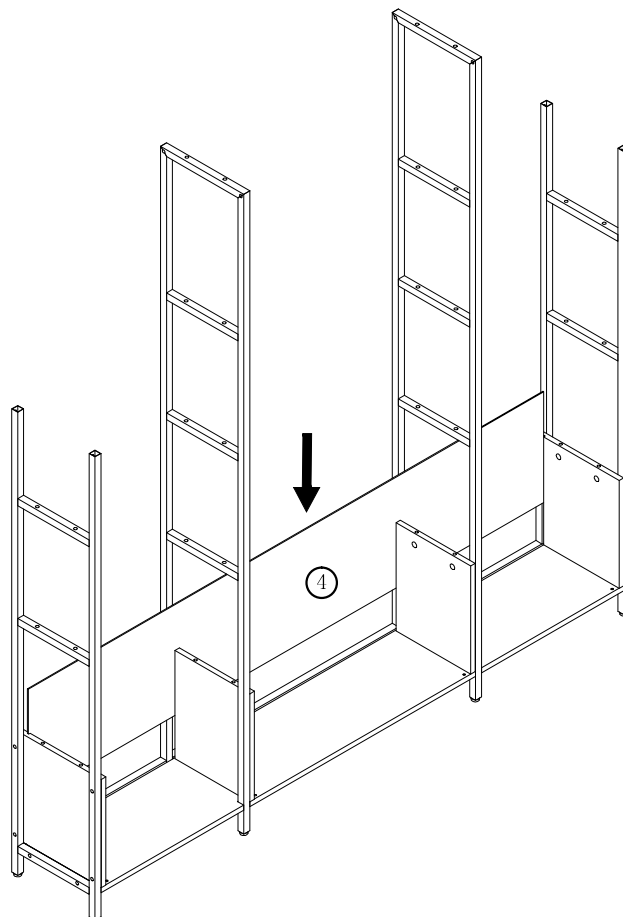


ASSEMBLY INSTRUCTION

STEP 5

We need to divide accessory G into two.




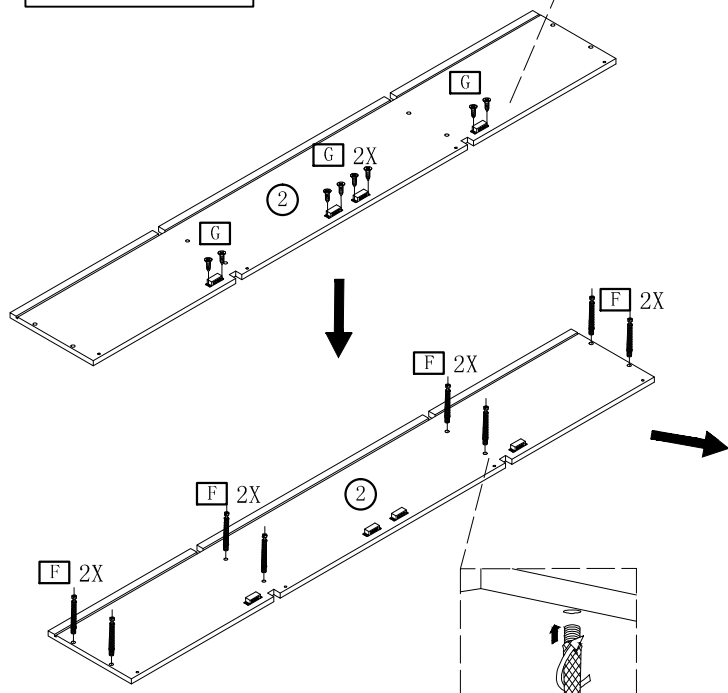
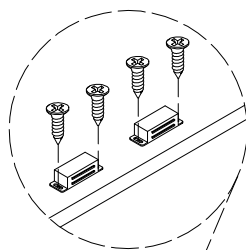
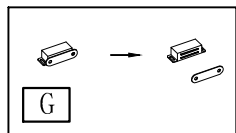


Be careful to put the No. 2 plate first to get it stuck in the correct position

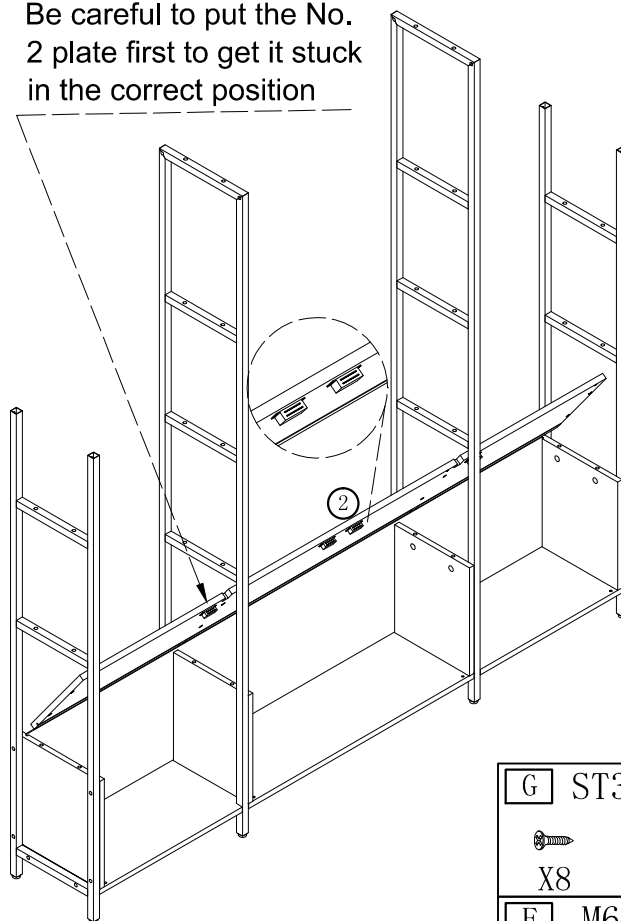

G	ST3*14
X8	X4
F	M6*40
	X8


STEP 6

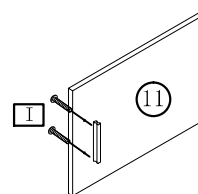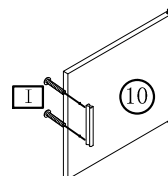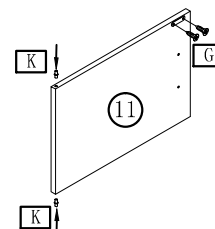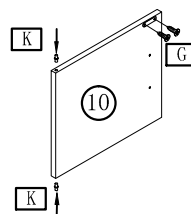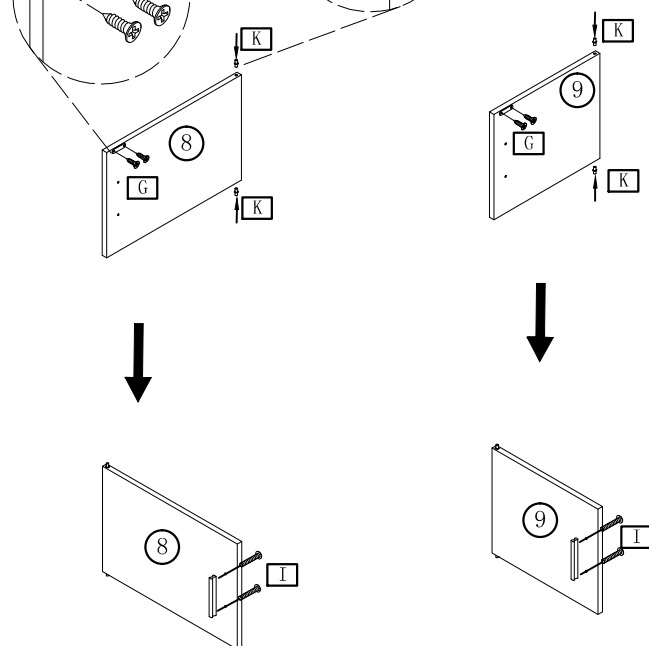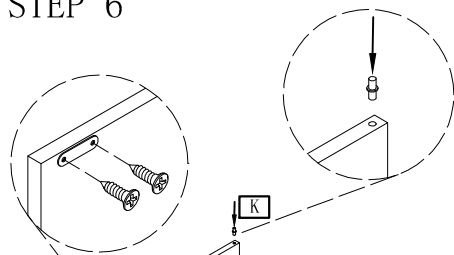

G	ST3*14
X8	X4
I	M4*18
X4	
K	M6
	X8


ASSEMBLY INSTRUCTION

STEP 7

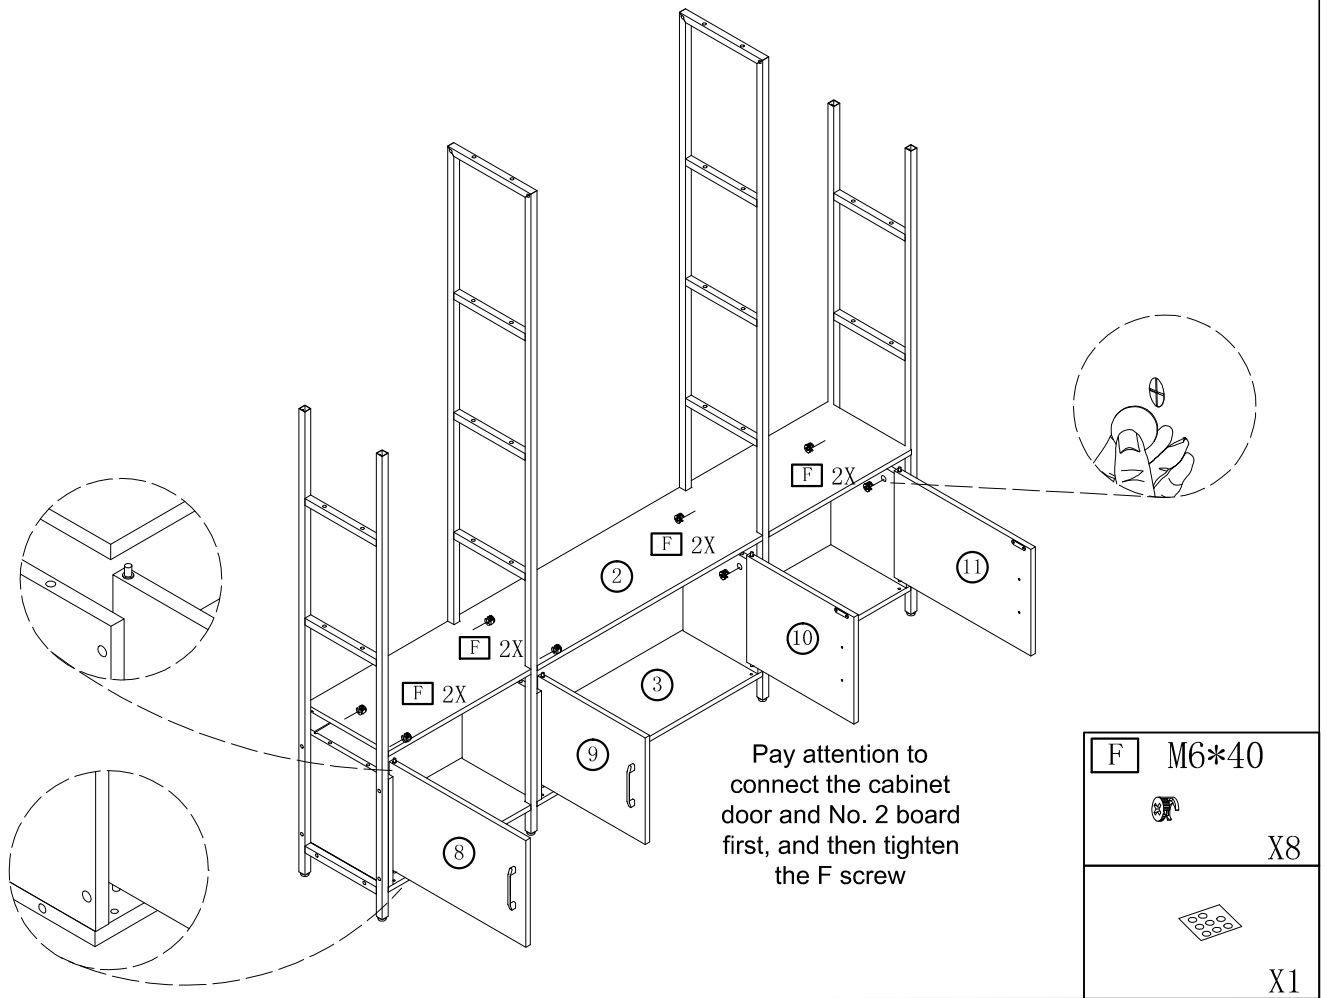


STEP 8

The J fitting used to connect the pipe requires the help of a tool, and then align the hole and knock it down.

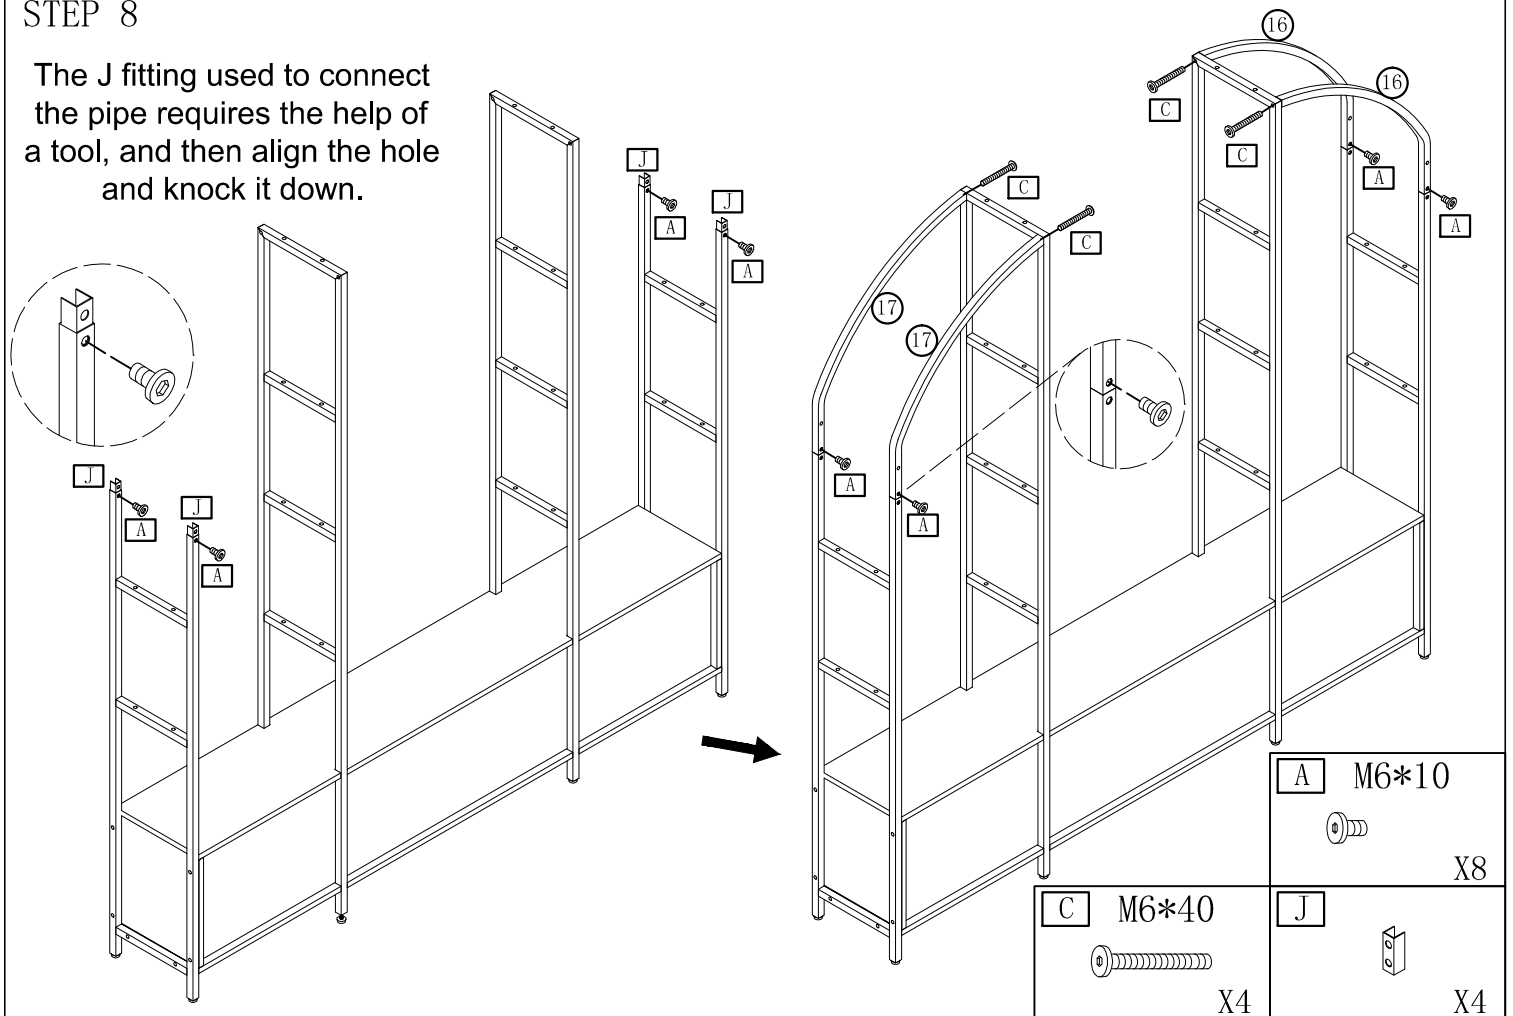


ASSEMBLY INSTRUCTION

STEP 9

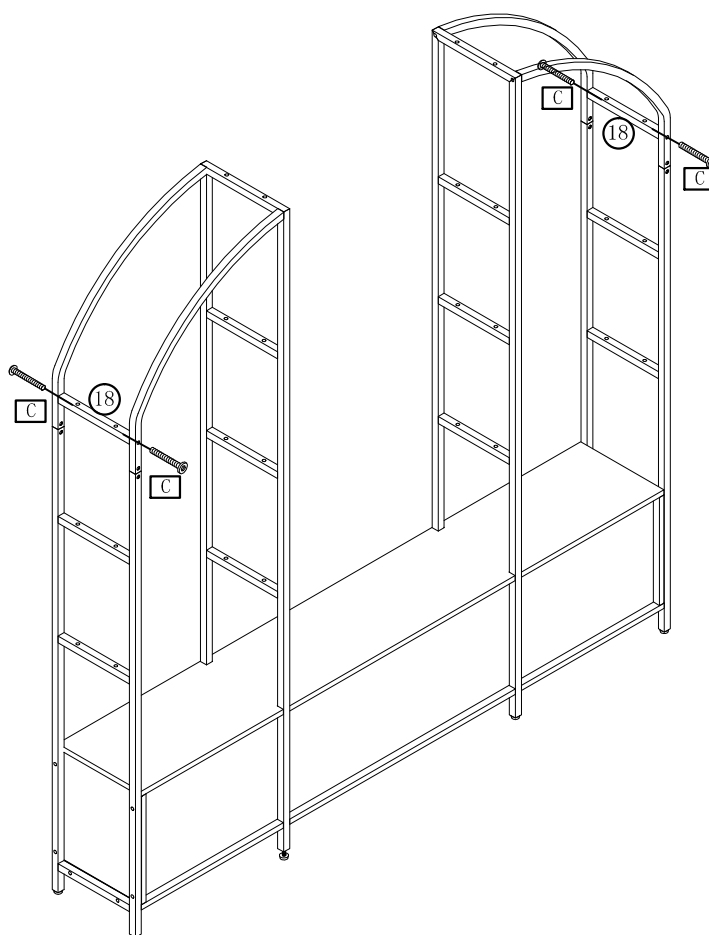


C M6*40




X4

STEP 10

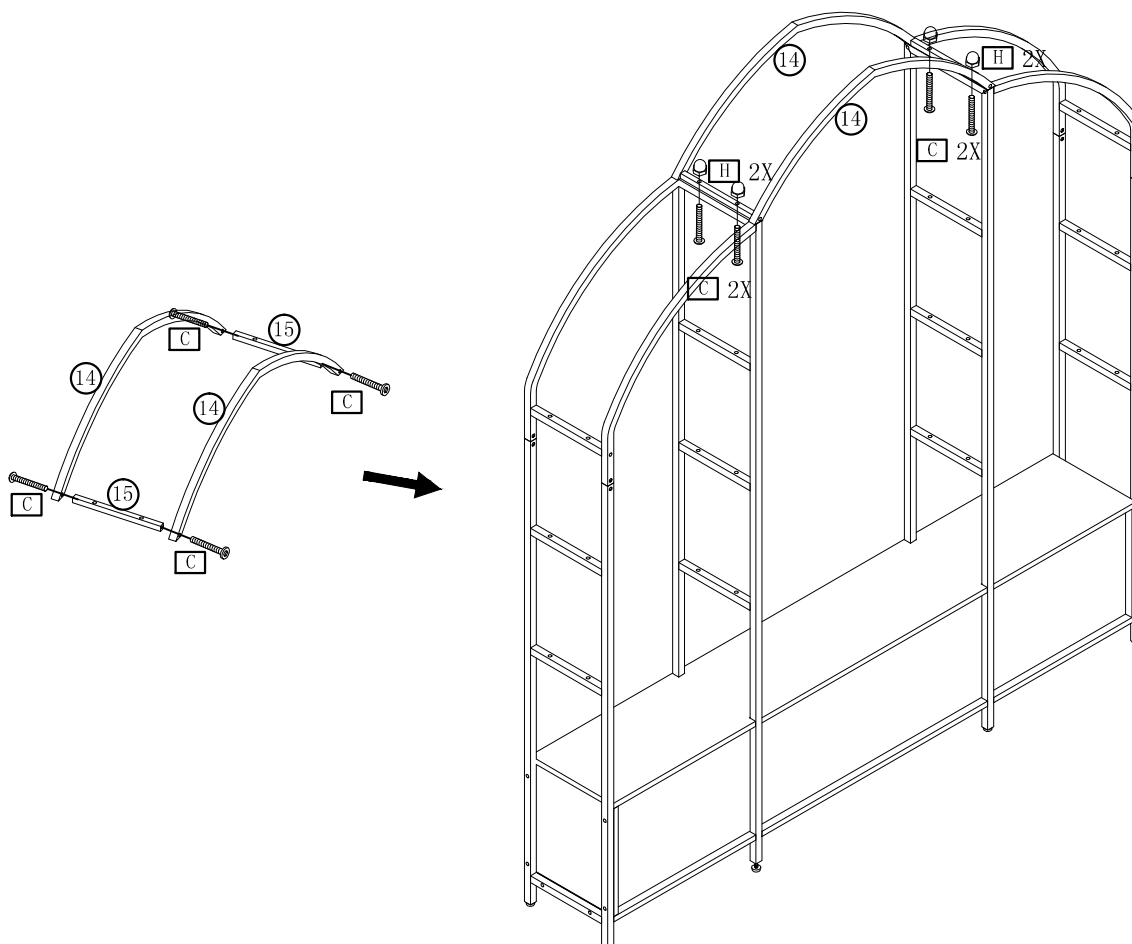

C M6*40



X8


H M6



X4

ASSEMBLY INSTRUCTION

STEP 11

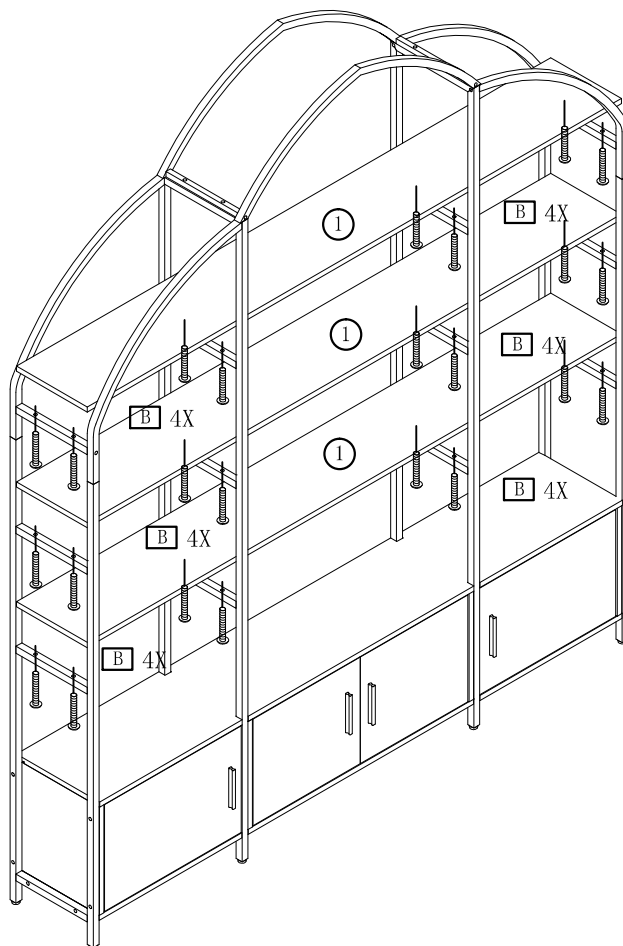


B M6*30



X24

STEP 12

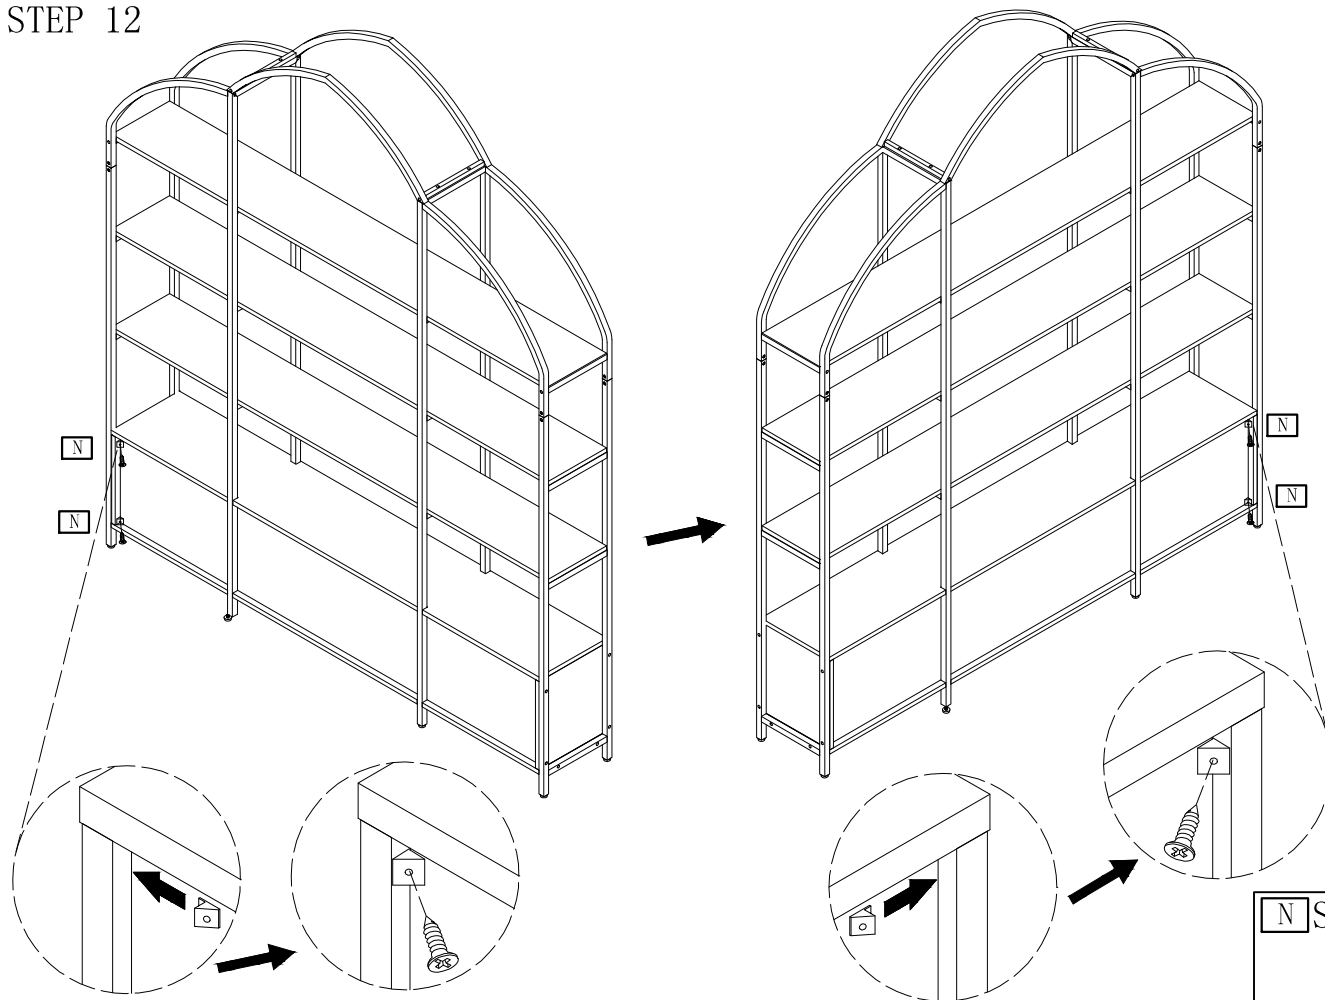


N ST3.5*14



X4

ASSEMBLY INSTRUCTION

STEP 13

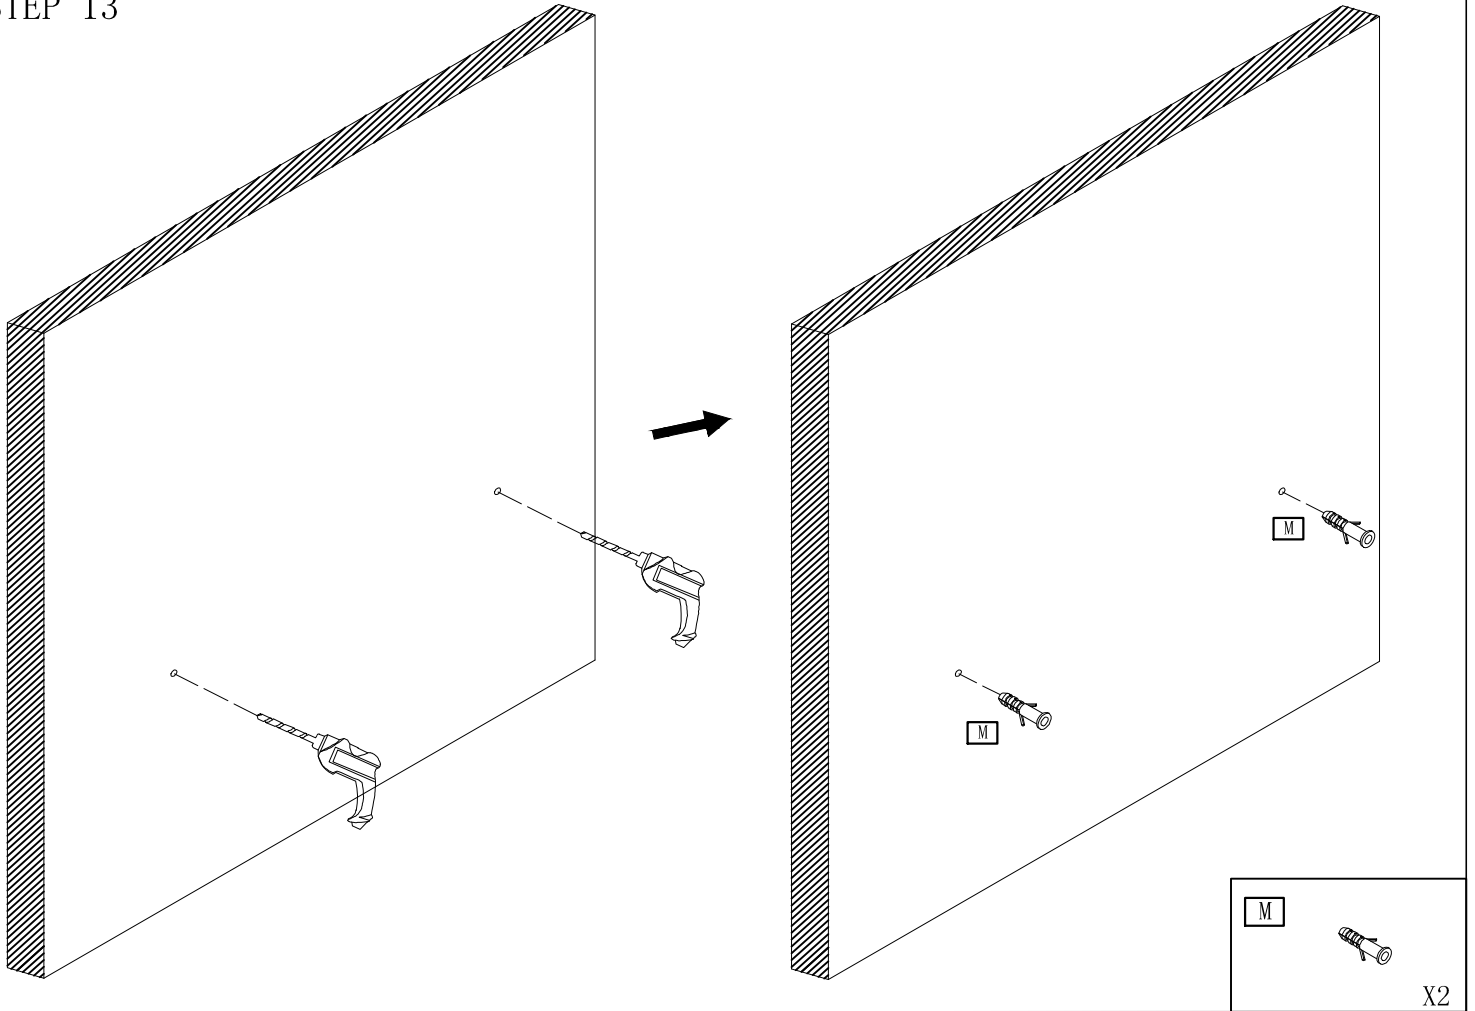

STEP 14

