


# **Metal Platform Bed Frame**










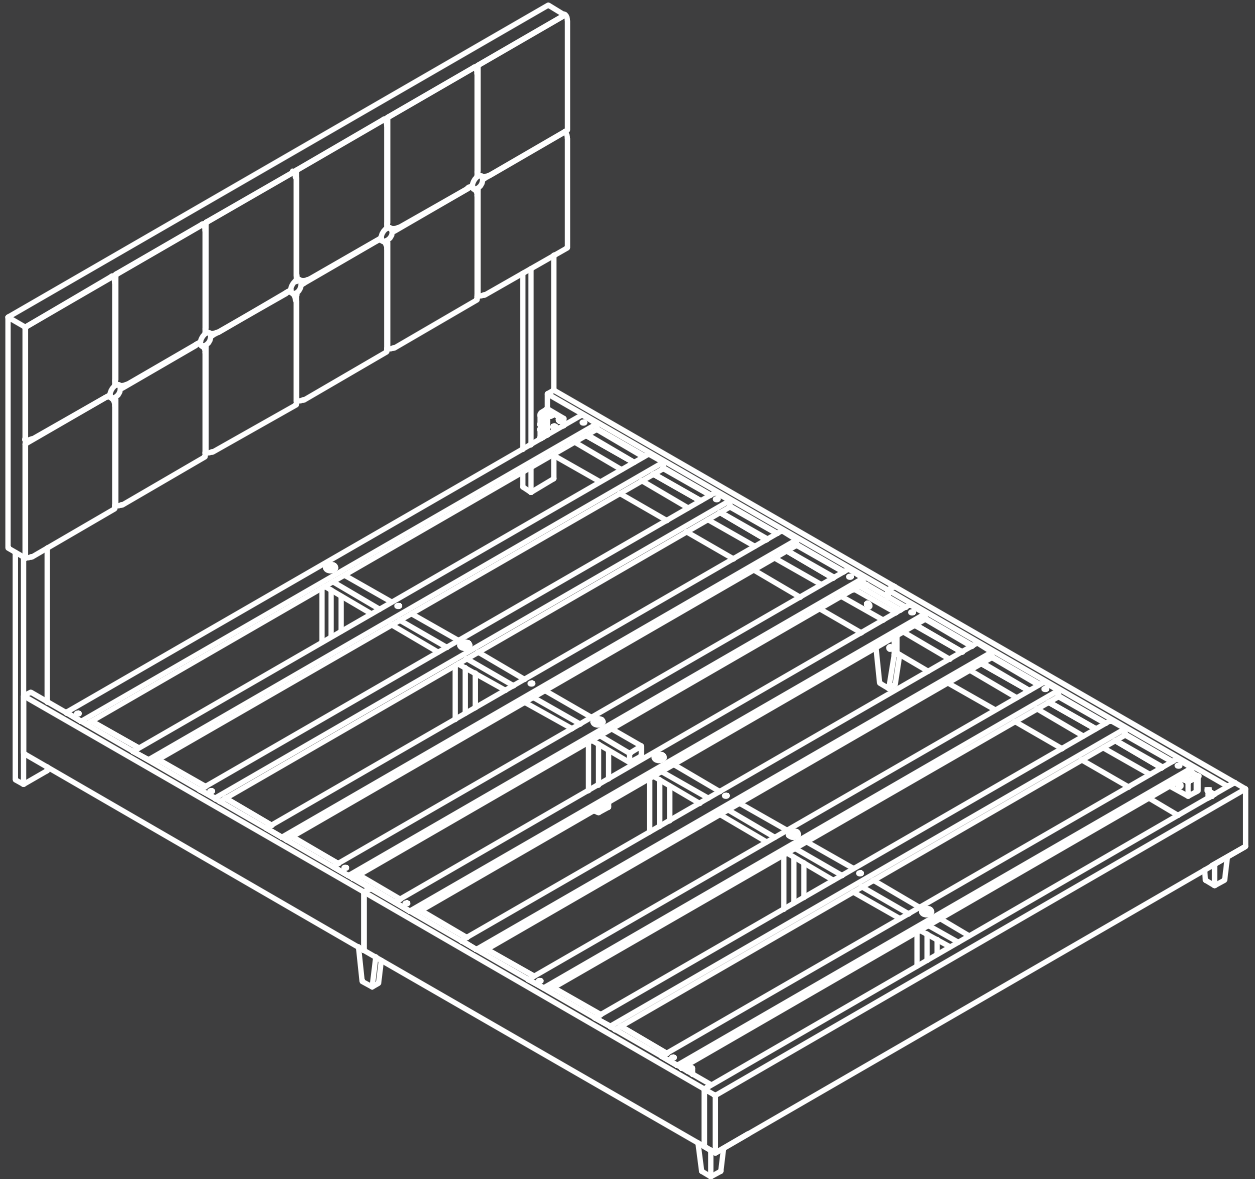










## **Instruction Manual**

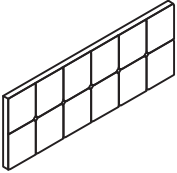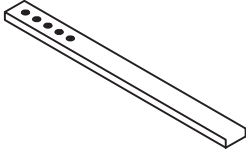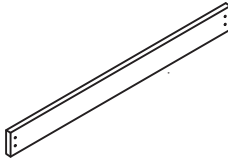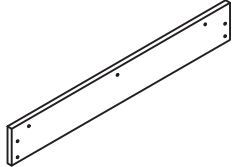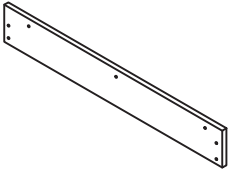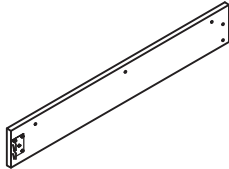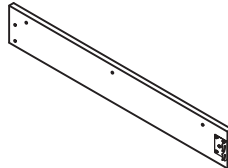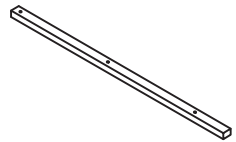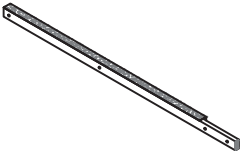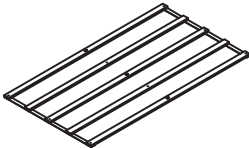


# Part List & Assembly Instruction

1.Make sure all part are in the package.


2.Do not tighten all bolts until them haven been installed in corresponding locations.

<b>A</b>	<b>*1</b>	Headboard panel	<b>B</b>	<b>*2</b>	Leg for headboard	<b>C</b>	<b>*1</b>	Footboard panel	<b>D-R</b>	<b>*1</b>	Side rail- <b>Right</b>
											
<b>D-L</b>	<b>*1</b>	Side rail- <b>Left</b>	<b>D1-R</b>	<b>*1</b>	Side rail- <b>Right</b>	<b>D1-L</b>	<b>*1</b>	Side rail- <b>Left</b>	<b>E</b>	<b>*2</b>	Center rail
											
<b>F</b>	<b>*4</b>	Rail support	<b>G</b>	<b>*2</b>	Slat	<b>H</b>	<b>*2</b>	Leg support	<b>I</b>	<b>*2</b>	Leg for footboard
											
<b>J</b>	<b>*6</b>	Center leg	<b>M</b>	<b>*12</b>	Bolt: 5/16"x 25mm	<b>N</b>	<b>*6</b>	Bolt: 5/16"x 40mm	<b>O</b>	<b>*8</b>	Bolt: 5/16x 35mm
											
<b>P</b>	<b>*12</b>	Bolt:1/4"x35mm	<b>S</b>	<b>*16</b>	Screw: 4 x 35mm	<b>U</b>	<b>*1</b>	Screwdriver	<b>V</b>	<b>*1</b>	Allen key: L5
											

# DESCRIPTION

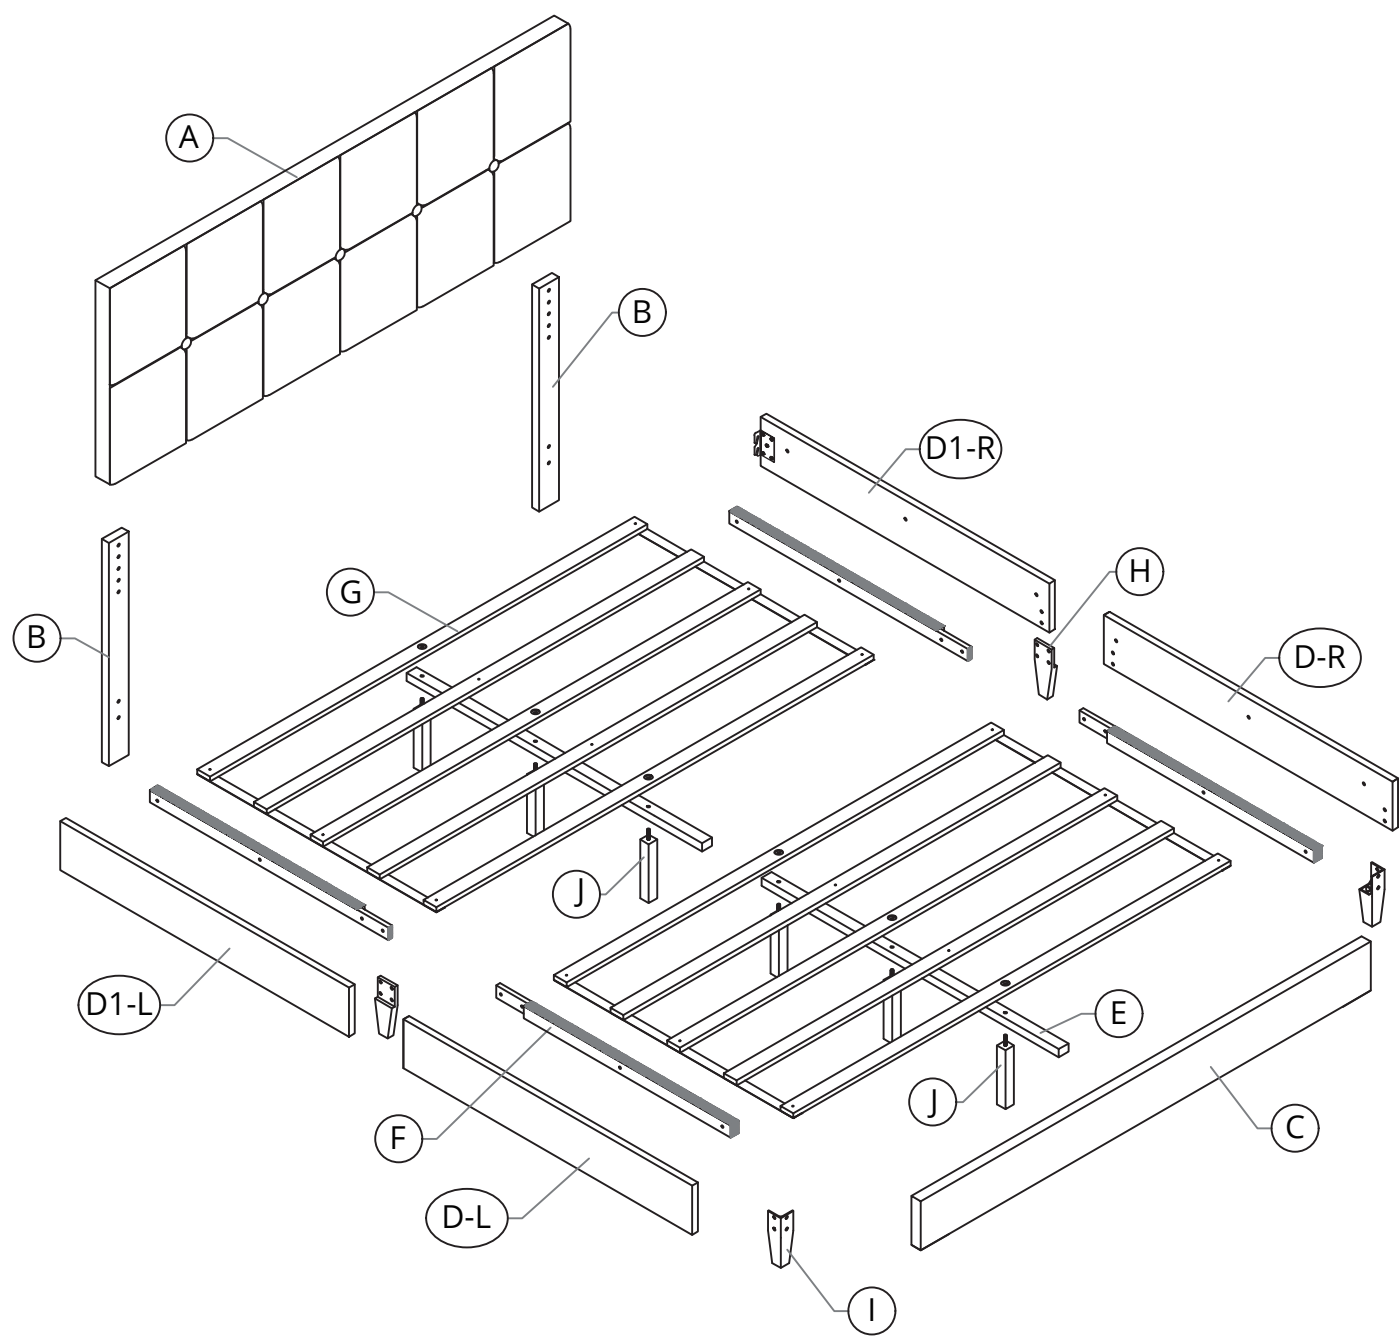


## Step 1

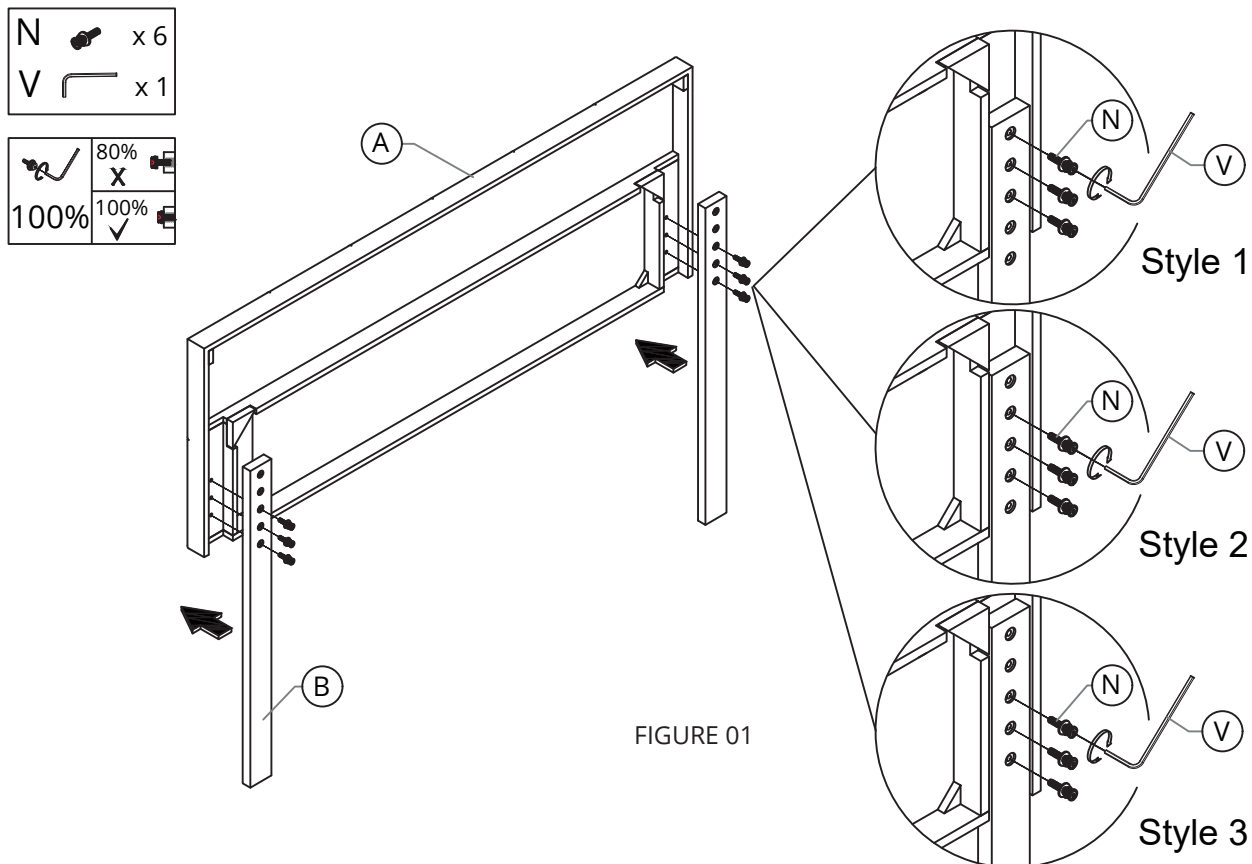

Install the leg (B) to the Headboard panel (A) by using the Allen bolt (N) with lock washer, flat washer and Allen key (V). See FIGURE 01 .



The head of the bed height can be adjusted according to your preference!
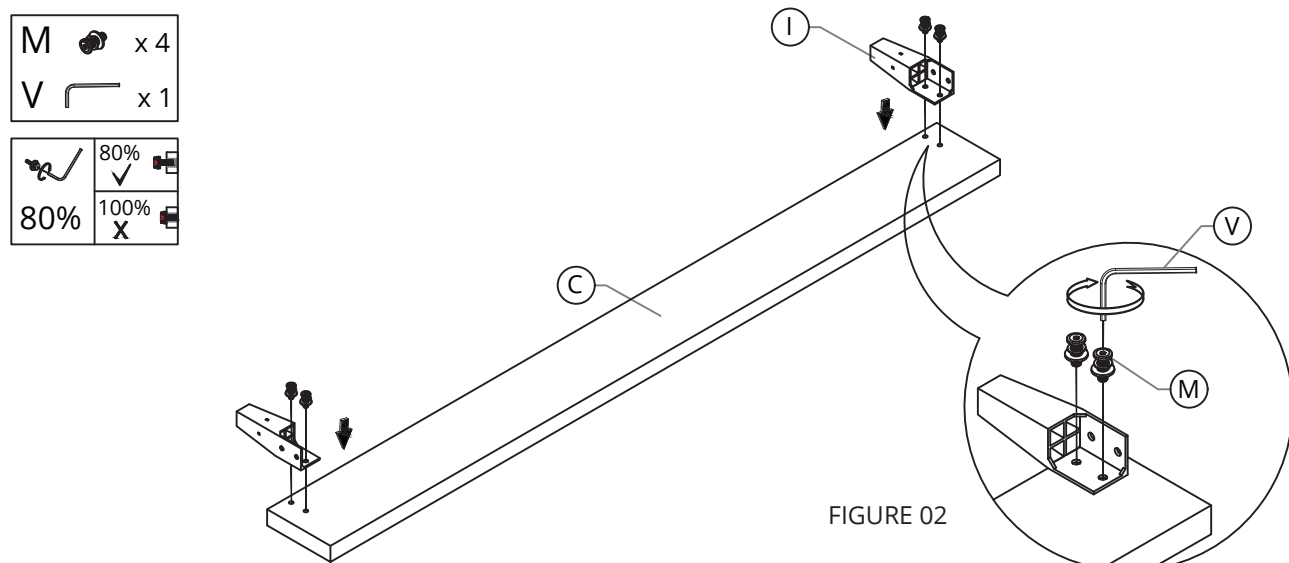
## Step 2






Install the leg (I) to the Footboard panel (C) by using the Allen bolt (M) with lockwasher, flat washer and Allen key (V). See FIGURE 02.

## Step 3

M		x 4
V		x 1

	50%	
50%	100%	

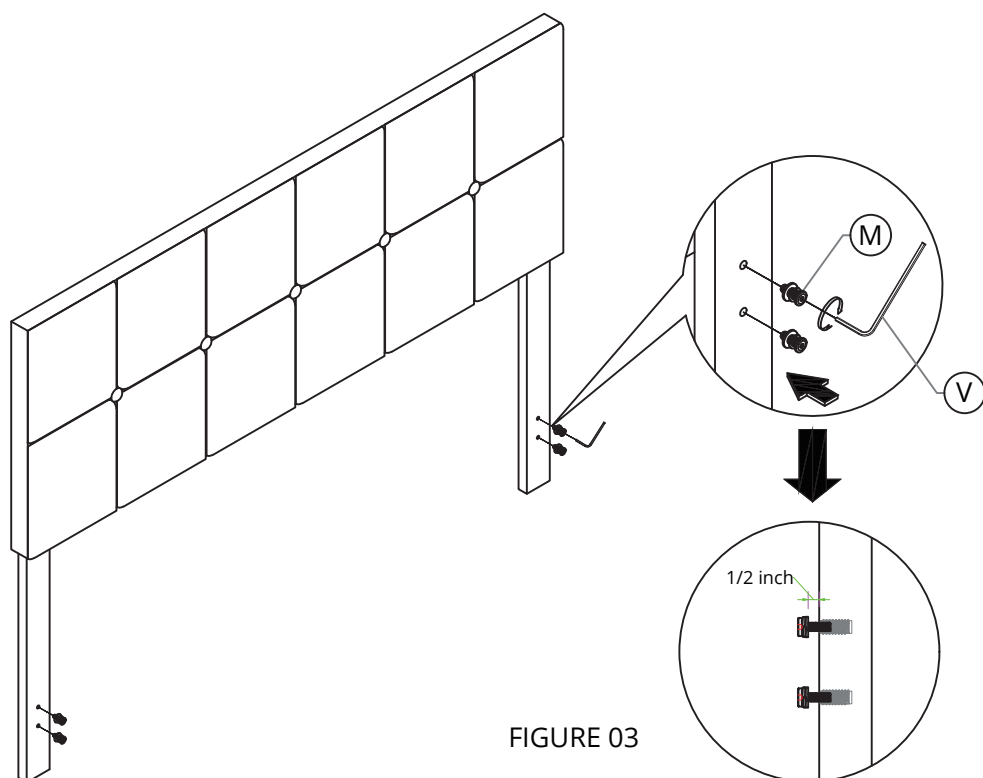







FIGURE 03

Insert set of the bolts (M) with lock washer, flat washer into the fixed nuts on the headboard by manually. NOTE: Do not fully tighten the bolts, leave at least 10mm visible so that you can hanger hook on the bolts. See FIGURE 03.

## Step 4

O		x 8
V		x 1

	80%	
100%	100%	

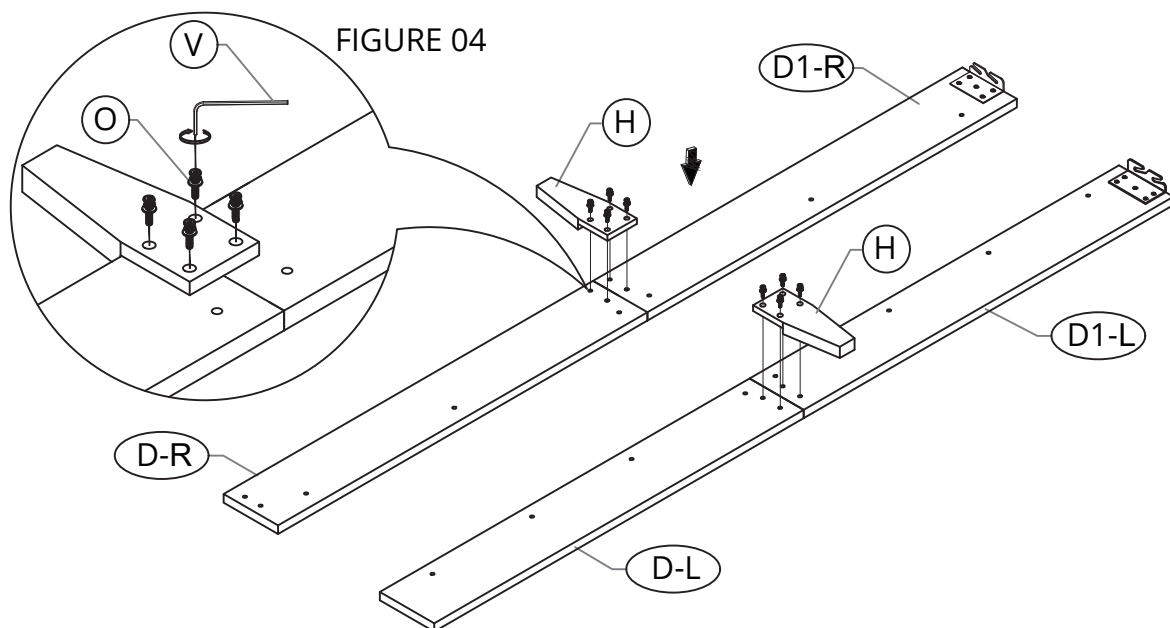


FIGURE 04

Install the leg support (H) to the side rail (D-L/R ; D1-L/R) by using the Allen bolt (O) with lock washer, flat washer and Allen key (V). See FIGURE 04 .

## Step 5


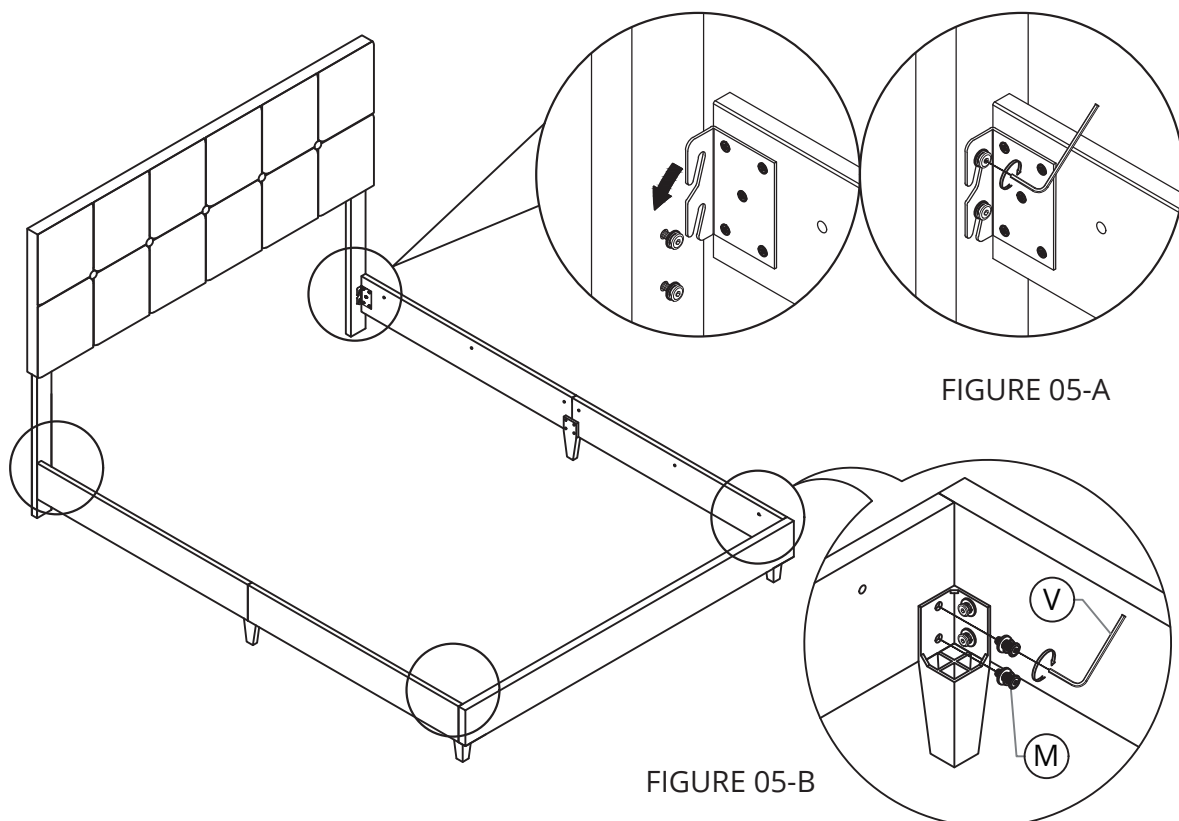


FIGURE 05-A

FIGURE 05-B

Raise the side rail up, bring the side rail and align the hook on the side rail to the bolts. Once the side rail is set, tighten all bolts by using a Allen key (V) as FIGURE 05-A. After assembly, re-tighten all bolts for a snug fit. **DO NOT OVER TIGHTEN.** Install the side rail to the footboard by using the Allen bolt (M) with lock washer, flatwasher and Allen key (V). See FIGURE 05-B.

## Step 6

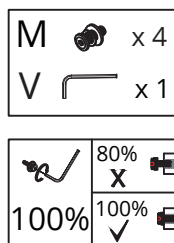







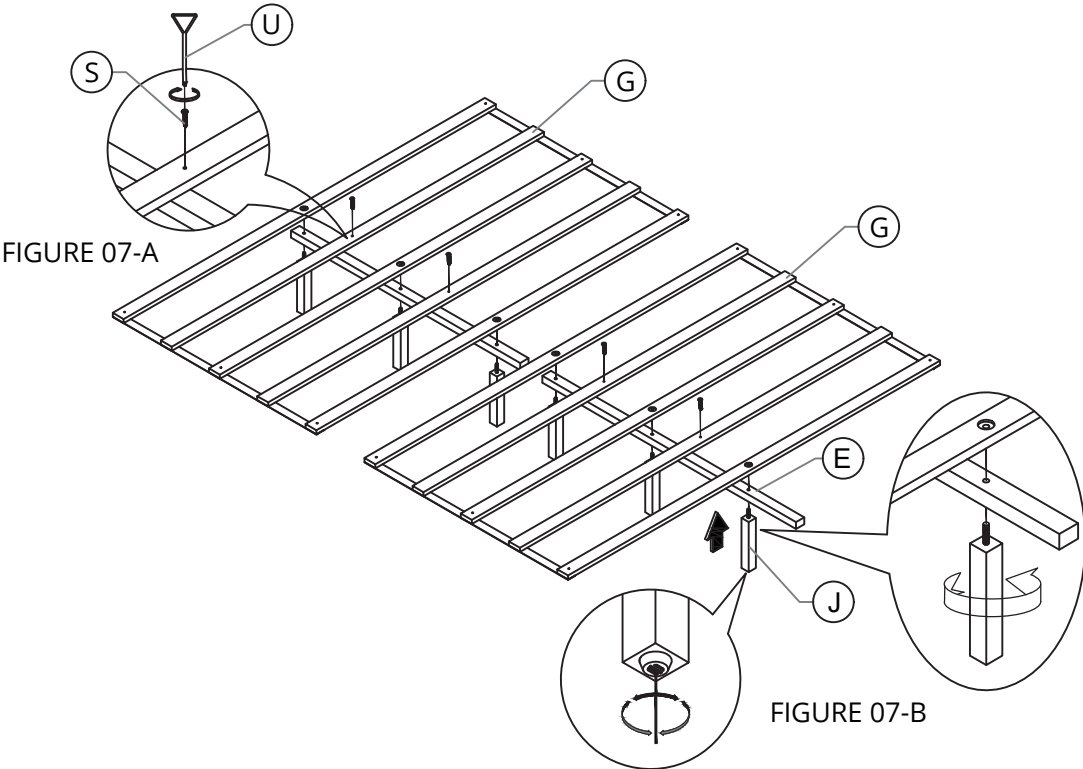
FIGURE 06

Install the rail support (F) to the side rail by using the Allen bolt (P) and Allen key (V). See FIGURE 06.
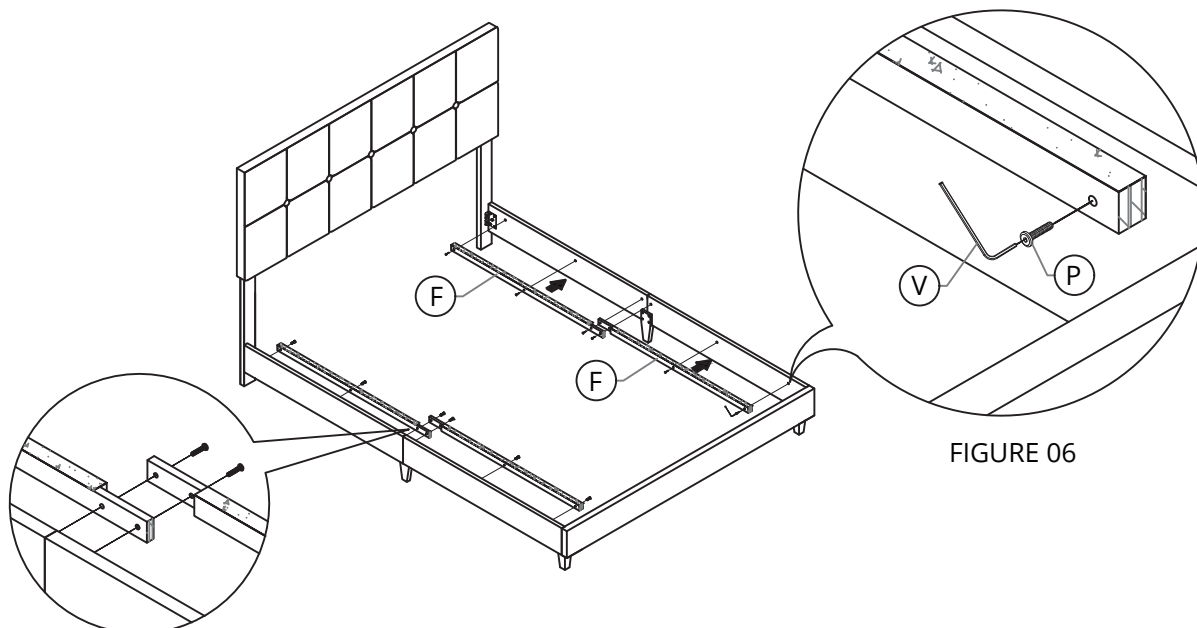
# Step 7


S		x 4
U		x 1

	80% X	
100%	✓	




Install the center rail (E) to the slat set (G) by using the screw (S) and tighten by the center legs (J). See FIGURE 07-A/B .

# Step 8

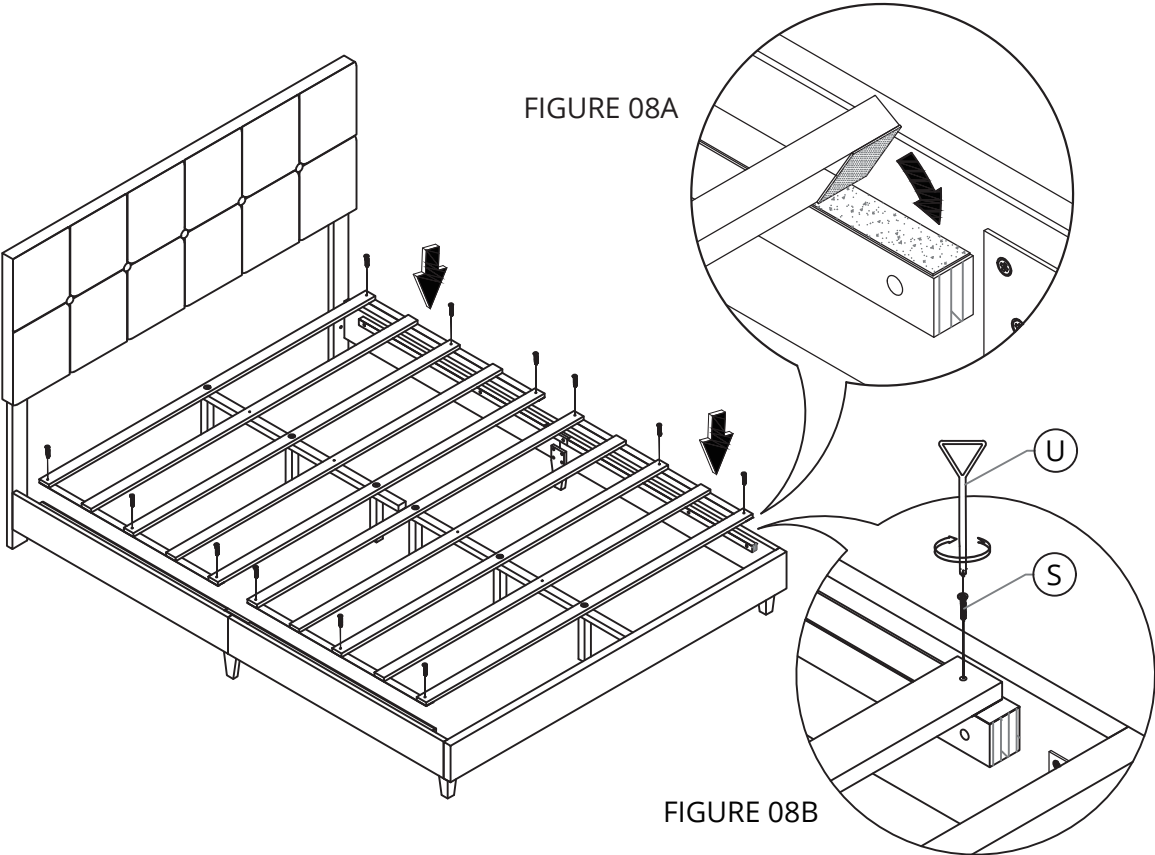

Install the slat set to the bed by using the screw(S) and tighten by screwdriver(U). See FIGURE 08A-08B.

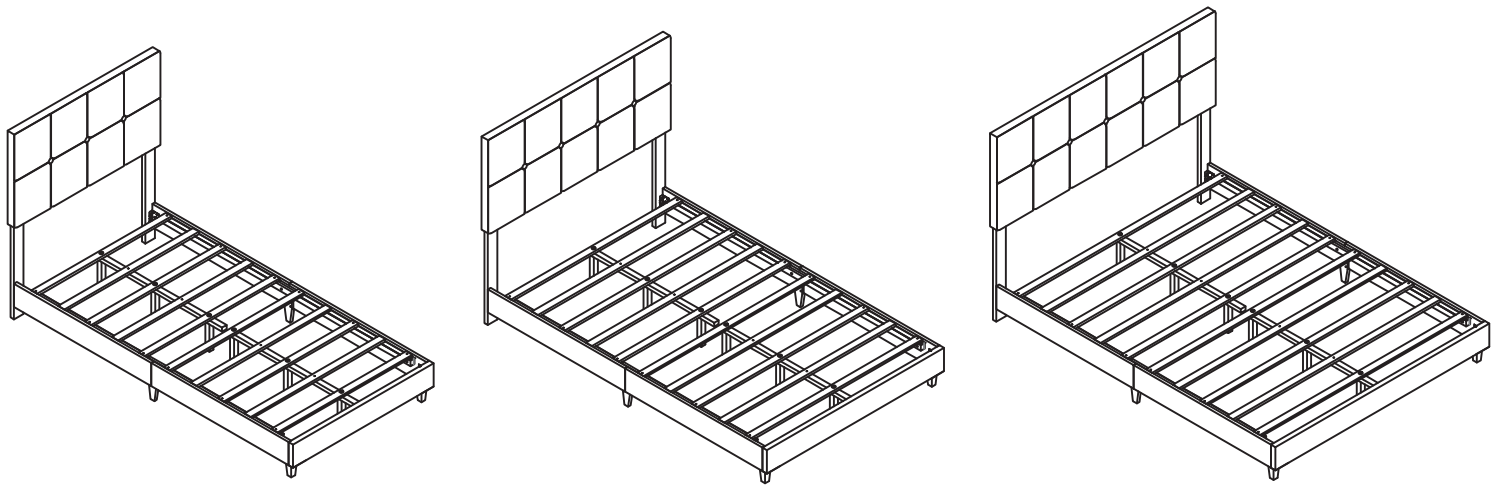

Thank you for choosing this product. We strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.