




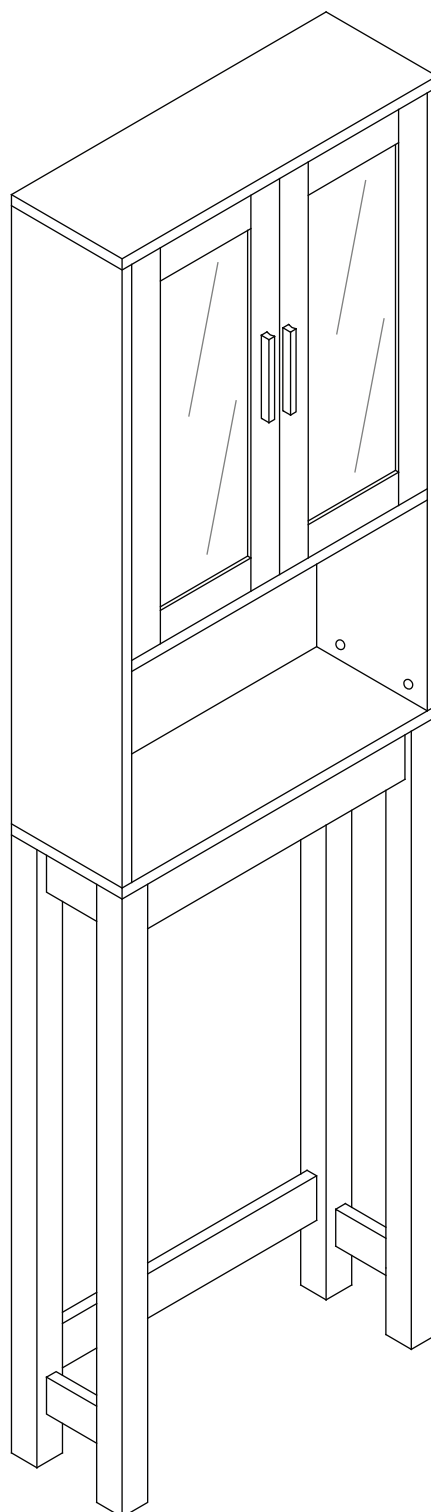




























Assembly Instruction Of Frosted Pane Spacesaver





Hardware List




ITEM	DESCRIPTION	PART	QTY
(A)	Camlock		20
(B)	Camlock Bolt		20
(C)	Wooden Dowel		18
(D)	Screw 4X30		4
(E)	Screw 3X12		18
(F)	Shelf Pin		4
(G)	Screw		24
(H)	Handle Bolt		4
(I)	Handle		2
(J)	Magnetic Bar		2
(K)	Magnetic Cathch		1
(L)	Hinge		4
(M)	Plastic Anchor		2
(N)	Plastic Cap		4
(O)	Screw 4x35		2
(P)	PaPer Ruler		
Q	Screw 3X15		2

PART List



ITEM	DESCRIPTION	PART	QTY
(1)	Right Side Panel		1
(2)	Left Side Panel		1
(3)	Upper Back Cross Bar		1
(4)	Fixed Shelf		1
(5)	Top Panel		1
(6)	Left Leg Frame		1
(7)	Right Leg Frame		1
(8)	Lower Back Cross Bar		1
(9)	Middle Cross Bar		2
(10)	Bottom Panel		1
(11)	Back Panel		1
(12)	Adjustable Sherlf		1
(13)	Right Door Panel		1
(14)	Left Door Panel		1

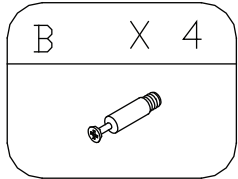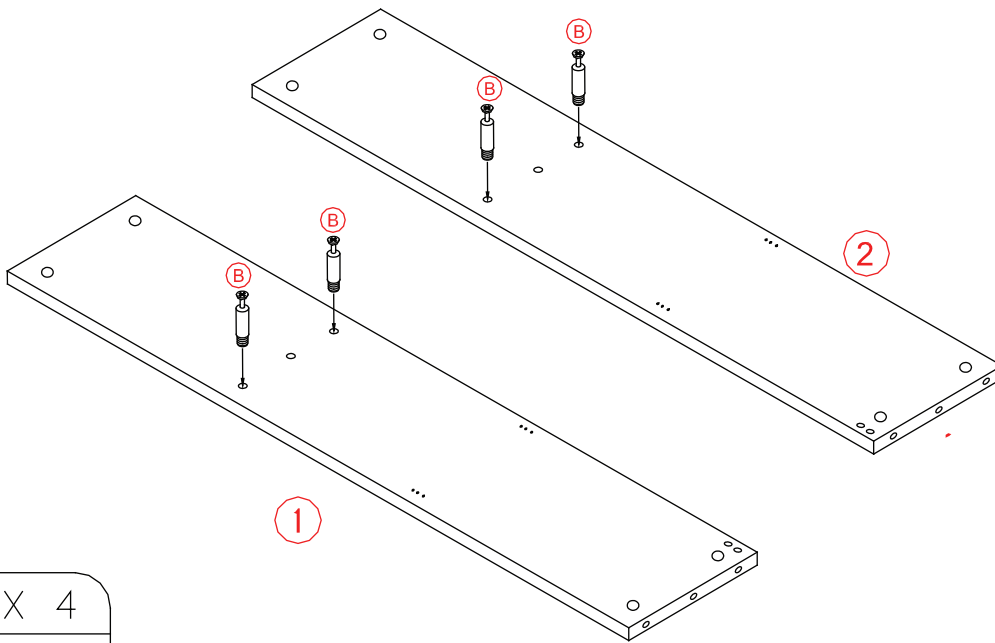




**Assemble Camlock Bolt(B) To Left Side Panel(2)
And Right Side Panel(1).**

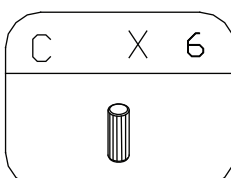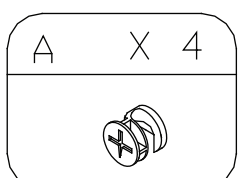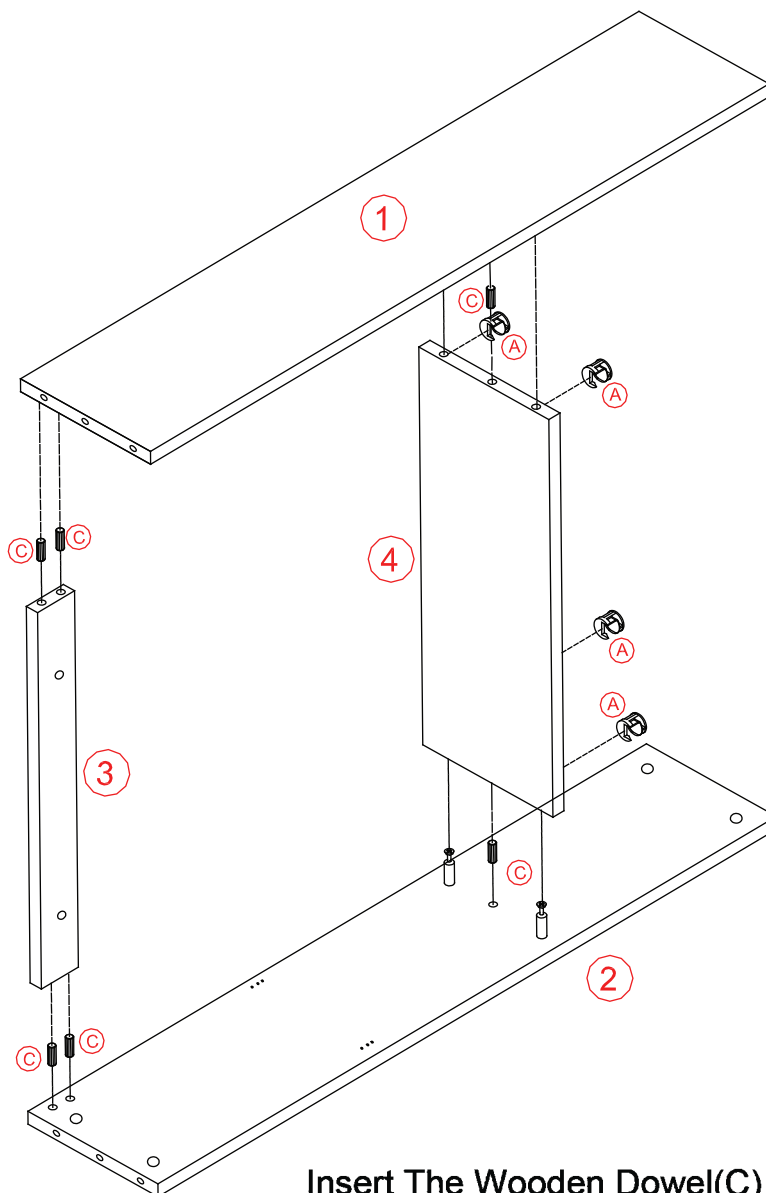



**Insert The Wooden Dowel(C) To Upper Back Cross Bar(3)
and Fixed Shelf(4), Then Assembled with Left Side
Panel(2) and Right Side Panel(1) With Camlock(A)
As shown.**

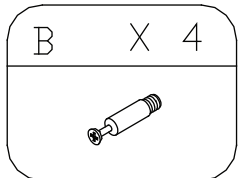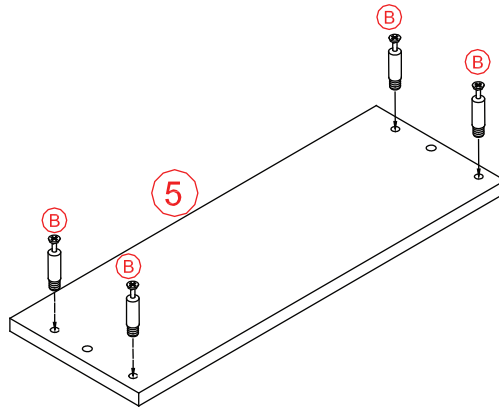




Assemble The Camlock Bolt(B) To Top Panel(5).

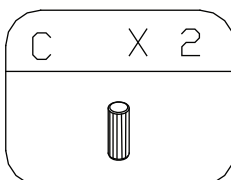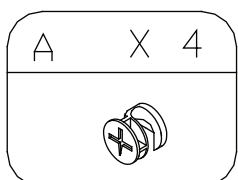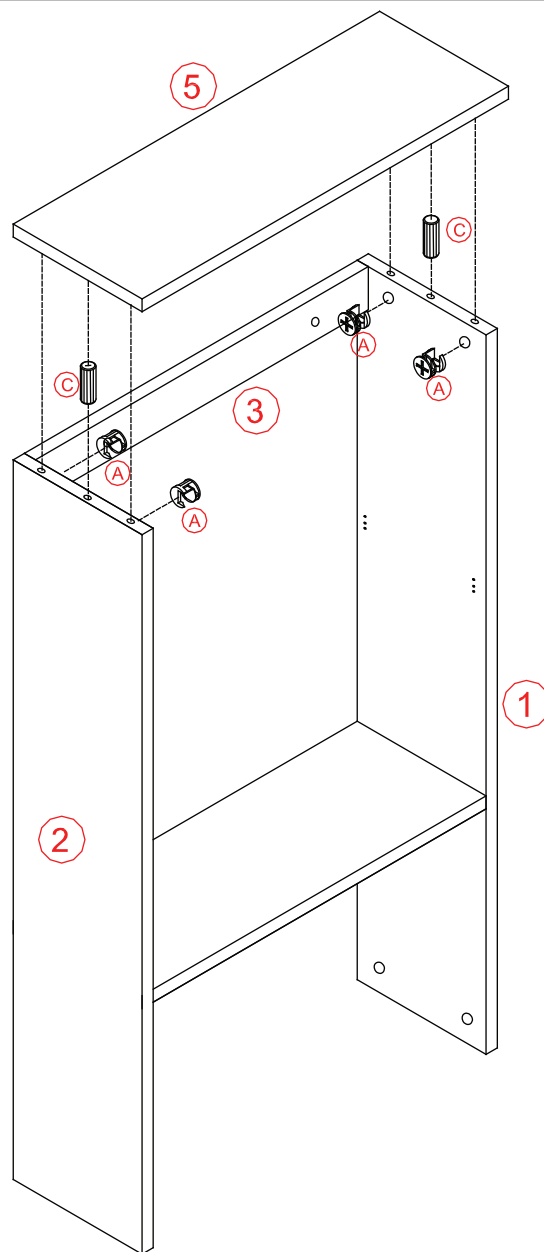

Attach Top Panel(5) To Assembled Unit With Wooden Dowel(C),Then Assemble with Assembled Unit With Camlock(A) As shown.

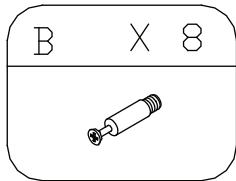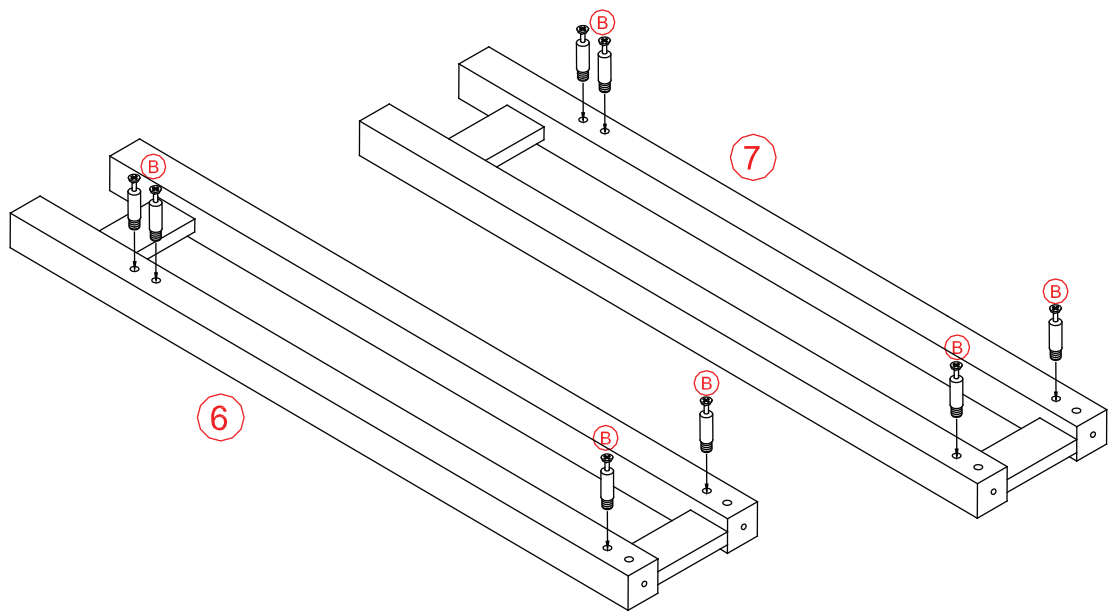



Assemble Camlock Bolt(B) to Left Leg Frame(6) And Right Leg Frame(7) As shown.

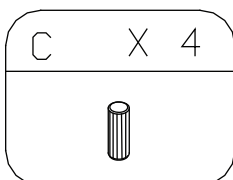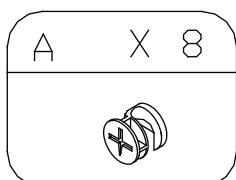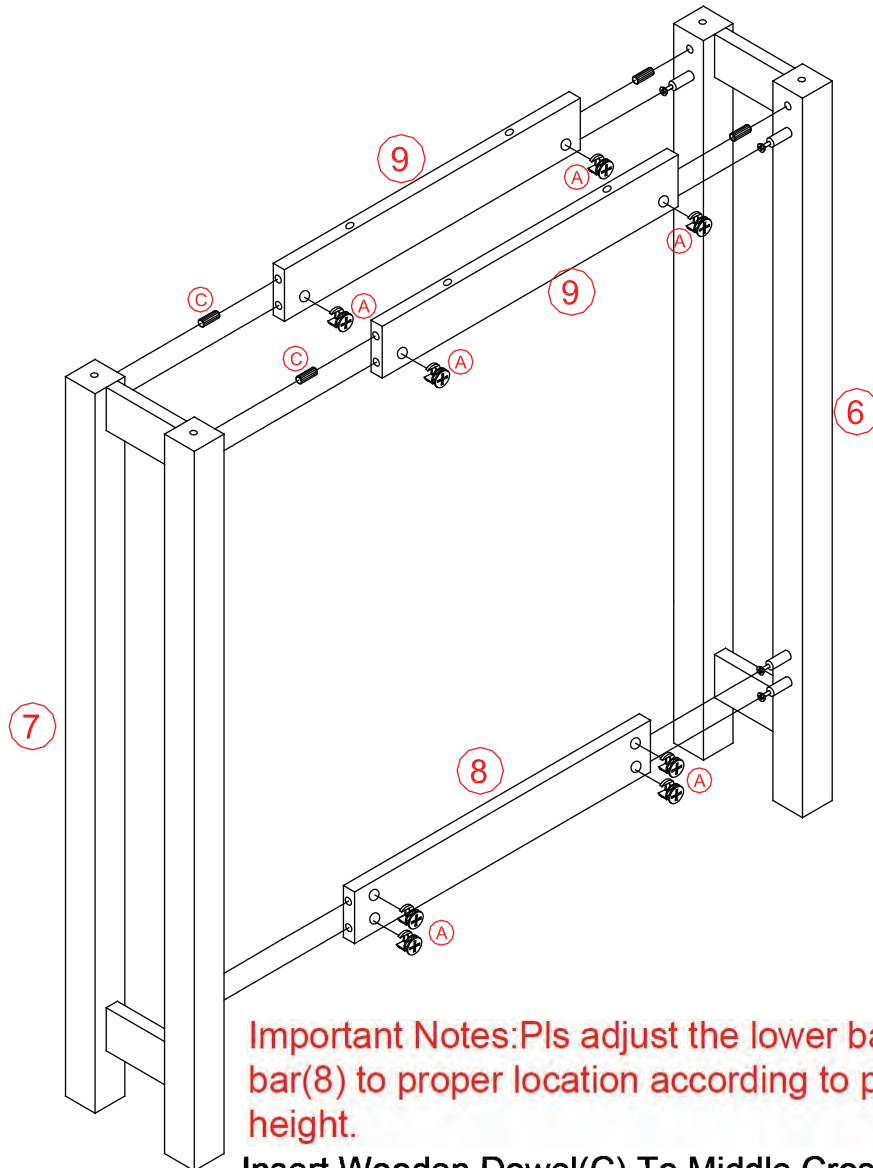



Important Notes:Pls adjust the lower back cross bar(8) to proper location according to pipe's height.





Insert Wooden Dowel(C) To Middle Cross Bar(9),Then Assemble Middle Cross Bar(9) and Lower Back Cross Bar(8) With Right Leg Frame(7) and Left Leg Frame(6) With Camlock(A) As Shown Above.

Insert Wooden Dowel(C) To Assembled Unit,Then Assembled With Bottom Panel(10) By Using Screw(D) as Shown.

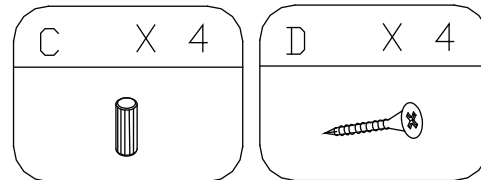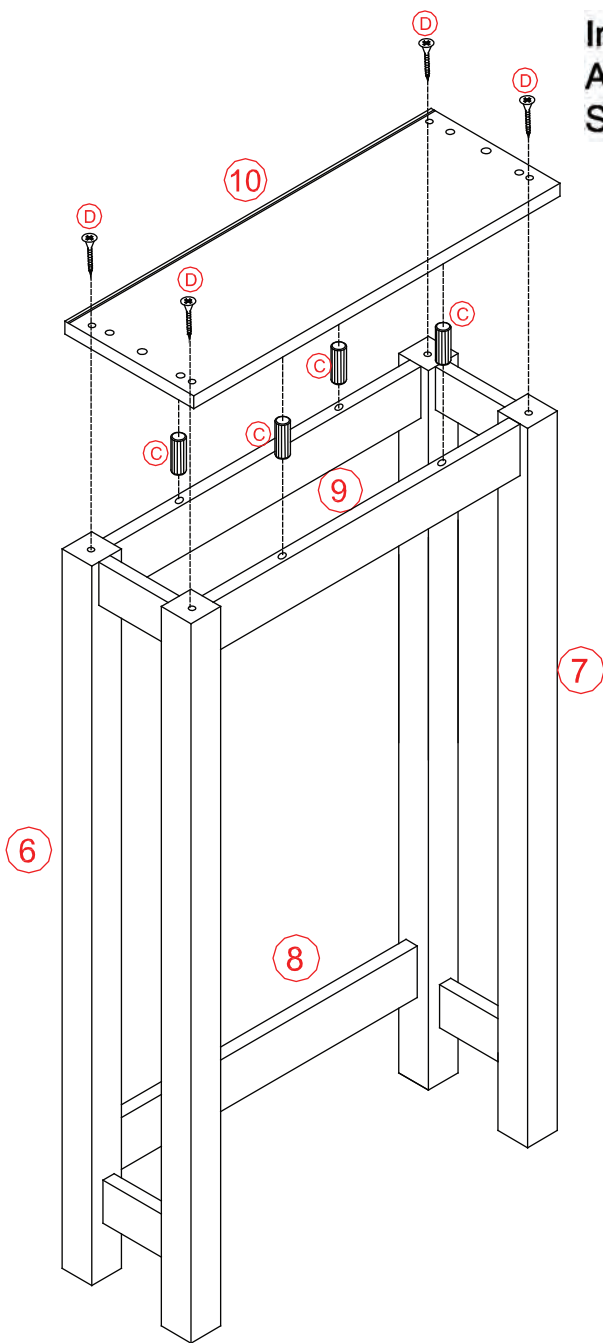


Assemble Camlock Bolt(B) To Bottom Panel(10) As Shown.

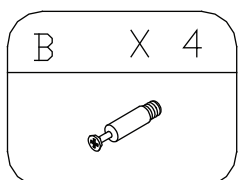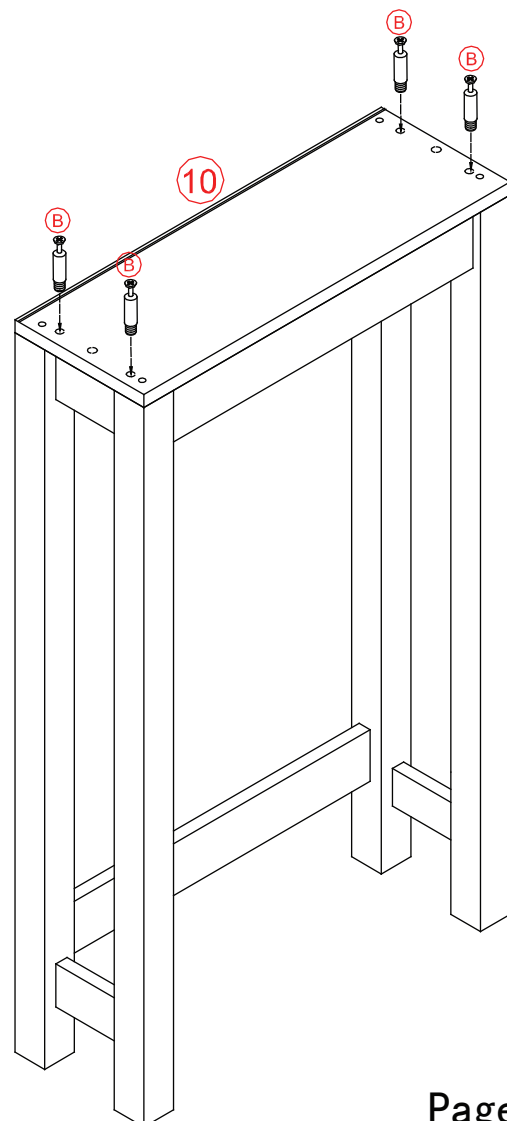

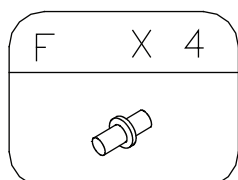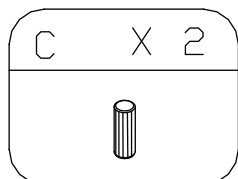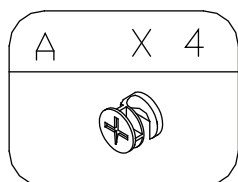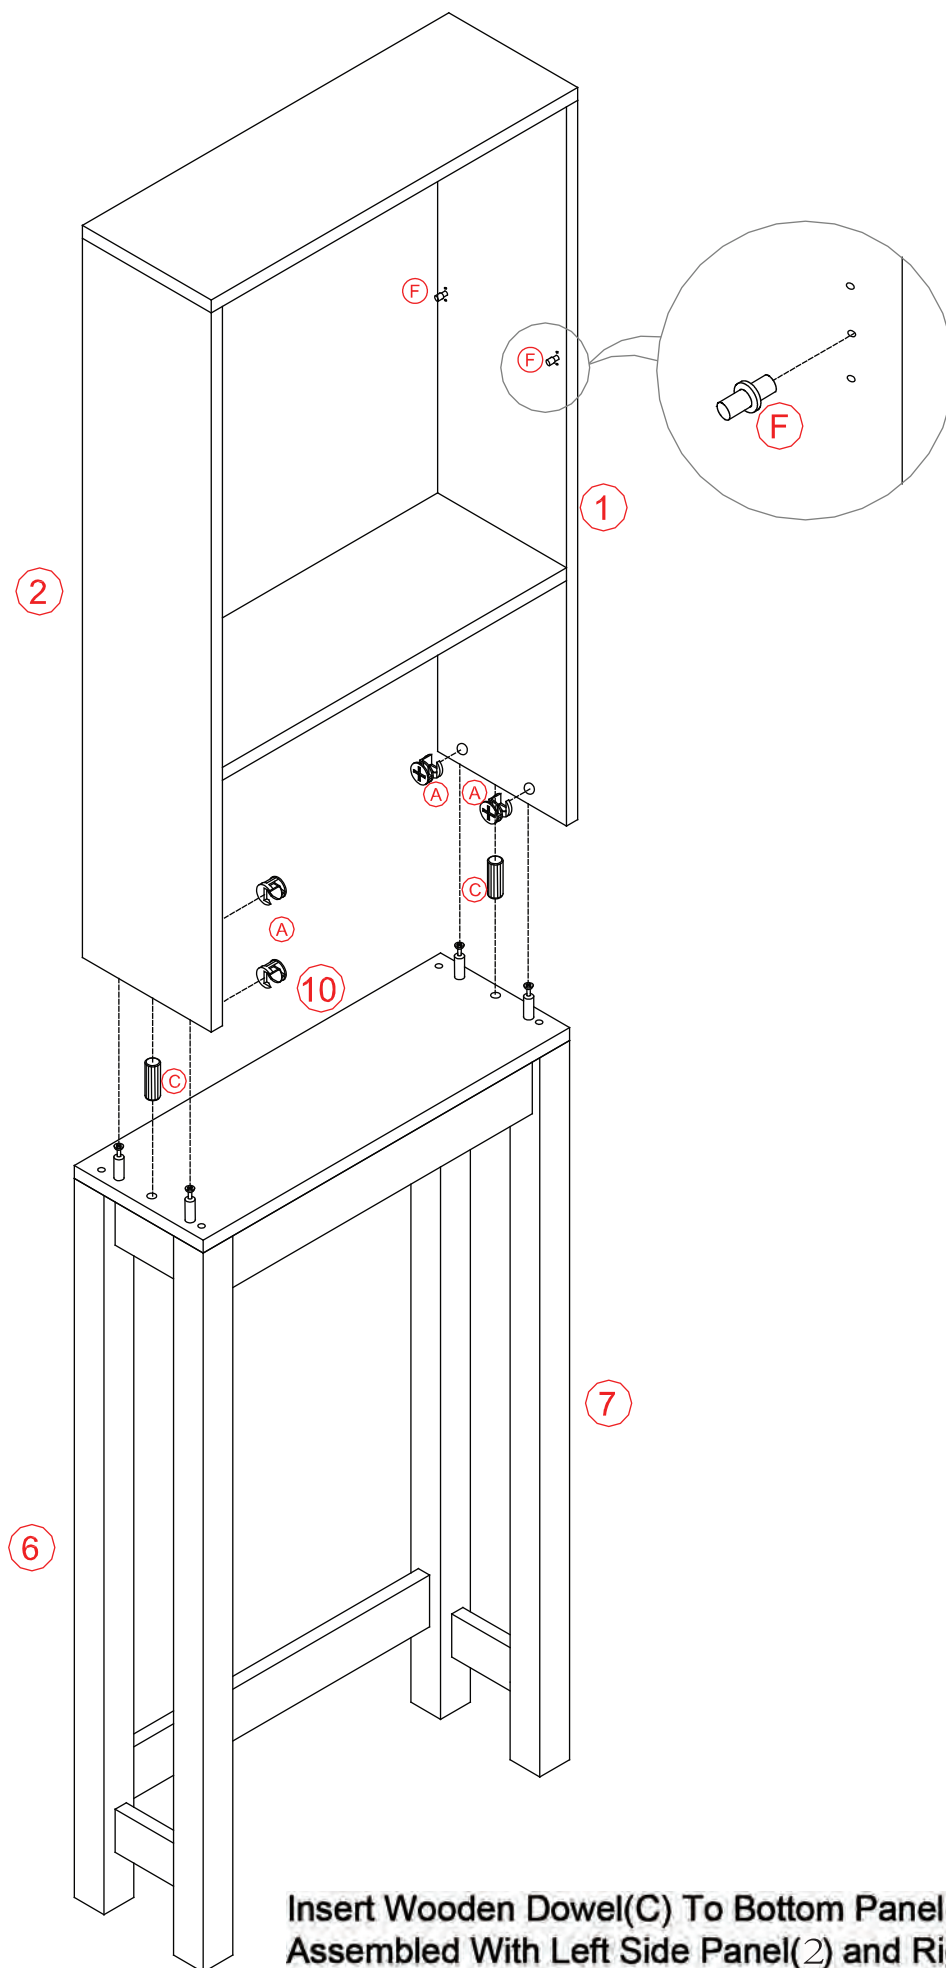

Insert Wooden Dowel(C) To Bottom Panel(10),Then Assembled With Left Side Panel(2) and Right Side Panel(1) By Using Camlock(A) As Shown. Insert Shelf Pin(F) To Its Position.

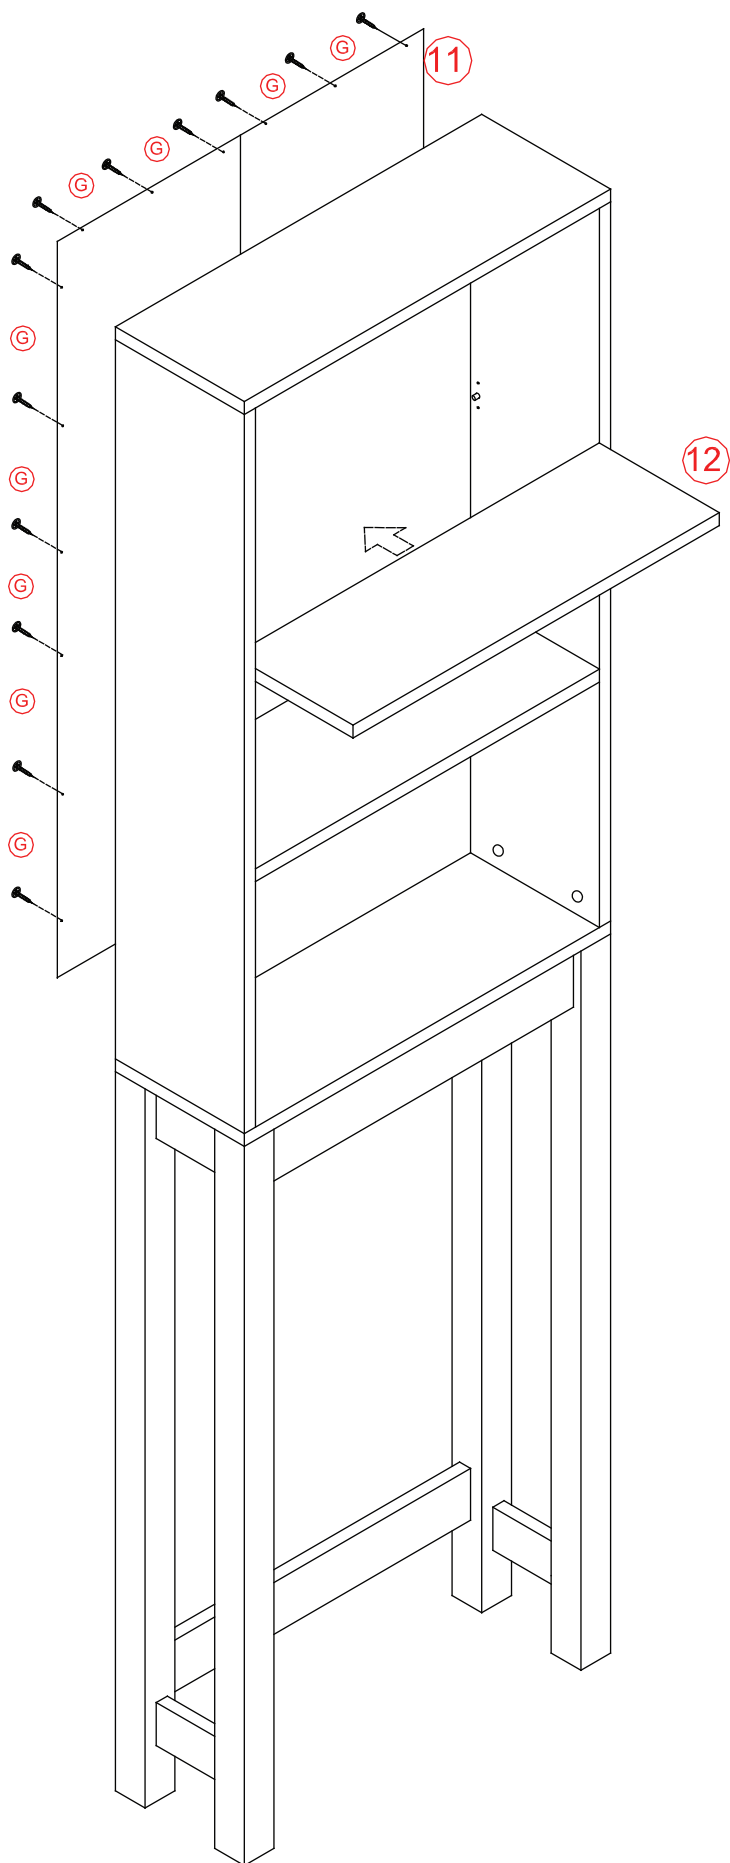






Assemble The Back Panel(11) To Assembled Unit By Using Screw(G).
Insert Adjustable Shelf(12) As shown.


G X24





Assemble Handle(I) To Left Door Panel(14) and Right Door Panel(13) With Handle Bolt(H). Attach Magnetic Bar(J) To Left(14) And Right(13) Door Panel By Using Screw(E) As Shown

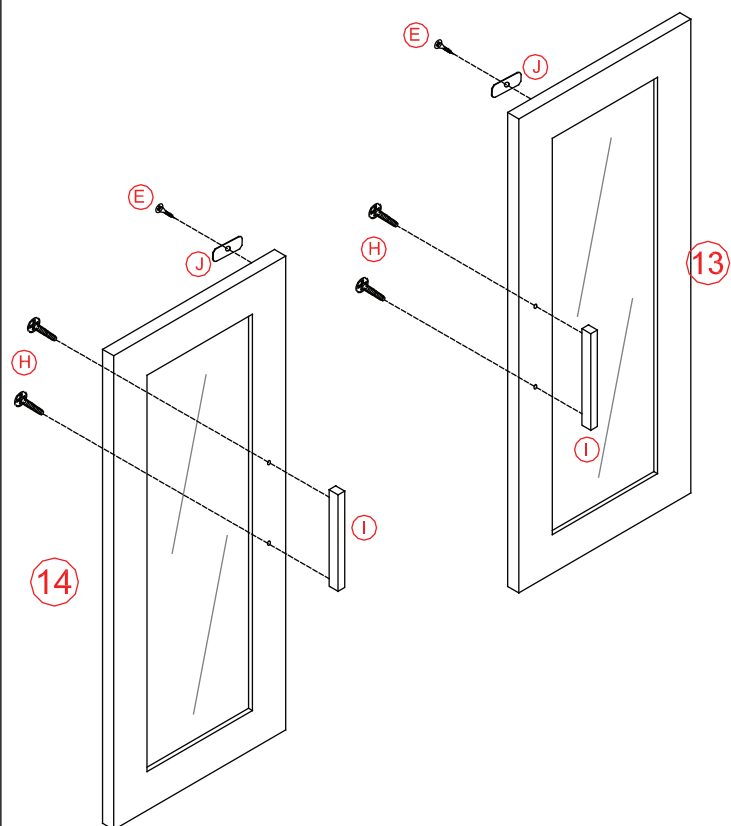



E X 2	H X 4
	
I X 2	J X 2
	


Q	X	2
		

E	X	16
		

K	X	1
		





L	X	4
		

N	X	4
		

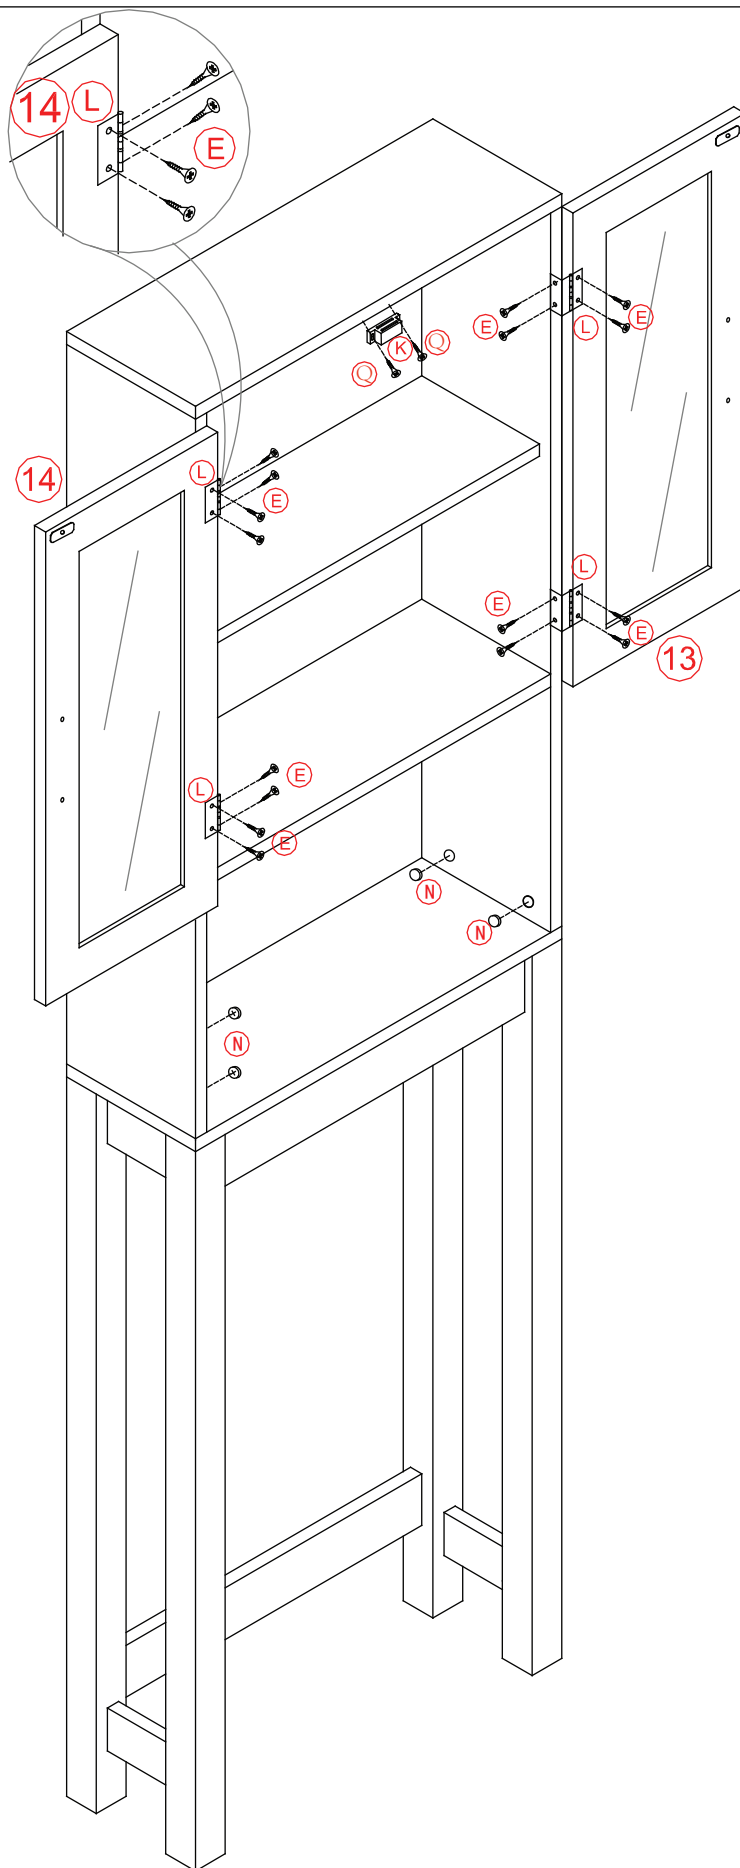

Assemble Magnetic Catch(K) To Assembled Unit With Screw(Q). Attach Hinge (L) To Left(14) And Right(15) Door Panel With Screw(E), Then Assemble With Assembled Unit by Using Screw(E) As Shown. Cover Camlock(A) with plastic Cap(N) As Above.

- 1 Position the paper ruler(P)on the wall,making sure it is parallel to the ground.Mark the two holes where shown,with pencil on the wall.
- 2 Pls use a 3/16" Dia drill bit to drill two holes into the wall according to your pencil markings.
- 3 Insert plastic Anchor(M) with hammer to the wall.

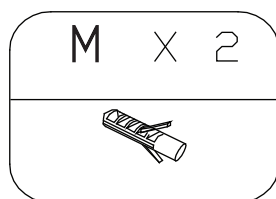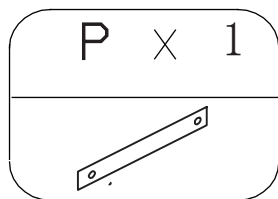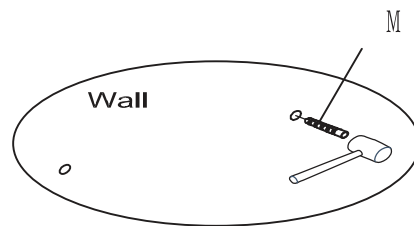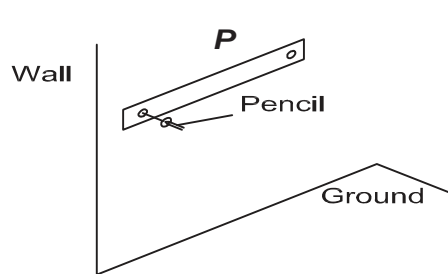

Assemble The Assembled unit to The plastic Anchor(M) with Screw (O) As shown

**Important Note:
The Spacesaver Must Be Attached To The Wall.**

