


Assembly Instruction


Item：GG261005-2899-CB

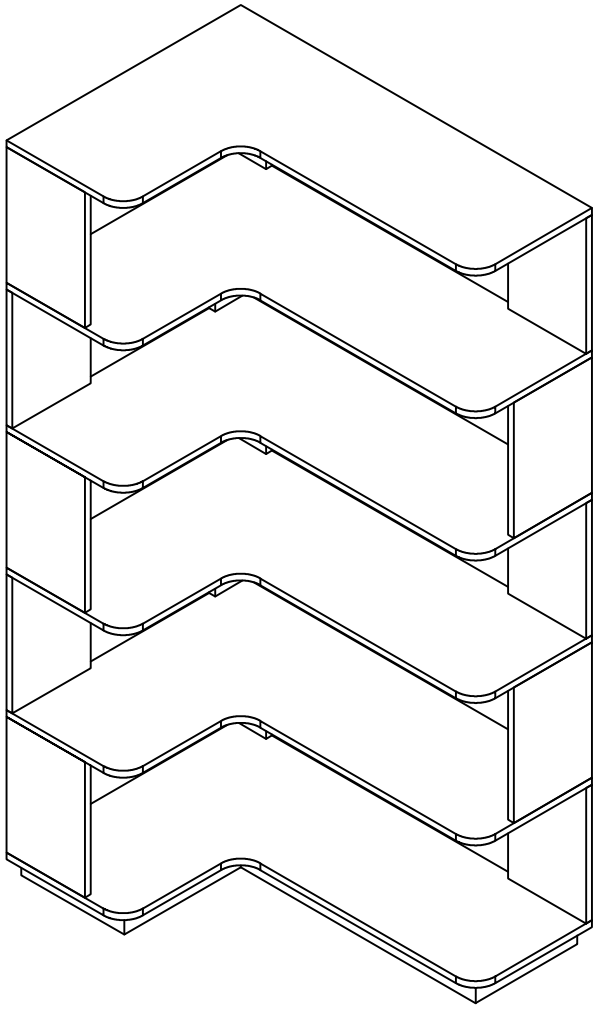

MADE IN CHINA

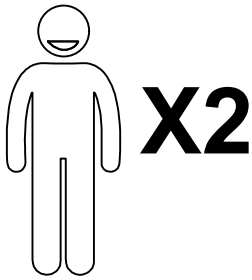


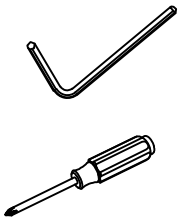

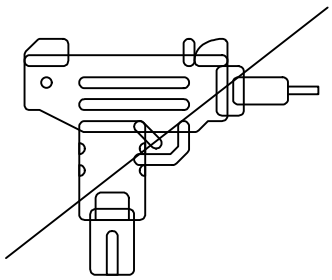


We recommend using hand tools for assembly.

If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

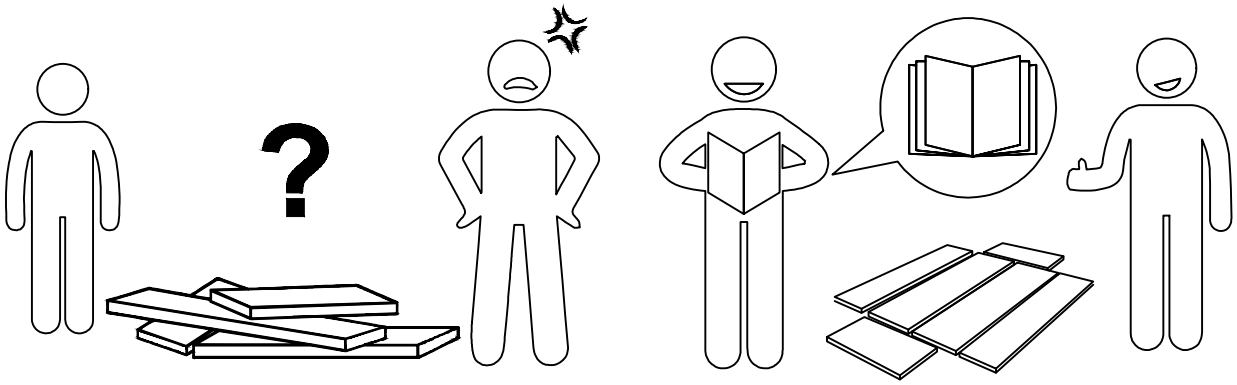

Install the Anti-Tip Straps


Using the anti-tip straps can reduce the risk of tipping over but can not eliminate it.

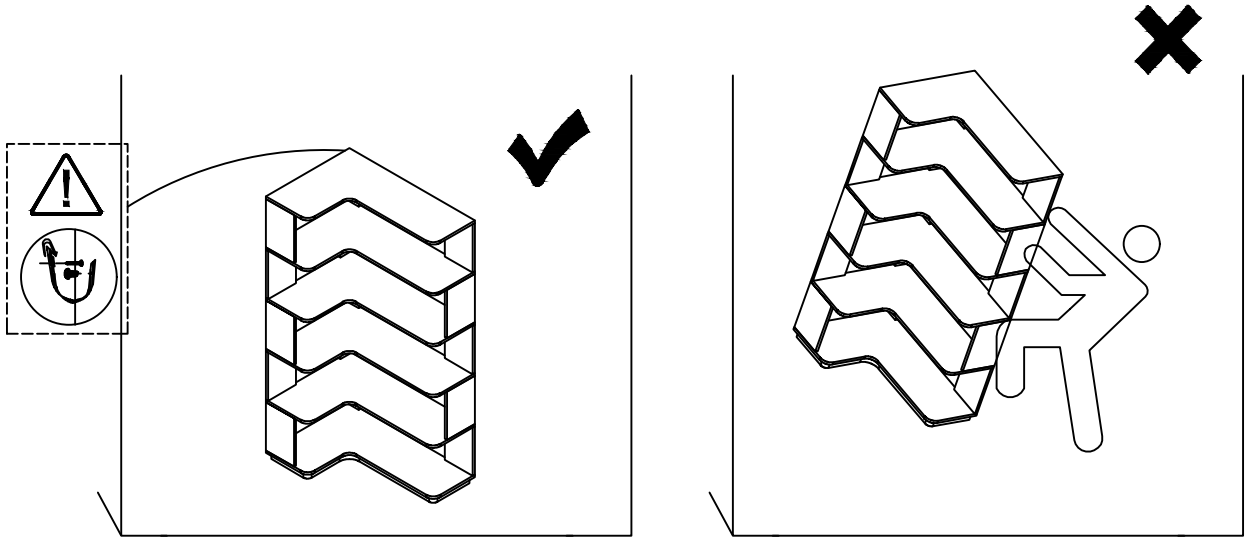


MADE IN CHINA

Installation of Cams and Pins


Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

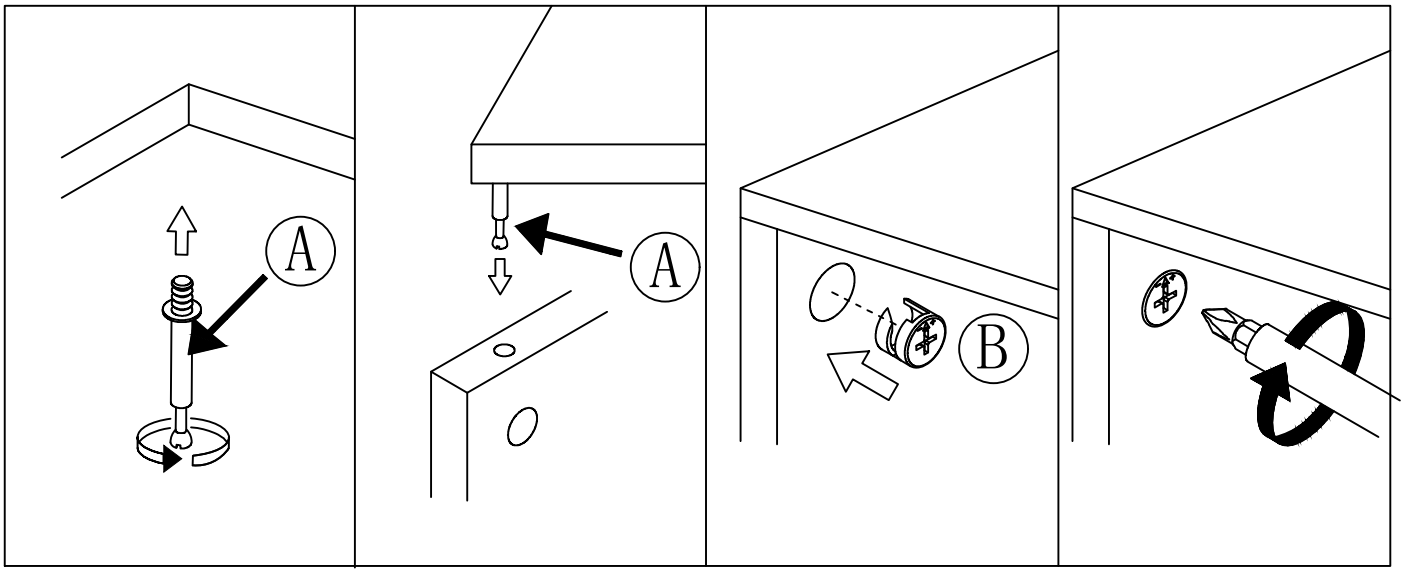

Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

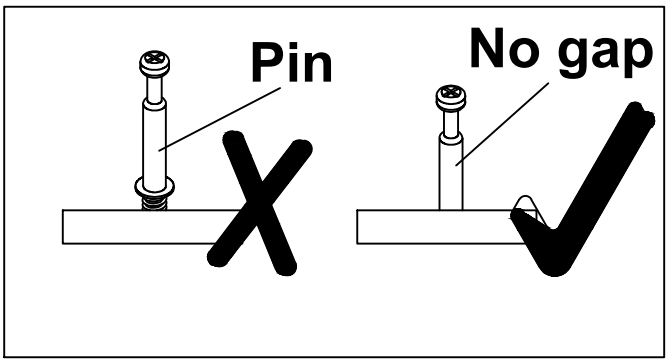


ASSEMBLY INSTRUCTION

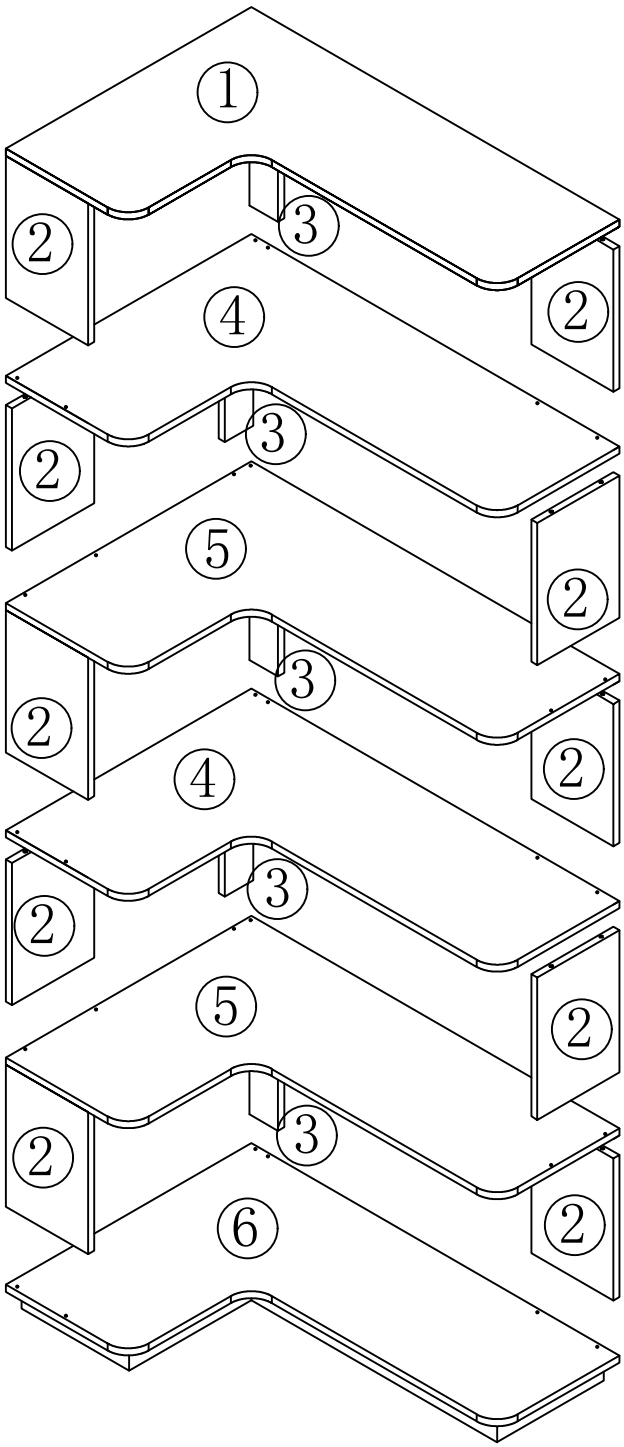


MADE IN CHINA

Part List

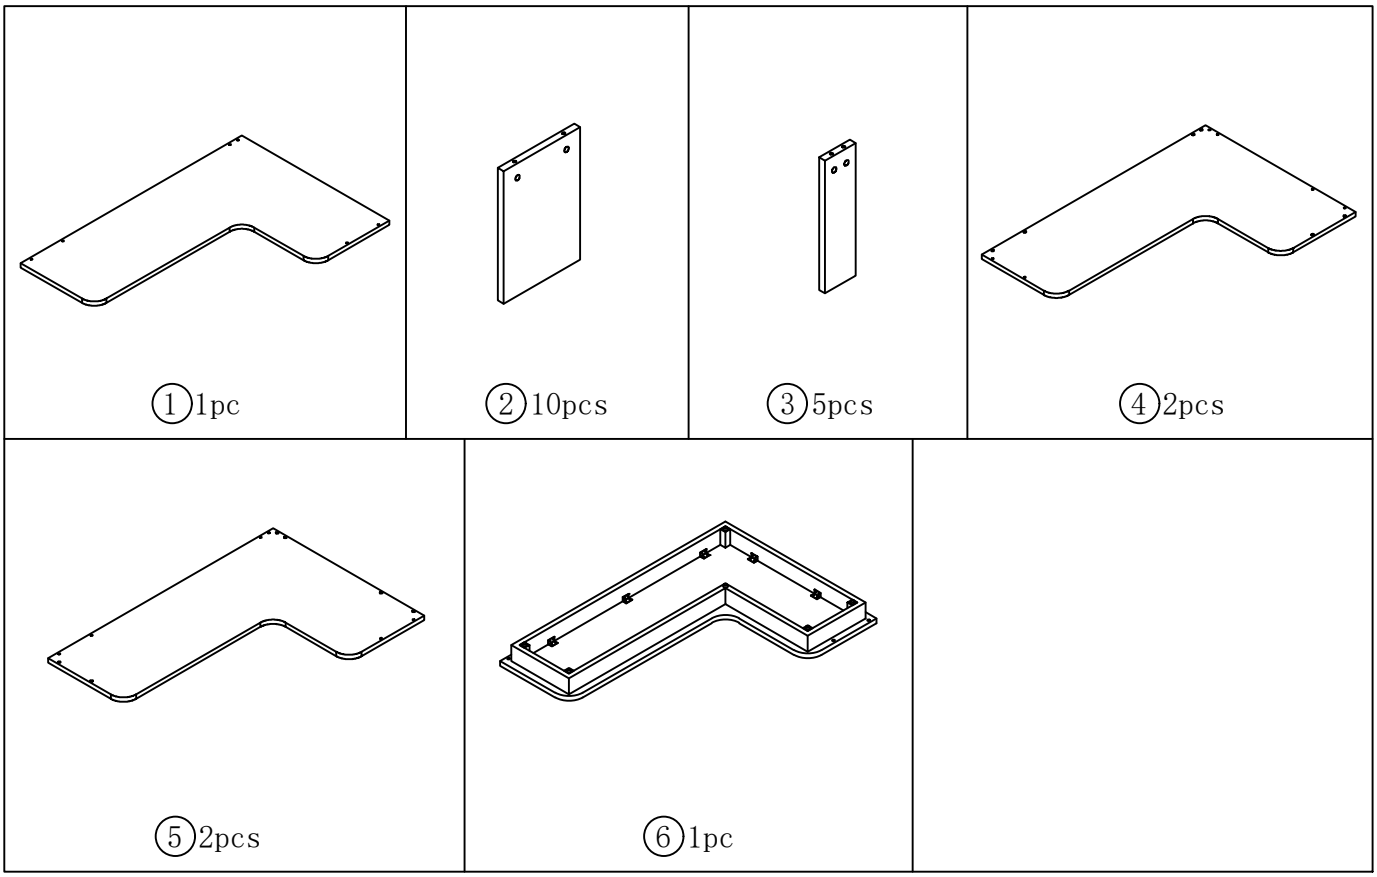



Hardware List

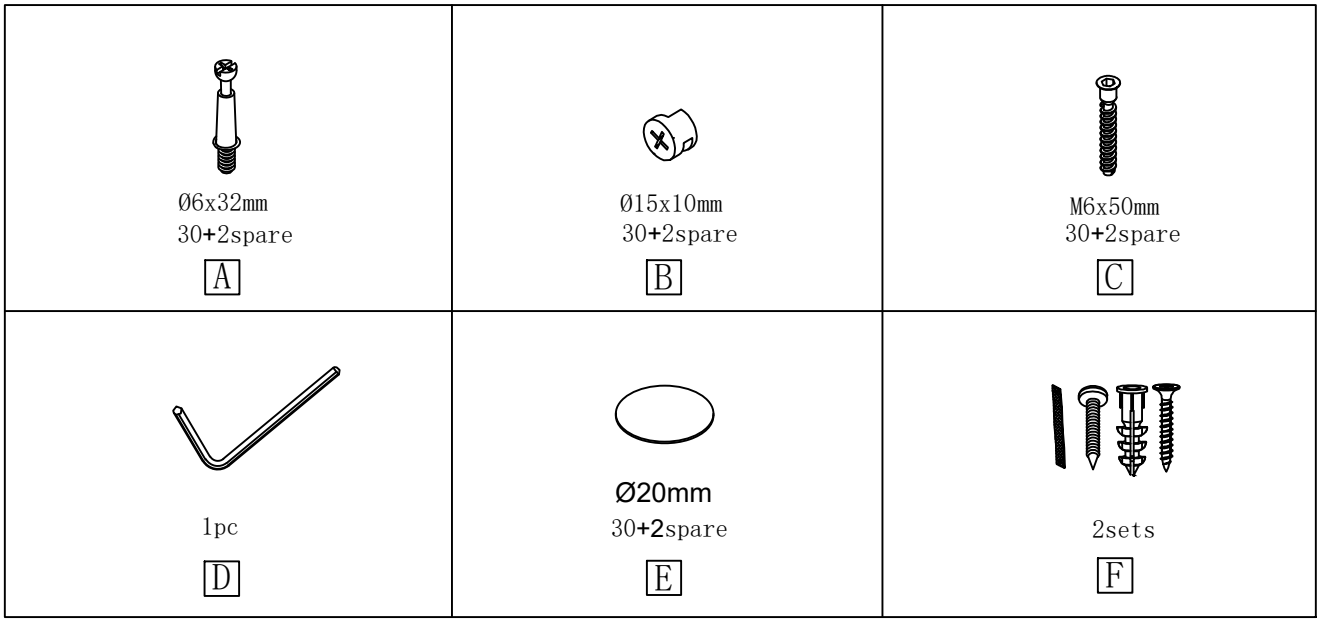


MADE IN CHINA


STEP 1


A:		6PCS
B:		6PCS

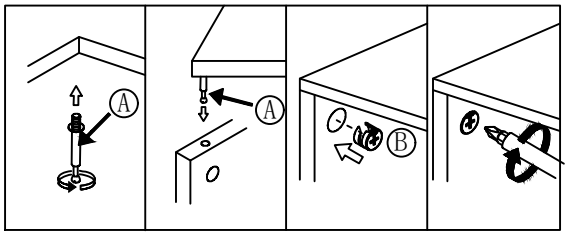

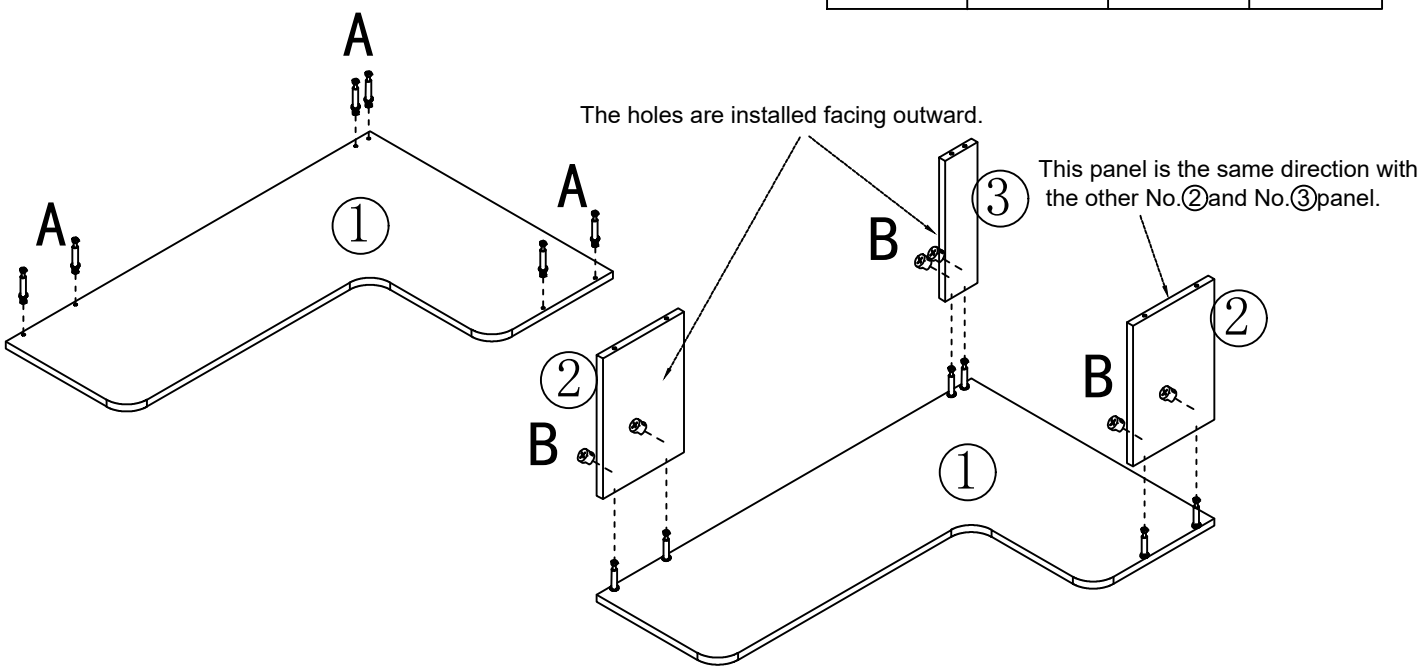


STEP 2


C:		6PCS
D:		1PC

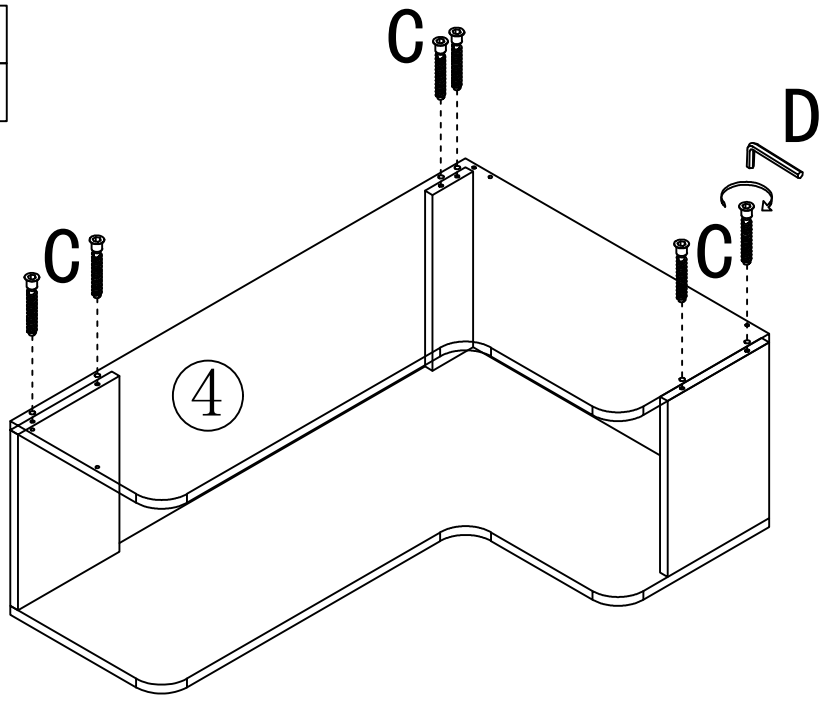


MADE IN CHINA


STEP 3


A:		6PCS
B:		6PCS

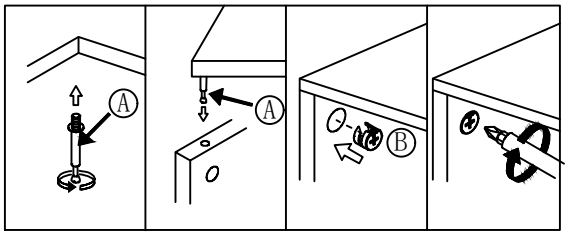

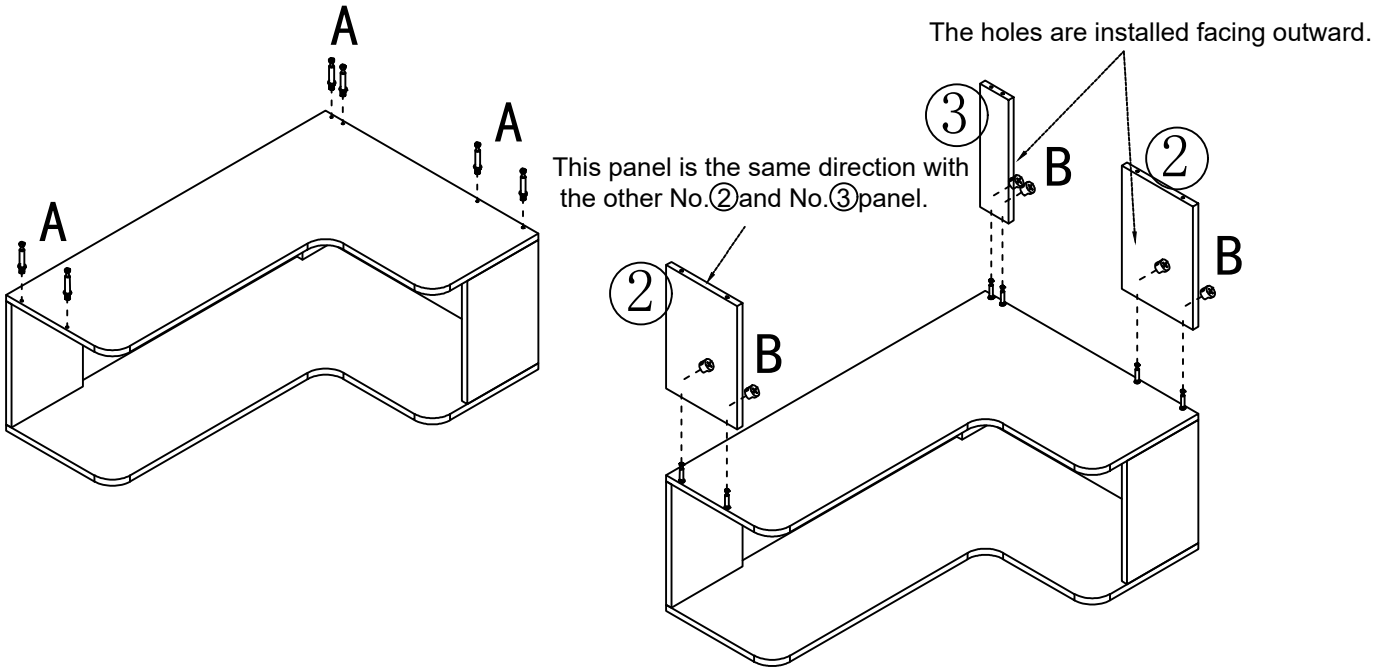


STEP 4


C:		6PCS

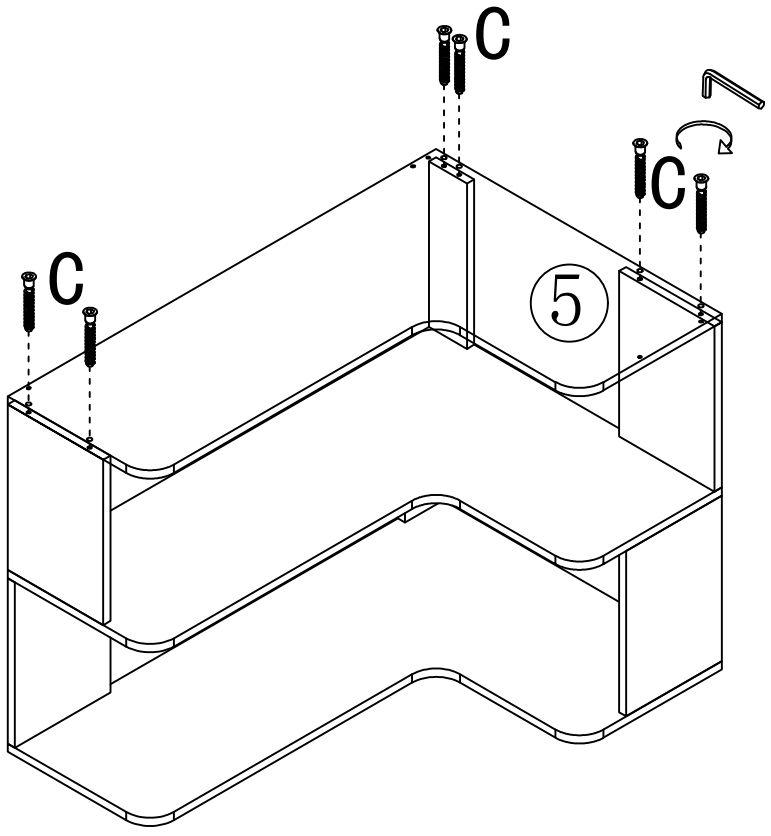

MADE IN CHINA


STEP 5

A:		6PCS
B:		6PCS

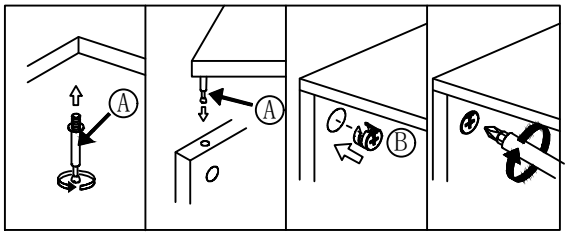


The holes are installed facing outward.

This panel is the same direction with the other No.②and No.③panel.

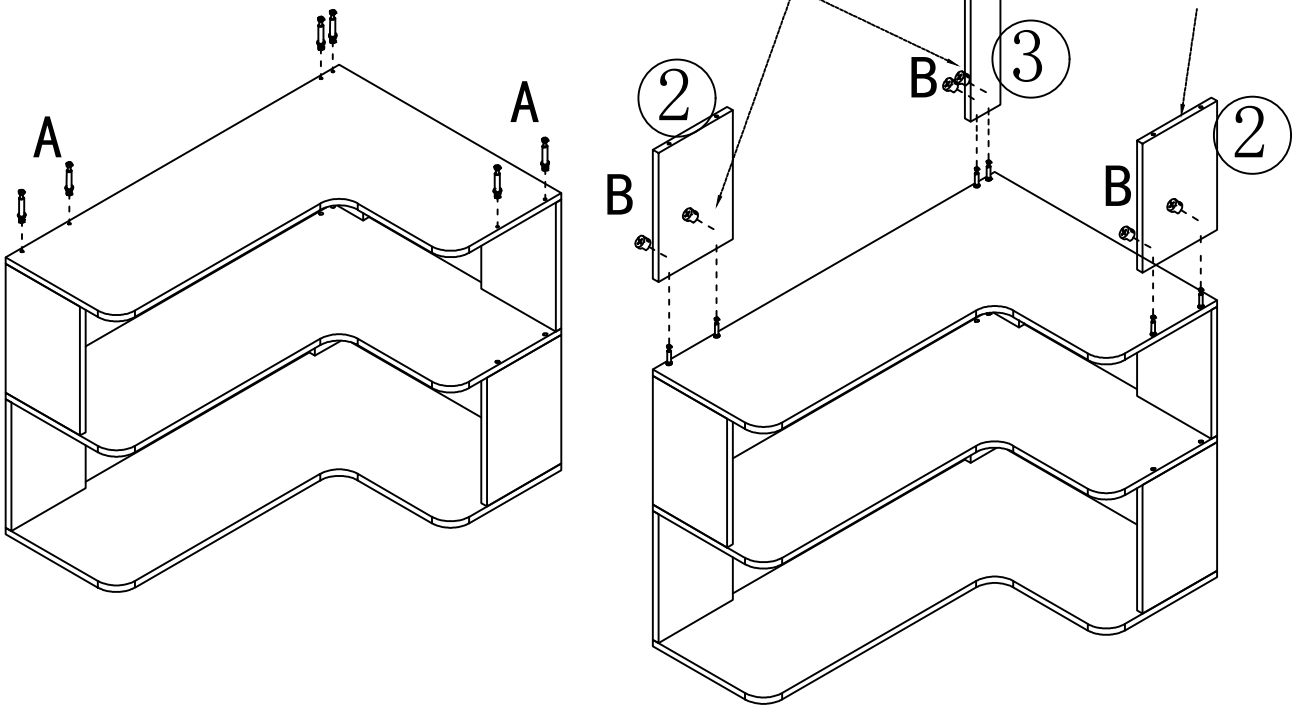


STEP 6


C:		6PCS

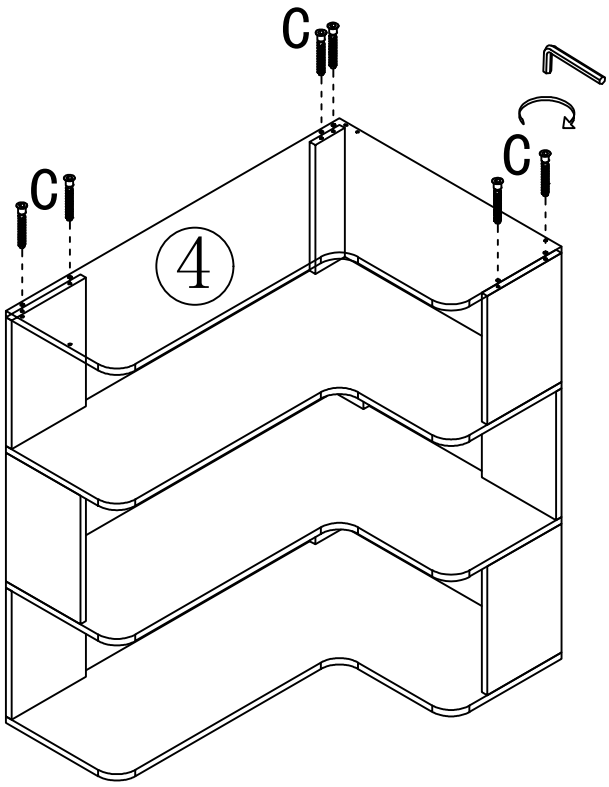


MADE IN CHINA

STEP 7


A:		6PCS
B:		6PCS

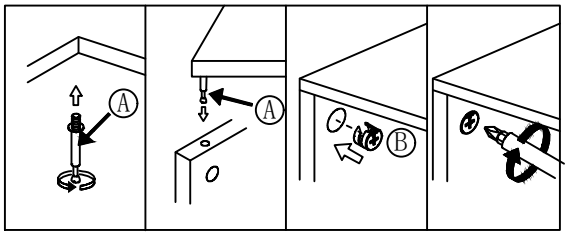


The holes are installed facing outward.

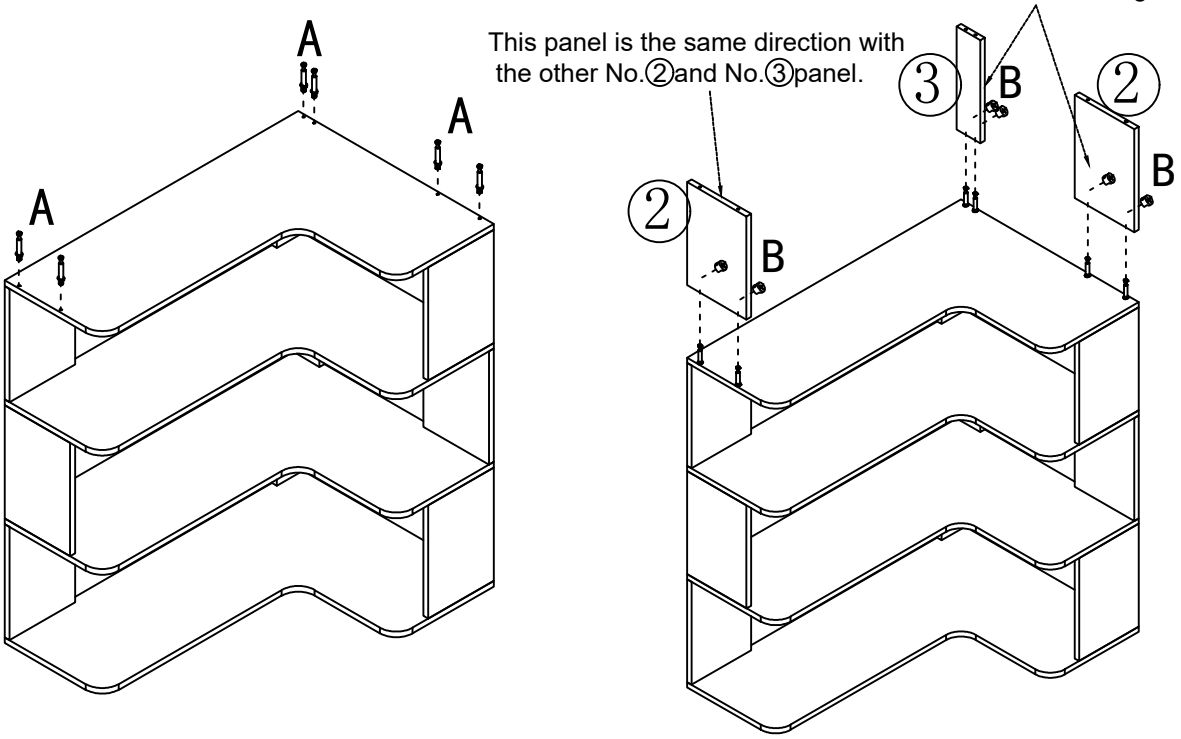


STEP 8


C:		6PCS

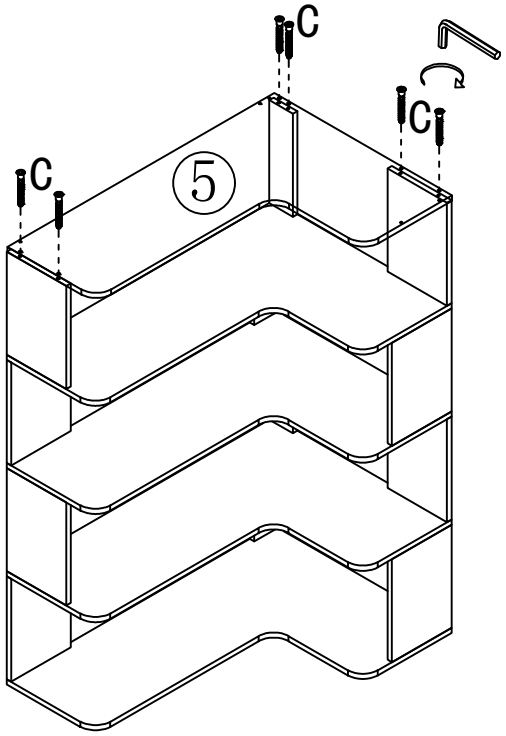

MADE IN CHINA


STEP 9

A:		6PCS
B:		6PCS

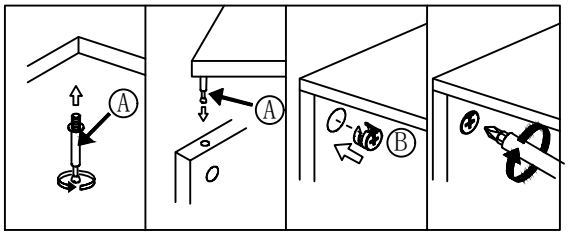


The holes are installed facing outward.

This panel is the same direction with the other No.②and No.③panel.

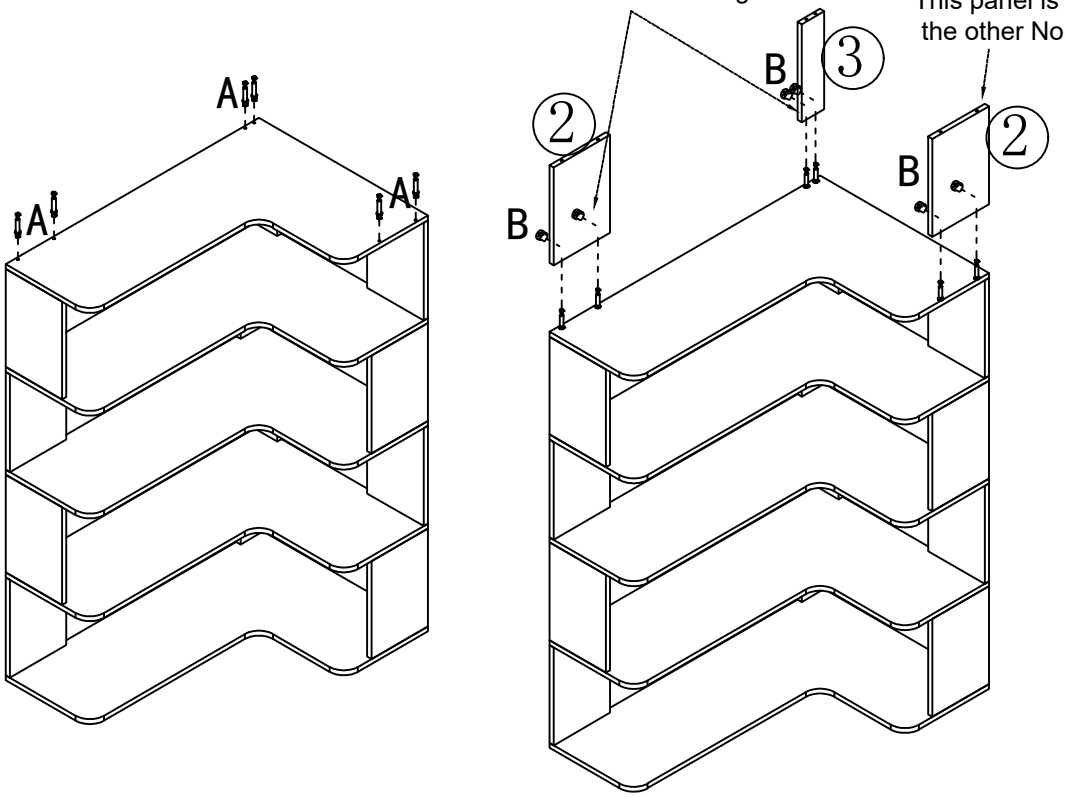

STEP 10


C:		6PCS

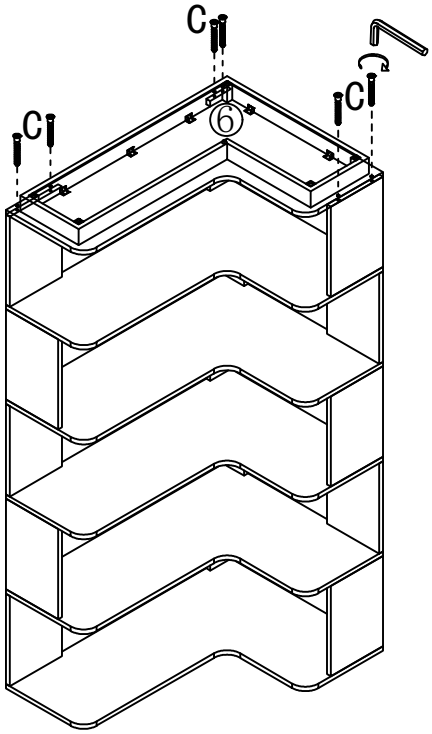

MADE IN CHINA


STEP 11

E: 30PCS

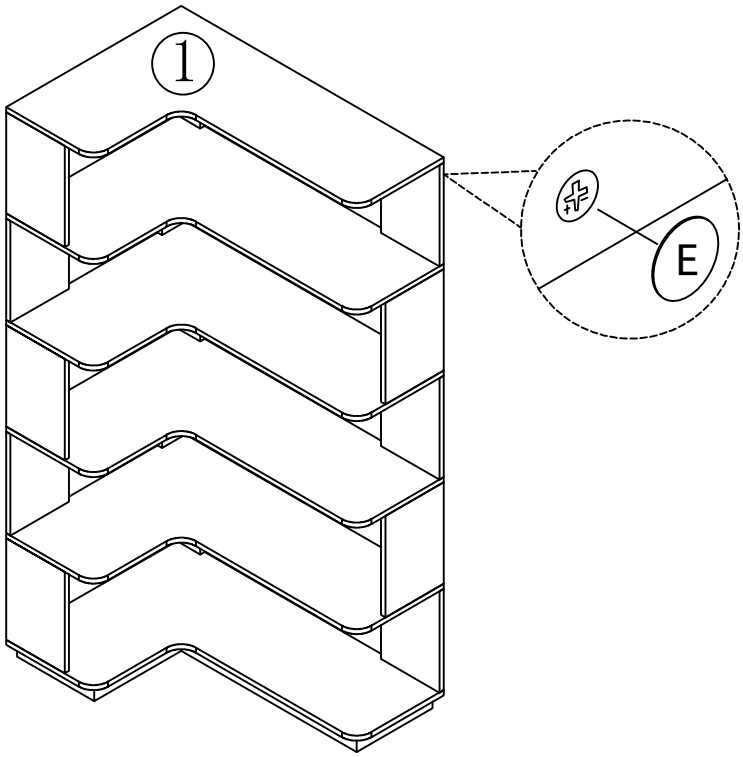


STEP 12

F: 2SET

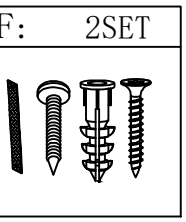

If it is a solid wall, please use expansion and self-tapping screws, if it is a wooden wall, only use self-tapping screws, please do not overtighten the screws

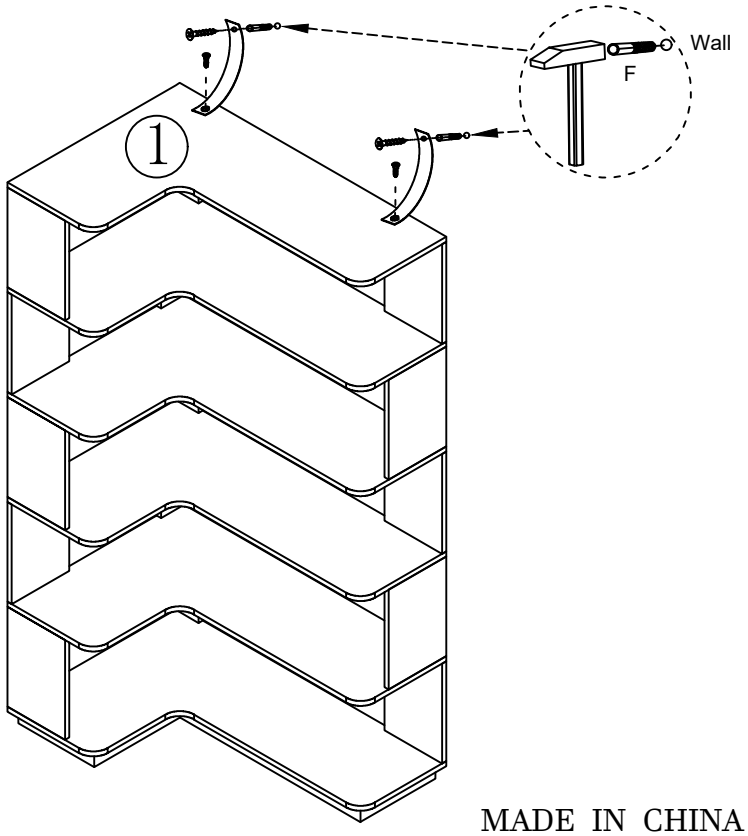

MADE IN CHINA