



①

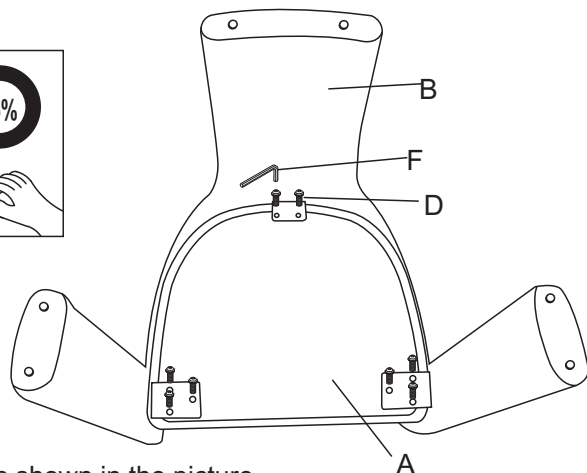

Do not tighten any of the bolts until the item is fully assembled

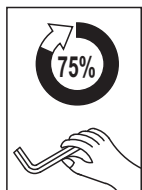

Screw no bolts as shown in the picture and tighten bolts with approximately 75% of required torque

Ax1



Bx1



Dx8





M6x30mm

Fx1



②

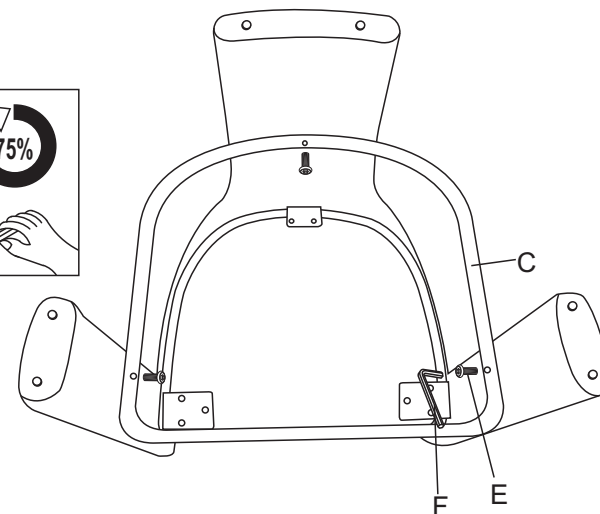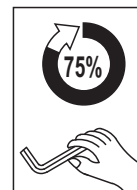

Screw no bolts as shown in the picture and tighten bolts with approximately 75% of required torque

Cx1



Ex3



M6x40mm

Fx1



③

Place Chair on a totally flat surface and Re-tighten bolts again with 100% of required torque until all screws do not turn anymore

