

PARTS INCLUDED:





(B) Front Leg



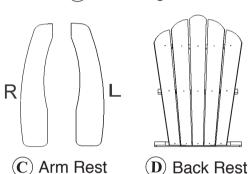

4 PC Barrels



10 PC Nuts



10 PC Iron washer



10 PC - Long Machine Thread (6 x 55 m/m)



4 PC - Short Machine Thread (6 x 50 m/m)

ITEM# 7615 - How To Assemble Your Adirondack Chair


Tools needed: Philips screwdriver, power drill optional

Caution: When assembling chair, **DO NOT** completely tighten the bolts & nuts until all parts & holes are properly aligned.

Step 1:

Place (A) Seat on its side and screw (B) Front Leg with 3 Long Machine Thread (6 x 55 m/m), 3 Nuts & Iron washer.


Repeat on the other side.

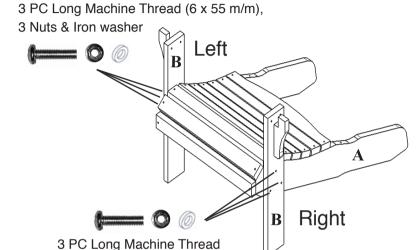

Step 2:

Place B Front Leg on its side and screw C Arm Rest with 2 Long Machine Thread (6 x 55 m/m), 2 Nuts & Iron washer.

Repeat on the other side.

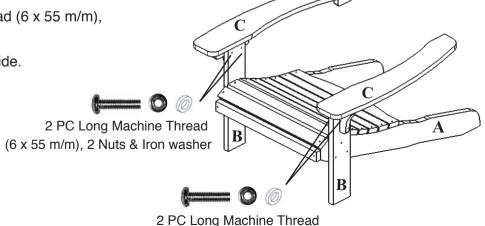

(6 x 55 m/m), 2 Nuts & Iron washer

(REV. 12/2016)

(6 x 55 m/m), 3 Nuts & Iron washer