

SETTING UP YOUR CHAIR

• STEP 1 ASSEMBLE TWO ARMRESTS

1. Ensure the armrest which has USB charge port is located on right of seat.

2. Slide the left and right armrest on the brackets of the seat. (Figure 1)

3. Press each armrest down as far as it will go. (Figure 1)



1



5

• STEP 2 ASSEMBLE BACKREST



• Align the brackets of backrest at the clips of seat-back. (Figure 1)



• Push firmly the backrest onto the seat-back. (Figure 2)



• Attach the chair-back to the Velcro on the bottom of the chair base. (Figure 3)

6

• STEP 3 CONNECT CABLES




• Check if there is an electrical outlet from the right armrest.

• Plug the power cord directly into the electrical outlet. (Figure 1)



• Check if there are two cables from the lift motor. (Figure 2)

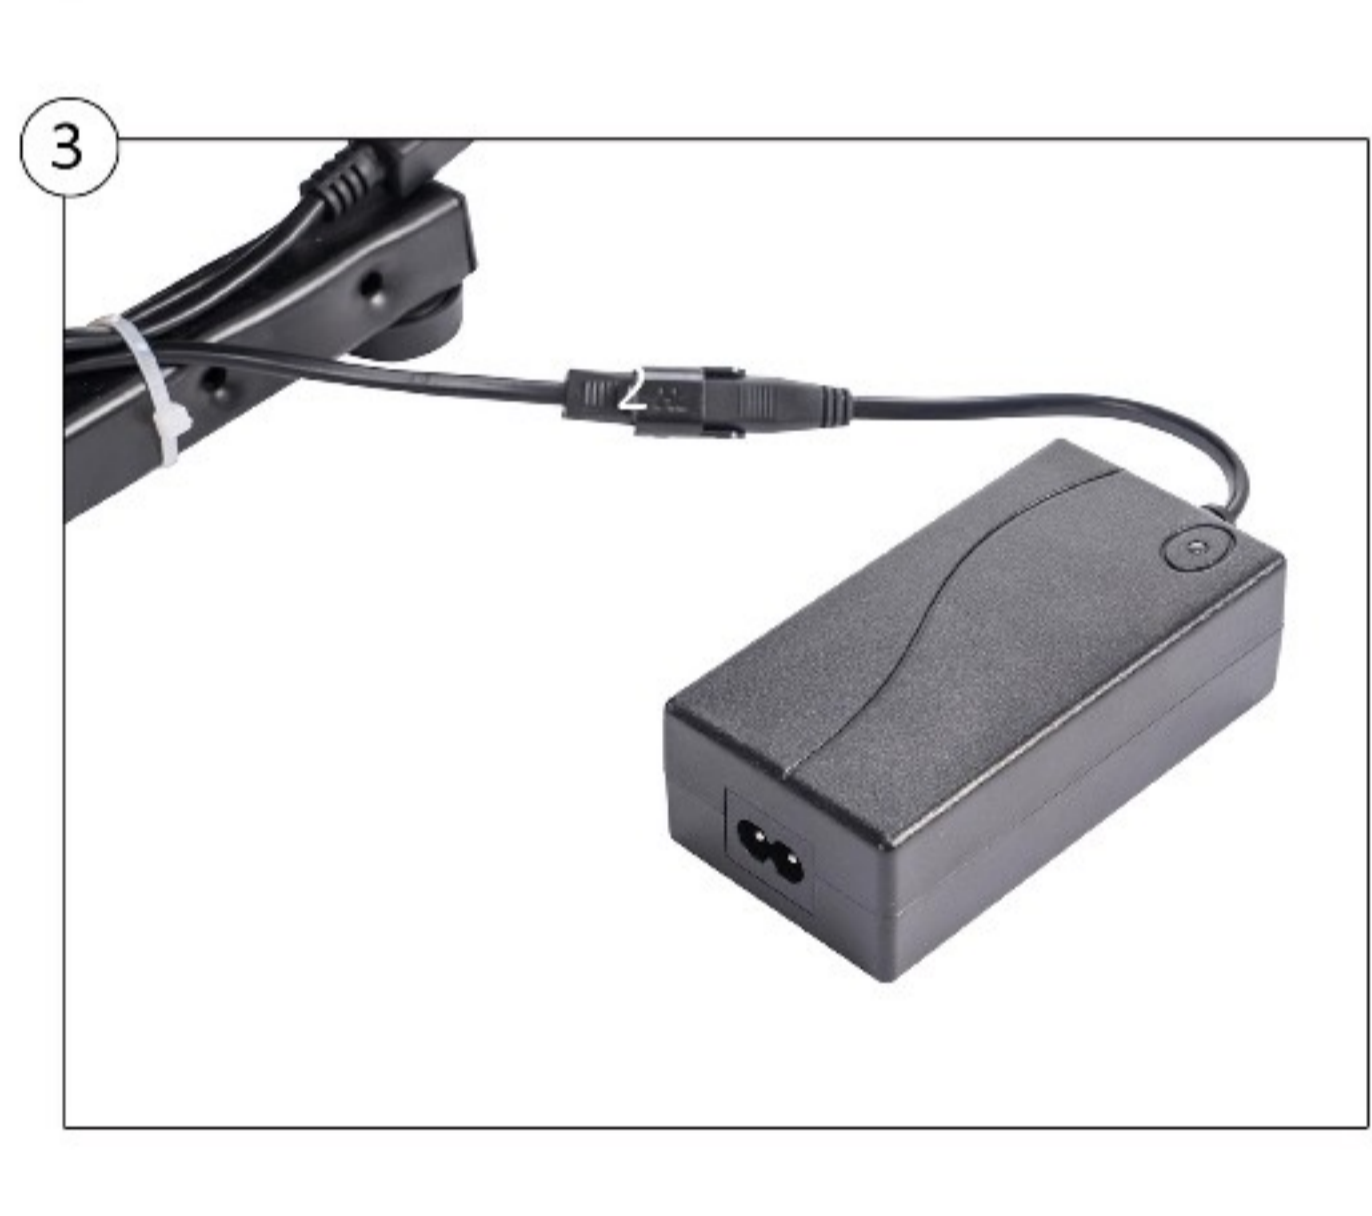

• Insert the two-pin cable into the power adapter then press the flip-type lock catch. (Figure 3)

7



• Insert the power cord into the power adapter. (Figure 1)



• Connect remote to the female five-pin plug then press the flip-type lock catch. (Figure 2)



• Double-check if all the electronic parts are connected properly. (Figure 3)

8

• STEP 4 ASSEMBLE THE ANTI-BACK-TIPPING PART



• Place the metal parts near the bottom of base. (Figure 1)



• Align the screws with the holes then tighten the wing screws. (Figure 2)

9