




Ax2

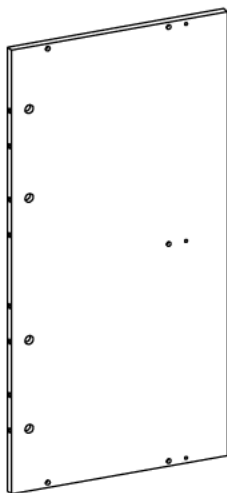


Bx2

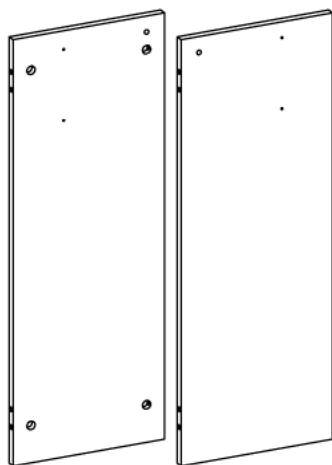

Cx1

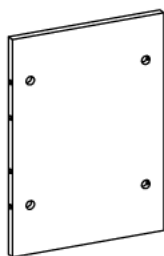

Dx2

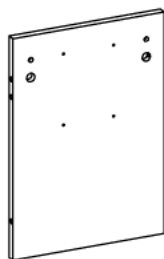


Ex2



Fx2



Gx2

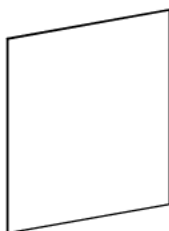

Hx2



Ix2




Jx4



CLx2



CRx2



DLx2



DRx2



Kx40




Lx32



Mx40




Nx8



Ox10



Px2



Qx24



Rx22



mm
inch




x2

①

Kx8




Lx8

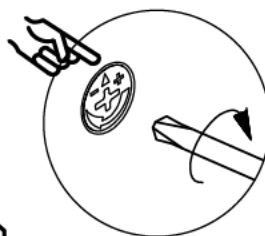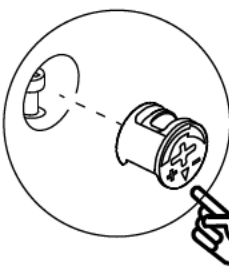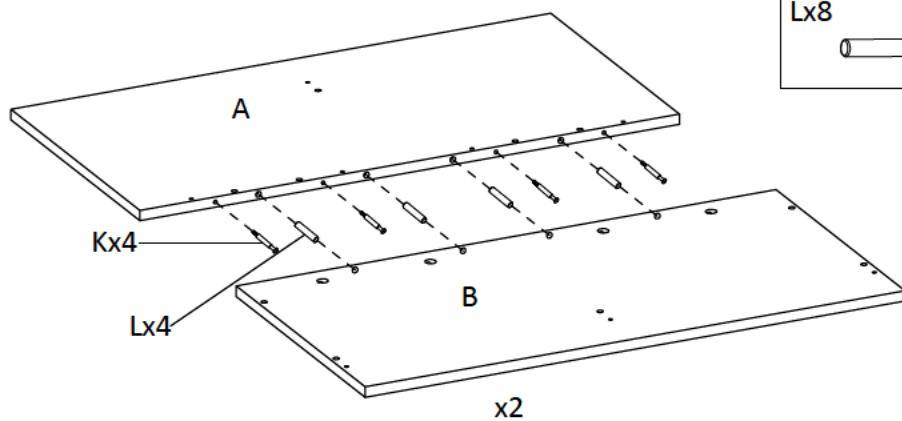

②

Mx8

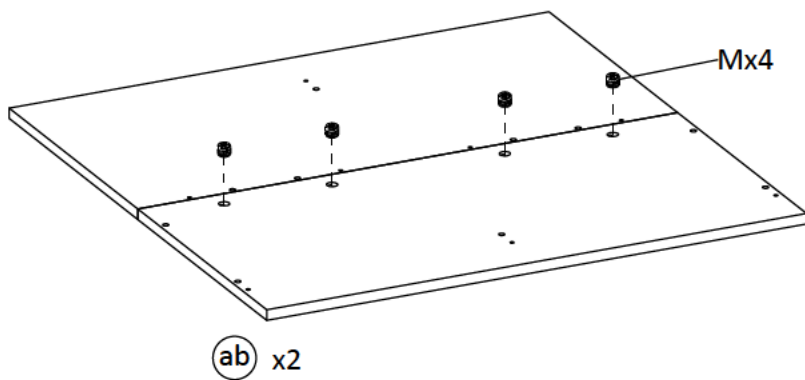


③


Nx8




Ox8

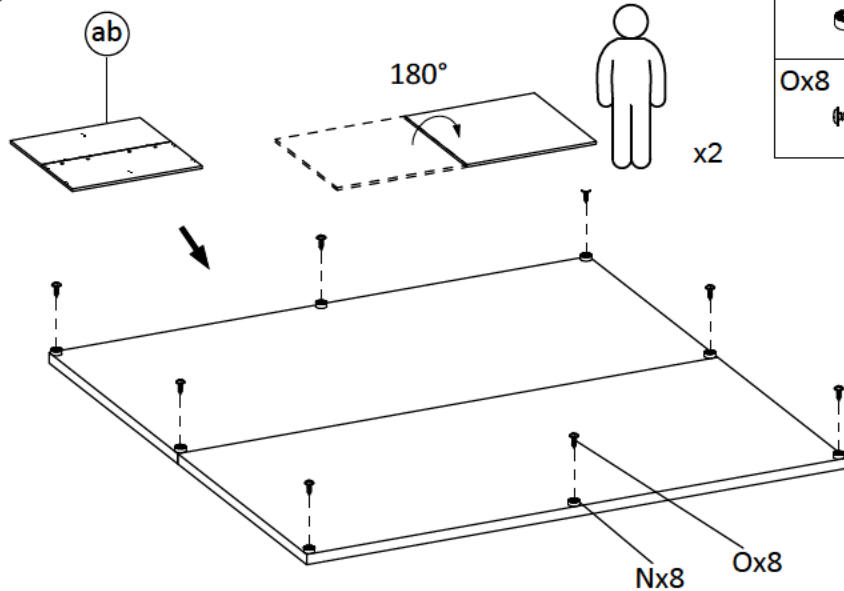

④

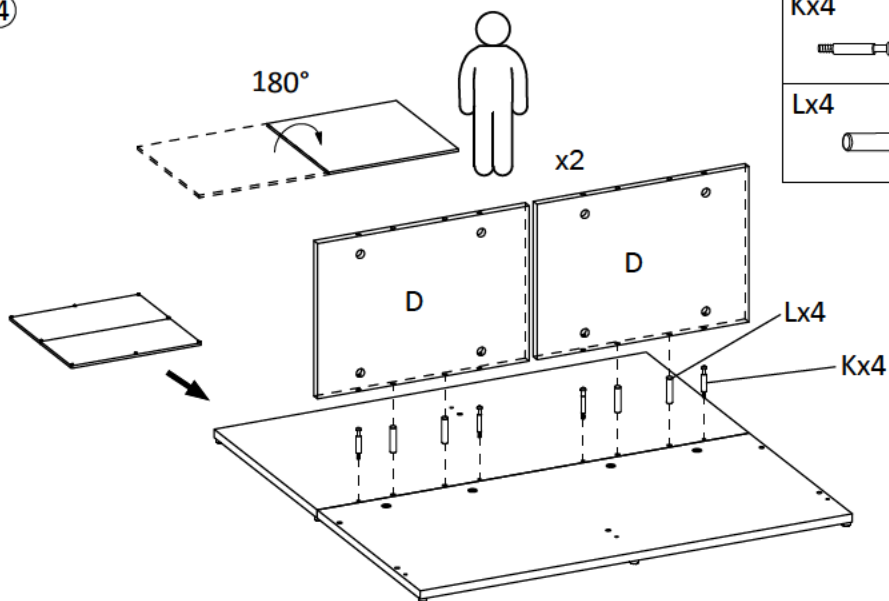

⑤

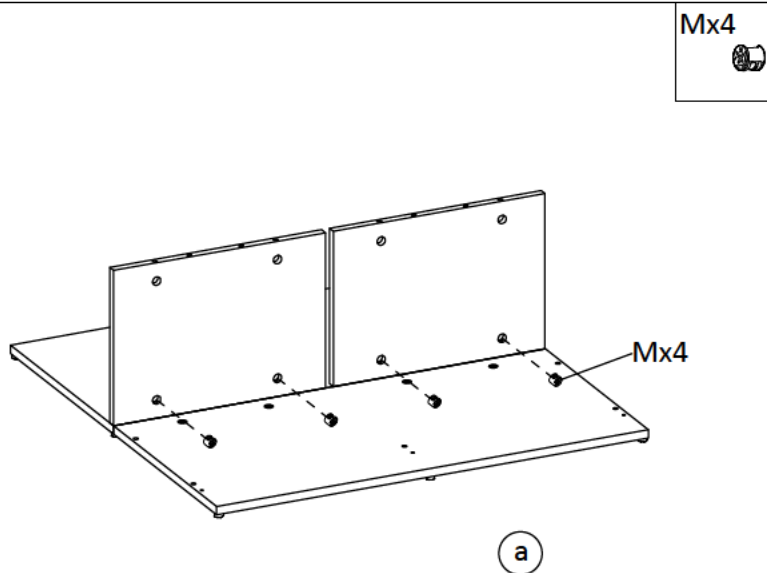


6

CLx2



Qx6

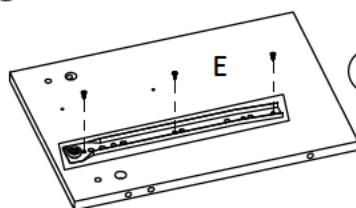

el

Qx3

x2

CLx1

C


b

7

CRx2



Qx6

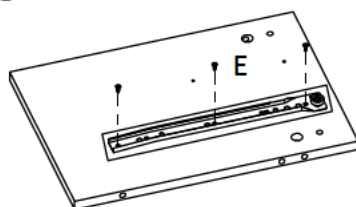

er

Qx3


x2

CRx1

180°


b

c

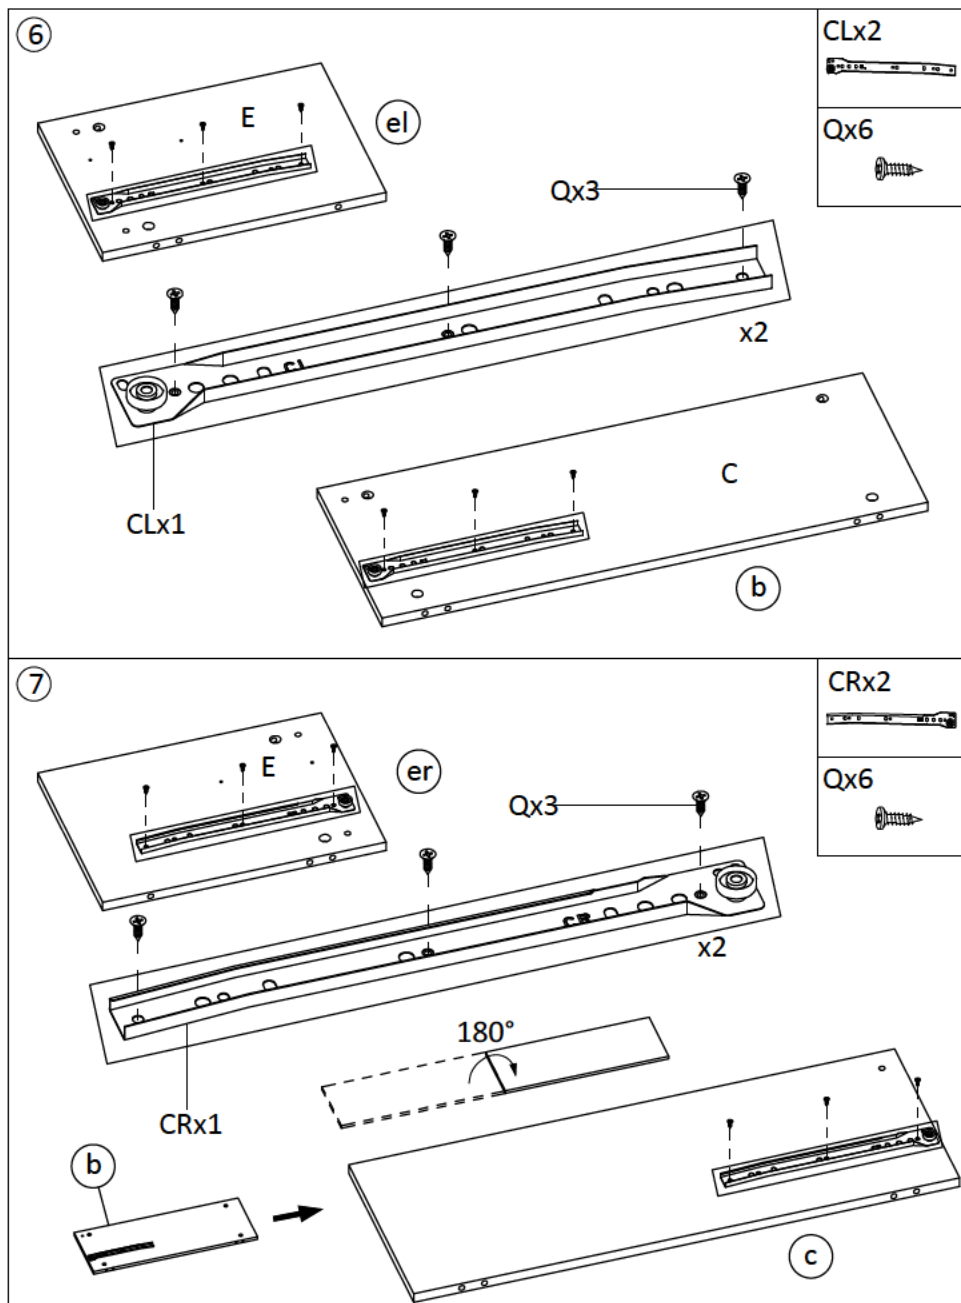


8

Lx4

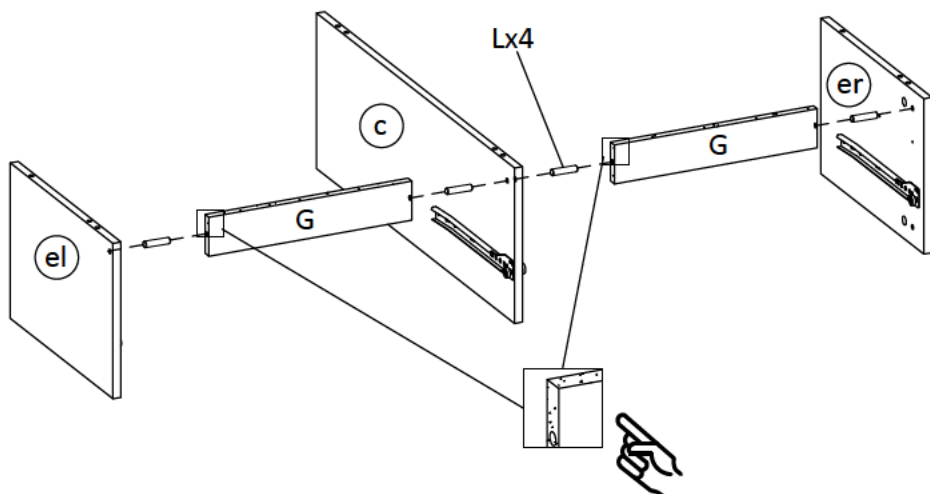

9

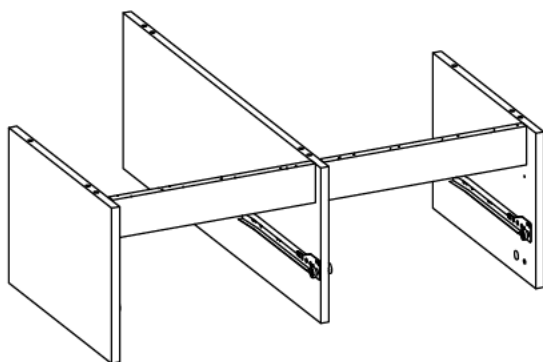


10

Kx4




Lx6

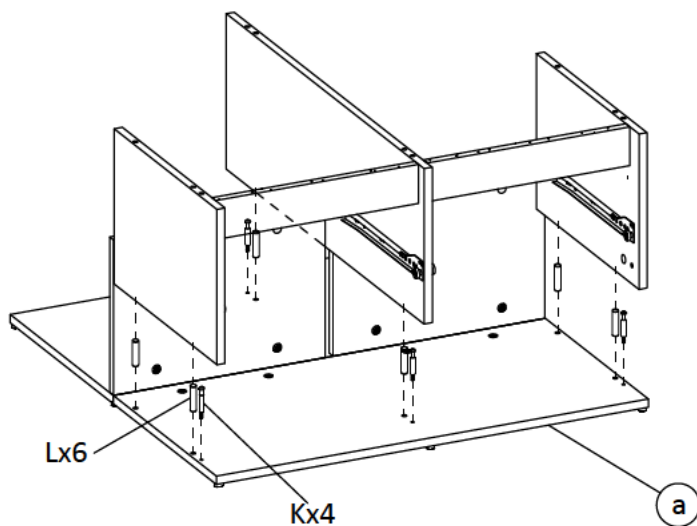

11

Mx4

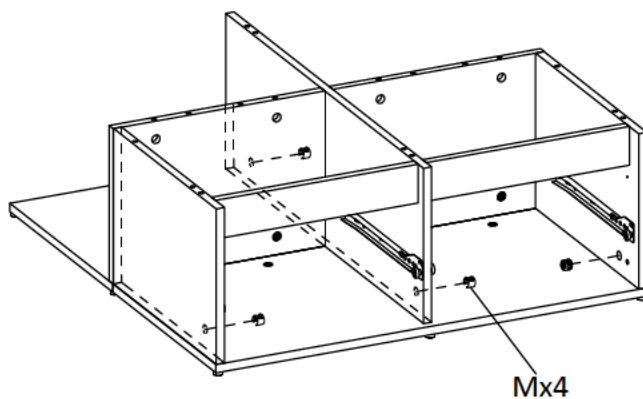

12




180°

x2

Kx8




Lx10



ab

Kx8

Lx10

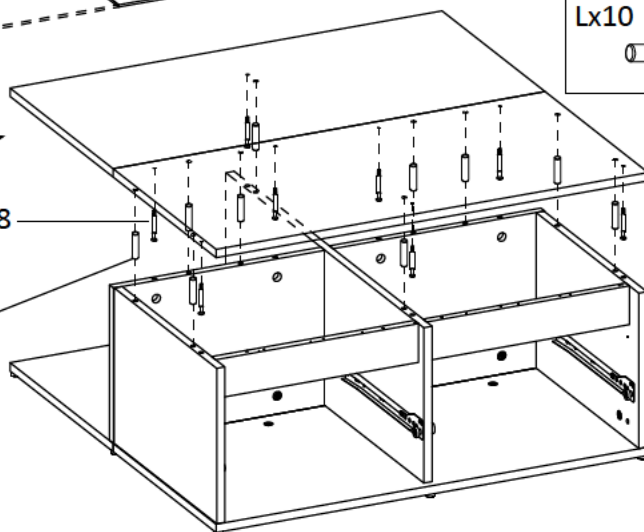


13

Mx8




Mx8

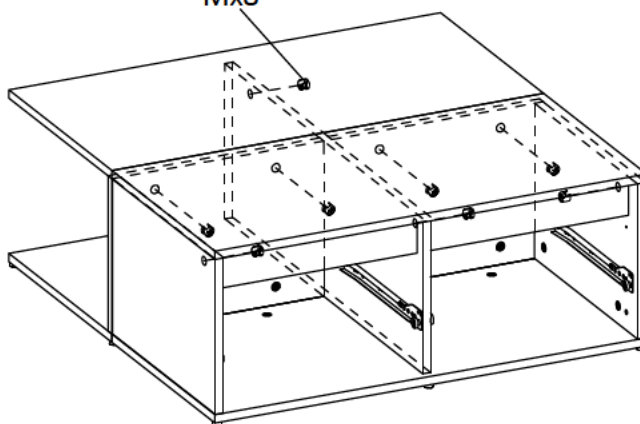


14

Kx16

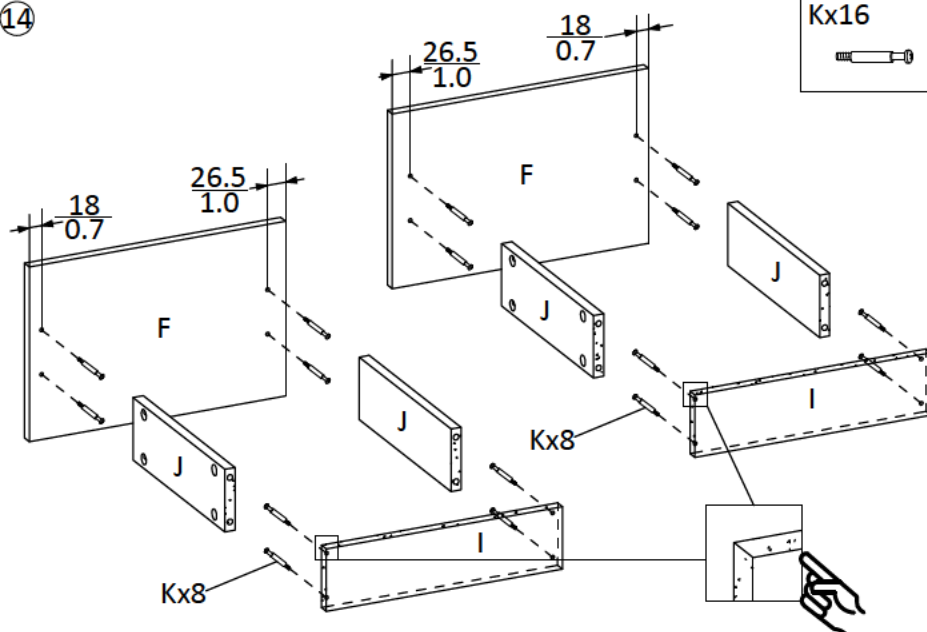

15

Mx16

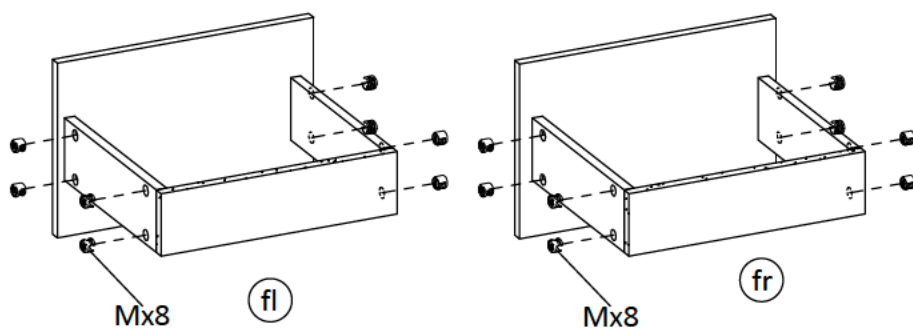


16

Ox2




Px2

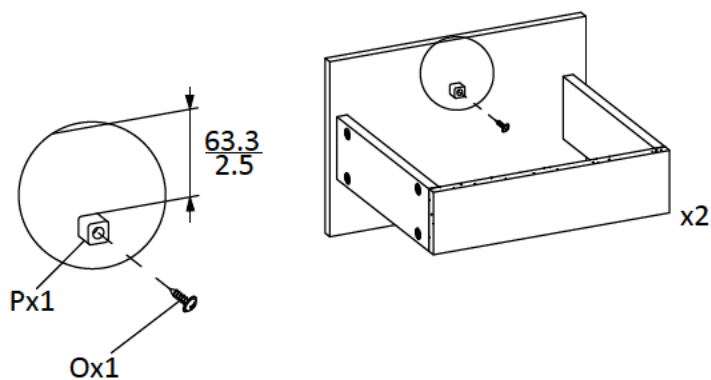


17


Rx22

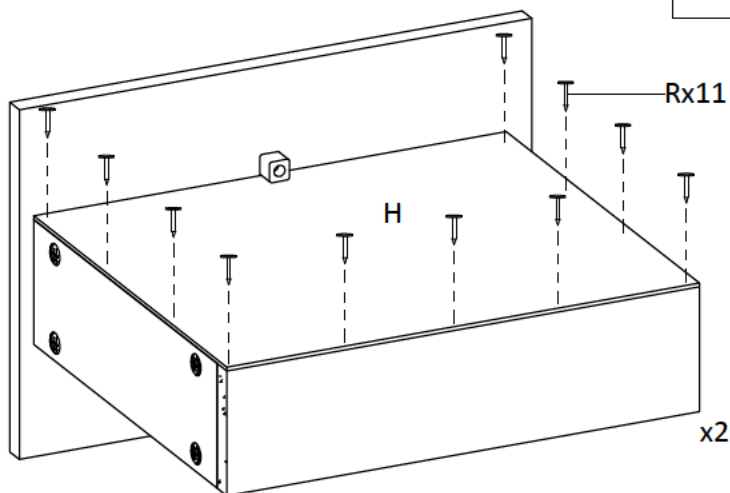


18

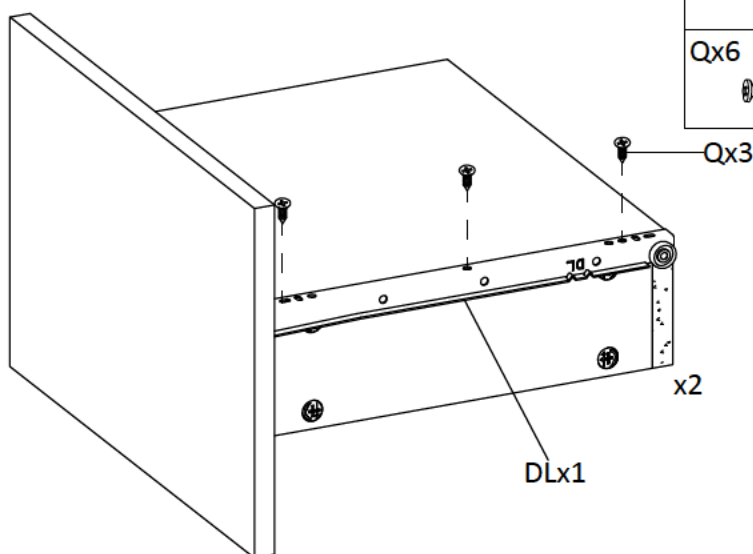

19

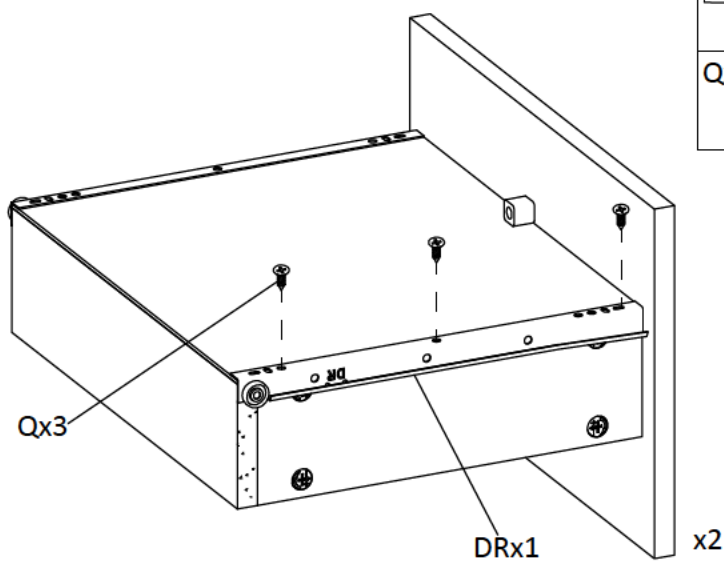

20

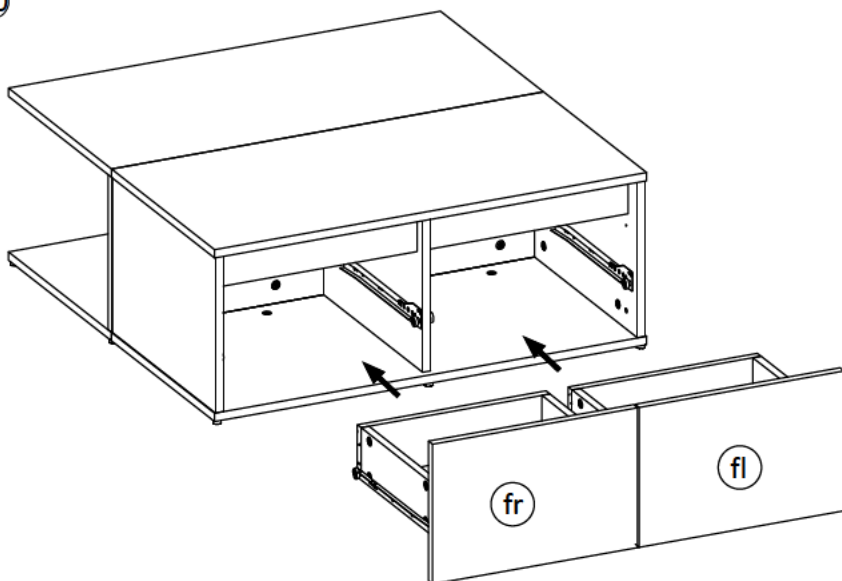

21

