


7x6FT

YYOT313QG1

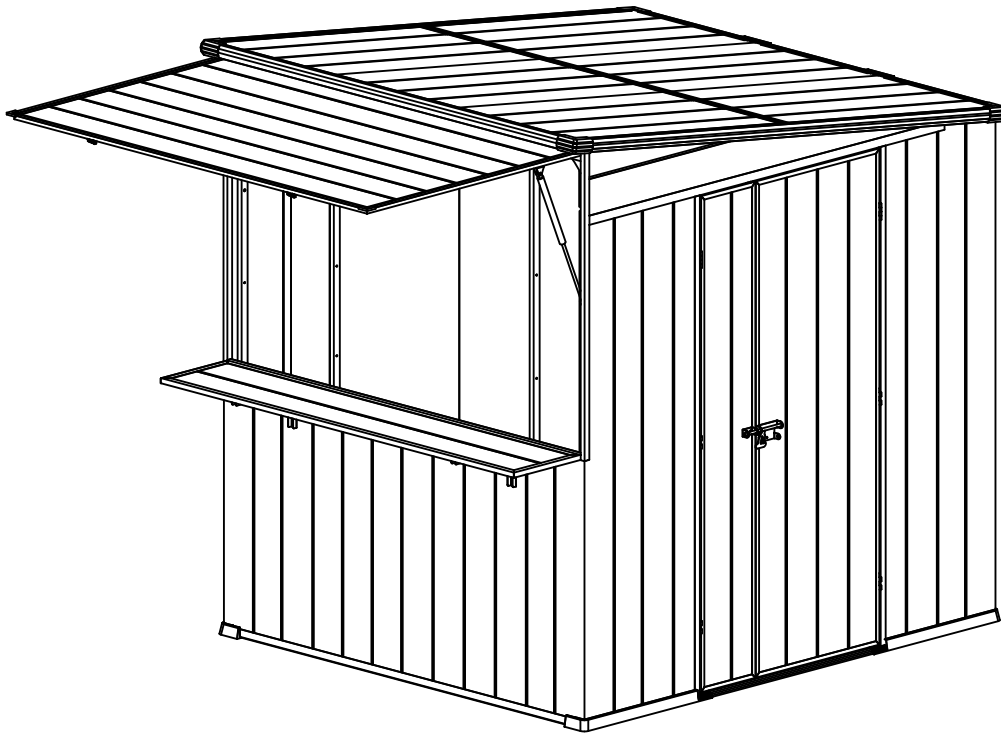

WARNINGS & CAUTIONS

Thank you for choosing our outdoor storage shed. Please read this entire section before beginning installation. Following these guidelines will help ensure safe assembly, proper use, and long-term durability.

1. BEFORE YOU START (MOST IMPORTANT)

1.1 Check Local Regulations

Before installing the shed, review your local building codes and permitting requirements. Some areas require approval for outdoor structures.

1.2 Choose the Right Location

- Install the shed on a **level, solid surface** such as concrete or a reinforced deck.
- Do **not** install directly on soil, grass, or bare ground.
- Keep at least **6 ft.** (1.8 m) of clearance from fences, houses, garages, trees, or electrical wires.

1.3 Secure the Shed

For safety and wind resistance, the shed **must be anchored**. Use the pre-marked holes on the floor and attach proper ground anchors or screws (not included).

1.4 Verify All Parts

Unpack and check all components before assembly. If anything is missing or damaged, **stop installation** and contact us.

1.5 Two-Person Assembly Required

Due to the size and weight of the shed panels, at least two adults are needed for safe installation.

1.6 Wear Protective Gear

Use work gloves, safety goggles, and long sleeves while assembling or performing maintenance.

2. SAFETY GUIDELINES DURING USE

2.1 Wind & Weather Precautions

- This shed is tested to **Level 8 wind resistance (46 mph)** and a roof load of **800 lbs.**
- Keep the door and foldable shed window **closed and locked** when not in use to prevent wind-related damage.
- During snowy conditions, clear the roof regularly. Use a **plastic snow rake** to avoid scratching the surface.

2.2 Child & Pet Safety

- Keep children and pets away from the work area during assembly.
- Do not leave children or pets unsupervised inside or around the storage shed.
- **Never stand or allow anyone to stand on the roof.**

2.3 Weight Limits

Hooks installed along the roof frame must not exceed a maximum load of **30 lbs.**

2.4 Safe Cleaning

- Clean with a garden hose or mild detergent.
- Do not use metal brushes, degreasers, or cleaners containing oil or acetone, as they may damage the material.

2.5 Storage Restrictions

Do not store:

- Recently used grills, torches, or any hot items
- Highly volatile or flammable chemicals

2.6 Avoid Mechanical Damage

Keep lawn mowers, trimmers, and other high-speed gardening tools away from the storage shed when operating to prevent collision damage.

2.7 Consider Wind Direction

When choosing a location, reduce exposure to strong prevailing winds—especially on the **door side**.

3. WARRANTY INFORMATION

Limited Warranty

This product includes a **6-month limited warranty**, valid only for the original purchaser and for personal, residential use.

The warranty covers defects in materials or workmanship under normal use.

Lost Parts Policy

Missing parts reported within **90 days** of purchase will be replaced at no cost. After 90 days, replacement parts may incur a fee.

Modification Notice

Any modifications—such as drilling, cutting, altering components, or using non-approved hardware—may compromise structural integrity and **void all warranties**.


We cannot assume responsibility for products that have been altered.

Site preparation


1. Leveling the ground.




2. Recommendation: Construct a wooden or concrete base as a foundation.

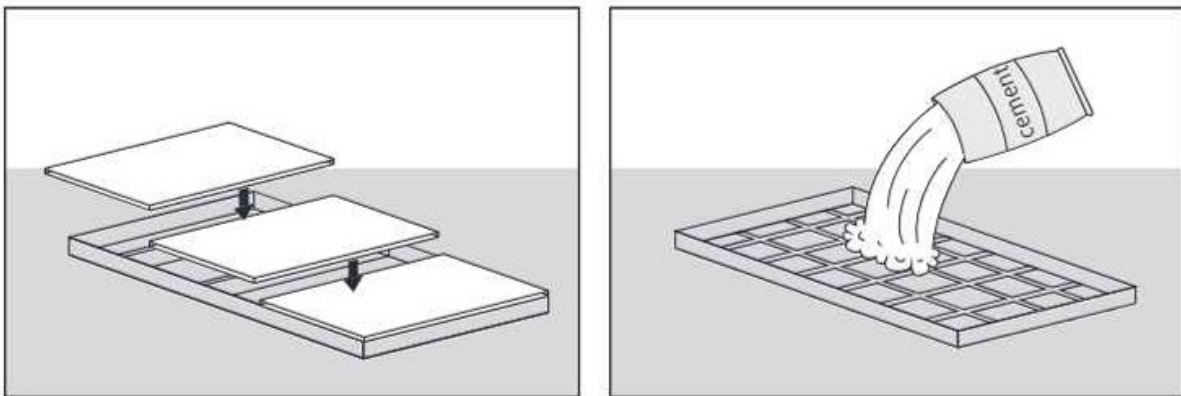







3. Parts are placed after unpacking.

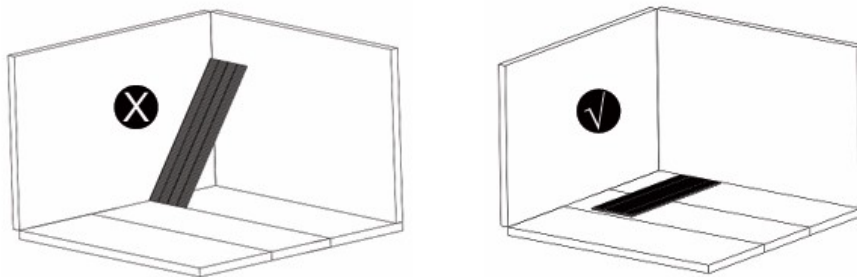






Tools Needed (Not Included)

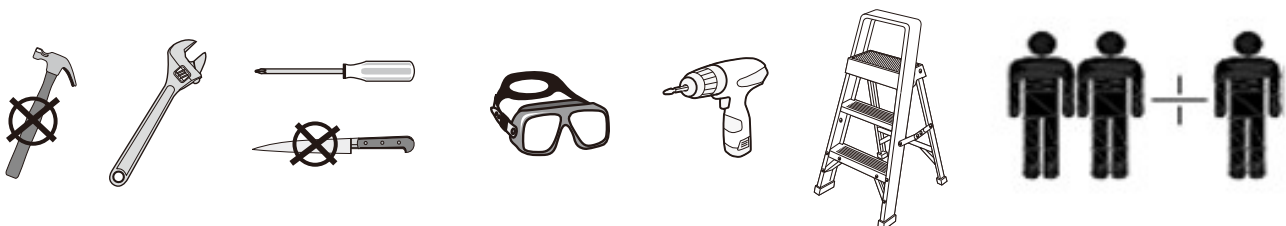



















Parts List (Box 1)

1850x617 (B1)  2x	1850x617 (B1C)  1x	1850x617 (B2C)  1x	1825x620 (B5D)  1x
1887x604 (L1L)  1x	1887x604 (L1R)  1x	1857x604 (L5B)  1x	1850x590 (L5A)  1x
1857x282 (B3L)  1x	1857x282 (B3R)  1x	1767x617 (V11A)  1x	1767x482 (V11C)  1x
1770x335 (V10)  1x	1825x272 (B16D)  1x	1761x276 (L15L)  1x	1761x276 (L15R)  1x
1850x257 (L16)  1x	572x603 (A10)  3x	572x250 (A10B)  1x	 (E3B) 1x

Parts List (Box 2)

992x617 (L14C)  1x	992x617 (L14D)  1x	1070x617 (V8)  6x	1175x603 (A1)  3x
1175x250 (A1B)  1x	 (P1) 3x	 (SIL) 1x	 (SIR) 1x
 (F3L) 1x	 (F3R) 1x	 (O3A) 1x	 (O3B) 1x
	 (T1B) 1x	 (T2B) 1x	 (G5) 2x


Parts List (Box 2)

 (SCA) 2x	 (SCB) 2x	 (SH) 2x	 (SQ) 2x
 (SR) 6x	 (SS) 2x	 (SA) 1x	 (X1) 2x
 (X2) 6x	 (X4) 2x	 (X5) 6x	 (X6) 2x
 (X7) 2x	 (X8) 2x	 (X9) 3x	 (X13) 2x
 (X12A) 3x	 (X12B) 1x	 (X12C) 1x	 (X12D) 1x
 (X10A)	 (X10B) 3x	 (1) ST3.8x12 85x	 (2) ST3.8x14 153x
 (4) ST4.8x32 50x	 (5) M5x15 4x	 (6) M6x27 11x	 (7) M6x15 26x
 (9) M6 12x	 (10) M6x20 6x	 (11) M6 12x	 (12) M8x80 6x
 (15) ST3.8x20 29x	 (14) 1x	 (16) M6x32 4x	 (13) M4x15 6x
07	TOOL:		
	 (Y1) 1x	 (Y2) 1x	 (Y3) 1x

Parts List (Box 2)


NOTE: The plastic pieces are guide pieces to assist in inserting wall panels.

Y8




2x

Y5



1x

Y6

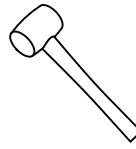

1x

Y7



2x

Parts List (Box 3)

DT5



1x

DR



1x

DL



1x

U15A



2x

U15B



2x

U15E




1x

U15F




1x

Q1

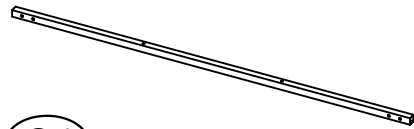

2x

Q4

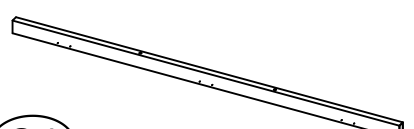

1x

T3




1x

T4



1x

T5



1x

D2



2x

D9



1x

F2




2x

F9



1x

G6

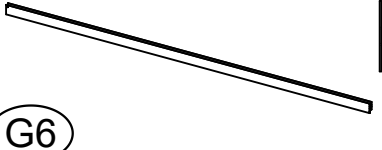

1x

K7



2x

J7A



1x

J7B



1x

M1




1x

N4



1x

N21



1x

R11



2x




(A1)

3x



(A1B)

1x



(A10)

3x





(A10B)

1x


<1>

FLOOR ASSEMBLY

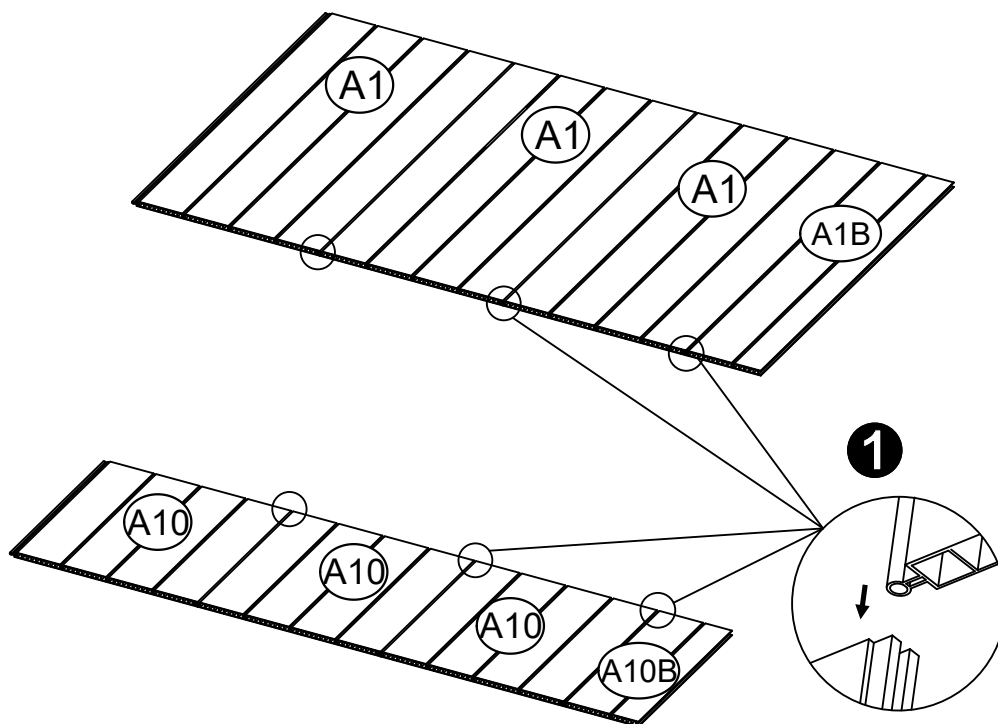


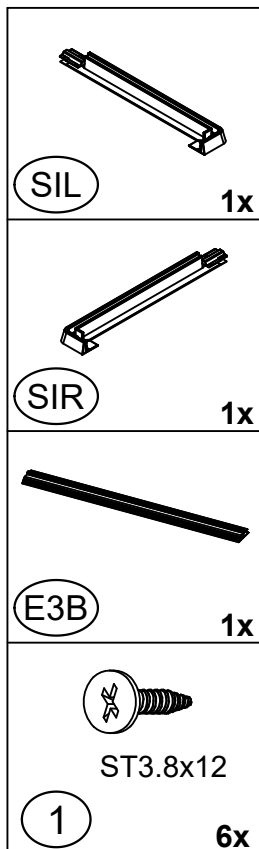


<2>

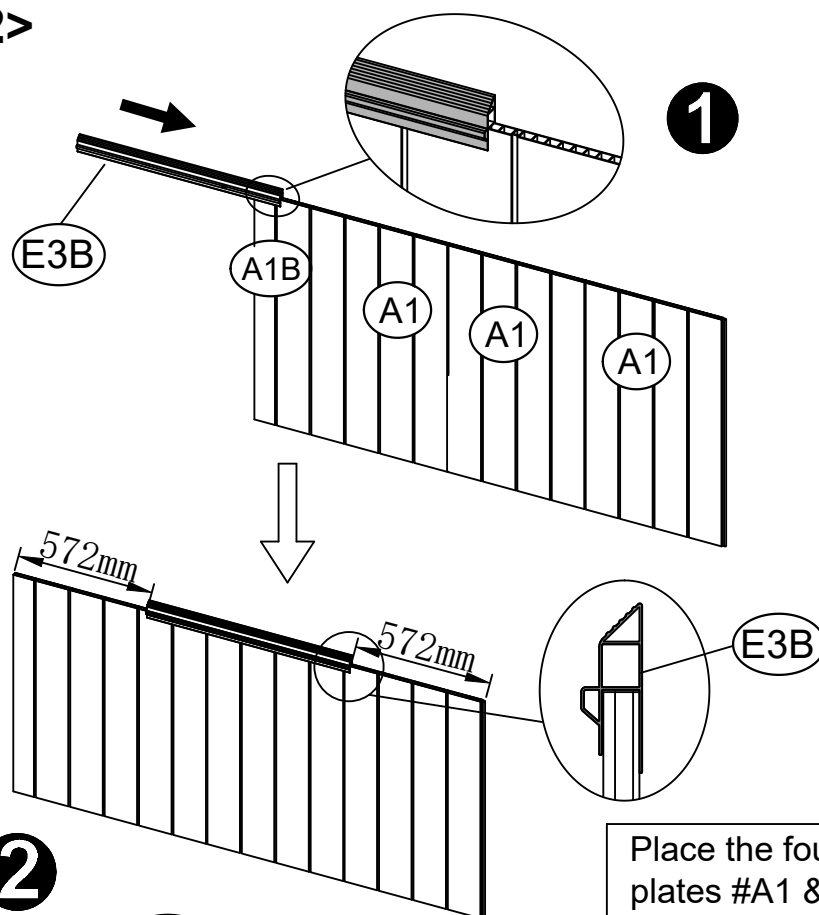


Place the four base plates #A1 & #A1B upright. Open the slot port of #E3B, Push it from the left end into the middle, ensuring that the distance on both sides is equal.

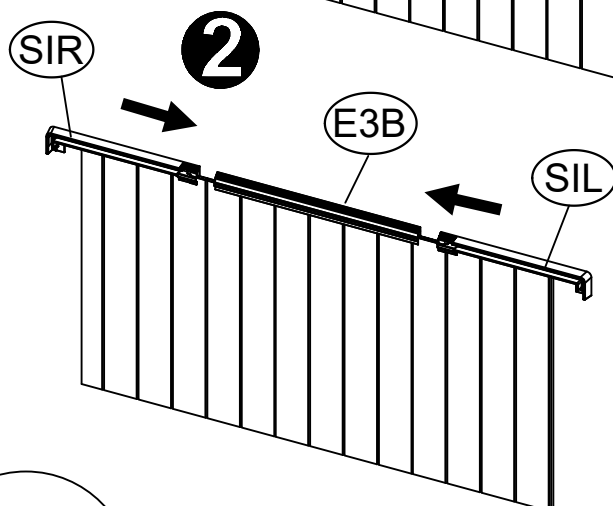


Insert the #E3B card into the left threshold #SIL and the right threshold #SIR of the front door. Gently tap the left and right thresholds as shown in the enlarged picture to ensure that the bottom plate #A1 & A1B is flush with both sides of the left and right thresholds, fix the above components with 7pcs #1 screws.

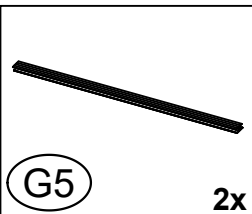


<3>

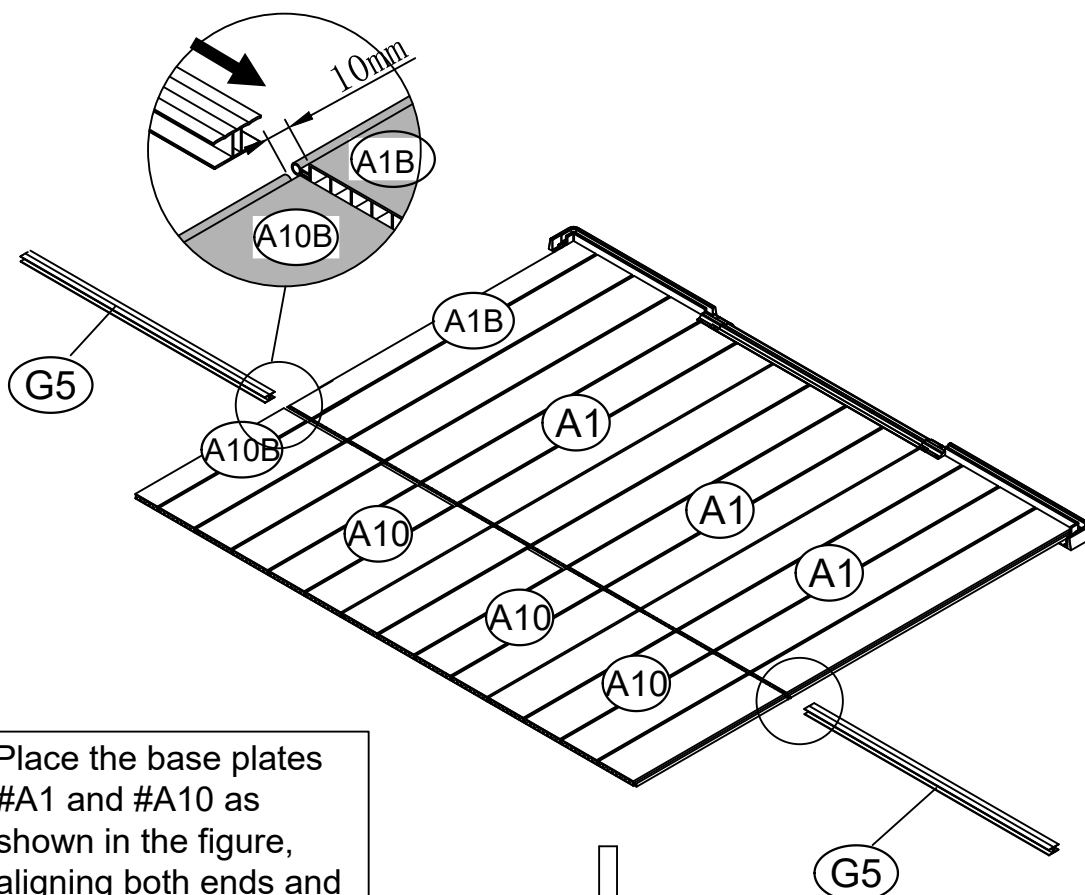

Place the base plates #A1 and #A10 as shown in the figure, aligning both ends and leaving a 10mm gap in the middle. One person holds #A1 and #A10 in place at one end, while another person inserts #G5 through the middle at the other end.

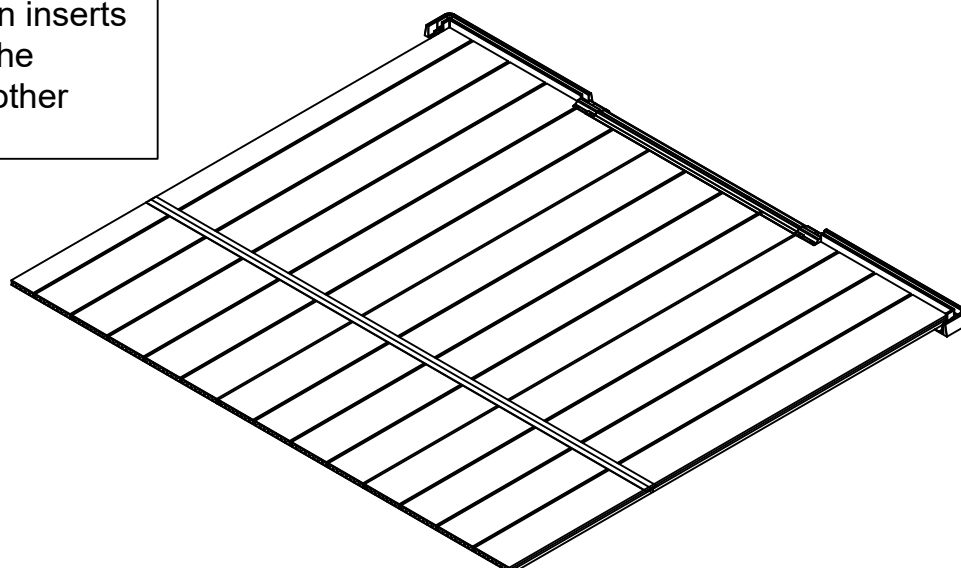

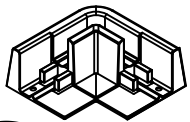

(SH)

2x



(D2)

2x



(D9)

1x




ST3.8x12

(1)

6x


<4>

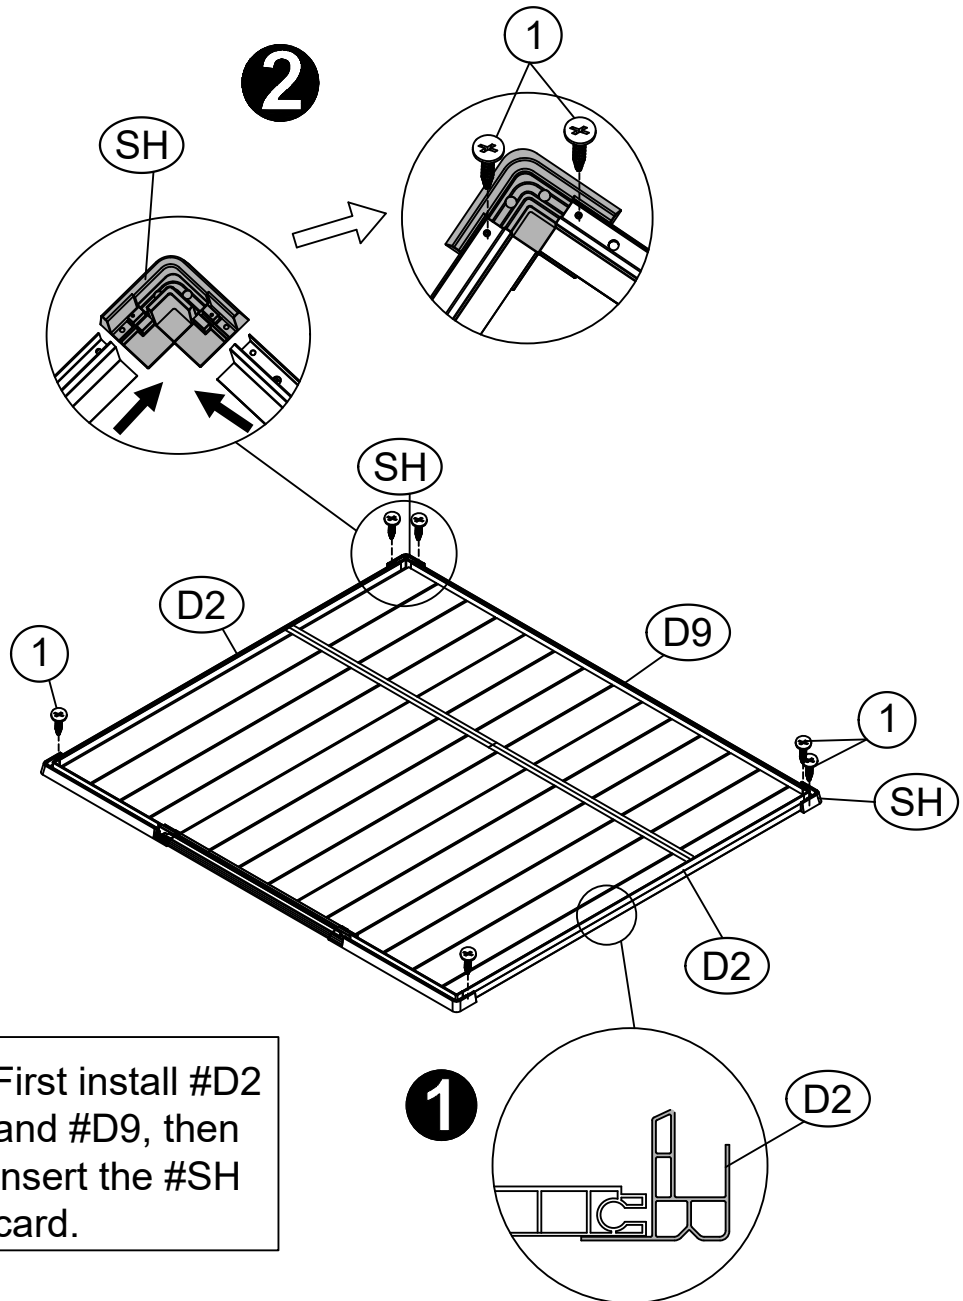


First install #D2 and #D9, then insert the #SH card.

	(F3L)	1x
	(F3R)	1x
	(F2)	2x
	(F9)	1x
	ST3.8x14	
(2)		22x


<5>

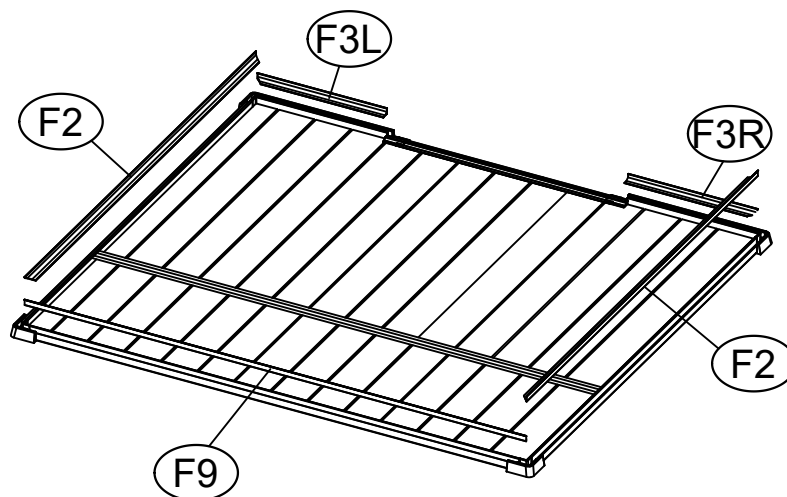

It is advised to fix the floor with self-tapping screws as the figure shown.

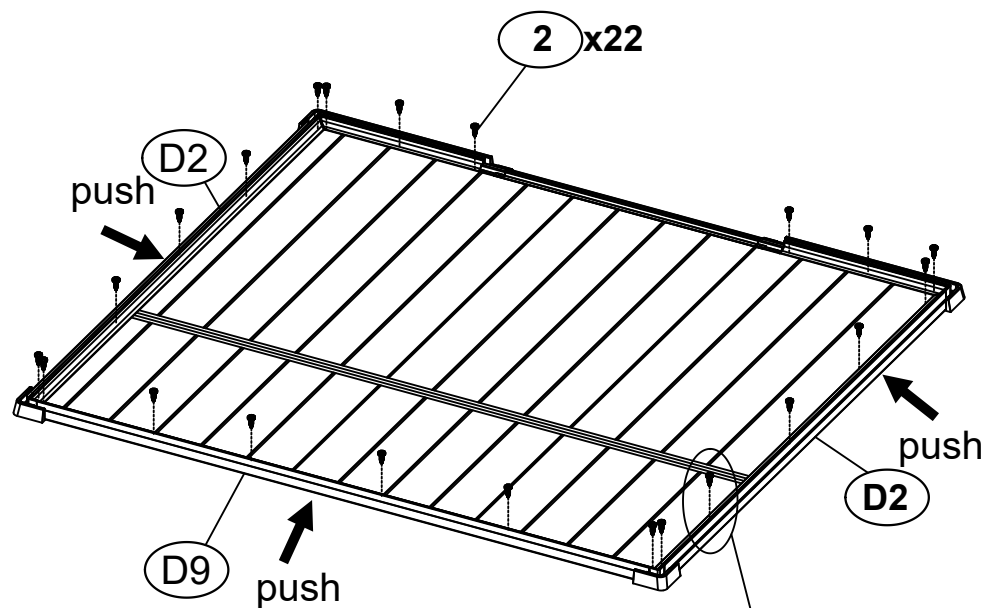




Push the bottom pipes #D9 and #D2 inward until they are flush with the floor. Then, secure them to the ground with self-tapping screws.

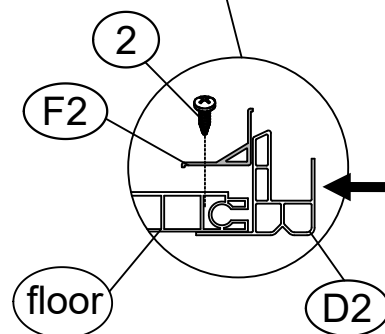


<6>

WALL ASSEMBLY

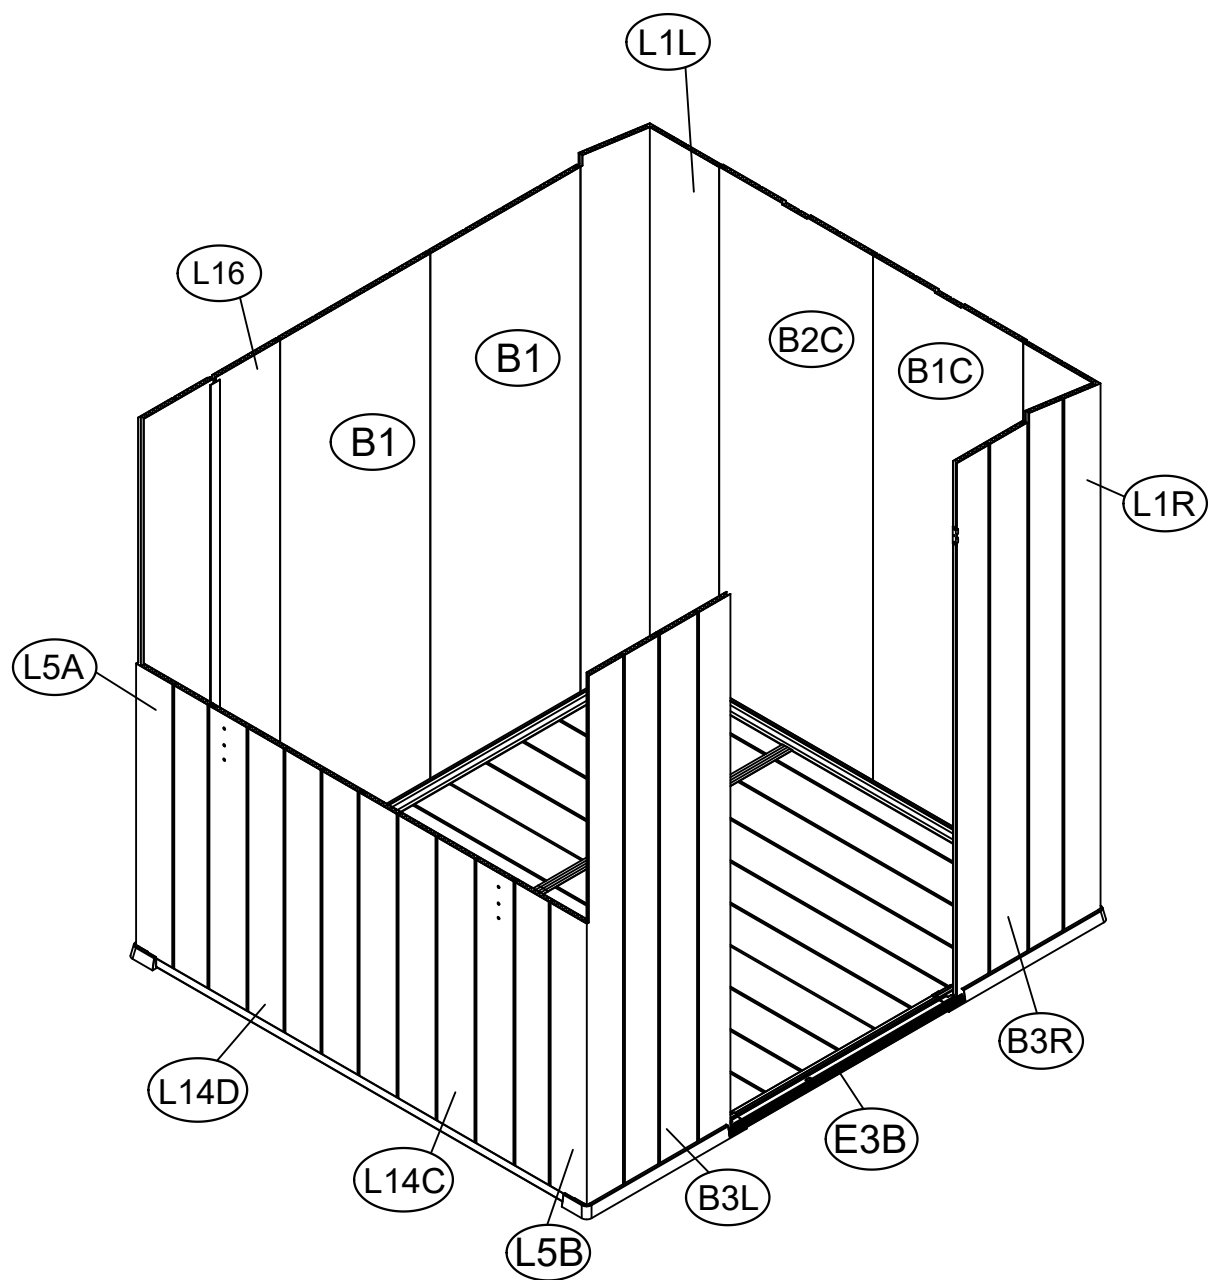



- (L1L)  1x
- (L1R)  1x
- (L5B)  1x
- (L5A)  1x

<7>

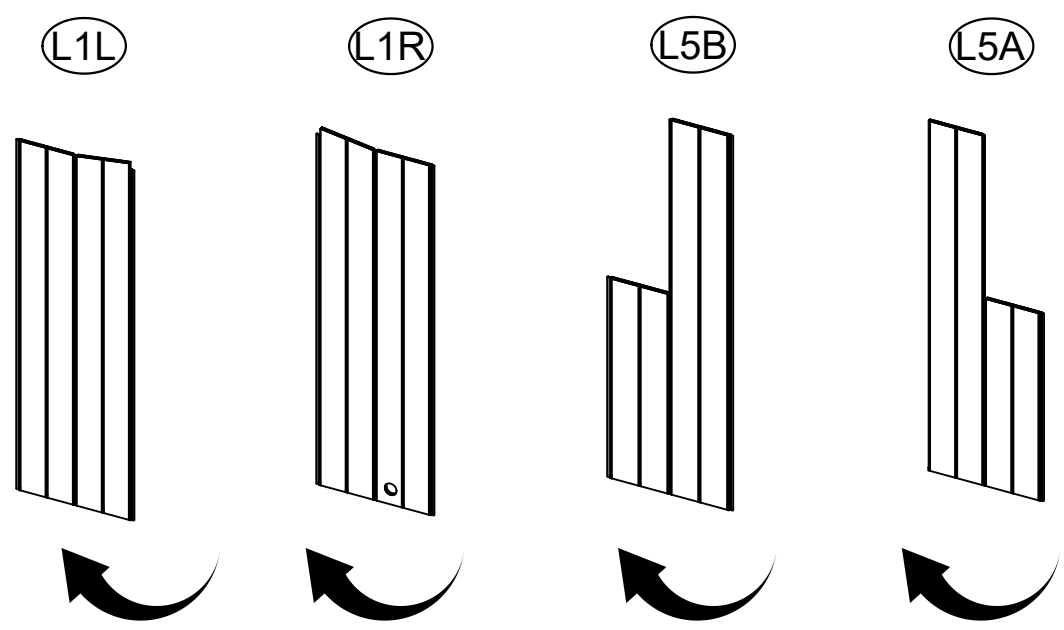



NOTE: Bend inward, the smooth surface is on the inside. Please use the plastic guide pieces to help insert the wall panels to the bottom, The groove is on the outer side.

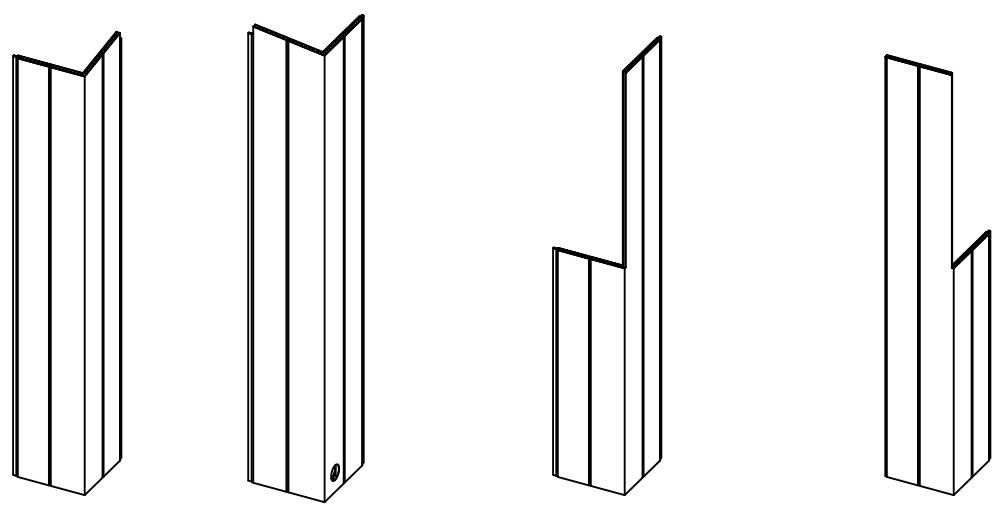

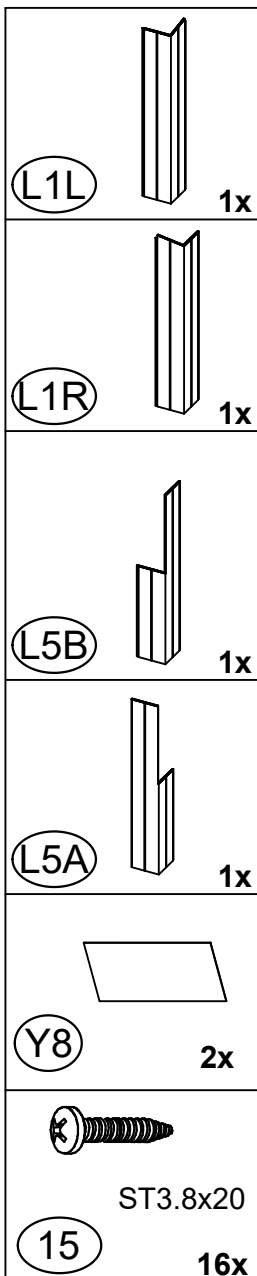


<8>


2

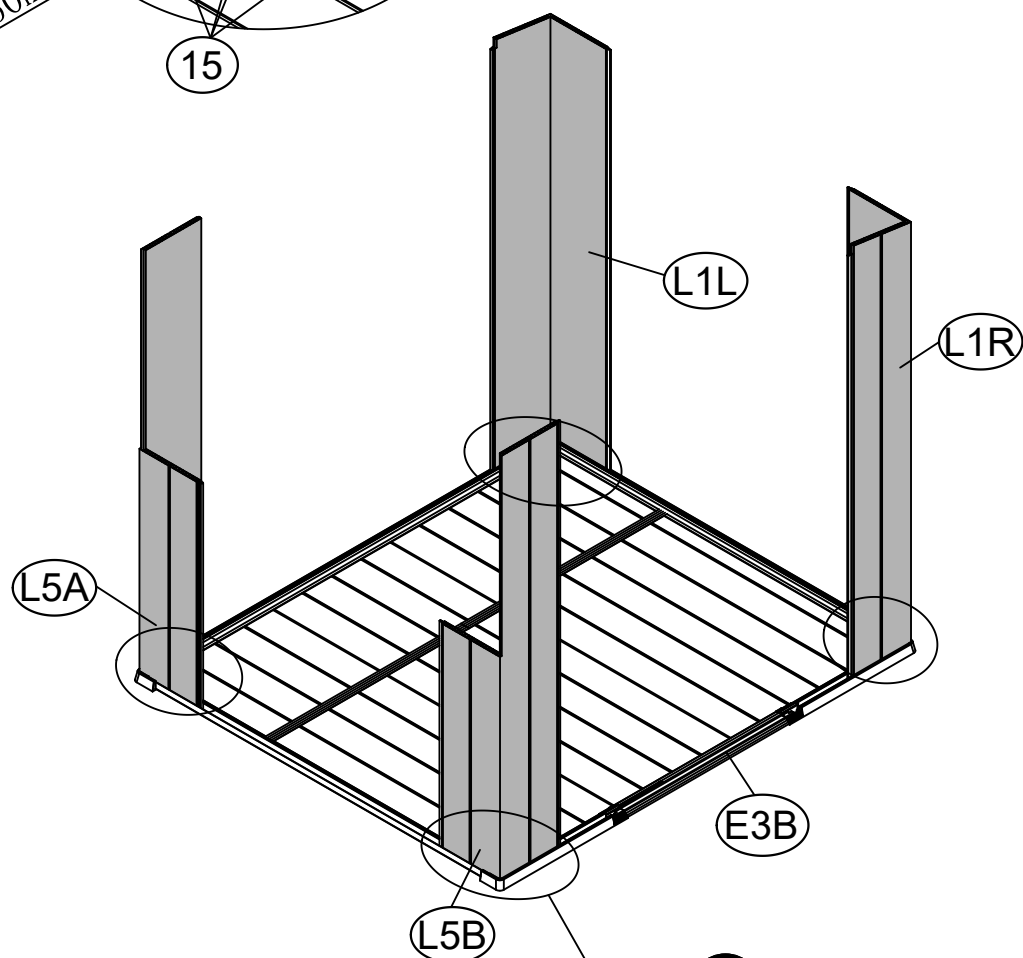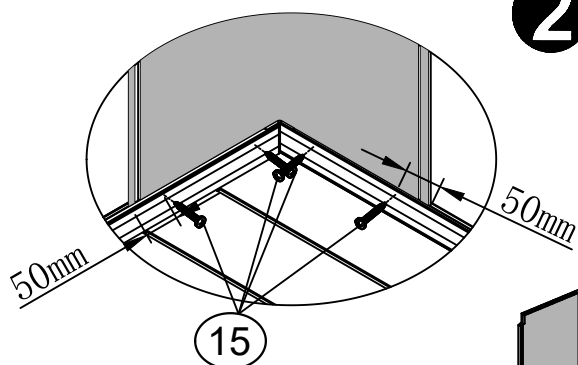



1

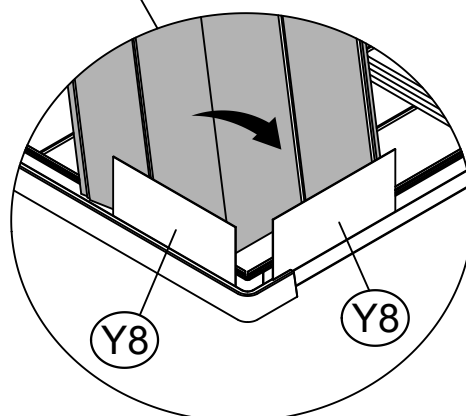


Place 2pcs #Y8 at the position shown in Figure 1. First, tilt the corner (#L1L , #L1R , #L5B , #L5A)and insert it into one side, then insert it into the other side. After that, remove the #Y8. After gently tapping the turning corners until they are in place, follow Figure 2 to fix the left and right turning corners with the bottom frame using 4ps #15 screws.

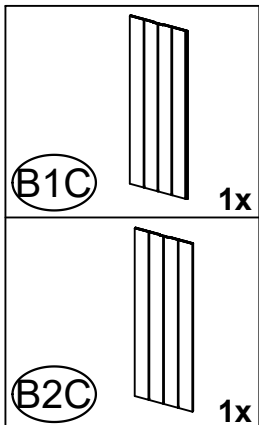


<9>



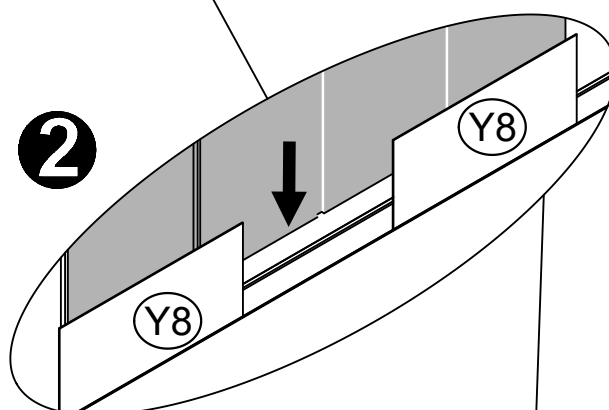
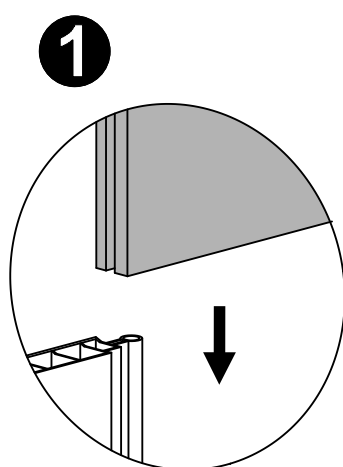


Insert panel #B1C or #B2C along the slot as shown in Figure 1 from top to bottom. Place 2pcs #Y8 as shown in Figure 2 at the corresponding positions on the base frame. After the panel is inserted in place, pull out #Y8.

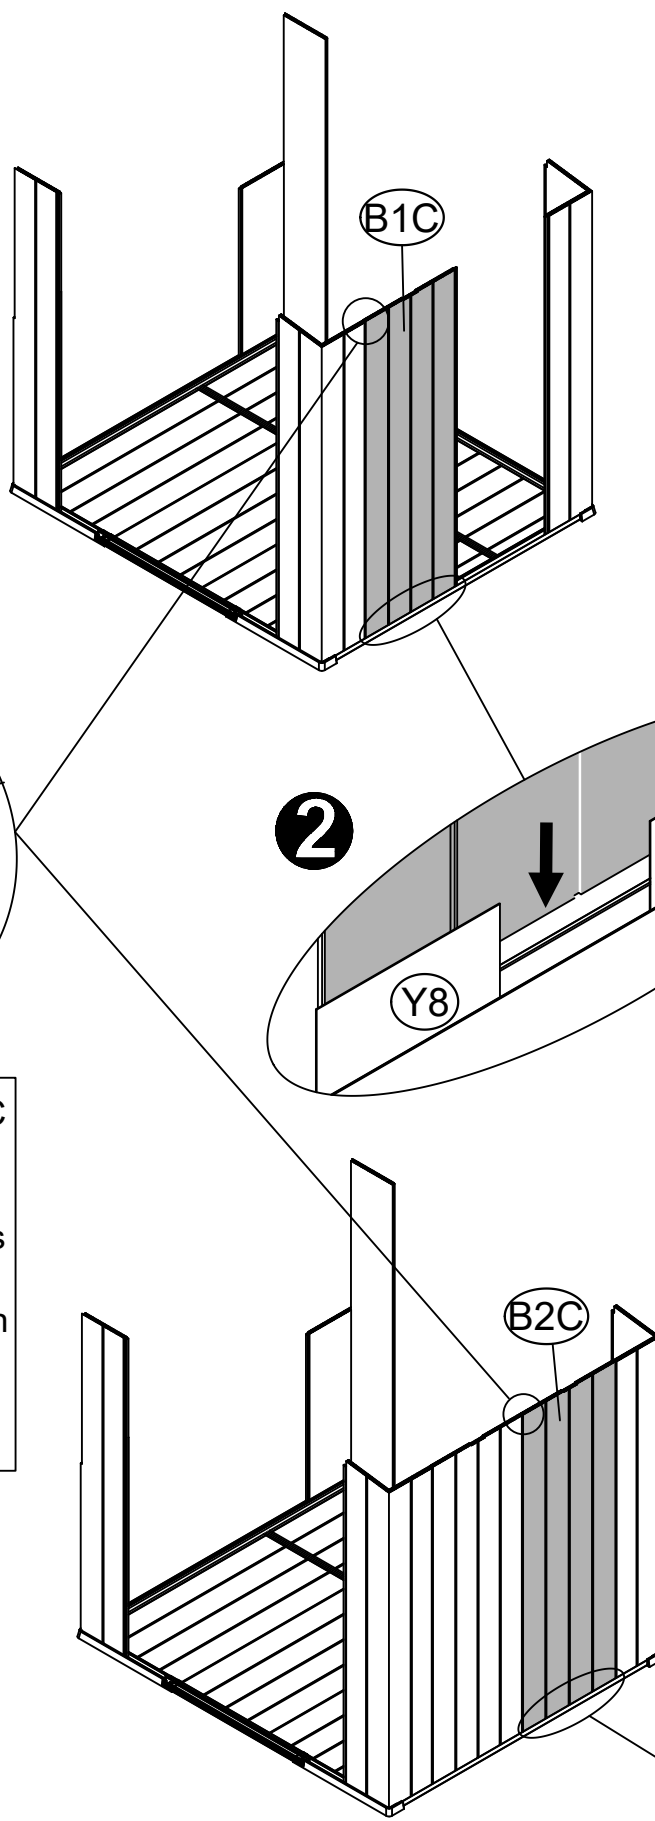

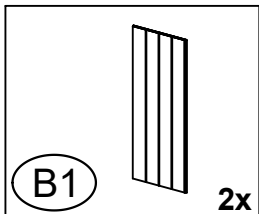

<10>

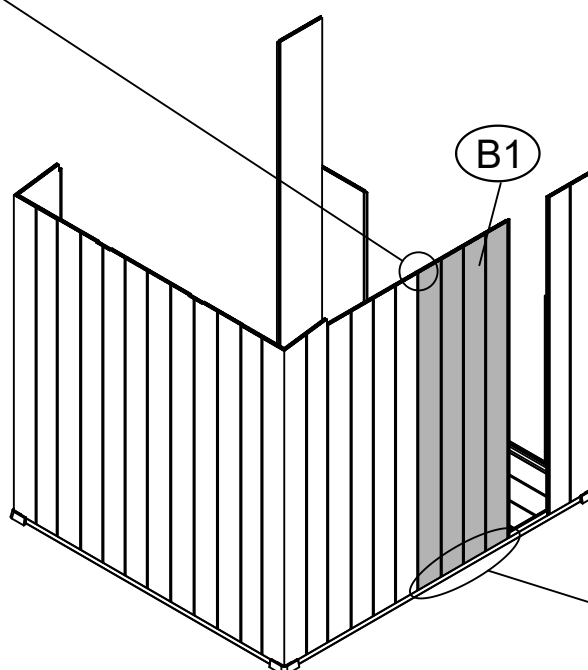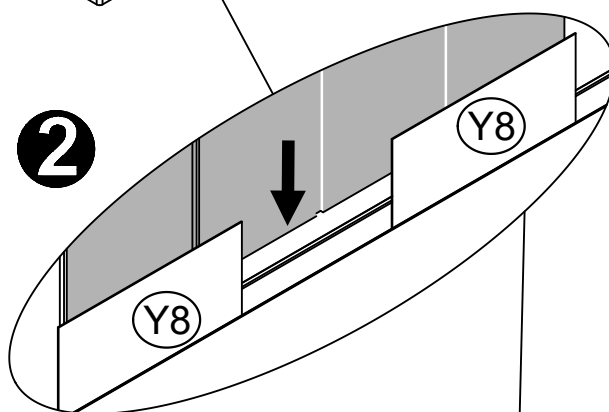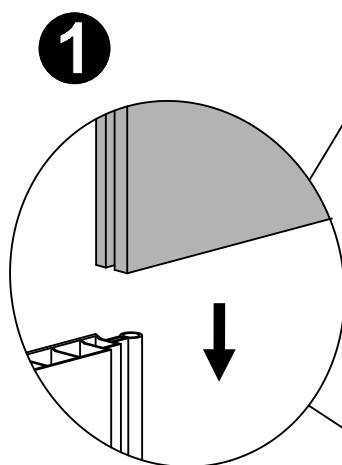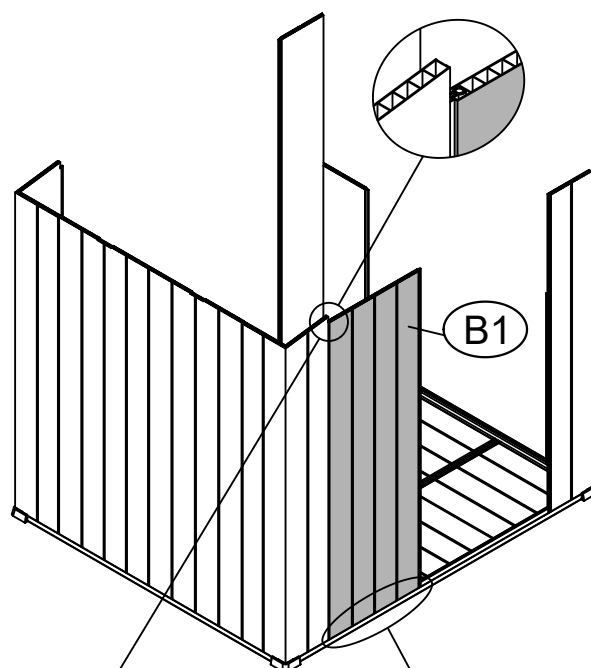

Repeat step 9 to
assemble #B1 on
the other side.

<11>

L16








1x

N4




1x

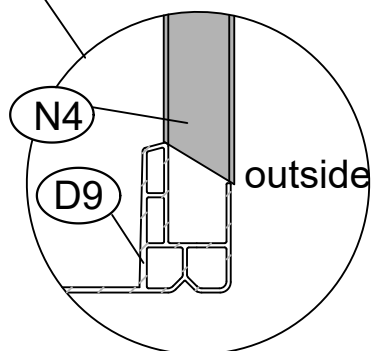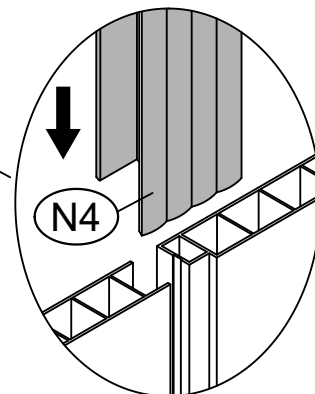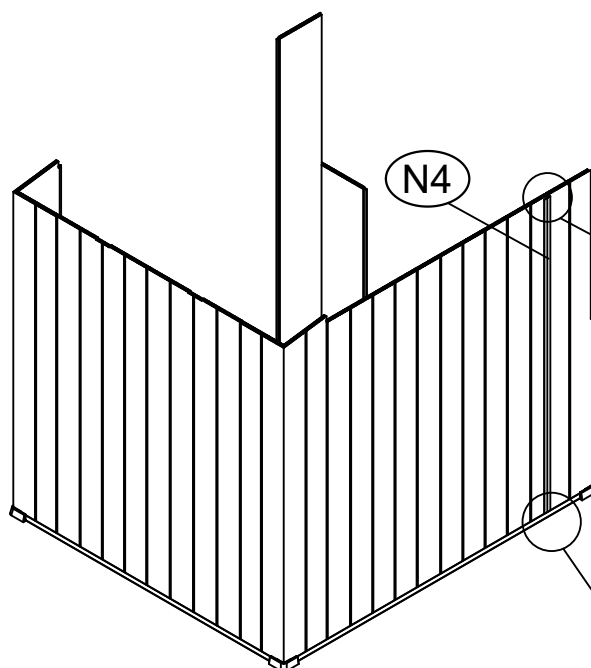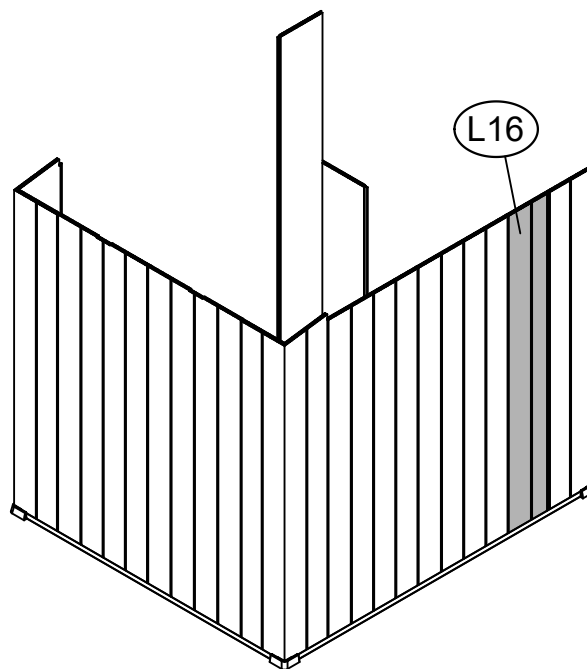


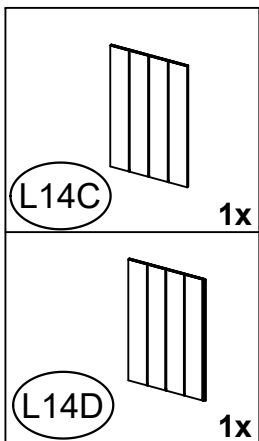


<12>

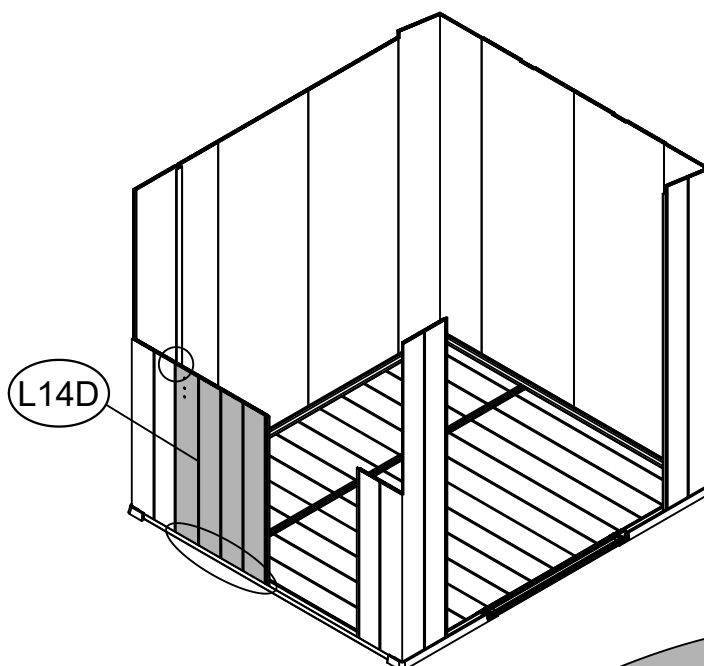


1


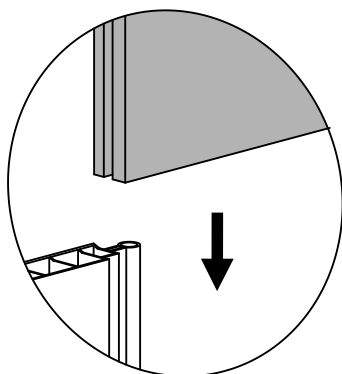


2



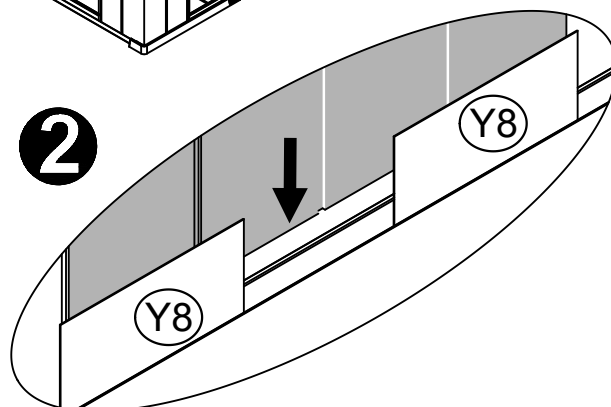


Repeat step 9 to assemble #L14D and #L14C on the other side.

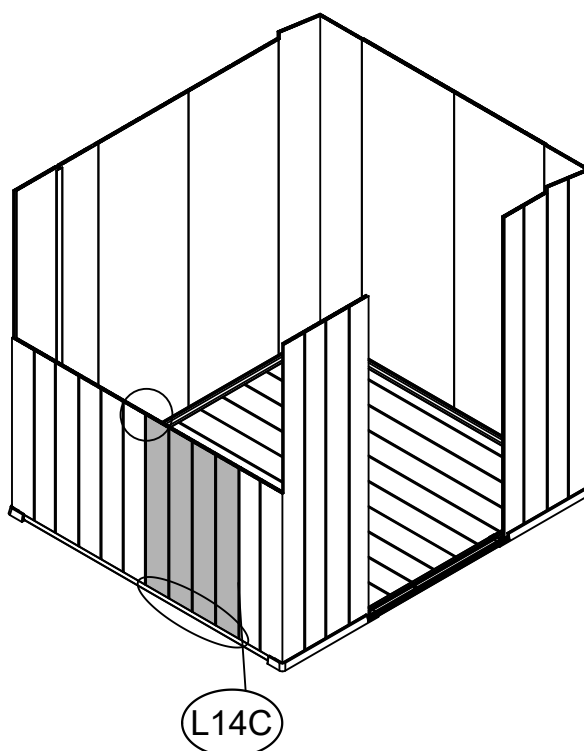

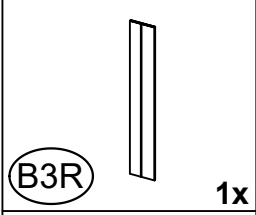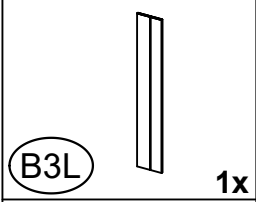

<13>

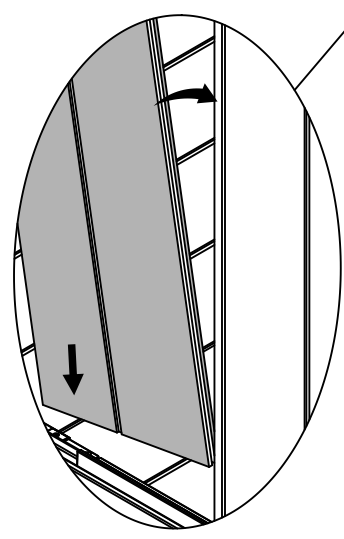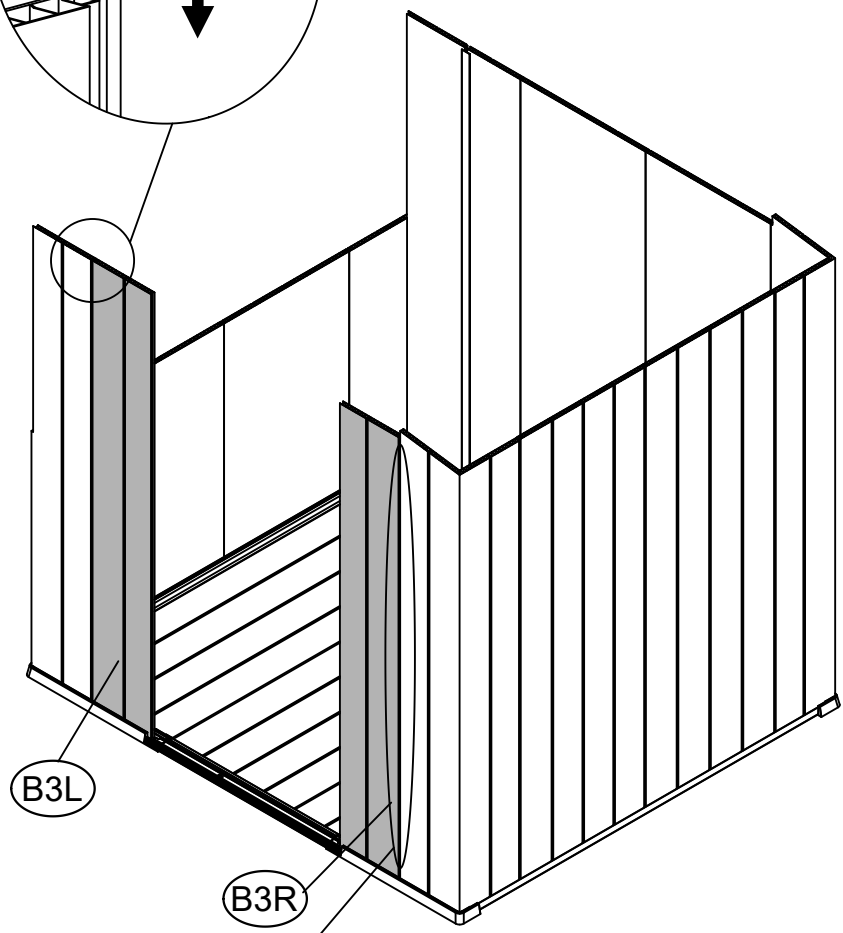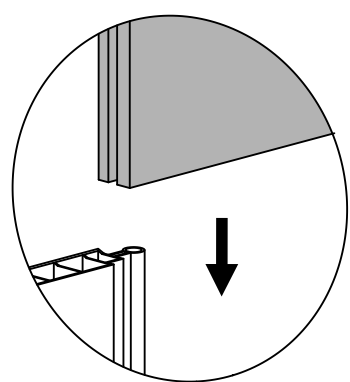



ST3.8x12

1

46x




ST3.8x20

15


13x

<14>

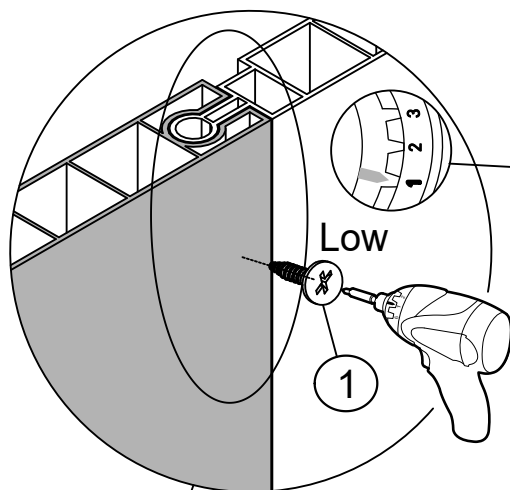


The screw is installed at the junction of the boards.

These two flat-seam panels are easy to scratch; one person screws from the inside while another pushes inward at the corresponding position.

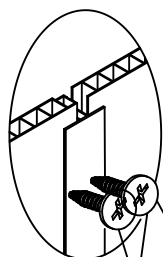

1 x46


1

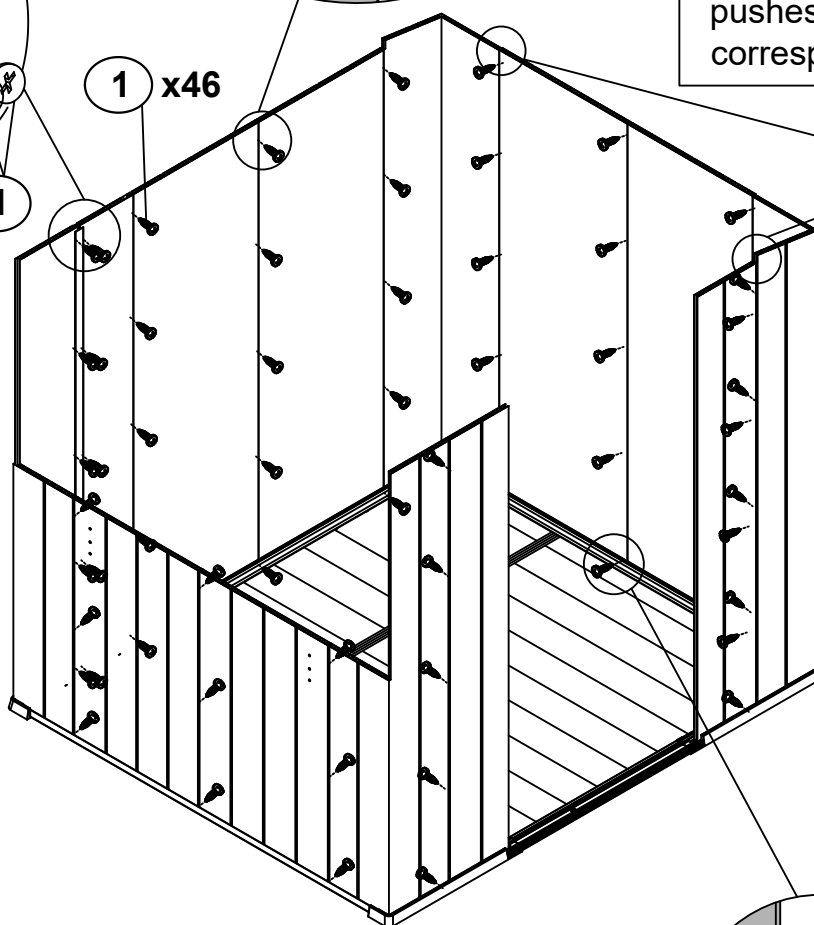


push

Install #15 screws around the bottom edges.


15

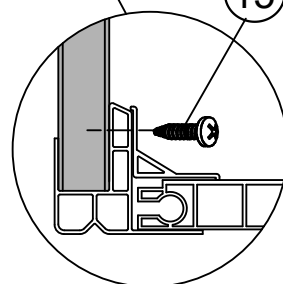

Tool:




Gently tap the top of each panel with a hammer to ensure they are all at the same level (except for the specially marked positions). Then screw in the screws for fixation. If there is slight deformation or damage at the ends of the components due to the tapping, it will not affect the assembly and use.

	(DR)	1x
	(DL)	1x
	ST3.8x14	
(2)	20x	







<15>

Do not screw the screw into the top hole first

Ensure proper installation before screwing in the self tapping screws


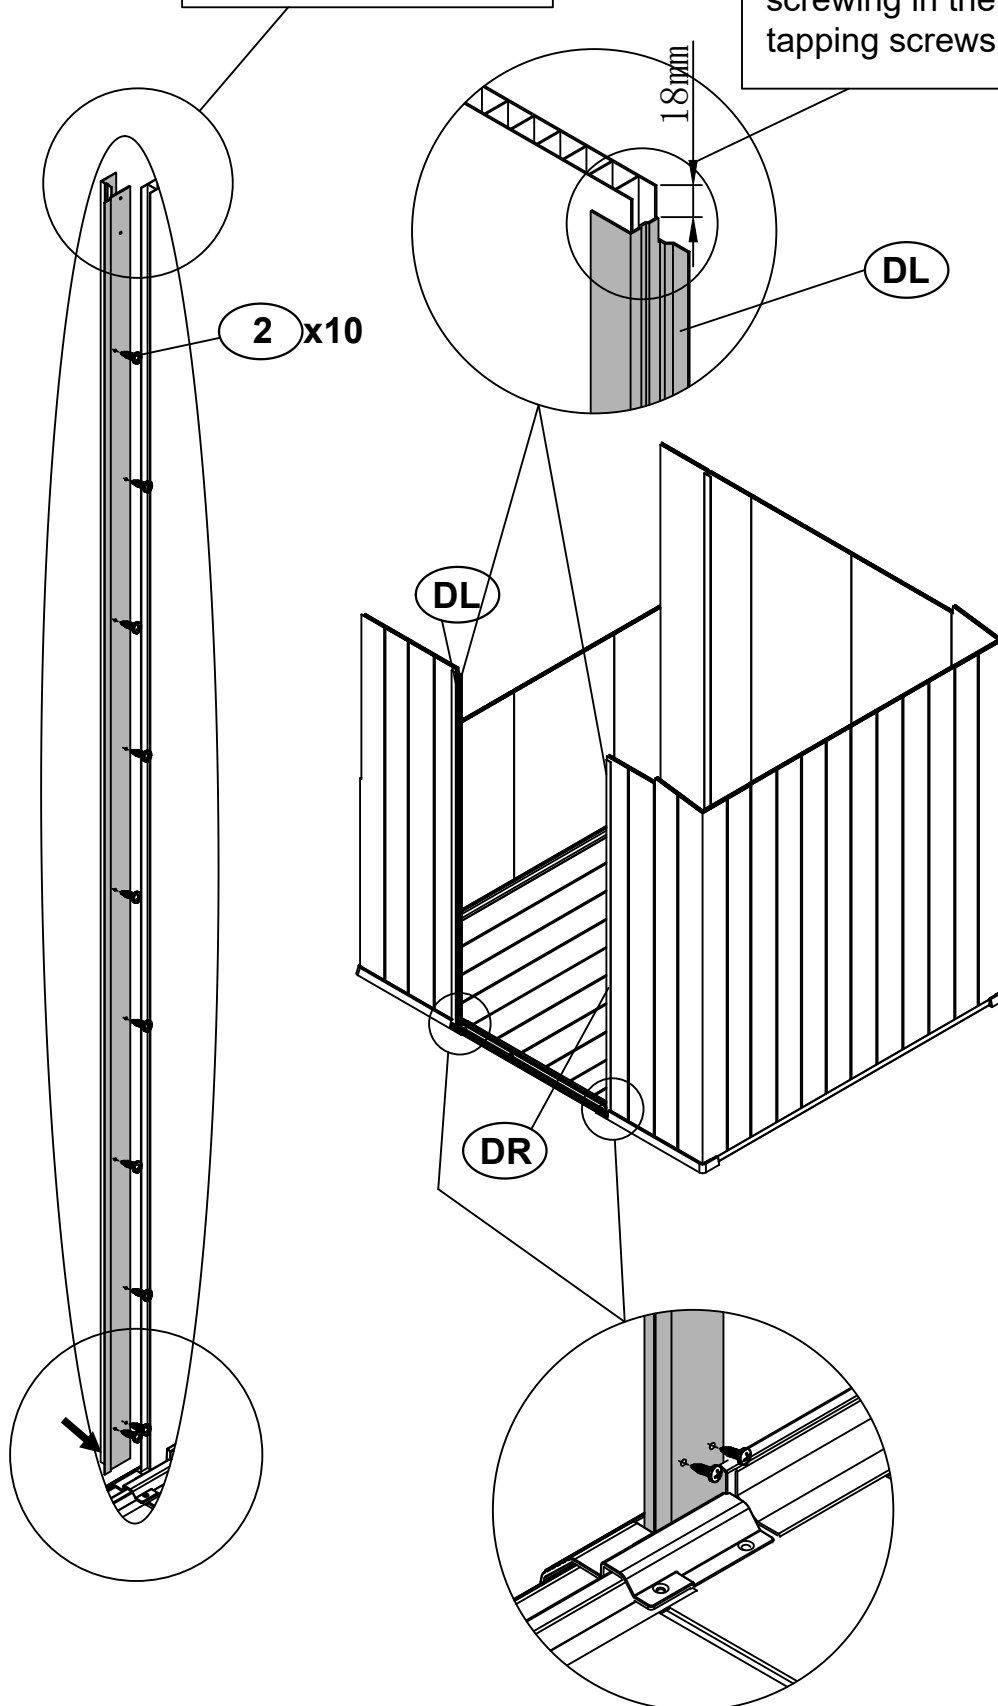


<16>

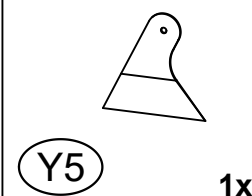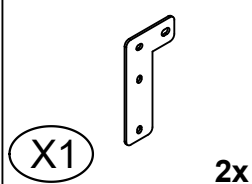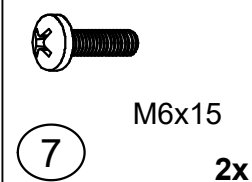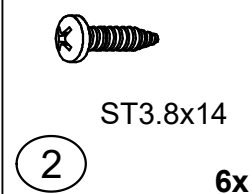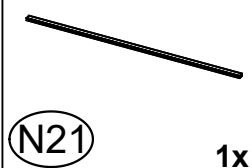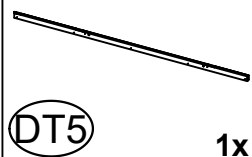


There is a notch at this end.

This step can be accomplished with the help of the adapter Y5.

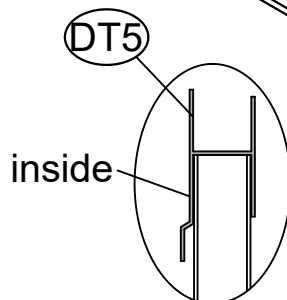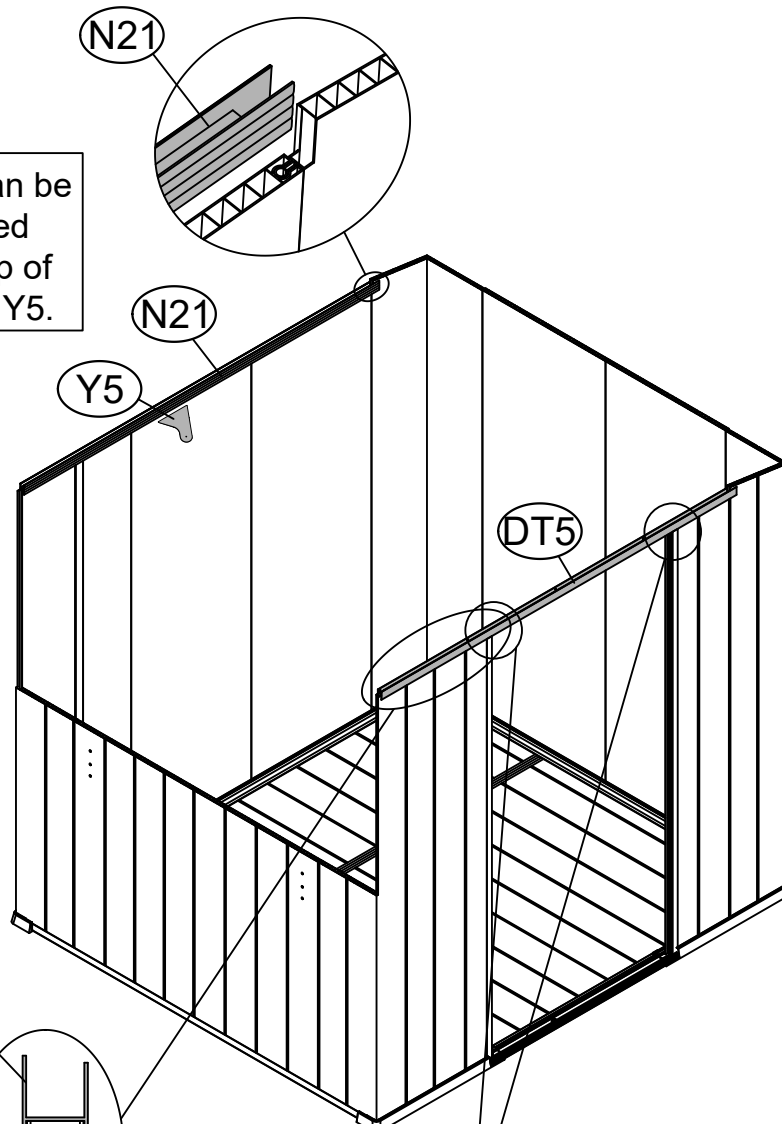

The panel is embedded in #DT5.

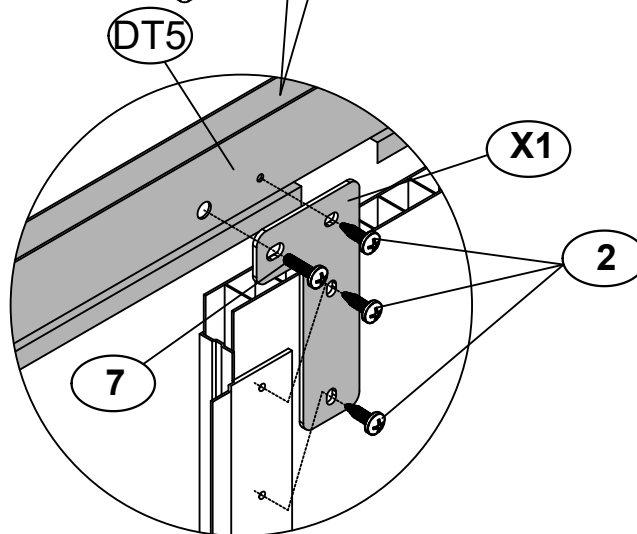

<17>

L15L



1x

L15R




1x



ST3.8x14



2

15x

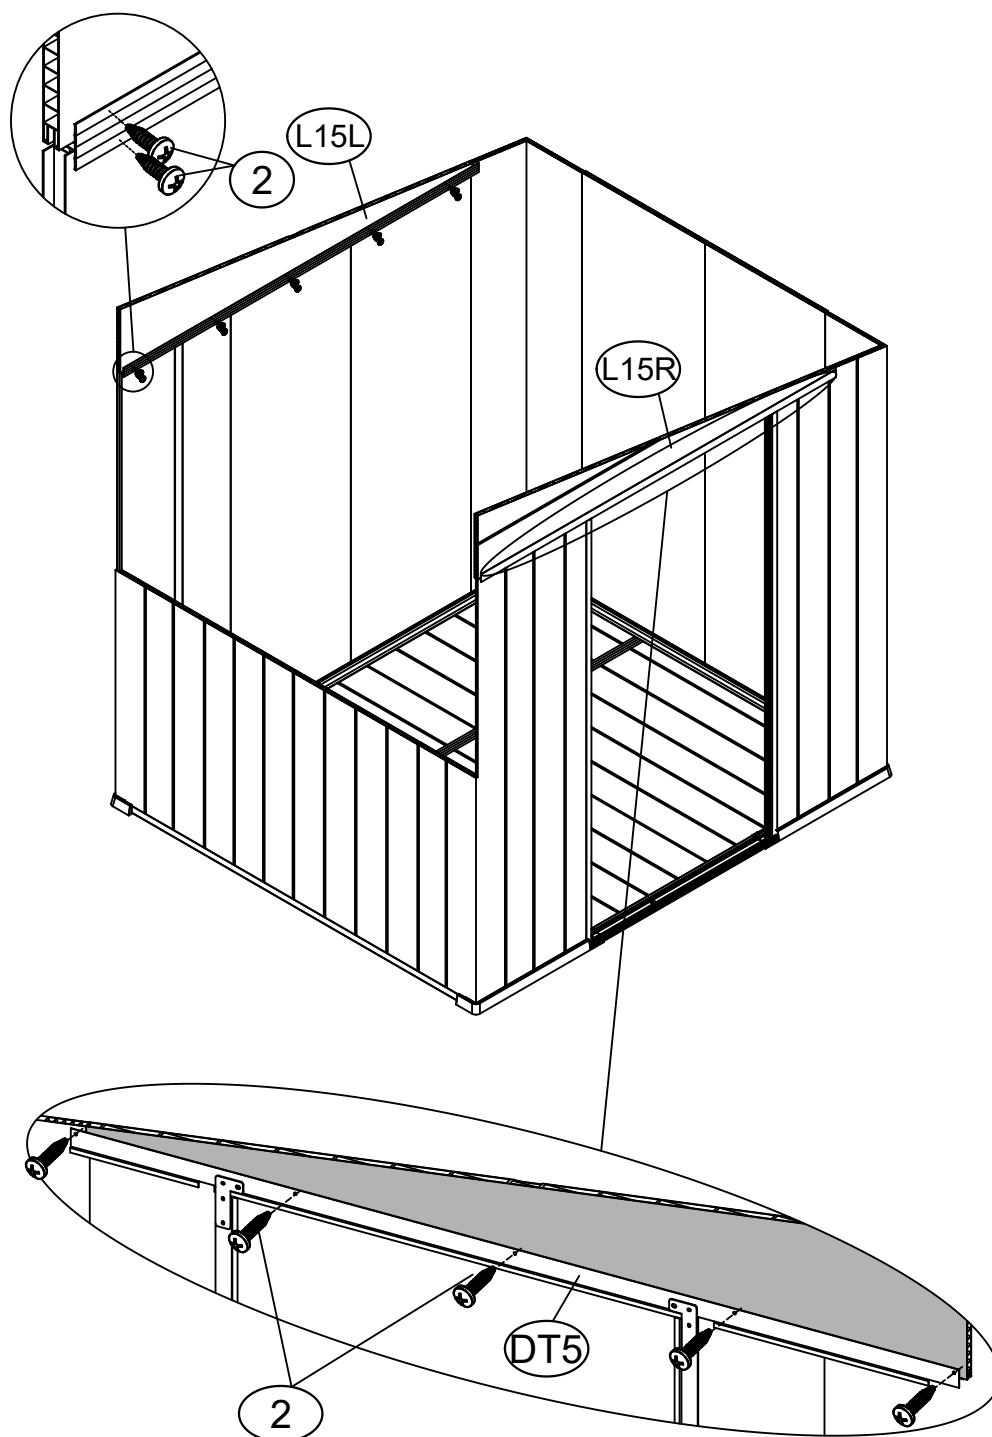

	(J7A)	1x
	(J7B)	1x
	(T5)	1x
	(O3A)	1x
	(O3B)	1x
	ST3.8x14	22x
(2)		

<18>

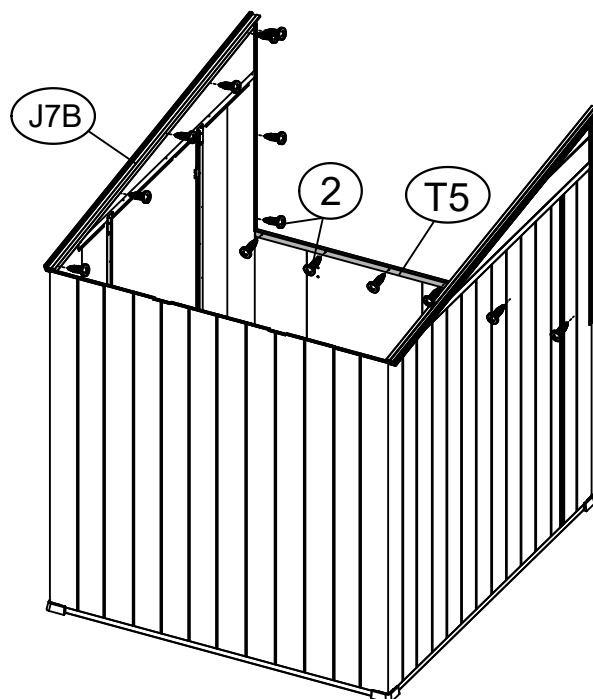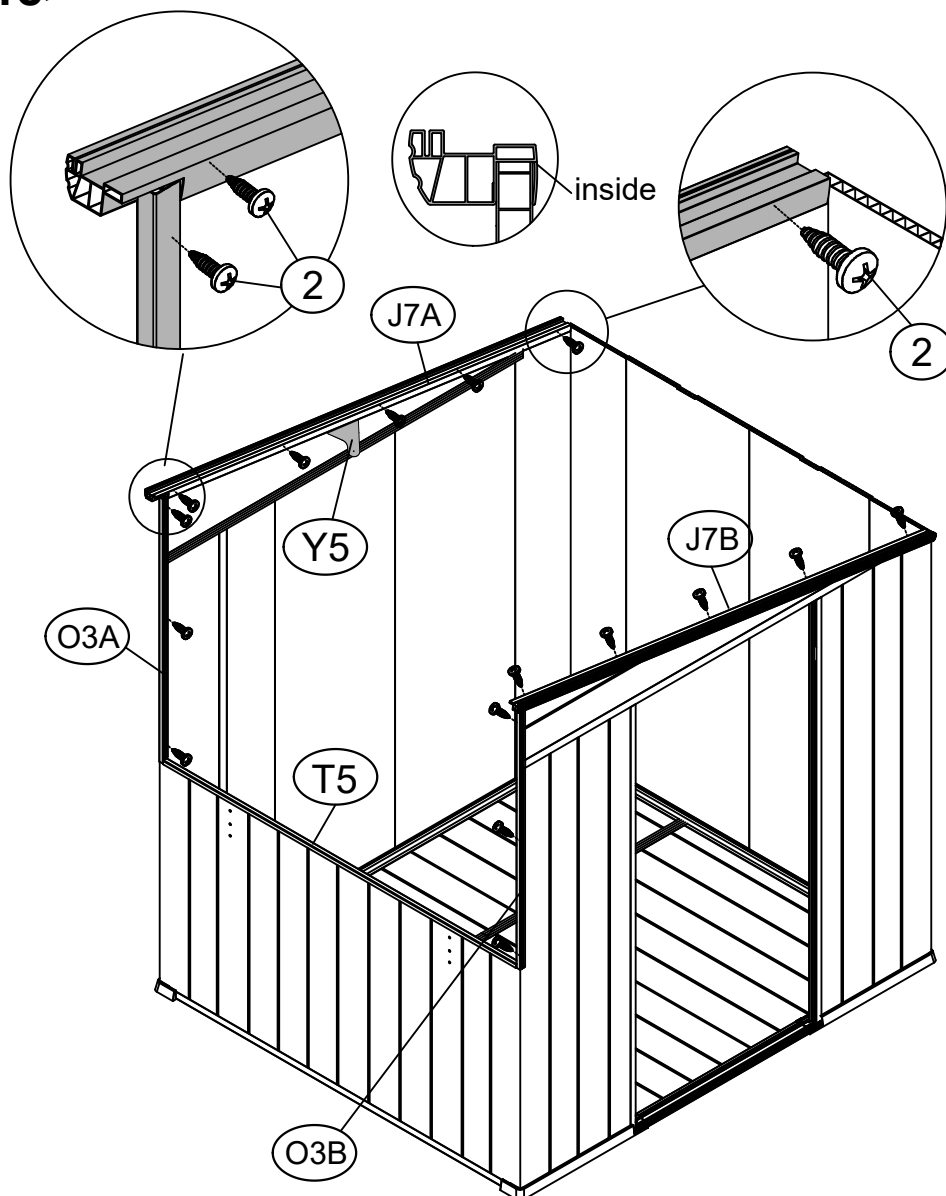


<19>



P1

3x



SQ


2x





ST3.8x14


2

6x

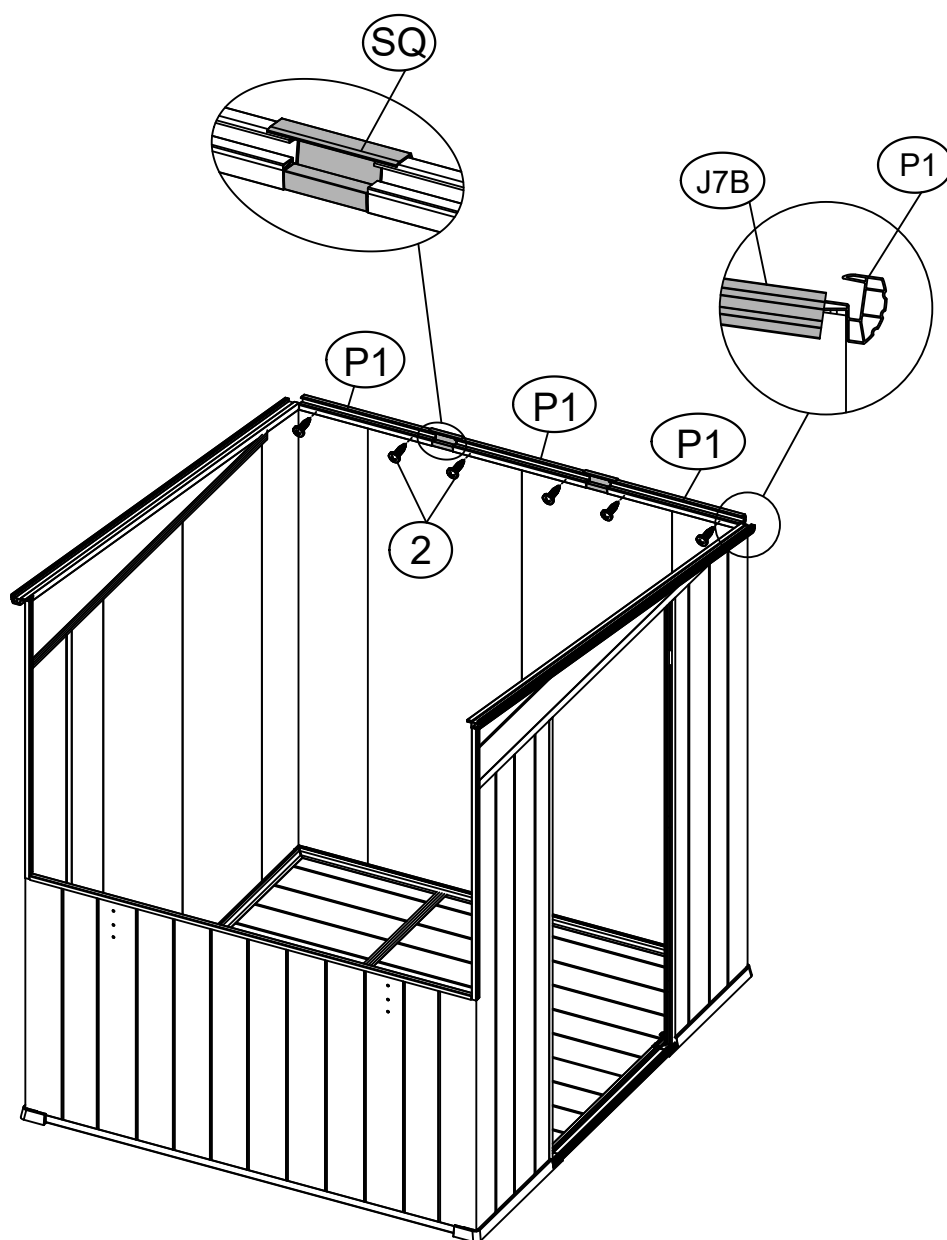

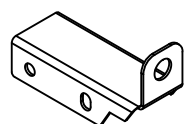	U15A	2x
	U15B	2x
	U15E	1x
	U15F	1x
	X5	6x
	M6x40	12x
	M6	12x
	M6	12x
28		

<20>

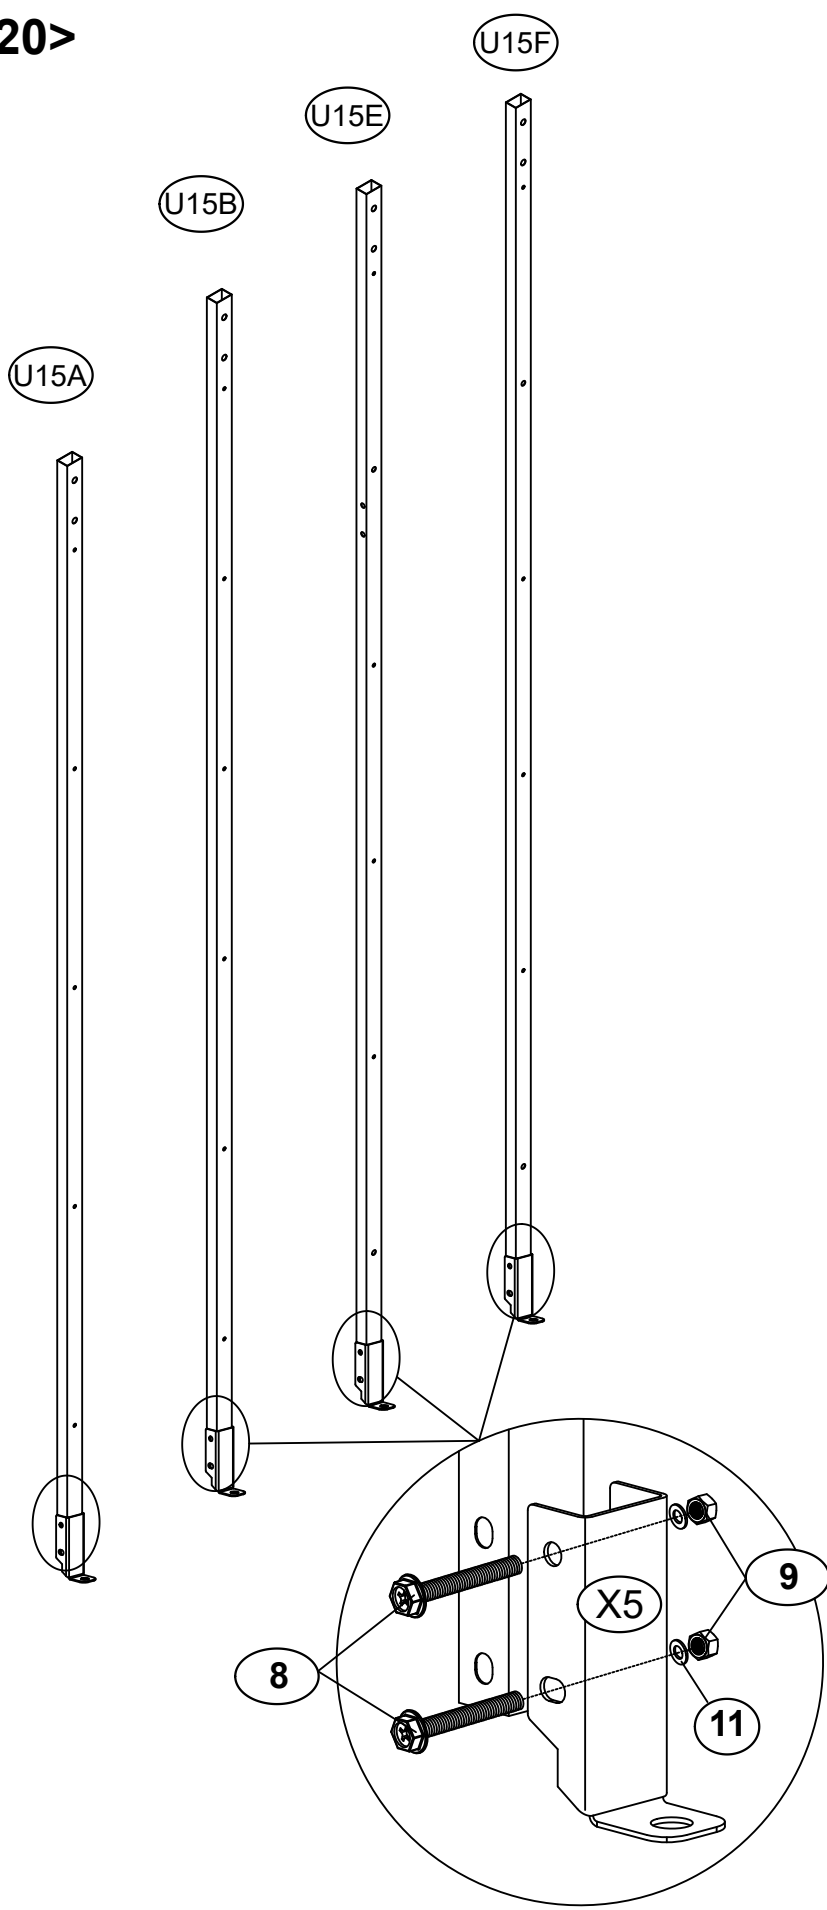

<21>




Q4

1x



X10A

1x



X10B

1x



ST4.8x32

4


8x



M6x15

7




8x



M6x32

16

4x

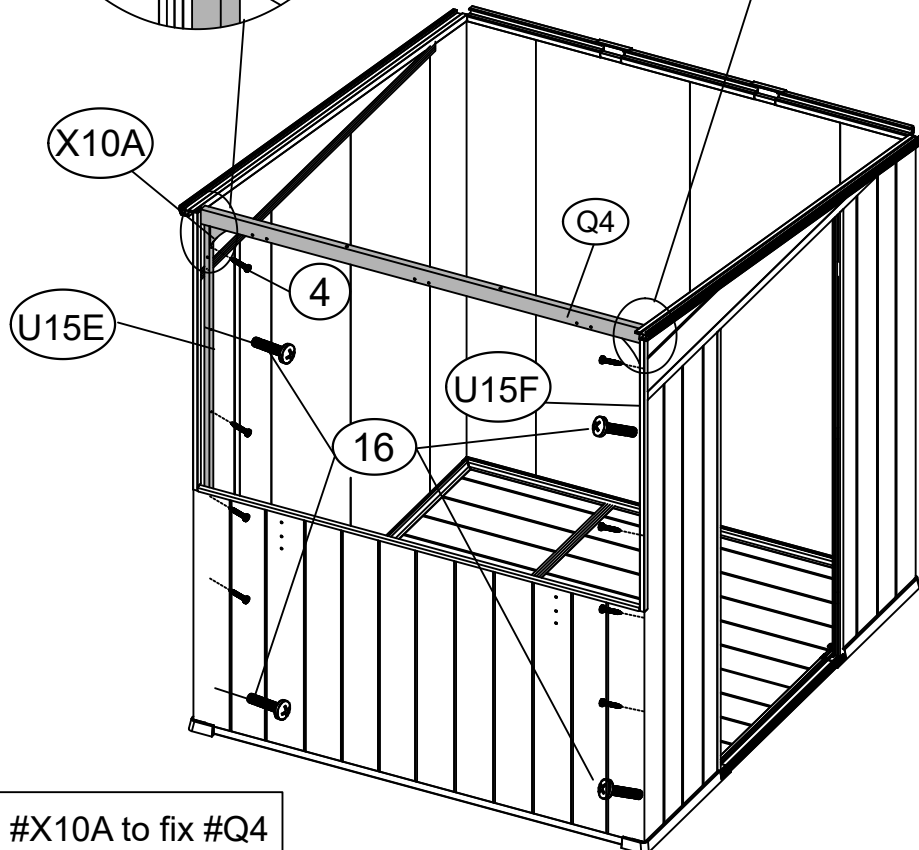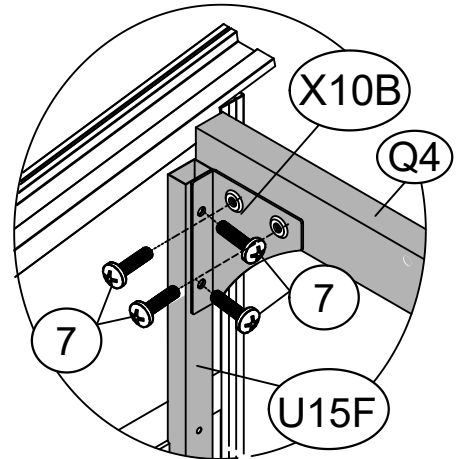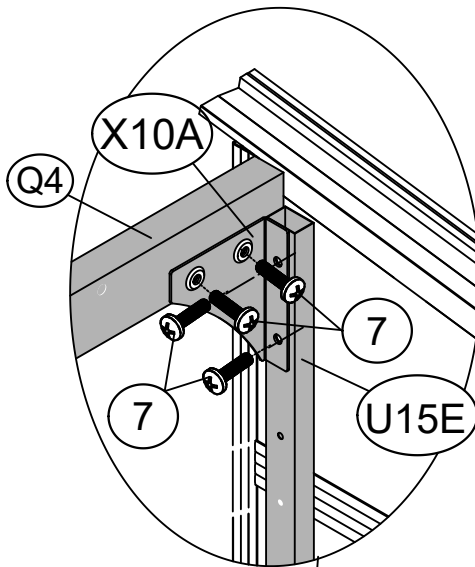

First, use #7 and #X10A to fix #Q4 and #U15E together, then use #7 and #X10B to fix #Q4 and #U15F together.

Then, assemble and fix #U15E and #U15F to the holes on the panel with 4pcs #16 bolts, and finally tighten them with 8pcs #4 self-tapping screws.

<22>

ROOF ASSEMBLY


R11 2x

SR 2x



ST3.8x14

2 2x




M6x20


10 2x





18 2x

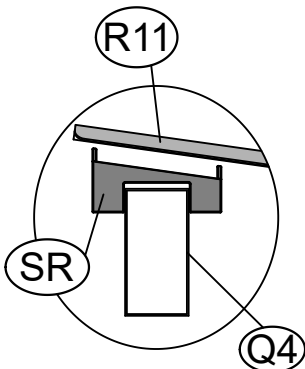



1

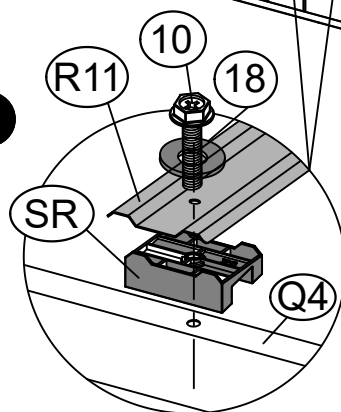


2

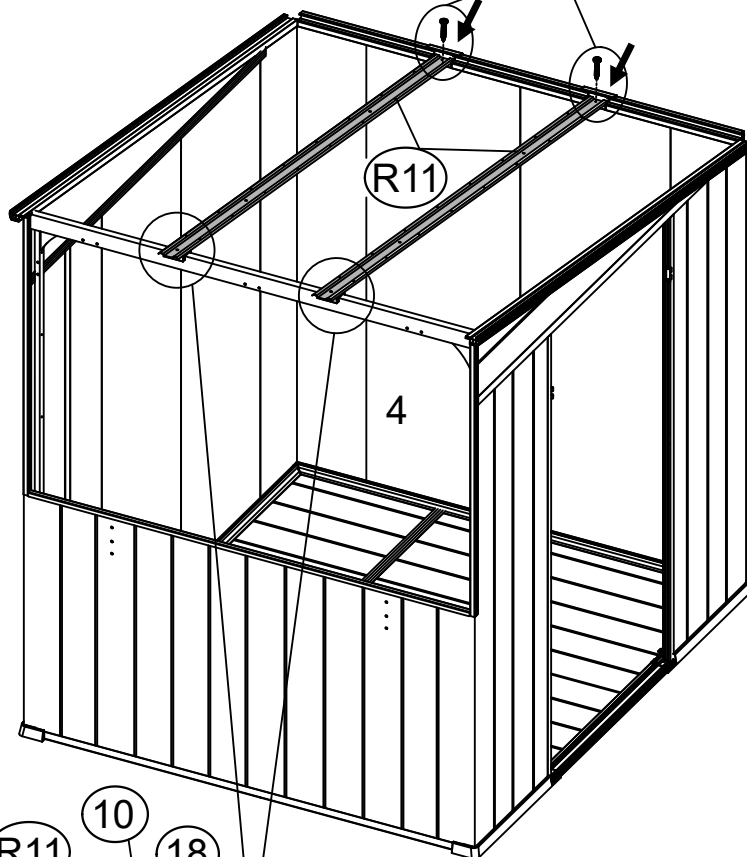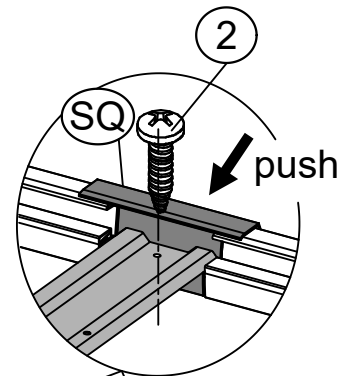

First, fix #R11 and #SR onto the crossbeam #Q4 with #10 screws and washers. As shown in Figure 2, push #SQ inward until it is flush with #R11, then fix #SQ and #R11 together with #2 screws.




	
(Q1)	2x
	
(X10A)	4x
	
(X10B)	4x
	
(SR)	4x
	
(4)	22x
	
(10)	4x
	
(18)	4x
	
(7)	16x
31	

<23>


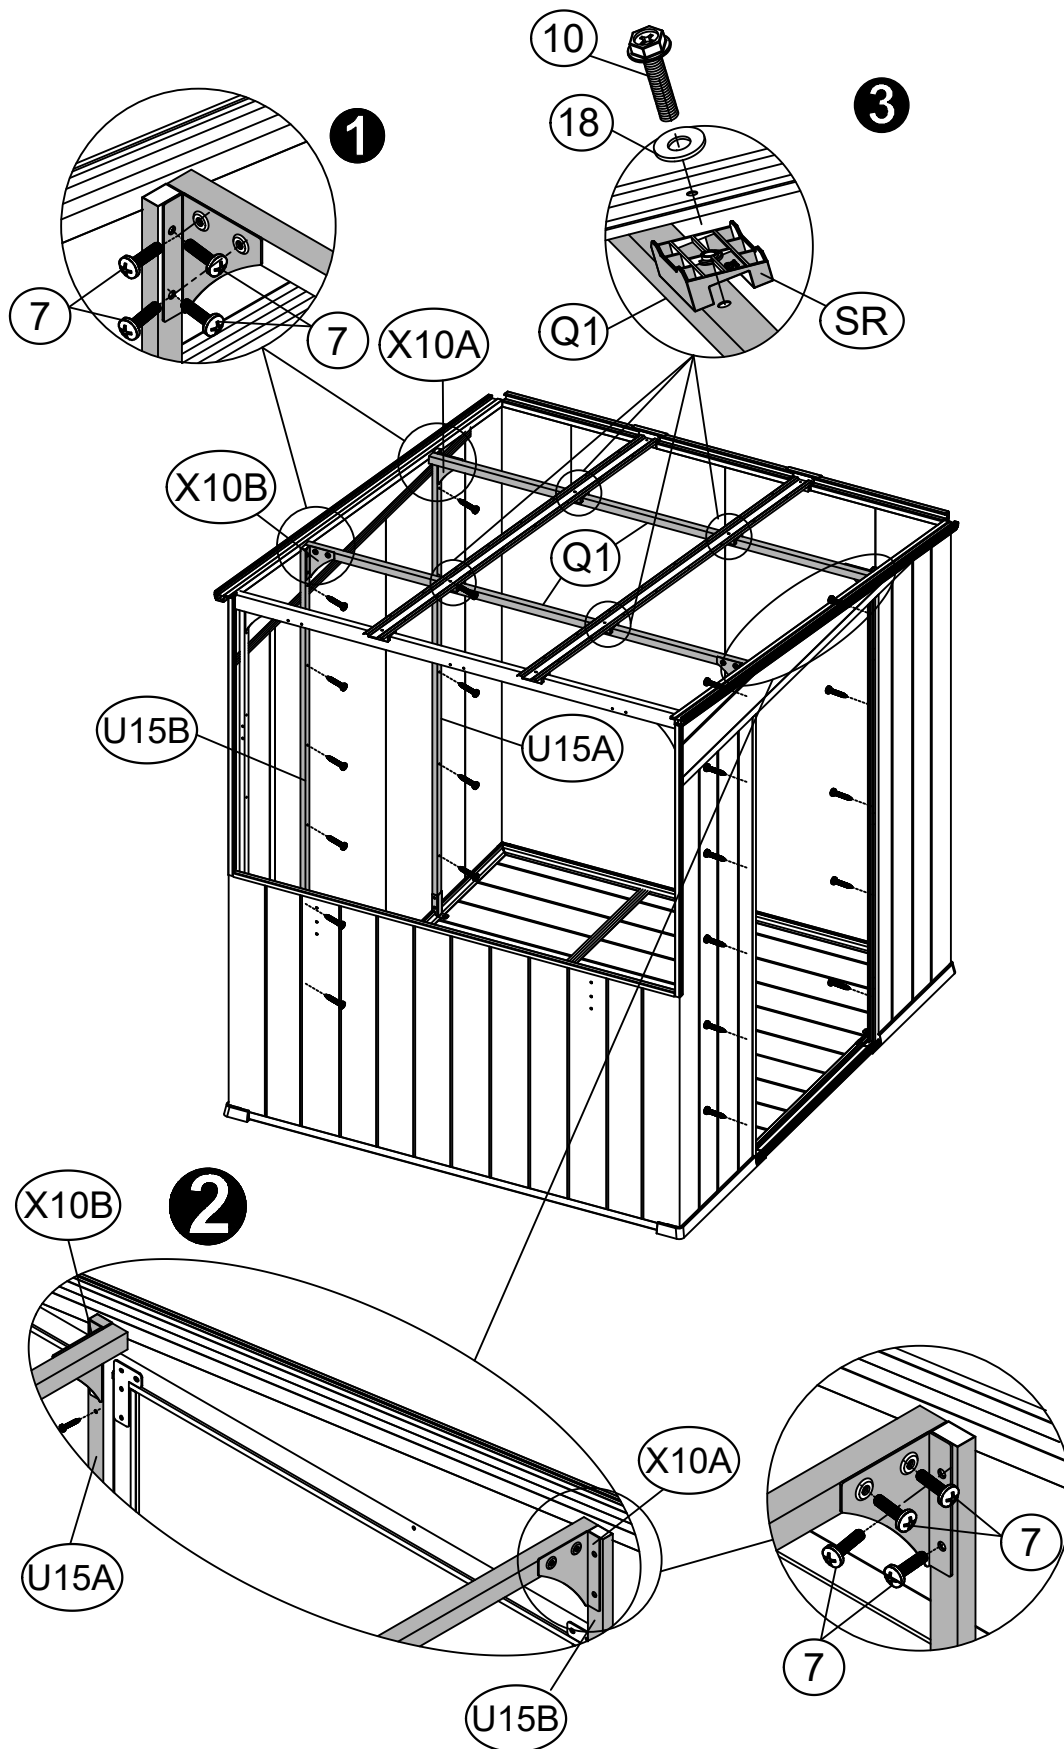



<24>

Note that #G6 must not be installed in reverse; otherwise, it will leak.

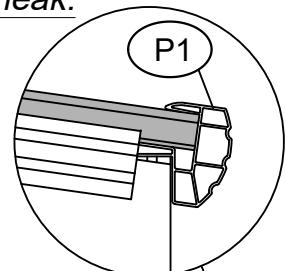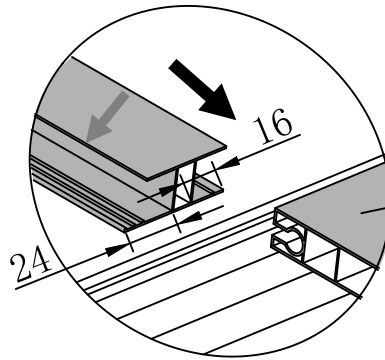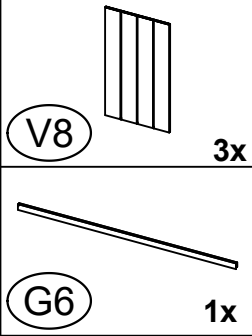


First, place 3pcs #V8 in the positions as shown in the picture and insert one end into the #P1. Two people stand at each end. One person inserts the #G6 from one end, while the other holds the #V8s to assist until the #G6 is fully inserted. It can also be assisted by a third party in the shed.

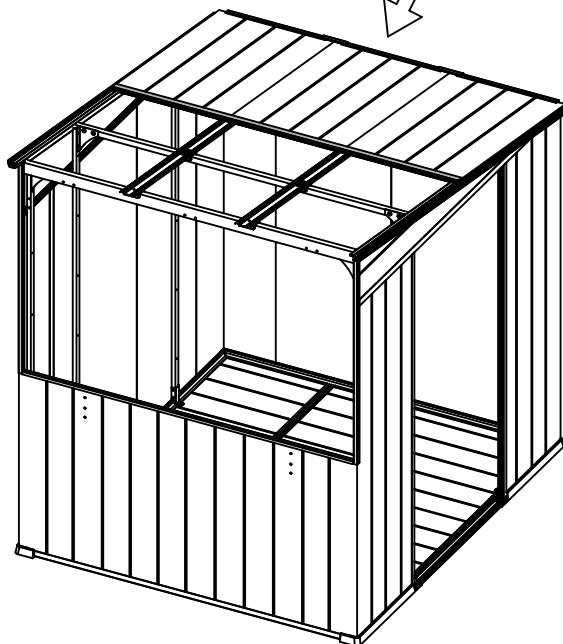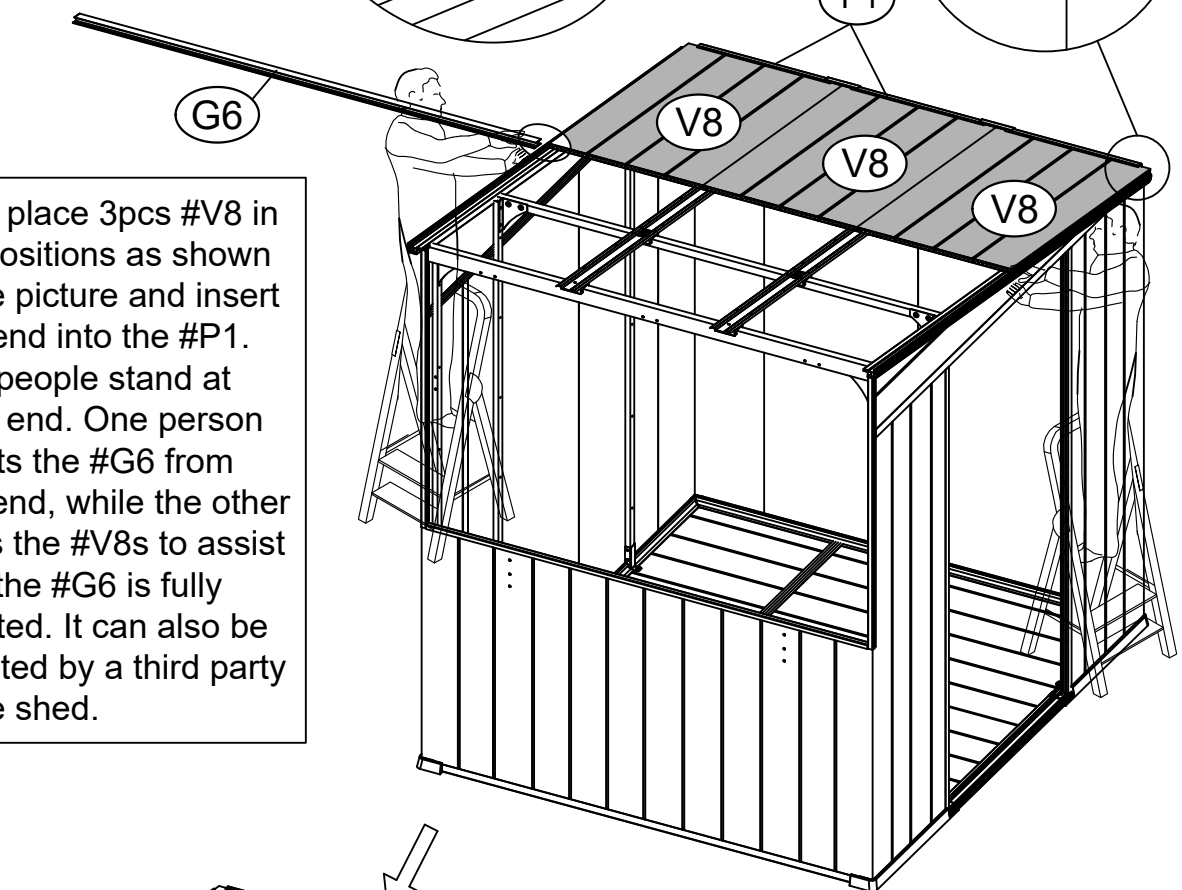

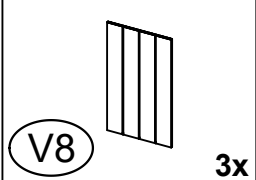


<25>

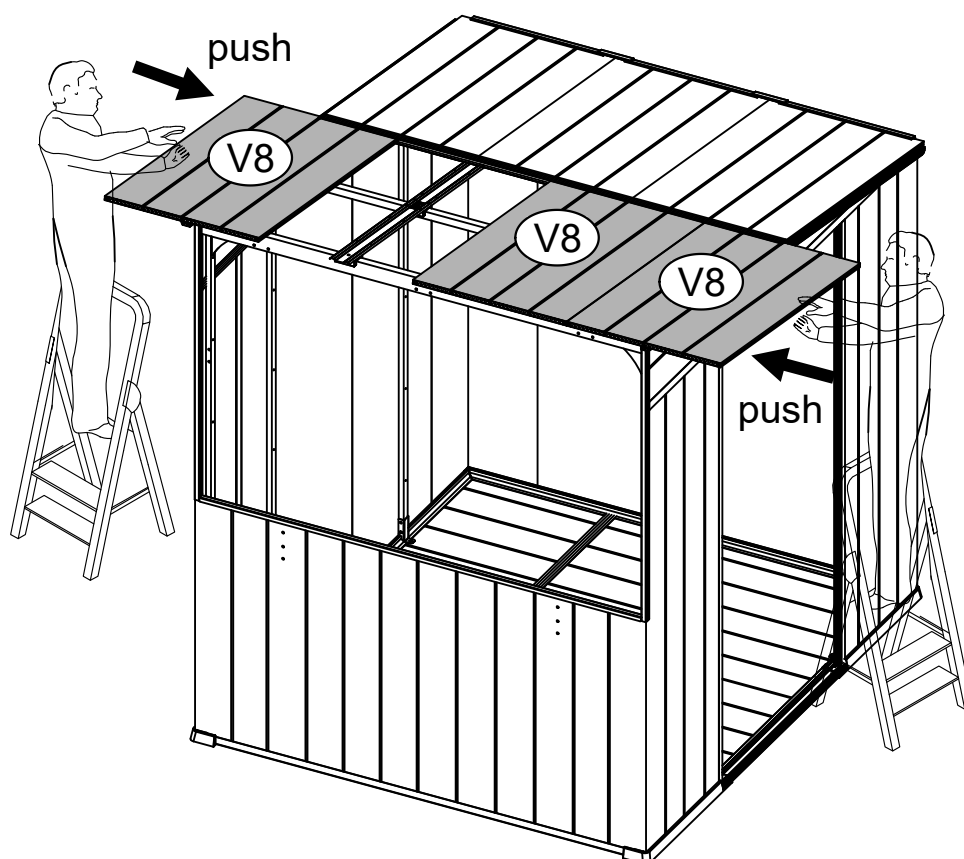

<26>



(M1) 1x






(K7) 2x



ST4.8x32

(4) 20x

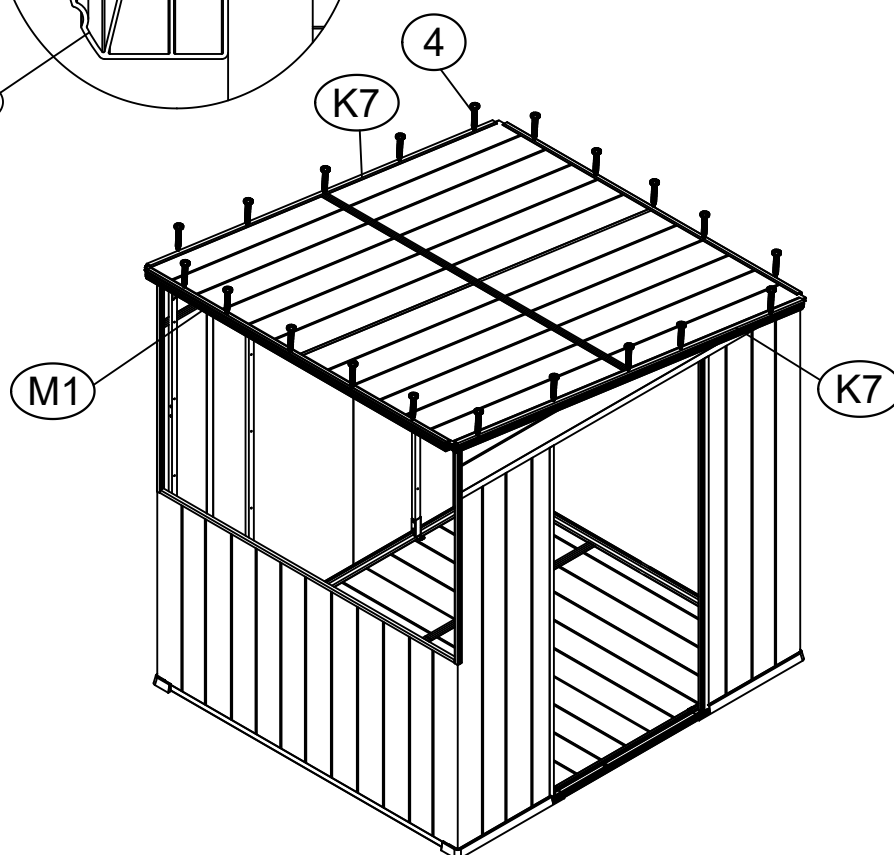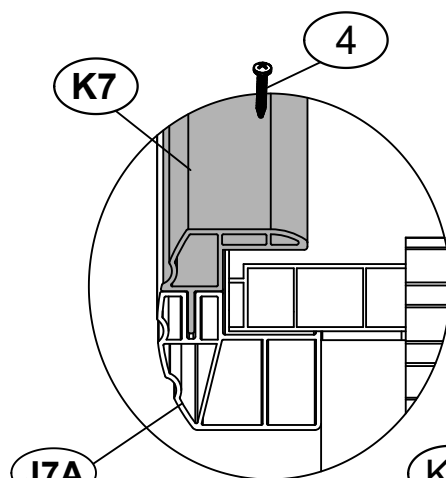



(SCA)

2x



(SCB)

2x




ST3.8x14

(2)

16x

<27>

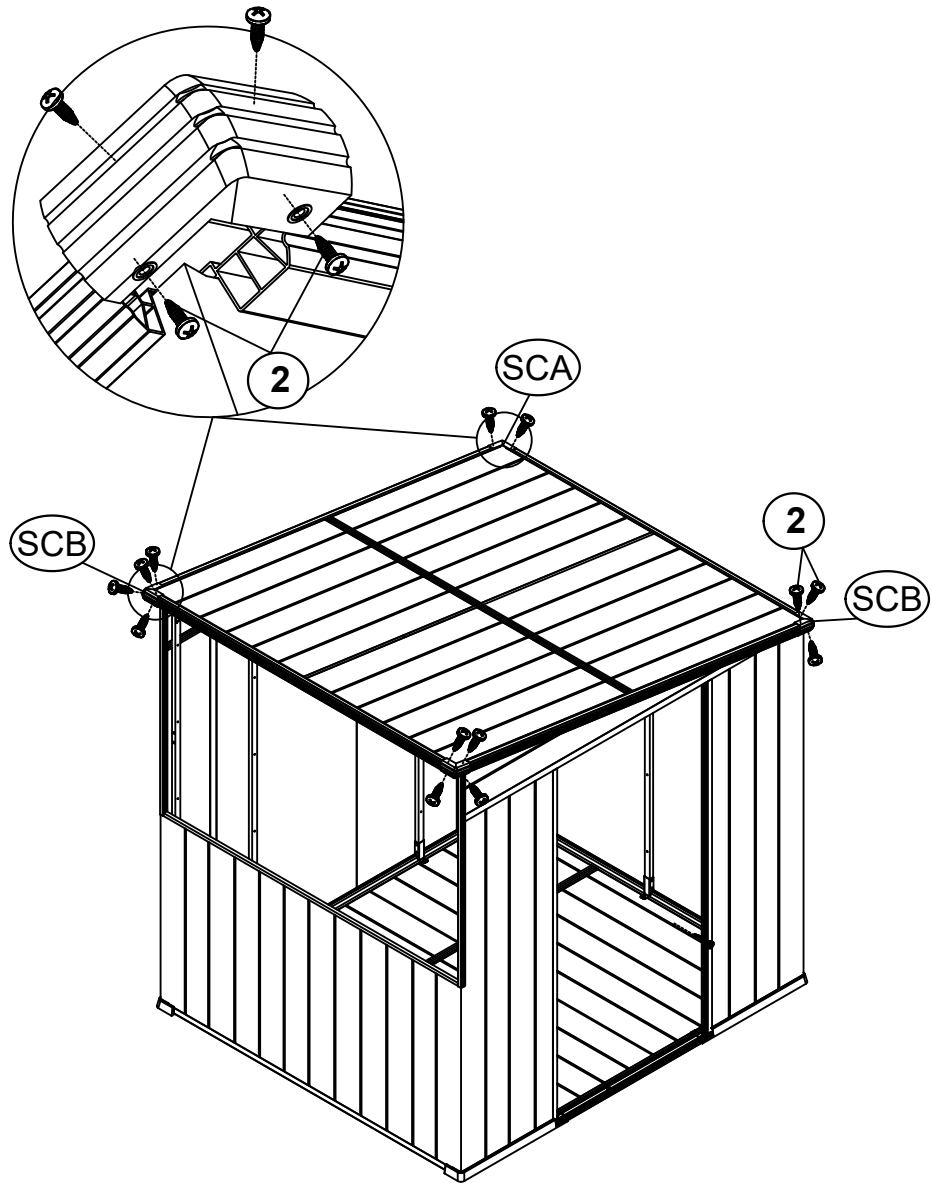



ST3.8x14

2

38x




14


1x

<28>

As shown in the figure, from a bottom-up view, 6 pcs of #2 screws are used to fix #G6 to #V8, and 16 pcs of #2 screws are used to fix #R11 to #V8.

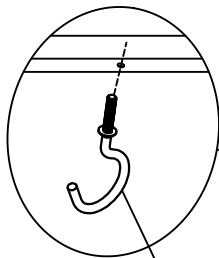


14

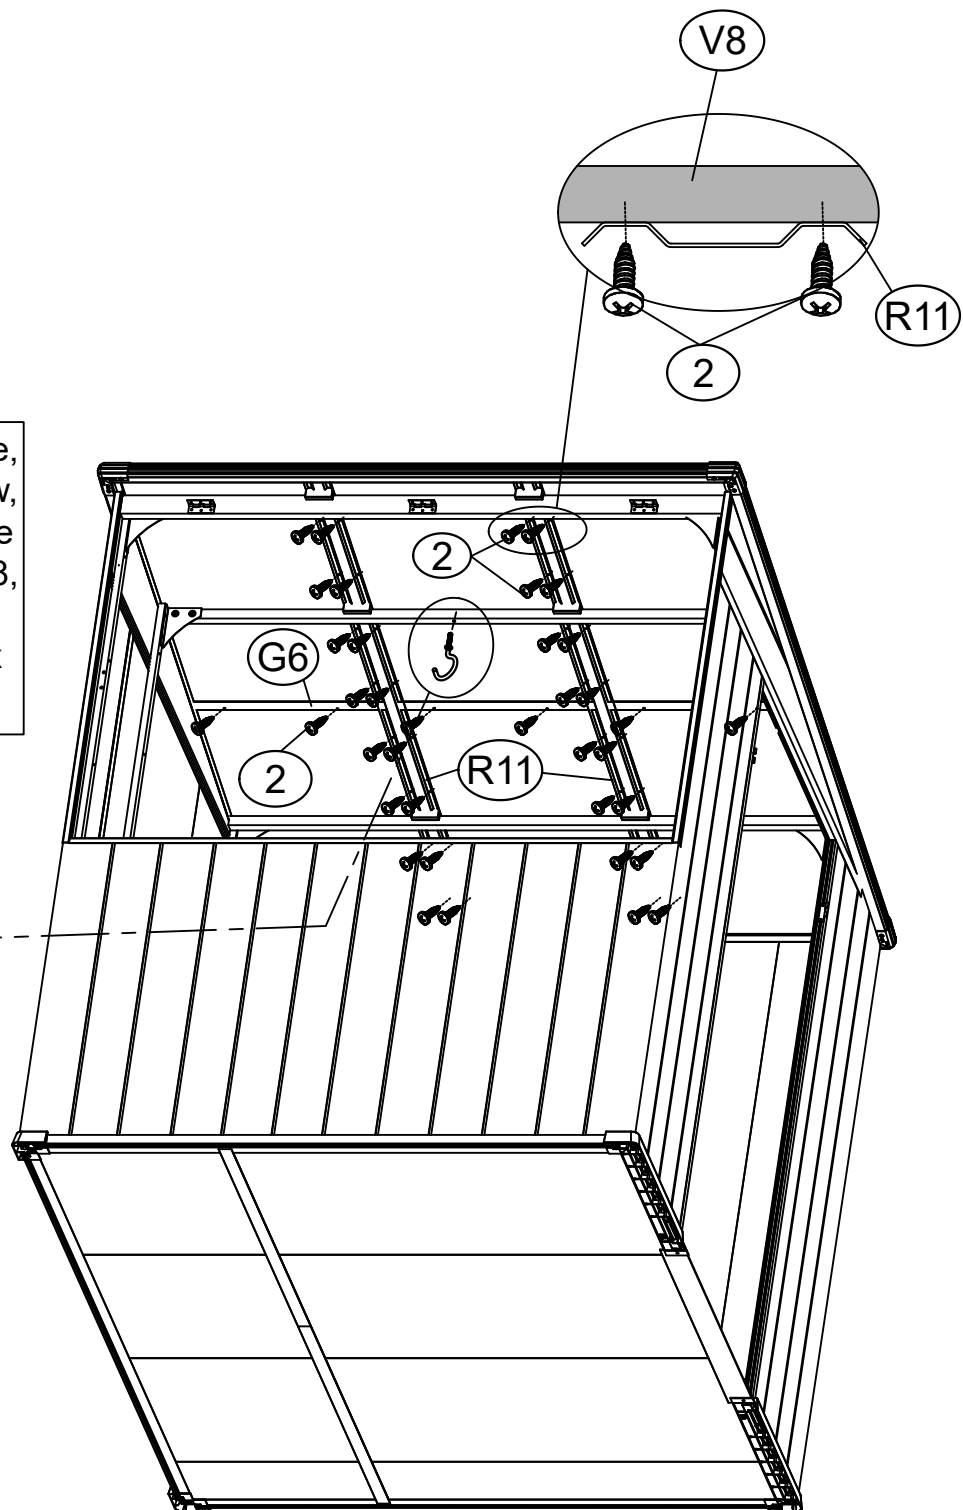

<29>



(X7) 2x







(X13) 2x




M6x27
(6) 6x



M6
(17) 6x

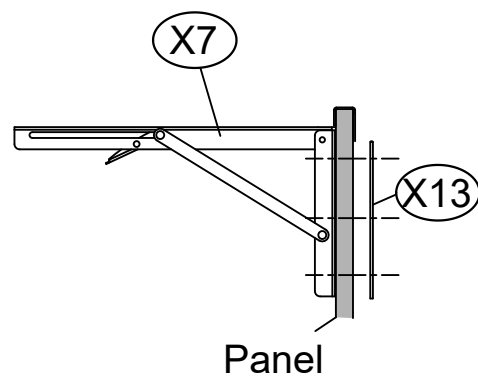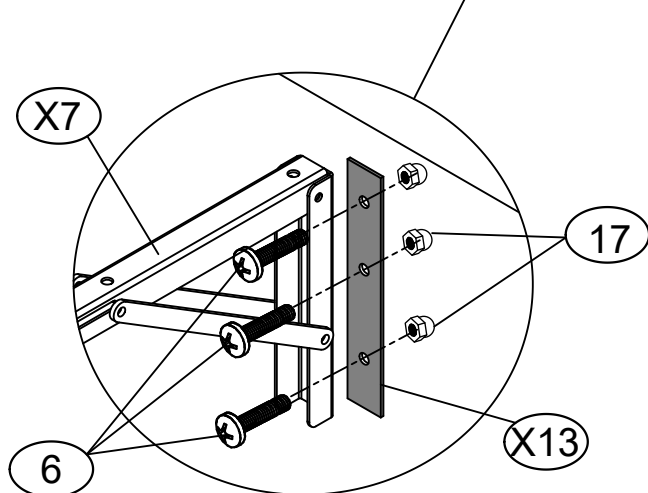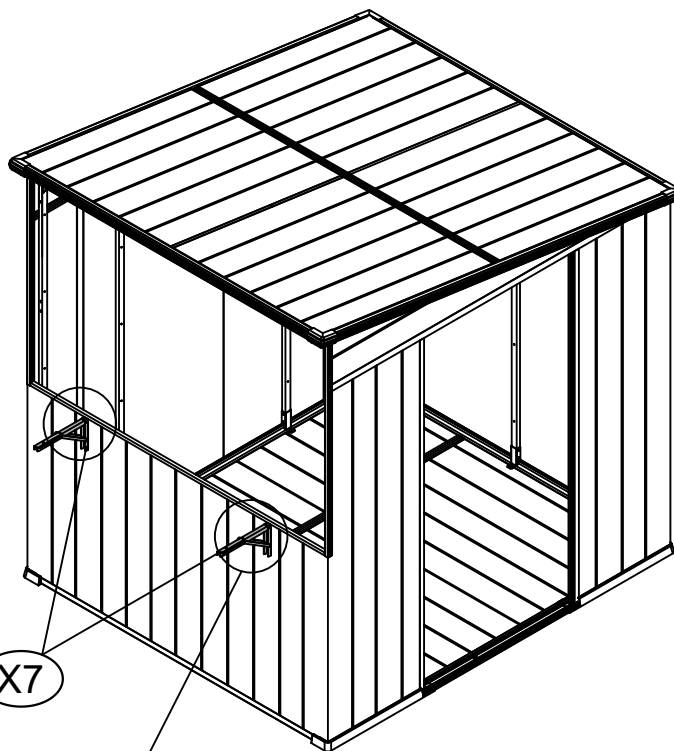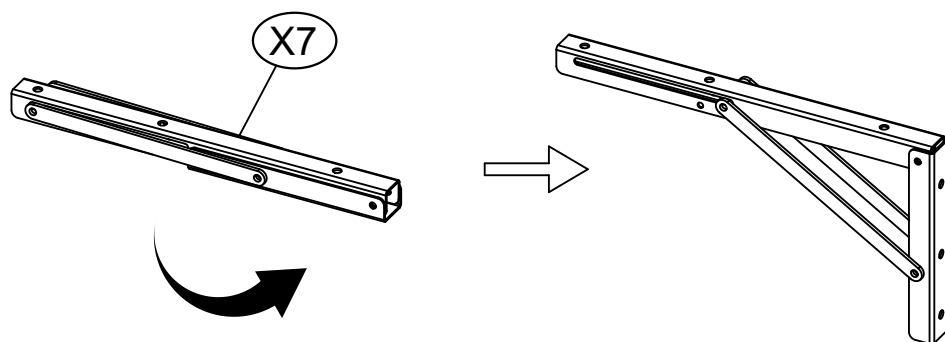



<30>

V10



1x



ST3.8x14










2

6x

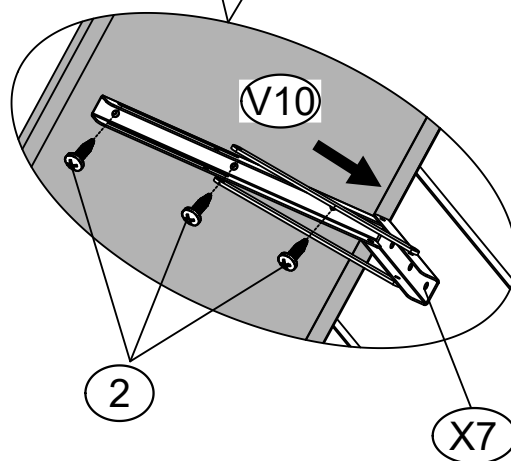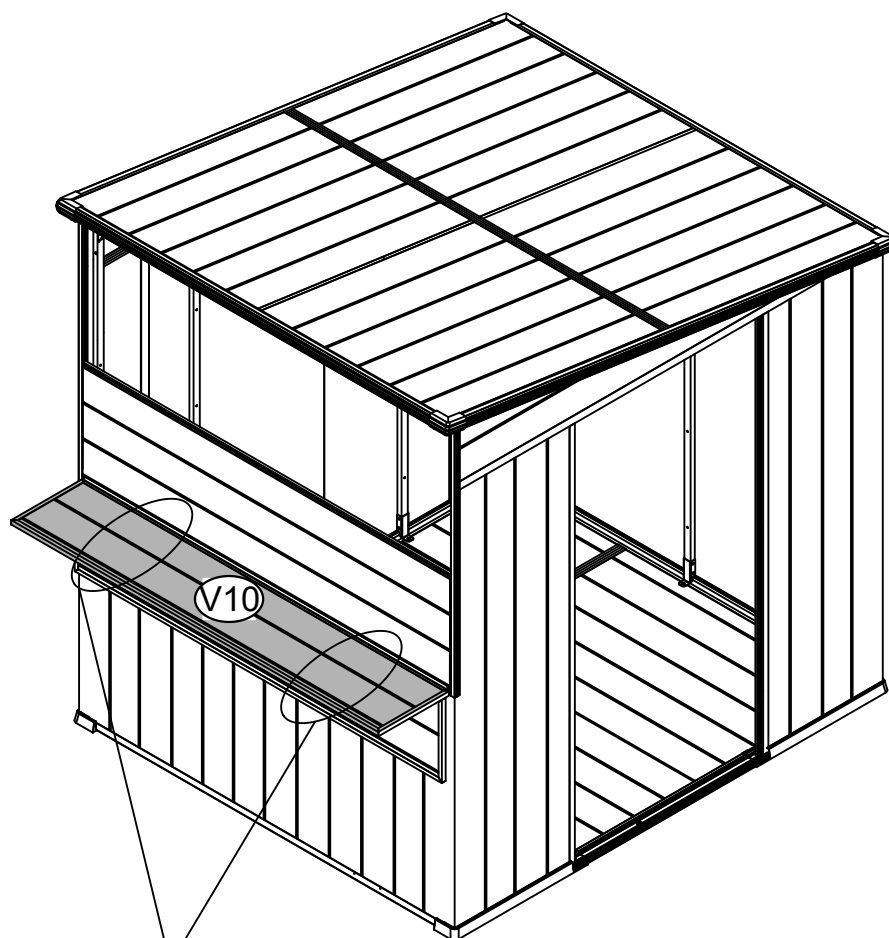


Note that the arrow indicates the marking should face inward.

<31>

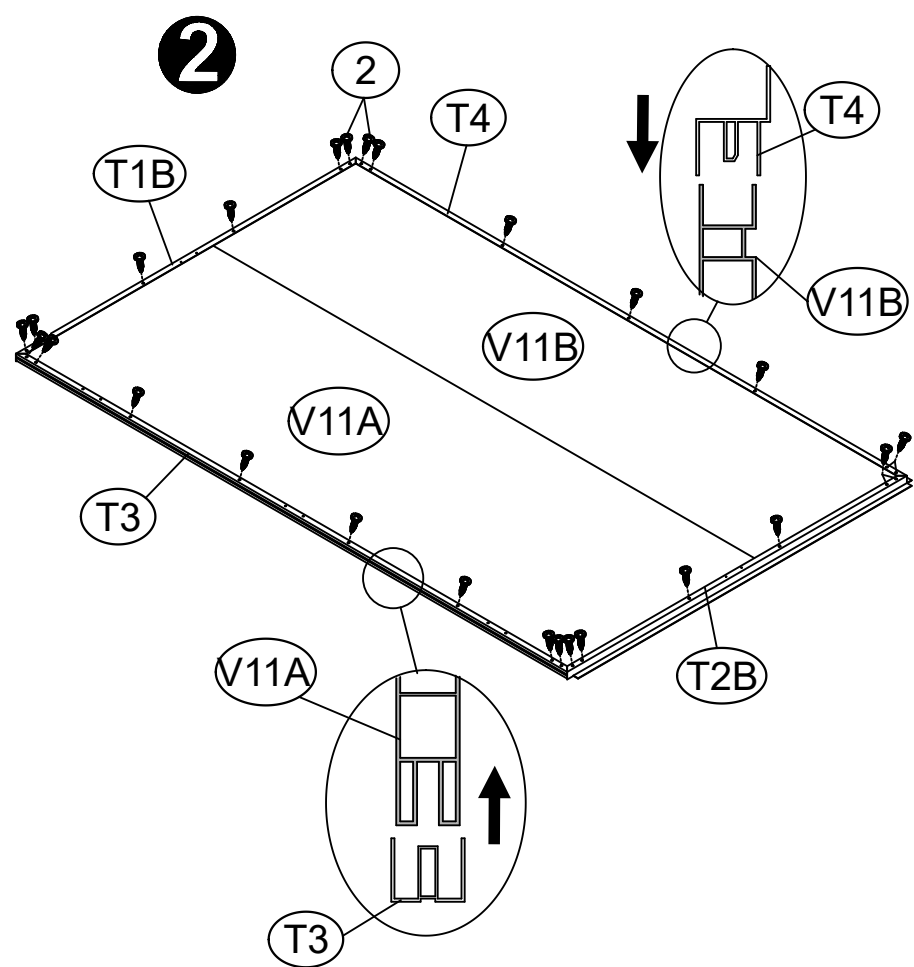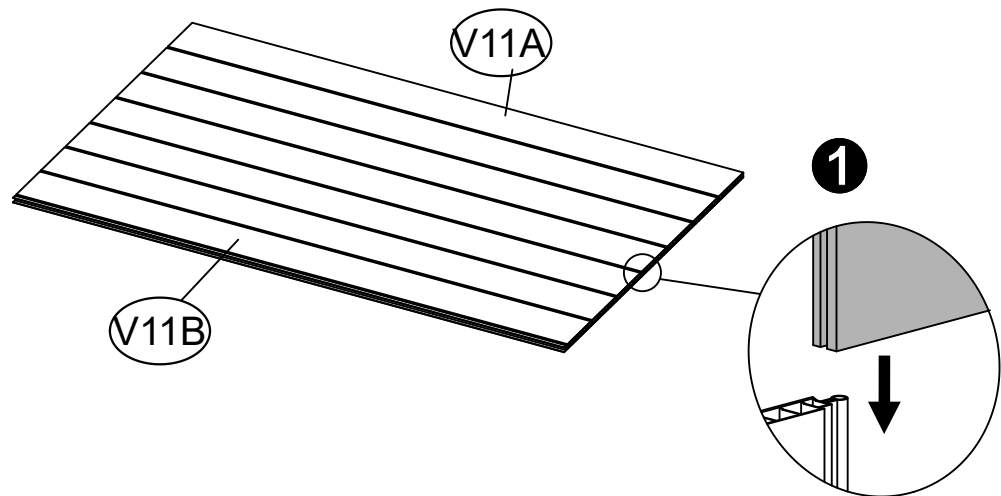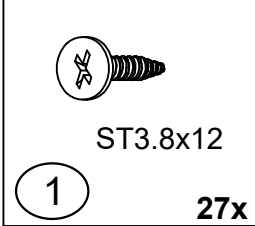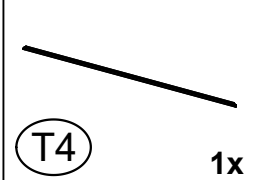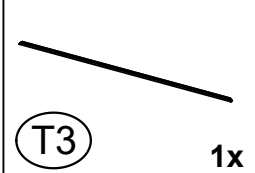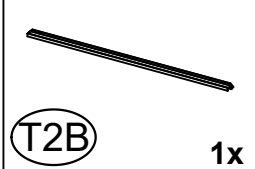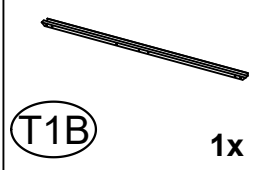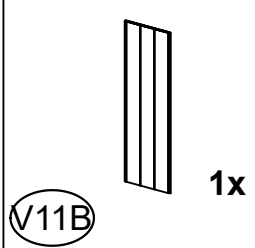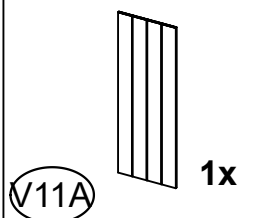




2x



X9

3x



X6

2x




ST3.8x16


3

21x

<32>

Note: The #X8 gas spring must not be installed with the large and small ends reversed, as this will affect its service life.

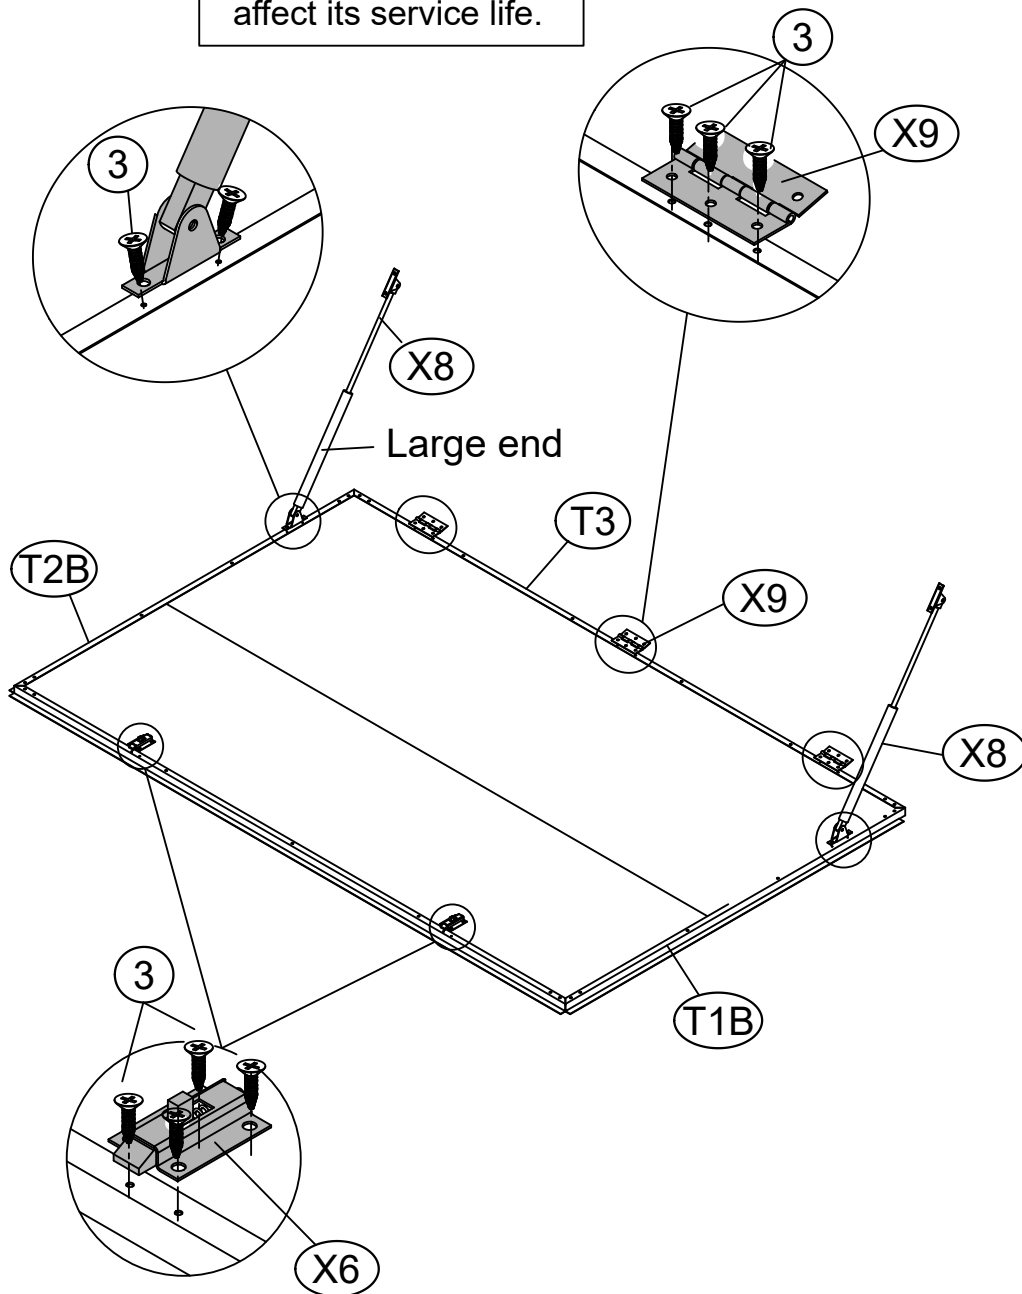

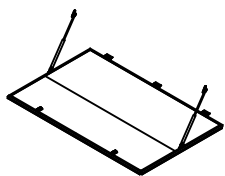

1x



M5x15

4x

5




M4x15


6x

13


<33>







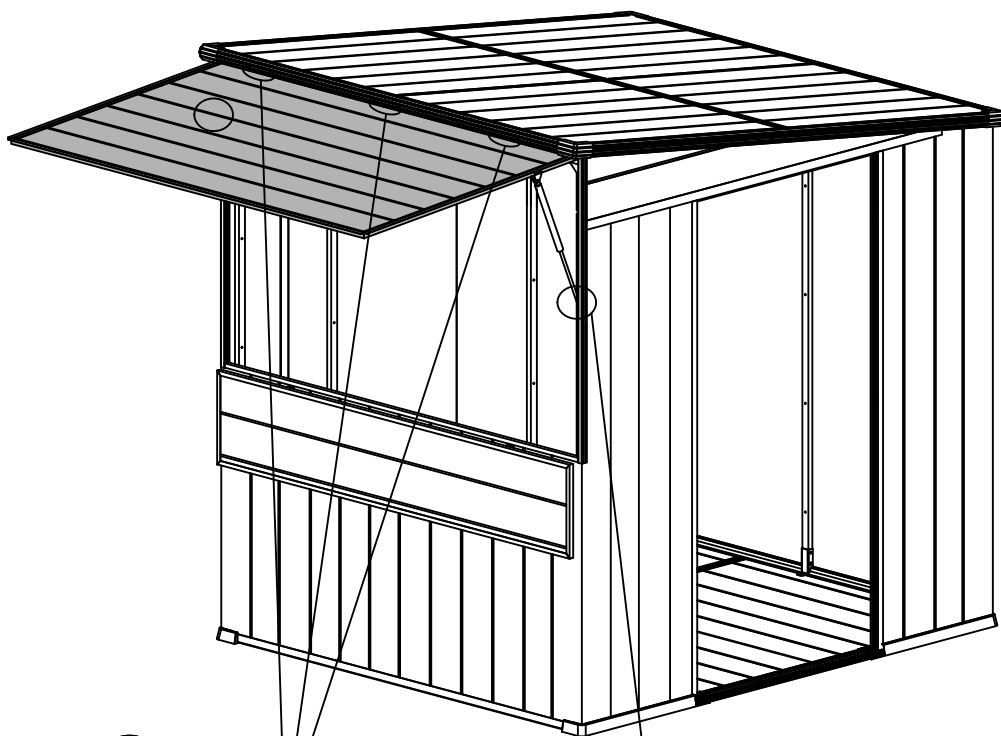


1

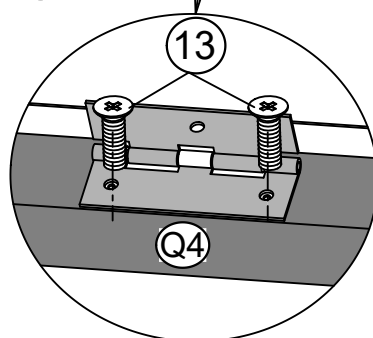


2

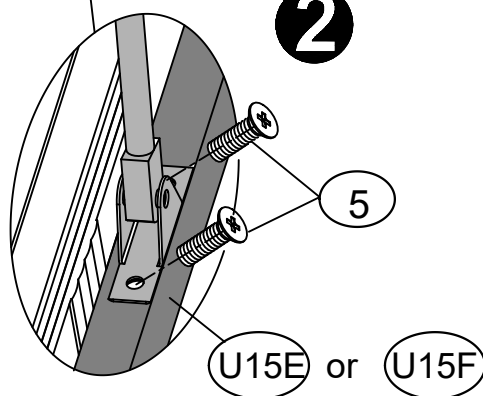


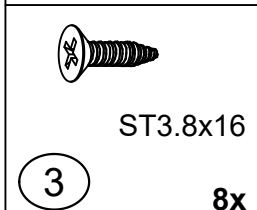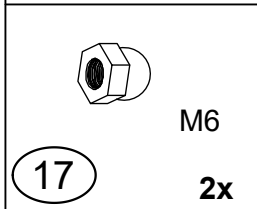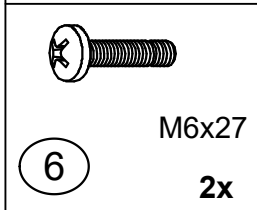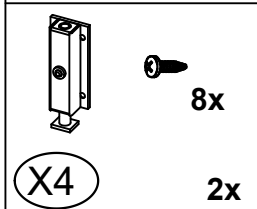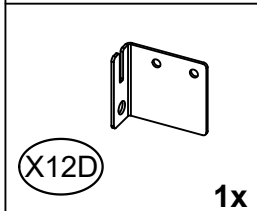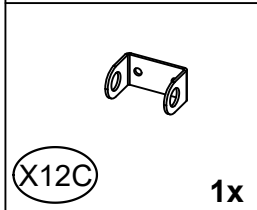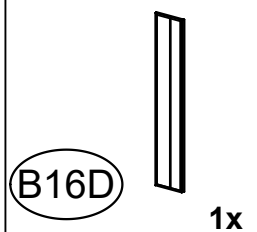

<34>

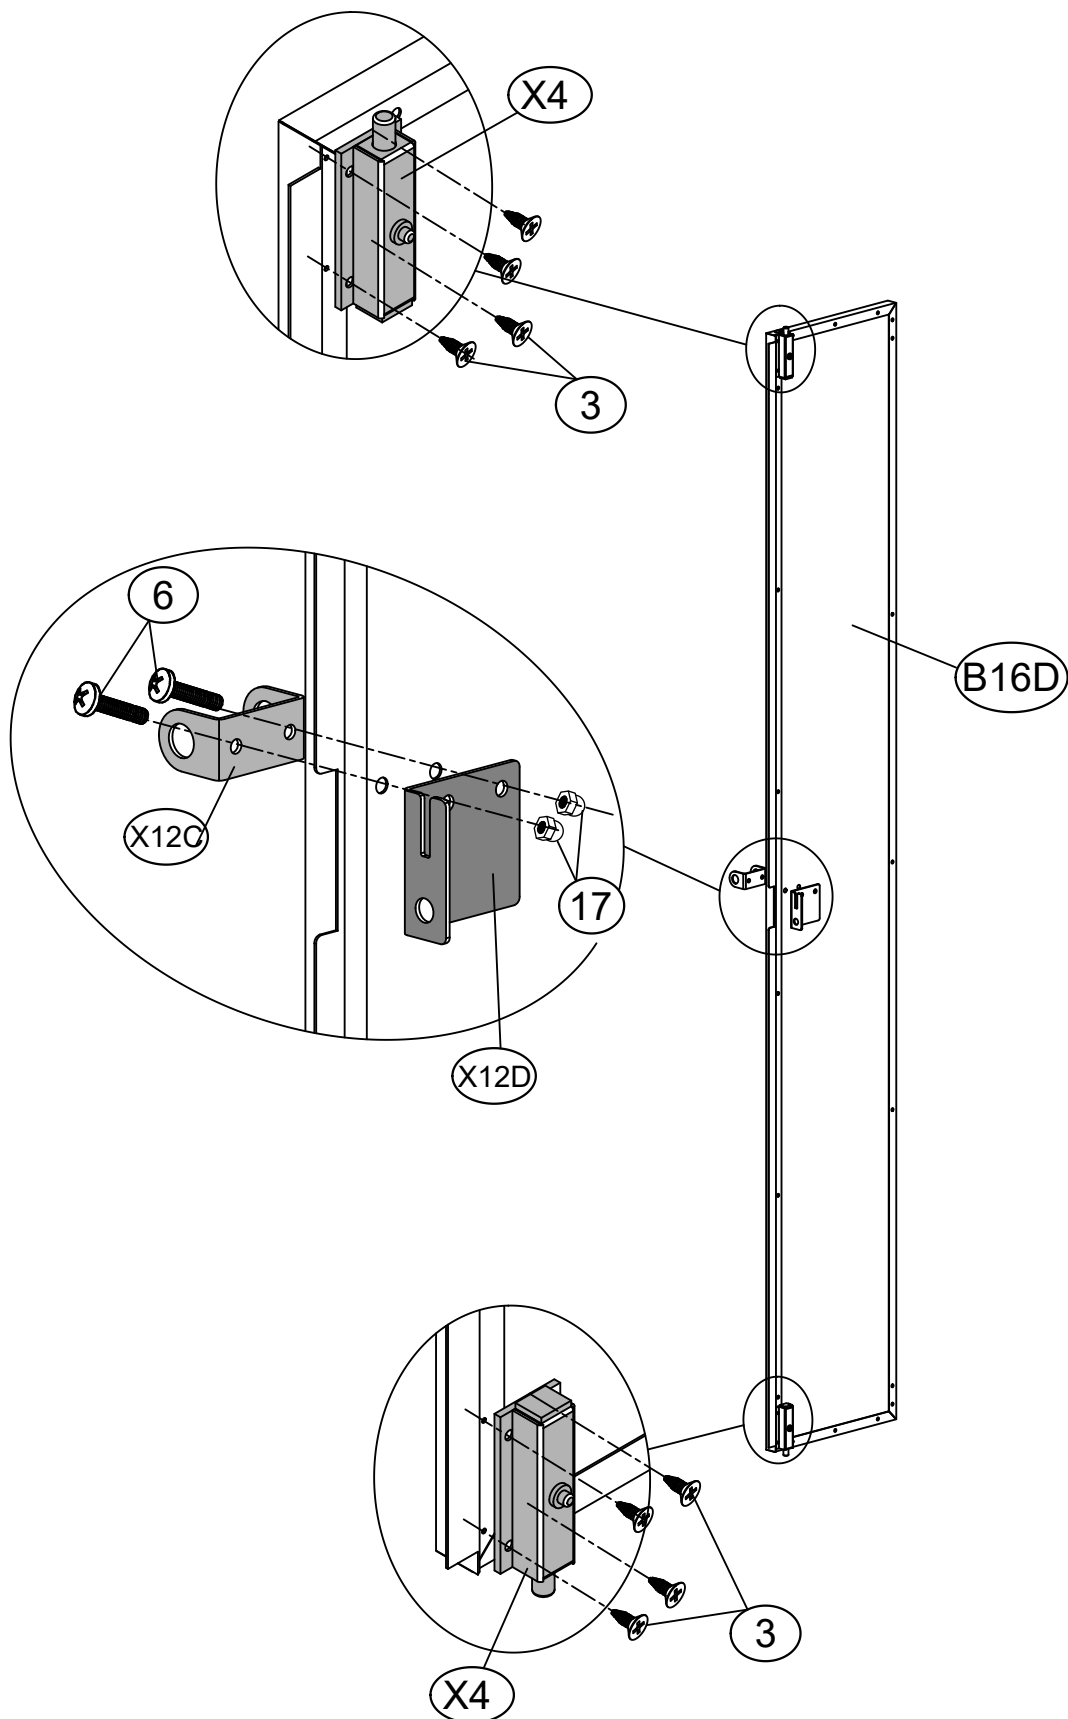


<35>




(B5D)

1x

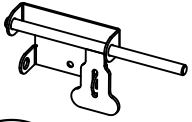


(X12A)

1x

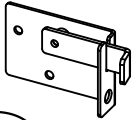

(X12B)

1x



M6x27

(6)



3x



M6

(17)

3x

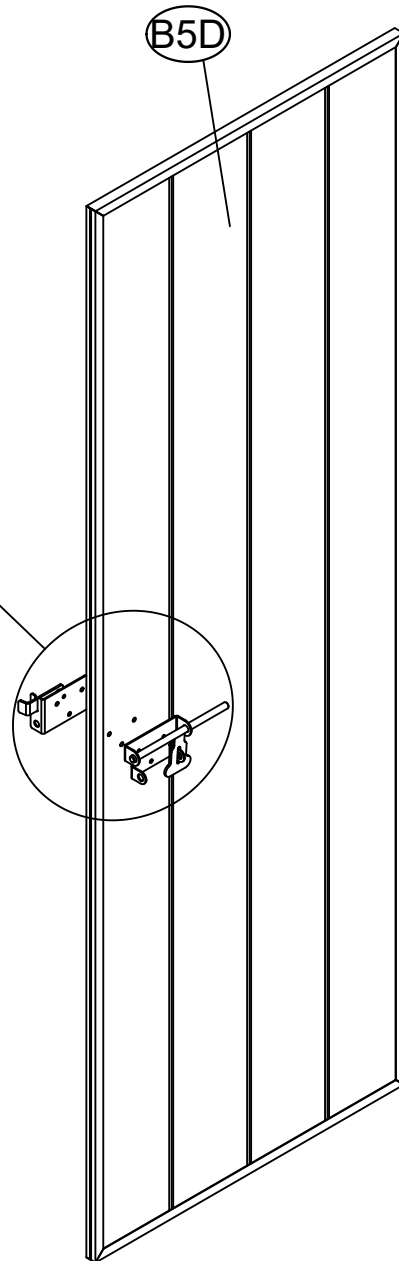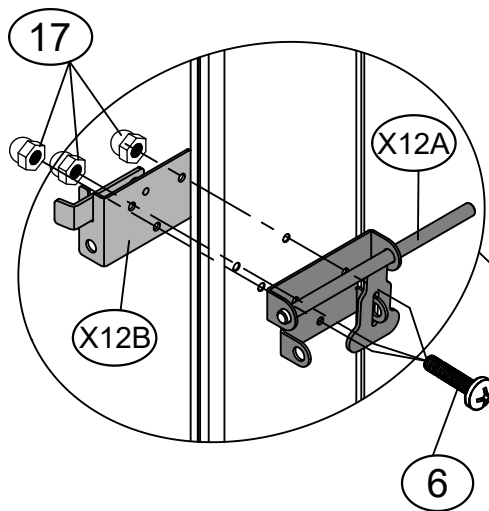




ST3.8x16

3


12x



X2

6x

<36>

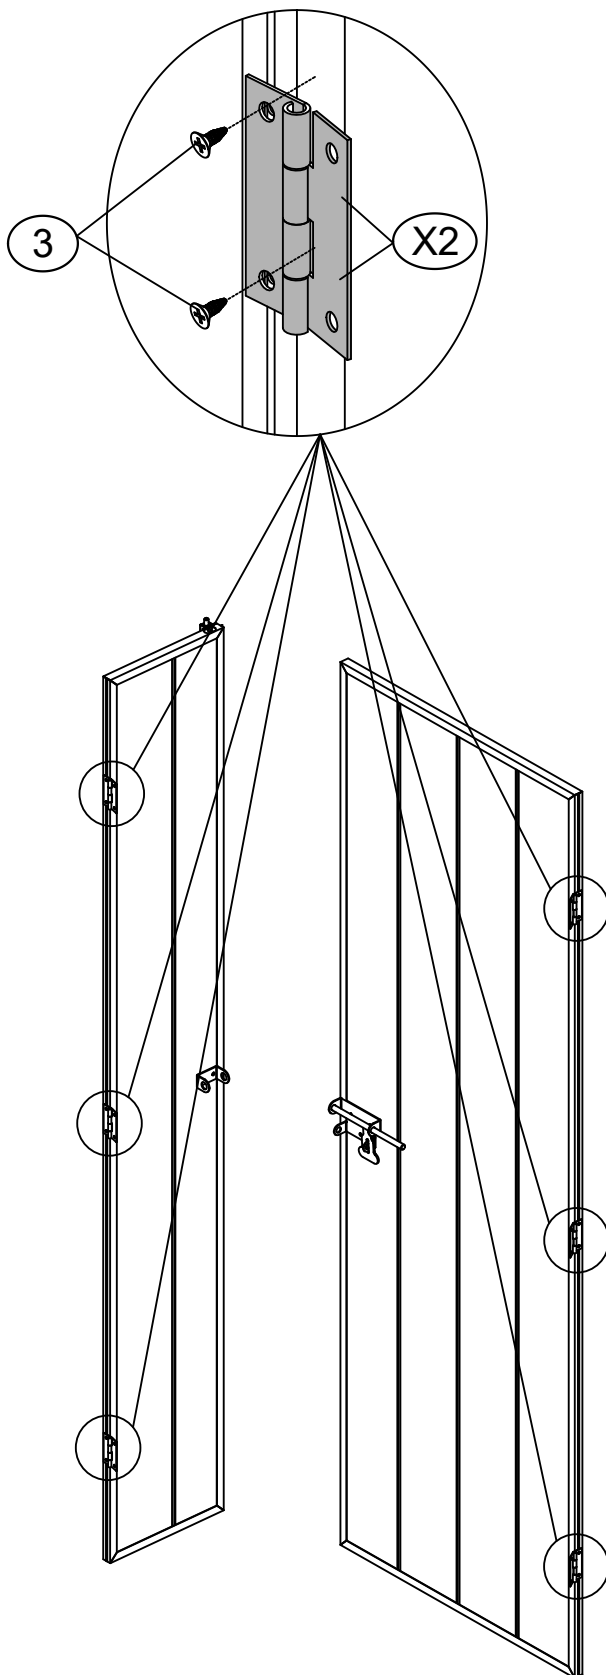



ST3.8x16


3

12x




SS


<37>

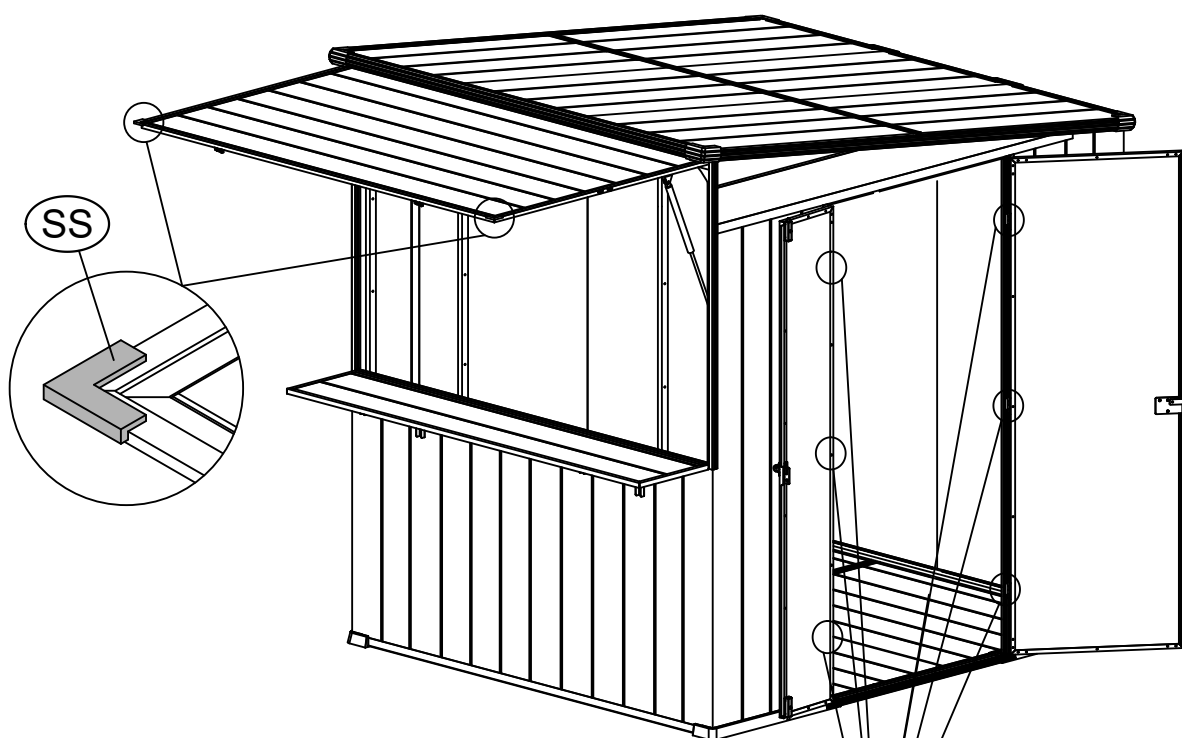

When assembling the left and right doors, one person holds the door alignment holes while the other person fixes the screws from bottom to top, completing the process step by step.

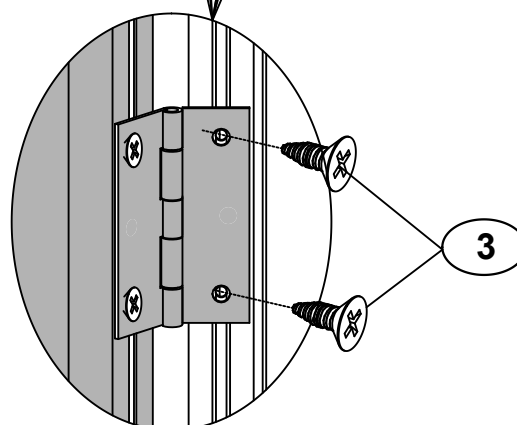

<38>



M8x80




6x

12



Y3

1x

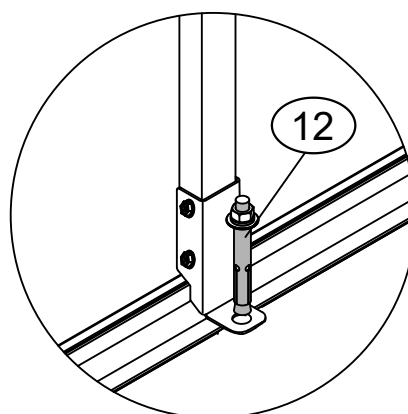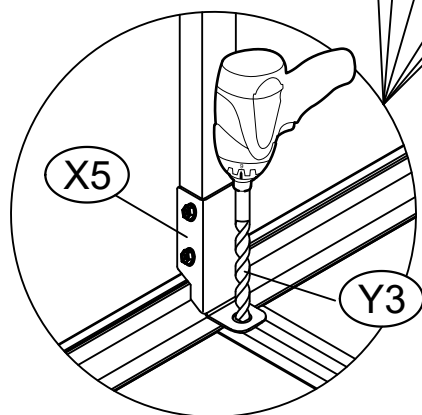
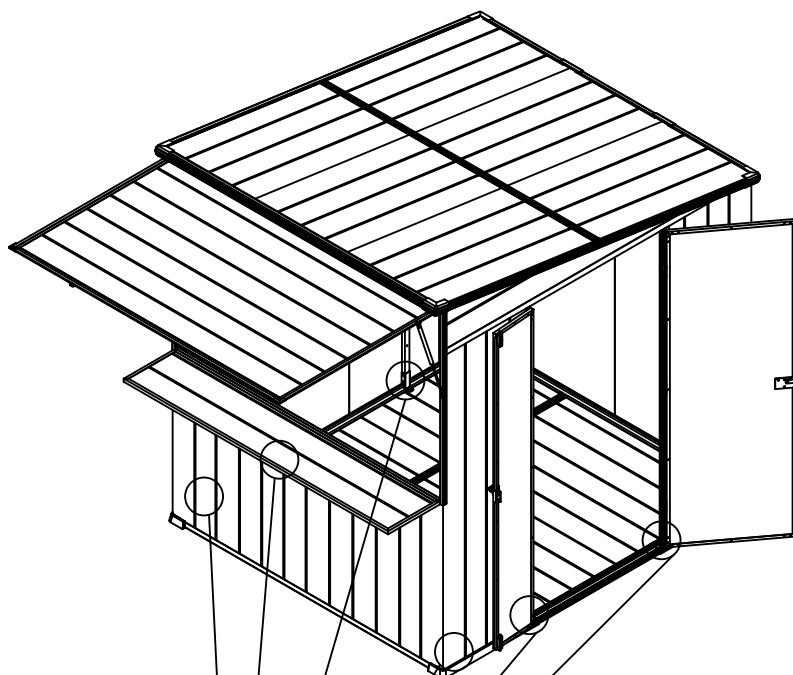


You need to prepare
your own electric drill
to assist in drilling.


SA

1x

<39>

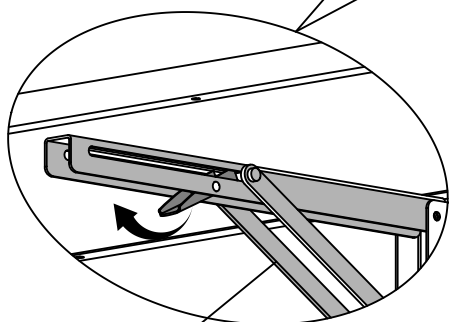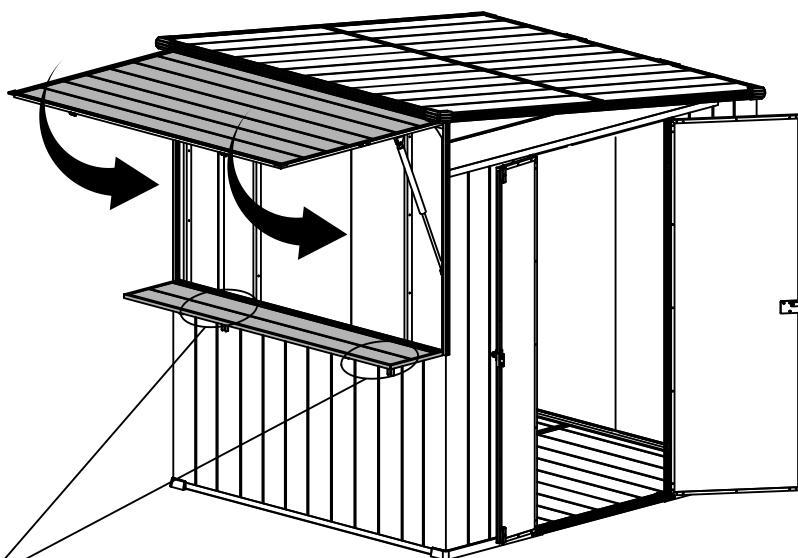


X7




Please make sure to retract the counter first and then close the window!!!

Press the #X7 lever upwards with both hands as shown in the picture, and the counter will be retracted. Push the overhang window inwards with both hands at the same time, and the window will close automatically.

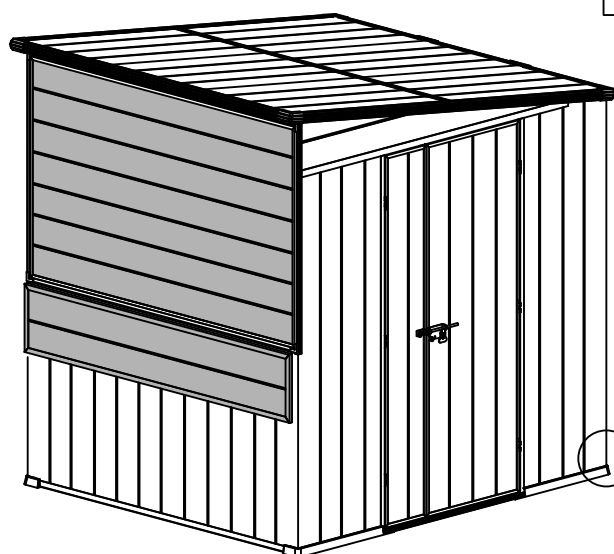

SA

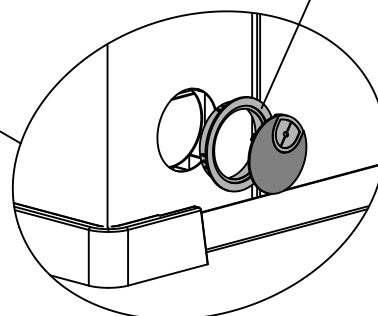

AFTER-SALE SERVICE

If you have any suggestions for our products or find that the products have quality problems, please contact us first, our after-sales team will reply you within 24 hours, and we will do our best to give you solutions until you are satisfied.

Guaranteed Customer Service

Your shopping experience is very important to us!
Feel unsatisfied? **Contact us!**
Have any questions? **Contact us!**

Wanna share your experience with our products?
Share your pictures with us.

Any suggestions? **Contact us!**
We gotcha back!