#### **NOTICE**

- \* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* If you are having difficulty, our friendly Customer Care team is always here to help.


Item Dimension: 47.24"Wx 29.92"Dx16.14"H

#### **PREPARATION**

- \*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \*If any part is missing or damaged, do not attempt to assemble the product.
- \*Estimated Assembly Time: 50 minutes.
- \*Tools Required for Assembly Required: Allen Key and Phillips Screwdriver.

#### **CARE AND MAINTENANCE**

- \* Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.
- \* Wipe spills immediately. Maintain with regular dusting and clean with mild soap and water, dry thoroughly and do not use a brass cleaner. Adhesive felt pads should always be used/applied in order to prevent damage to the furniture or surfaces on which the furniture is placed.

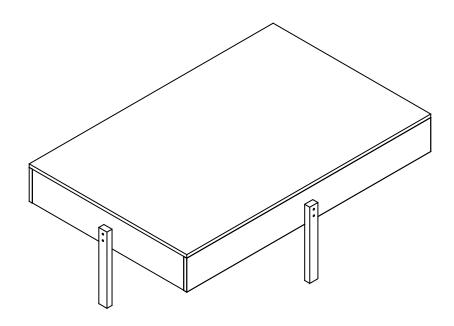


# **A** WARNING

Weight Capacity-275LBS
Warning:Do not stand on Table
Warning:Do not over torque bolts.

## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Side Panel		2X
В	Middle Panel		4X
С	Left/Right Side Panel		2X
D	Side Panel		2X
E	Top Panel		1X
F	Leg		4X
HW1	Cam Bolt		56X
HW2	Cam Lock		56X
HW3	Dowel		28X
HW4	Long Bolt (0.6X0.5X30mm)		8X
HW5	Adjuster	9	4X
HW6	Allen Key		1X
HW7	Sticker	0	56X

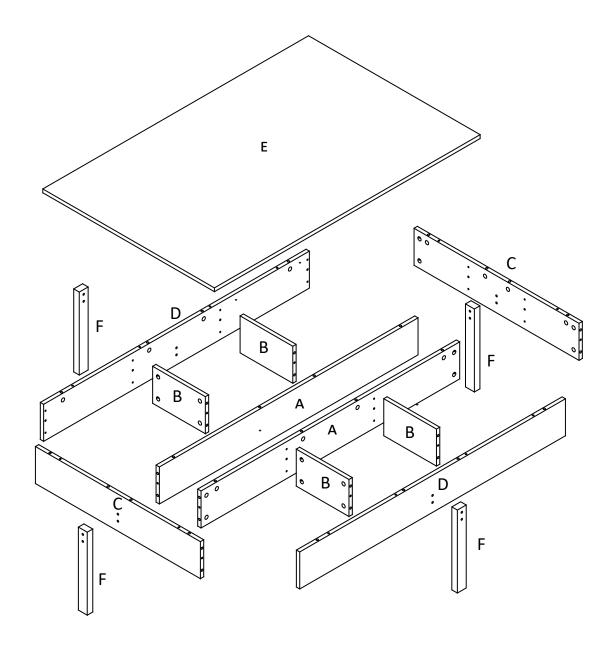


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 50 minutes.

Tools Required for Assembly: Phillips Screwdriver and Allen Keys. Phillips Screwdriver are not included, Allen Key included.

\* If you are having difficulty, our friendly Customer Care team is always here to help.

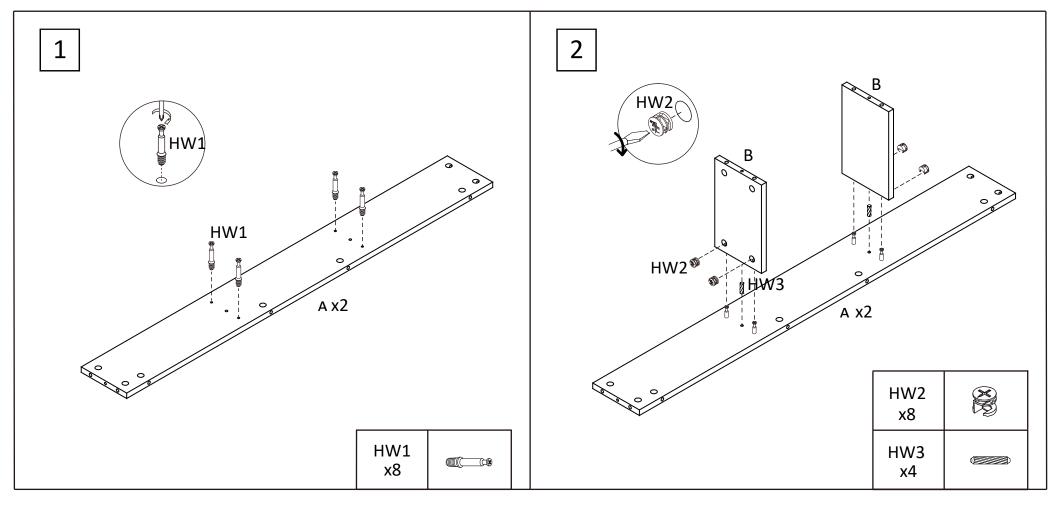

STEP1: Insert 8x cam bolts (HW1) into panel [A]. Tighten with a screwdriver.

STEP2: Attach panels [B] to panel [A] with 4X dowels (HW3) and secure with 8x cam lock (HW2). Tighten with a screwdriver.


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 50 minutes.

Tools Required for Assembly: Phillips Screwdriver and Allen Keys. Phillips Screwdriver are not included, Allen Key included.

\* If you are having difficulty, our friendly Customer Care team is always here to help.

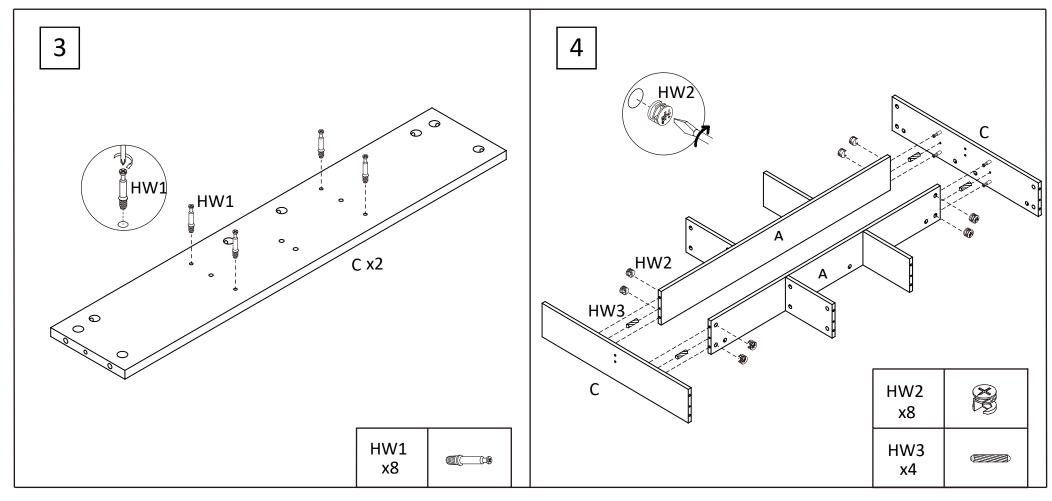

STEP3: Insert 8x cam bolts (HW1) into panel [C]. Tighten with a screwdriver. STEP4: Attach panels [C] to panels [A] with 4X dowels (HW3) and secure with 8x cam lock (HW2). Tighten with a screwdriver.


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 50 minutes.

Tools Required for Assembly: Phillips Screwdriver and Allen Keys. Phillips Screwdriver are not included, Allen Key included.

\* If you are having difficulty, our friendly Customer Care team is always here to help.

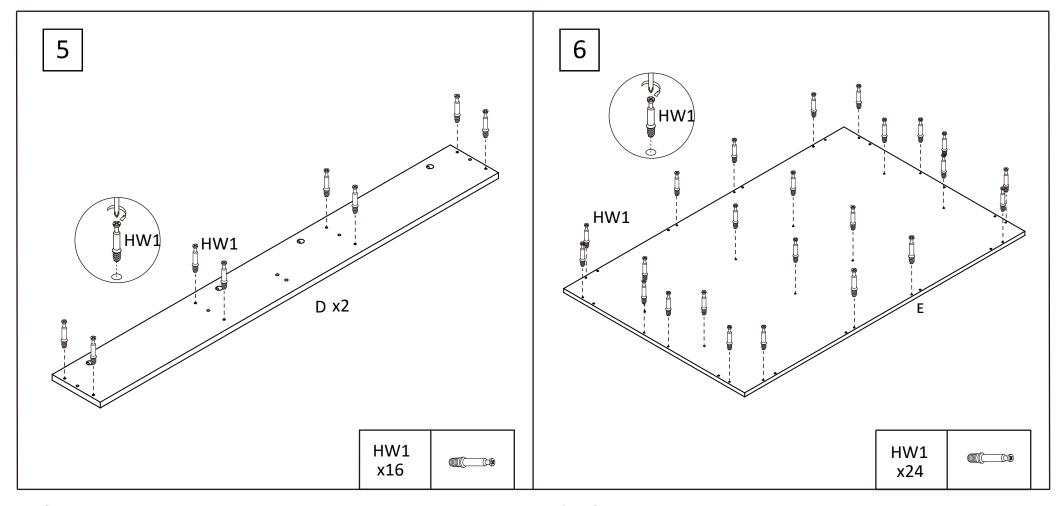

STEP5: Insert 16x cam bolts (HW1) into panel [D]. Tighten with a screwdriver. STEP6: Insert 24x cam bolts (HW1) into panel [E]. Tighten with a screwdriver.


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 50 minutes.

Tools Required for Assembly: Phillips Screwdriver and Allen Keys. Phillips Screwdriver are not included, Allen Key included.

\* If you are having difficulty, our friendly Customer Care team is always here to help.

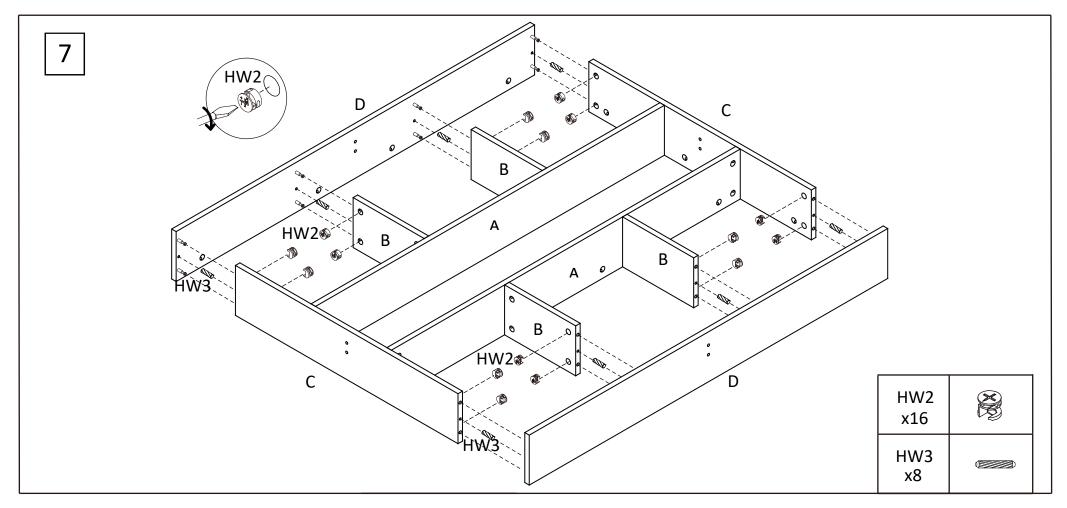

STEP7:

Attach panels [D] to panels [B] and [C] with 8X dowels (HW3) and secure with 16x cam lock (HW2). Tighten with a screwdriver.


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 50 minutes.

Tools Required for Assembly: Phillips Screwdriver and Allen Keys. Phillips Screwdriver are not included, Allen Key included.

\* If you are having difficulty, our friendly Customer Care team is always here to help.

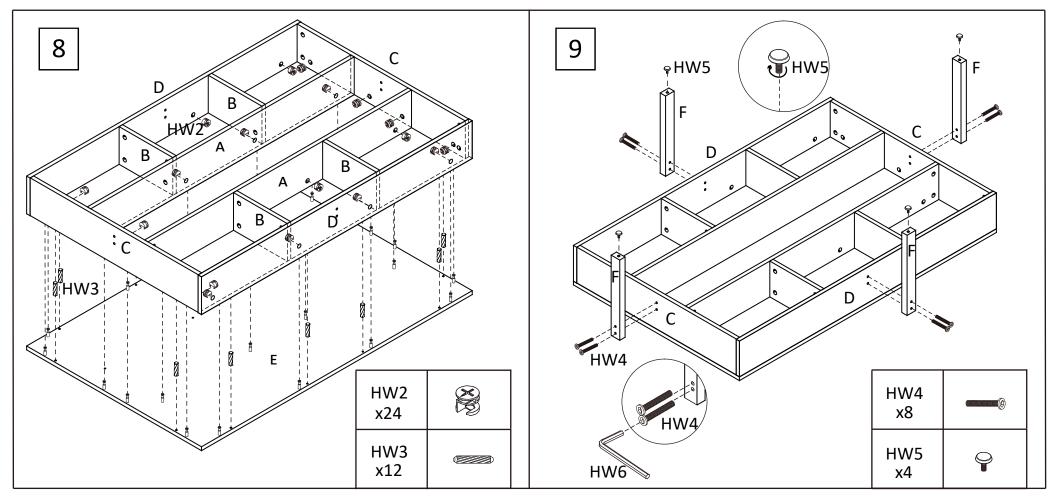

#### STEP8:

Attach panels [A], [C] and [D] to panel [E] with 12X dowels (HW3) and secure with 24x cam lock (HW2). Tighten with a screwdriver.

#### STEP9:

Attach 4x leg [F] to panels [C] and [D] secure with 8x Long bolt (HW4). Tighten with a Allen key. Attach 4x adjuster (HW5) to the ends of the legs [F] as shown.


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 50 minutes.

Tools Required for Assembly: Phillips Screwdriver and Allen Keys. Phillips Screwdriver are not included, Allen Key included.

\* If you are having difficulty, our friendly Customer Care team is always here to help.

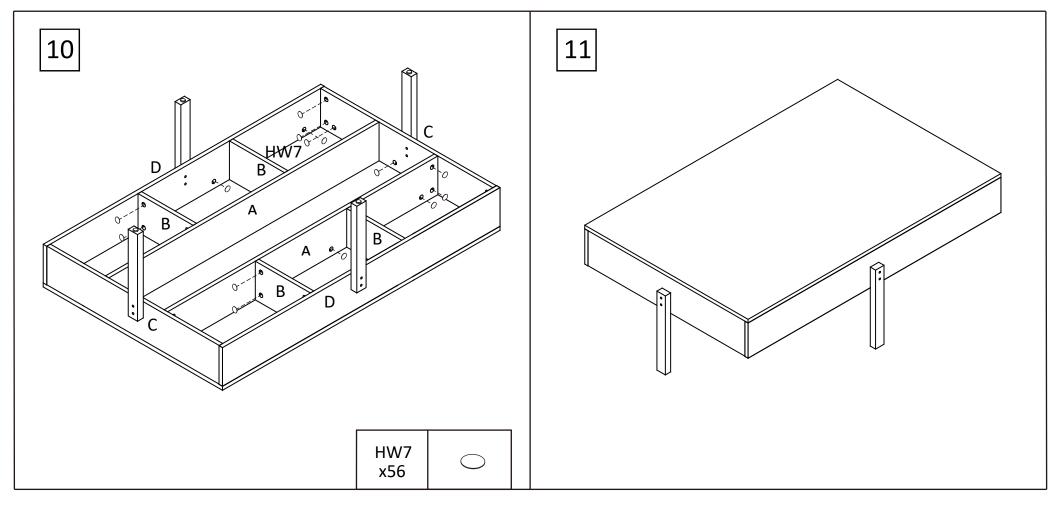

STEP10: Attach 56x stickers (HW7) to panels [A], [B], [C], [D]. STEP11: You're done, enjoy!