

## **Wooden Box Rail Sliding Hardware Set Quick Guide**

### **Parts included:**


LuBann aluminum track bifold door hardware kit set

### **Alder wooden box:**

1. Back board (3-3/16" H) + Top board (4" H) (pre-attached L shaped box);




2. aluminum track + mounting base

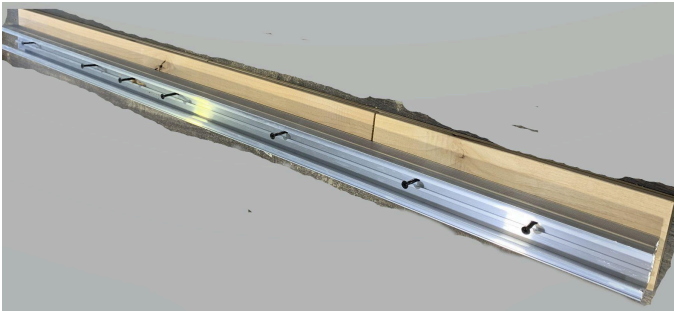

\* The aluminum track edge aligns with the outside edge of the top board in 1.

3. Front cover (3-3/16" H) + end boards (pre-attached)

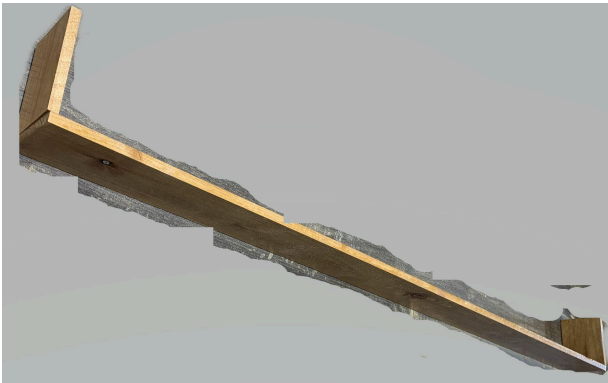

\* The end boards are attached with pin nails and can be removed with a small force (i.e. a mallet) if needed during the installation. To put back the end boards, wood glue may be used.

4. LuBann aluminum track bifold door hardware kit installation manual



## VALLEY BLVD TRADING AND INVESTMENT CO LTD

5199 Brooks St Ste Montclair CA 91763

(626)-258-9783      lubannus@gmail.com

Wooden box rail sliding hardware set is an add-on feature of LuBann aluminum track bifold door hardware kit set.

Please follow the LuBann aluminum track bifold door hardware kit installation manual for preparations of the bifold door for installation.

### **The door hinges are pre-installed for your convenience**

**Step 1:** mark the position of the backboard+top board L box on the wall above the opening.



The height of the boards is positioned on the wall so the bottom edge of the front alder wood board is 1/4" above the top of the bifold door for clearance.

**The bottom edge of the alder wood front board is 85-1/4" off the floor.**

1"(bottom gap) + door height (84") + 1/4"

**Please use at least 2-3/4" L drywall screws or wood screws (not provided) to attach the backboard into the studs inside the wall. Two or more screws are recommended for each stud.**

To make sure the backboard+top board is leveled on the wall.

**Step 2:** Install aluminum track + mounting base onto the top board by tightening the screws upward into the top board.



The aluminum track edge needs to align with the outside edge of the top board in 1.





## VALLEY BLVD TRADING AND INVESTMENT CO LTD

5199 Brooks St Ste Montclair CA 91763  
(626)-258-9783      lubannus@gmail.com

---

**Optional:** if two sets are set up to merge into one track, the two aluminum tracks need to be end to end without a gap.




**Step 3:** Install the bifold door onto the track (following the LuBann aluminum track bifold door hardware kit installation manual )

Make sure the bifold door is installed leveled and the door operation is good and as desired.

**Step 4:** attach the front cover+end boards to finish the wooden box using either pin nails or wood glue (not provided).

When bifold door opens/closes, the top of the door needs to clear of the bottom of the wooden box (the front cover)

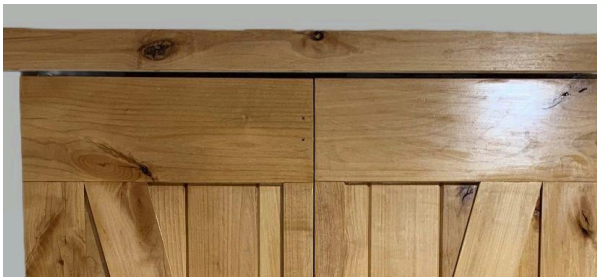

For questions and technical support: call **626-2589783** or email: **lubannus@gmail.com**