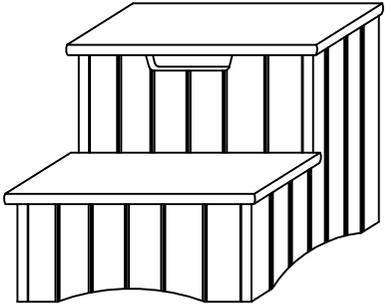


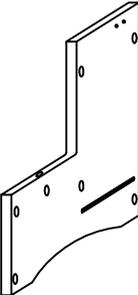
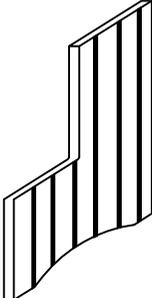
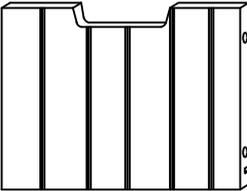
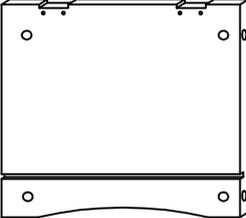




Assembly Instructions	Tools Required	Hardware Provided
<p data-bbox="481 231 672 255">Storage step stool</p> 	 <p data-bbox="1048 403 1391 443">Phillips screwdriver</p> <p data-bbox="1048 699 1368 810">Assembly:2 Adults are required to safely assemble this product.</p>	 <p data-bbox="1715 236 2040 260">B1 15SETS-Camlocks</p>  <p data-bbox="1715 419 1984 483">B2 2SETS-Hinges and screws</p>  <p data-bbox="1715 627 2051 691">B3 1SET-Safety Hinge and screws</p>

Furniture Parts

 <p data-bbox="253 1106 533 1137">A1 1PC-Top panel</p>	 <p data-bbox="618 1249 920 1281">A2 1PCS-Side panels</p>	 <p data-bbox="992 1249 1294 1281">A3 1PCS-Side panels</p>	 <p data-bbox="1350 1201 1675 1233">A4 1PC-Middle panel</p>	 <p data-bbox="1731 1217 2022 1249">A5 1PC-Back panel</p>
 <p data-bbox="241 1433 544 1465">A6 1PC-Front panel</p>	 <p data-bbox="678 1417 1003 1449">A7 1PC-Bottom panel</p>	 <p data-bbox="1178 1433 1451 1465">A8 1PC-Low Top</p>		


Step 1

Assemble the front panel A6, the middle panel A4 and the back panel A5 to the side panel A2 using camlocks B1.

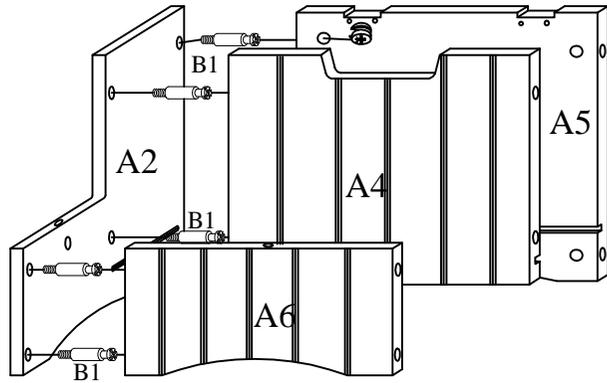


Step 2

Insert the bottom panel A7 into the grooves of middle panel A4 and back panel A5.

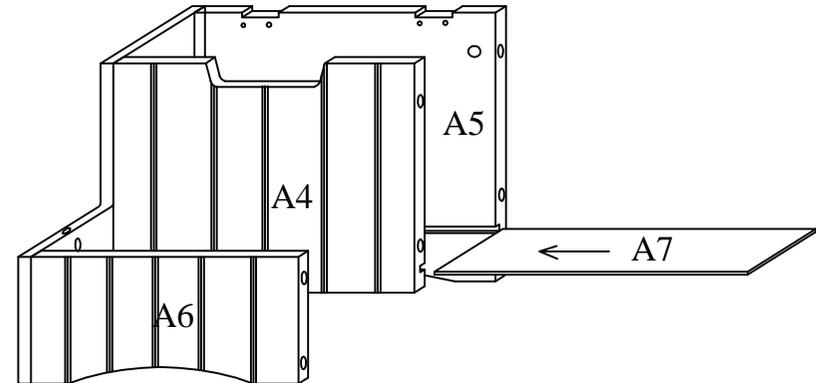


Step 3

Assemble the side panel A3 to the front panel A6, the middle panel A4 and the back panel A5 using camlocks B1 .

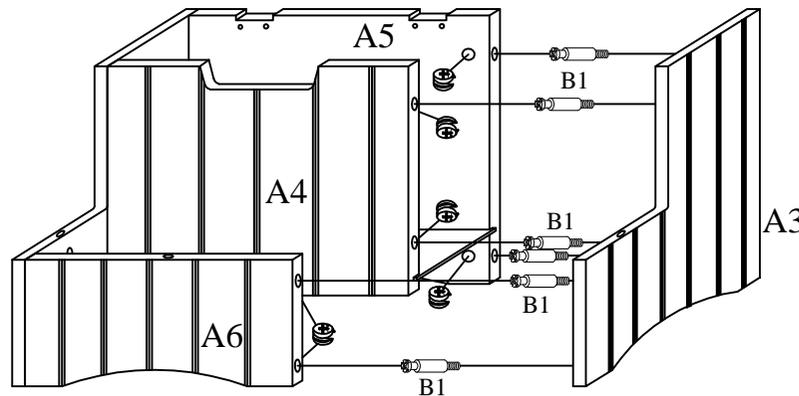

Step 4

1. Assemble the low top A8 onto the side panels A2,A3 and front panel A6 using camlocks B1.
2. Attach the hinges B2 to the top of back panel A5.

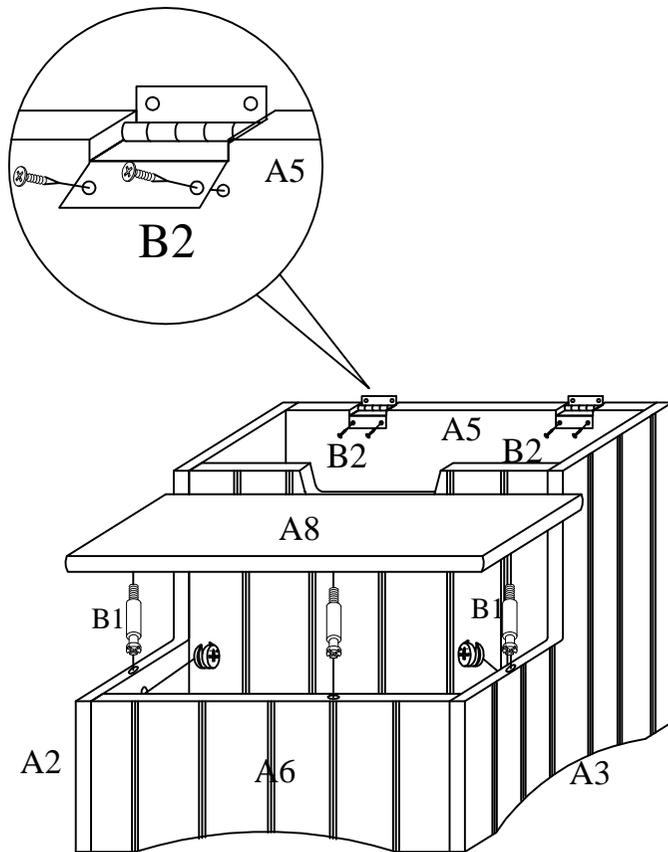

Step 5

1. Connecting the top panel A1 to the back panel A5 using hinges B2.
2. Assemble the safety hinge B3 to the top panel A1 and the side panel A2.

Warning: The Maximum Load of the top panel is 200lbs.

