





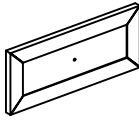
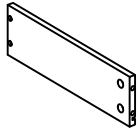
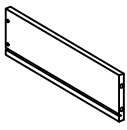









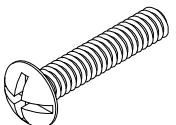

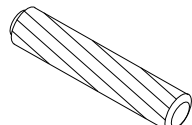


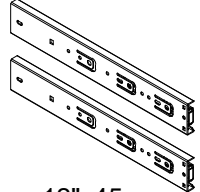











PRODUCT PARTS:


A	B	C	D	E	F
					
1PC	1PC	1PC	2 PCS	1PC	1PC
G	H	I	J	K	L
					
1PC	1PC	1PC	1PC	1PC	1PC
M	N	O	P	Q	R
					
1PC	1PC	1PC	1PC	1PC	1PC

HARDWARE:

①	②	③	④	⑤	⑥
					
1/4"x25mm	Ø4x25mm	Ø8x30mm	Ø6x30mm		12"x45mm
14+1 PCS	4 PCS	18+1 PCS	12+1 PCS	2 PCS	1 SET
⑦	⑧	⑨	⑩	⑪	⑫
					
Ø6x33mm	Ø15x9mm	5/32"x18mm	Ø3x10mm	Ø4x12mm	
18+1 PCS	18+1 PCS	2 PCS	12+1 PCS	12+1 PCS	2 PCS
⑬	⑭				
					
Ø3x12mm	20x20x33mm				
8 PCS	2 PCS				


STEP 1

- ③  8pcs
Ø8x30mm

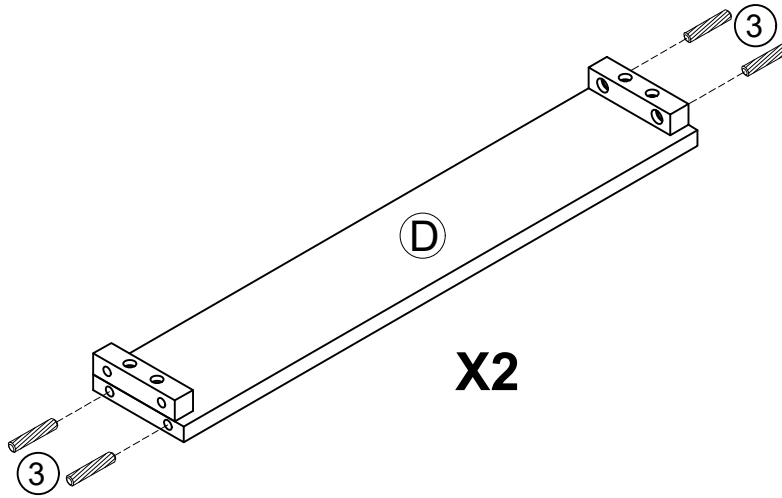


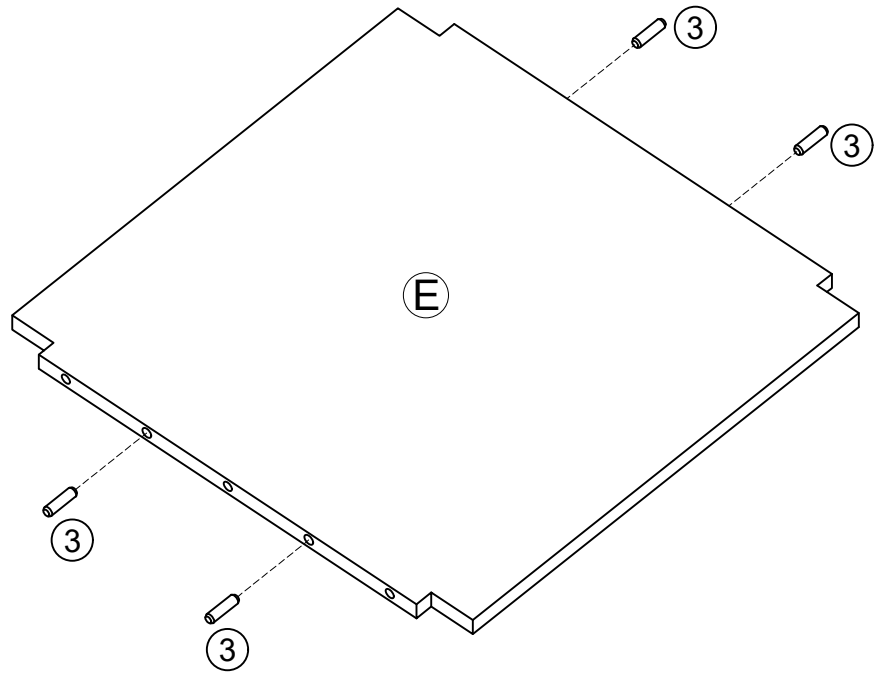
STEP 2

- ③  2pcs
Ø8x30mm
- ⑬  4pcs
Ø3x12mm
- ⑭  2pcs
20x20x33mm

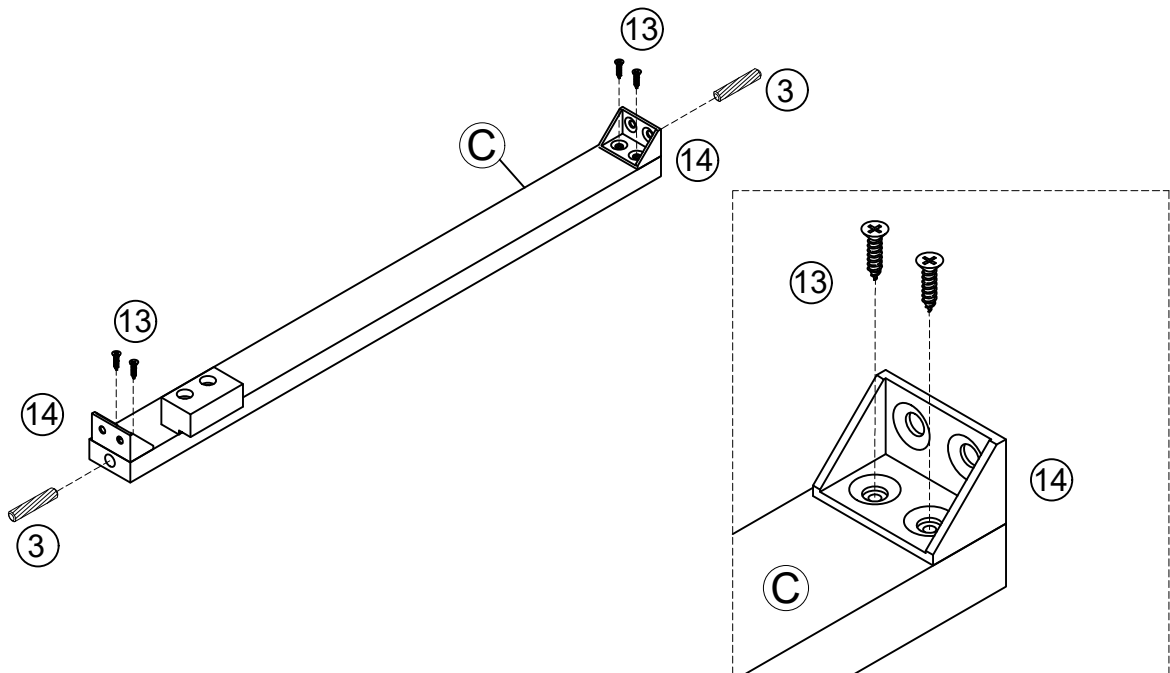



STEP 3

③  4pcs
Ø8x30mm




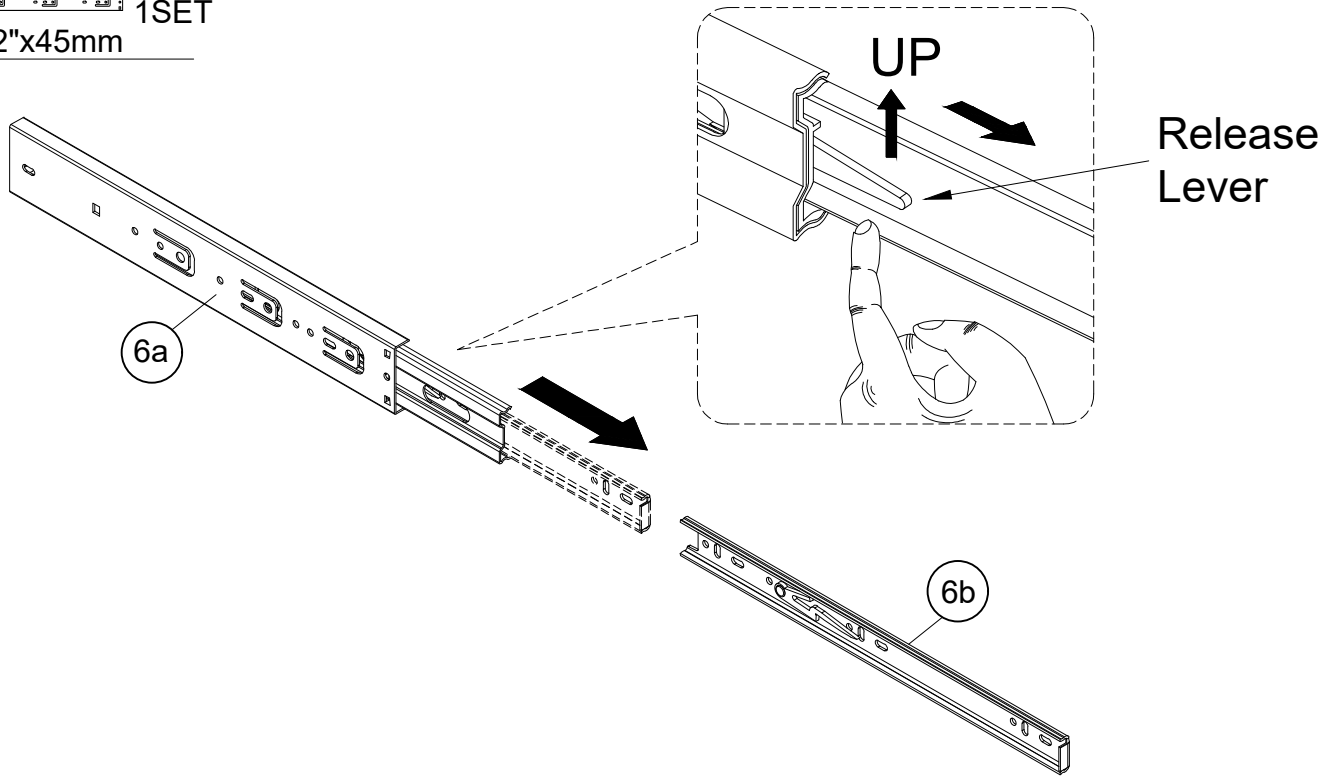
STEP 4

③  4pcs
Ø8x30mm

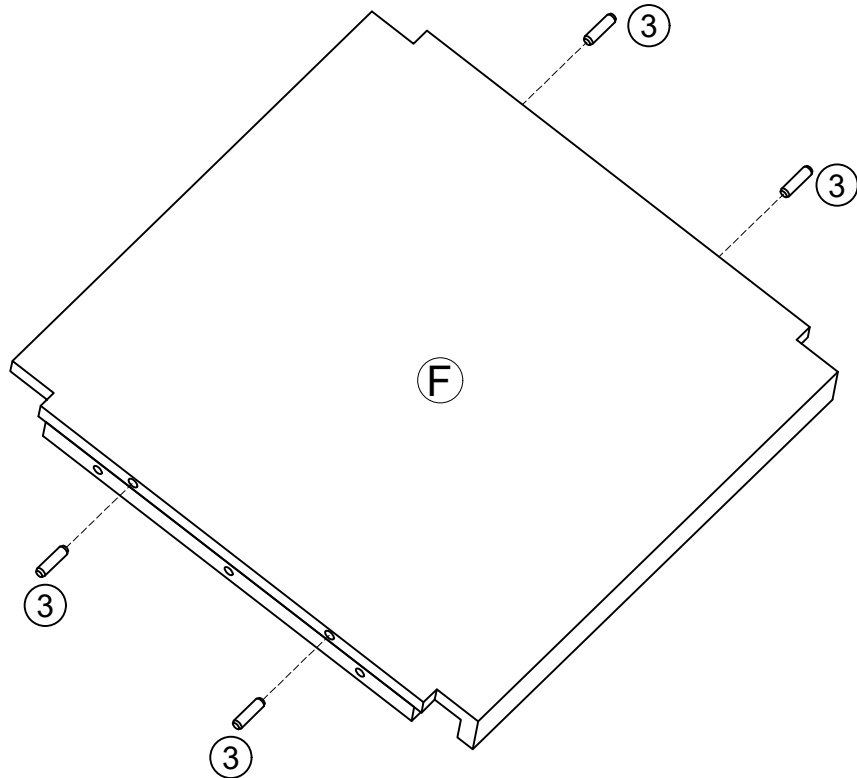


STEP 5

⑥  1SET
12"x45mm




STEP 6

⑥a  12"x45mm

⑩  3pcs
Ø3x10mm

⑦  3pcs
Ø6x33mm

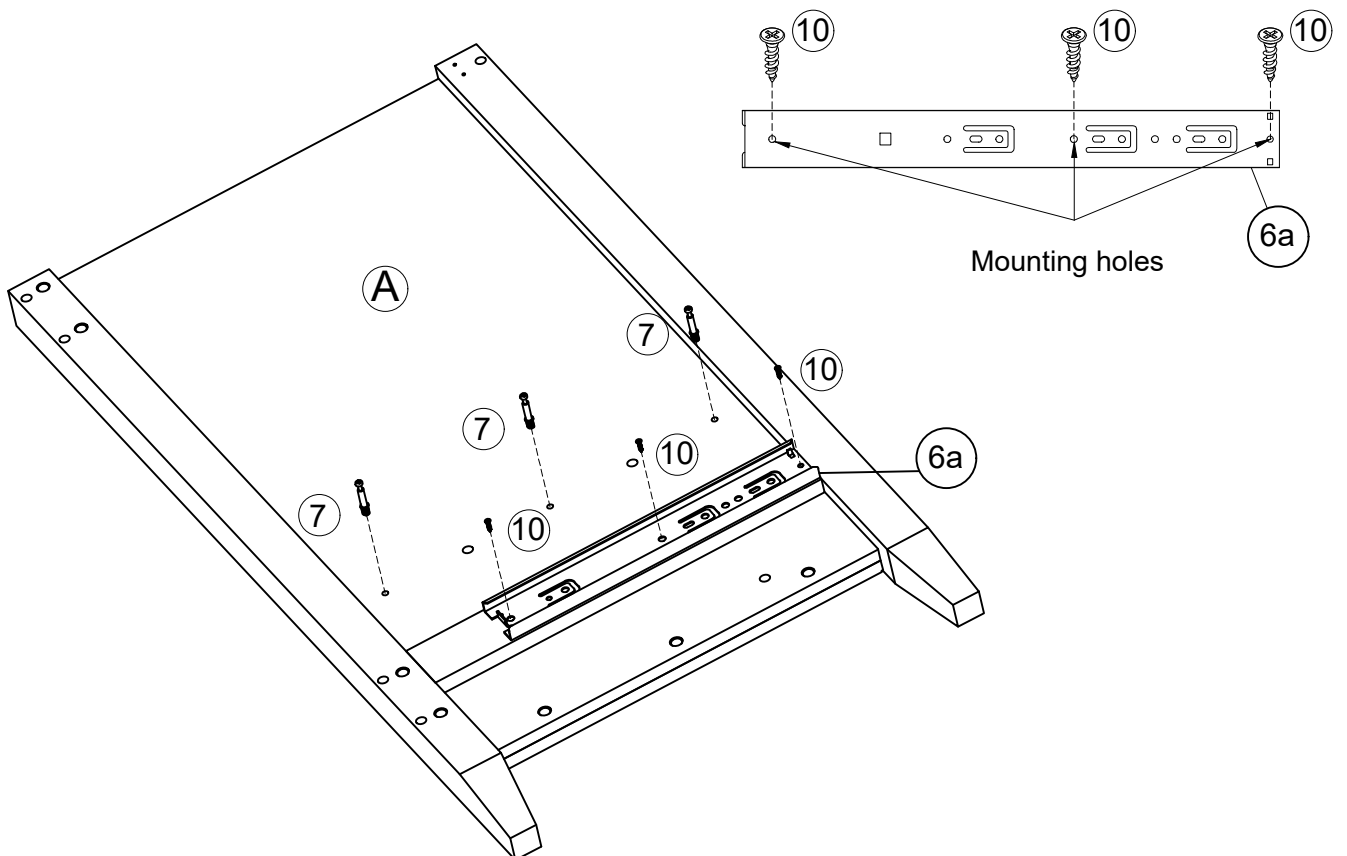


STEP 7

6a 12"x45mm

10 Ø3x10mm 3pcs


7 Ø6x33mm 3pcs

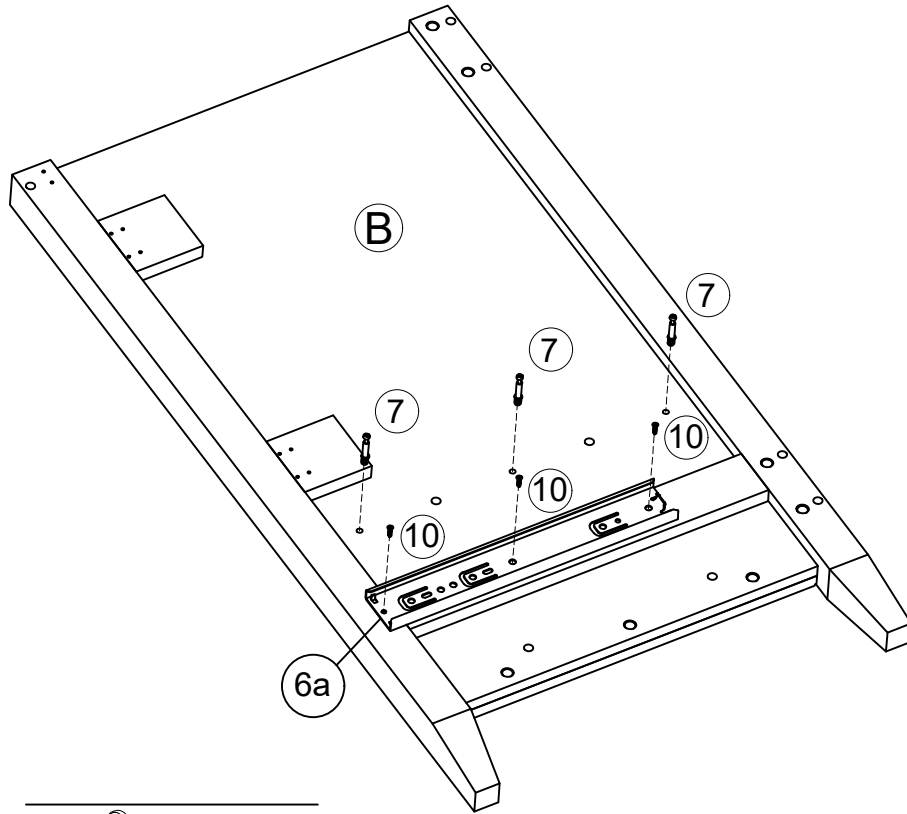



STEP 8


1 1/4"x25mm 4pcs

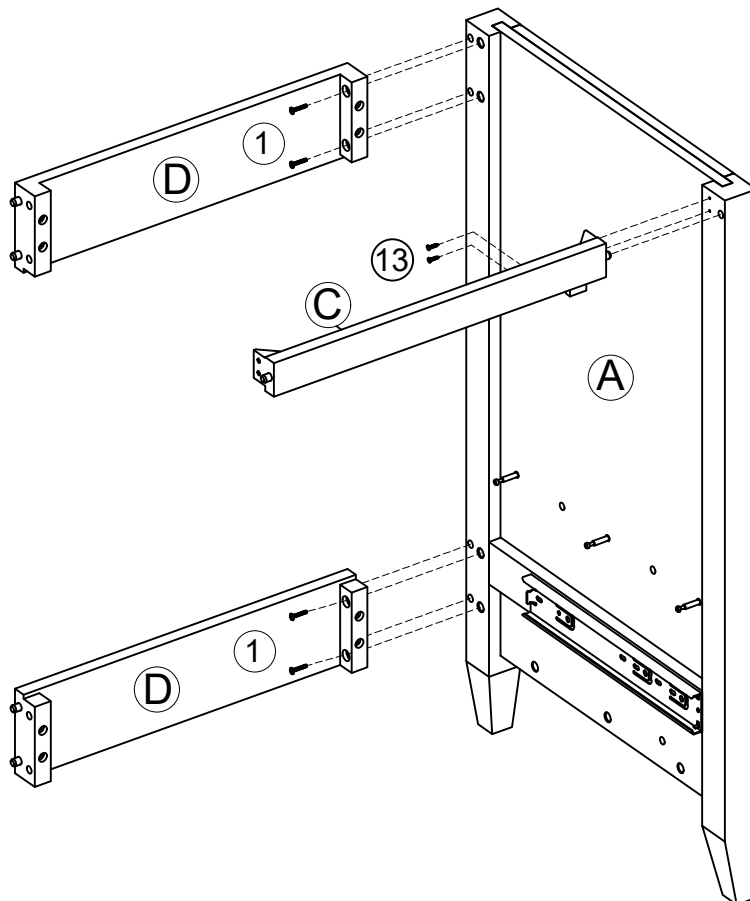13 Ø3x12mm 2pcs






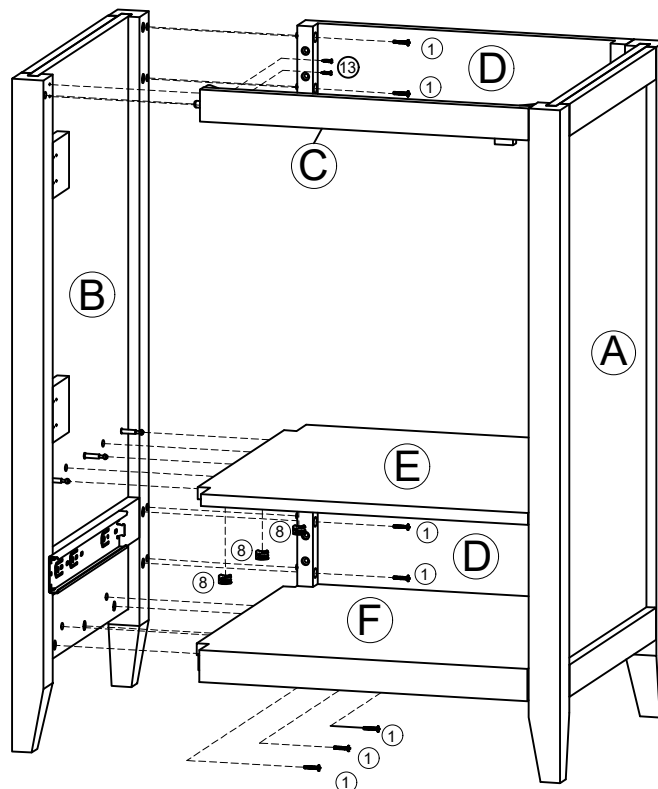
STEP 9

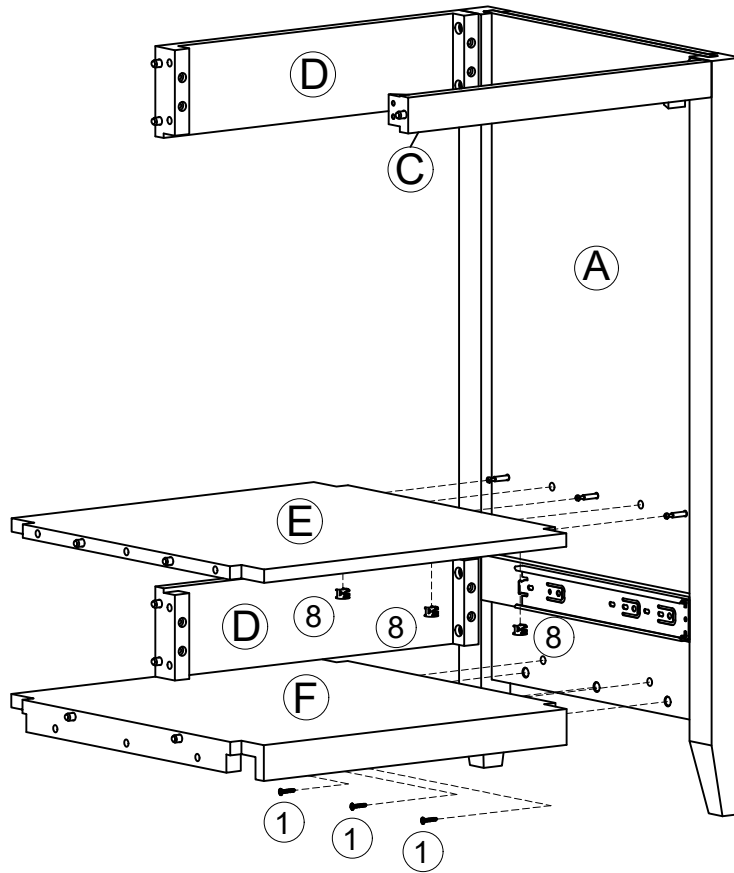- ①  3pcs 1/4"x25mm
- ⑧  3pcs Ø15x9mm







STEP 10



- ①  7pcs 1/4"x25mm
- ⑧  3pcs Ø15x9mm
- ⑬  2pcs Ø3x12mm




STEP 11

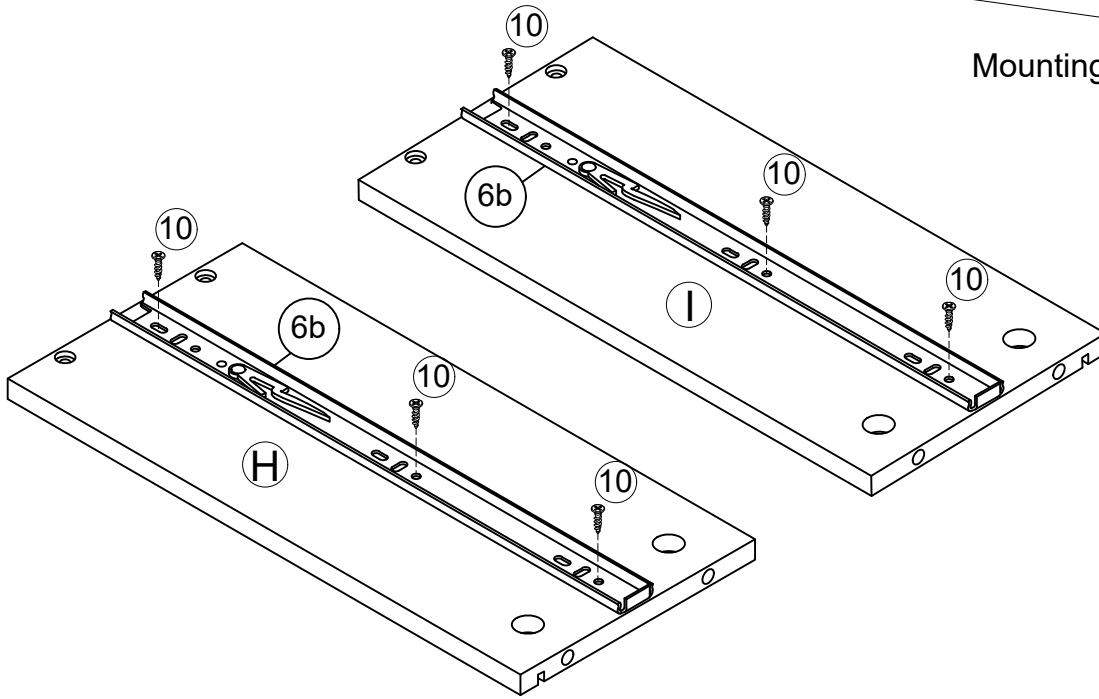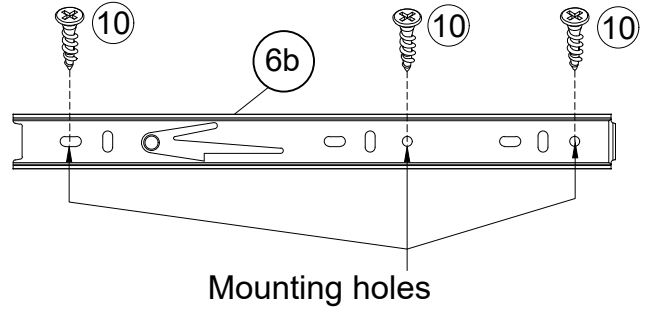


STEP 12

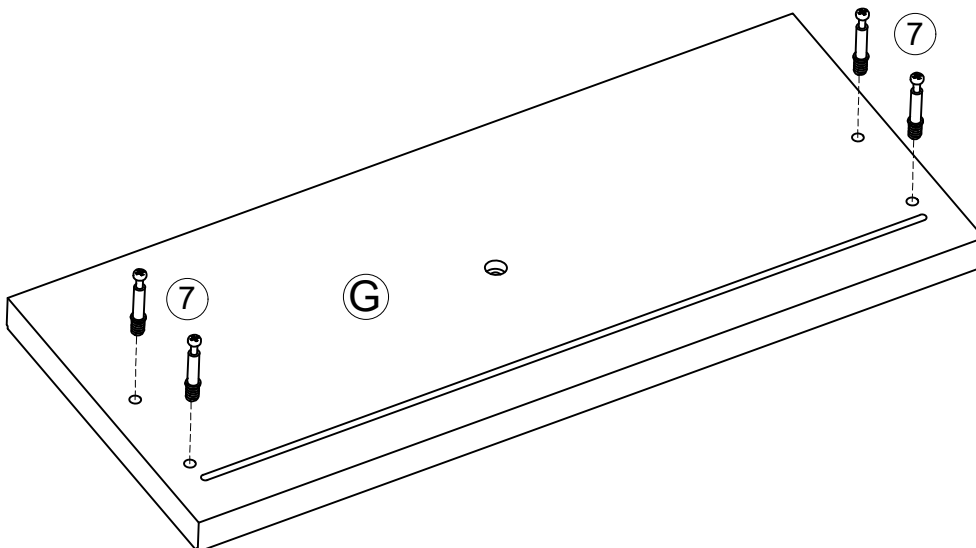


STEP 13



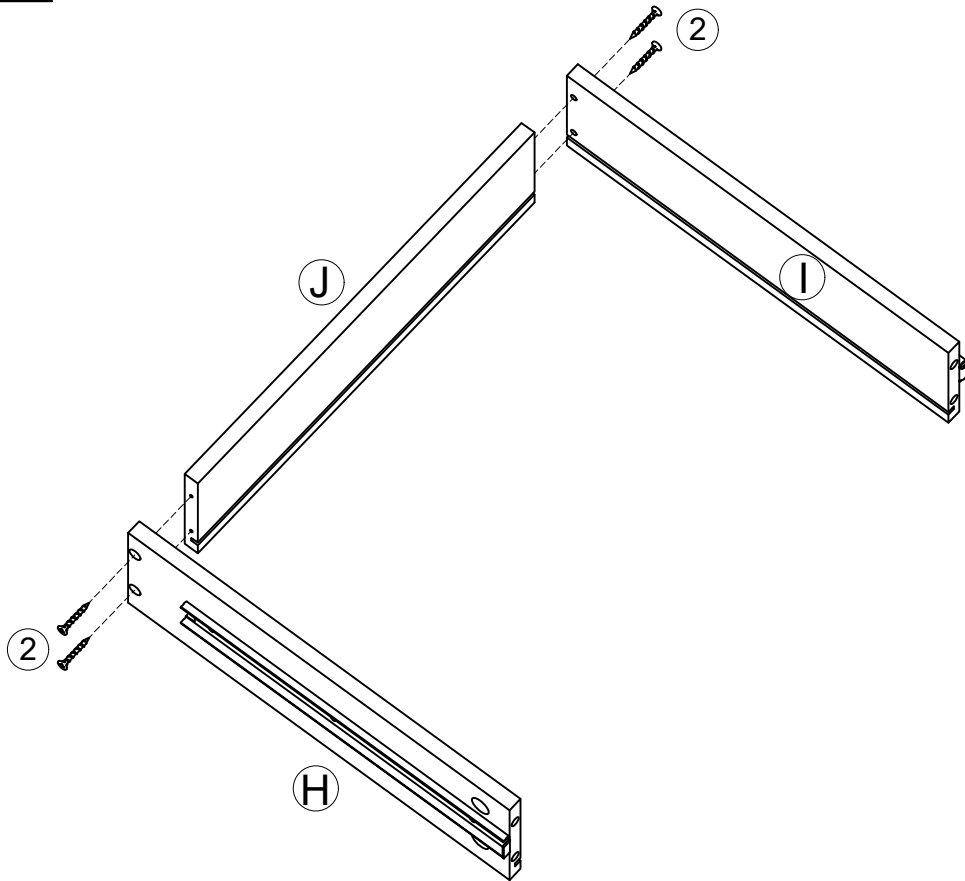
②  4pcs
Ø4x25mm

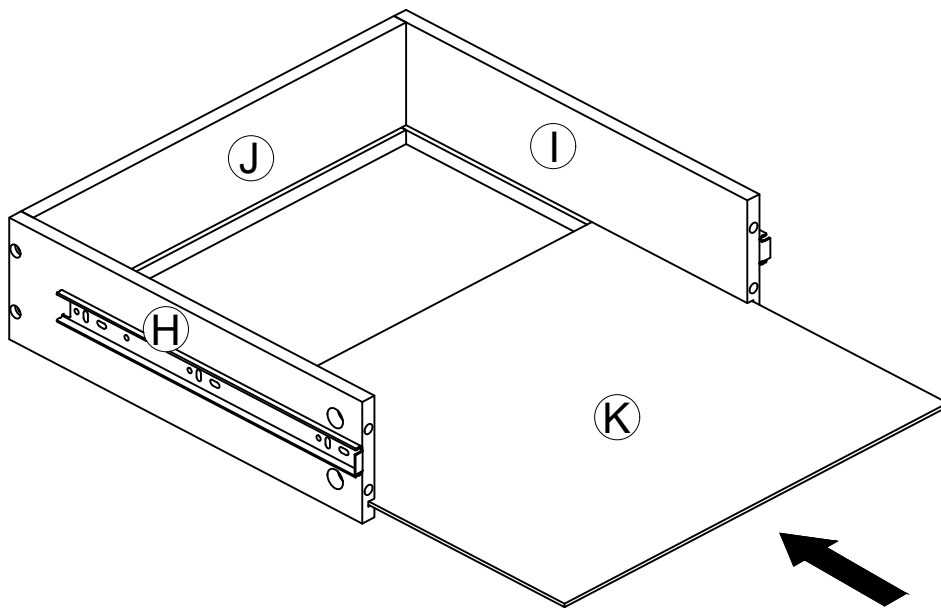


STEP 14







STEP 15


- ⑧  4pcs $\text{Ø}15 \times 9 \text{mm}$
⑨  1pc $5/32" \times 18 \text{mm}$
⑫  1pc

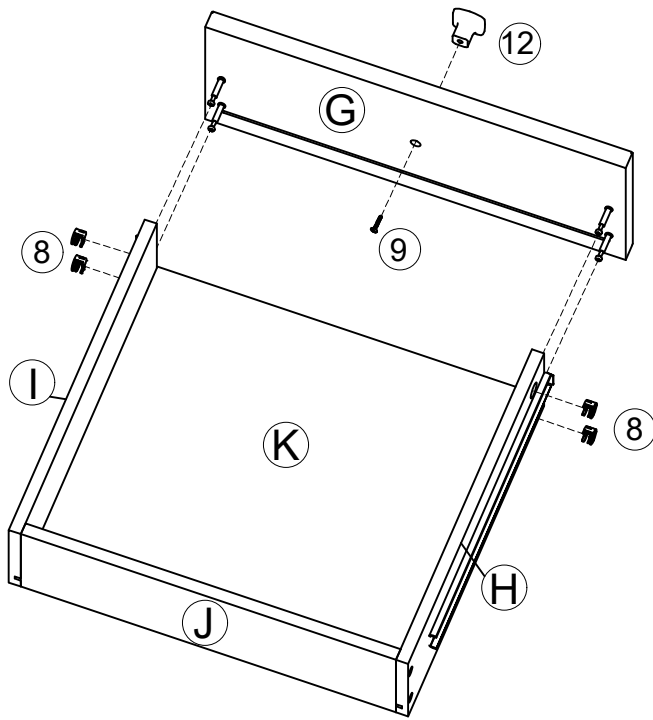



STEP 16

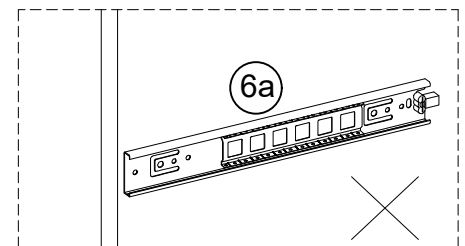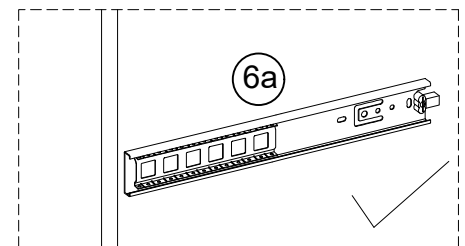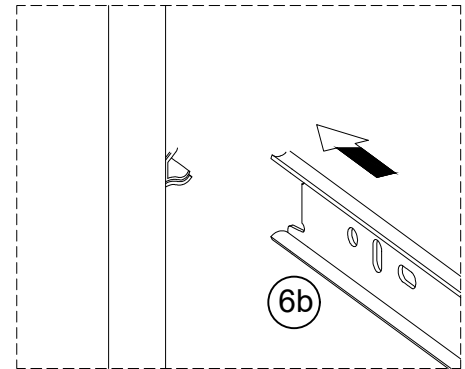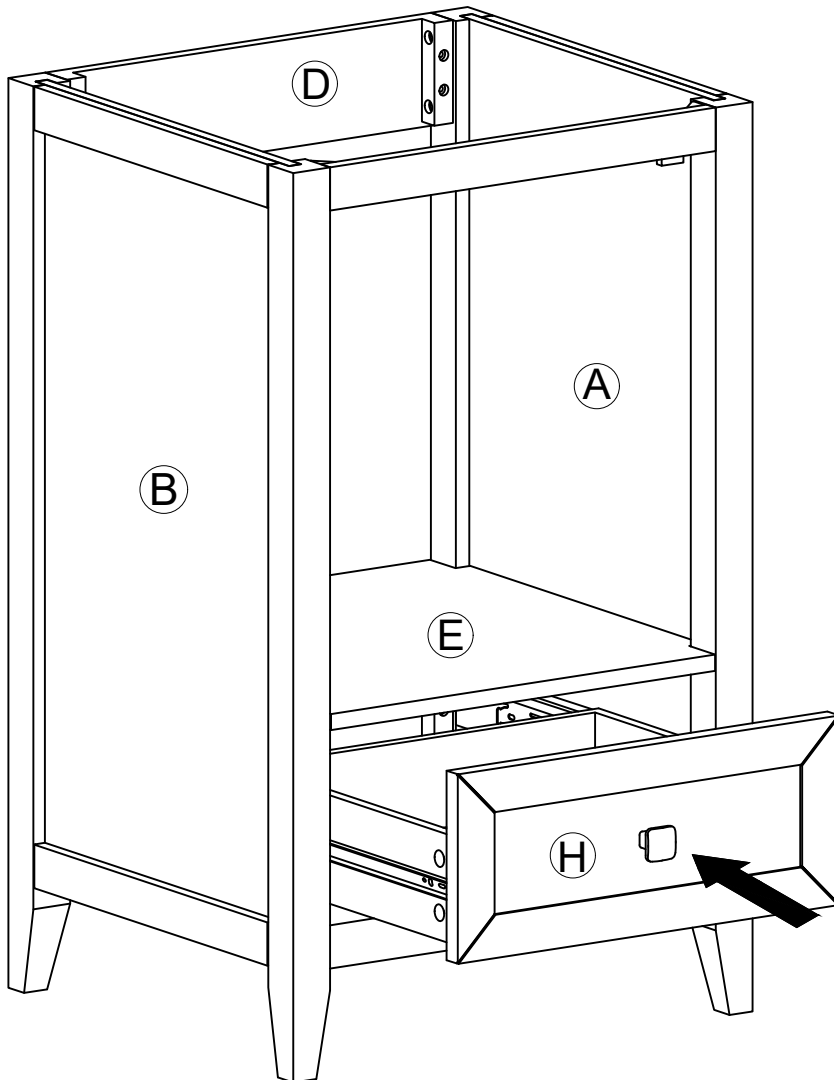


STEP 17


④  4pcs
Ø6x30mm

⑦  4pcs
Ø6x33mm

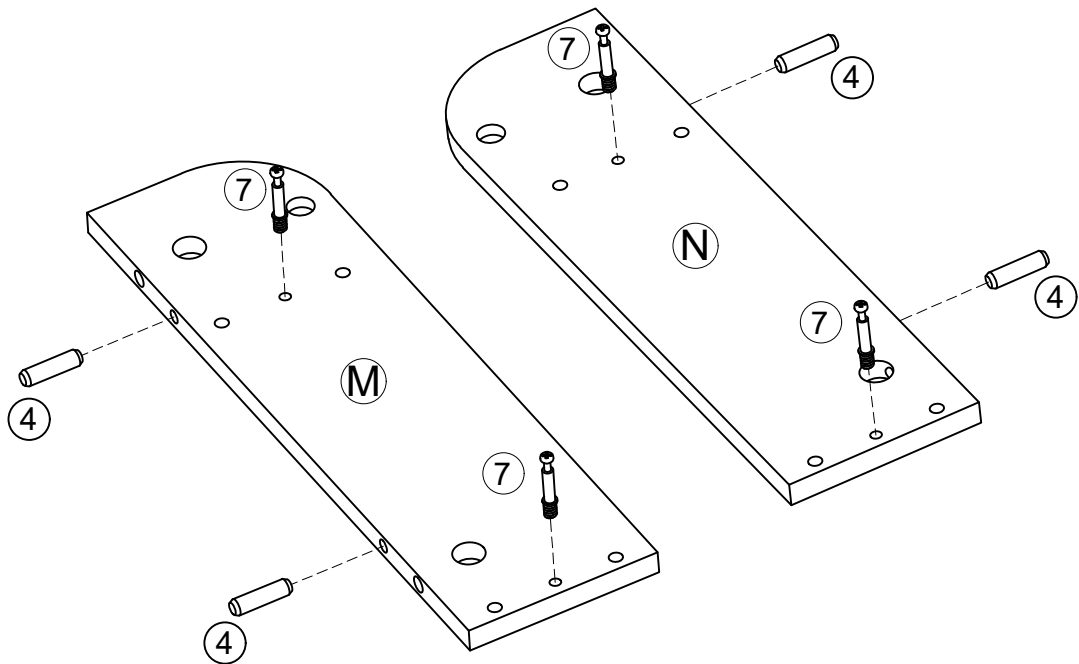


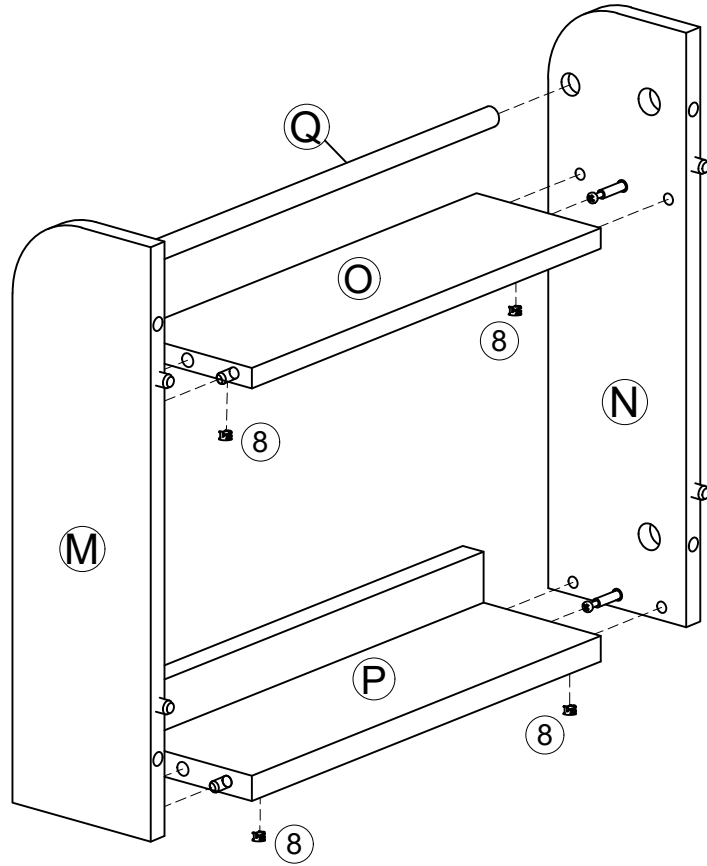
STEP 18

④  8pcs
Ø6x30mm


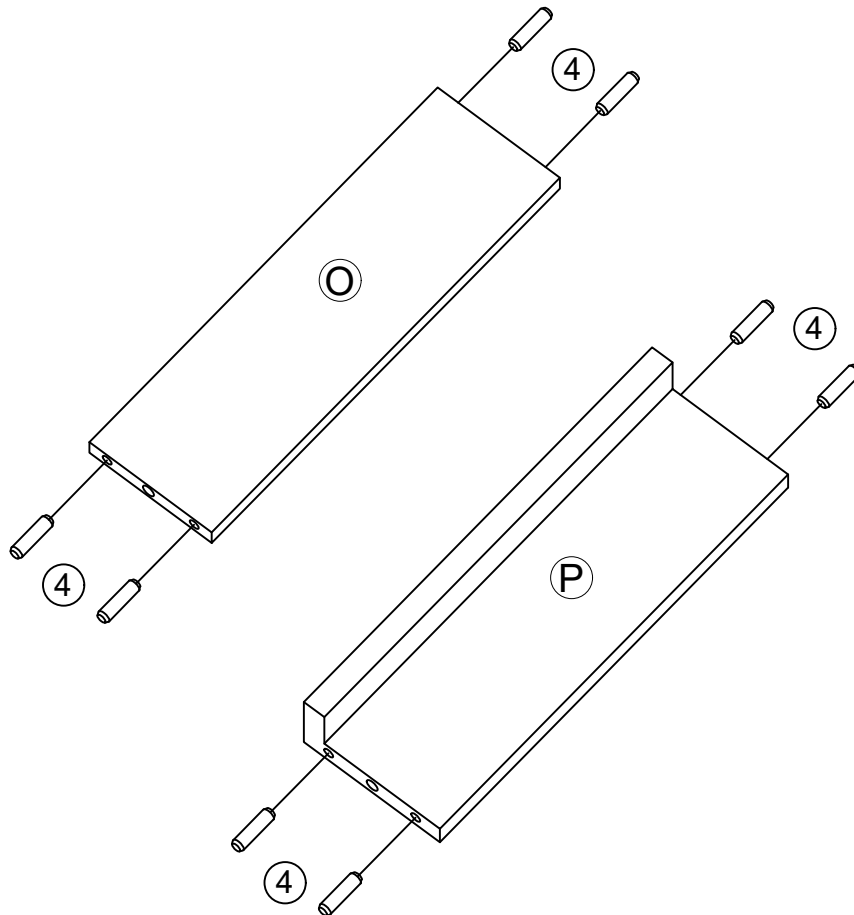



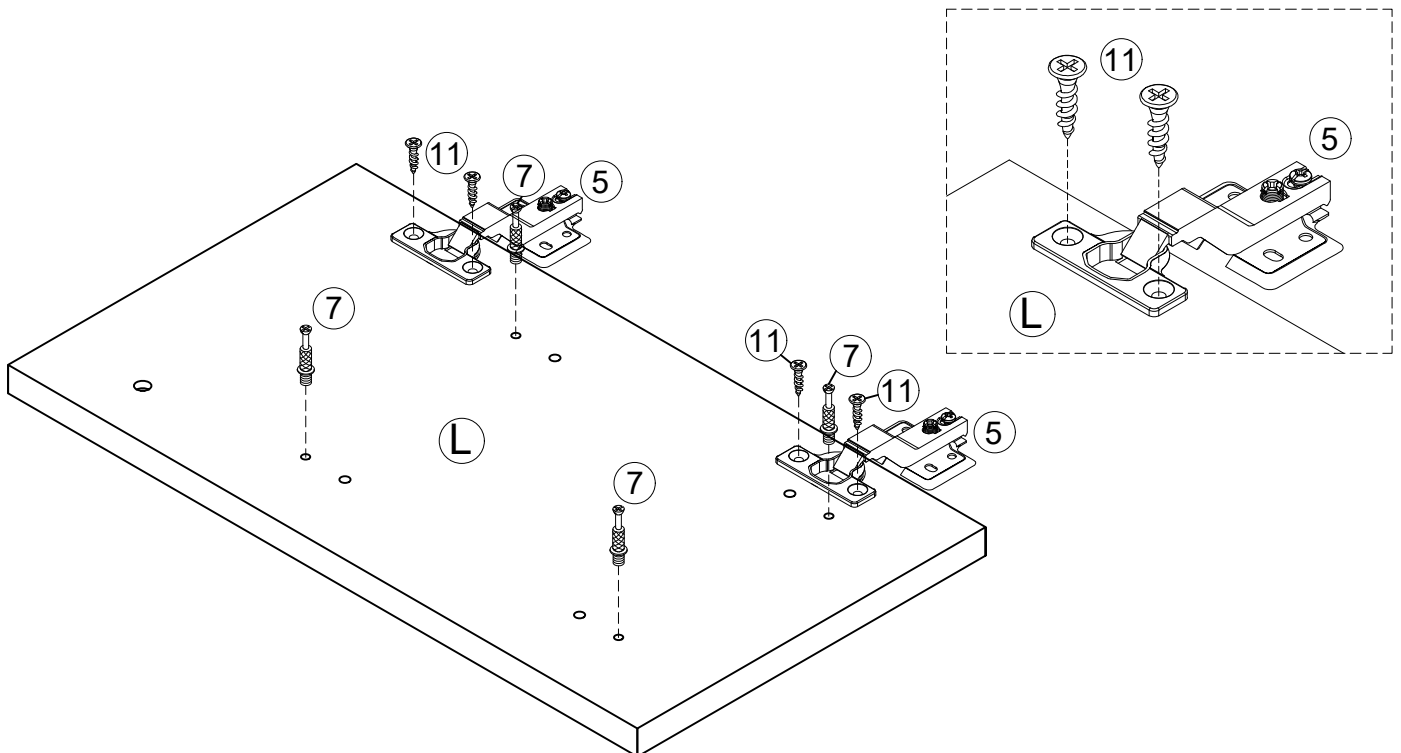
STEP 19

- ⑧  4pcs
Ø15x9mm




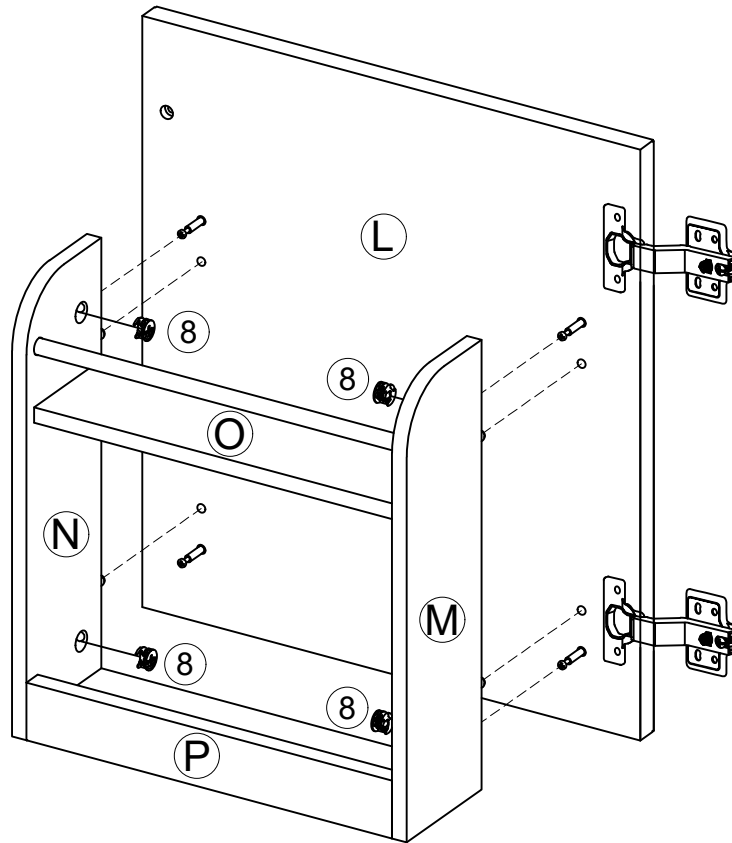
STEP 20

- ⑤  2pcs
⑦  4pcs
Ø6x33mm
⑪  4pcs
Ø4x12mm



STEP 21

⑧  4pcs
 Ø15x9mm






STEP 22



⑪  8pcs
 Ø4x12mm

Three-way adjustable hinge for perfectly aligned doors


1. TO ADJUST DOOR FORWARD OR BACKWARD.
2. TO ADJUST DOOR TO RIGHT OR TO LEFT.
3. TO ADJUST DOOR UP OR DOWN.

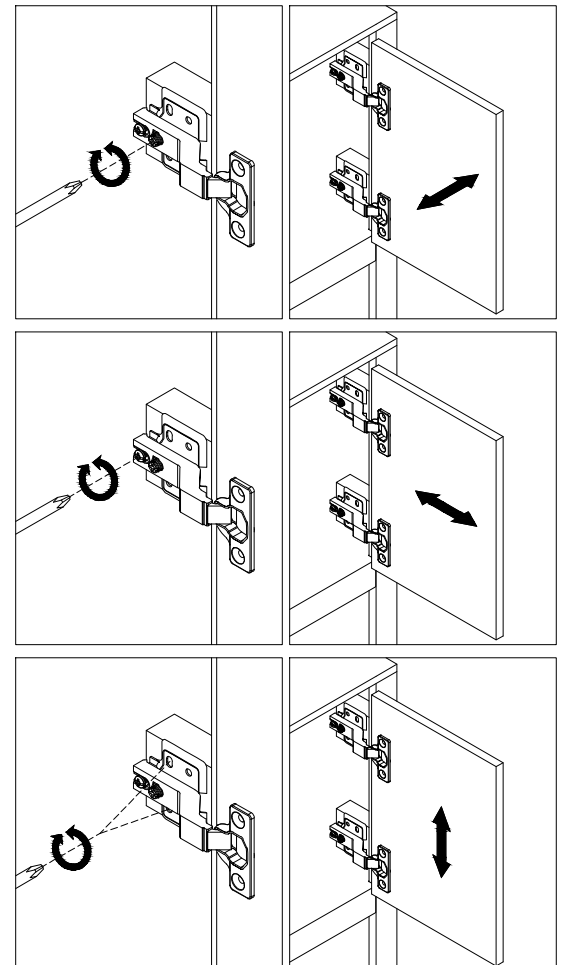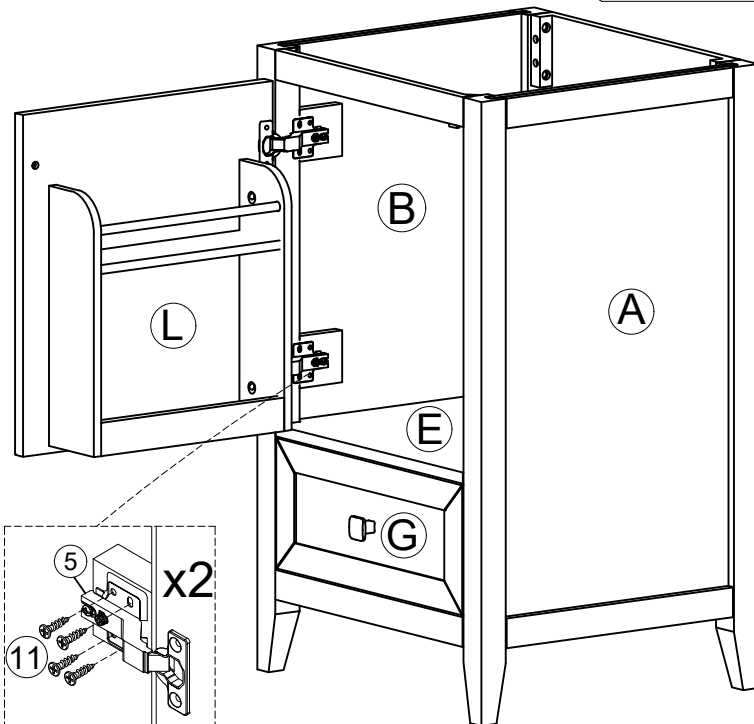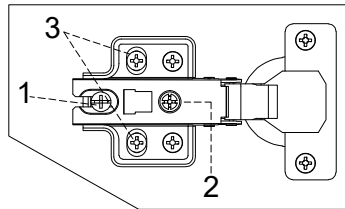

STEP 23

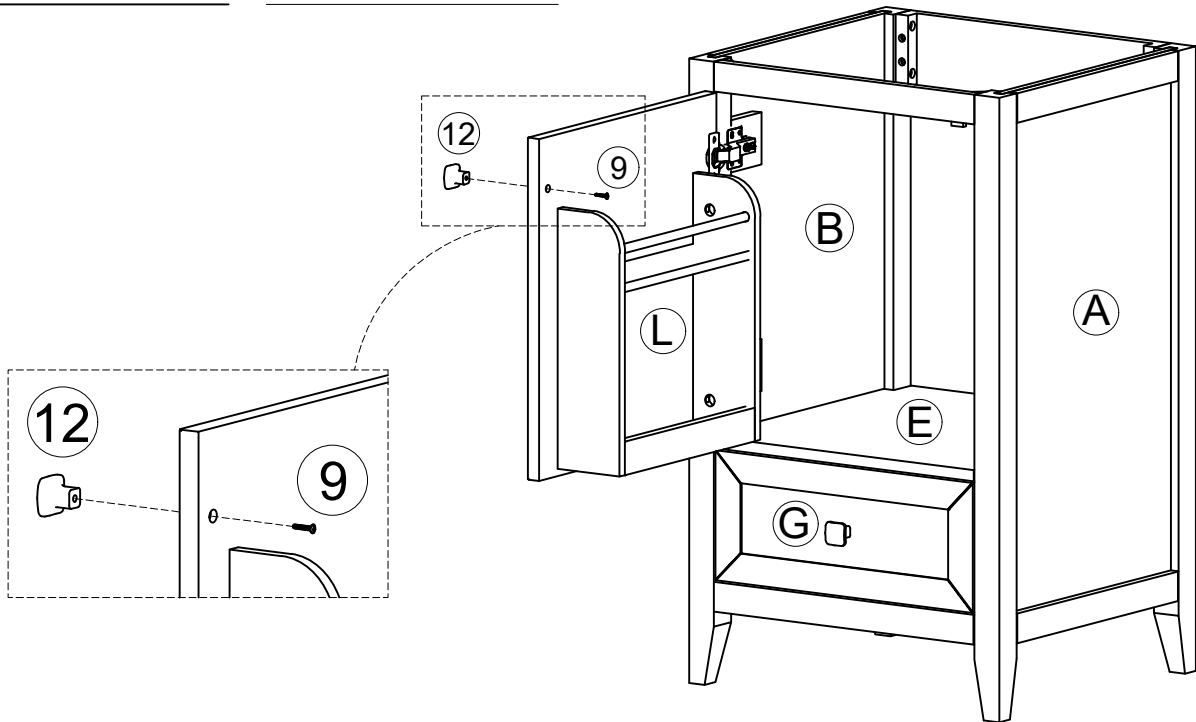

STEP 24

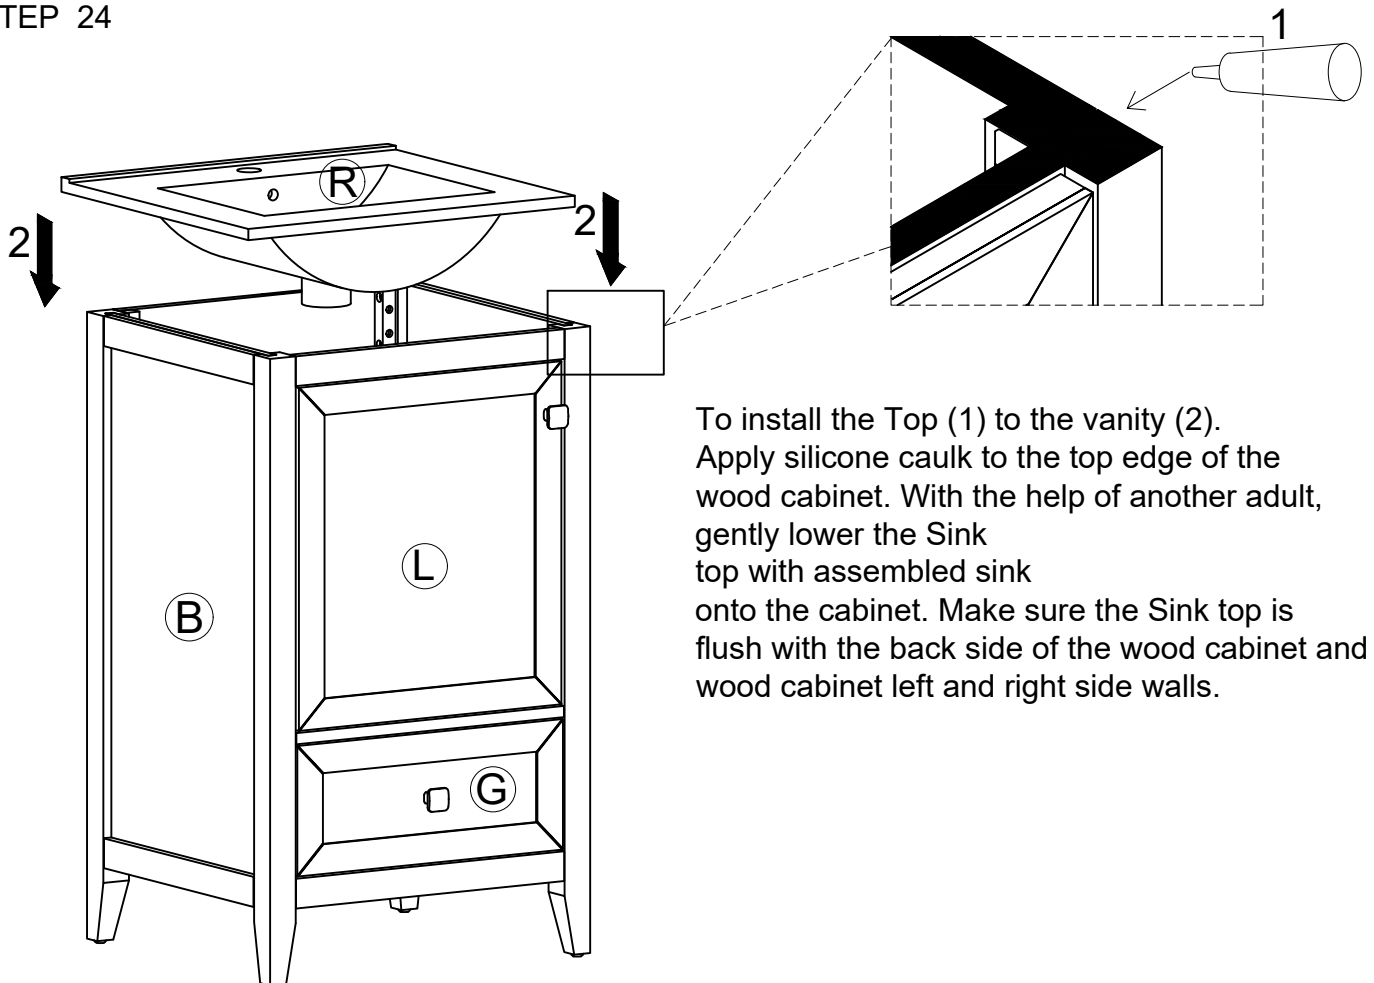

To install the Top (1) to the vanity (2). Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet. Make sure the Sink top is flush with the back side of the wood cabinet and the wood cabinet left and right side walls.

