


ASSEMBLY INSTRUCTION

MODERN DOME PENDENT LIGHT

A Lamp Body



1pc

B Accessory
Ø10*9mm



2pcs

C Flat Washer
Ø5/32"*12mm



2pcs

D Bolt
Ø5/32"*25mm



2pcs

E Wire Connector
Ø9.9*17.7mm



2pcs

F Wire Connector
Ø8.6*15.2mm




1pc

G Bulb



1pc

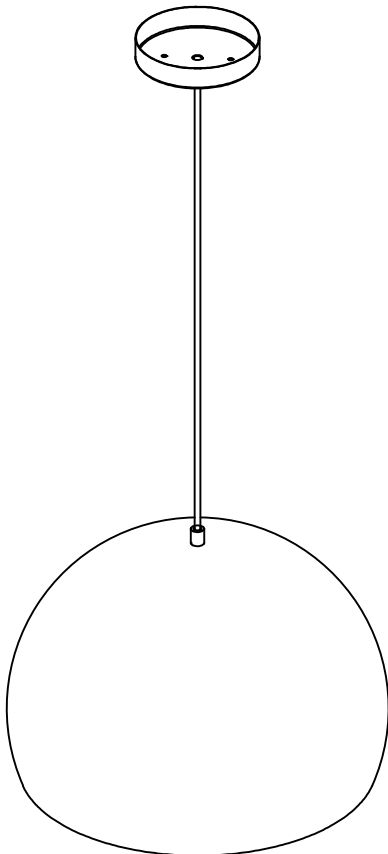


IMPORTANT SAFETY INSTRUCTIONS


THIS PENDANT LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1 Firstly, take off the Accessory (B) from ceiling base of Lamp Body (A) and take out the bracket. Next, connect the Wire Connector (F) & Wire Connector (E) together with cable, then fix the bracket on the ceiling with Bolt (D) and Flat Washer (C) by screwdriver. Finally, put ceiling base back to cover the bracket using Accessory (B) to fix them.

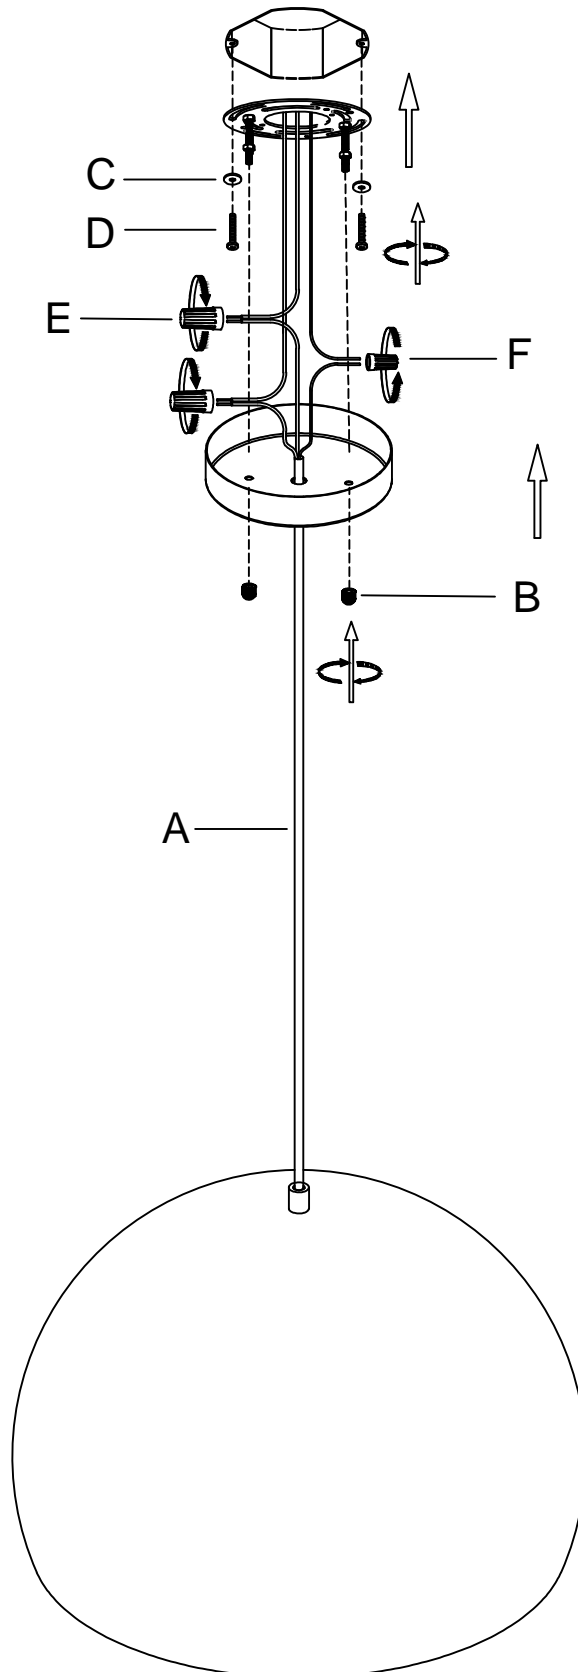

2 Assemble the Bulb (G) to the lamp holder of Lamp Body (A).

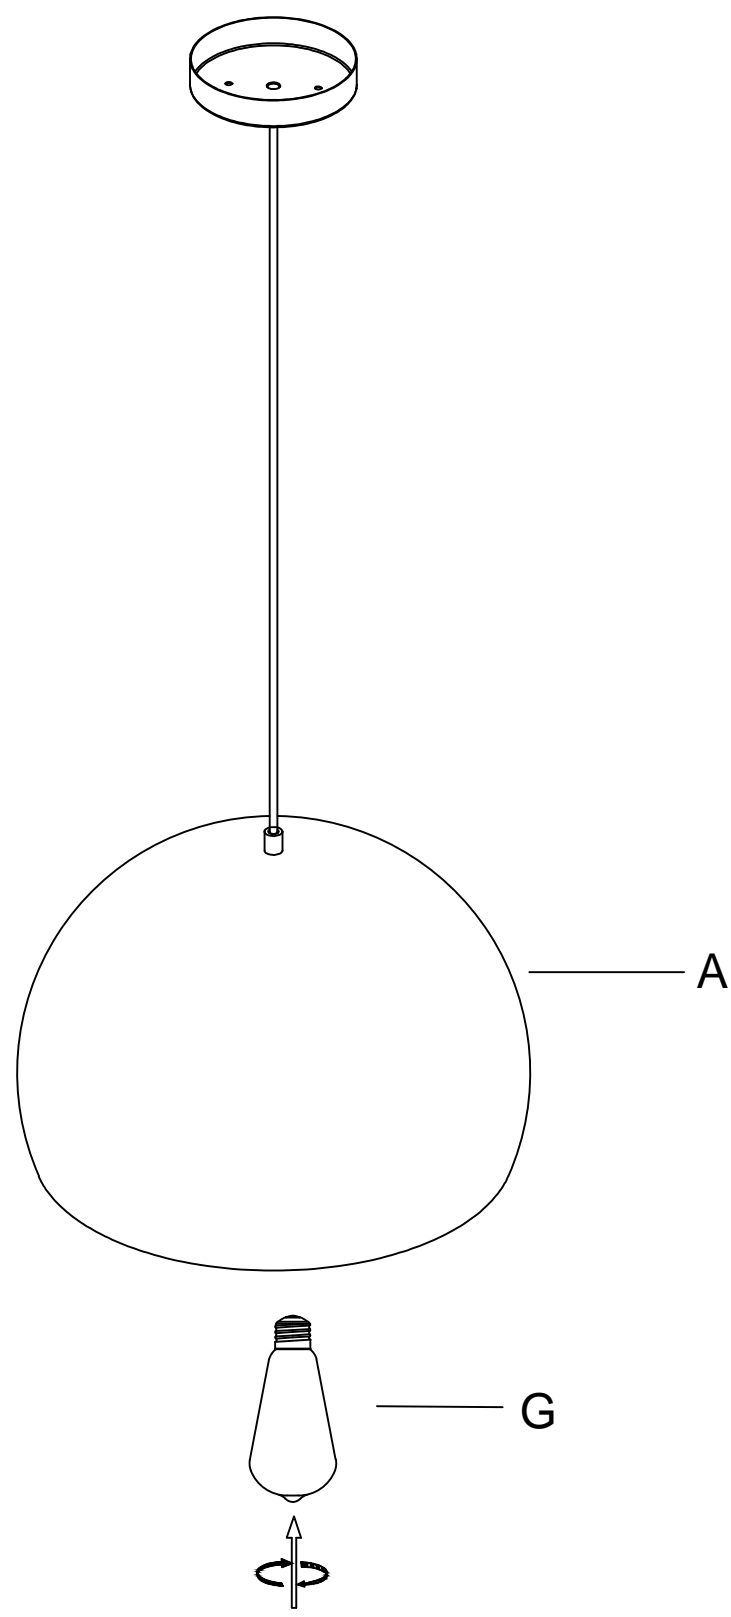

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.