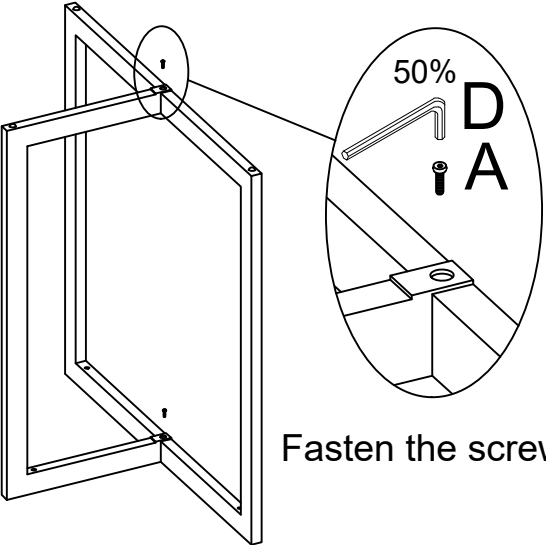
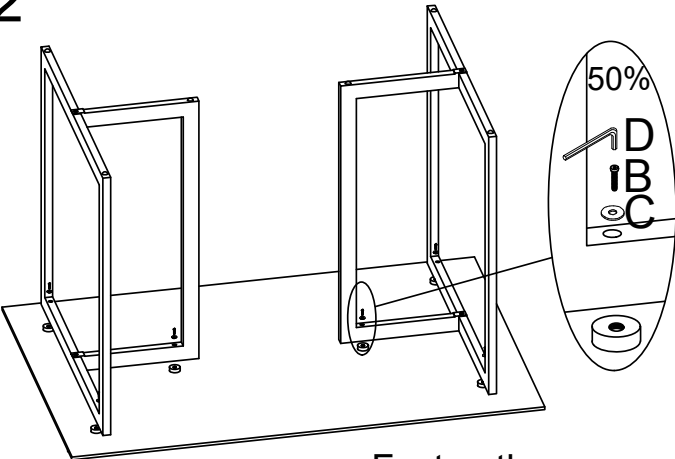
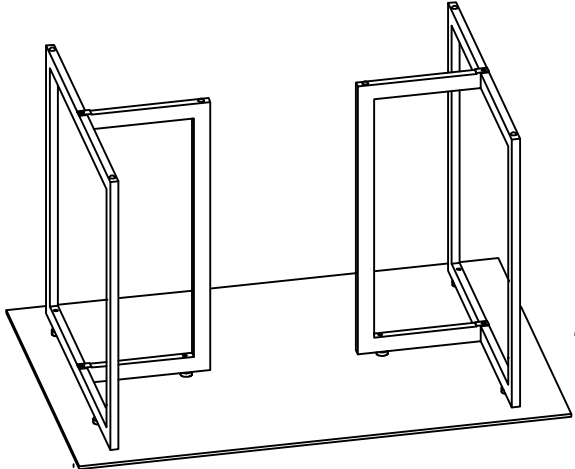


1  Fasten the screws to 50%	2  Fasten the screws to 50%	AX1 BX2 CX2 M6X16mm DX4 M6X45mm EX6 FX6 GX1
3  100% Fasten the screws to 100%	4 