

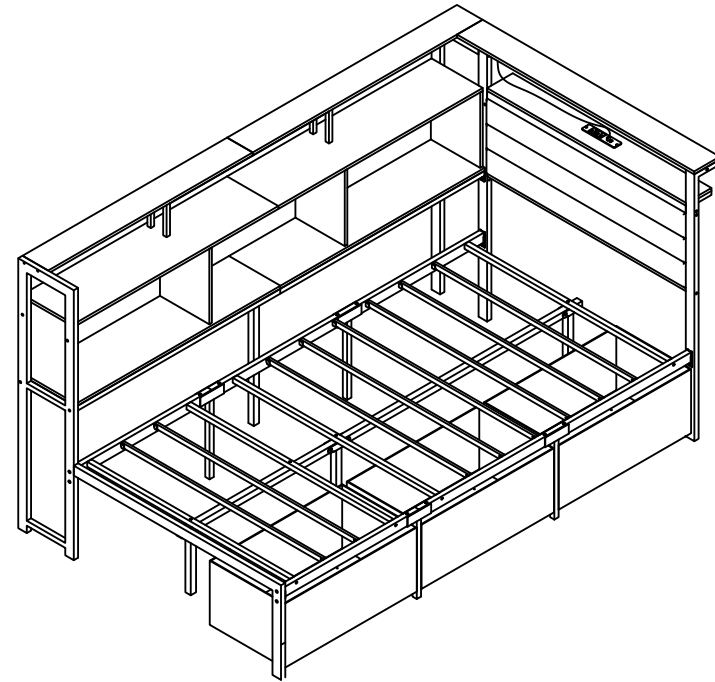


Bed Frame with LED lights

User Manual

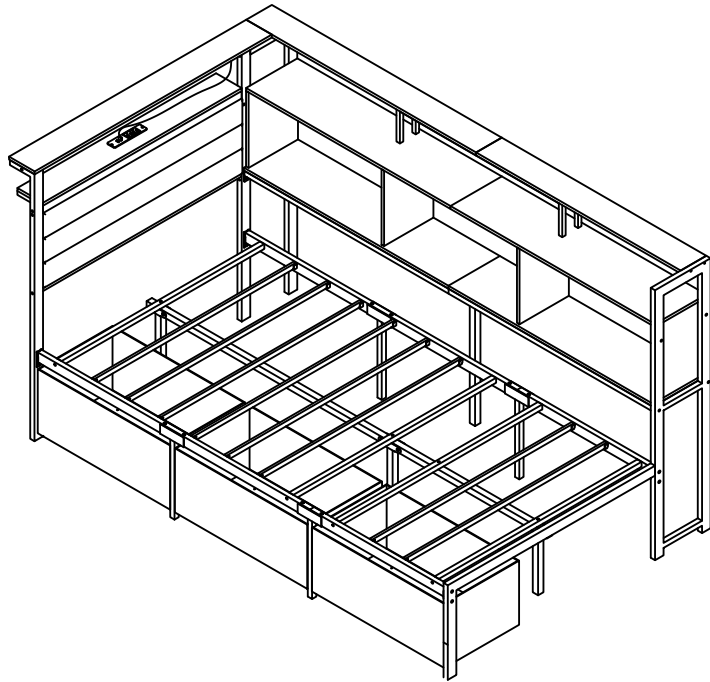


Disassembly Diagram

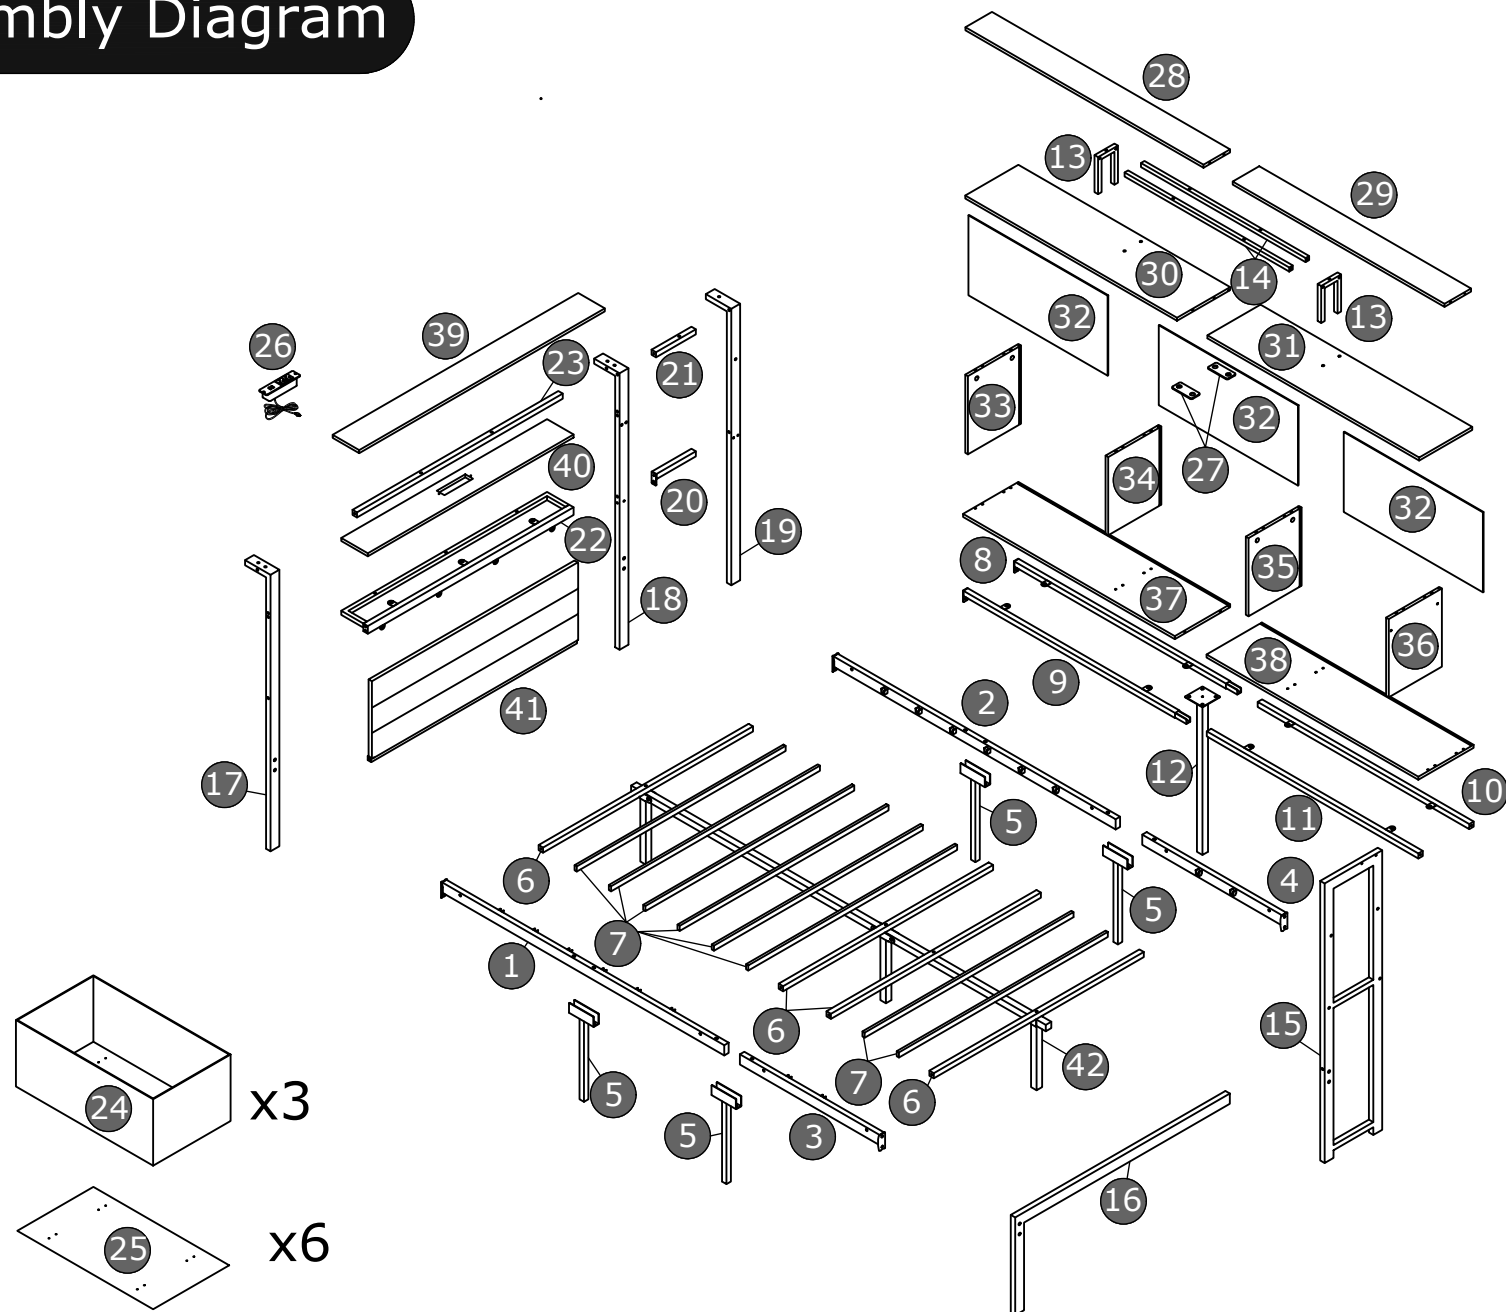


Accessories

1

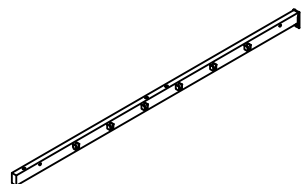


x1

2

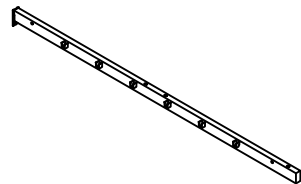


x1

3



x1

4




x1

5




x4

6

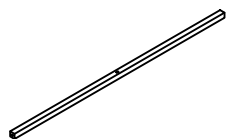


x4

7

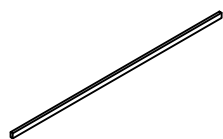


x8

8

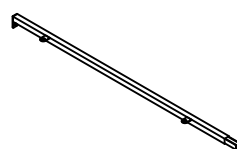


x1

9

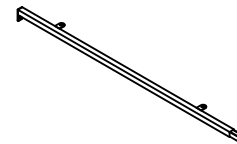


x1

10

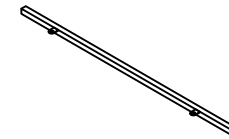


x1

11

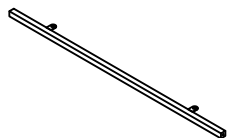


x1

12




x1

13



x2

14

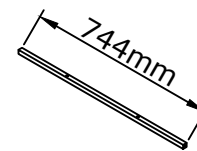

x2


15



x1

Accessories

16

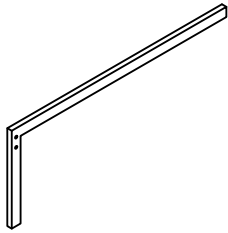

x1

17




x1

18




x1

19




x1

20

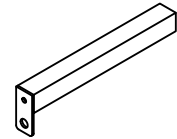


x1

21




x1

22

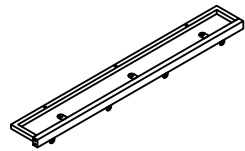


x1

23

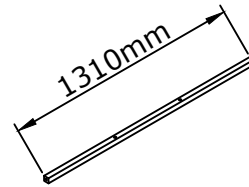


x1

24

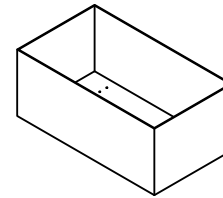


x3

25

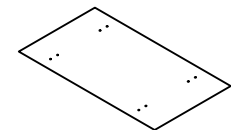


x6

26

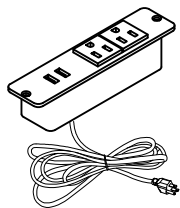


x1

27

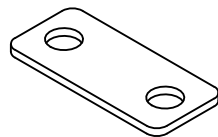


x2

28

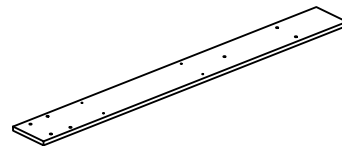


x1

29

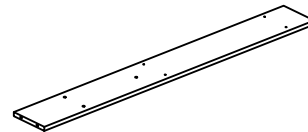

x1


30

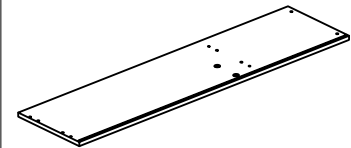

x1


Accessories

31

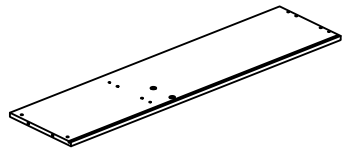


x1

32

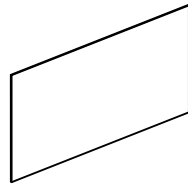


x3

33

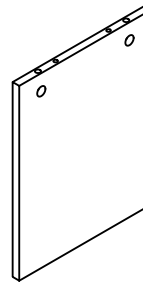


x1

34

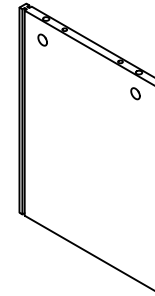


x1

35

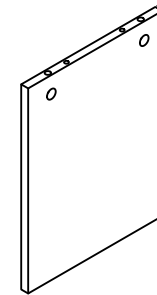


x1

36

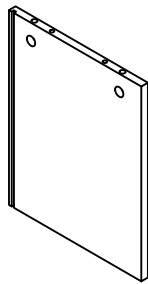


x1

37

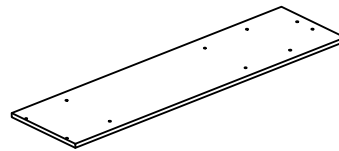


x1

38

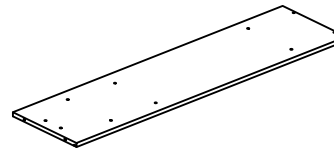


x1

39

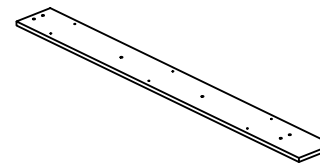


x1

40

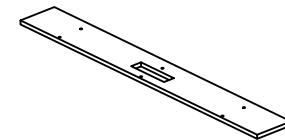


x1

41

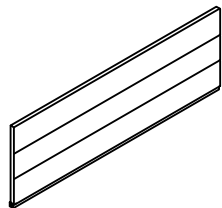

x1


42

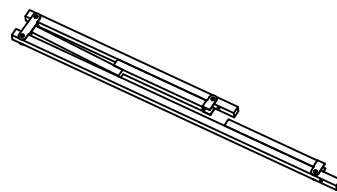

x1

Accessories

A



M6x10

x8

B



M6x10

x15


C



M6x15

x7


D



M6x23

x9


E



M6x28

x16


F



M6x40

x14


G



M6x60

x15


H



M8x35

x8

I



M8x55

x8


J



Ø6x30

x22


K



Ø6x35

x8

L



Ø15x10

x8

M



M4x16

x24

N



Ø4x12

x2







O




Ø5x40

x10

Accessories

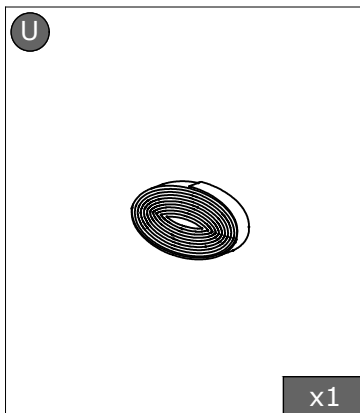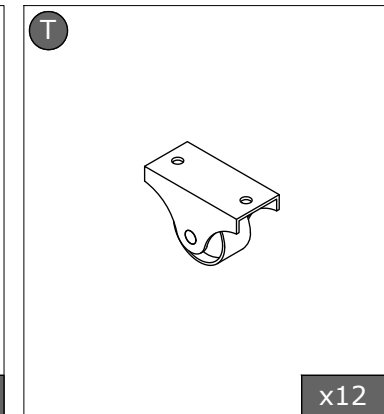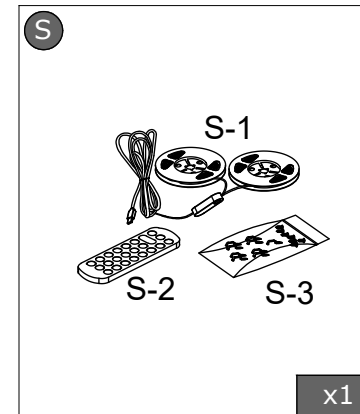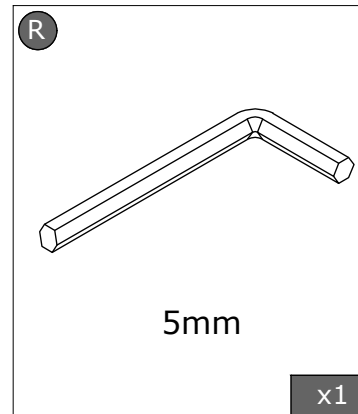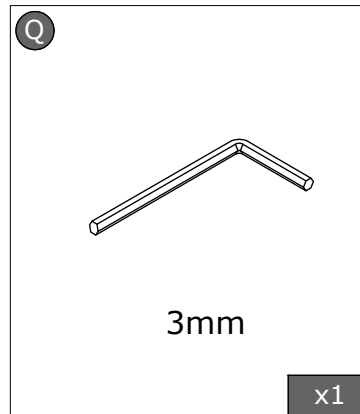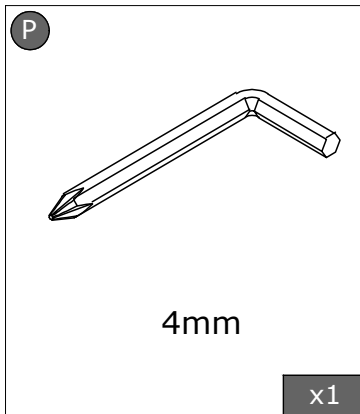


step1-step29

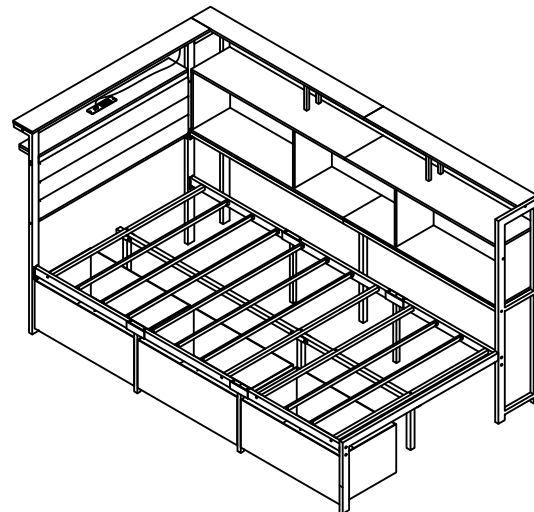

Type1

step30-step58

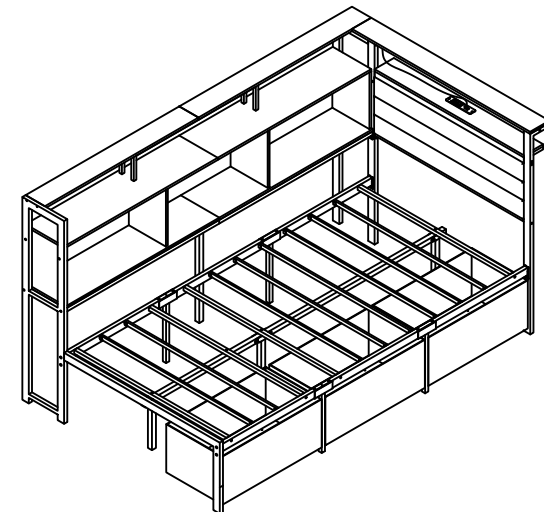


Type2




step 1

Connect parts 22 and 40 using screws B and D (screw D fixes the iron pipe, screw B fixes the iron plate)

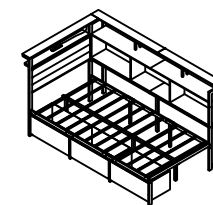


Type1

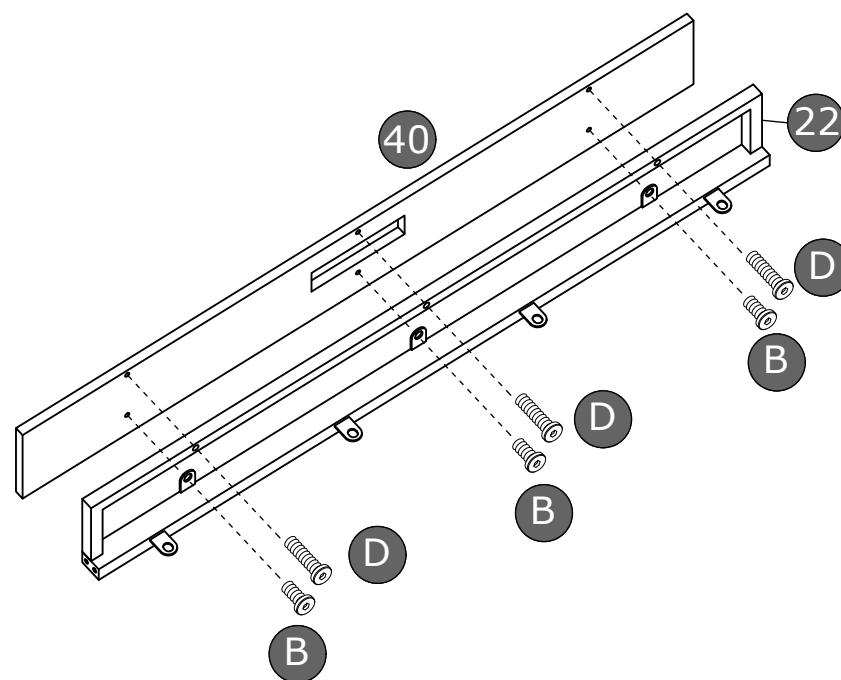

B x3pcs



D x3pcs




P x1pc



step 2


Connect parts 22 and 41 using screw C

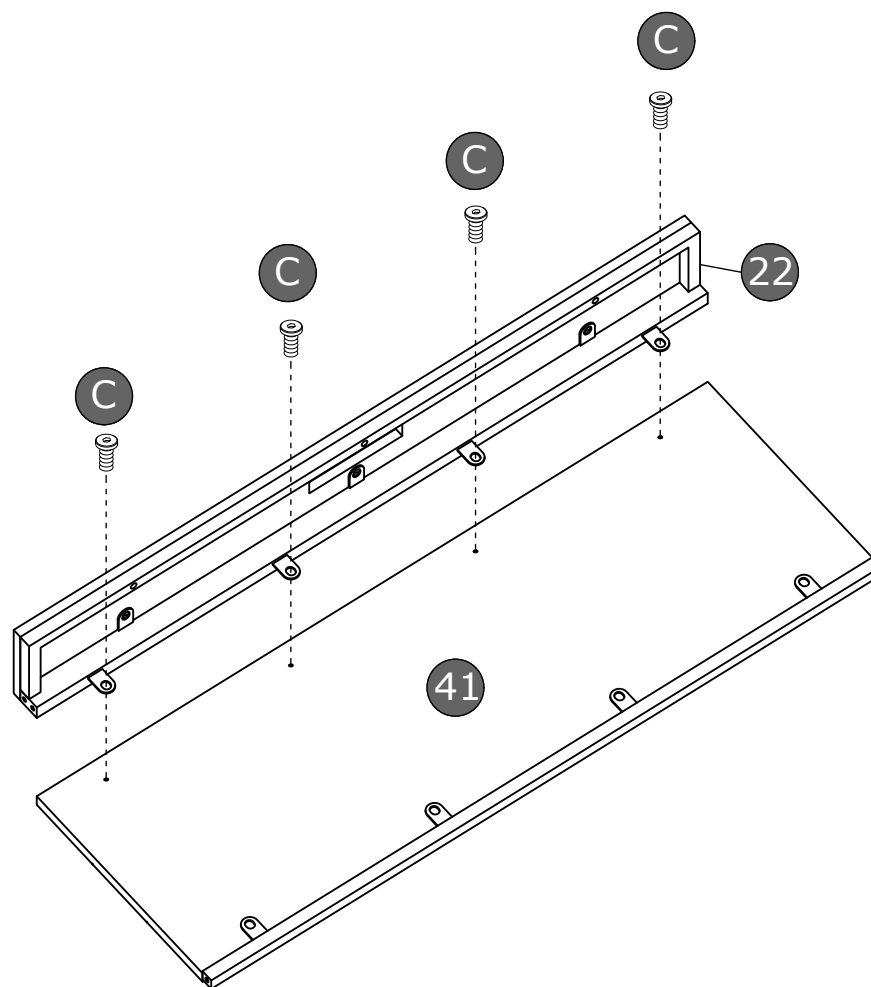

2



C x4pcs




P x1pc



step 3


Connect parts 26 and 40 using screw N

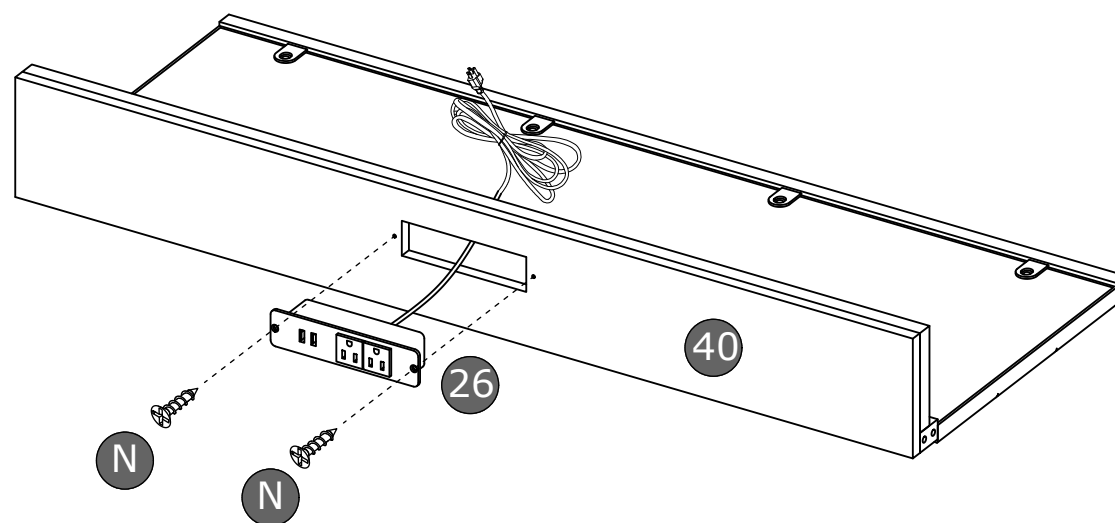

3




N x2pcs



P x1pc



step 4

Connect parts 17/18 and 23/installed frame using screw G

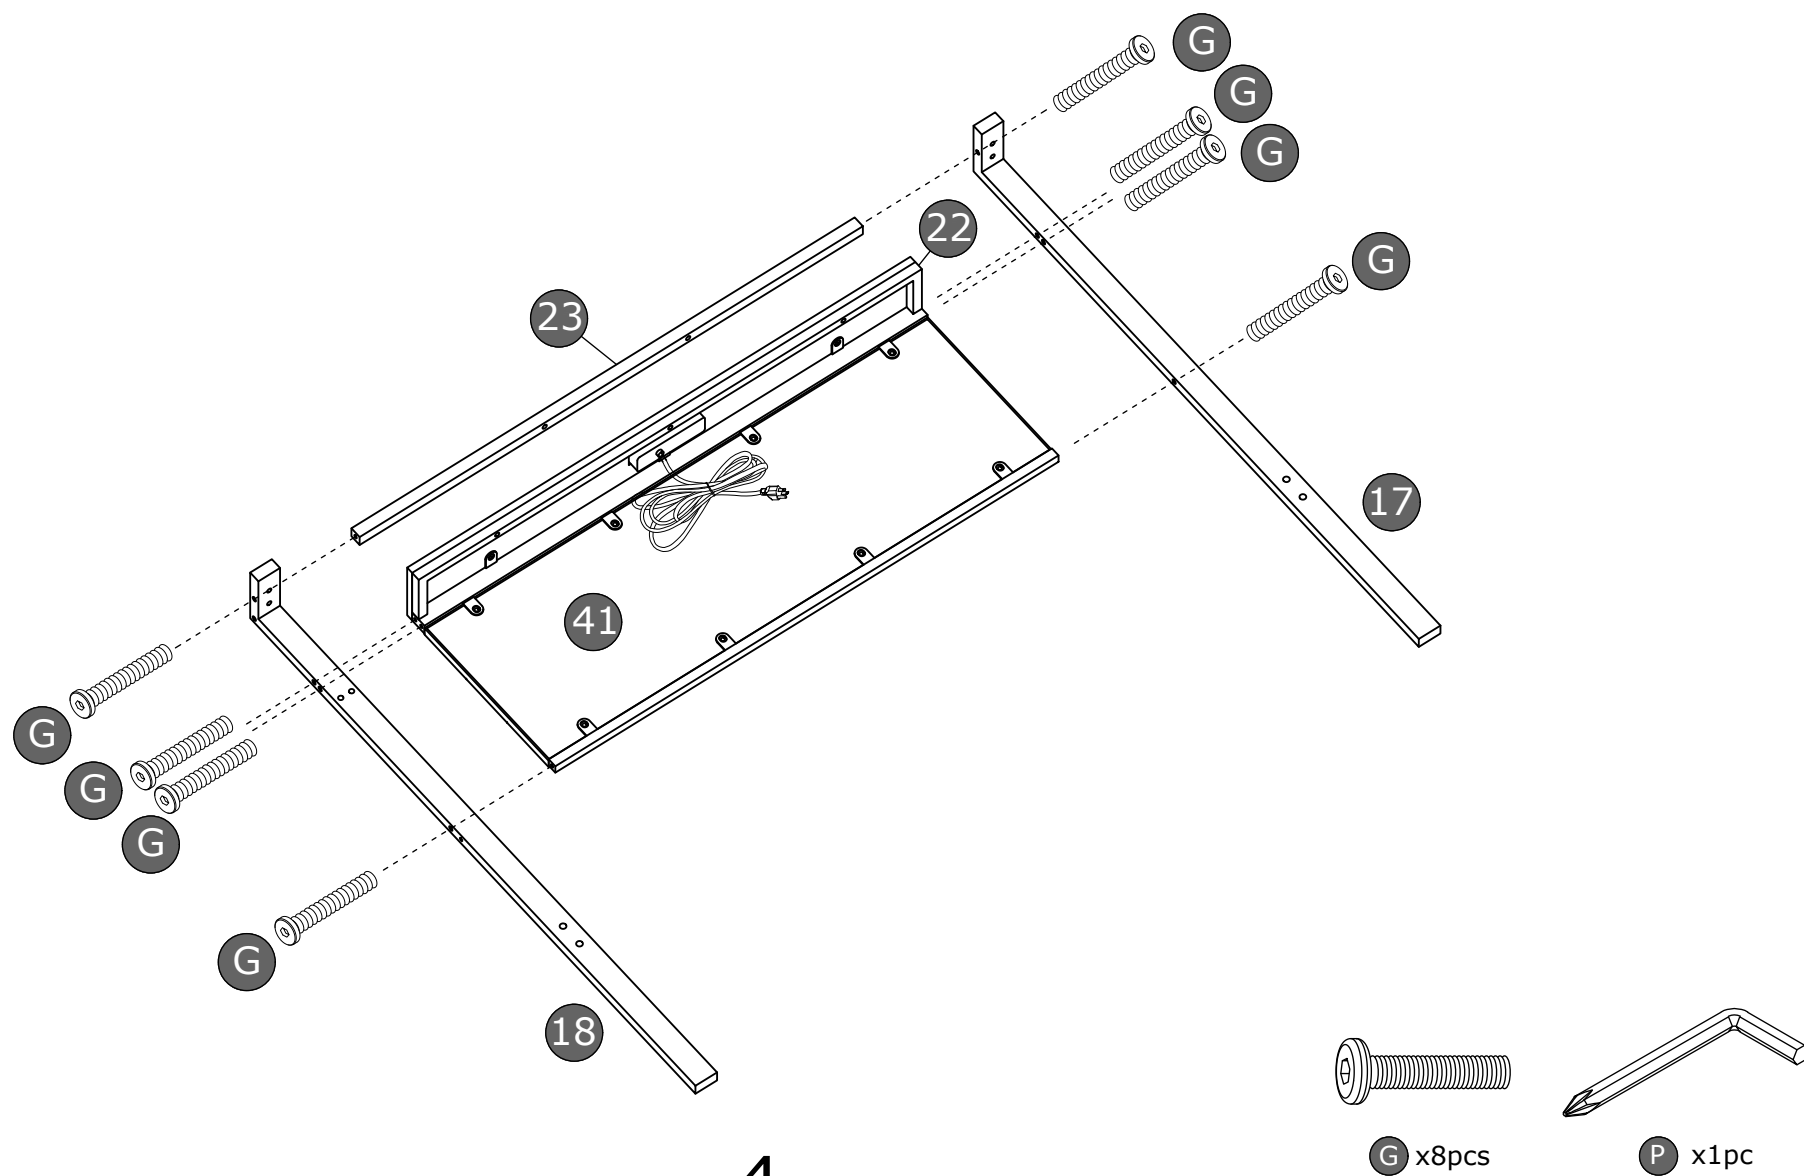


step 5


Connect parts 18/19/20/21 using screws C and G (screw G fixes the iron pipe, screw B fixes the iron plate)

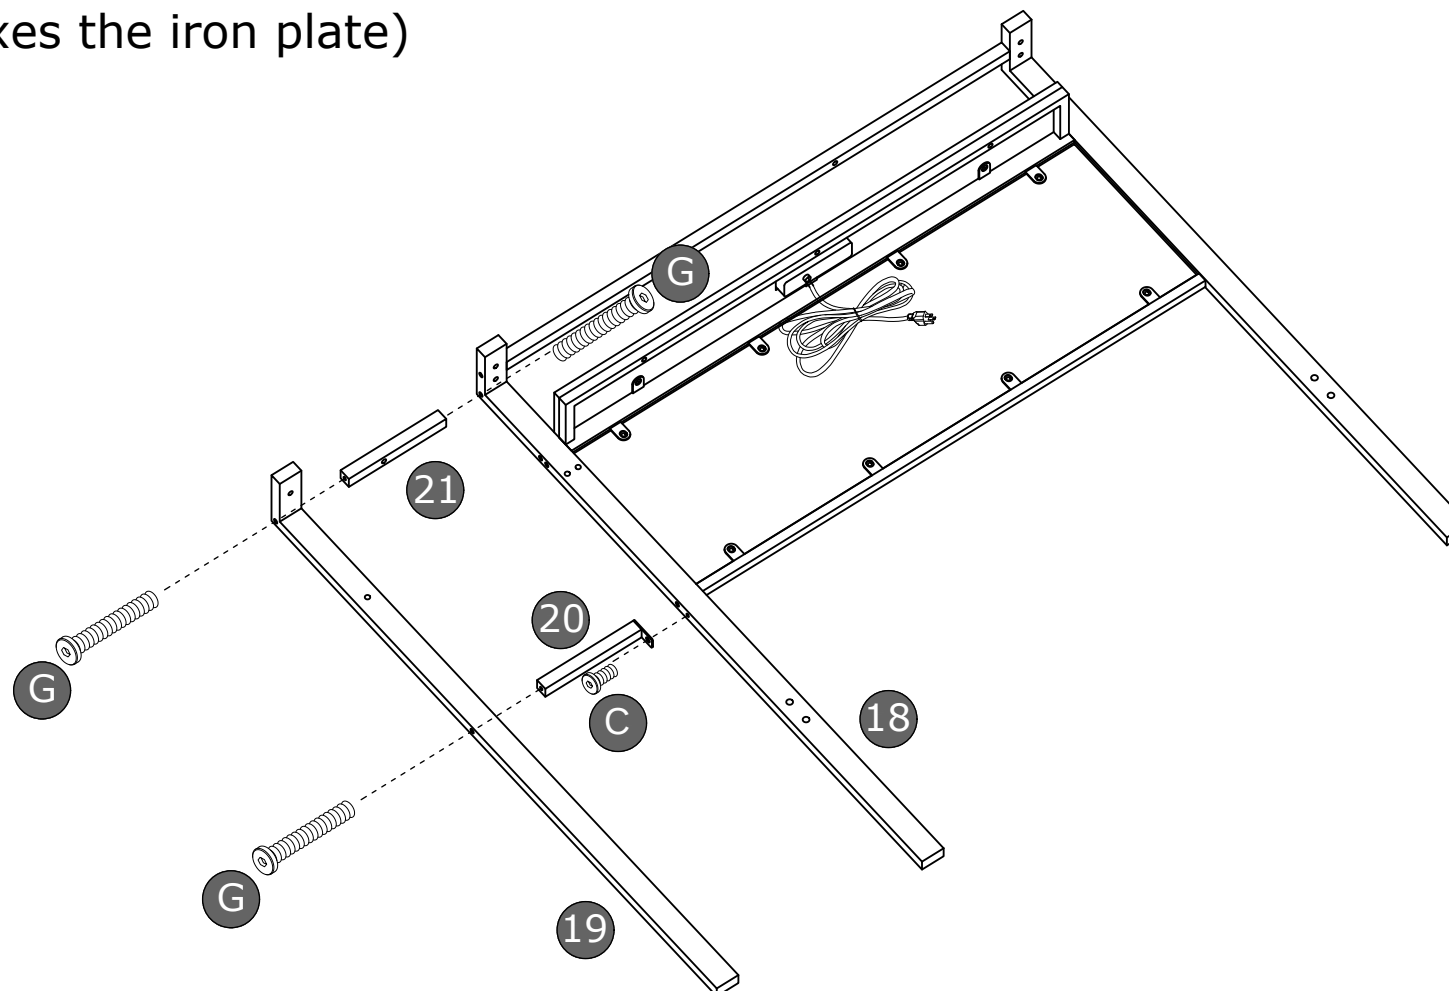

C x1pc



G x3pcs




P x1pc



step 6



Connect part 5 and parts 1/2/3/4 using screw I

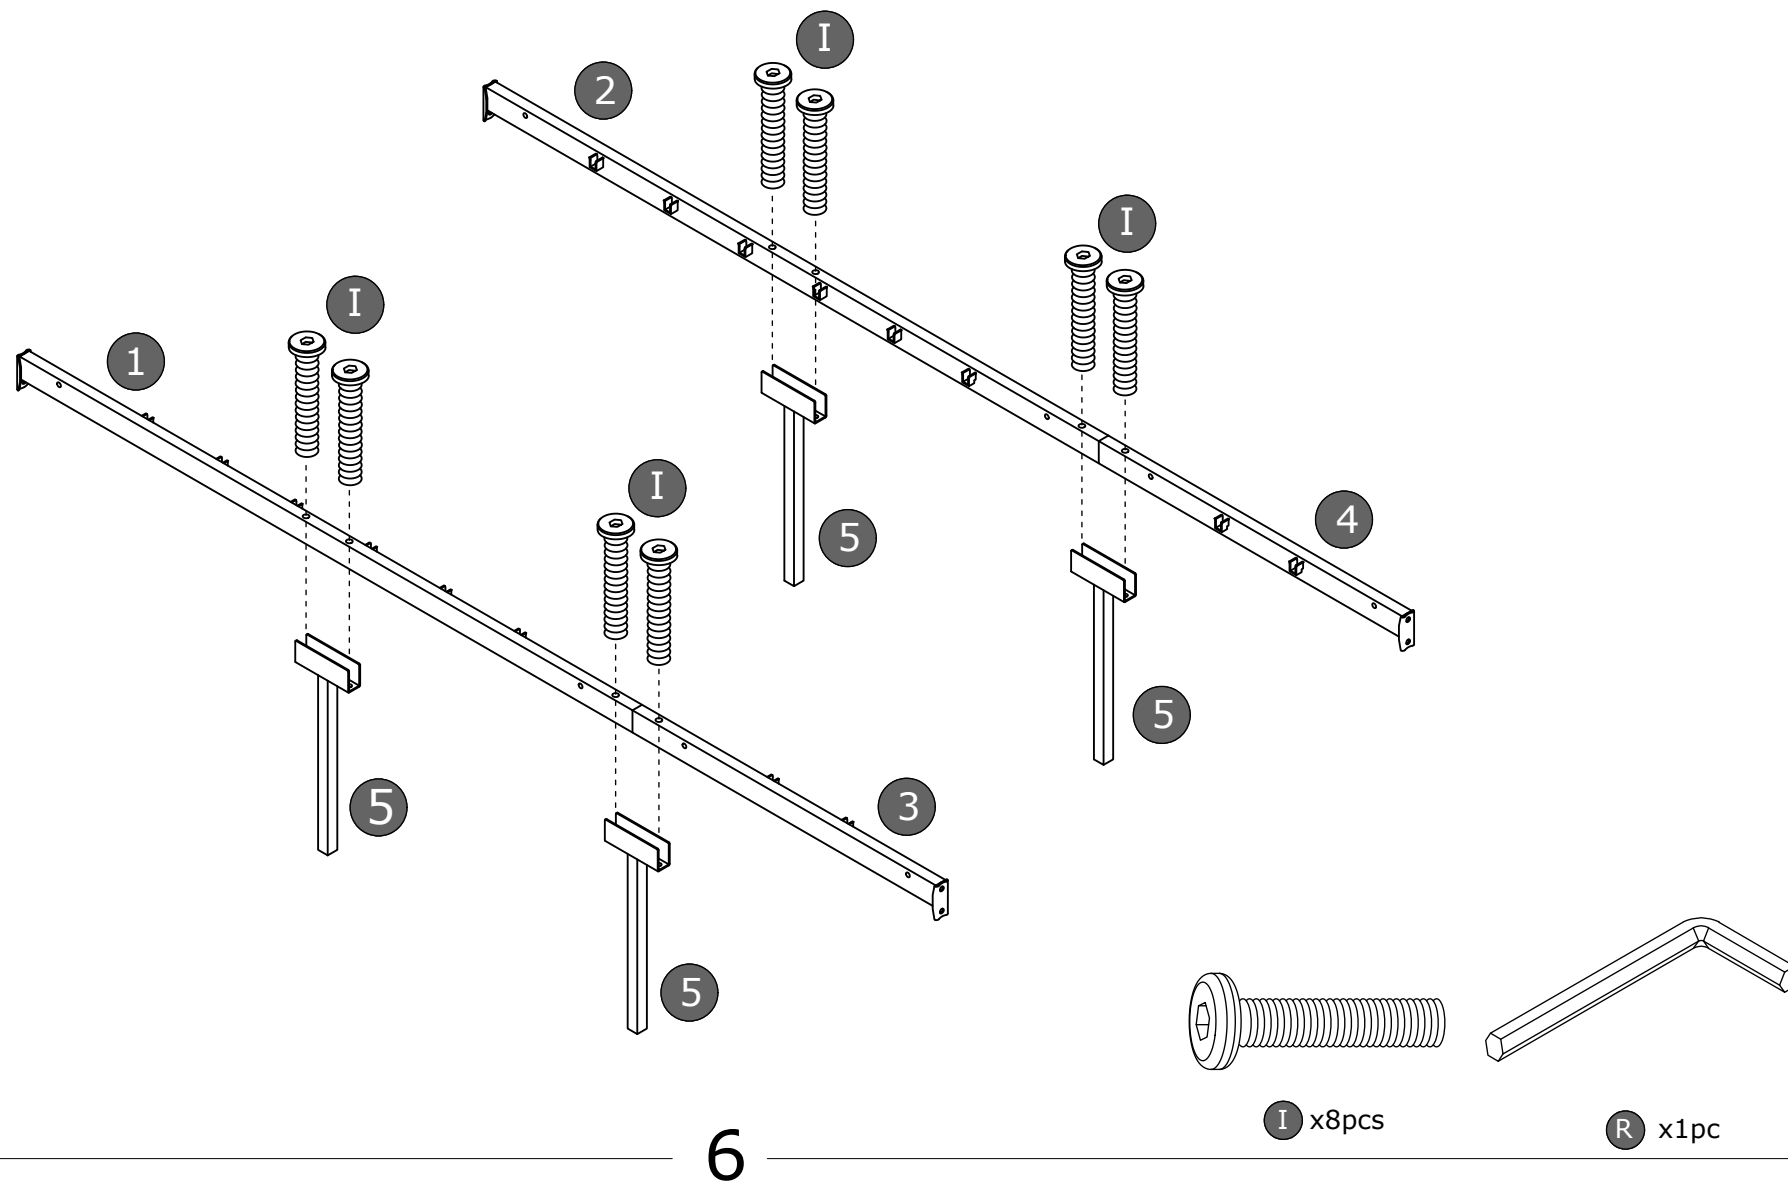




step 7

Connect parts 15 and 16 using screw G

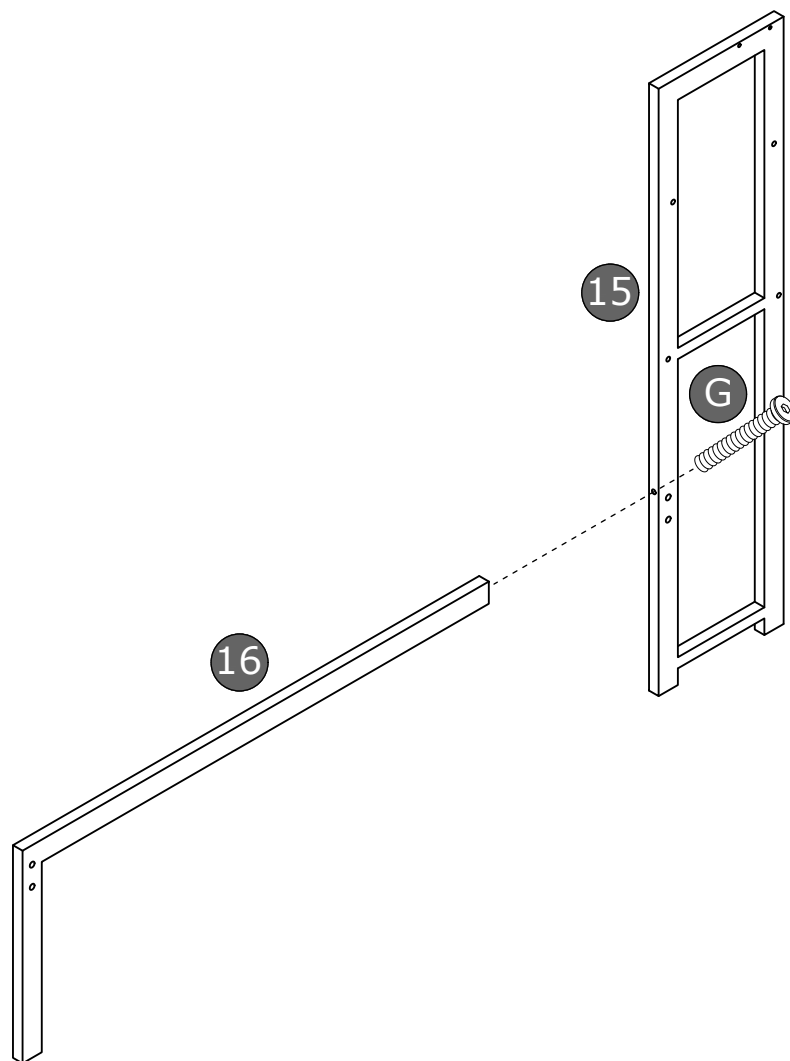


G x1pc



P x1pc

step 8


Connect parts 1/2 to the headboard frame and parts 3/4 to the footboard frame using screw H

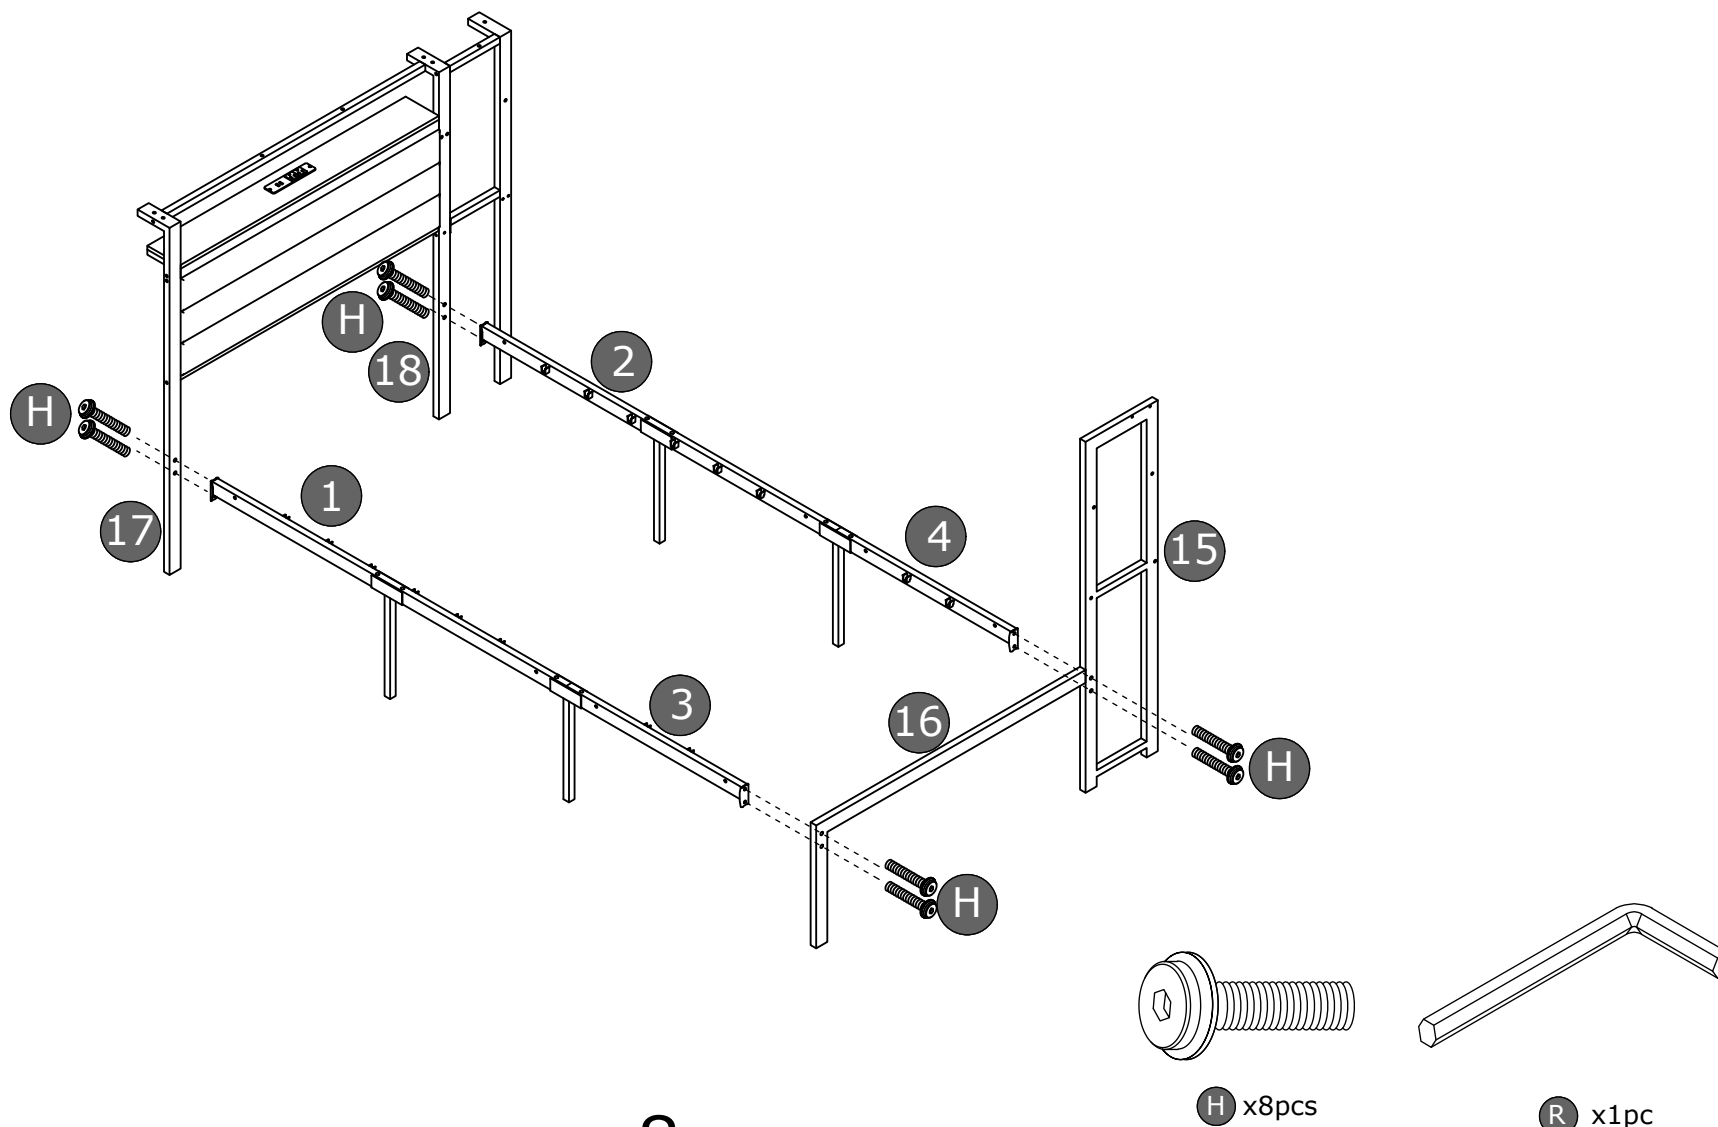



step 9

Connect parts 30 and 31 using J


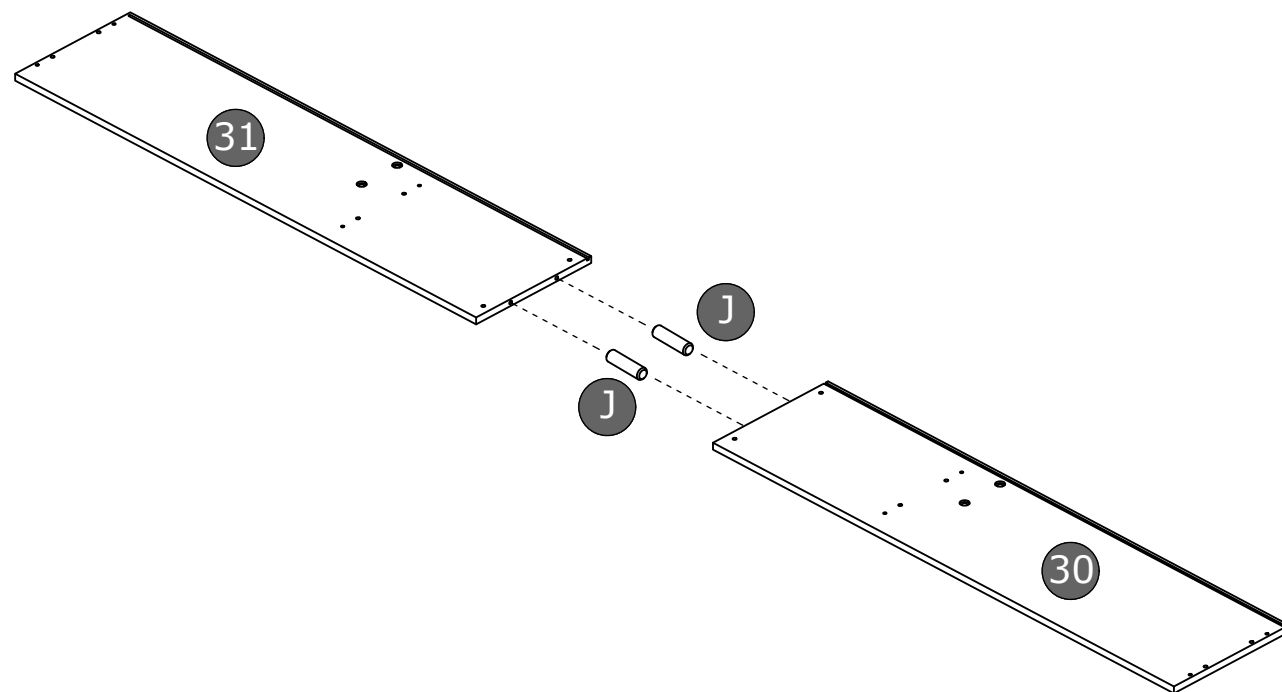


J x2pcs




step 10

Connect part 27 and parts 30/31 using screw A

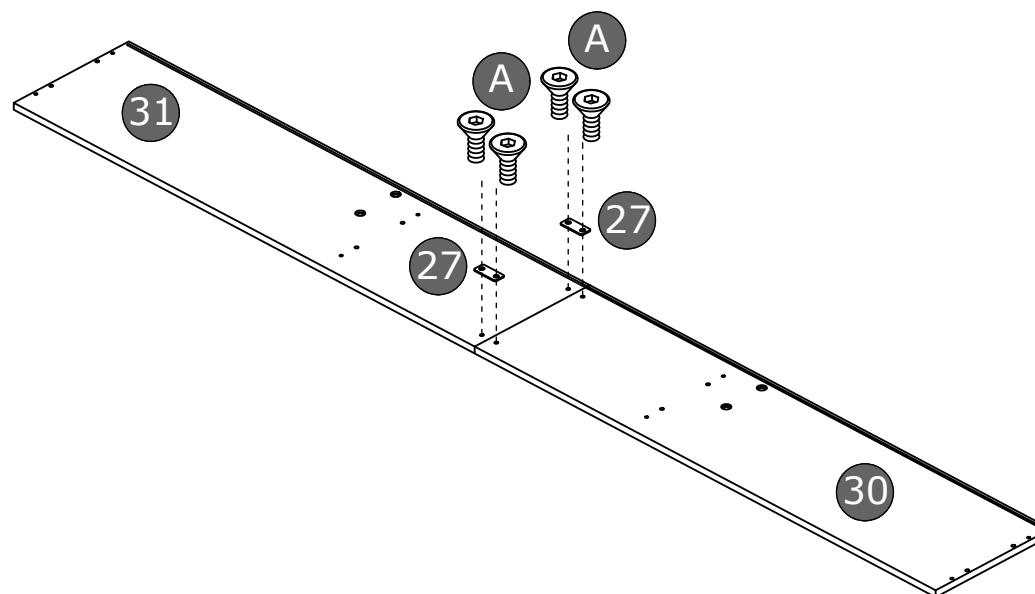

A x4pcs





P x1pc




step 11

Insert K into the holes of parts 30/31

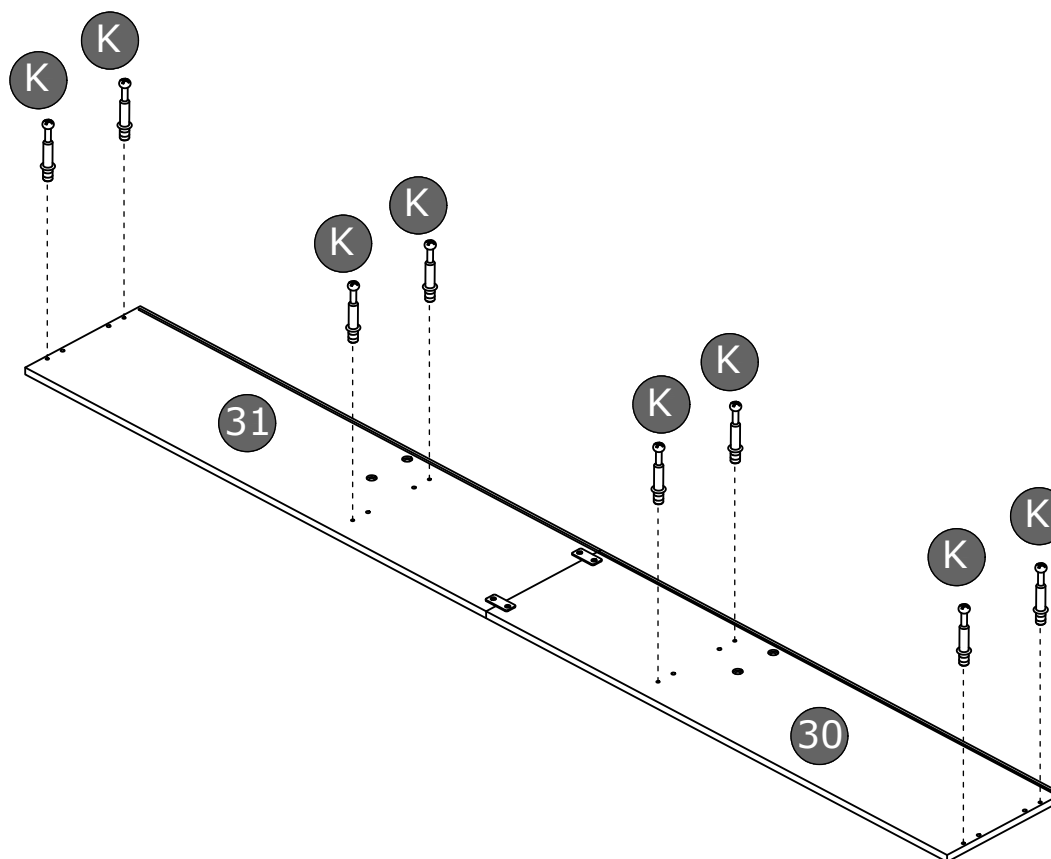




K x8pcs



P x1pc

step 12


Connect parts 33/34 to part 30 and parts 35/36 to part 31 using K/J
Then insert knob L and tighten.

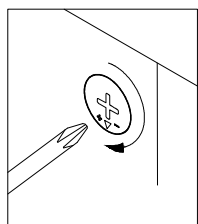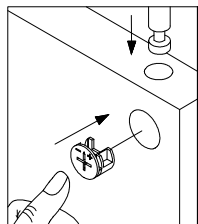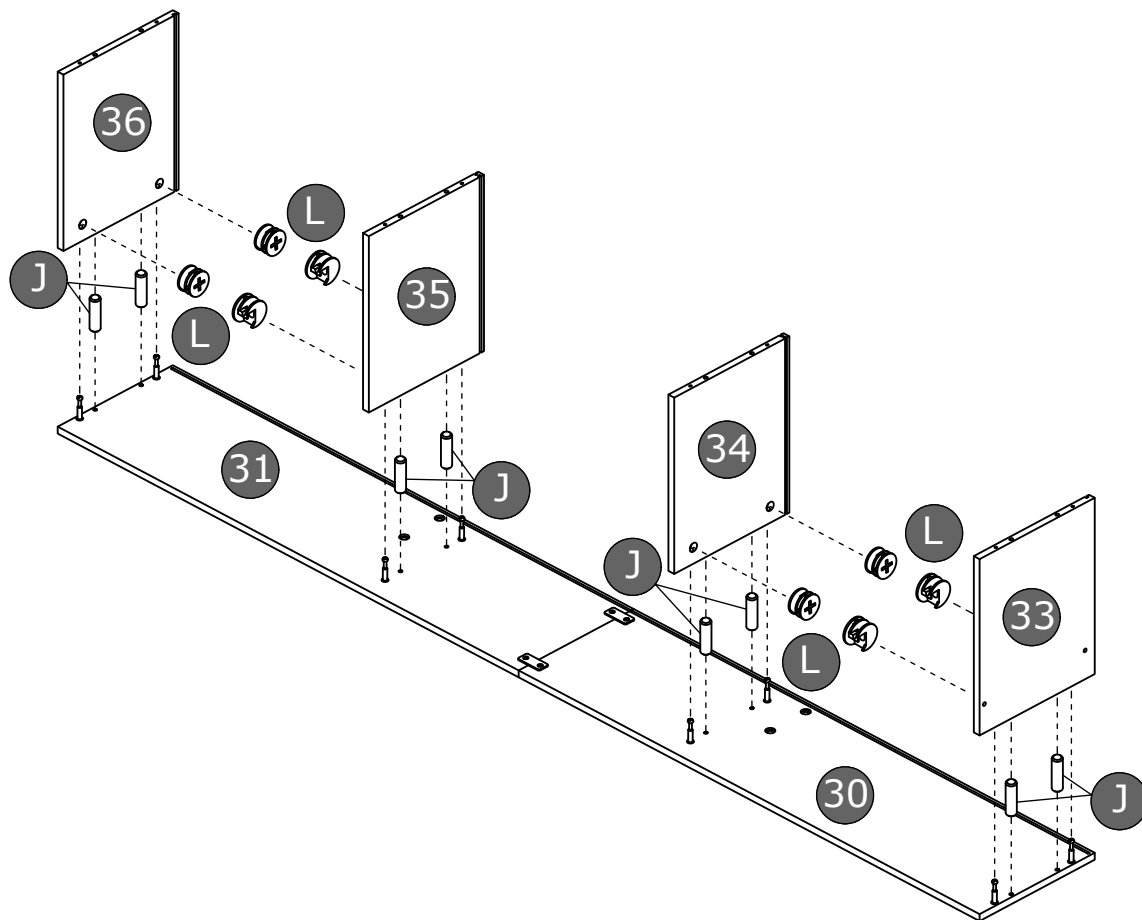



step 13


Insert three pieces of 32 into the grooves

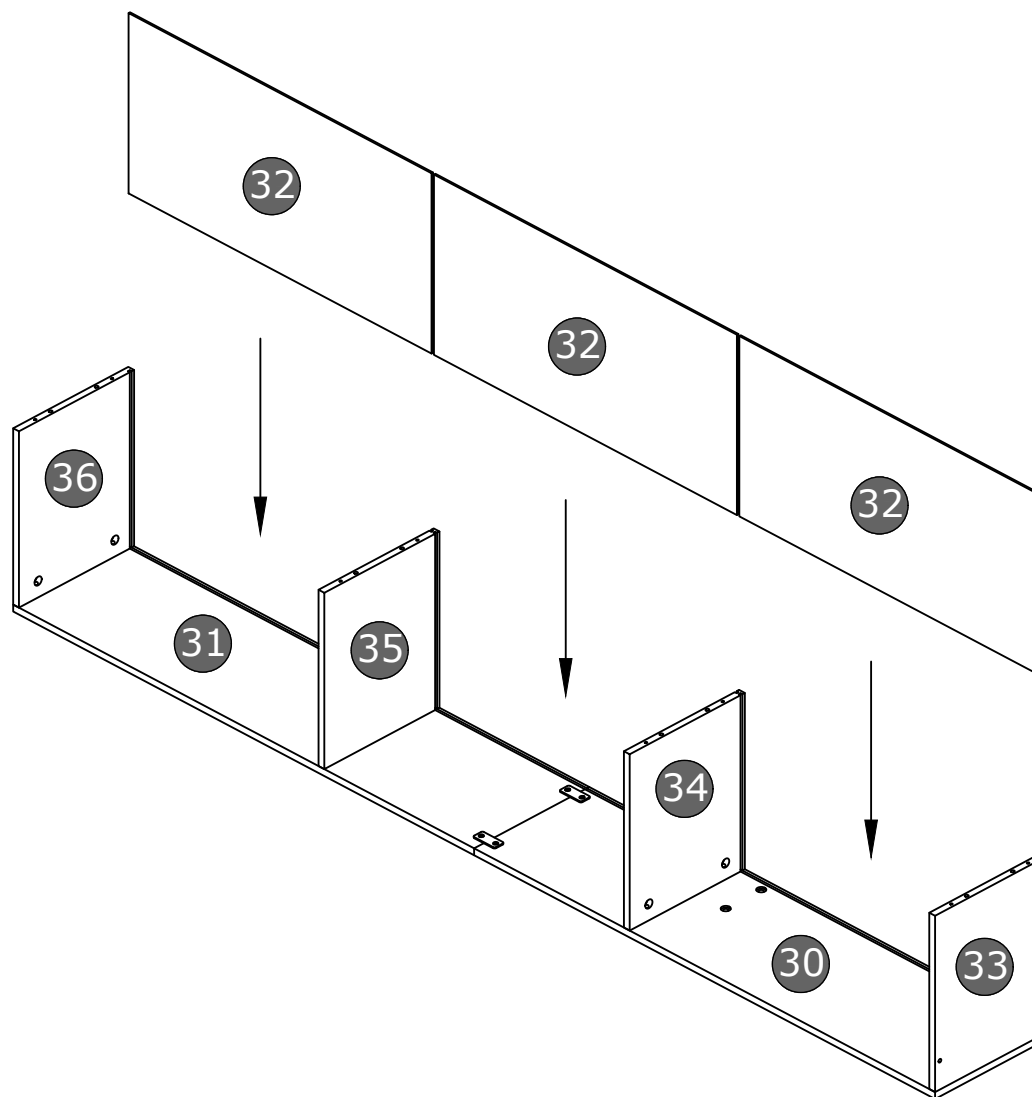



step 14

Insert three pieces of 32 into the grooves

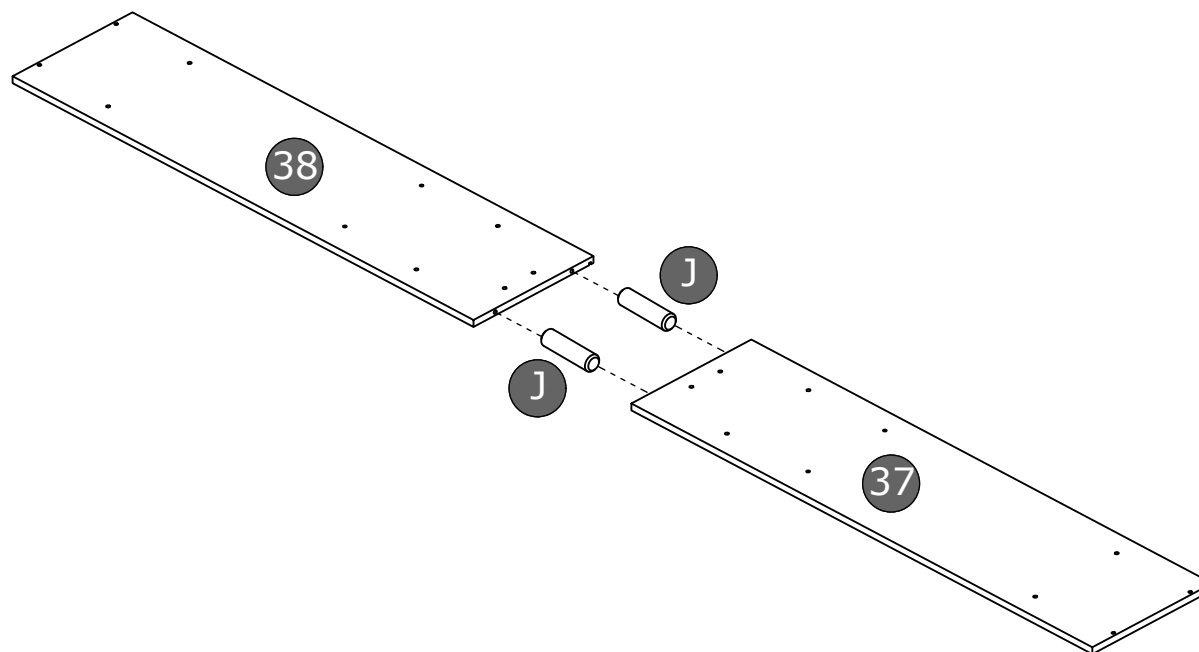


J x2pcs



step 15


Connect parts 37/38 to the installed frame using J and screw O

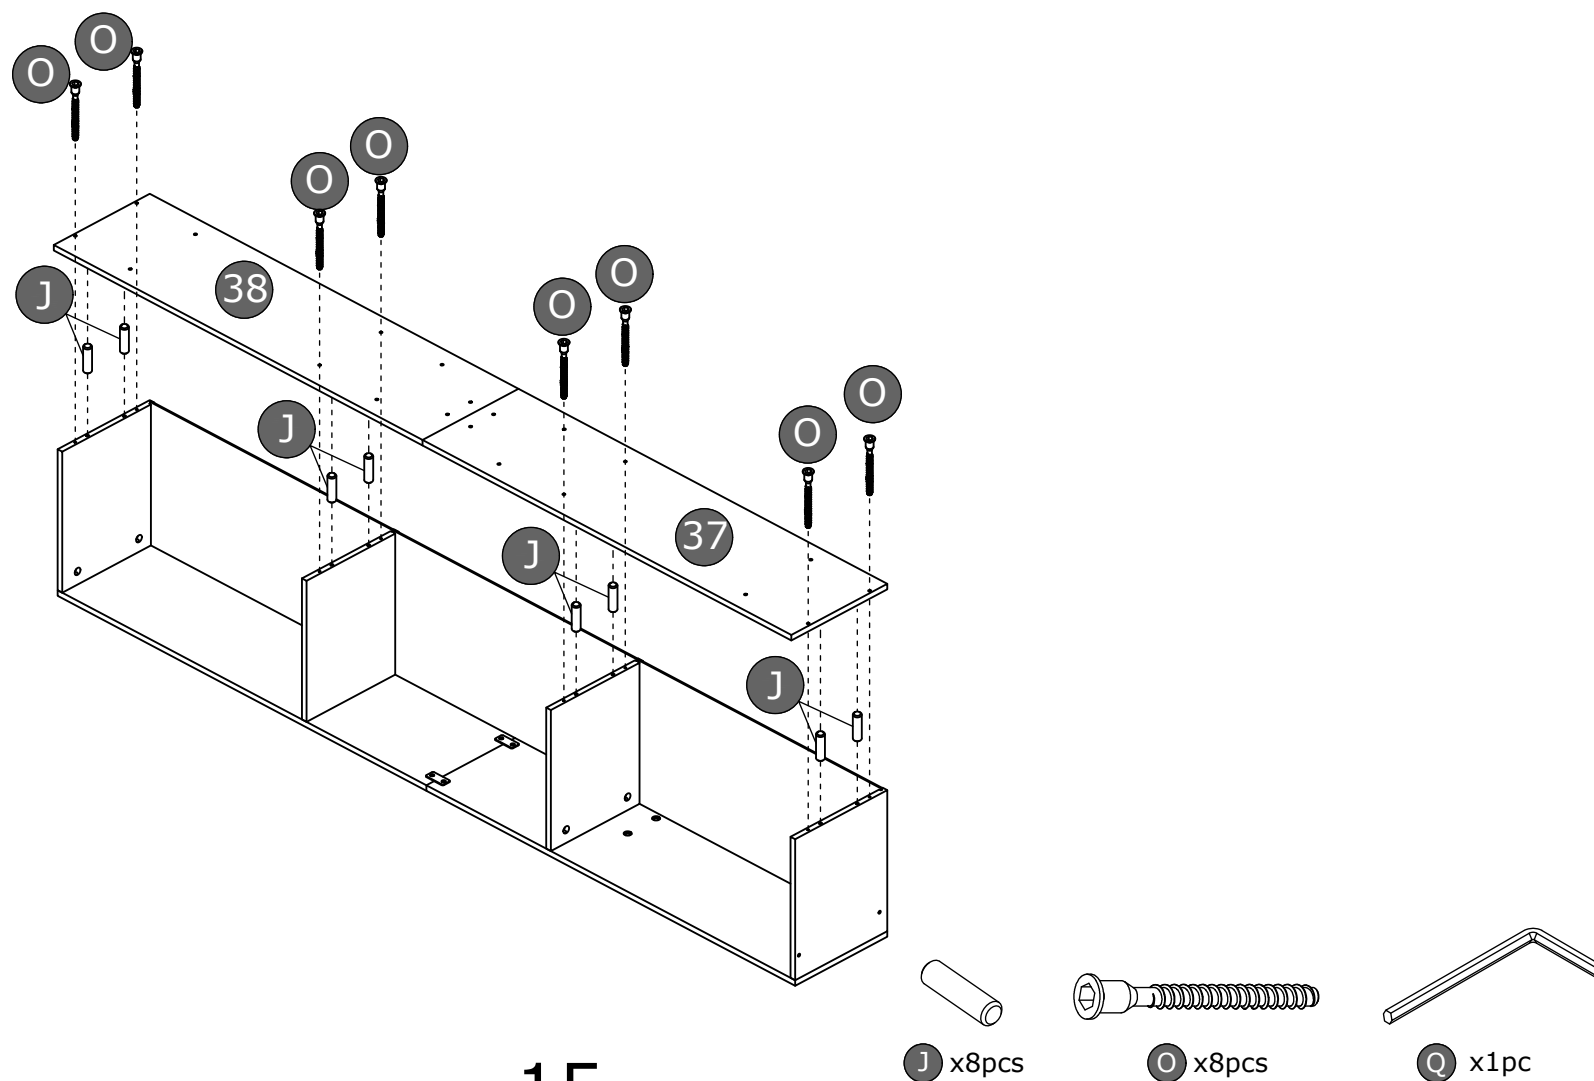




step 16

Connect part 8 and part 10, and part 9 and part 11 using screw B

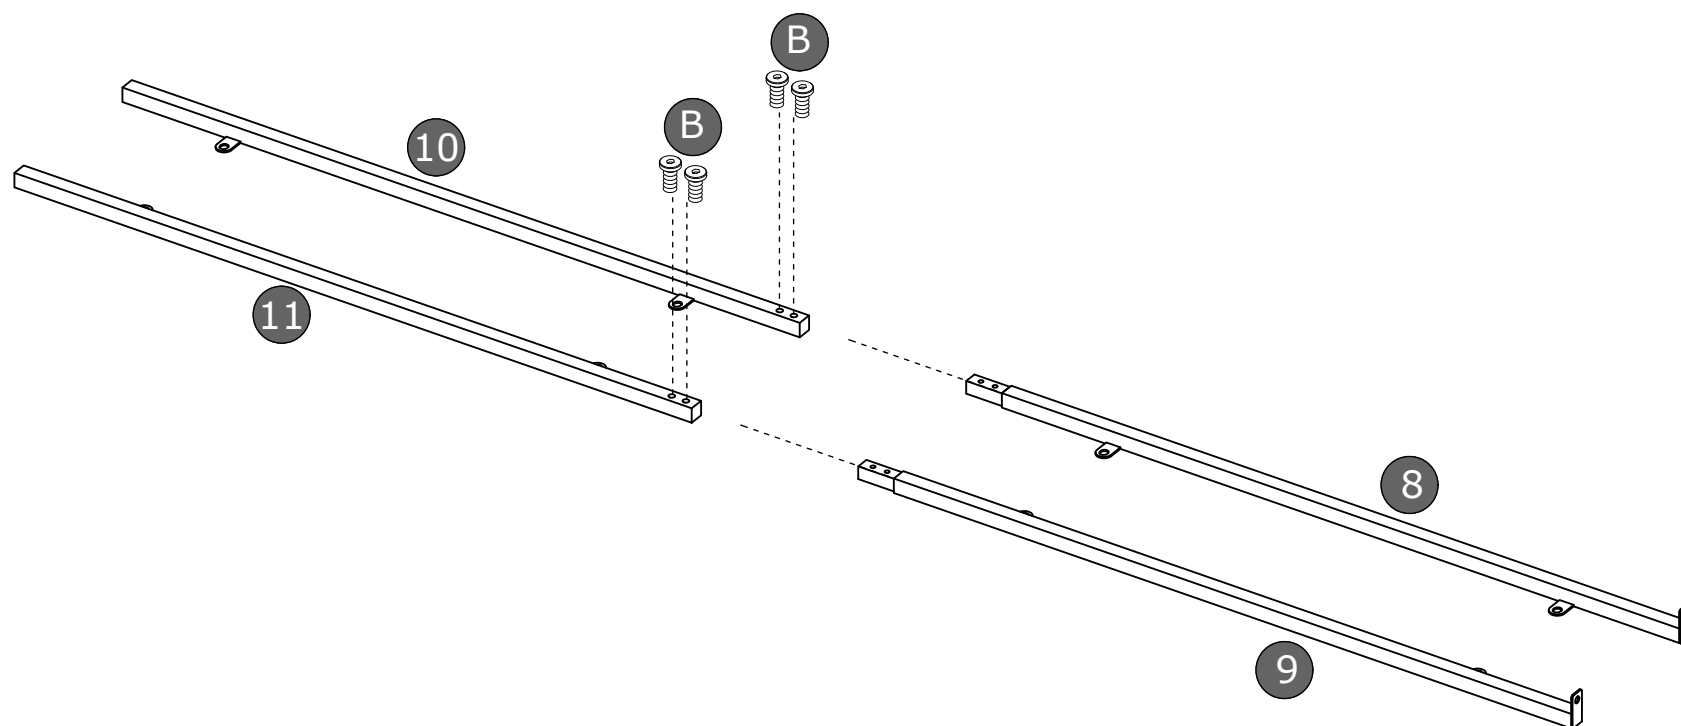

B x4pcs




P x1pc


16

step 17

Connect parts 8/9/10/11 to the installed shelf using screw B

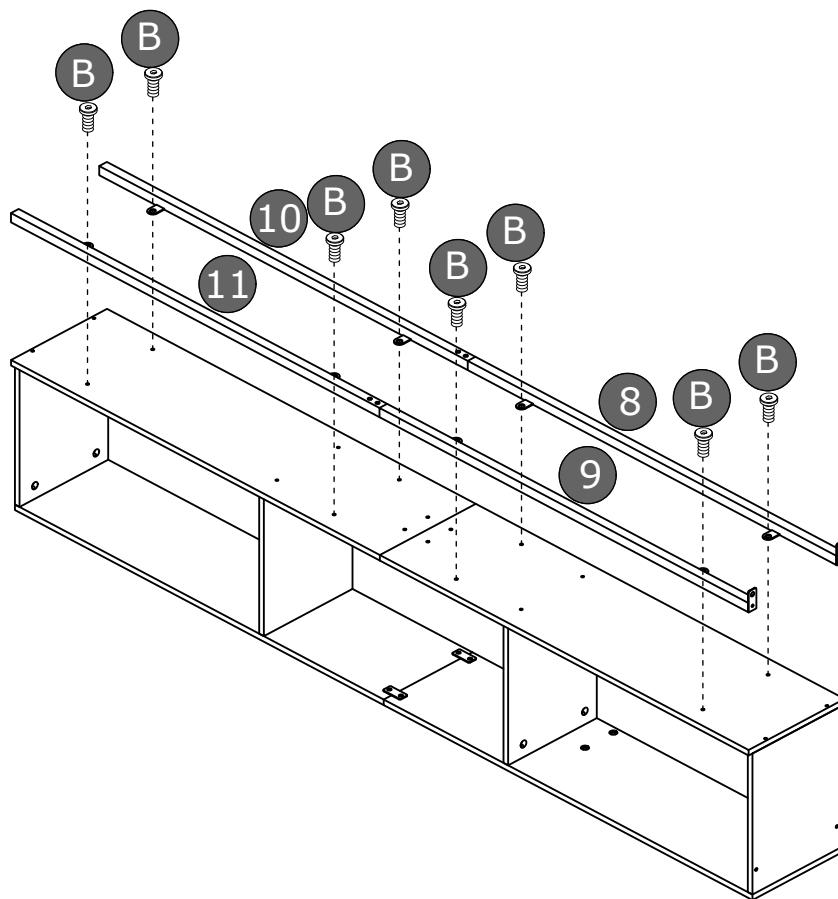



B x8pcs




P x1pc

step 18

Connect part 12 to the installed frame using screw A

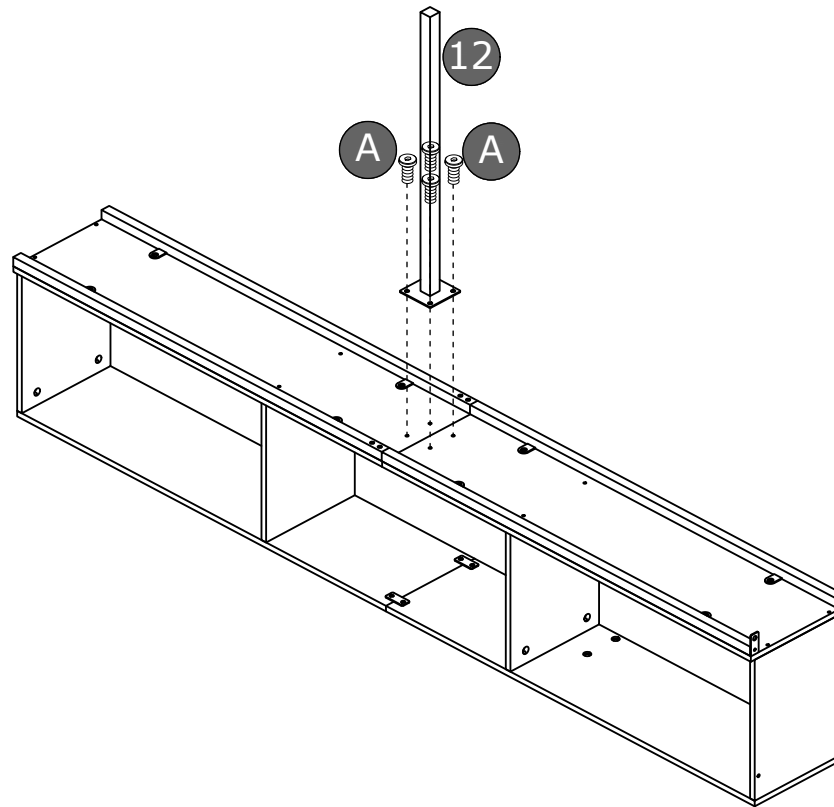


A x4pcs




P x1pc

step 19


Step19: Connect the installed shelf and the installed bed frame using screws C/E/F (E/F fix the iron pipe, C fixes the iron plate)

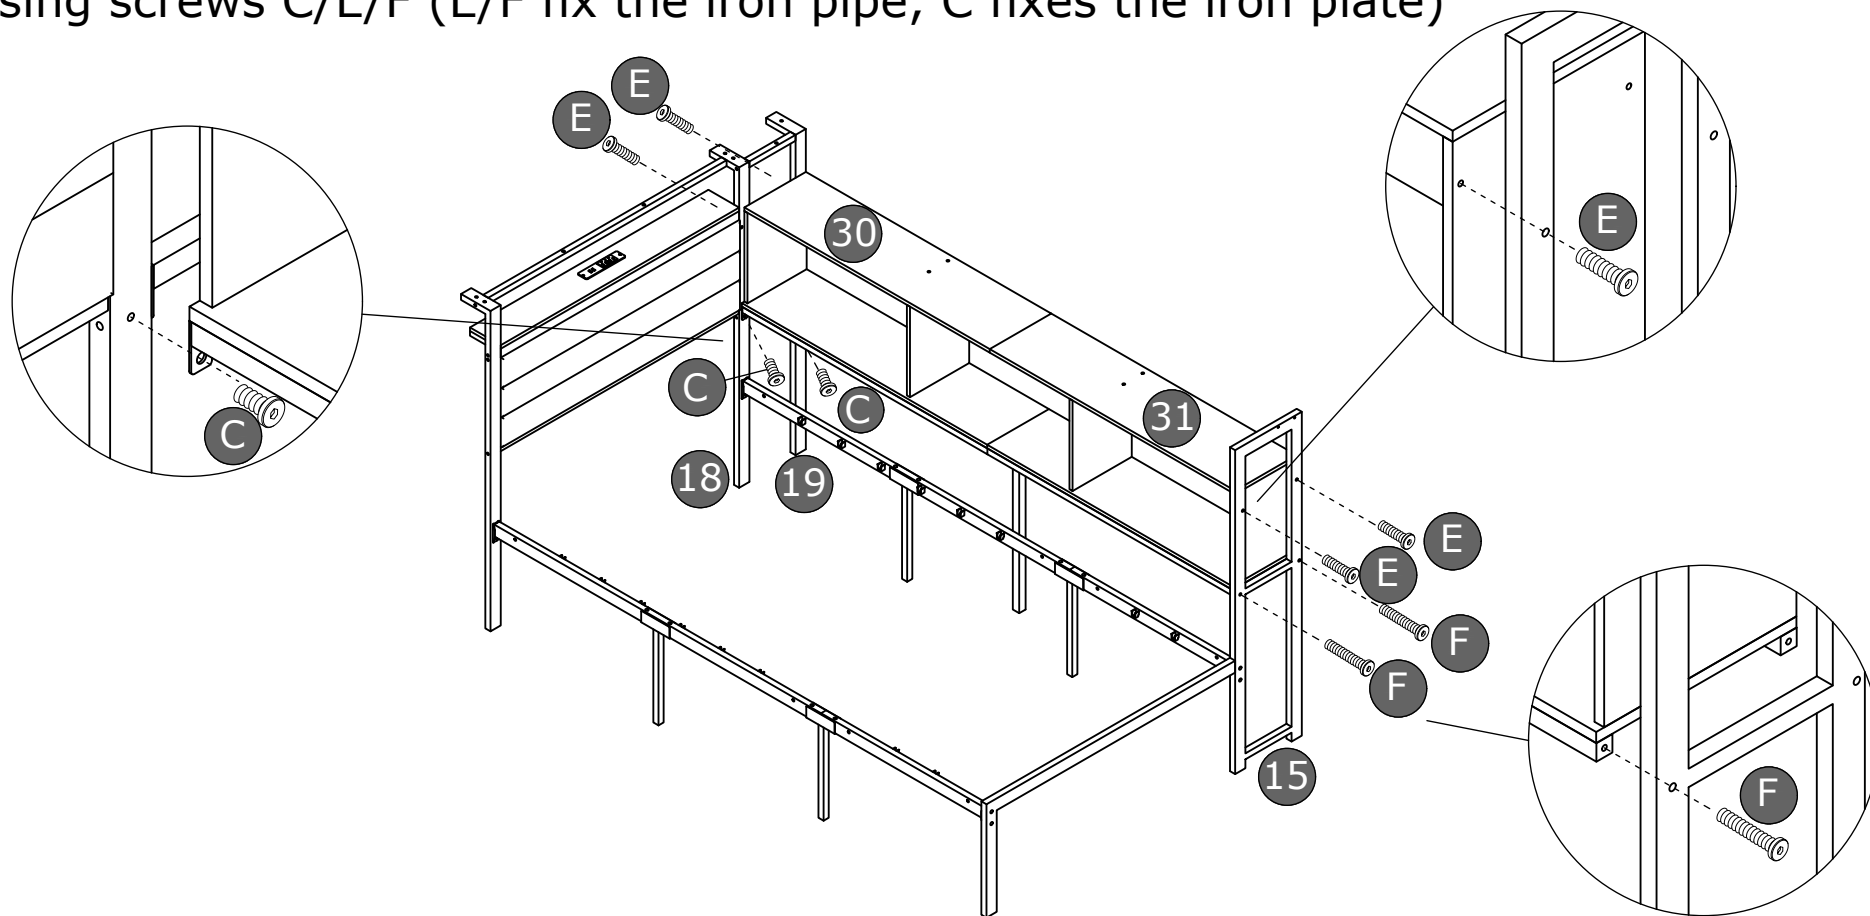


C x2pcs



E x4pcs



F x2pcs




P x1pc



step 20

Connect parts 28 and 29 using J

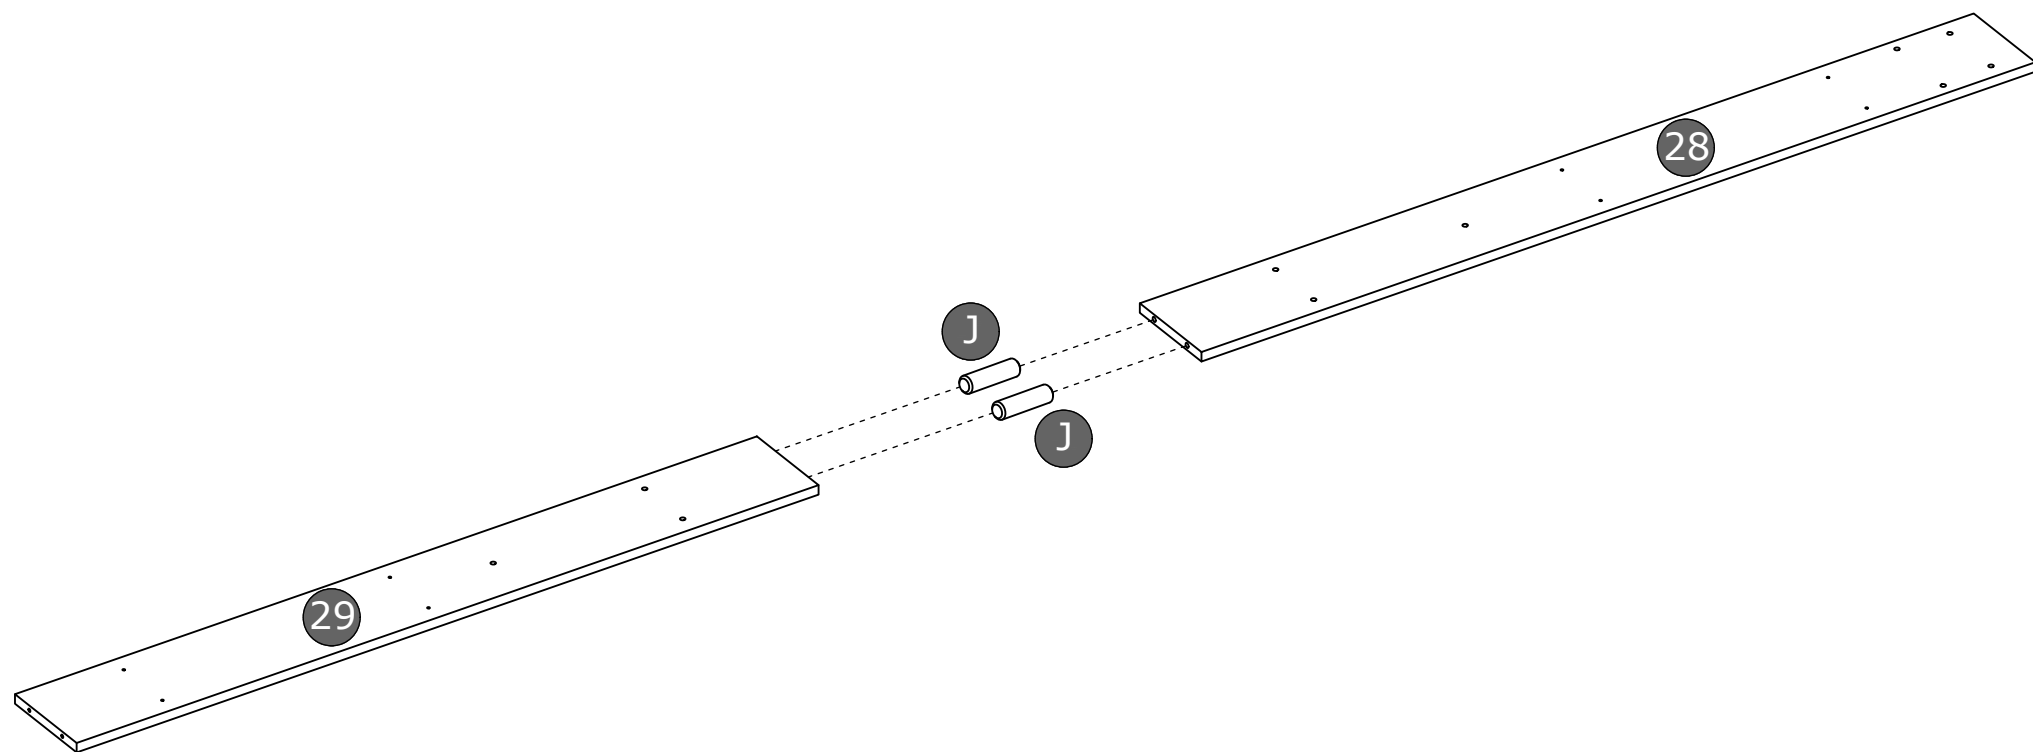

20




J x2pcs



step 21


Connect parts 13 and 14 using screw F

Then connect parts 13/14 and parts 28/29 using D

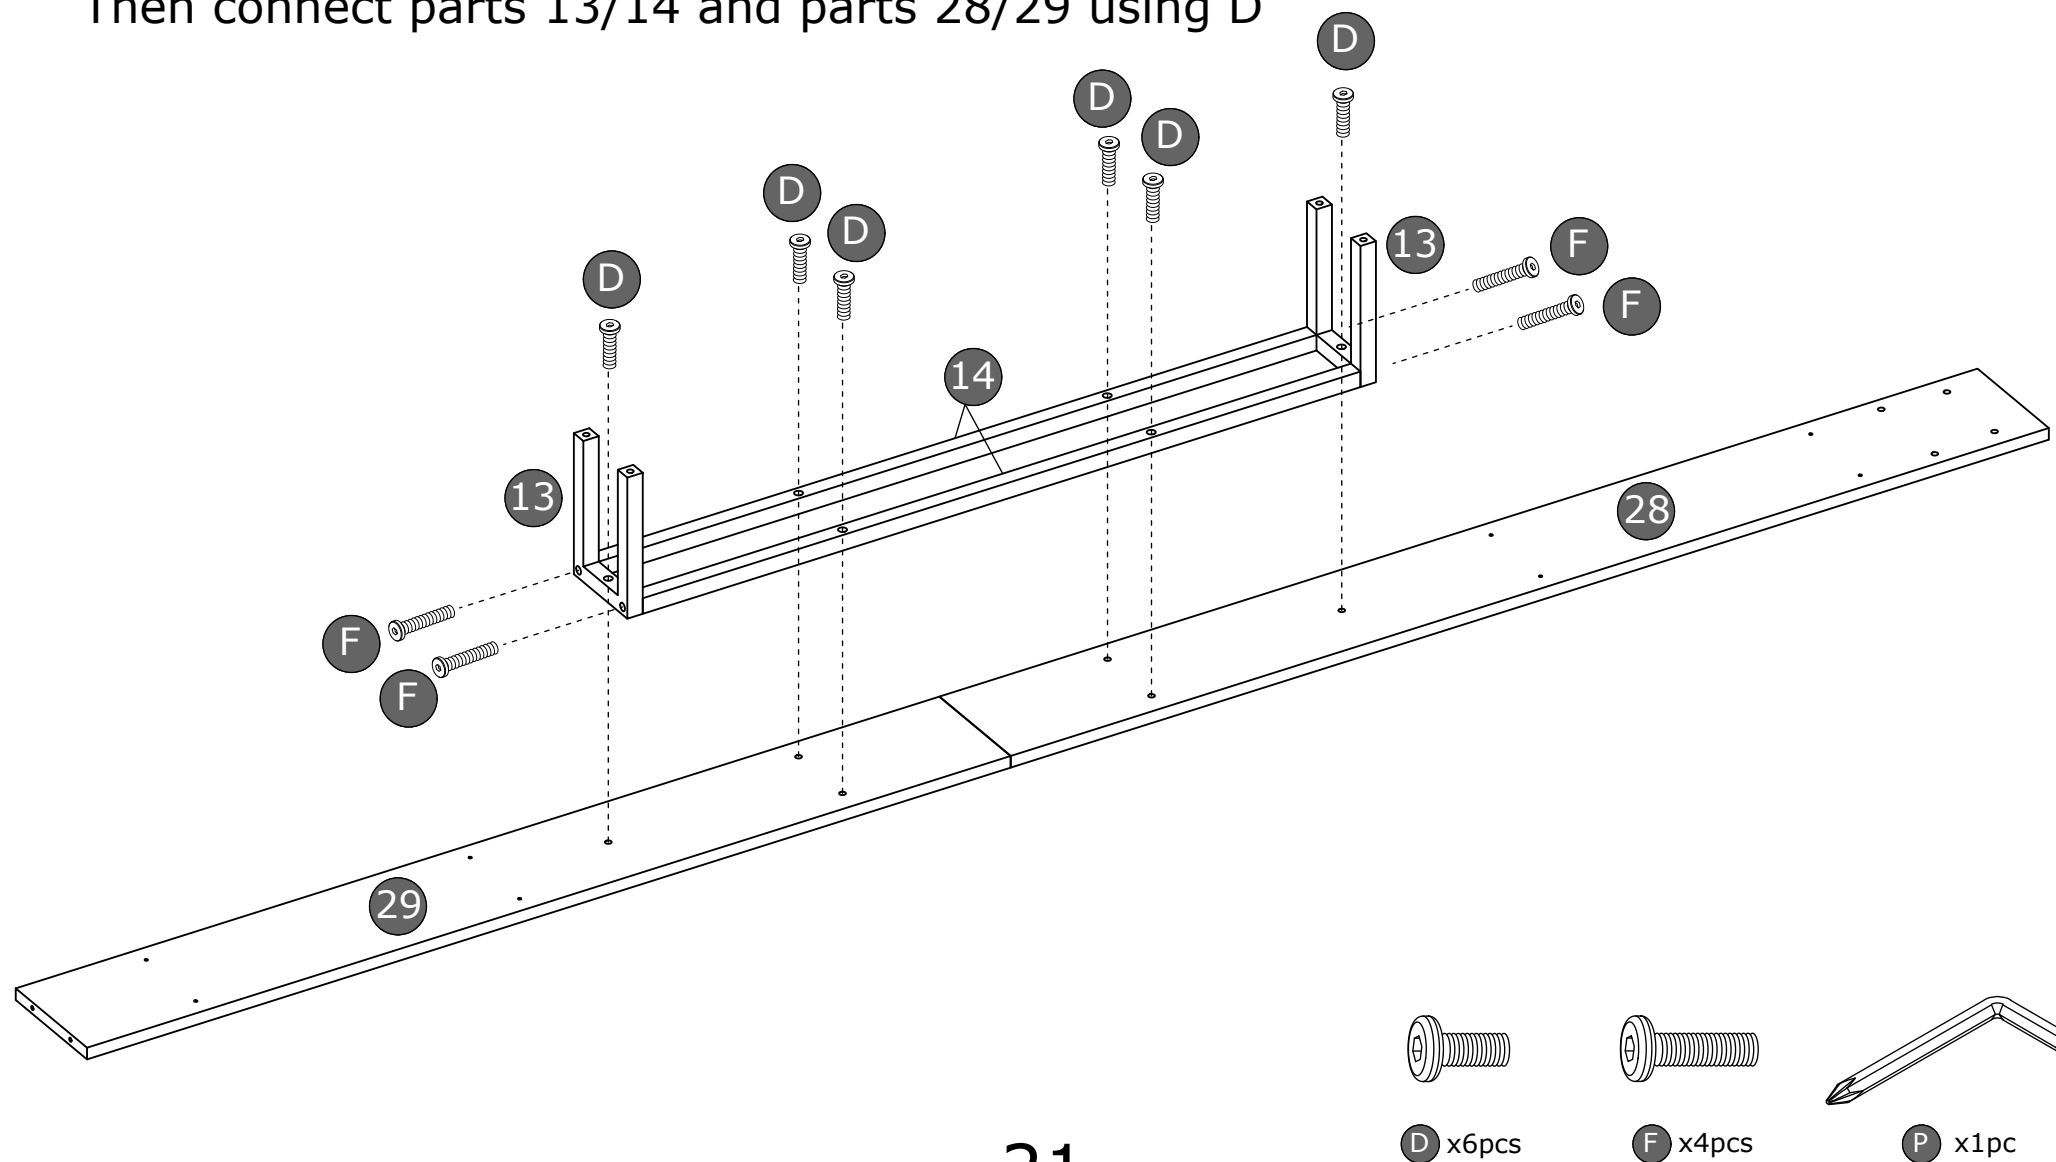

step 22


Peel off the backing paper of S1 and stick it on the back of parts 28/29/39
Then secure using S-3

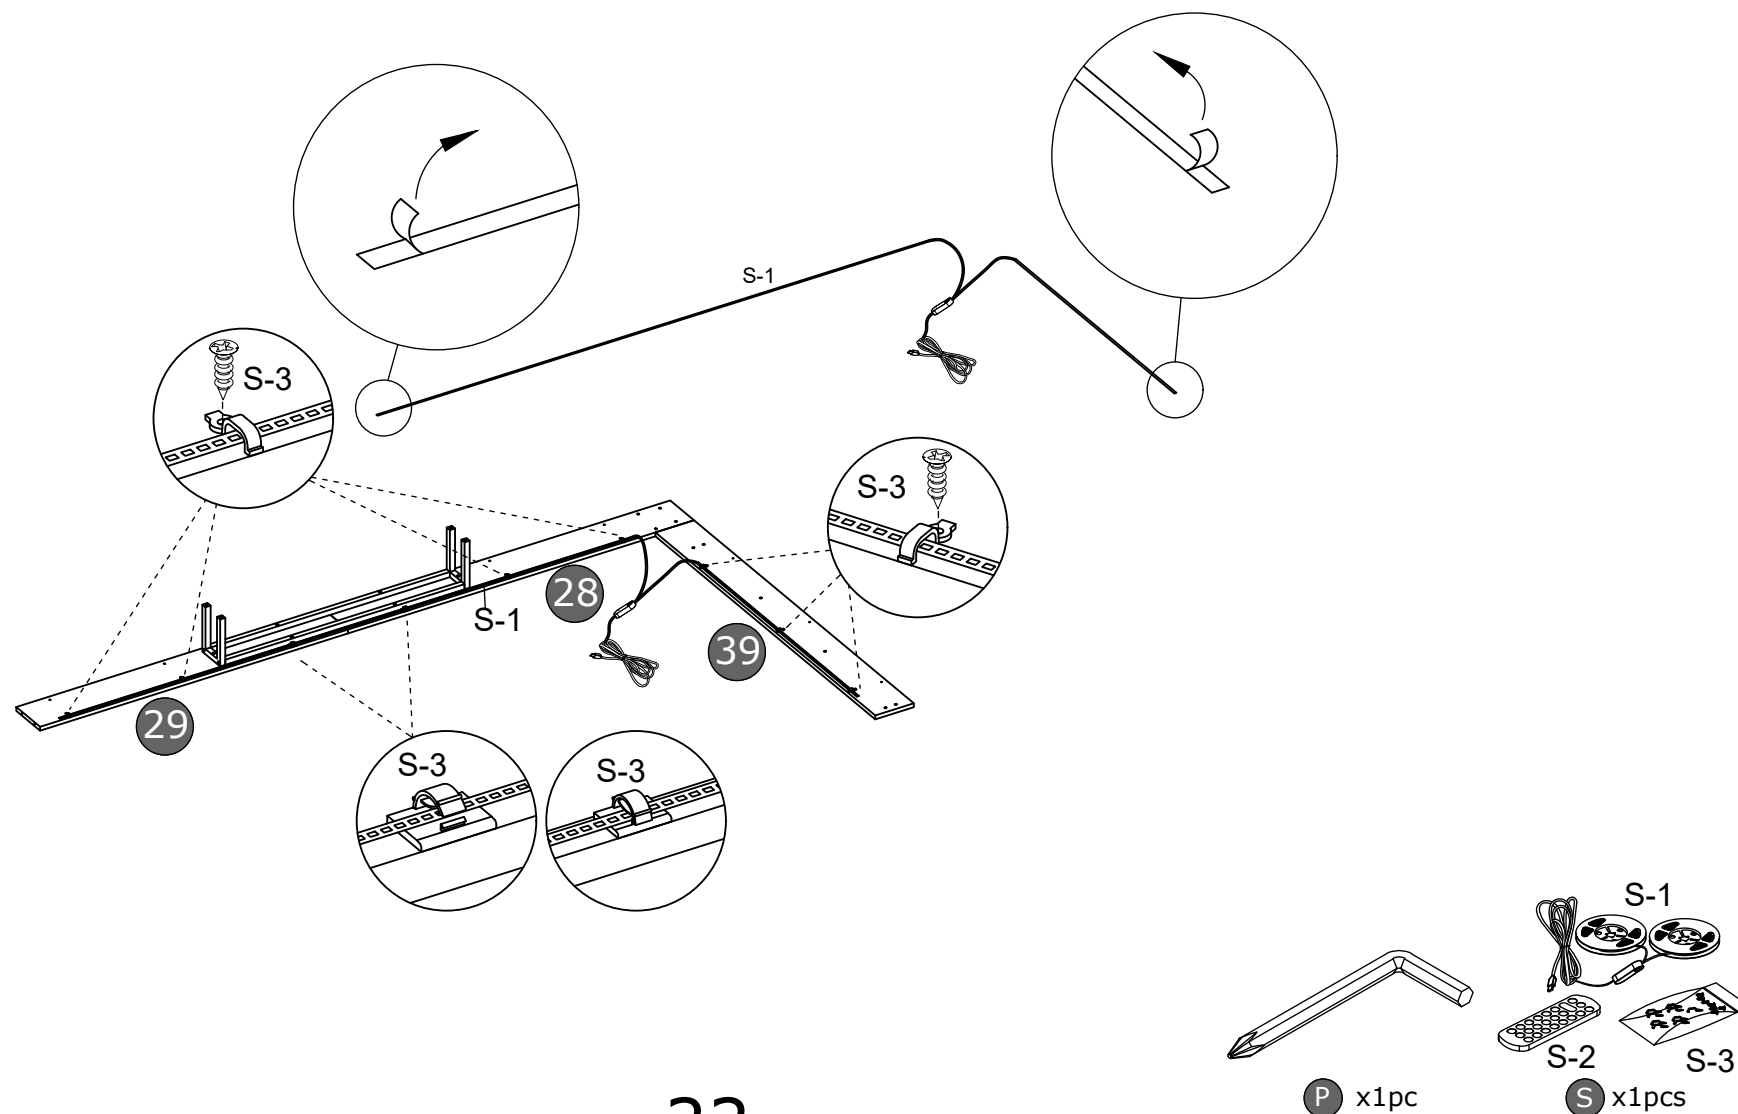




step 23

Connect parts 28/29/39 to the installed bed frame using screws E/O

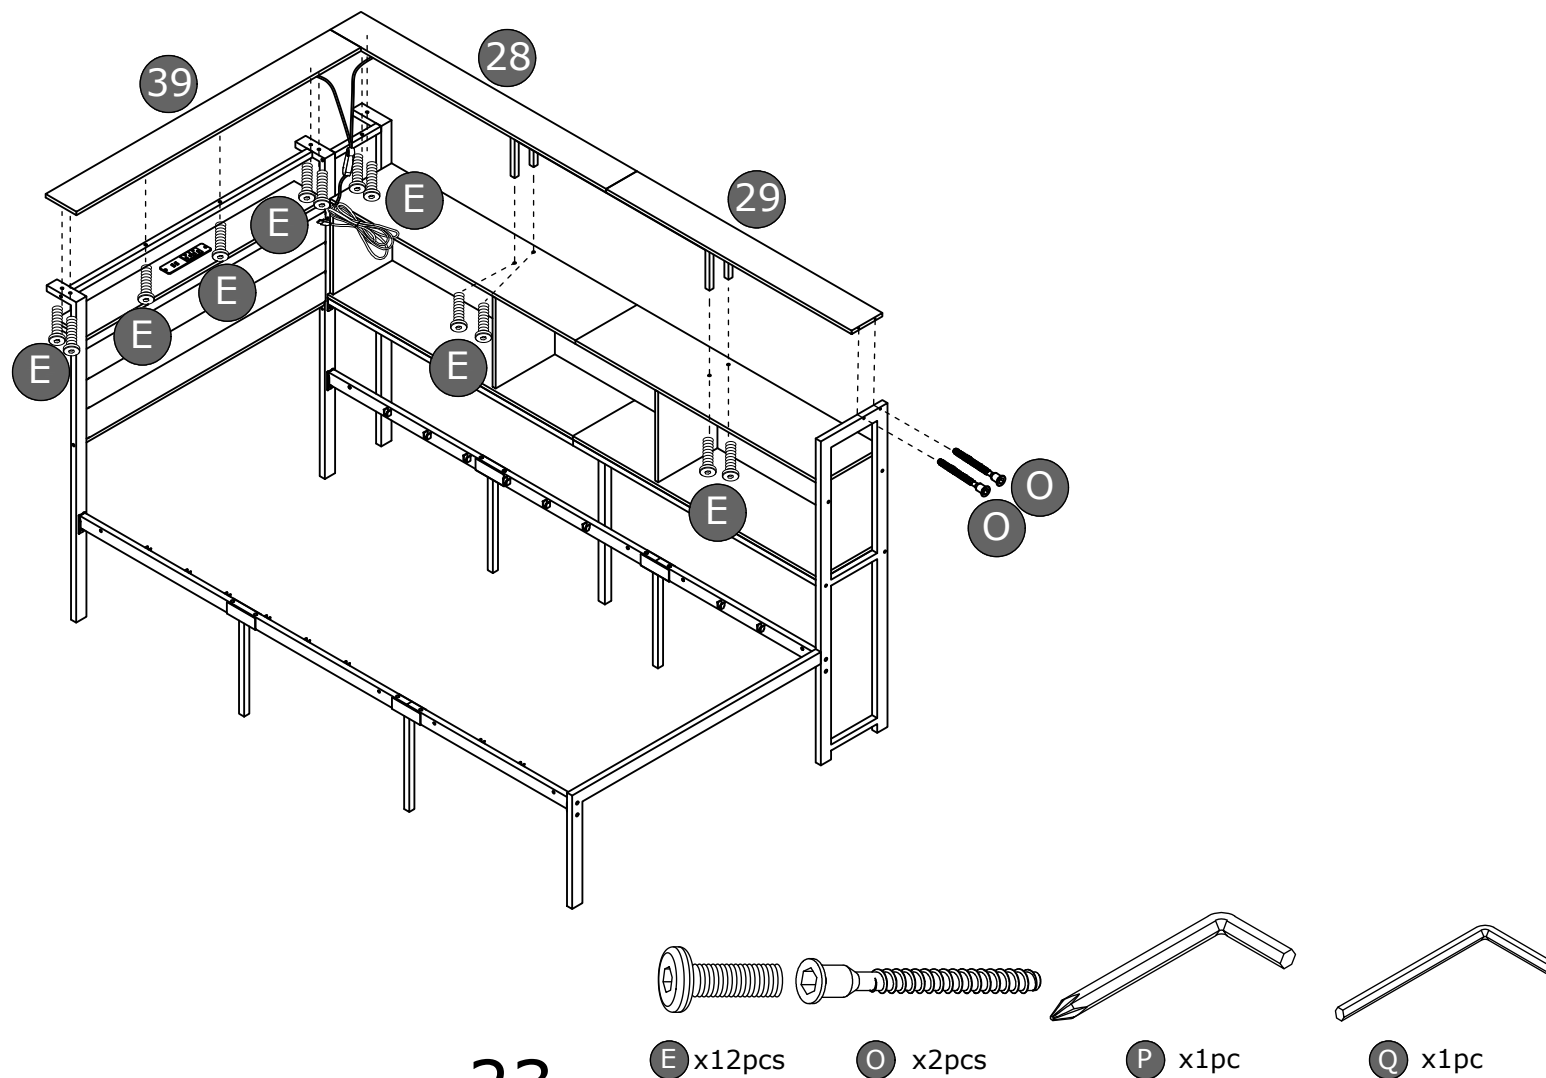


step 24


Connect part 6 to the installed bed frame using screw F

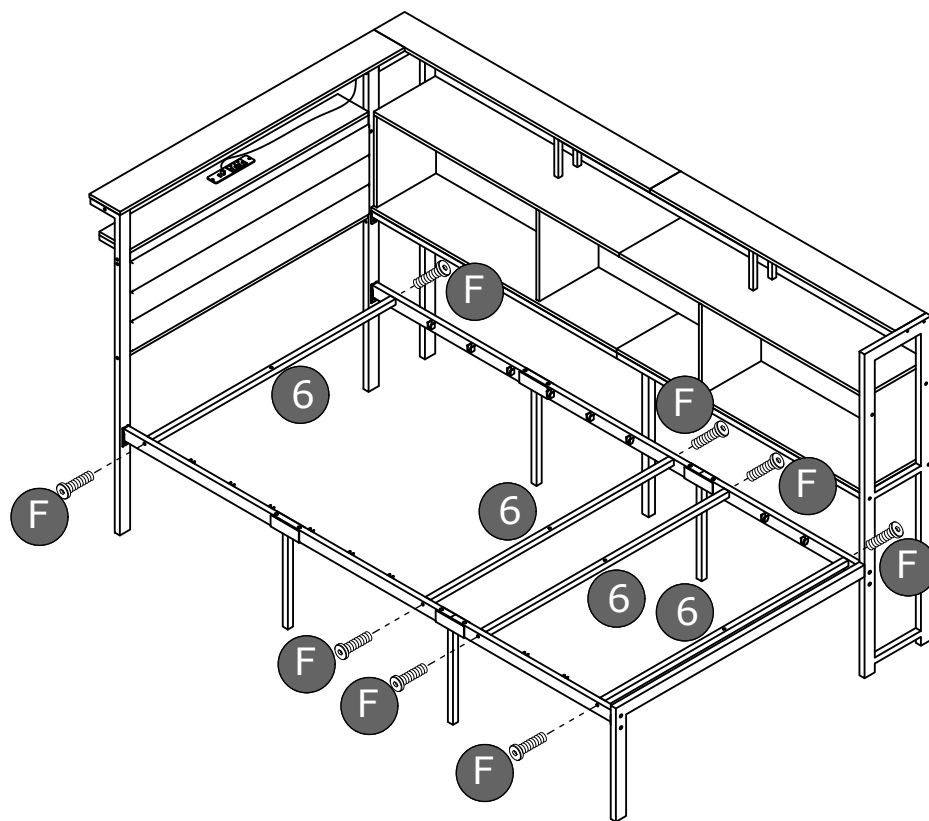

Screw F is locked at 70% first! After all the components are assembled, it is locked tightly at 100%.



F x8pcs




P x1pc



step 25



Unfold the frame 42

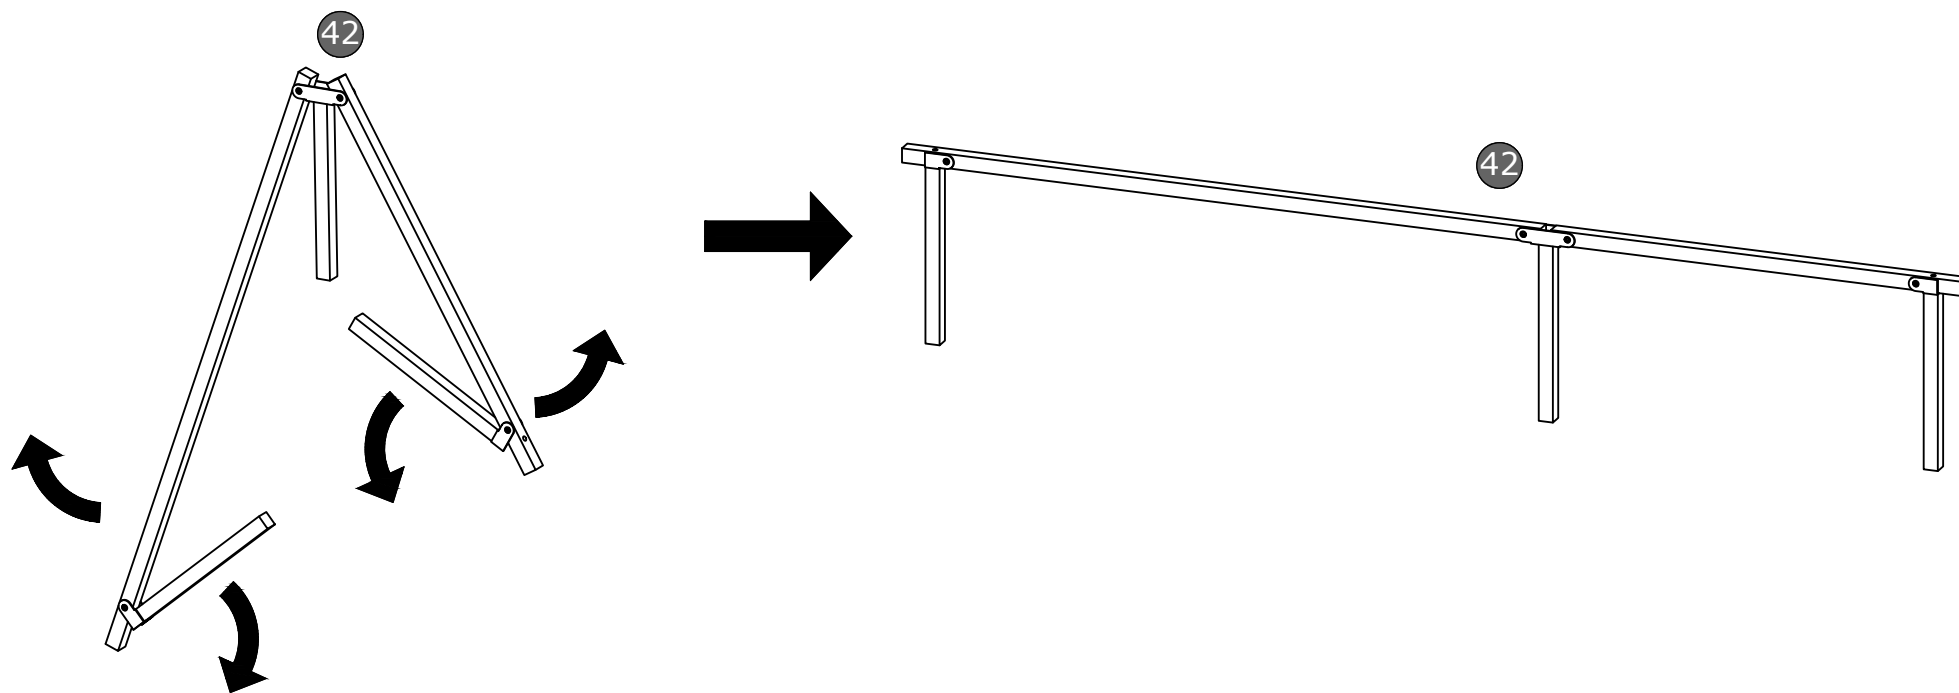


step 26

Fix the metal tube 6 on the frame 42 with screws G

To prevent friction noise, unroll part U and fit it on part 42 , The lenght of part U can cut as you will.

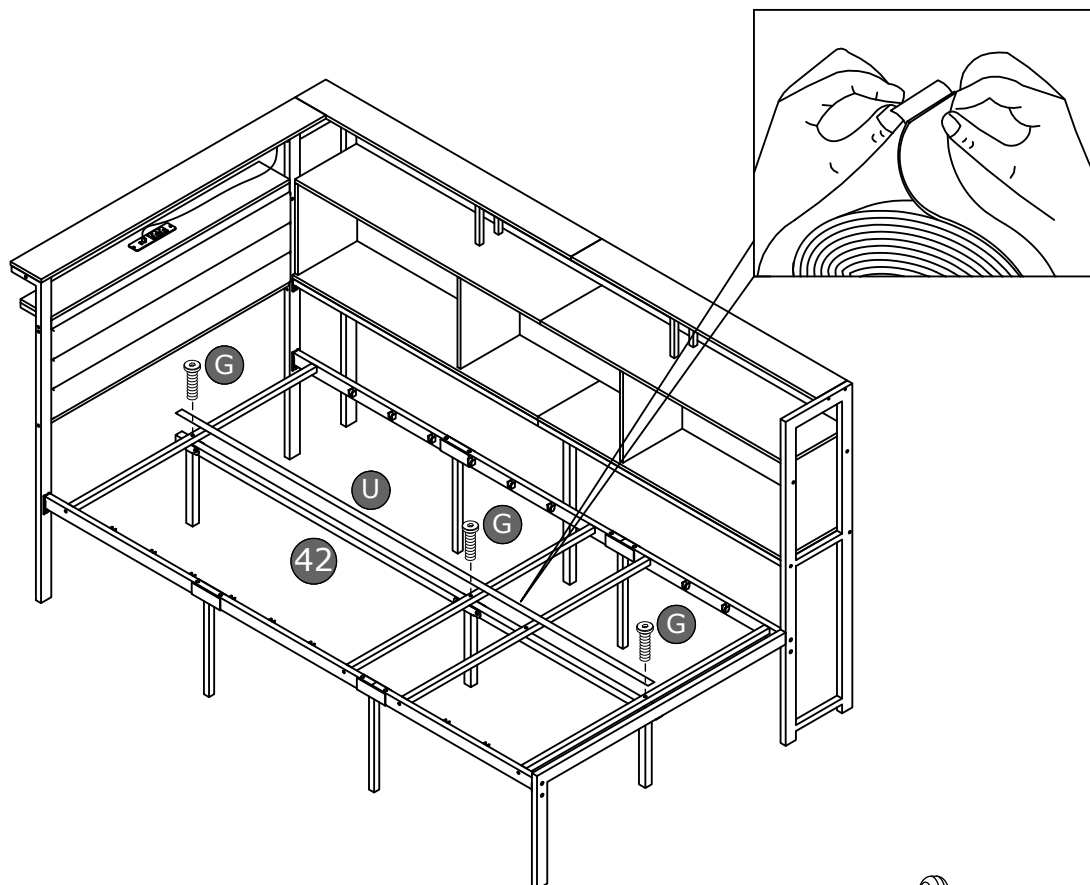

G x3pcs




P x1pc



U x1pc




step 27

Insert part 7 into the grooves of the bed frame

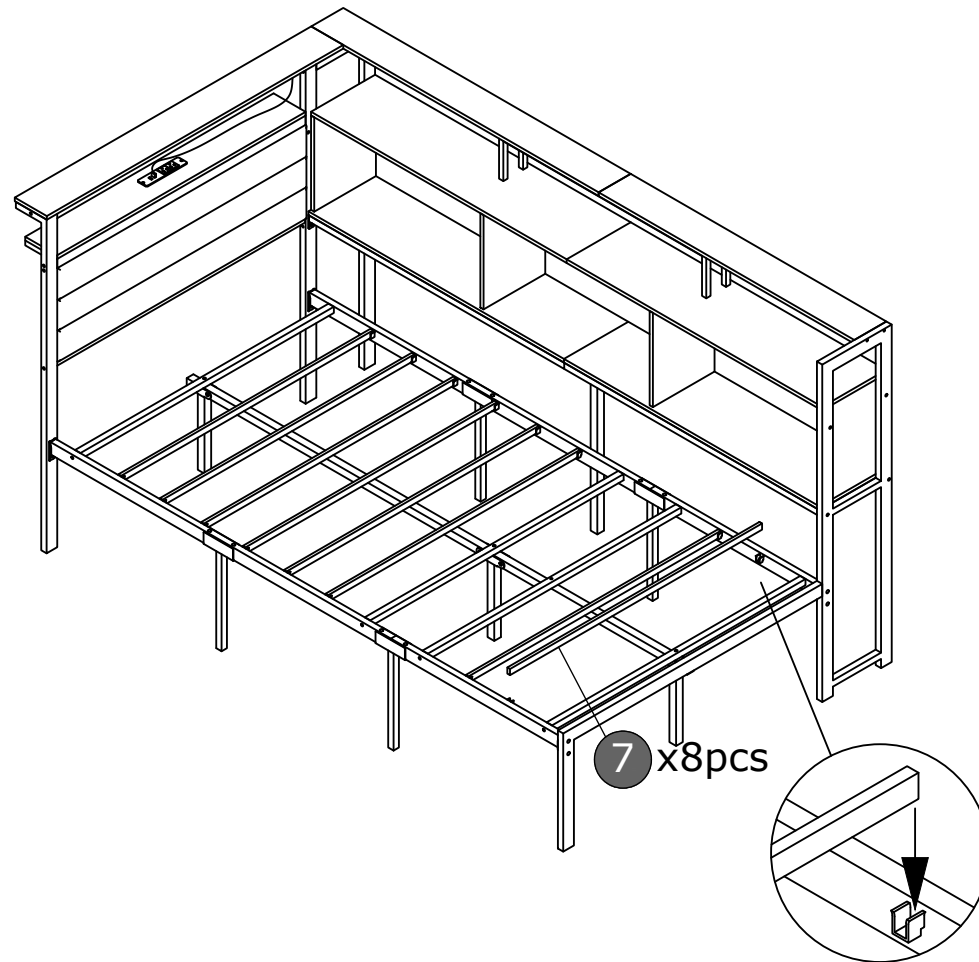


step 28


Unfold part 24, place part 25 inside, and then connect part 25 and T using screw M

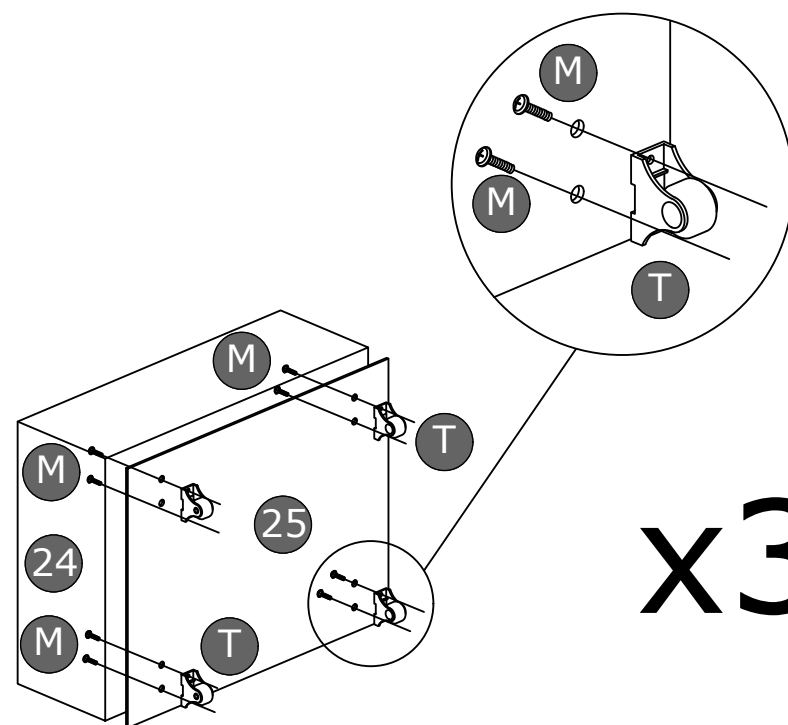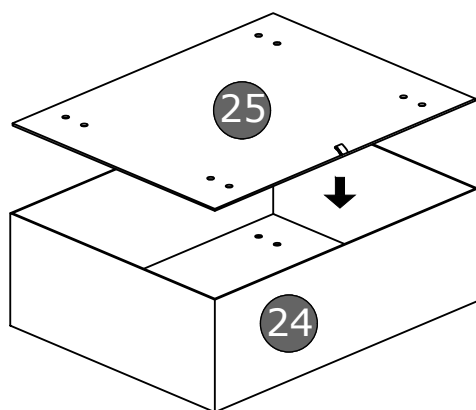

M x24pcs

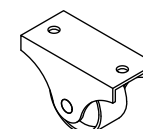

T x12pcs




P x1pc



step 29


Push the drawer under the bed frame

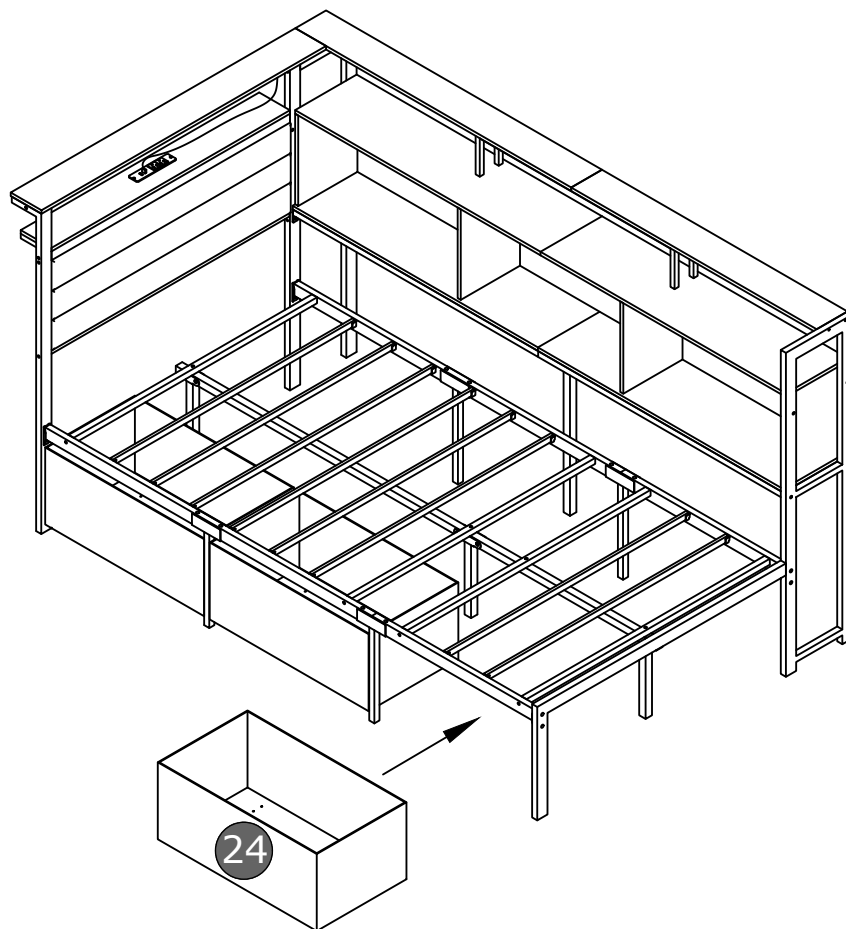




step 30


Connect parts 22 and 40 using screws B and D (screw D fixes the iron pipe, screw B fixes the iron plate)

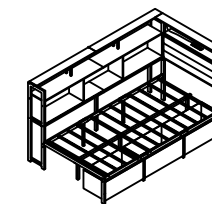


Type2

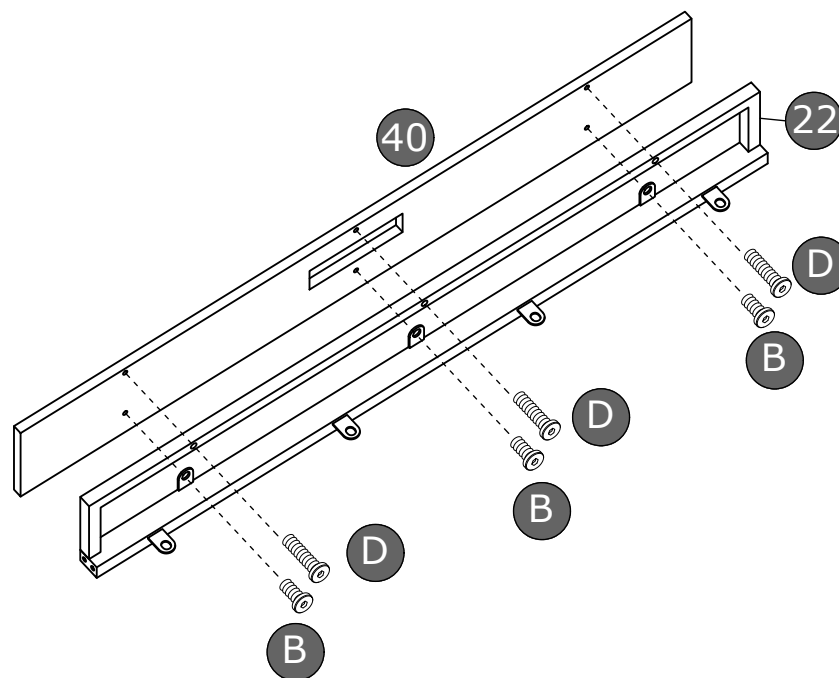

B x3pcs



D x3pcs




P x1pc

30



step 31


Connect parts 22 and 41 using screw C

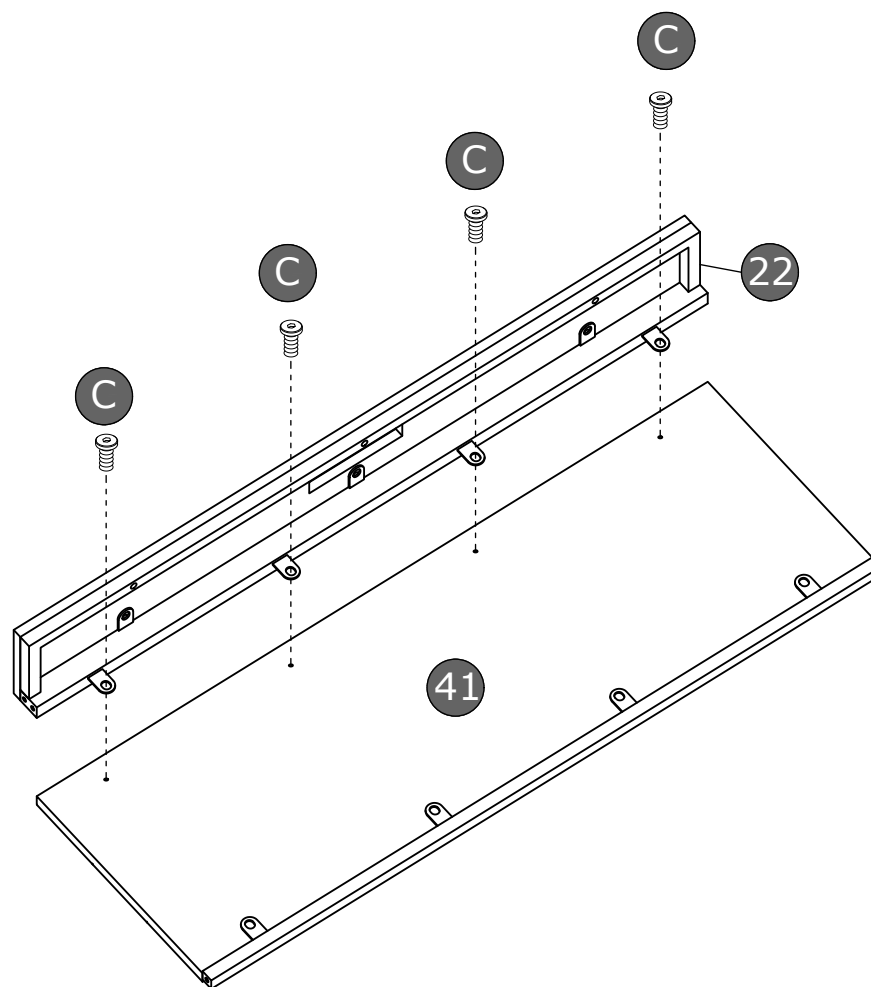

31



C x4pcs




P x1pc



step 32


Connect parts 26 and 40 using screw N

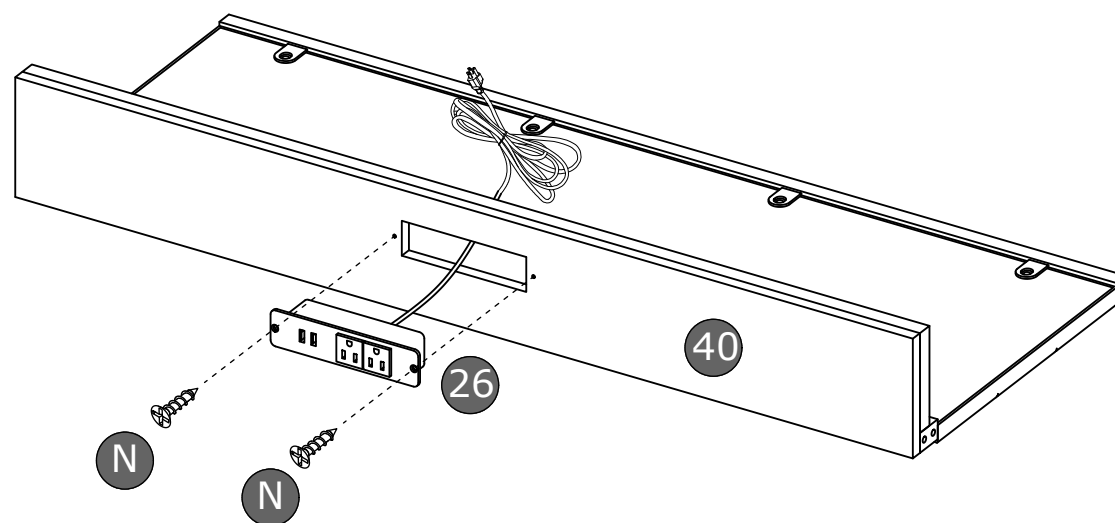

32



N x2pcs




P x1pc




step 33

Connect parts 17/18 and 23/installed frame using screw G

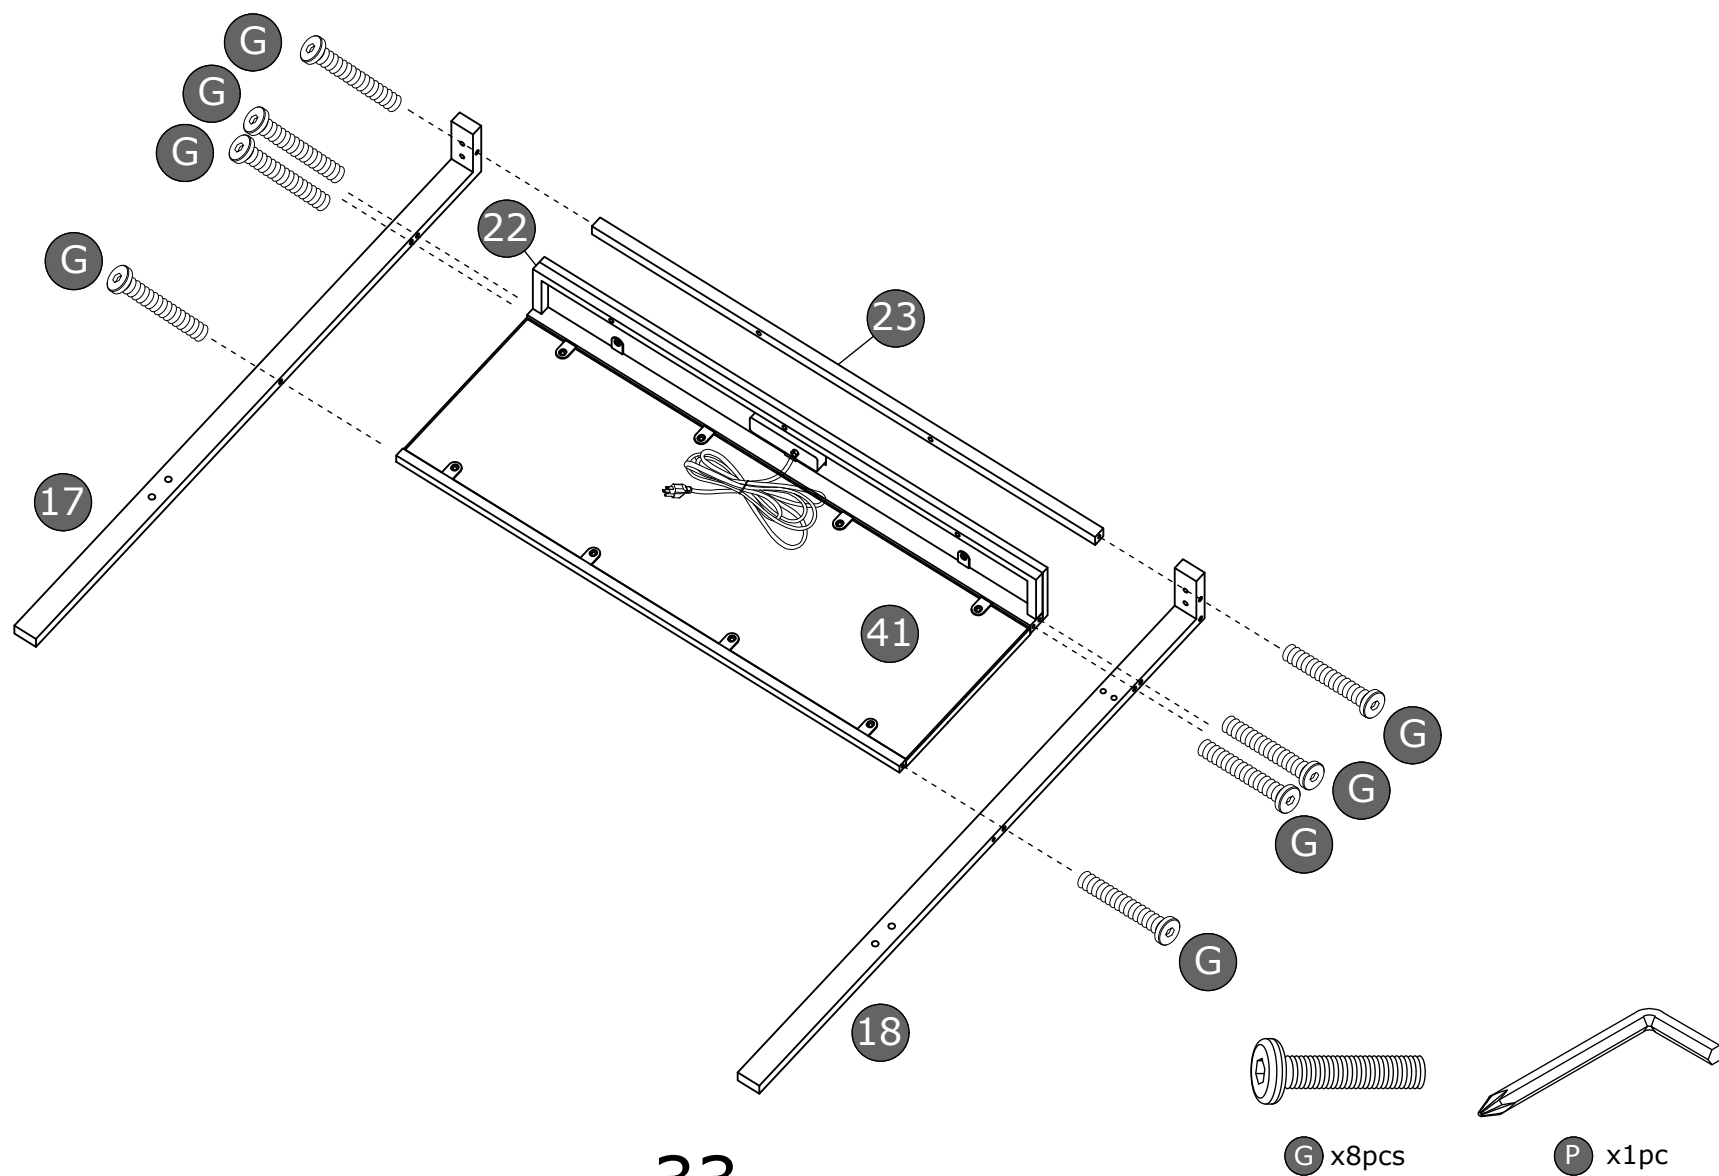

step 34


Connect parts 18/19/20/21 using screws C and G (screw G fixes the iron pipe, screw B fixes the iron plate)

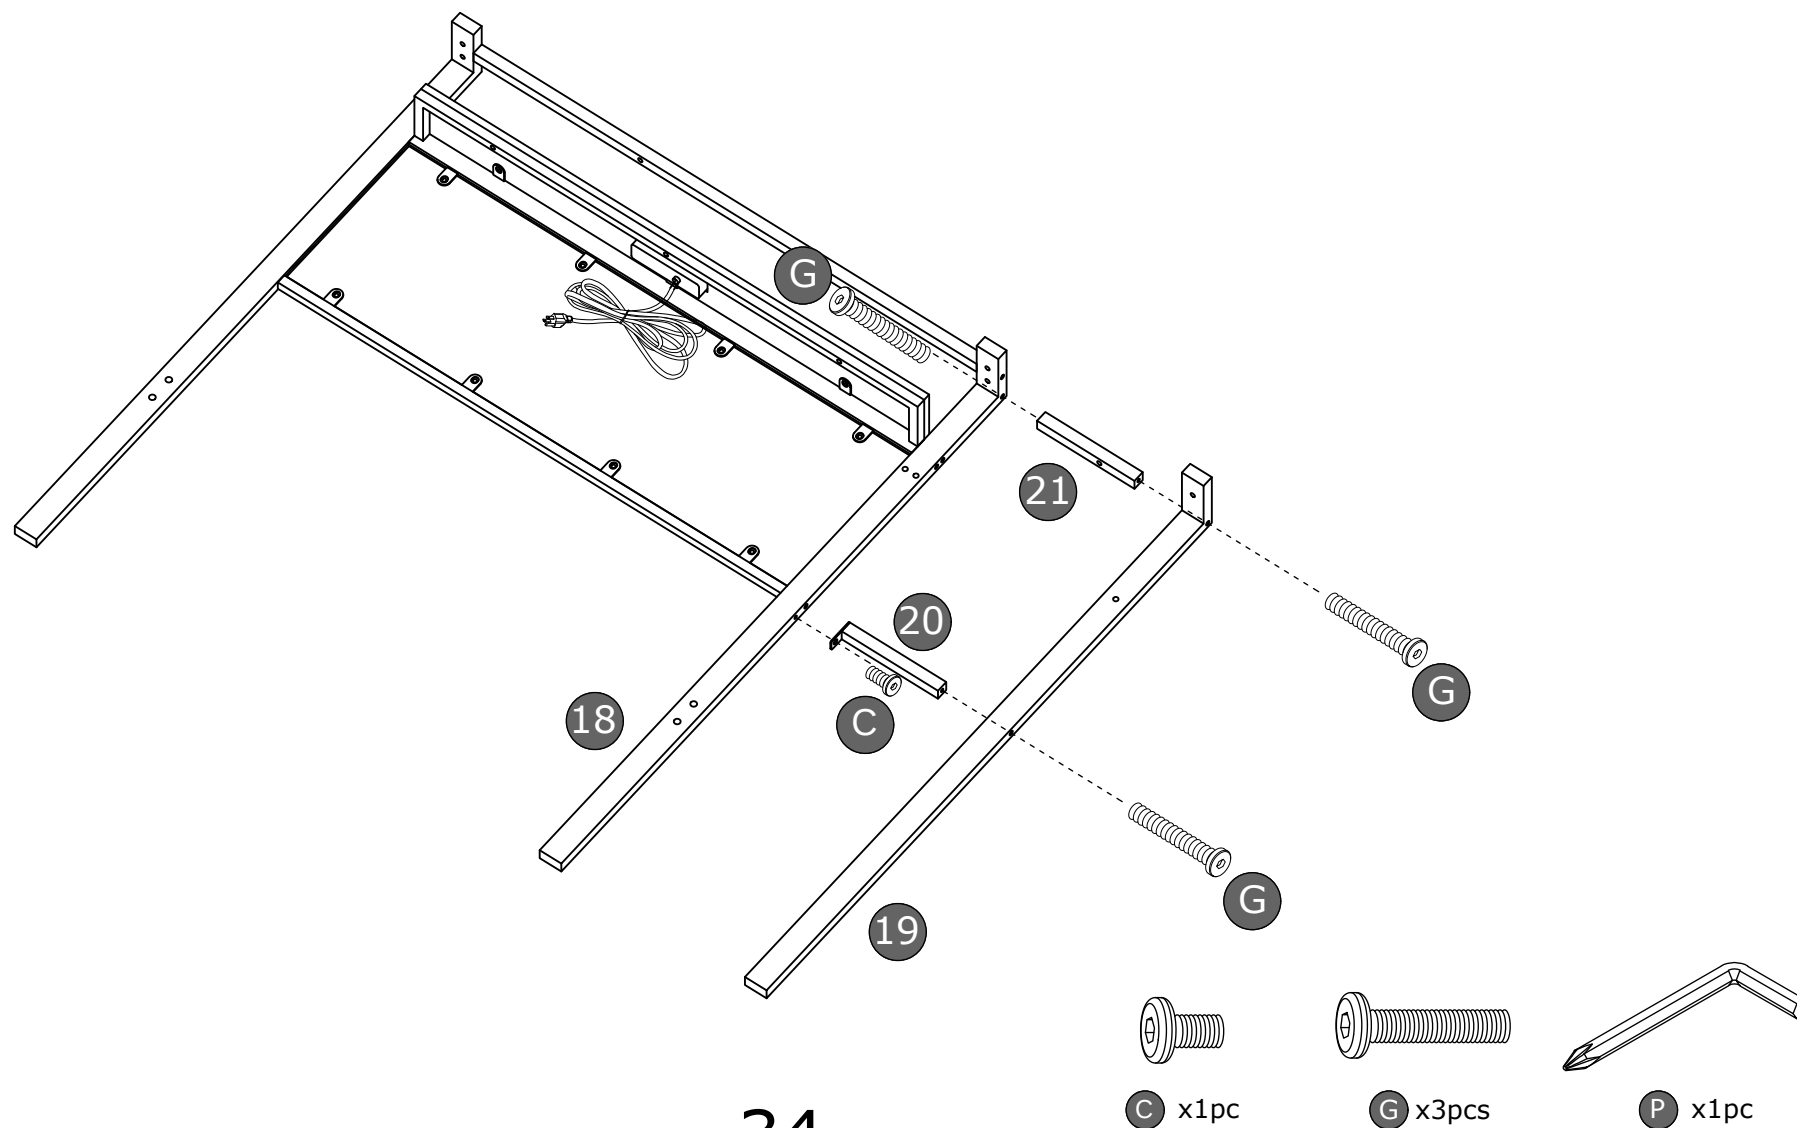



step 35



Connect part 5 and parts 1/2/3/4 using screw I

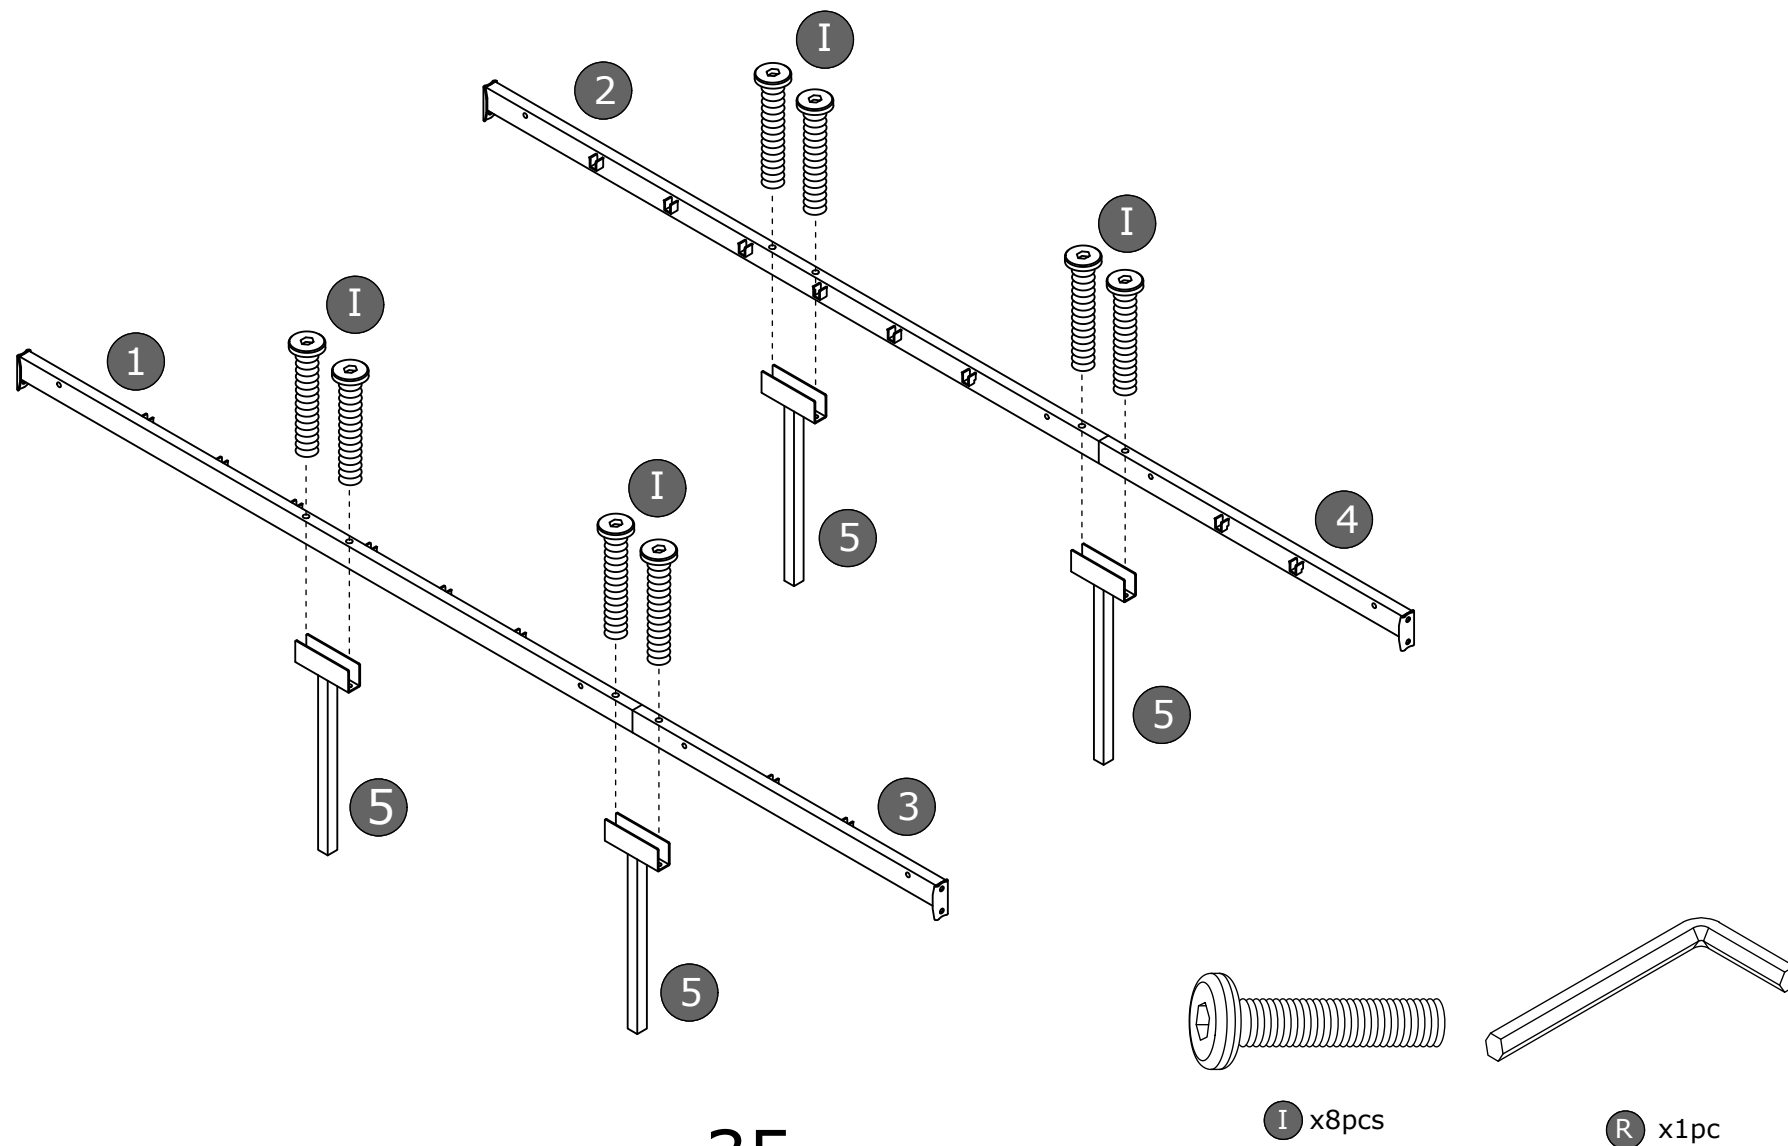




step 36

Connect parts 15 and 16 using screw G

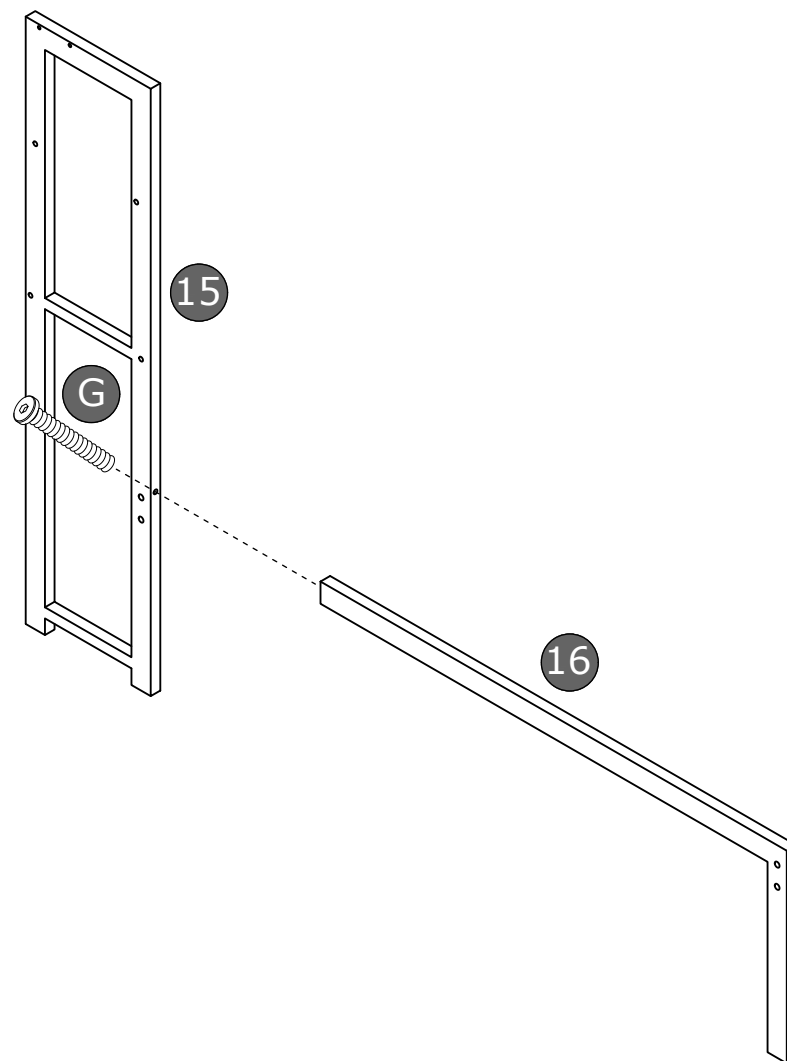

G x1pc




P x1pc

36

step 37


Connect parts 1/2 to the headboard frame and parts 3/4 to the footboard frame using screw H

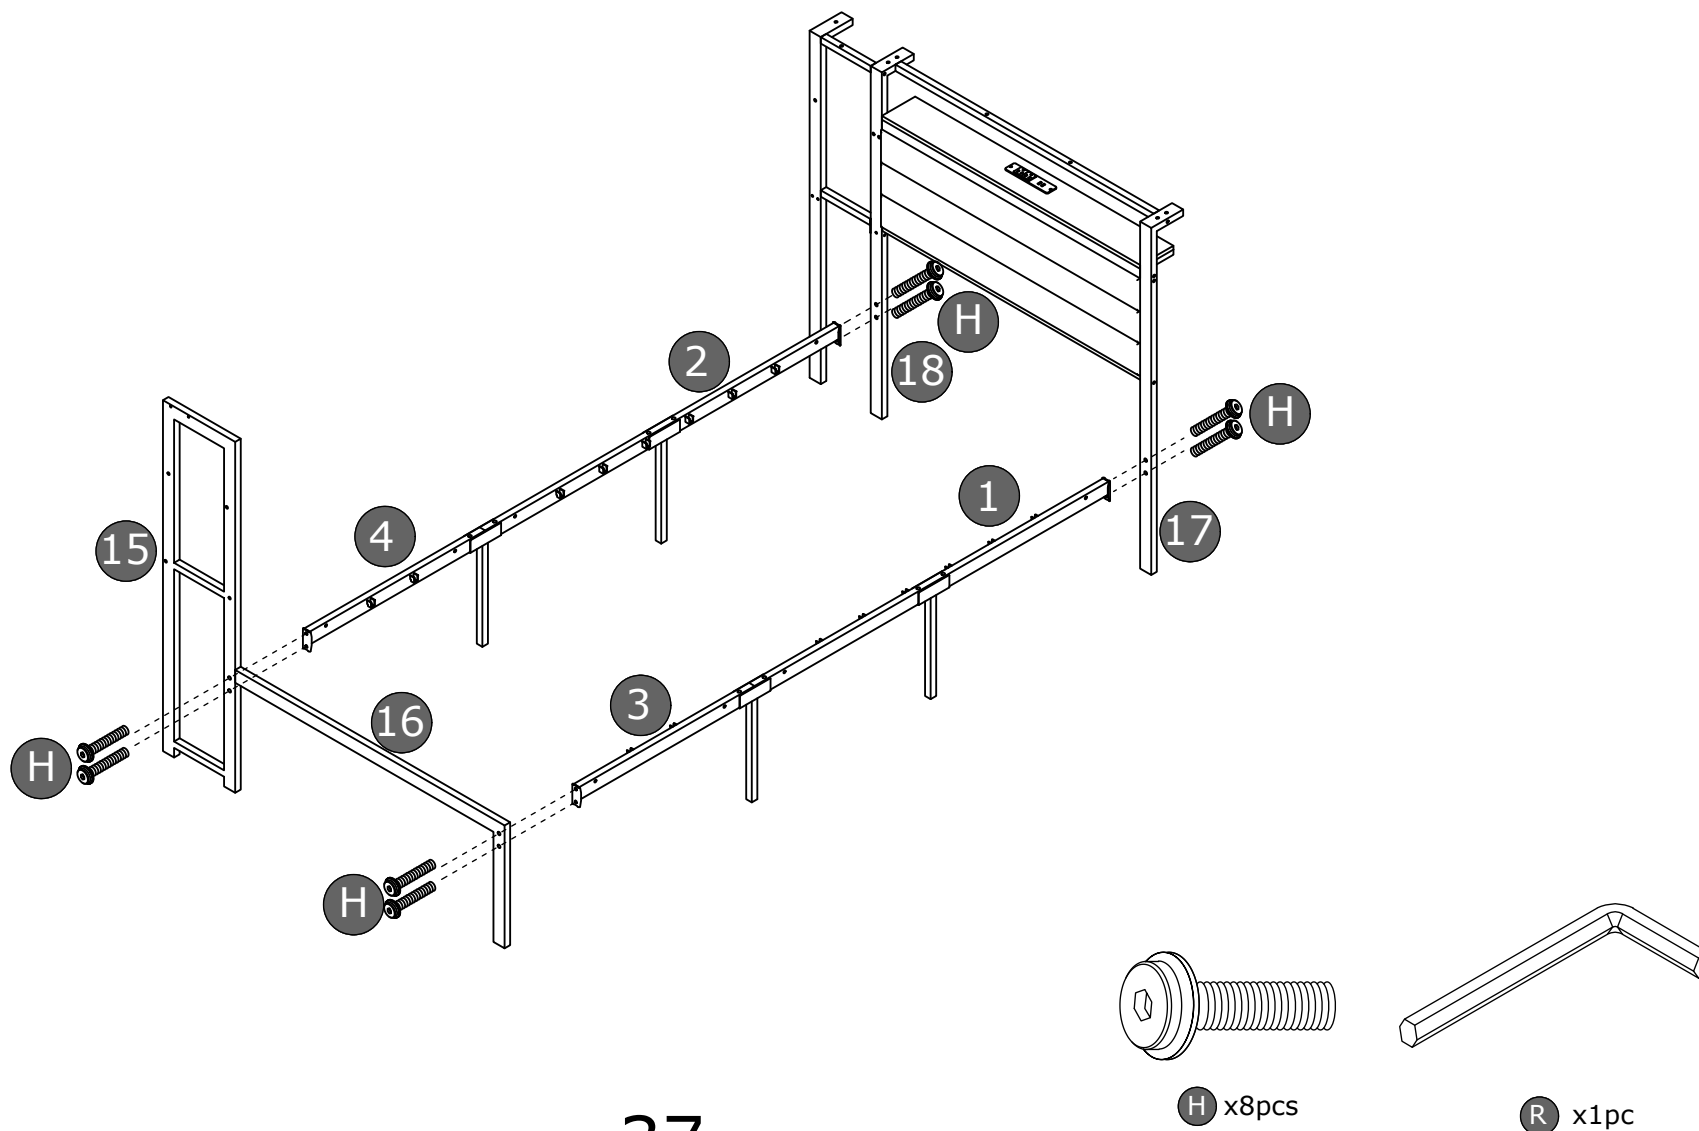



step 38

Connect parts 30 and 31 using J


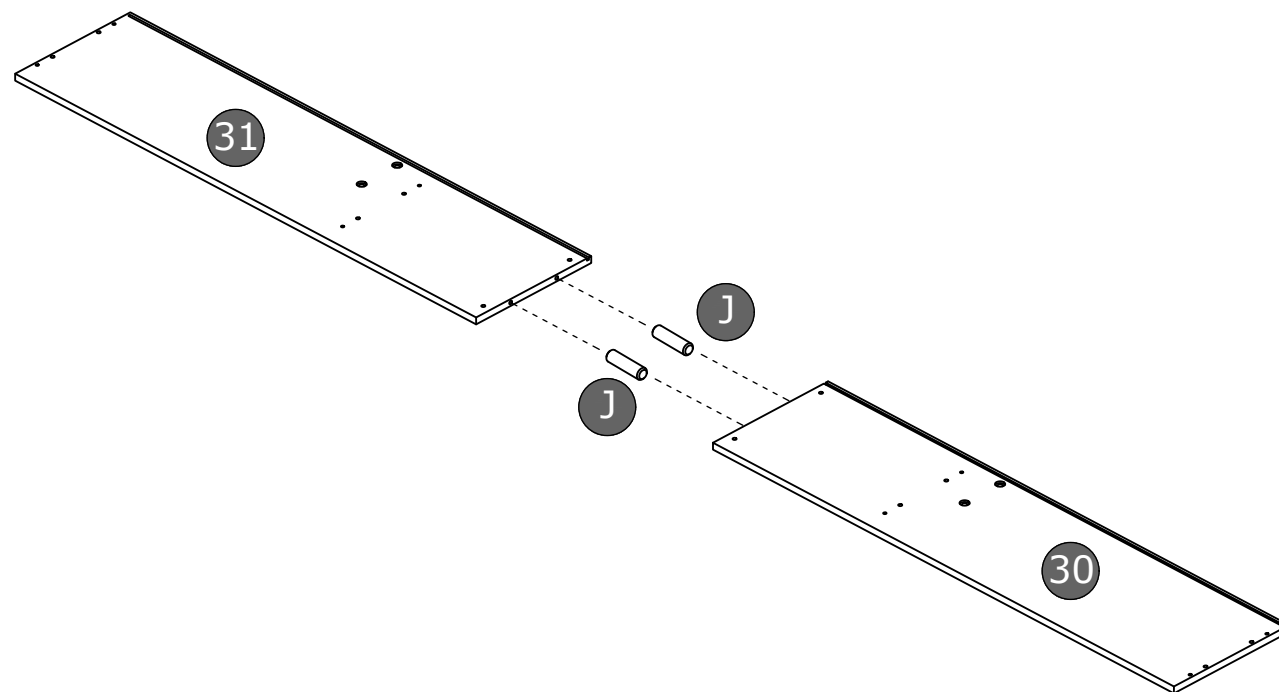


J x2pcs


38

step 39

Connect part 27 and parts 30/31 using screw A

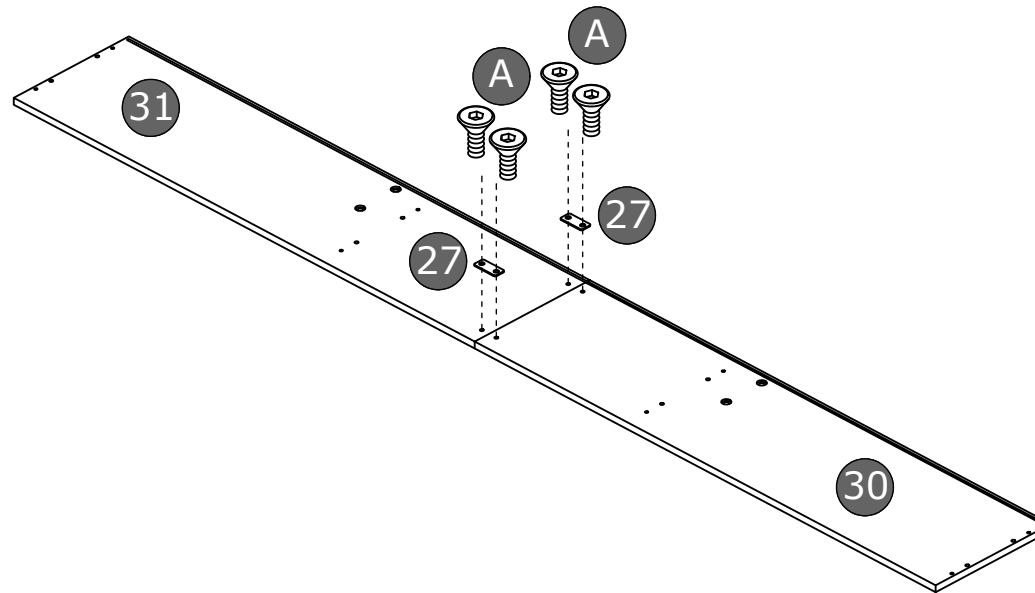

A x4pcs





P x1pc




step 40

Insert K into the holes of parts 30/31

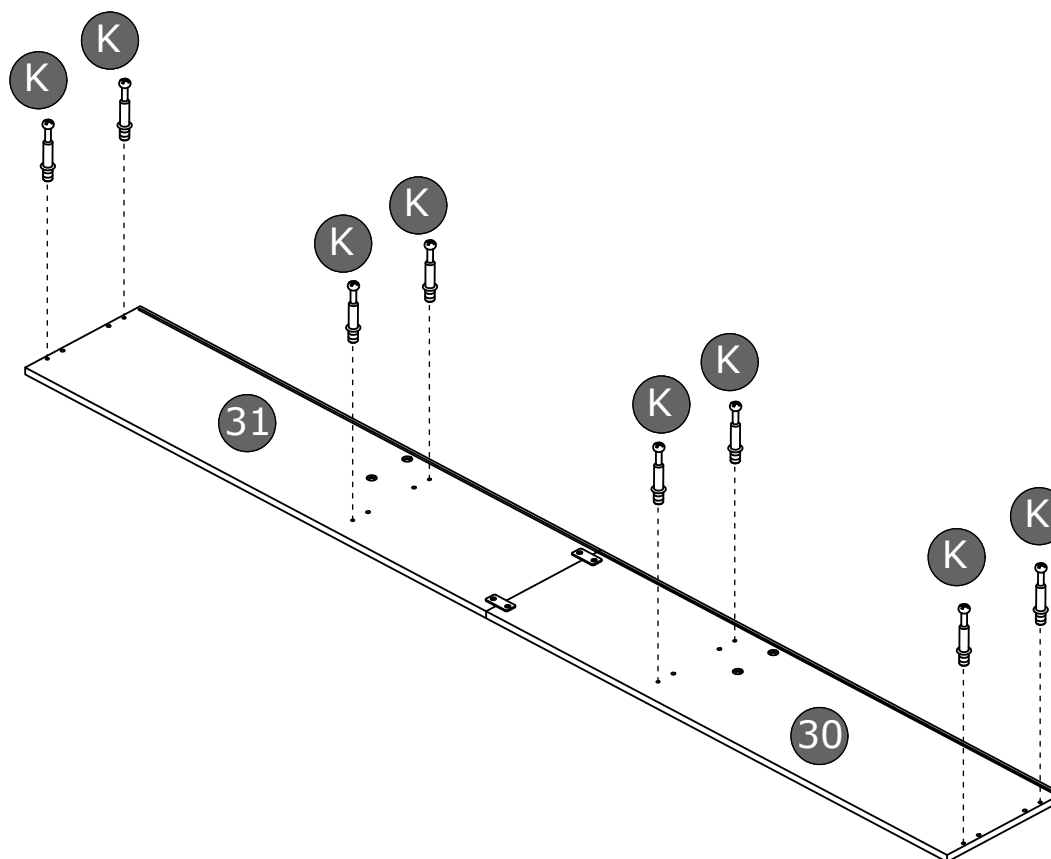

K x8pcs






P x1pc

40

step 41


Connect parts 33/34 to part 30 and parts 35/36 to part 31 using K/J
Then insert knob L and tighten.

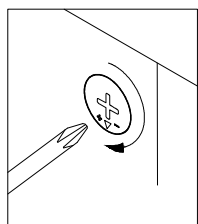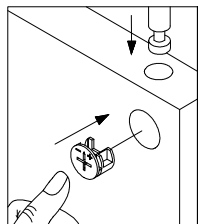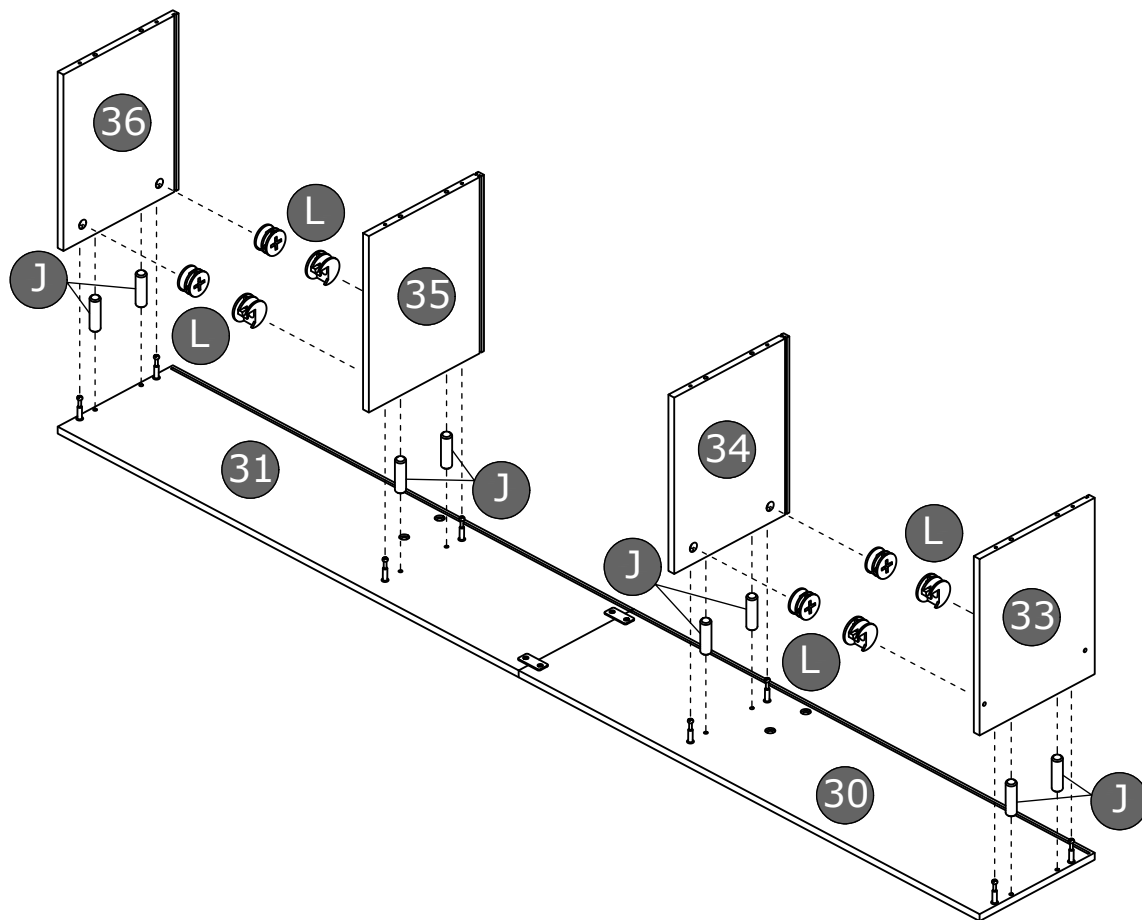



step 42

Insert three pieces of 32 into the grooves

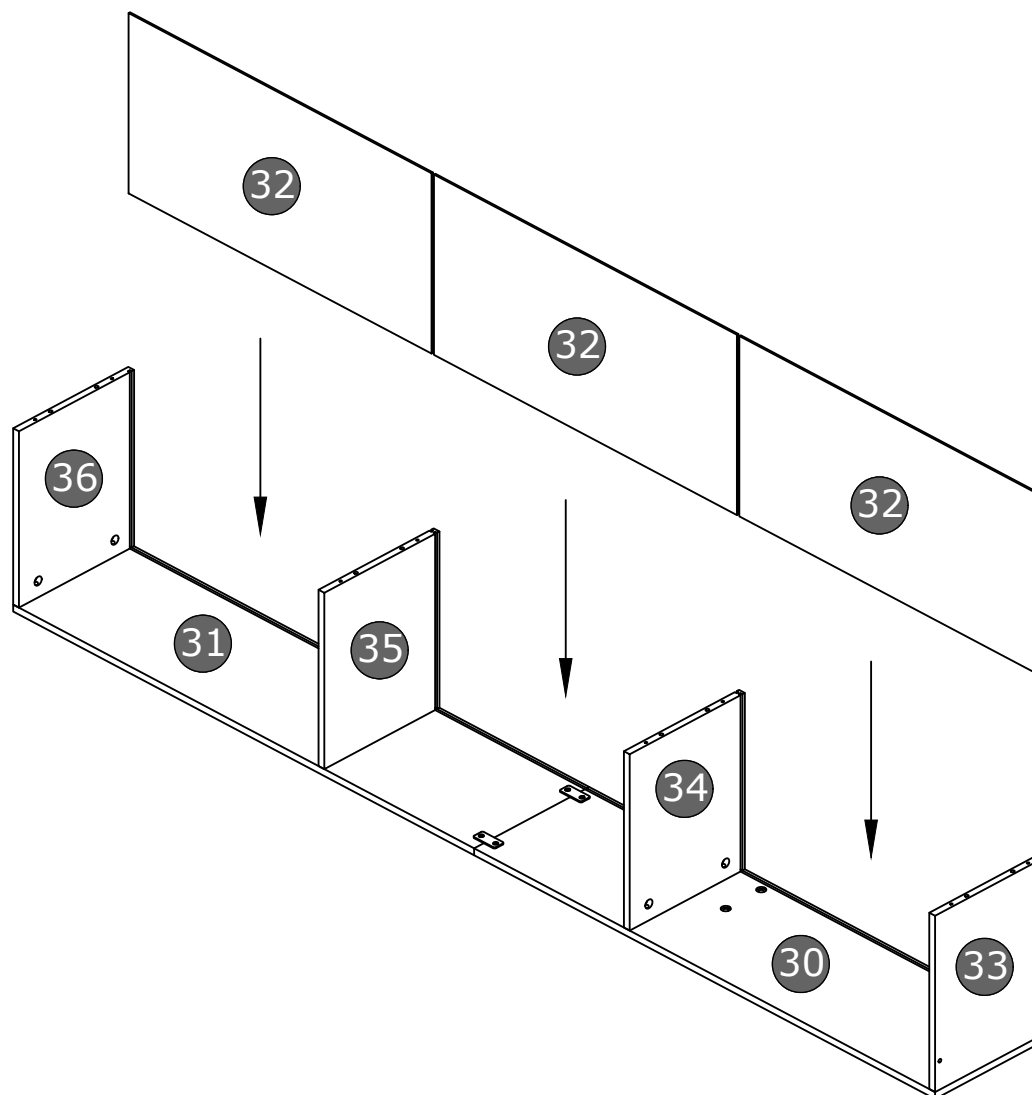


42



step 43


Insert three pieces of 32 into the grooves

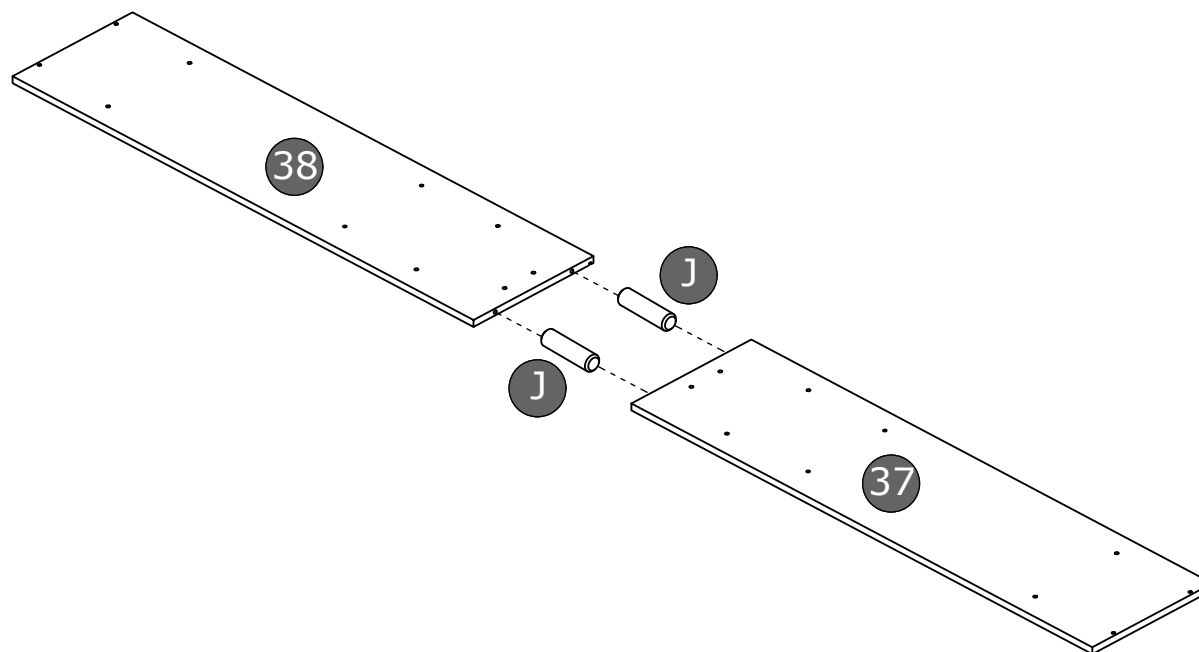

J x2pcs

step 44


Connect parts 37/38 to the installed frame using J and screw O

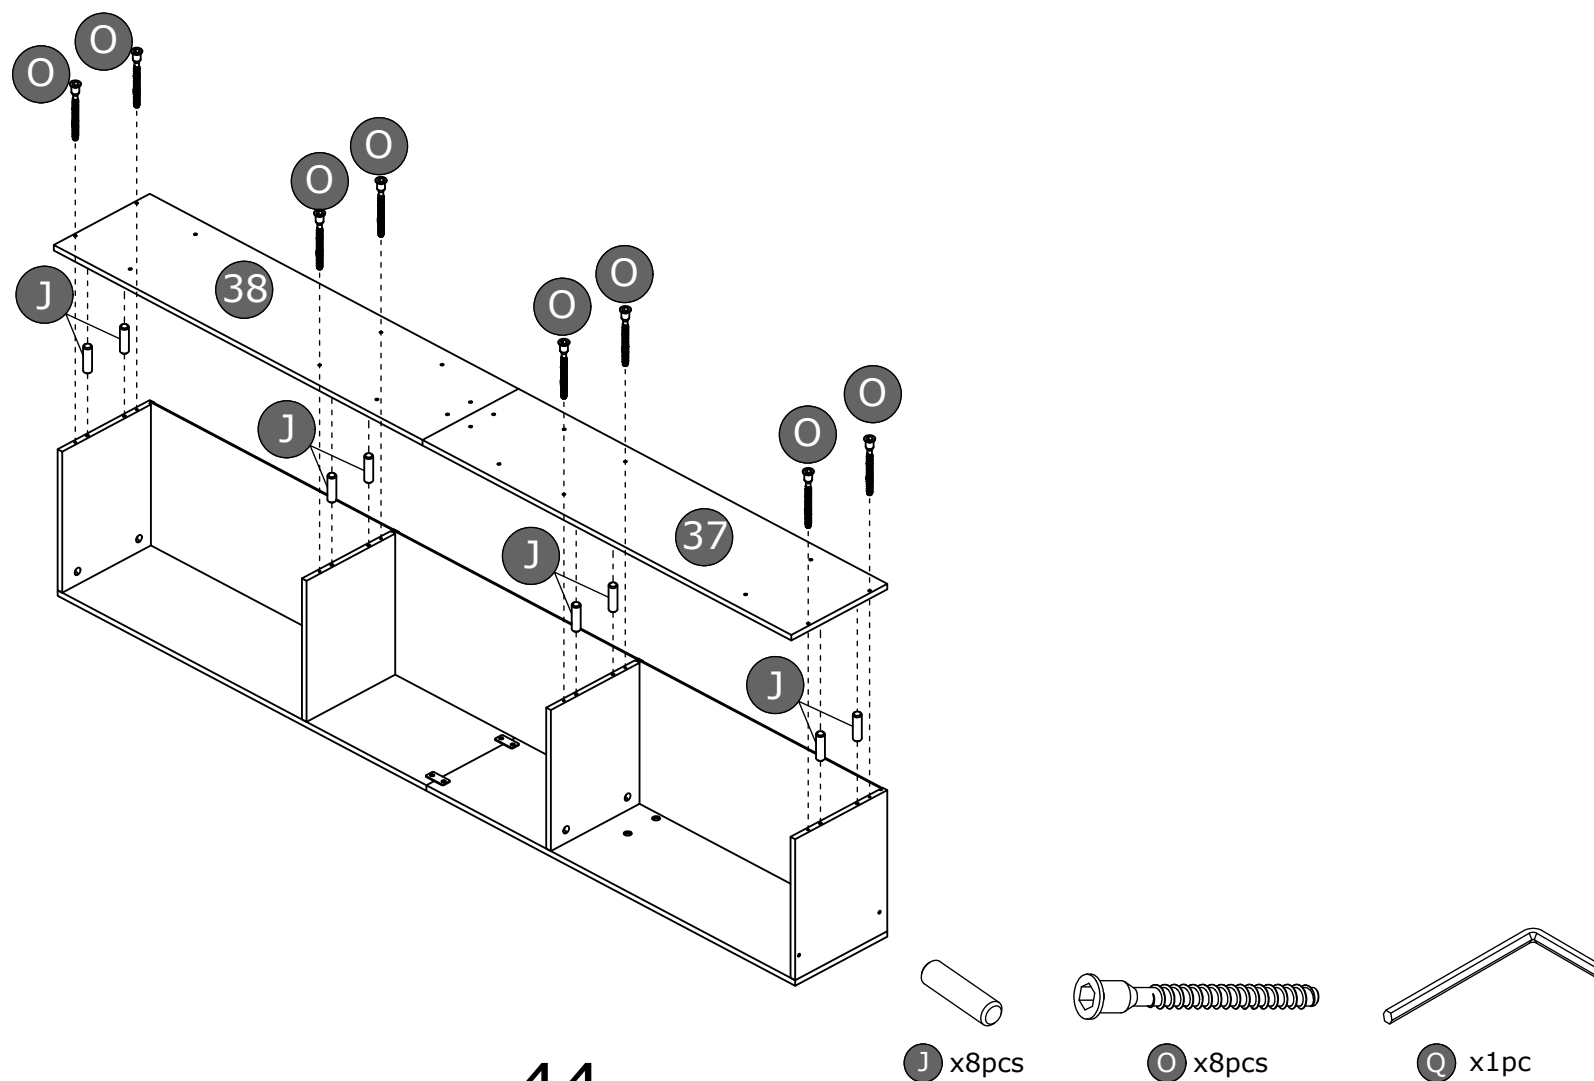




step 45

Connect part 8 and part 10, and part 9 and part 11 using screw B

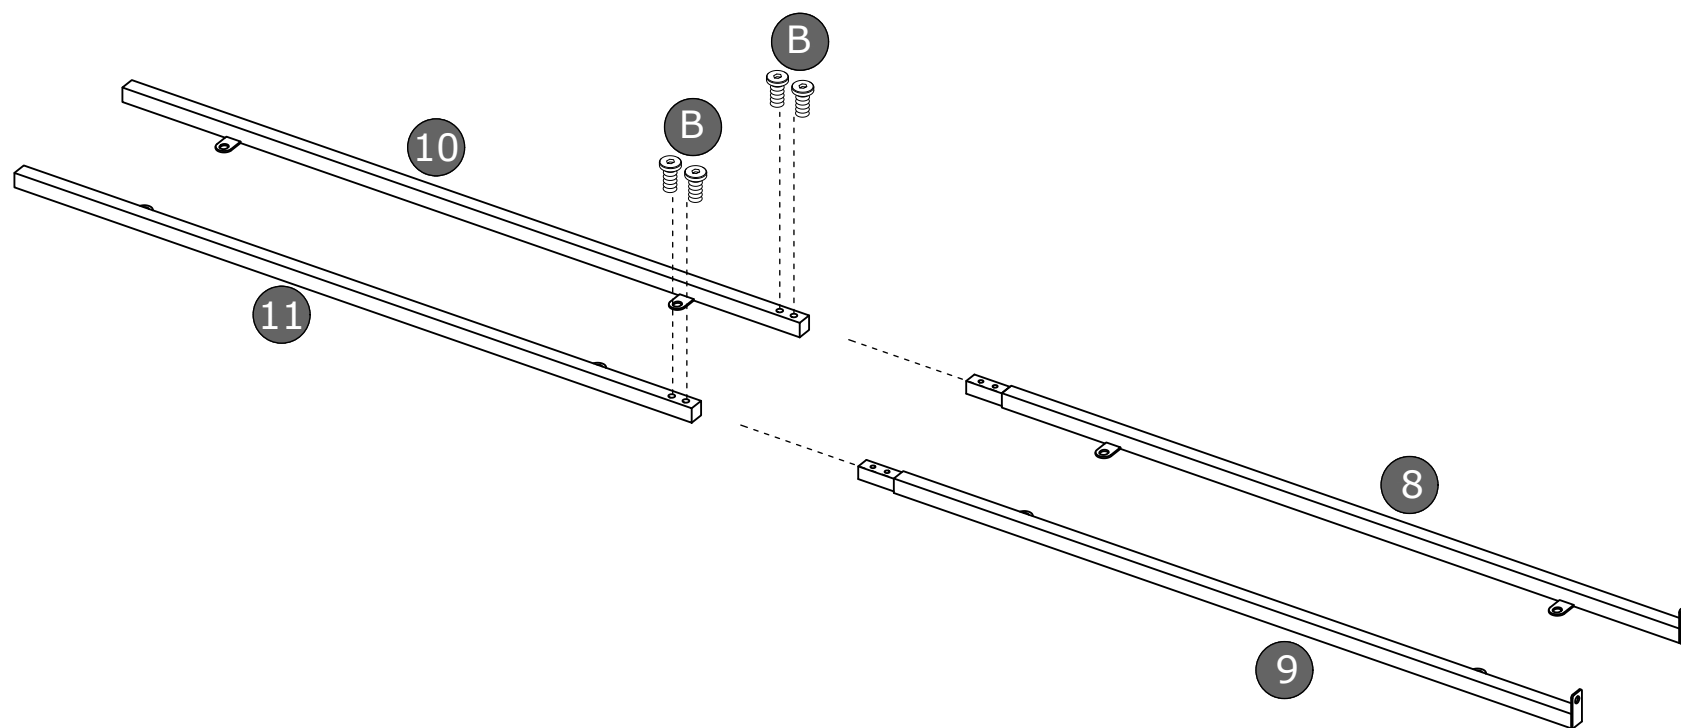

B x4pcs




P x1pc




step 46

Connect parts 8/9/10/11 to the installed shelf using screw B

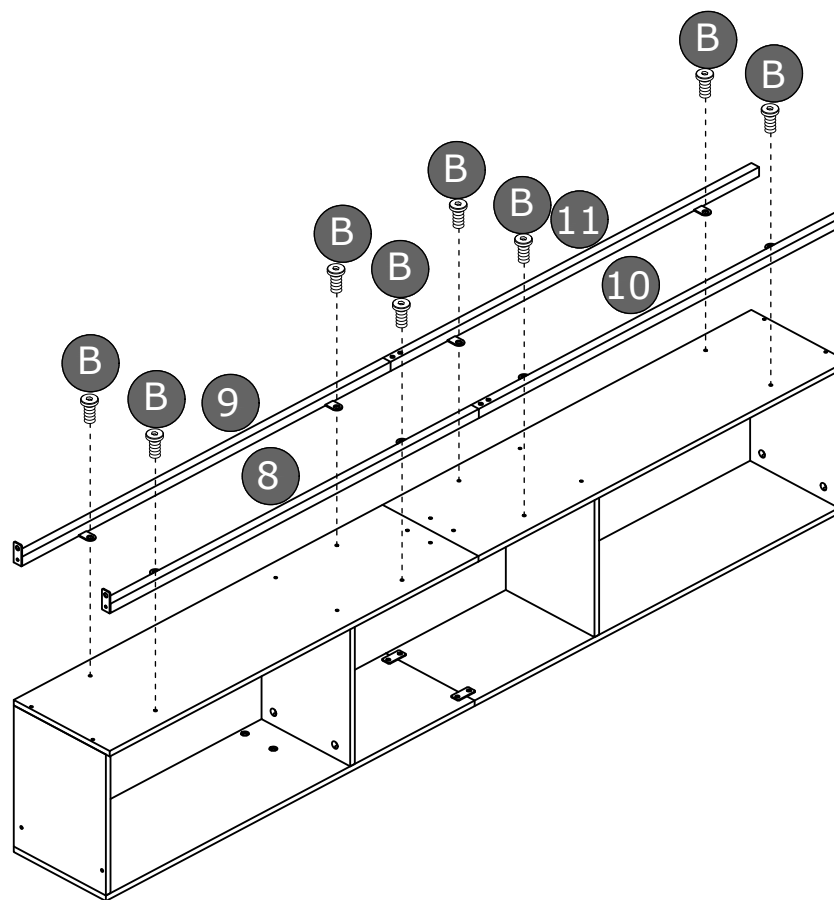



B x8pcs




P x1pc

step 47

Connect part 12 to the installed frame using screw A

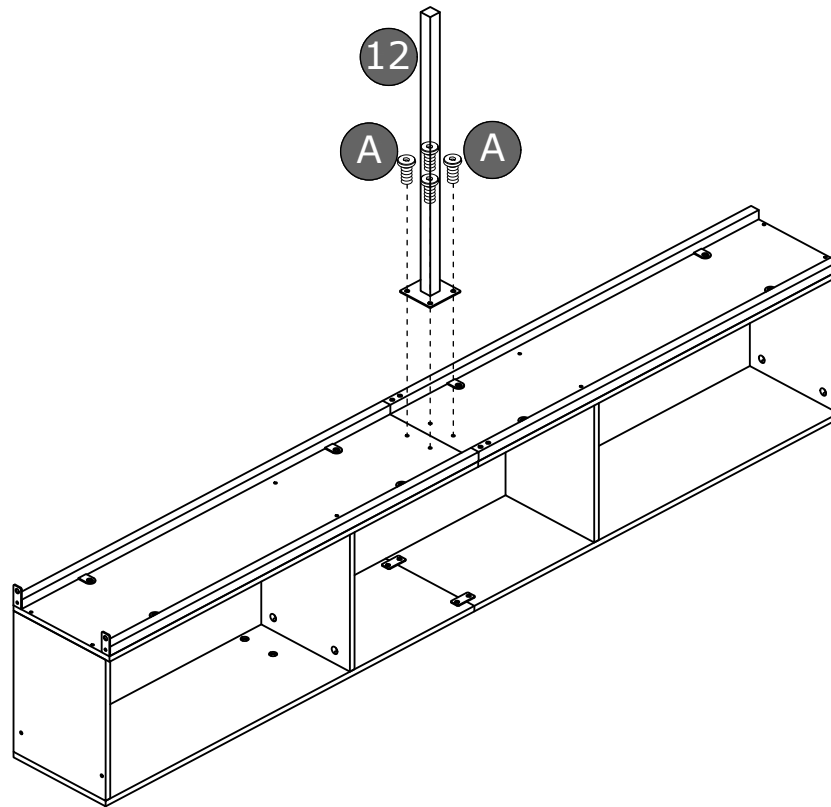


A x4pcs



P x1pc

step 48


Connect the installed shelf and the installed bed frame using screws C/E/F
(E/F fix the iron pipe, C fixes the iron plate)

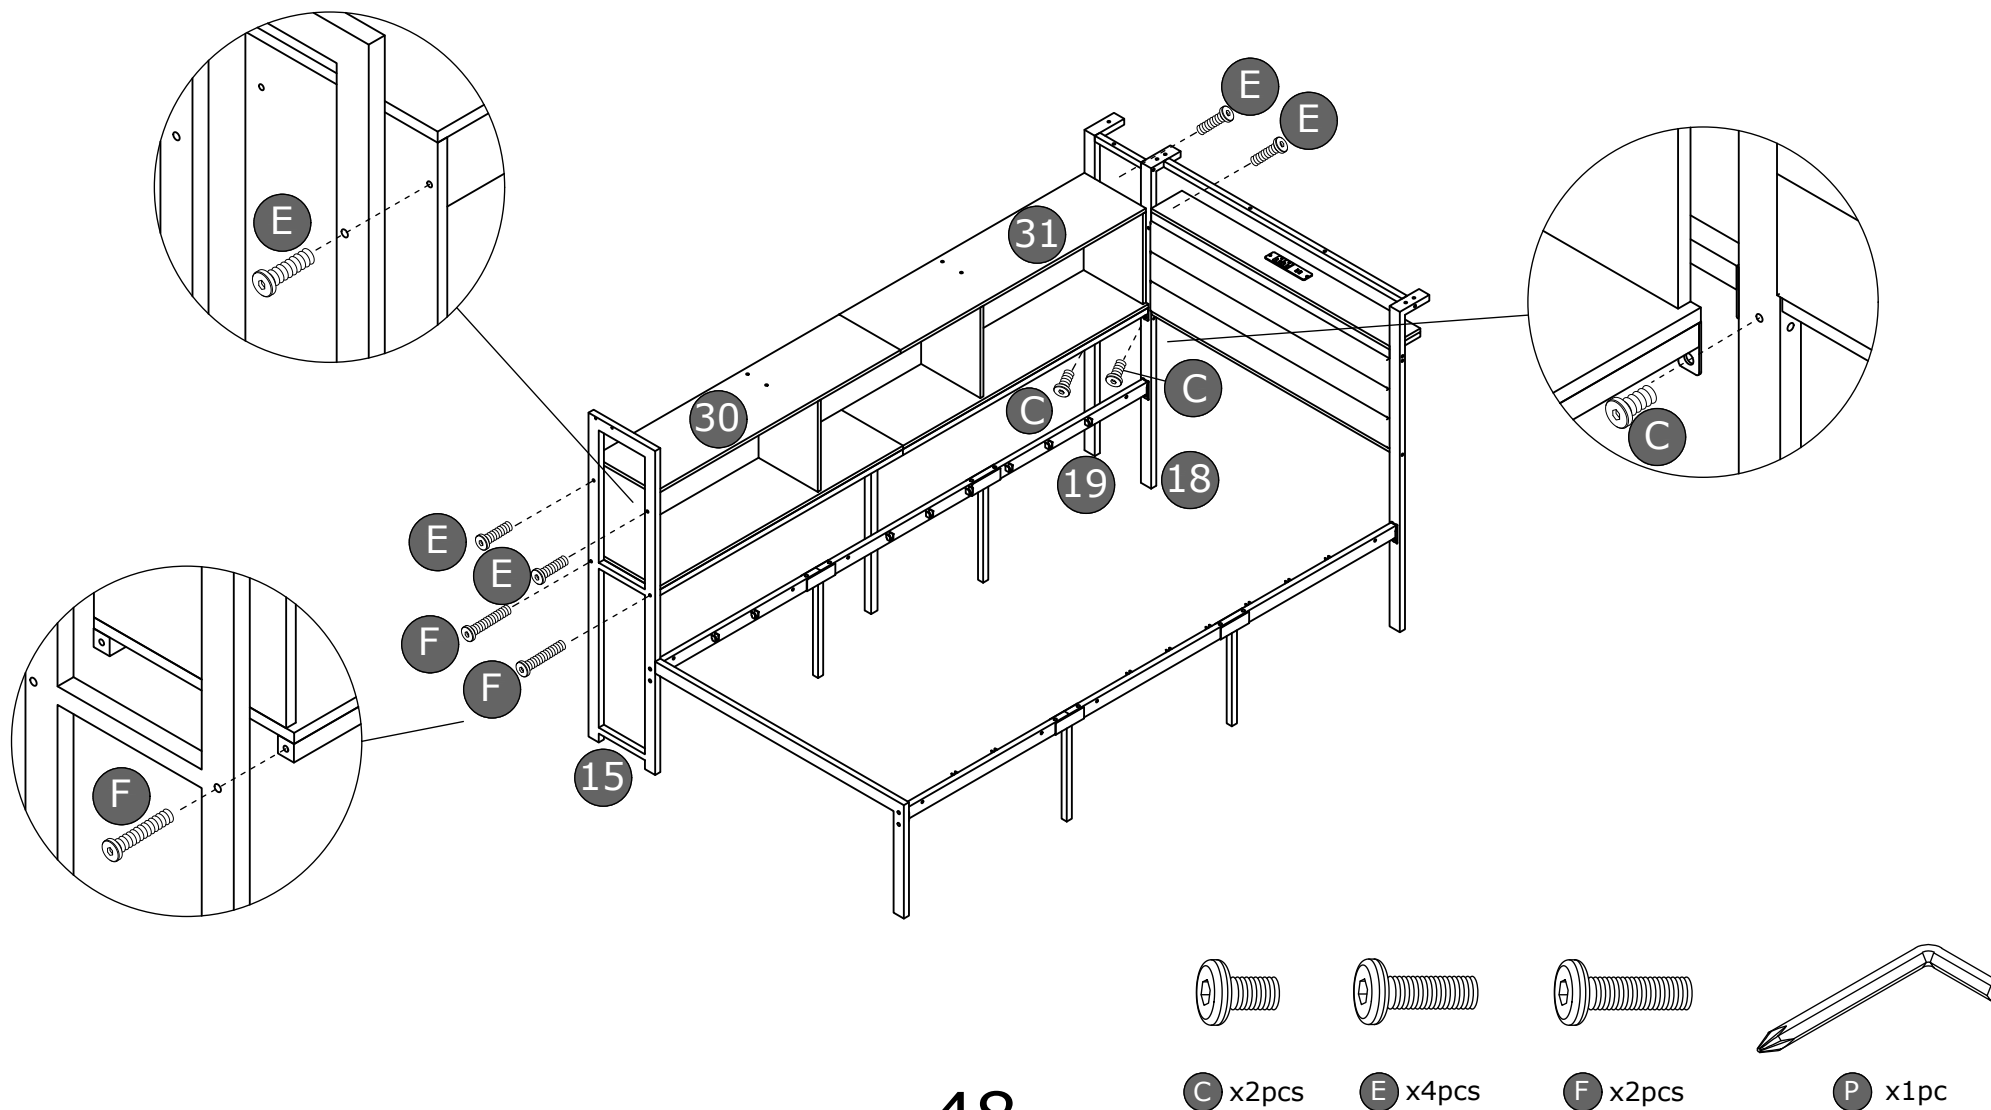



step 49

Connect parts 28 and 29 using J

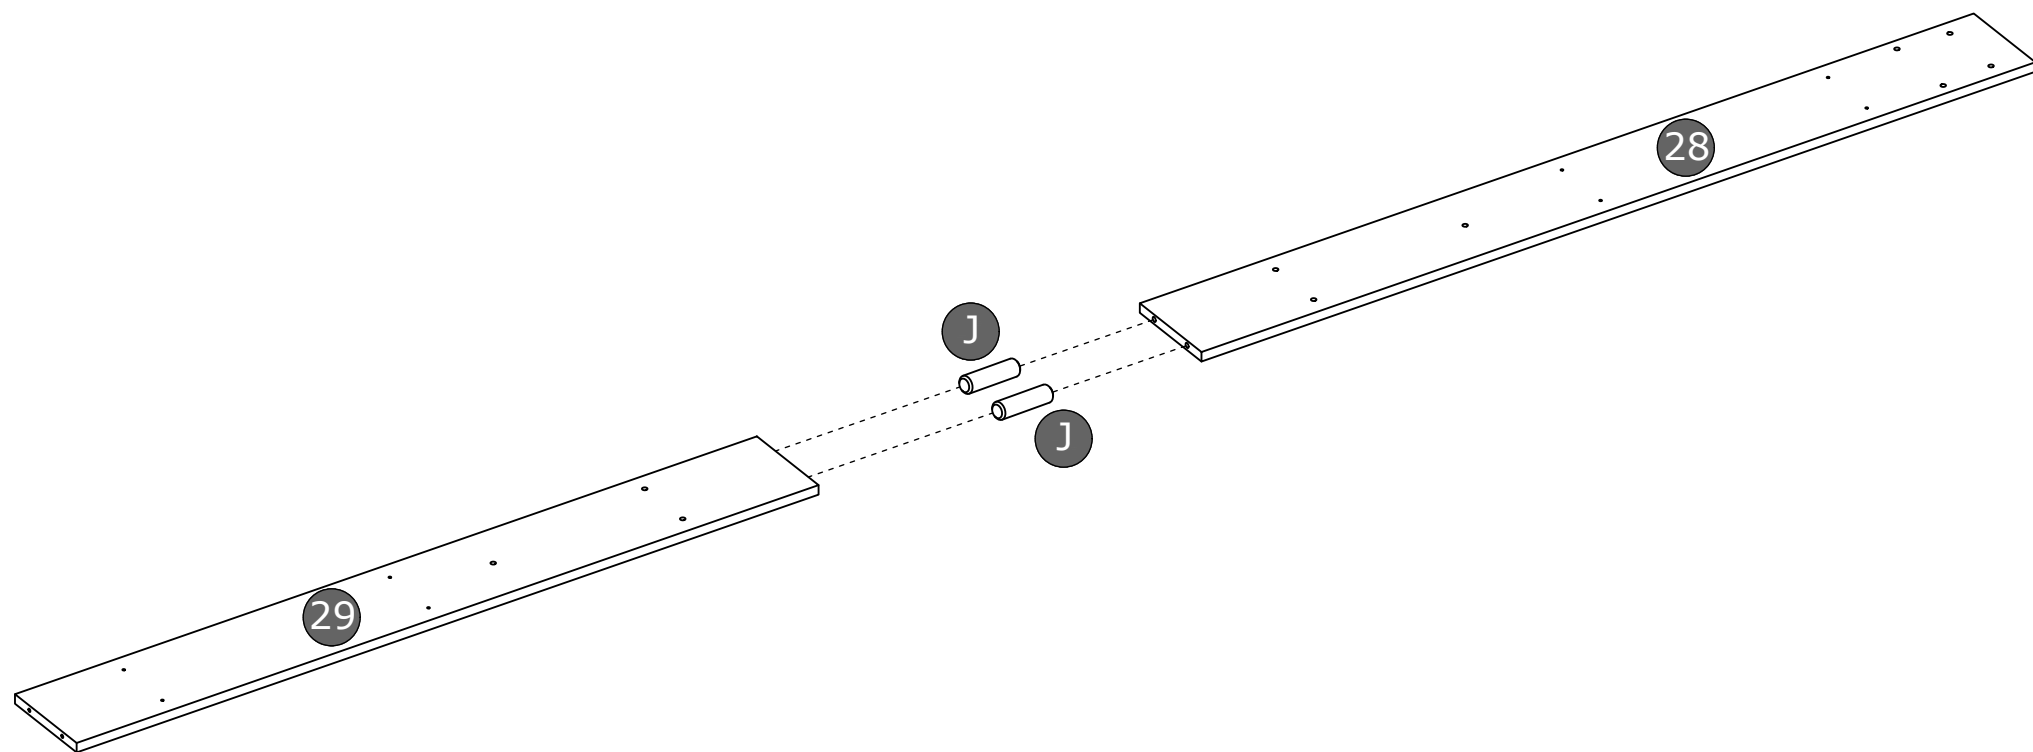


J x2pcs



step 50

Connect parts 13 and 14 using screw F


Then connect parts 13/14 and parts 28/29 using D

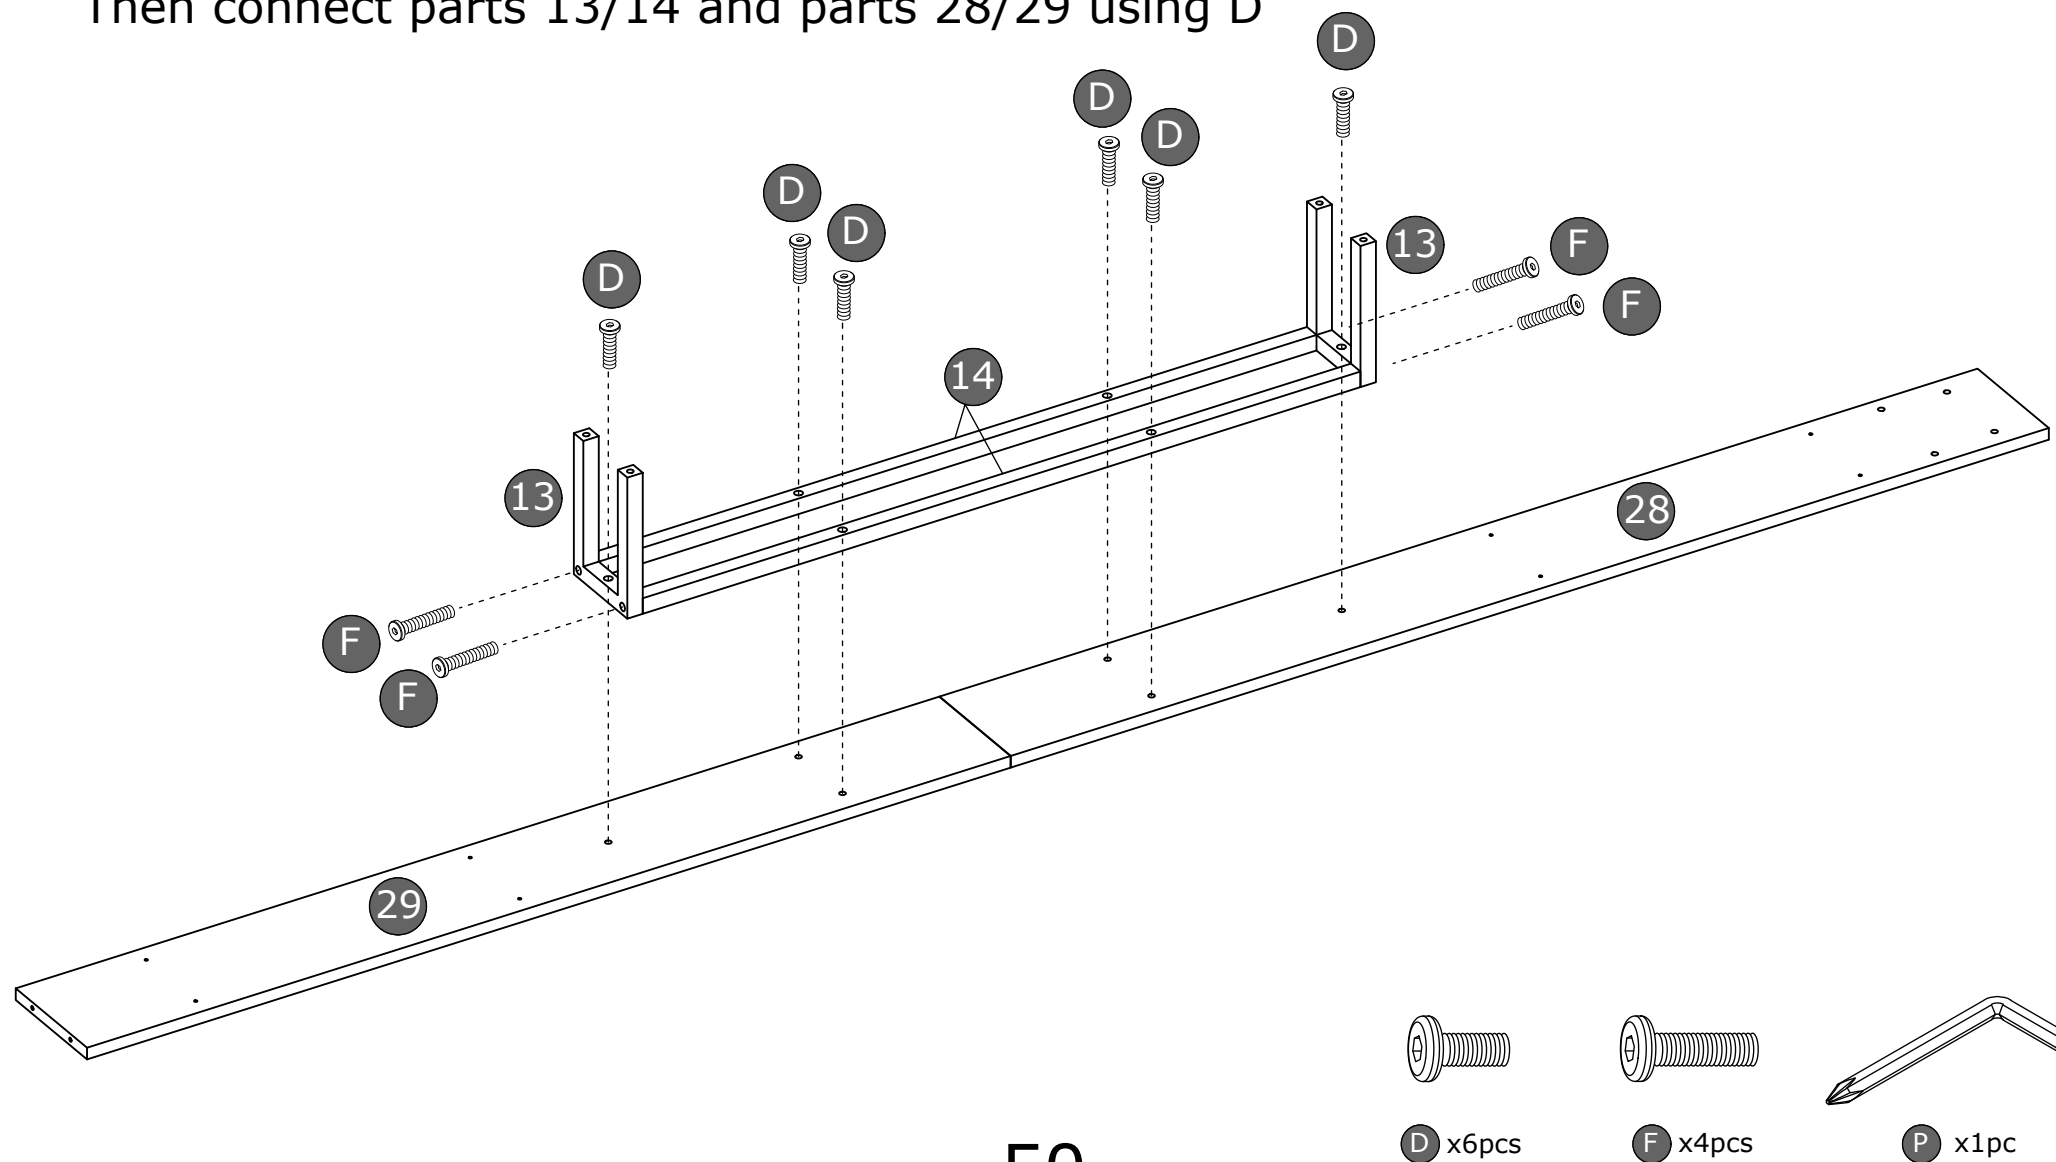

50


step 51

Peel off the backing paper of S1 and stick it on the back of parts 28/29/39 Then secure using S-3

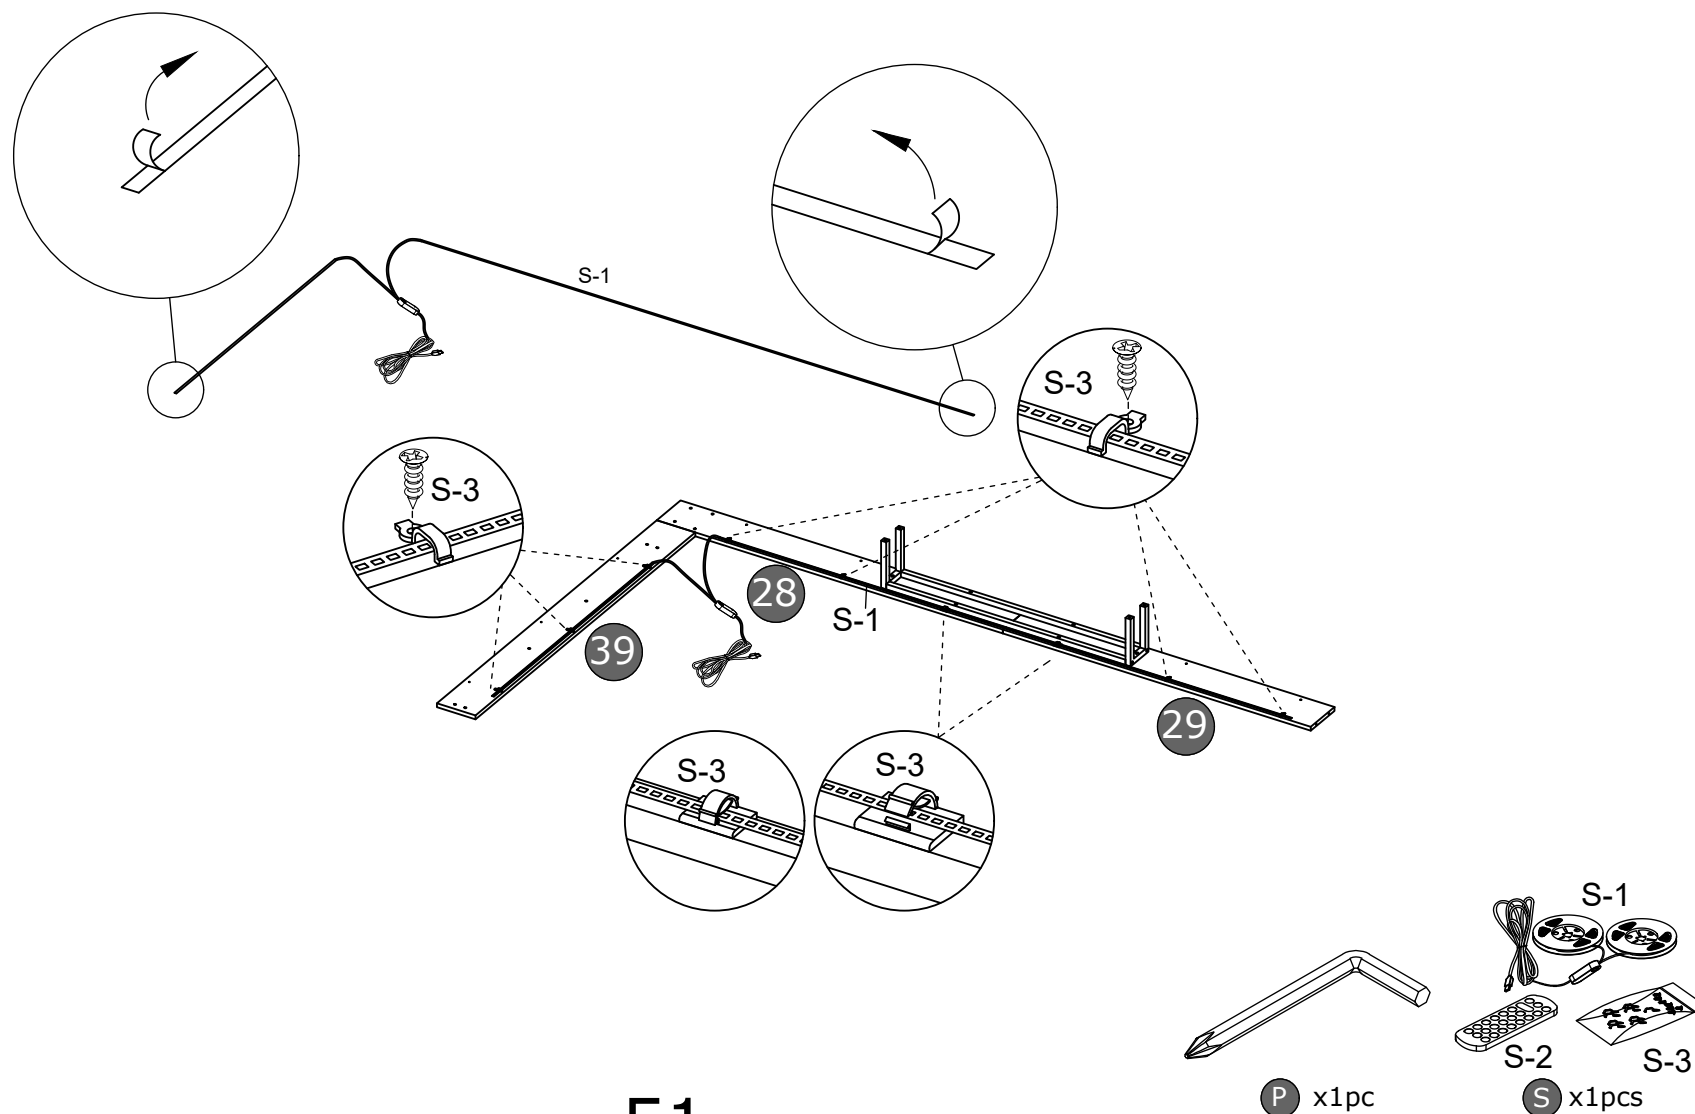


step 52

Connect parts 28/29/39 to the installed bed frame using screws E/O

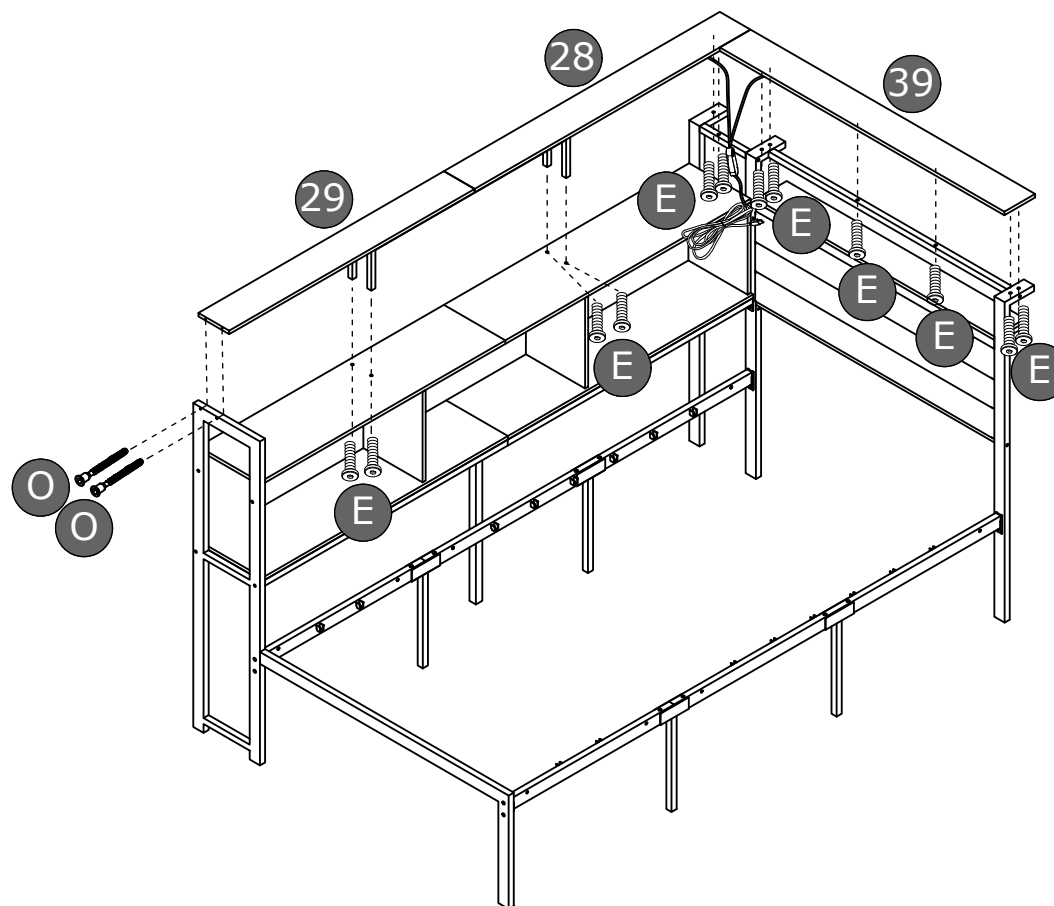


52




E x12pcs

O x2pcs




P x1pc




Q x1pc

step 53


Connect part 6 to the installed bed frame using screw F

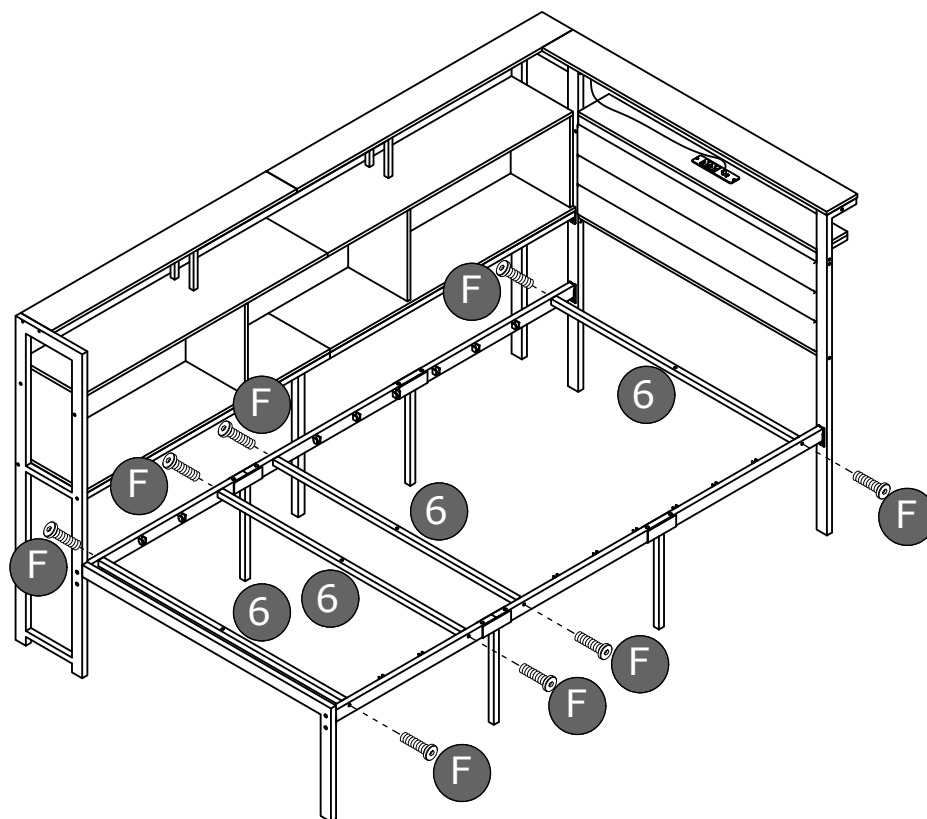

Screw F is locked at 70% first! After all the components are assembled, it is locked tightly at 100%.



F x8pcs




P x1pc



step 54


Unfold the frame 42

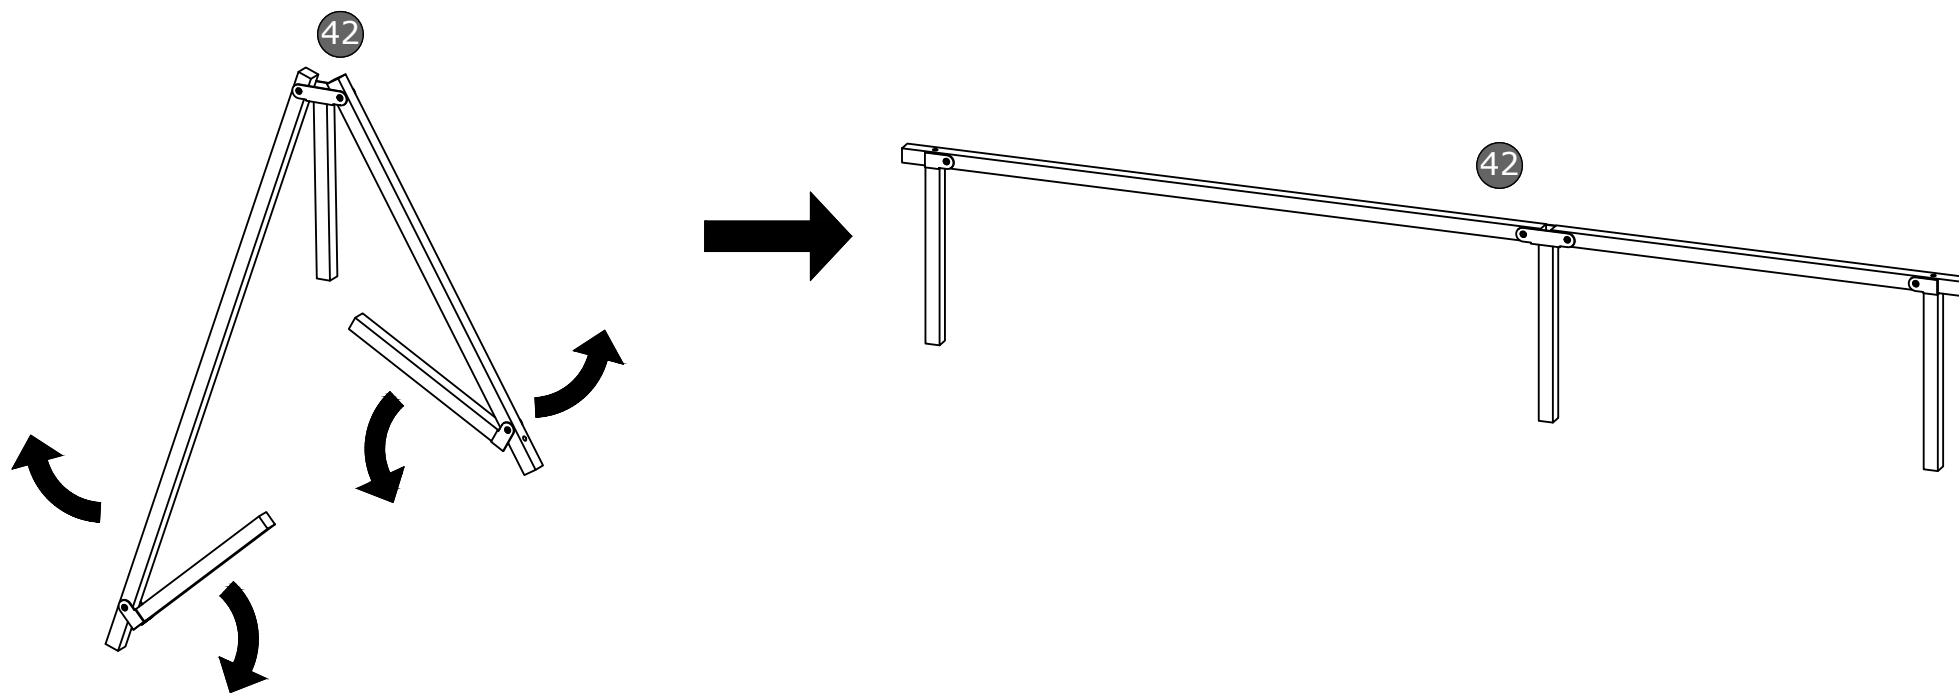

step 55


Fix the metal tube 6 on the frame 42 with screws G

To prevent friction noise, unroll part U and fit it on part 42 , The lenght of part U can cut as you will.

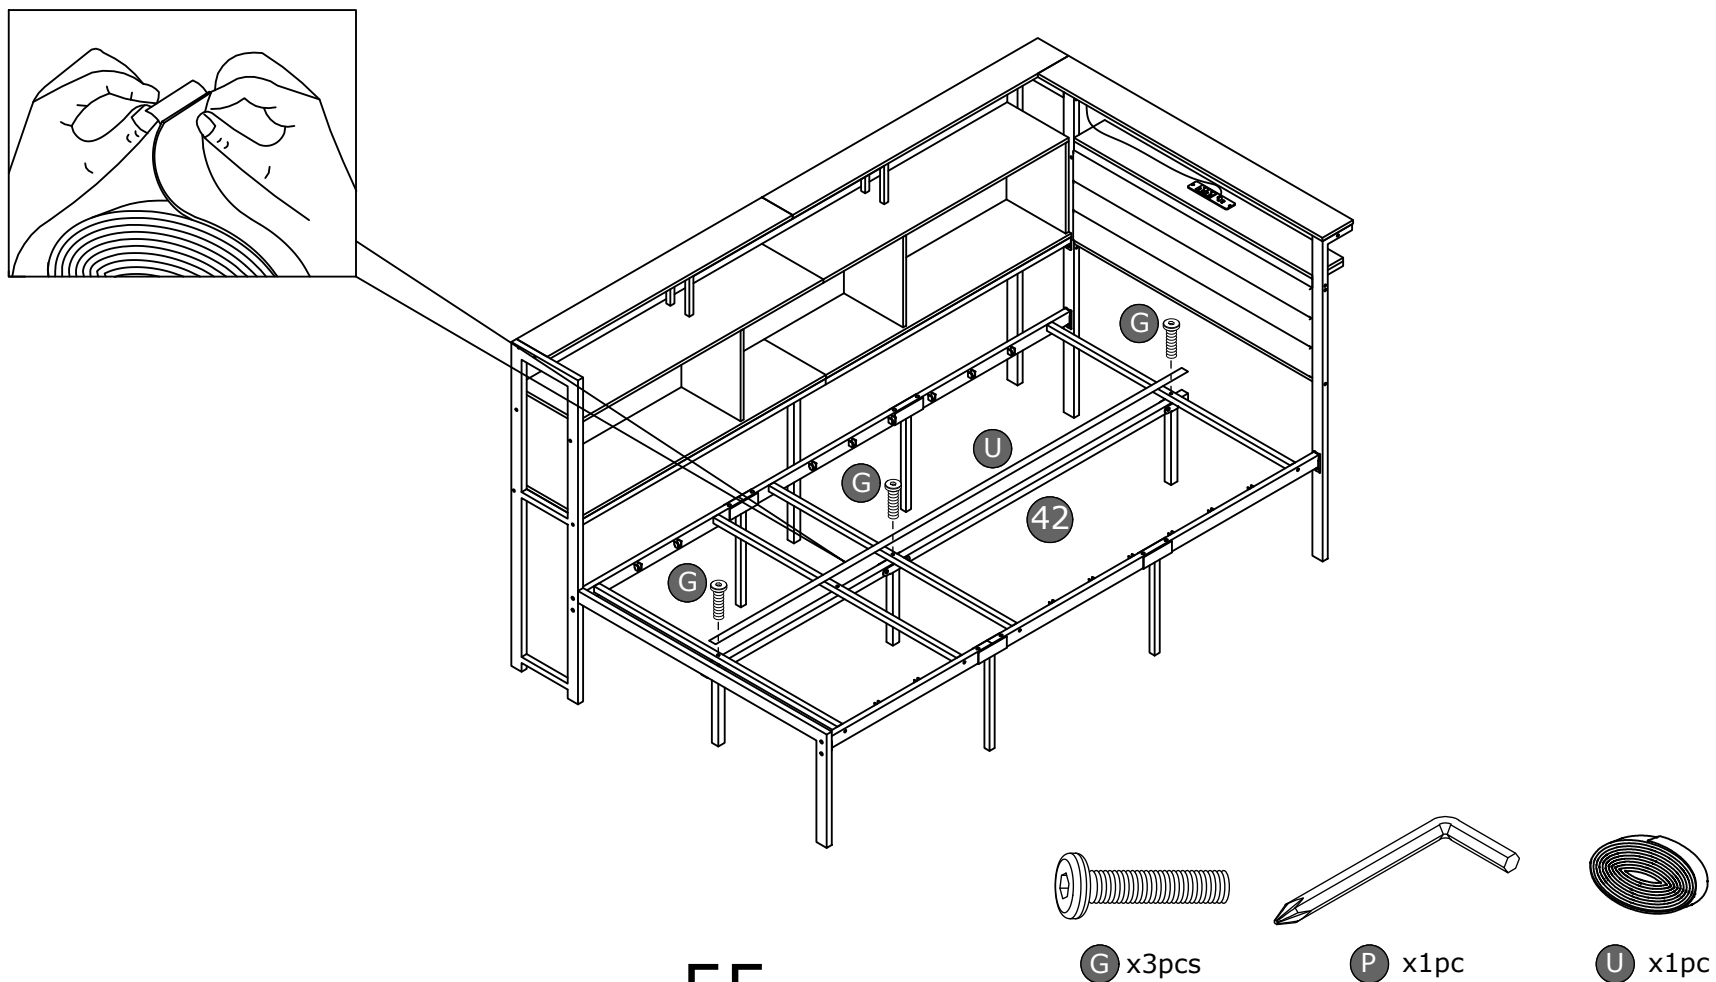



step 56

Insert part 7 into the grooves of the bed frame

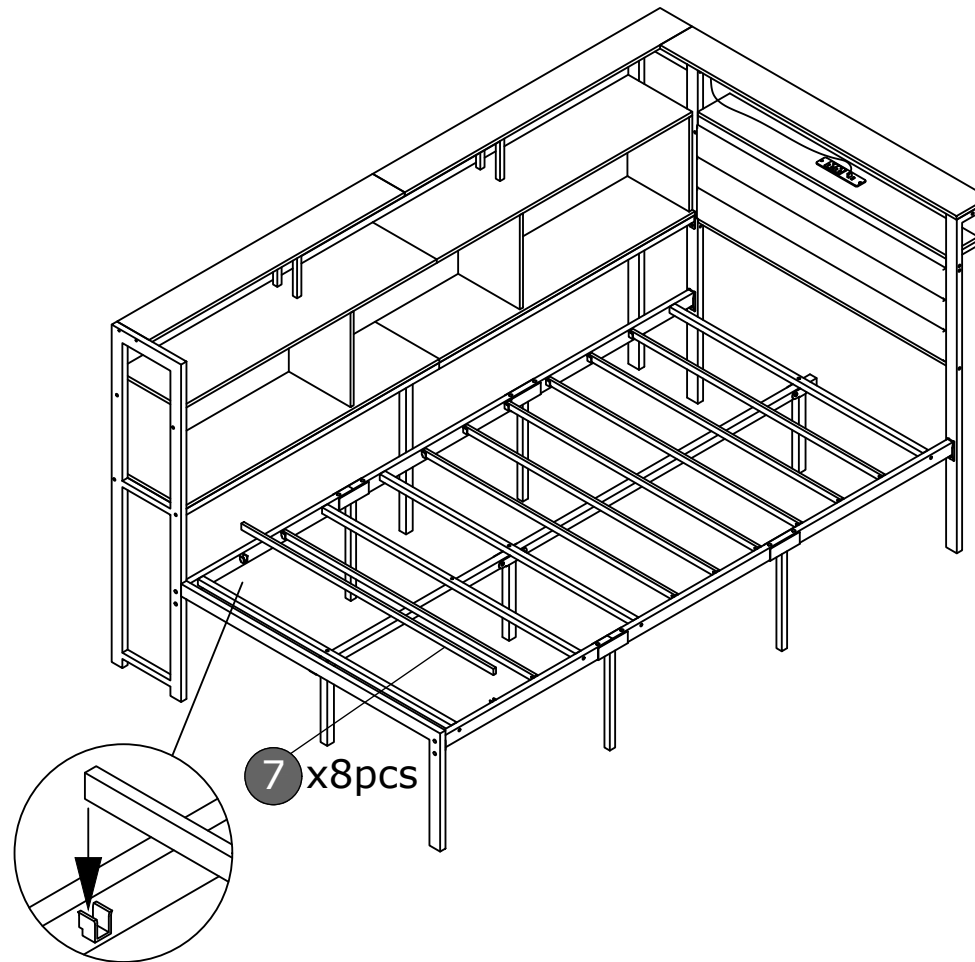


step 57


Unfold part 24, place part 25 inside, and then connect part 25 and T using screw M

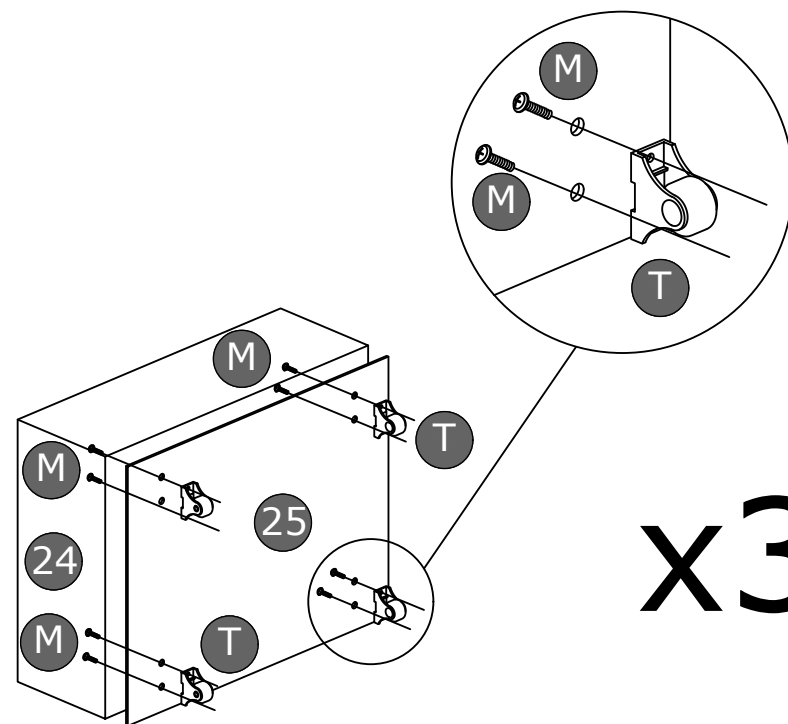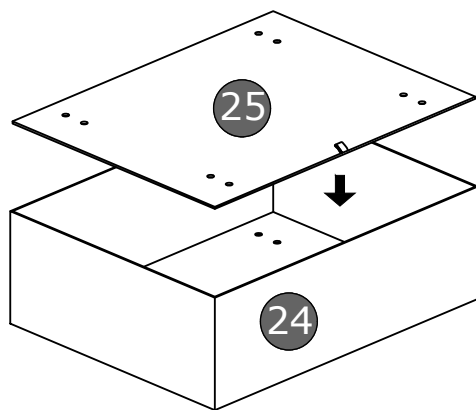


x3



M x24pcs

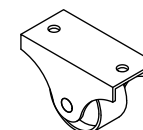

T x12pcs




P x1pc



step 58

Push the drawer under the bed frame

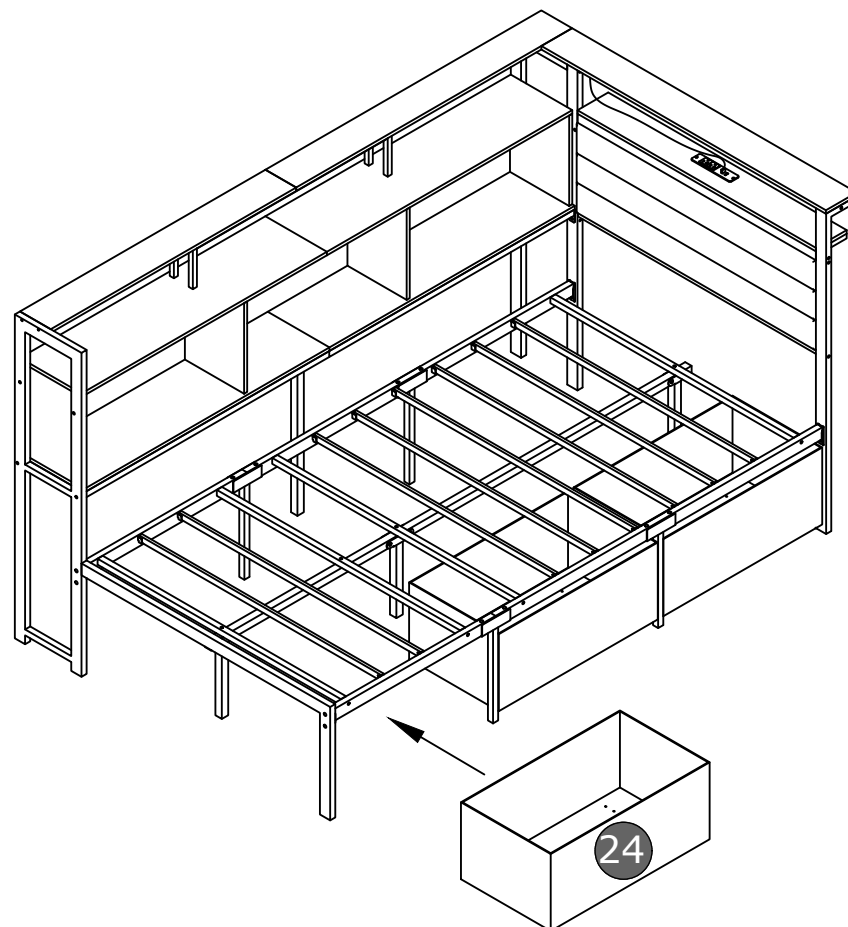

58