

## Assemble the Pole


## Install in Ground

STEP 1

Attach the "T" to the vertical pole with two 2 1/4" bolts.

STEP 2


Insert eye bolts and secure with hex nuts.

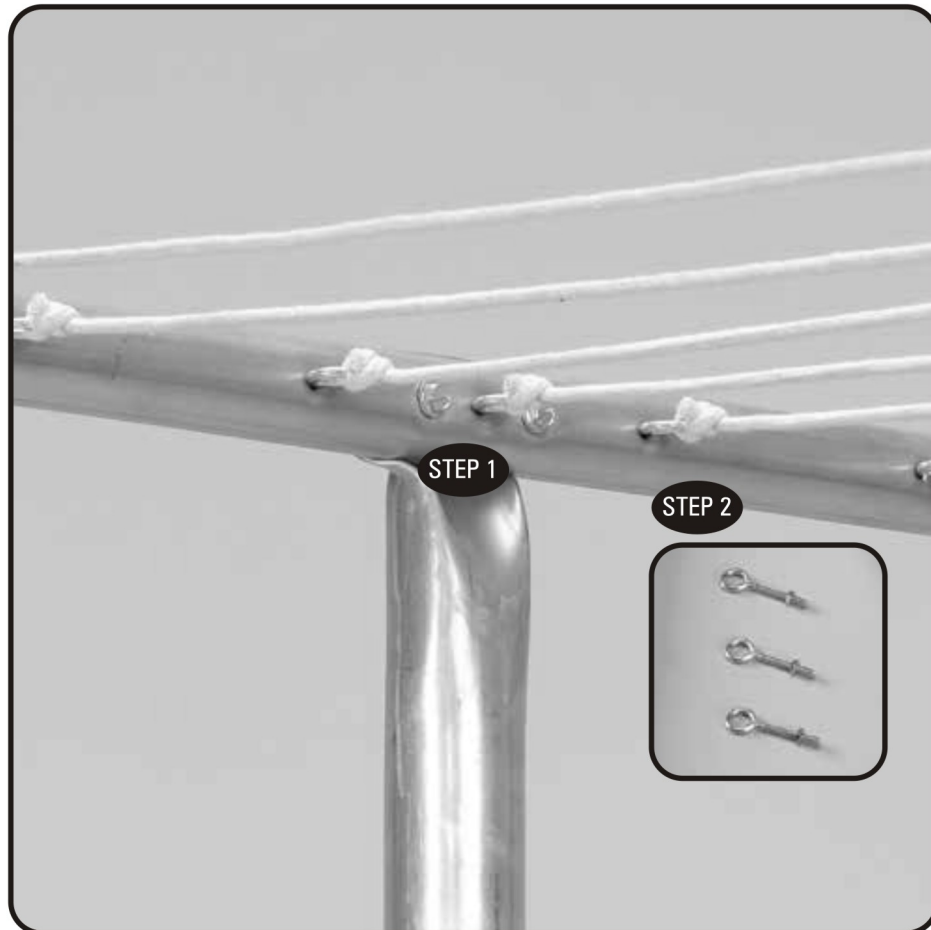

STEP 3

Dig a tapered hole, wider at the bottom than the top, as shown. **Position post in the direction clothesline will hang.** Fill in gravel, concrete, and dirt around pole. Allow concrete to set before stringing clothesline

**NOTE:** Use a level to ensure pole is vertical in ground before concrete sets.

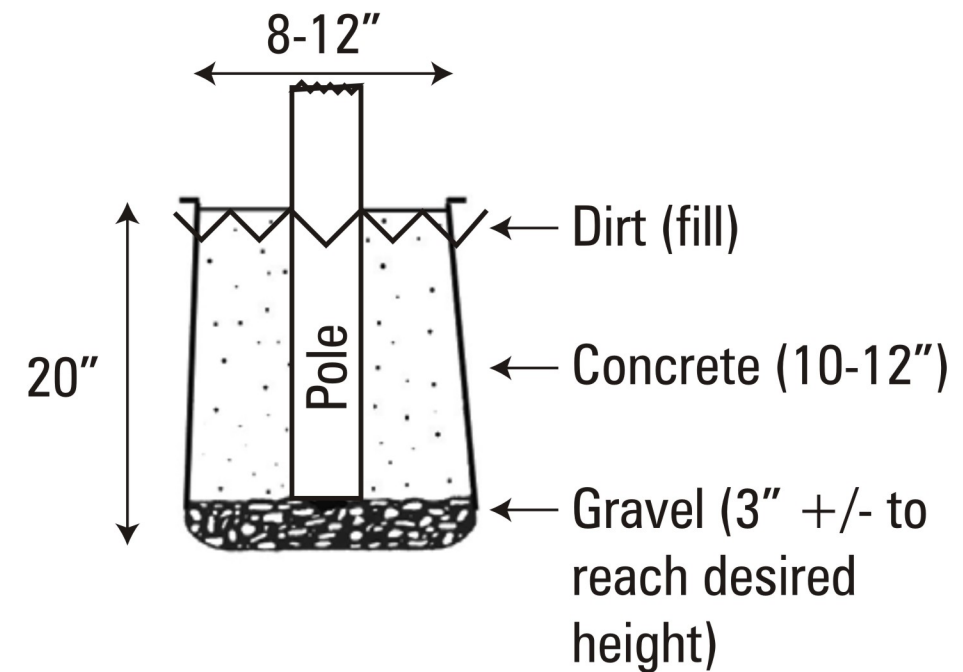

**NOTE:** 2 T-posts are required to set up a free-standing clothesline. Each post is sold separately. Posts may be used with both cotton and synthetic clothesline.