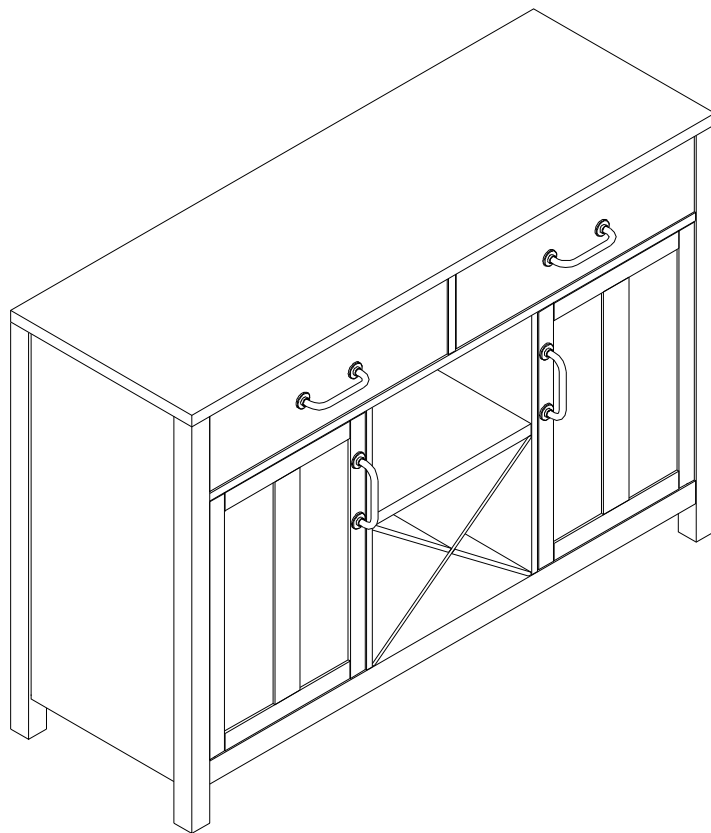


Buffet

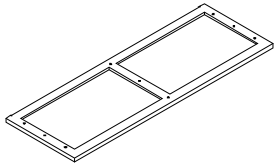
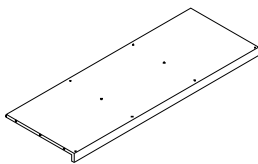
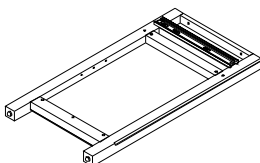
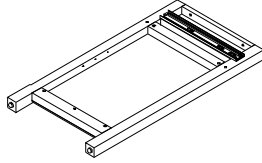





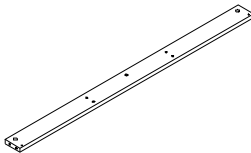
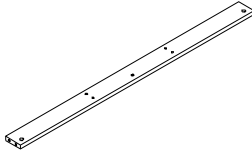









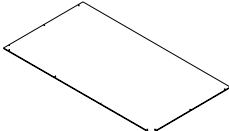
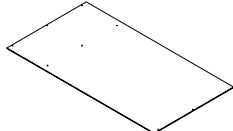


Congratulations! You have purchased a stylish piece of us. We strived to provide fine furniture products, built with quality materials and hand finished details. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.









Should you experience any missing or damaged parts, **do not return to the store.**

Care: Use a soft clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary. Should you choose to use polishes, test in an inconspicuous area first. Use of solvents of any kind may damage your furniture's finish. To clean, simply use a soft clean cloth moistened with lukewarm water, then buff with a dry soft clean cloth.

PART LIST

							
Top Panel		Bottom Panel		Left Side Panel		Right Side Panel	
1	1pc	2	1pc	3	1pc	4	1pc
							
Upper Partition Panel		Left Partition Panel		Right Partition Panel		Fixed Shelf	
5	1pc	6	1pc	7	1pc	8	1pc
							
Left Adjustable shelf		Right Adjustable shelf		Front Rail		Back Rail	
9	1pc	10	1pc	11	1pc	12	1pc
							
Left Wine Holder Shelf		Right Wine Holder Shelf		Left Door		Right Door	
13	1pc	14	1pc	15	1pc	16	1pc
							
Drawer Front Panel		Drawer Left Side Panel		Drawer Right Side Panel		Drawer Back Panel	
17	2pcs	18	2pcs	19	2pcs	20	2pcs
							
Drawer Bottom Panel		Side Back Panel		Middle Back Panel		Center Support Legs	
21	2pcs	22	2pcs	23	1pc	24	2pcs


HARDWARE LIST

 Cam Lock Ø15*12mm		 Cam Bolt Ø6*42mm		 Wood Dowel Ø8*30mm		 Long Hex Socket Head Bolt Ø6*35mm	
A	14pcs	B	14pcs	C	21pcs	D	8pcs
 Short Hex Socket Head Bolt Ø6*28mm		 Allen Key 4mm		 Handle		 Handle Washer	
E	8pcs	F	1pc	G	4pcs	H	8pcs
 Short Flat Head Screw Ø3.5*25mm		 Long Flat Head Screw Ø3.5*32mm		 Magnet L45*H12mm		 Round Head Screw Ø3*15mm	
I	16pcs	J	2pcs	K	2pcs	L	31pcs
 Shelf Holder Ø6.5mm		 Safety Strap Kit					
M	8pcs	N	1pc				

EXTRA HARDWARE LIST



A X 2



B X 2



C X 2



I X 2




L X 2



X 2

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly. You may use power tools to assist in mounting the safety strap kit to the wall.




Phillips Head Screw Driver

IMPORTANT NOTE: WE RECOMMEND TWO PEOPLE WORK TOGETHER TO ASSEMBLE THE PRODUCT

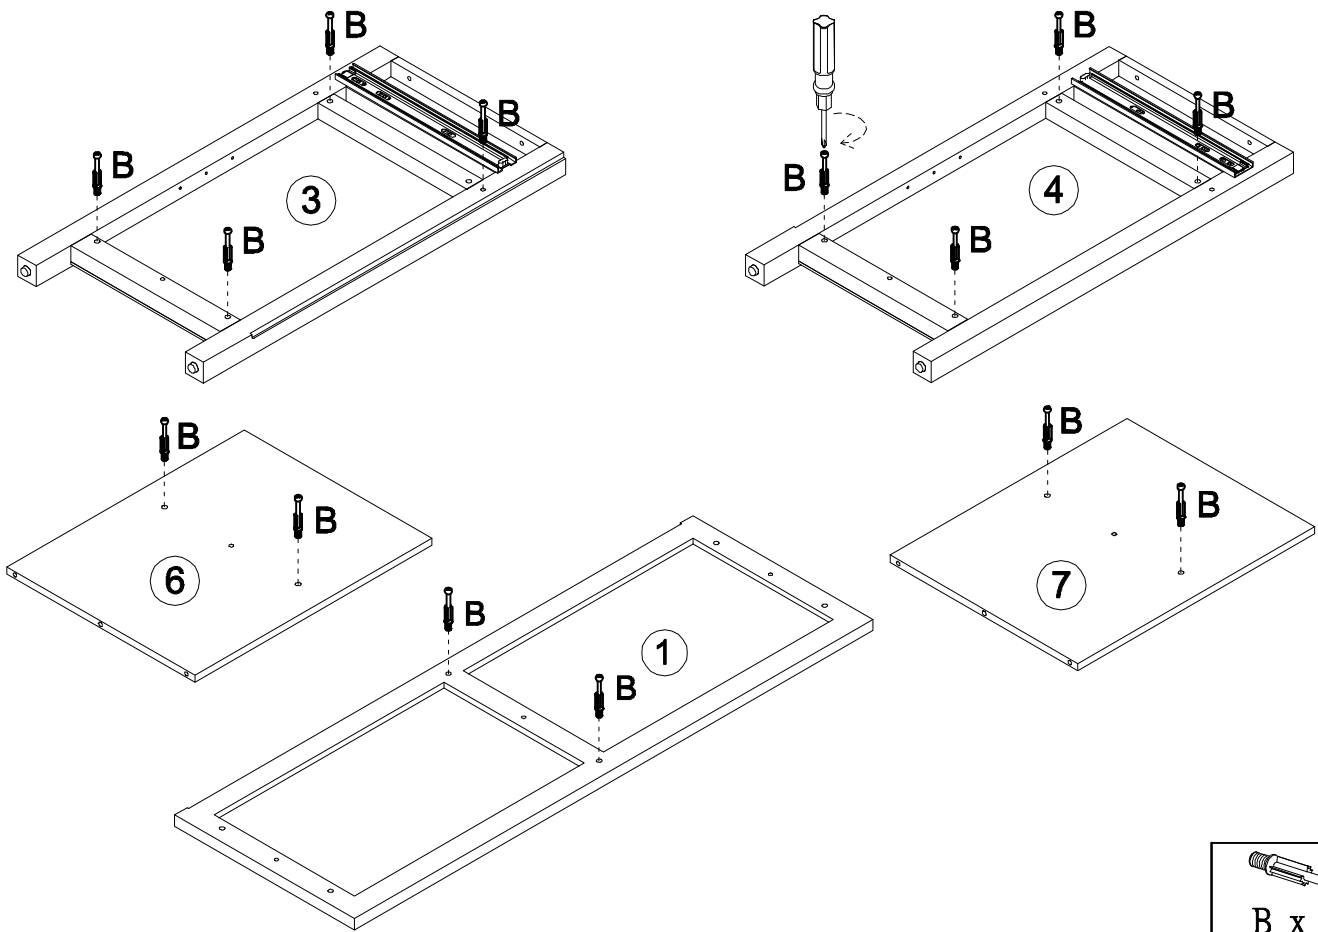Step 1. Insert Cam Bolts (B) into pre-drilled holes of parts 1,3,4,6,7 using a Phillips head screw driver as shown. Do not over tighten.




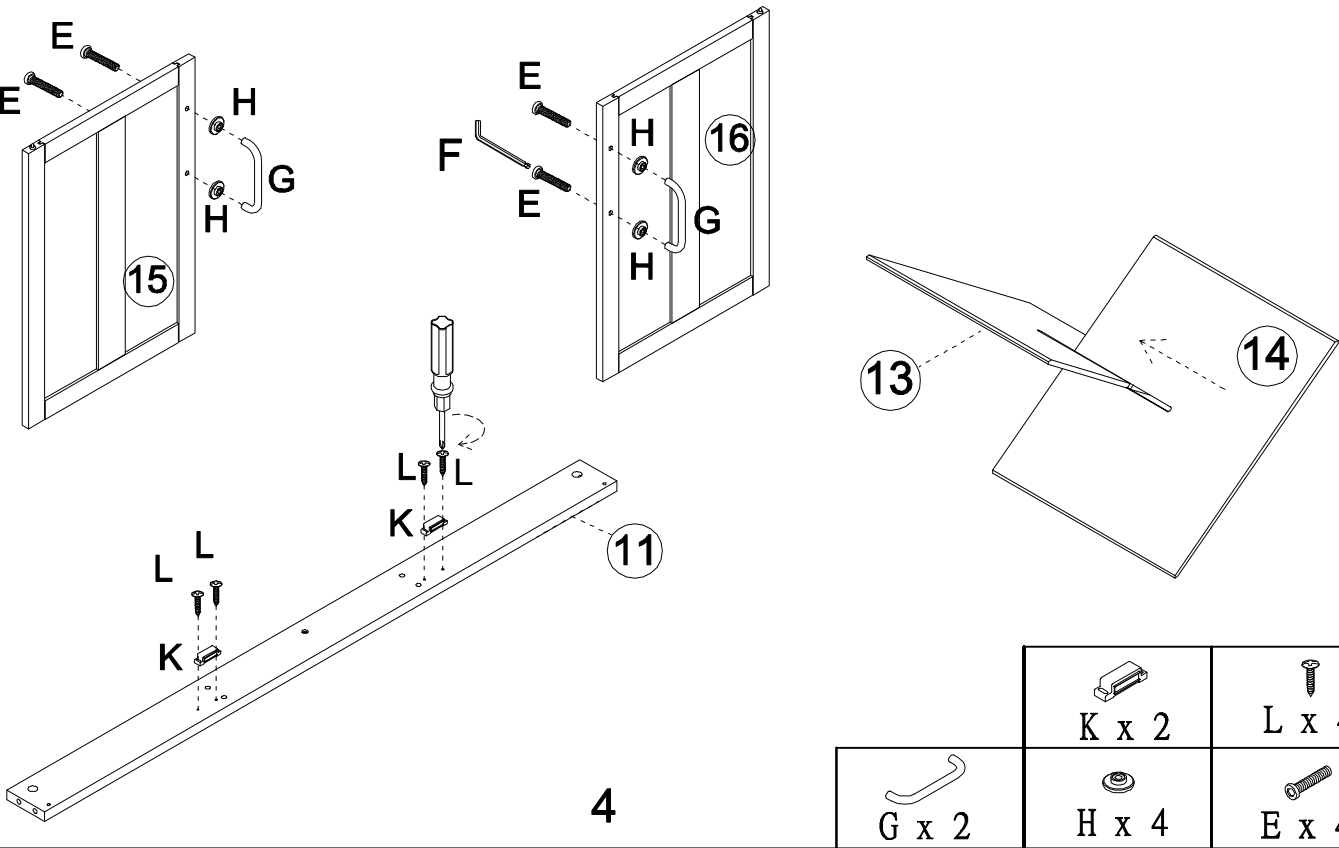Step 2. Attach Handle Washers (H) and Handles (G) to Doors (15 &16) using Short Hex Socket Head Bolts (E) and Allen Key (F) .
 Attach Magnets (K) to Front Rail (11) using Round Head Screws (L) as shown.
 Insert Right Wine Holder Shelf (14) to Left Holder Shelf (13) as shown.





 G x 2	 K x 2	 L x 4
	 H x 4	 E x 4

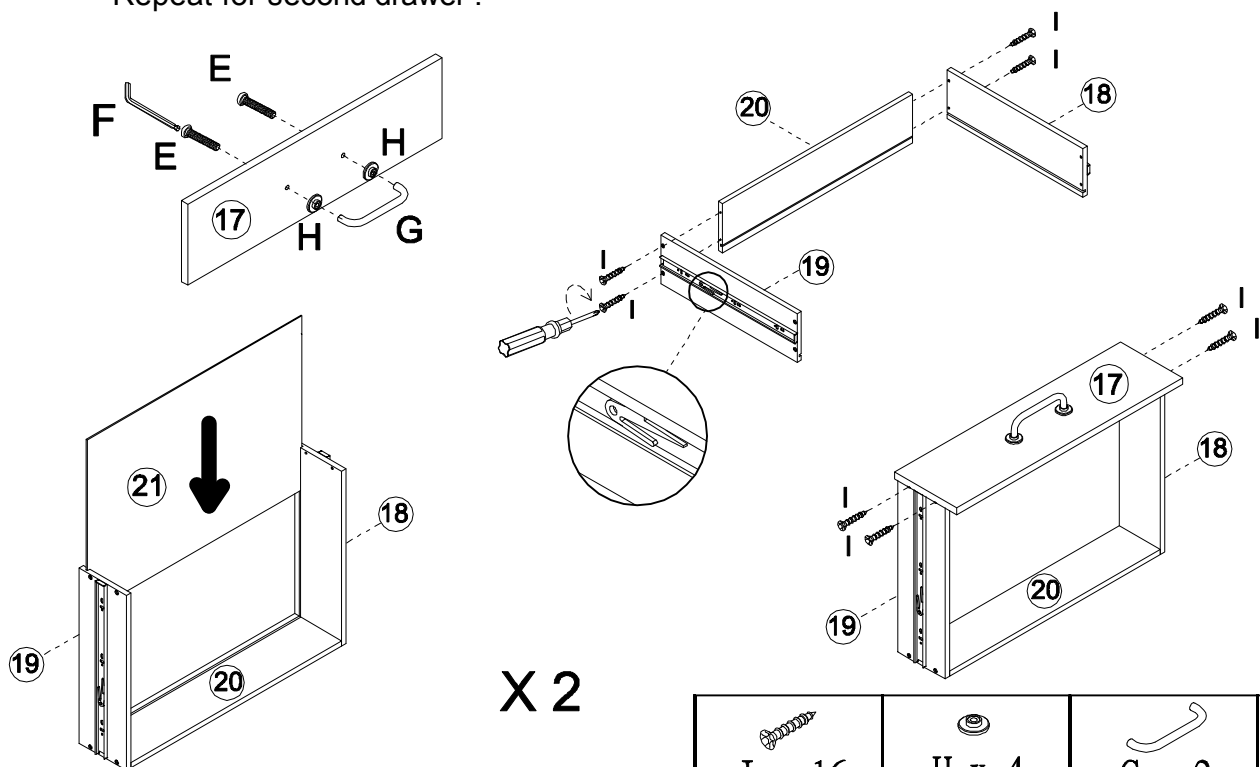
Step 3. Attach Handle Washers (H) and Handles (G) to Drawer Front Panel (17) using Short Hex Socket Head Bolts (E) and Allen Key (F) .
 Attach Drawer Back Panel (20) to Drawer Side Panels (18 & 19) using Short Flat Head Screws (I).
NOTE: be sure that drawer slide joint are facing outward .
 Slide Drawer Bottom Panel (21) into grooves of Drawer Side Panels (18 & 19) . Attach Drawer Front Panel (17) to Drawer Side Panels (18 & 19) using Short Flat Head Screws (I).
 Repeat for second drawer .



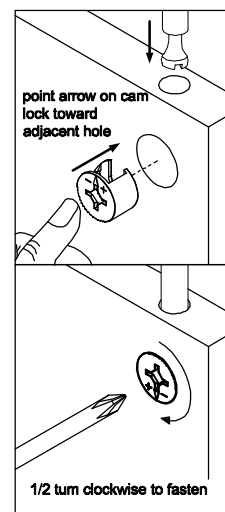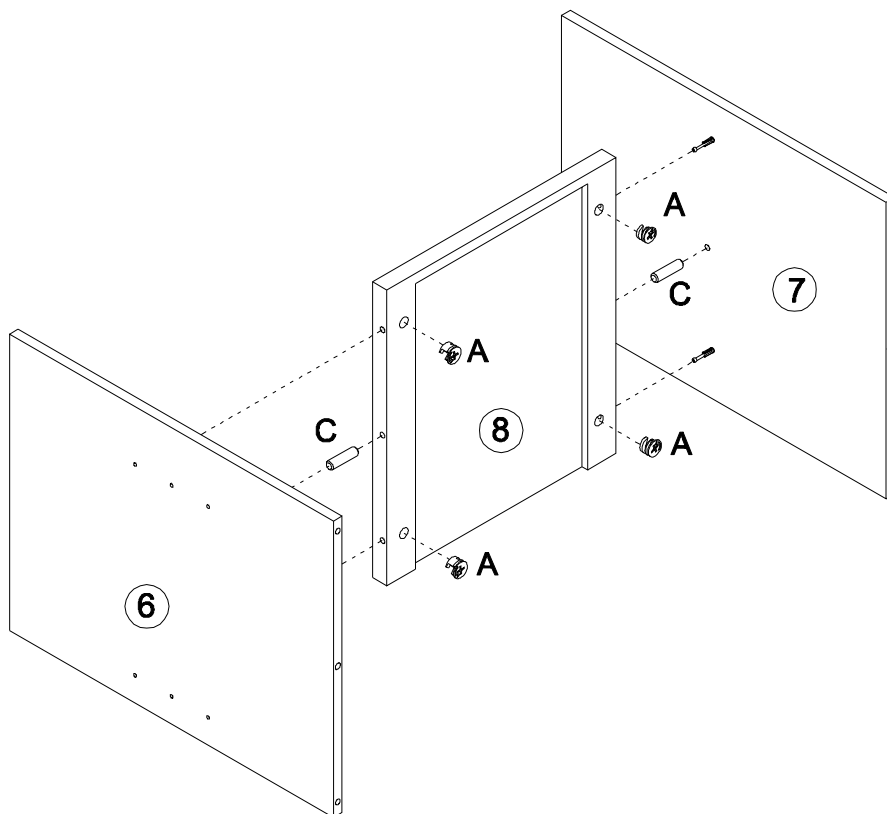
Step 4. Attach Partition Panels (6 & 7) to Fixed Shelf (8) using Wood Dowels (C) and Cam Locks (A) as shown.



5




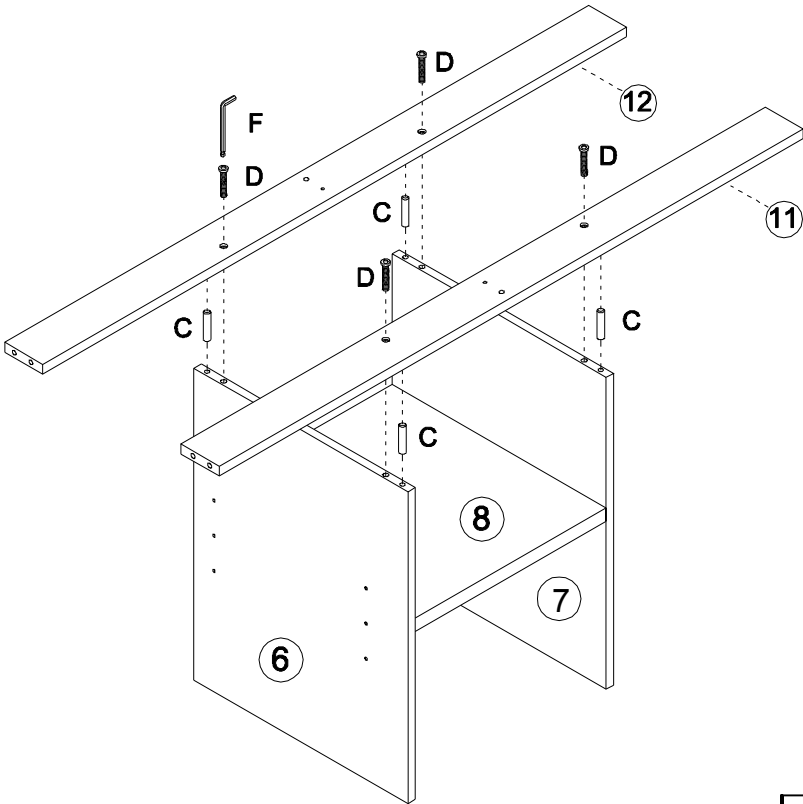Step 5. Attach Front Rail (11) and Back Rail (12) to assembled parts (6,7& 8) using Wood Dowels (C) Long Hex Socket Head Bolts (D) and Allen Key (F) as shown.



	
C x 4	D x 4

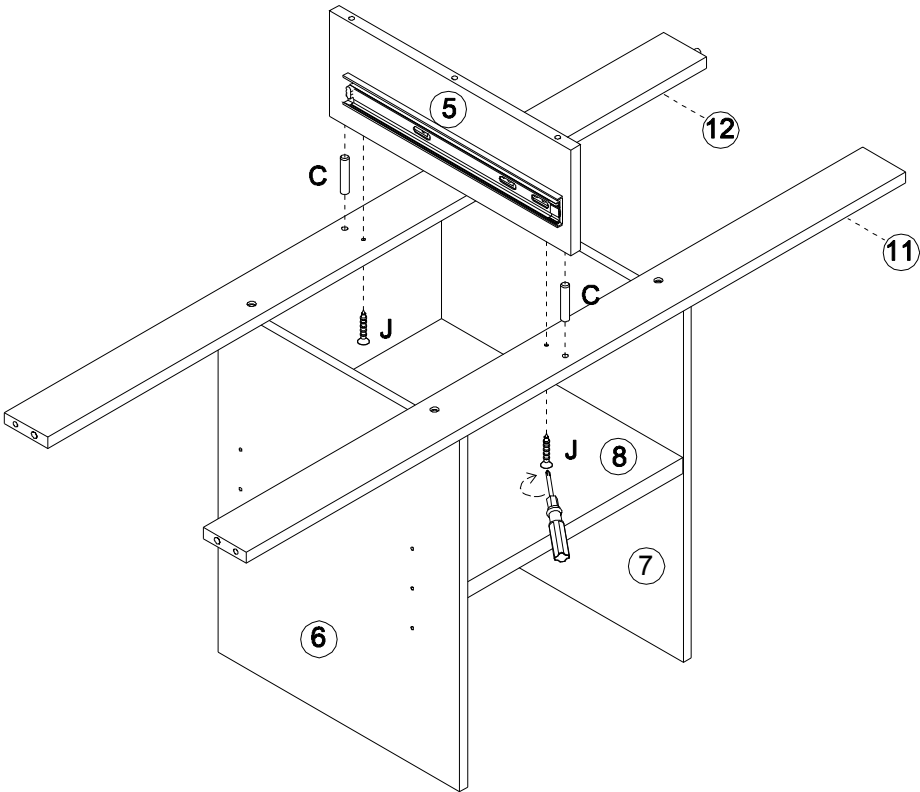
Step 6. Attach Upper Partition Panel (5) to Rails (11&12) using Wood Dowels (C) and Long Flat Head Screws (J) as shown.



	
C x 2	J x 2



Step 7. Turn assembled parts (6,7,8,11&12) with the side face down. Attach Bottom Panel (2) using Wood Dowels (C) . Attach Center Support Legs (24) by turning clockwise into the pre-drilled holes as shown.

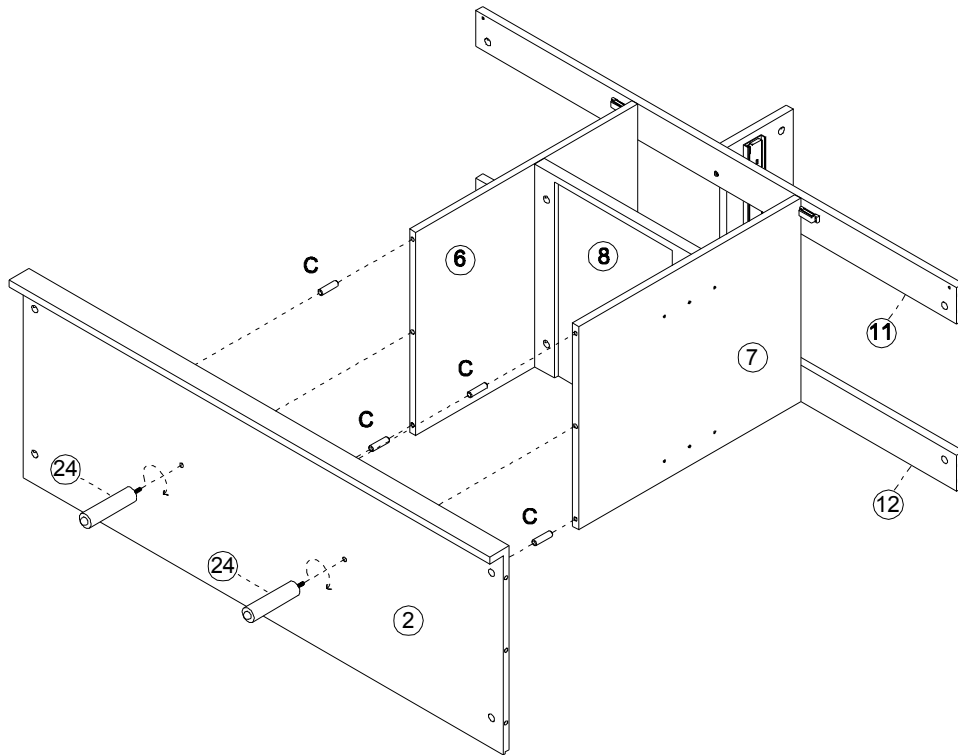Note: The adjustable leveler on the bottom of the Center Support Legs (24) should not be extended until after installation .Adjust the leveler on the bottom of the Center Support Legs (24) until it fits tightly against the floor .Use of the support leg is important to support the center of the cabinet .



C x 4

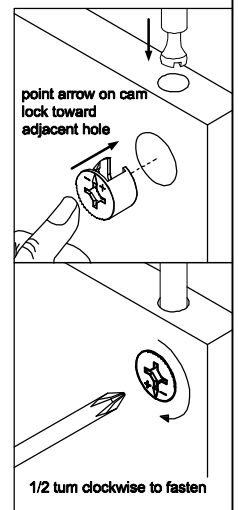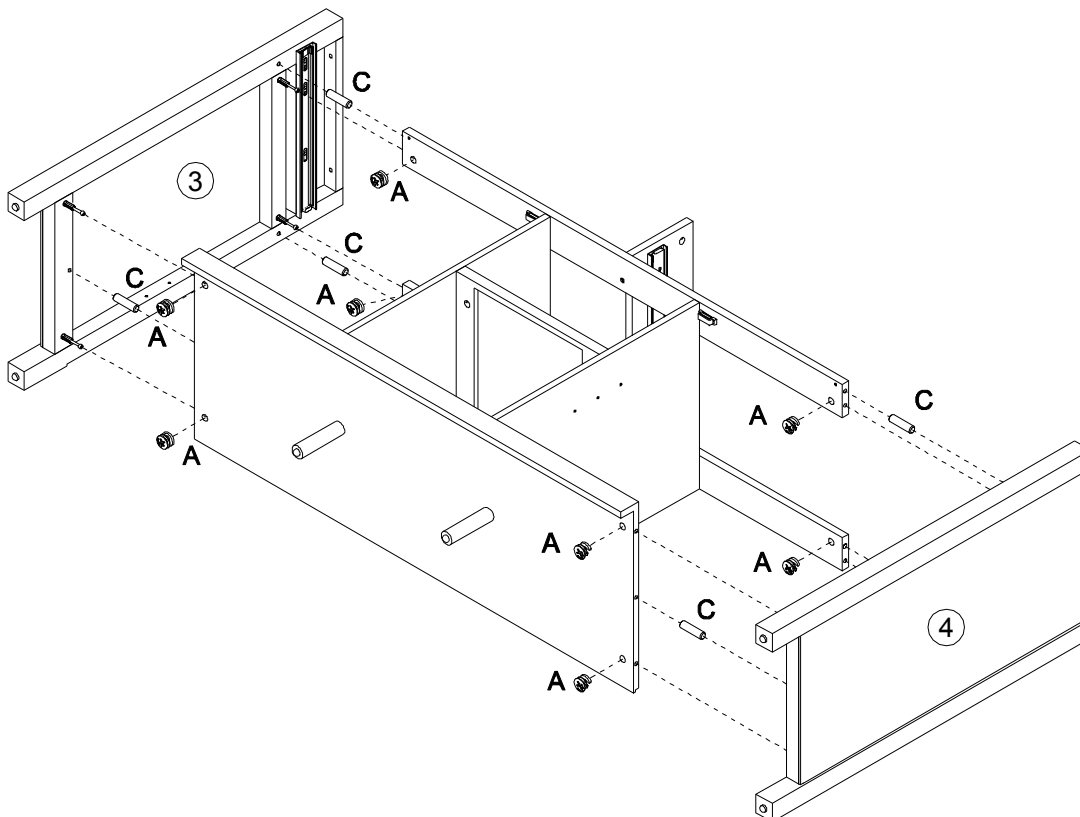Step 8. Attach Left Side Panel (3) and Right Side Panel (4) using Wood Dowels (C) and Cam Locks (A) as shown.



7

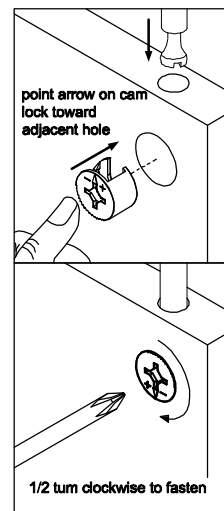
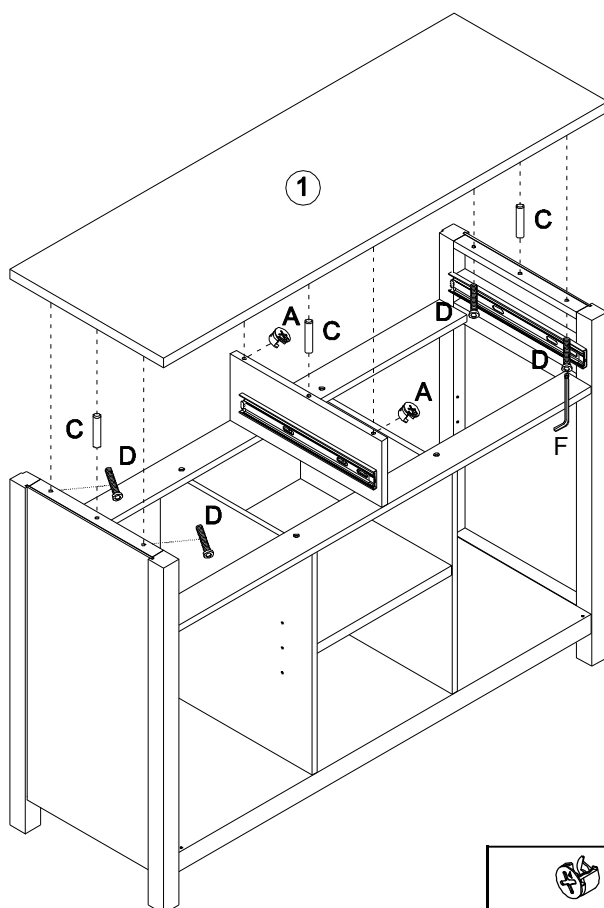


A x 8




C x 6

Step 9. Carefully turn cabinet over. Attach Top Panel (1) using Wood Dowels (C), Cam Locks (A), Long Flat Head Bolts (D) and Allen Key (F) as shown.




		
A x 2	C x 3	D x 4

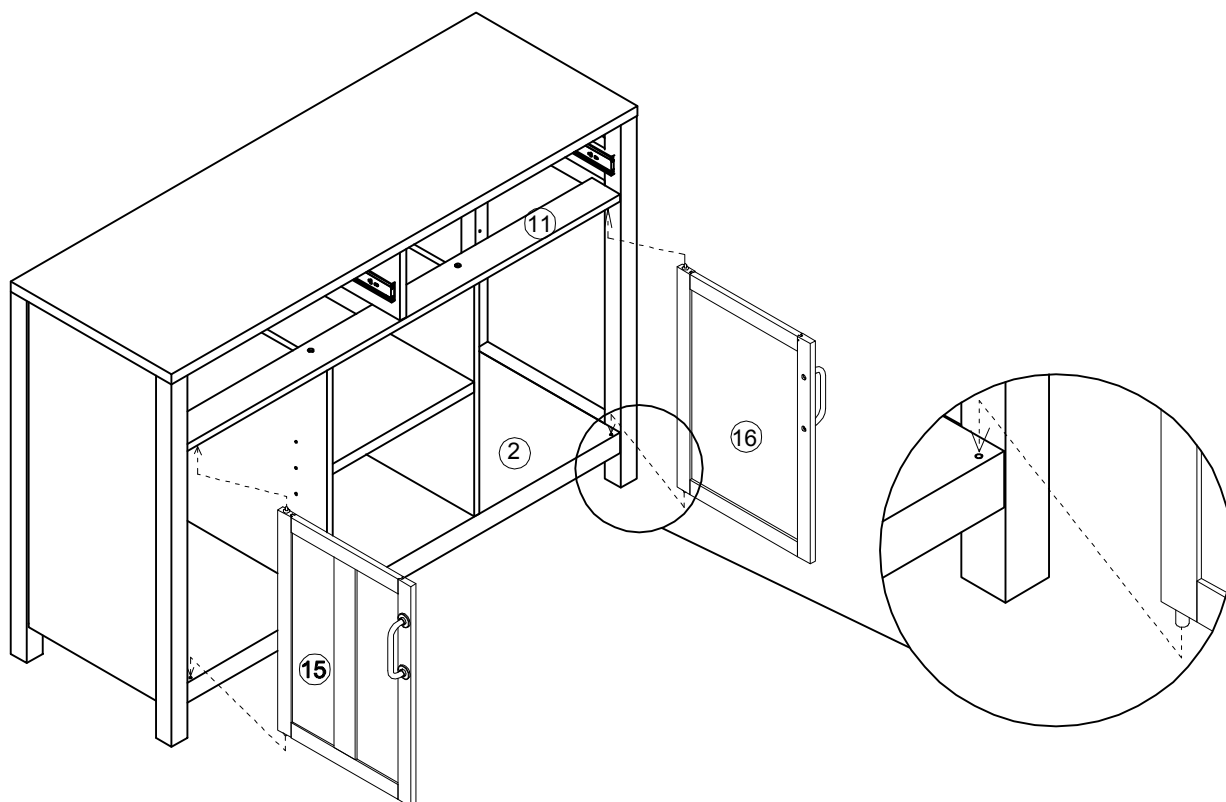Step 10. Attach Doors (15 & 16) to cabinet by placing bottom Pin Hinge into pre-drilled holes in Base (2) & depressing top spring loaded pin hinge to fit the door into place in Rail (11).
Note-Be sure Pin Hinges (top & bottom) have fully extended into the pre-drilled holes in Base (2) and Rail (11) to secure doors into place .




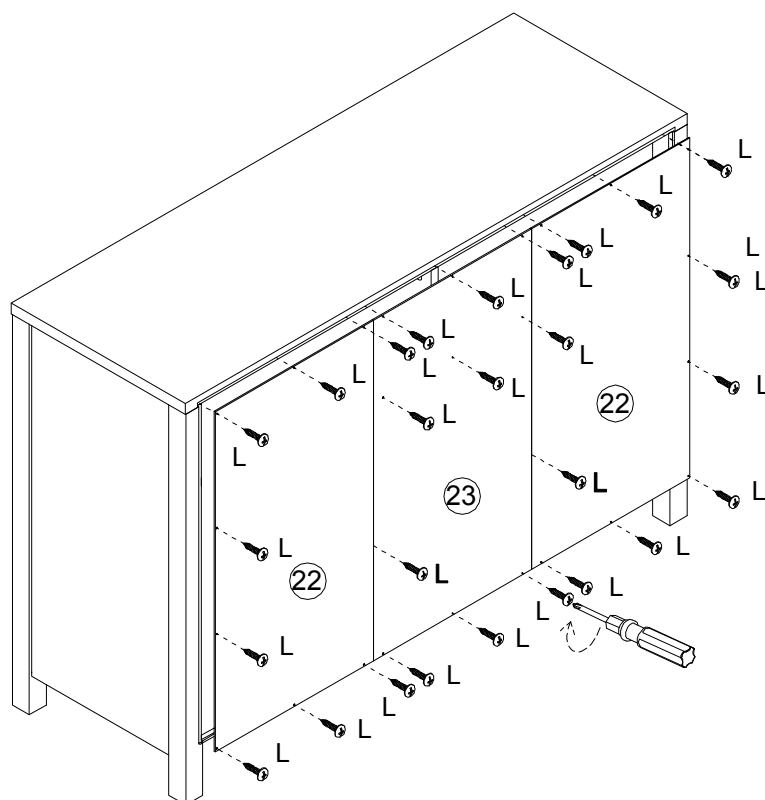Step 11. Attach Back Panels (22&23) to cabinet using Round Head Screws (L) as shown.




L x 27

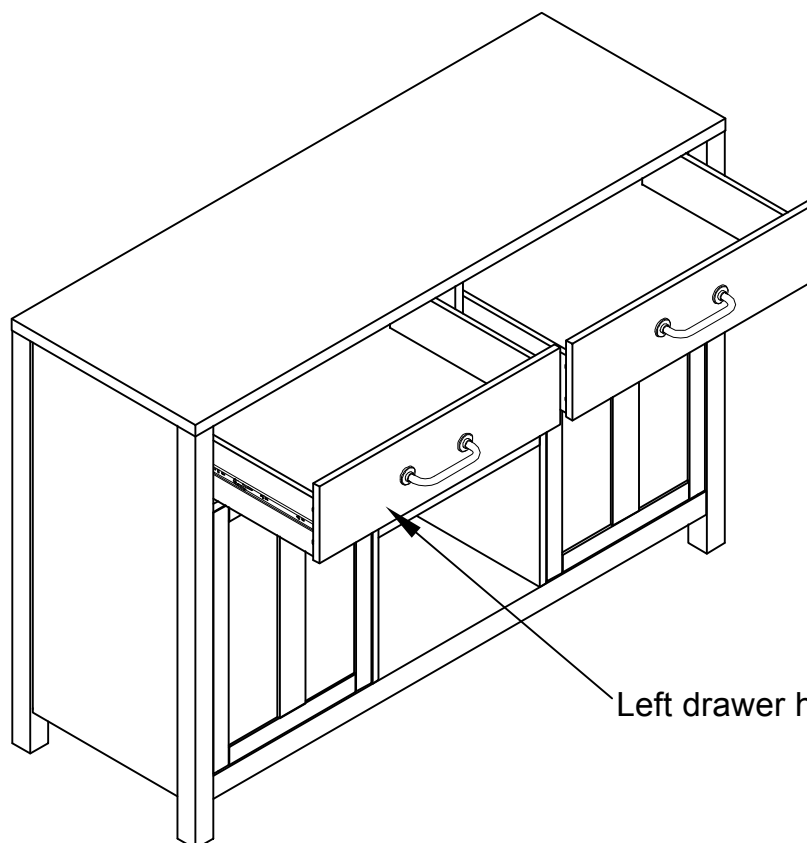Step 12. Insert drawers into cabinet as shown.




Left drawer has a brand in it .

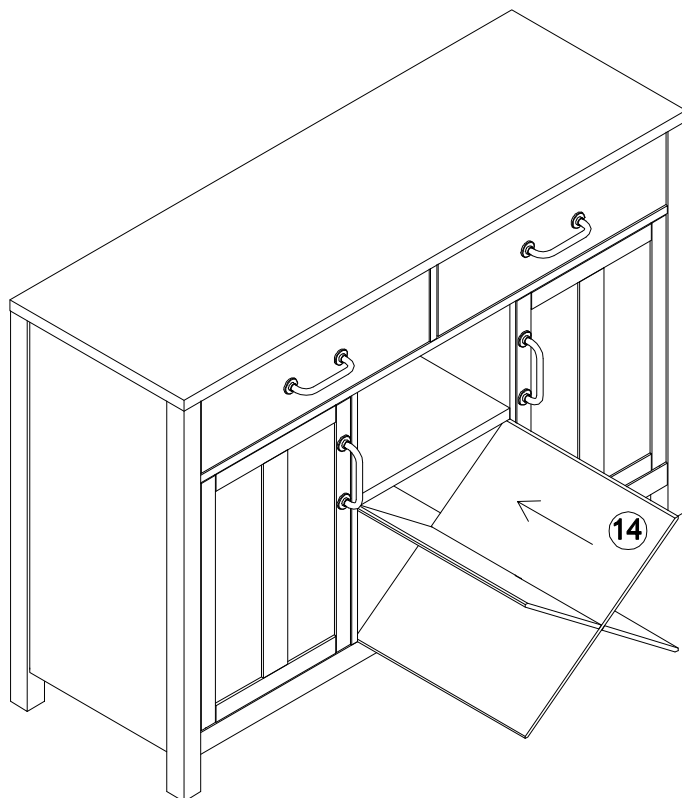Step 13. Insert assembled wine holder shelf into cabinet as shown.





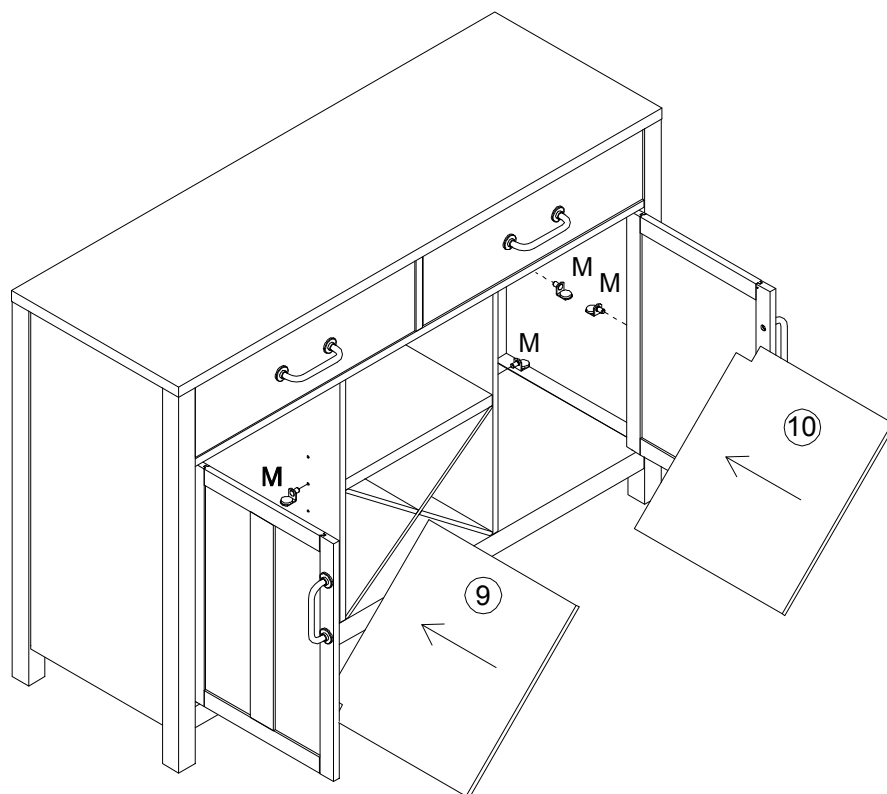Step 14. Insert the Shelf Holders (M) into desired position. Insert Adjustable shelf (9&10) into cabinet.



10

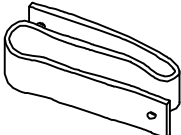Step 15.

N 	A 	B 	C  D 8*3/4"	D  D 8*1-1/2"	E 
SAFETY STRAP KIT 1PC	WALL ANCHOR A x 1PC	WASHER B x 2PCS	SHORT SCREW C x 1PC	LONG SCREW D x 1PC	SAFETY WALL STRAP E x 1PC

SAFETY WALL STRAP ASSEMBLY INSTRUCTION

1) Insert Short Screw Part (C) through Washer Part (B) and Safety Wall Strap Part (E) and screw it into Top Panel (1).

2) Drill a 11/32" hole where you want to secure your pantry. The hole should be at the same height as the hole in Top Panel (1). Tap Wall Anchor Part (A) into the hole.

3) Insert Long Screw Part (D) through a Washer Part (B) and Wall Safety Strap Part (E) into Wall Anchor Part (A).

