
ASSEMBLY INSTRUCTIONS

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury. Therefore, for your protection, please remove any exposed staples used in packing.


Please keep all hardware parts out of the reach of children.

- 1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier and will help to eliminate damage to the product or injury to persons during assembly.
- 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
- 3. Please do not over tighten screws or bolts.
- 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

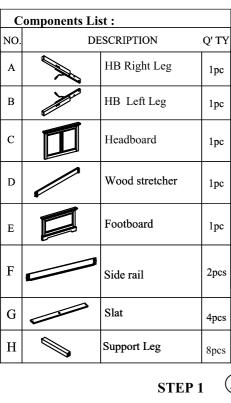

NOTE:

Hardware List				
NO.	DESCRIPTION	SIZE	SKETCH	Q' TY
1	Flat Washer	8*19*2mm	0	8pcs
2	Spring Washer	8mm	0	16pcs
3	Allen Bolts	1/4"*1-9/16"		2pcs
4	Allen Bolts	5/16"*1-9/16"	Opposition of the same of the	6pcs
5	Allen Key	4*30*80mm		1pc
6	Allen bolt	5/16" * 3"		8pcs
7	Half moon washer	Ø5/16"	Ø	8pcs
8	Hex Nut	Ø5/16"*12mm	@	8pcs
9	Wrench	12mm	S €	1pc
10	Wood Screw	#8*1-1/4"	-	8pcs

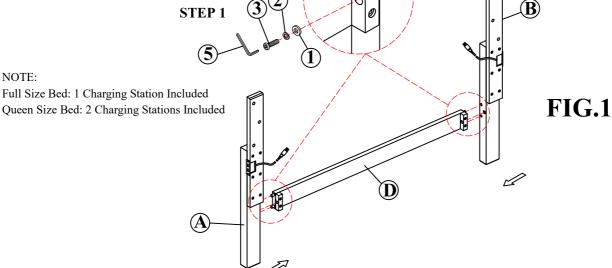


STEP 1: Attach the Wood Stretcher (D) to both Headboard Legs (A&B) using provided hardware as shown on FIG.1

Page 1 of 3

MADE IN VIETNAM


ASSEMBLY INSTRUCTIONS

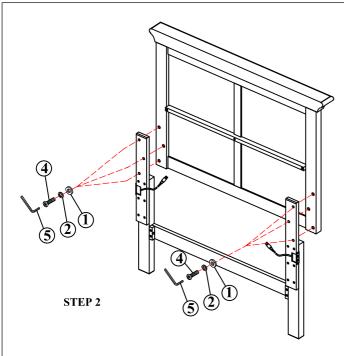

STEP 2: Attach the Headboard (C) to the Legs assembly (A,B&D) using provided hardware as shown on FIG.2

FIG.2


STEP 3: Attach both Bed Rails (F) to the Headboard assembly (A,B,D&C) using the provided hardware as shown on FIG.3

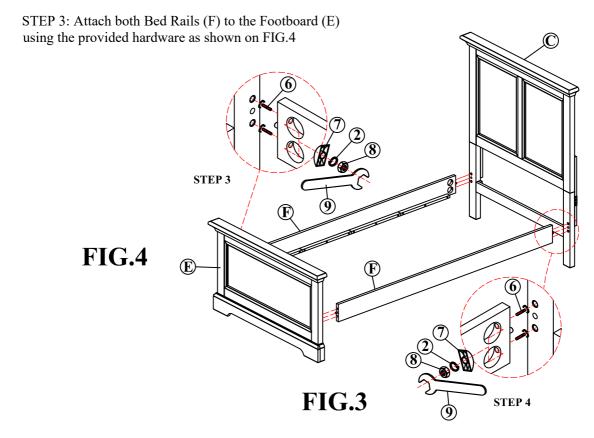

Page 2 of 3

MADE IN VIETNAM


ASSEMBLY INSTRUCTIONS

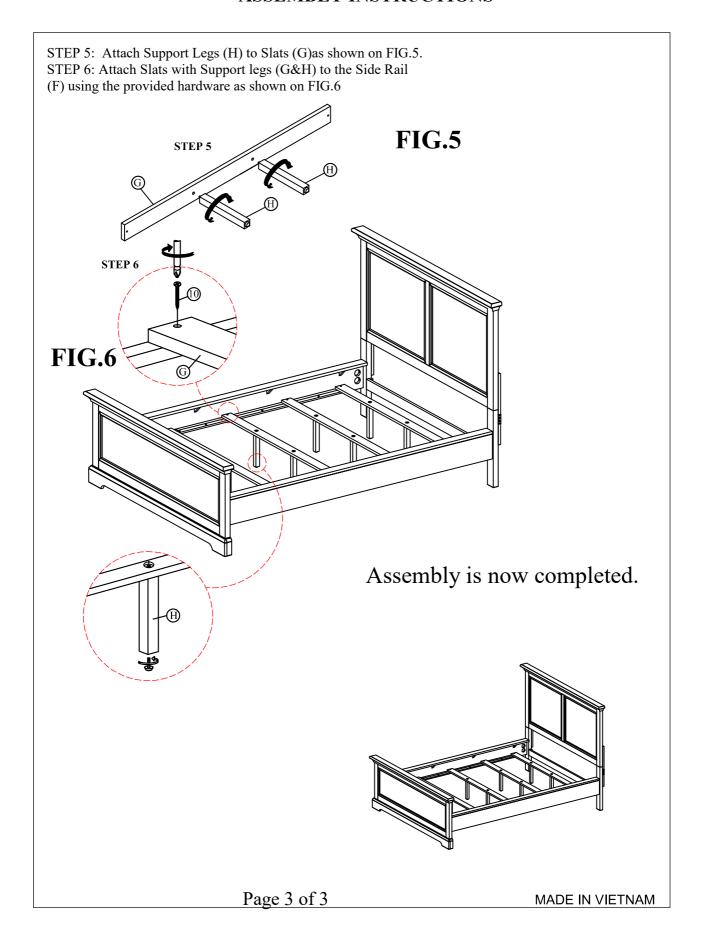

Charging Kit Removal And Installation.


ASSEMBLY INSTRUCTIONS

WARNING: Before the removal or installation of charging kit disconnect charging kit from any electrical outlets.

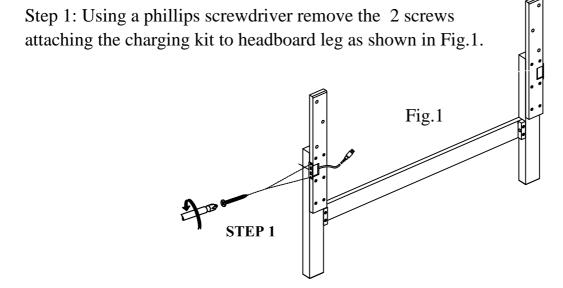

Note:

The Manufacturing label should not be visible once charging kit is installed as shown in Fig. 2.

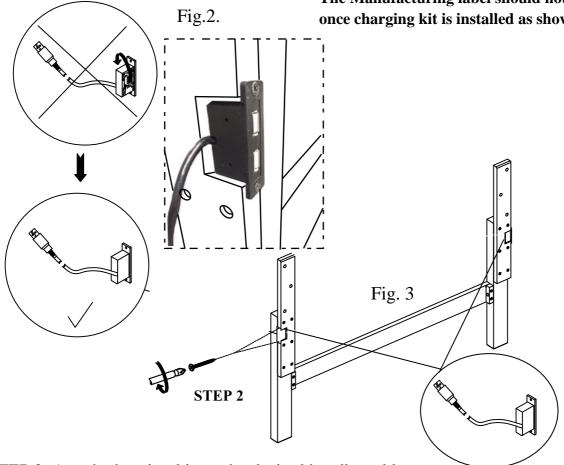

STEP 2: Attach charging kit on the desired headboard leg using 2 screws and phillips screwdriver as shown in Fig. 3.

Page 1 of 1

MADE IN VIETNAM