


ASSEMBLY INSTRUCTION


ITEM : MV-5969-90951-85 Roatan 4/6 - 5/0 Woven Headboard
 MV-5969-90952-85 Roatan 5/0 Woven Footboard
 MV-5969-90953-85 Roatan 5/0 - 6/0 Rails
 MV-5969-90967-85 Roatan 6/0 - 6/6 Woven Headboard
 MV-5969-90968-85 Roatan 6/0 - 6/6 Woven Footboard
 MV-5969-90963-85 Roatan 6/0 Rails

Please read all instructions carefully before starting the assembly process. Please be sure to unpack carefully as small parts may have come loose during travel from paradise. Helpful tip--do not fully tighten bolts until assembly is complete. It will make assembly easier.

HARDWARE LIST OF RAIL				
NO	DRAWING	DESCRIPTION	SIZE	QTY
A		Wrench	Ø12 mm	1 PC
B		Nut		8 PCS
C		Lock Washer	ØM8	8 PCS
D		Threaded Rod	ØM5/16*80 mm	8 PCS
E		Half Moon Washer		8 PCS
F		Screw	Ø8*32 mm	10 PCS

PARTS LIST			
No	DRAWING	DESCRIPTION	QTY
1		HEADBOARD	1 PC
2		FOOTBOARD	1 PC
3		SIDE RAIL	2 PCS
4		SLAT	5 PCS
5		SUPPORT LEGS	5 PCS

TOOLS REQUIRED (NOT PROVIDED)	
Phillips Screwdriver	

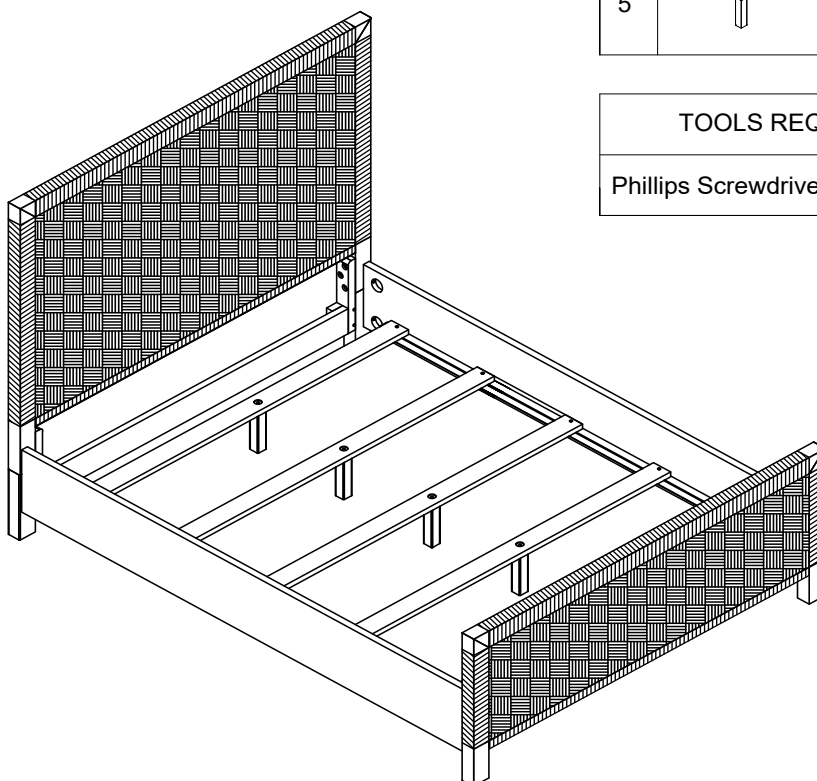

ITEM : MV- 5969 - 90951-85 Roatan 4/6 - 5/0 Woven Headboard

MV- 5969 - 90952-85 Roatan 5/0 Woven Footboard

MV- 5969 - 90953-85 Roatan 5/0-6/0 Rails


MV- 5969 - 90967-85 Roatan 6/0 - 6/6 Woven Headboard

MV- 5969 - 90968-85 Roatan 6/0 - 6/6 Woven Footboard


MV- 5969 - 90963-85 Roatan 6/0 Rails

Please read all instructions carefully before starting the assembly process. Please be sure to unpack carefully as small parts may have come loose during travel from paradise. Helpful tip—do not fully tighten bolts until assembly is complete. It will make assembly easier.


Step.1

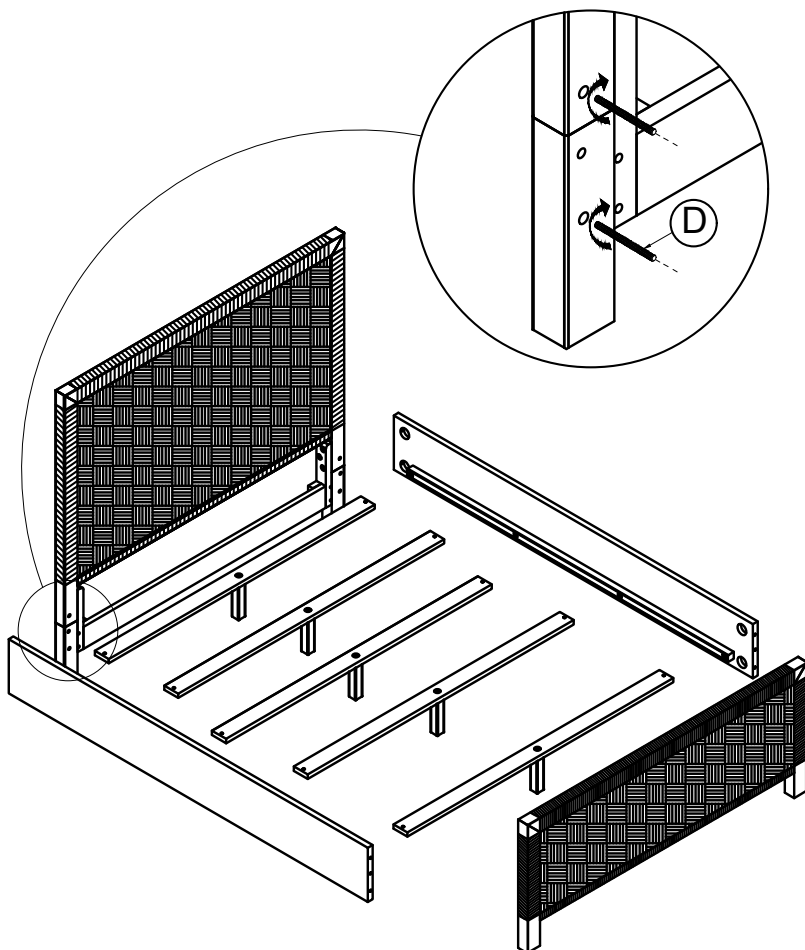

Step.2

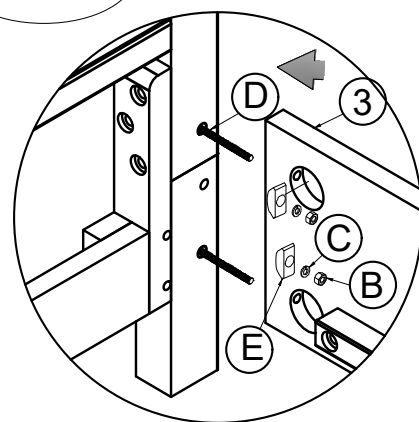

Step.3

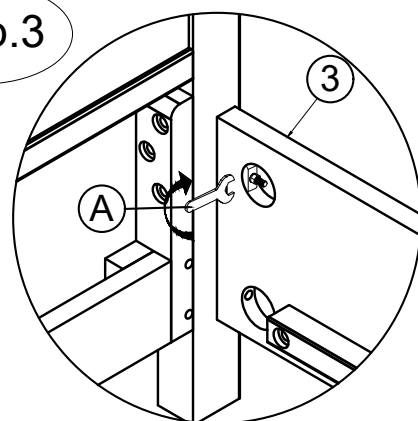



ASSEMBLY INSTRUCTION

ITEM : MV- 5969 - 90951-85 Roatan 5/0 Woven Headboard

MV- 5969 - 90952-85 Roatan 5/0 Woven Footboard


MV- 5969 - 90953-85 Roatan 5/0-6/0 Rails

MV- 5969 - 90967-85 Roatan 6/0 - 6/6 Woven Headboard

MV- 5969 - 90968-85 Roatan 6/0 - 6/6 Woven Footboard

MV- 5969 - 90963-85 Roatan 6/0 Rails

Please read all instructions carefully before starting the assembly process. Please be sure to unpack carefully as small parts may have come loose during travel from paradise. Helpful tip--do not fully tighten bolts until assembly is complete. It will make assembly easier.

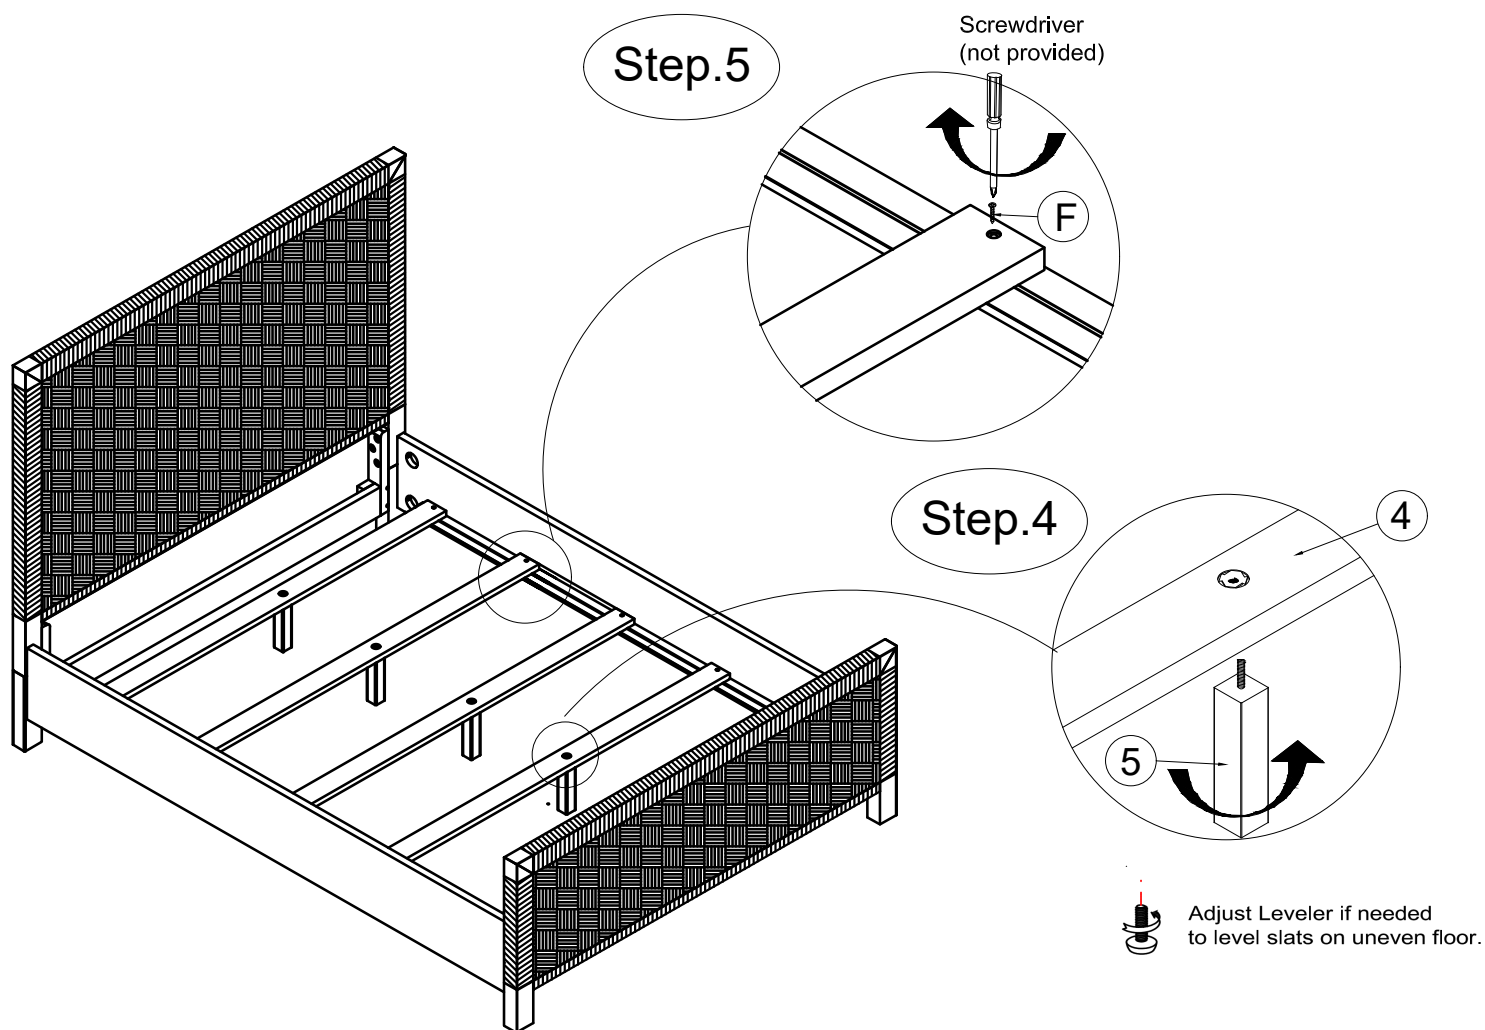



ASSEMBLY INSTRUCTION

ITEM : MV- 5969 - 90951-85 Roatan 5/0 Woven Headboard
MV- 5969 - 90952-85 Roatan 5/0 Woven Footboard
MV- 5969 - 90953-85 Roatan 5/0-6/0 Rails
MV- 5969 - 90967-85 Roatan 6/0 - 6/6 Woven Headboard
MV- 5969 - 90968-85 Roatan 6/0 - 6/6 Woven Footboard
MV- 5969 - 90963-85 Roatan 6/0 Rails

Please read all instructions carefully before starting the assembly process. Please be sure to unpack carefully as small parts may have come loose during travel from paradise. Helpful tip--do not fully tighten bolts until assembly is complete. It will make assembly easier.

Step 1 : Attach side rail (3) to headboard by using threaded rods (D), half moon washer (E), lock washer (C) and nuts (B).

Step 2 : Assemble footboard (2) to side rail (3) using threaded rods (D), half moon washer (E), lock washer (C) and nuts (B).

Step 3 : Tighten all components with wrench (A).

Step 4 : Install support legs (5) to the slat (4).

Step 5 : Attach the slats (4) to the side rails (3) and secure them with screws (F) with phillips screwdriver (not provided).