




























Nine drawers cabinet












–Instruction Manual–

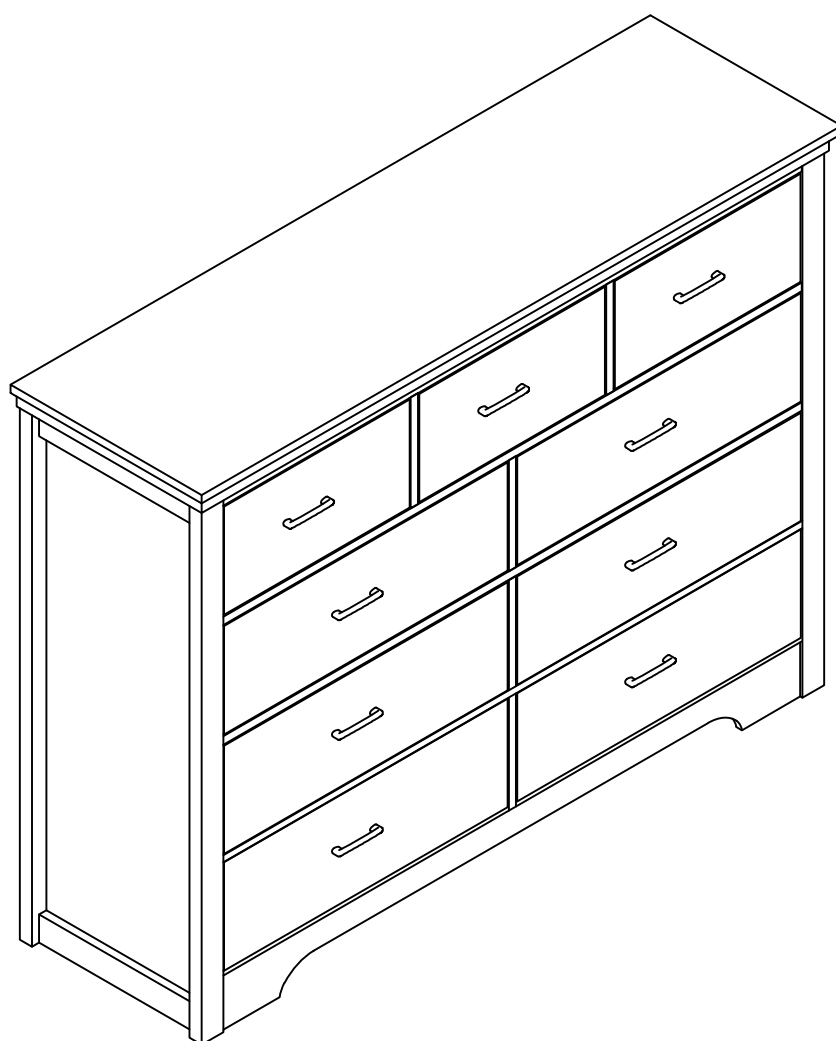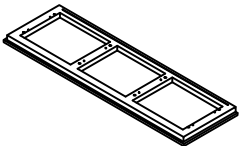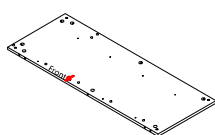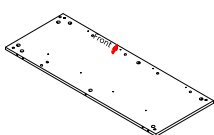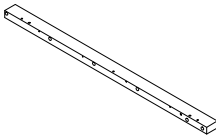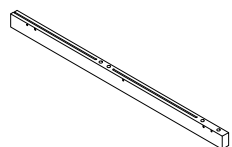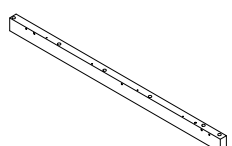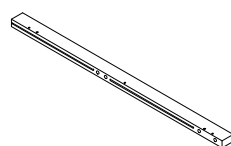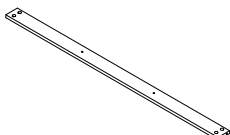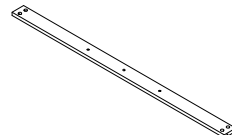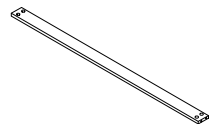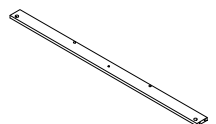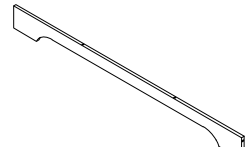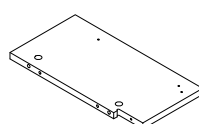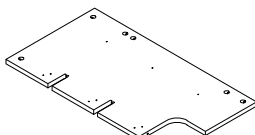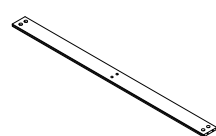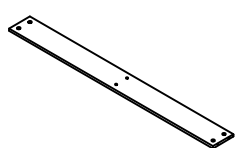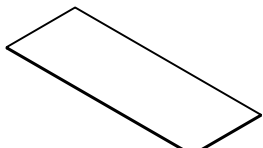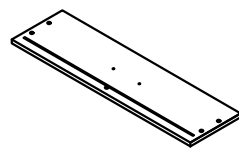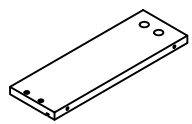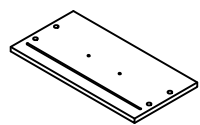


HARDWARE LIST


1  1PC	2  1PC	3  1PC	4  1PC	5  1PC
6  1PC	7  1PC	8  1PC	9  2PCS	10  2PCS
11  1PC	12  1PC	13  2PCS	14  1PC	15  1PCS
16  1PCS	17  2PCS	18  4PCS	19  6PCS	20  9PCS
21  9PCS	22  6PCS	23  6PCS	24  6PCS	25  3PCS
26  3PCS	27  3PCS			

HARDWARE LIST

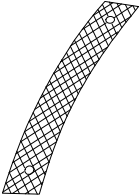
A  6x35mm 110(+2)PCS	B  110(+2)PCS	C  6x30mm 18(+1)PCS	D  M3.5x12mm 90(+2)PCS	E  M3.5x35mm 38(+2)PCS
F  9PCS	G  M4x16mm 18PCS	H  M3x14mm 12(+1)PCS	I  12PCS	J  M3.5x20mm 8(+1)PCS
K  2PCS	L  M3.5x20mm 2PCS	M  2PCS	N  6(+2)PCS	O  7PCS




CL
x9
L300mm




CR
x9
L300mm



DL
x9
L300mm




DR
x9
L300mm

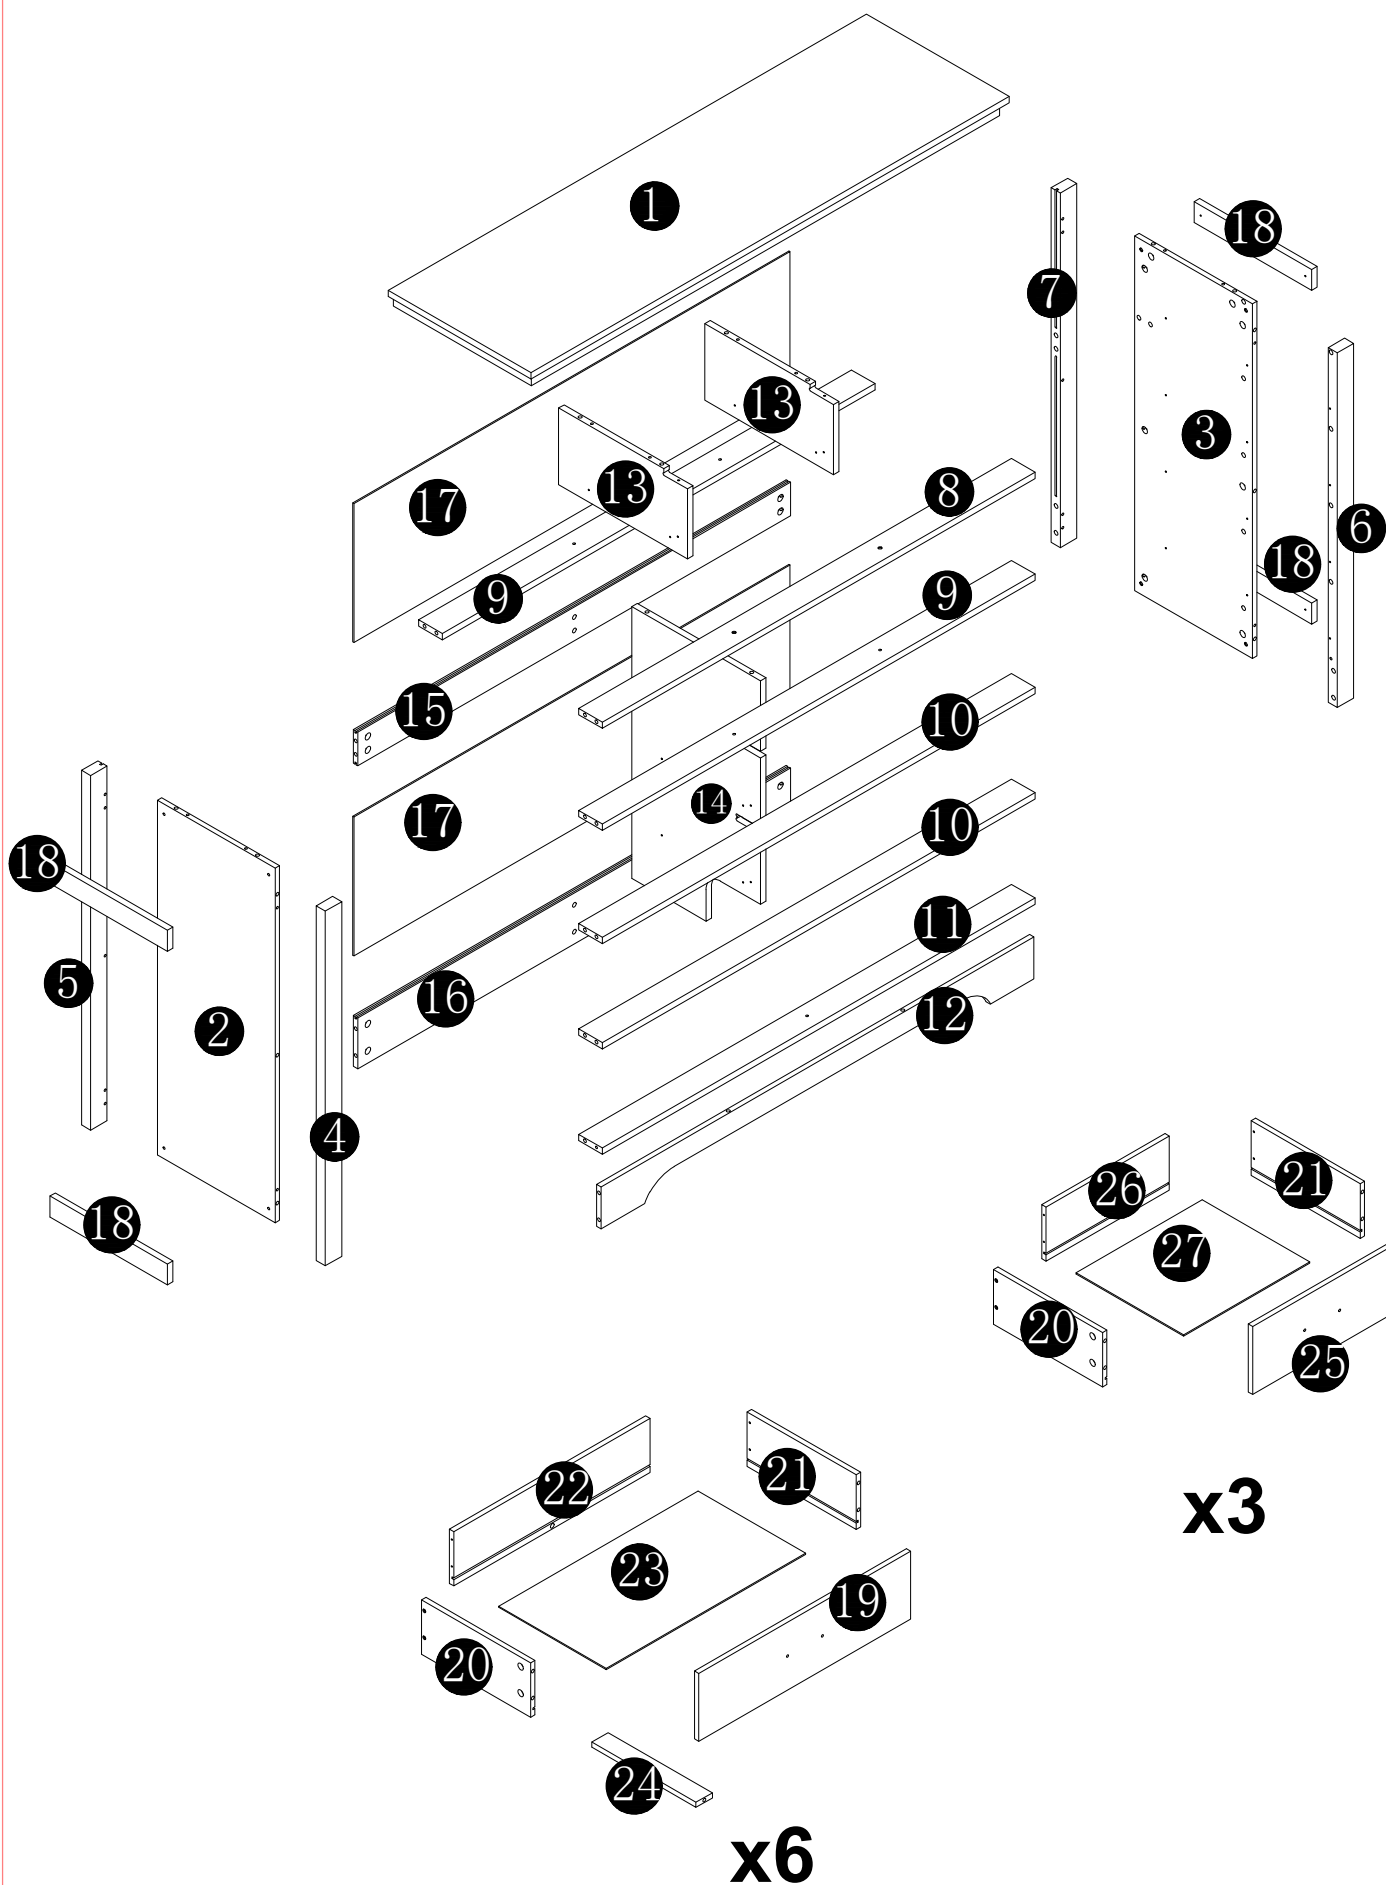


Tips

*This furniture requires 2 people to assemble.
Make sure no parts missing or damaged before assembly.*


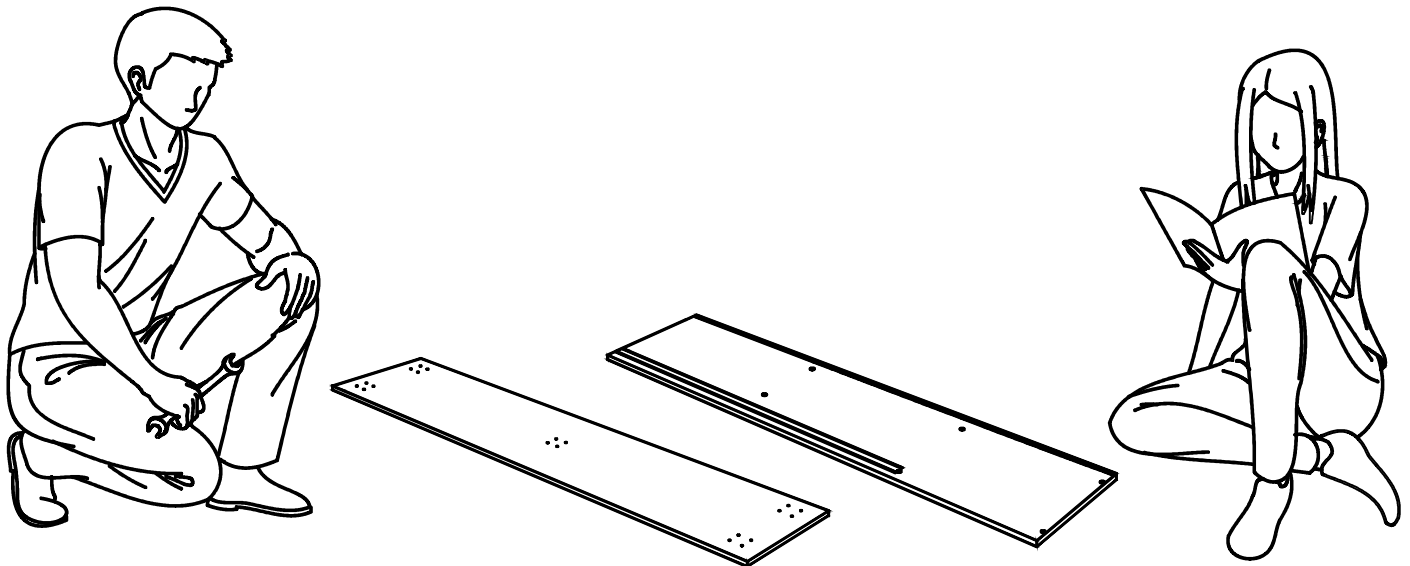


CAM BOLT INSTALLATION AS BELOW


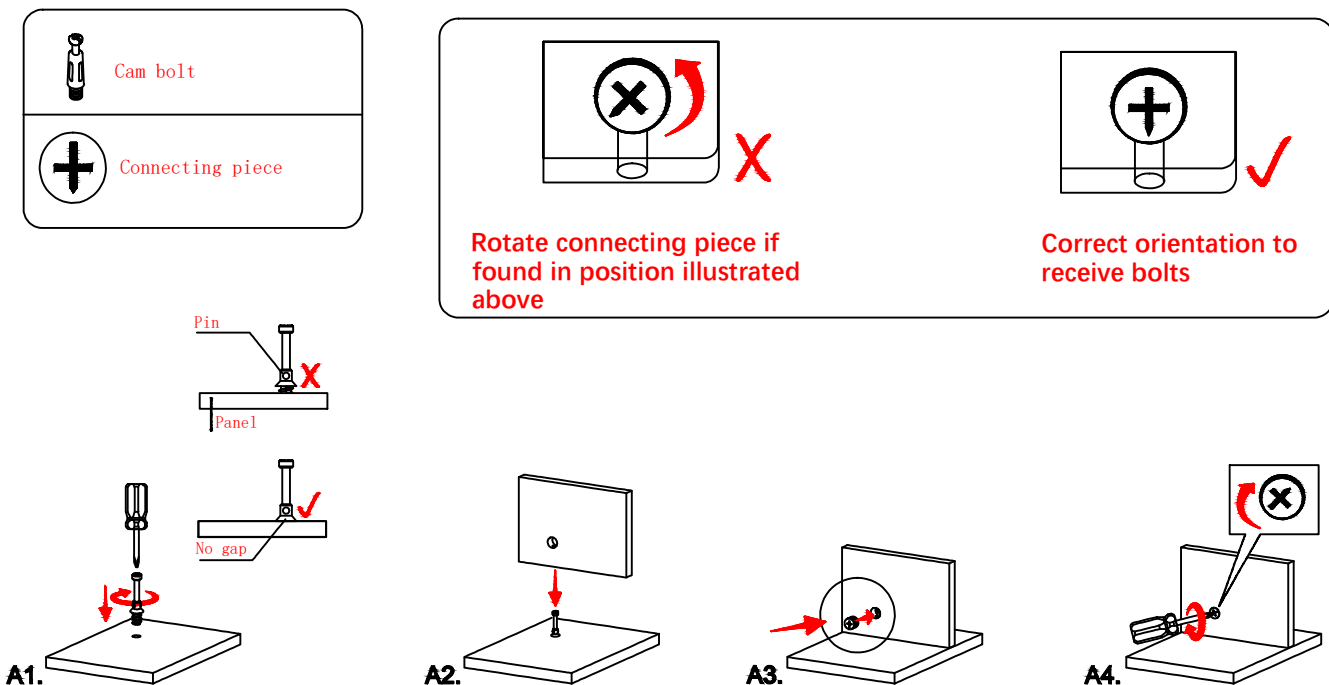


CAUTION: Please confirm the parts list before installation

YOU MAY NEED (NOT SUPPLIED)


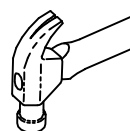


Step:1

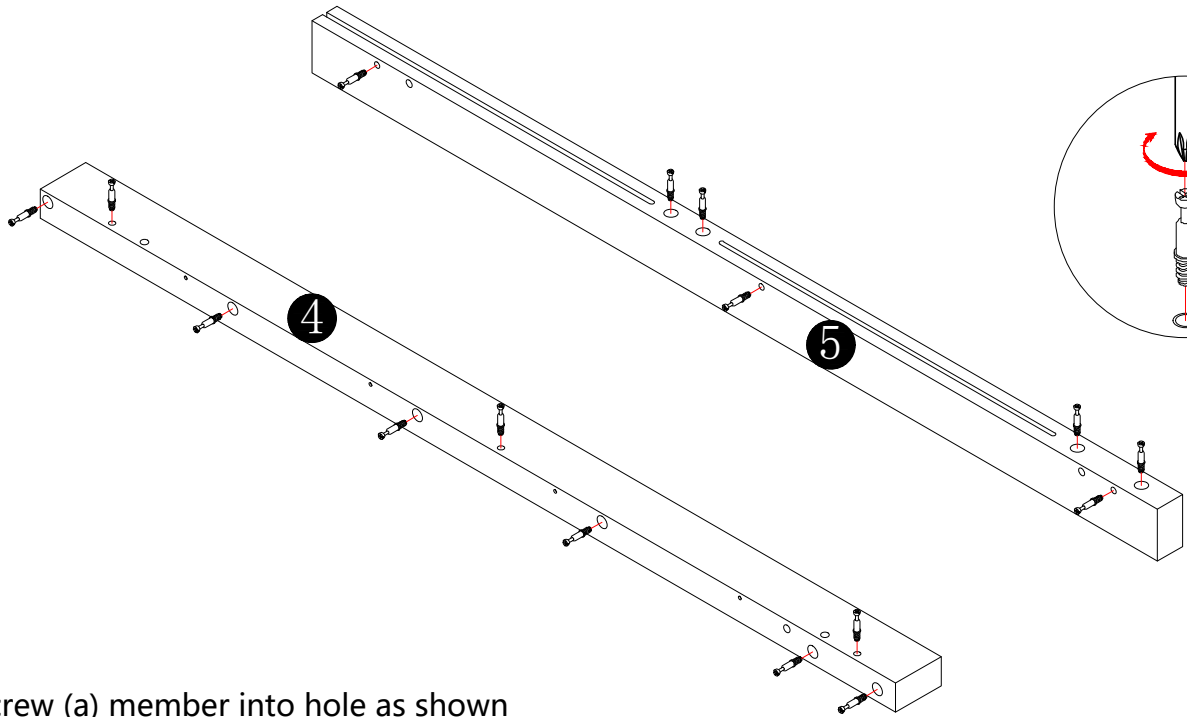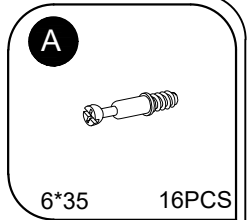


Screw (a) member into hole as shown

Step:2

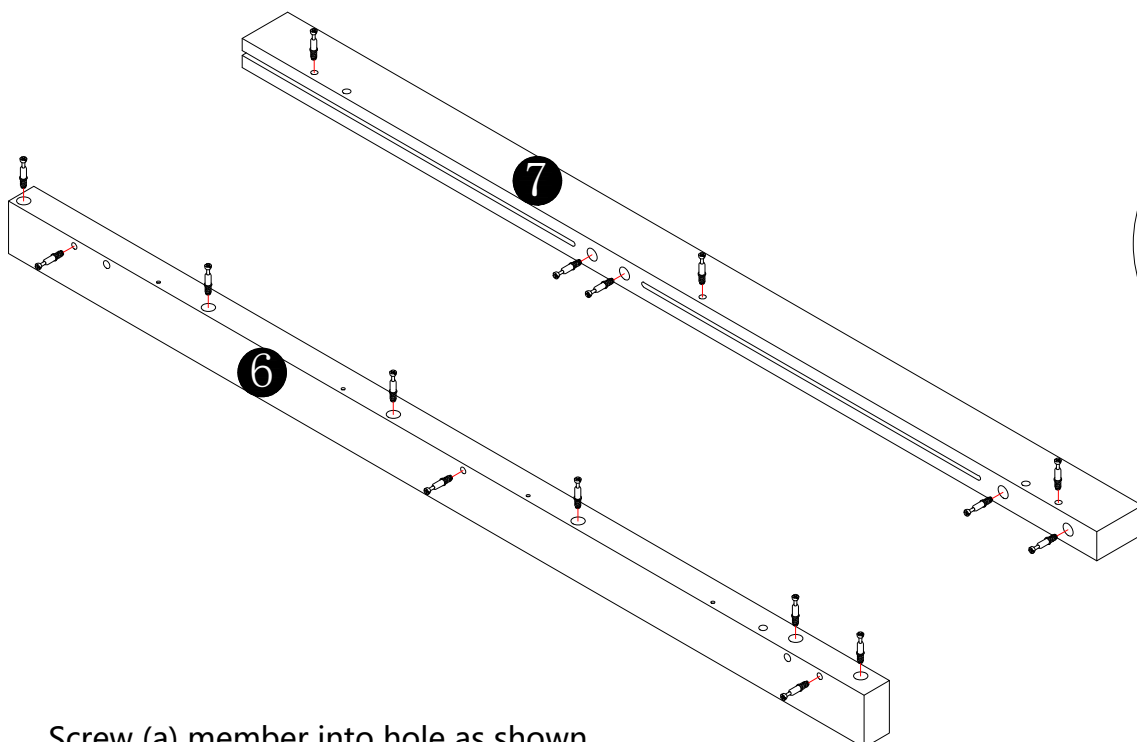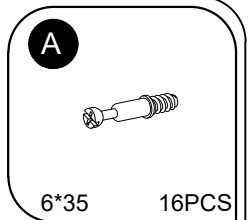

Screw (a) member into hole as shown

Step:3

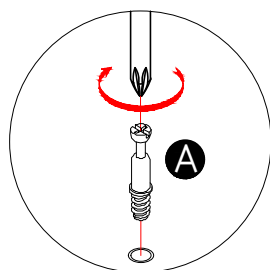

A



6*35


7PCS

C




6*30

4PCS

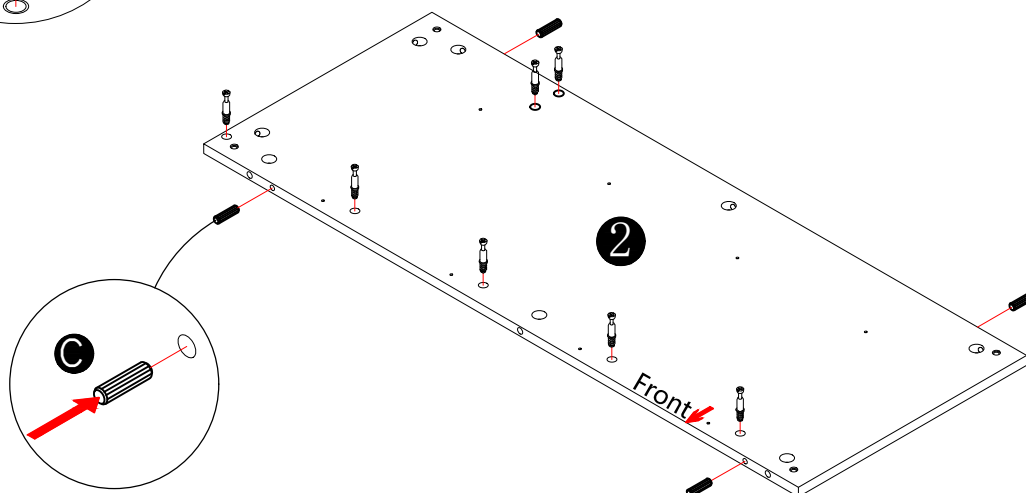

Step:4

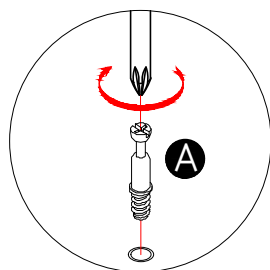

A



6*35


7PCS

C




6*30

4PCS

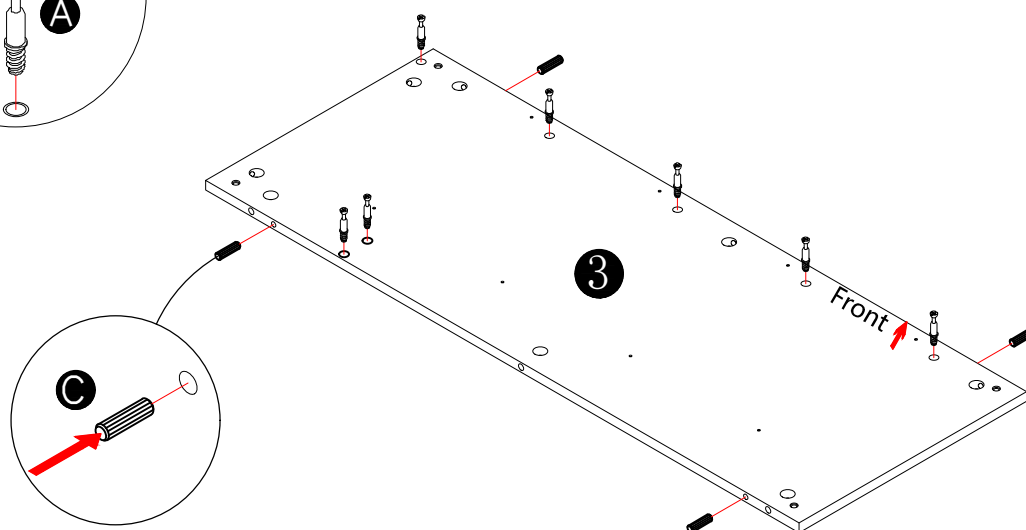


Step:5

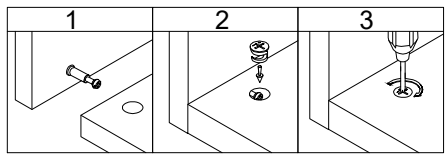


B



Ø15*10 6PCS

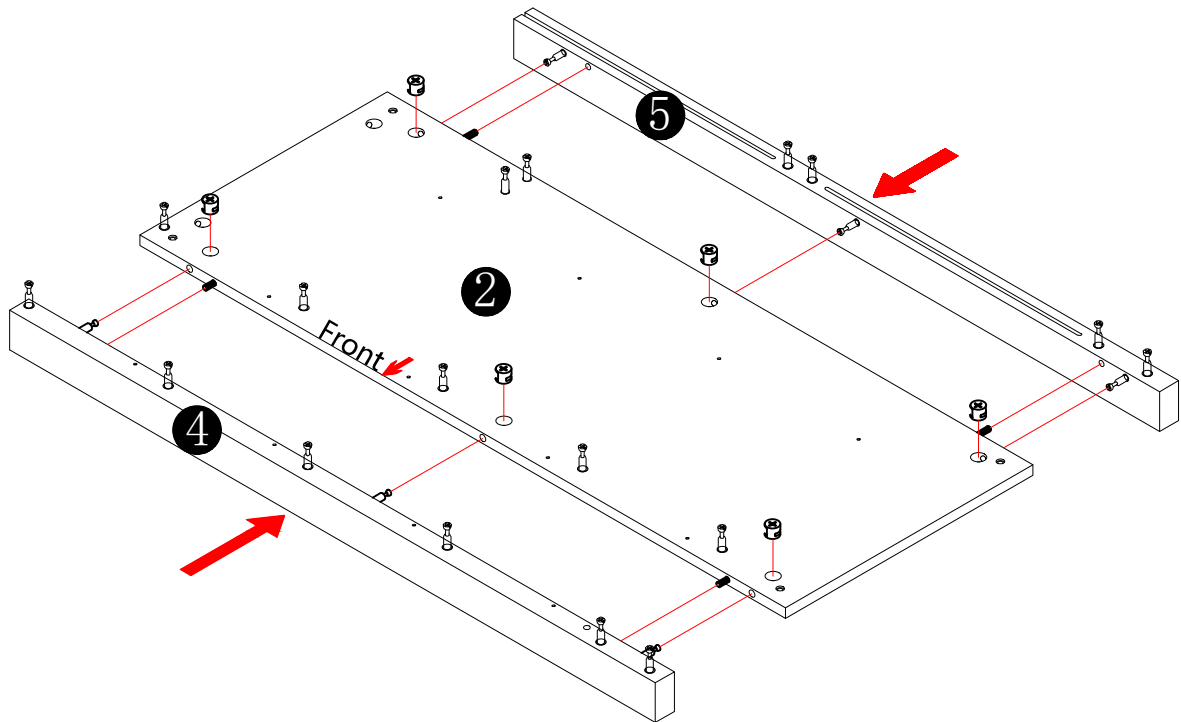


Step:6

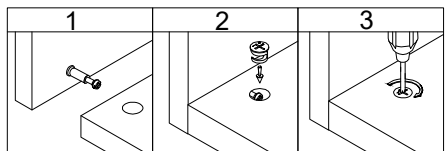



B





Ø15*10 6PCS

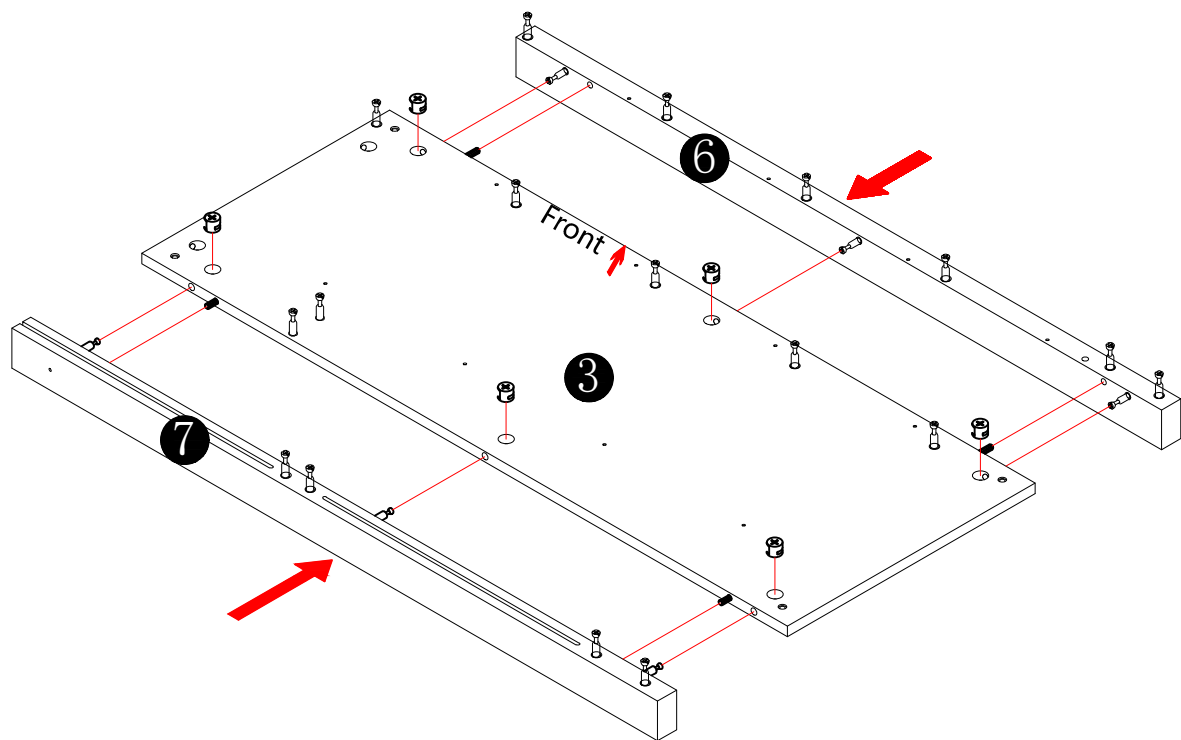





Step:7

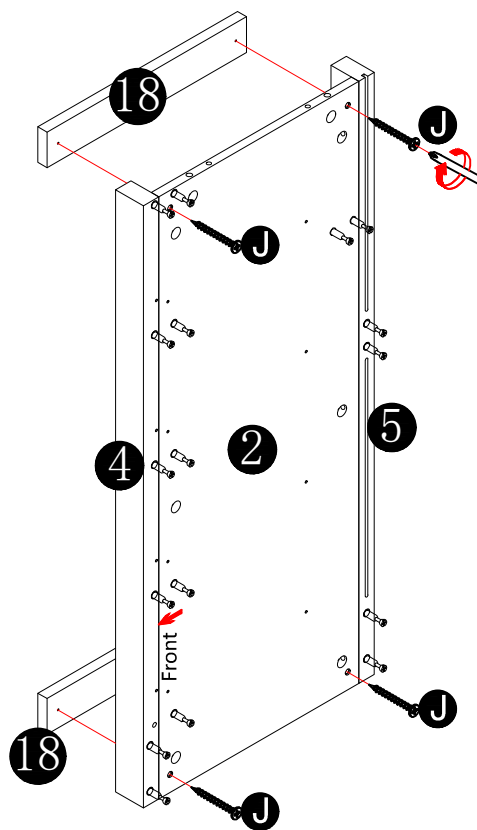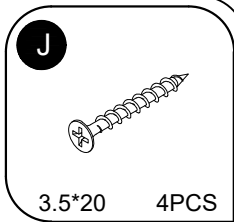





Step:8

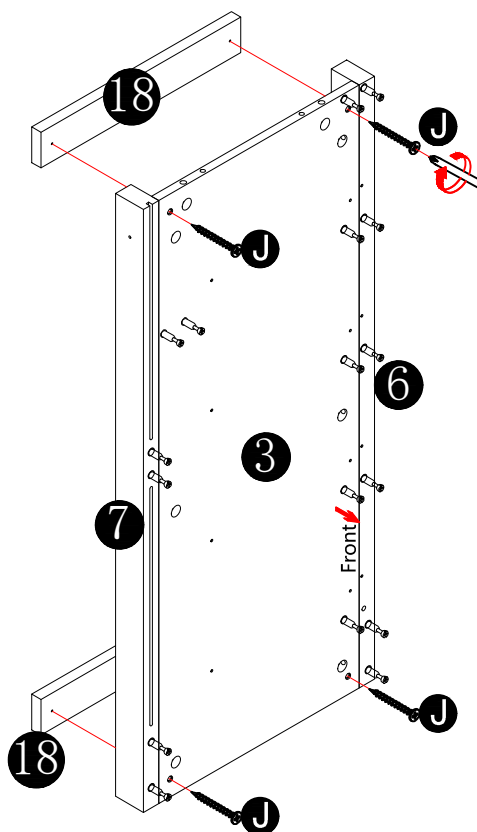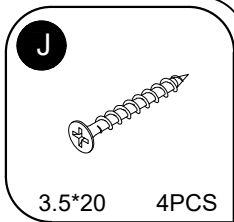



Step:9

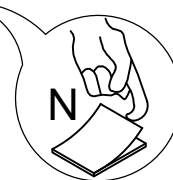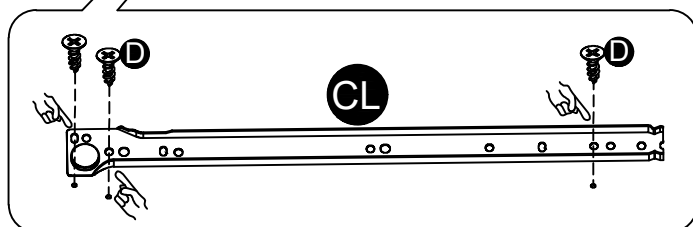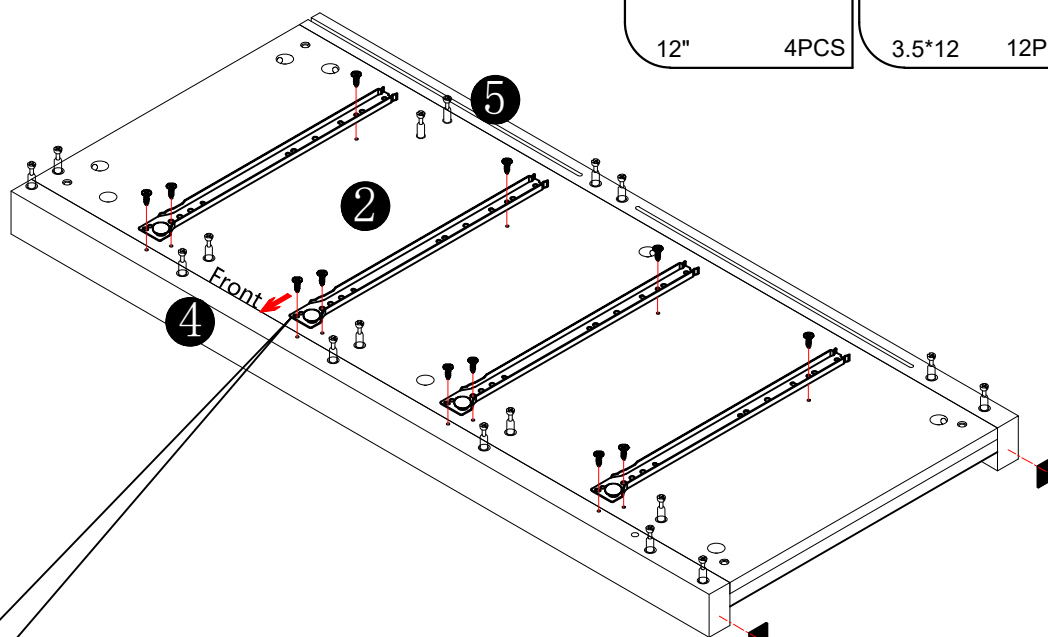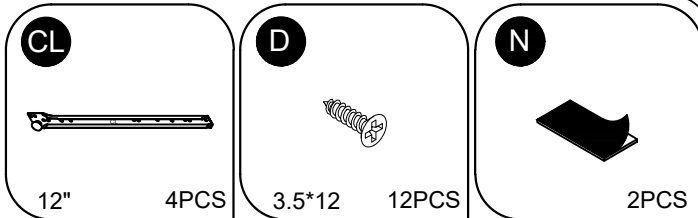



Step:10

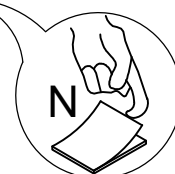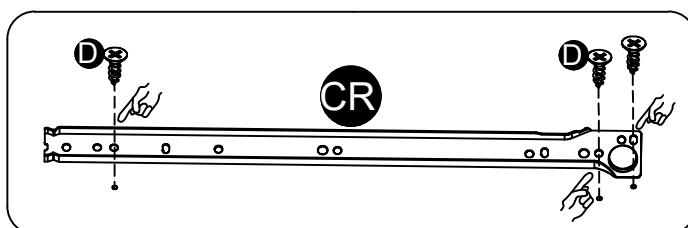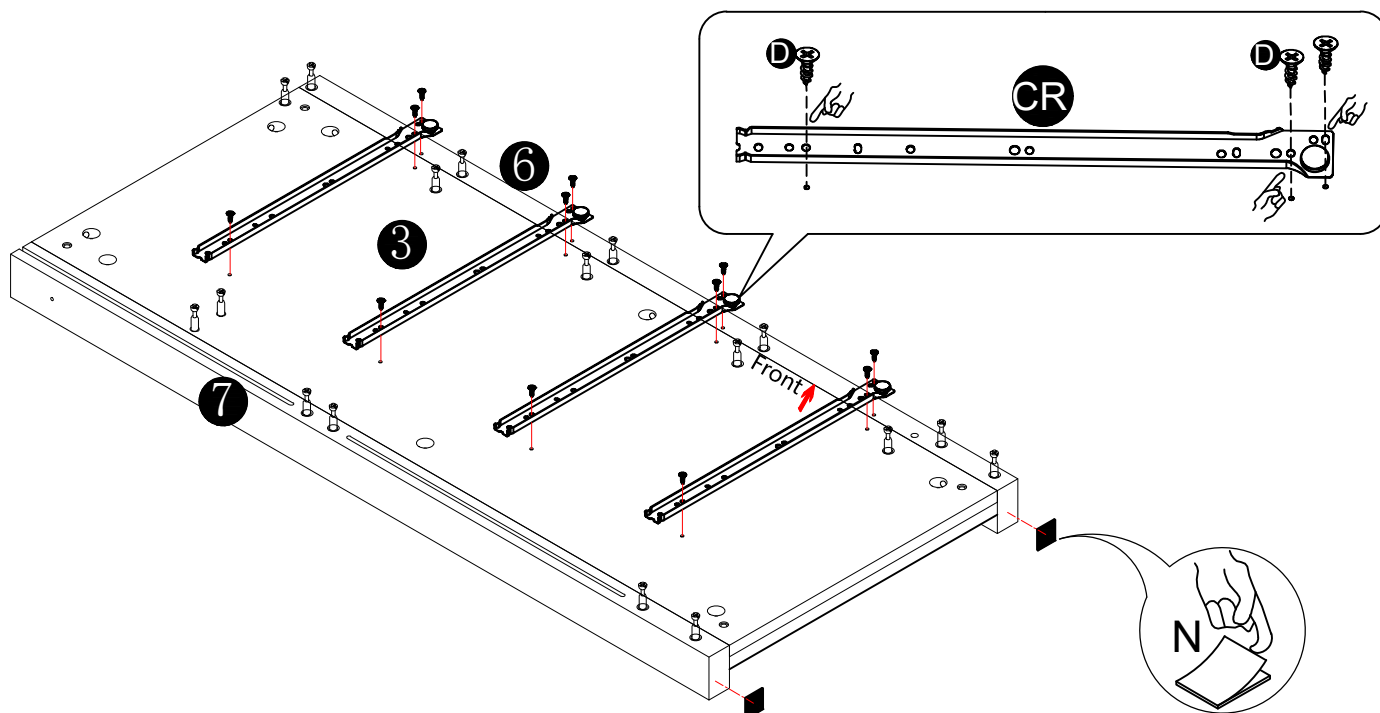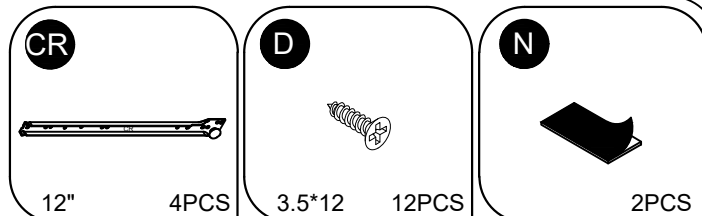



Step:11

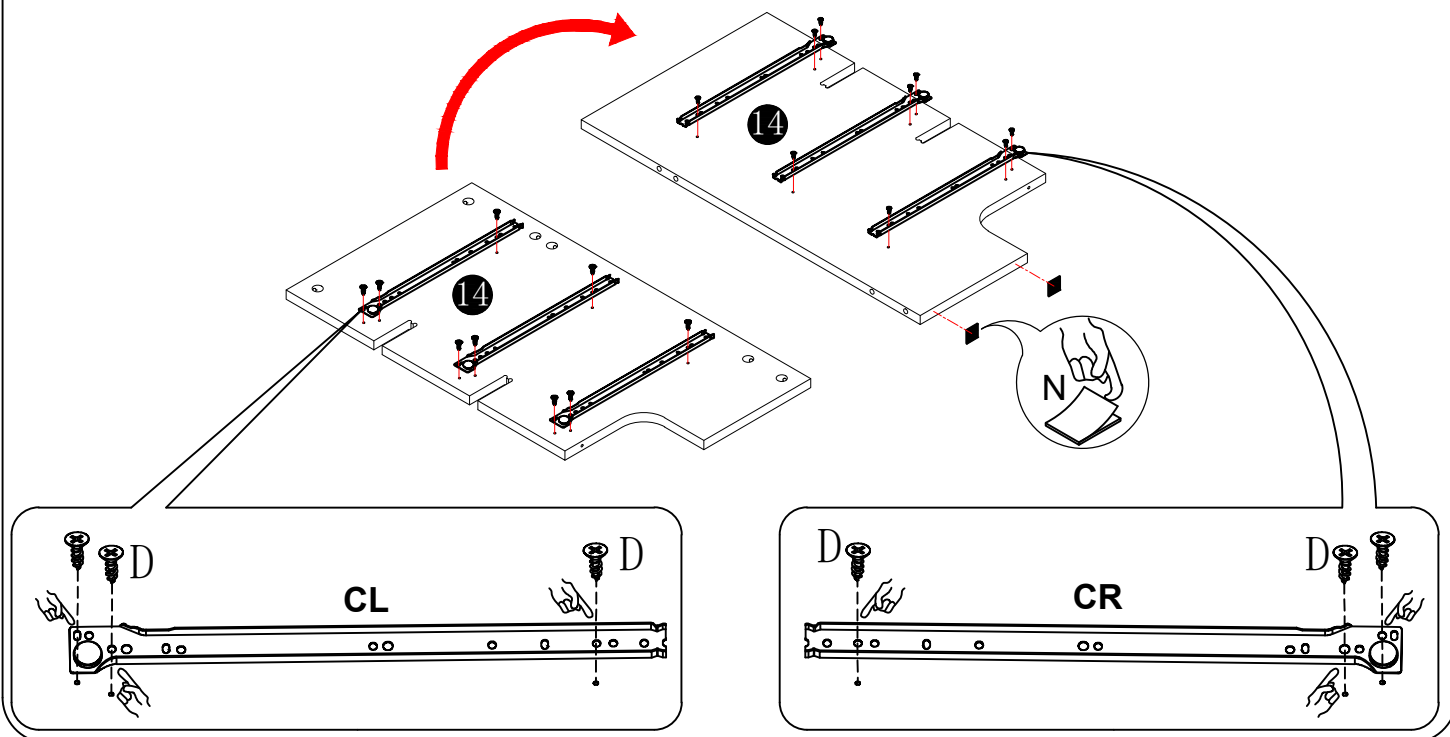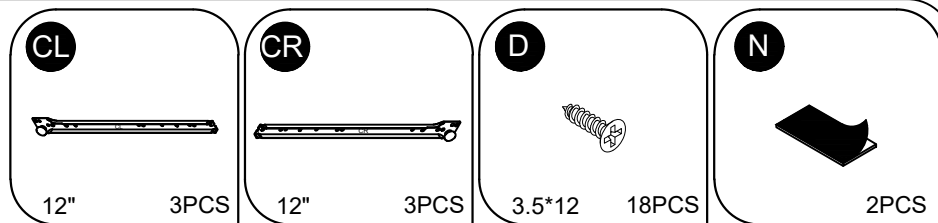




Step:12

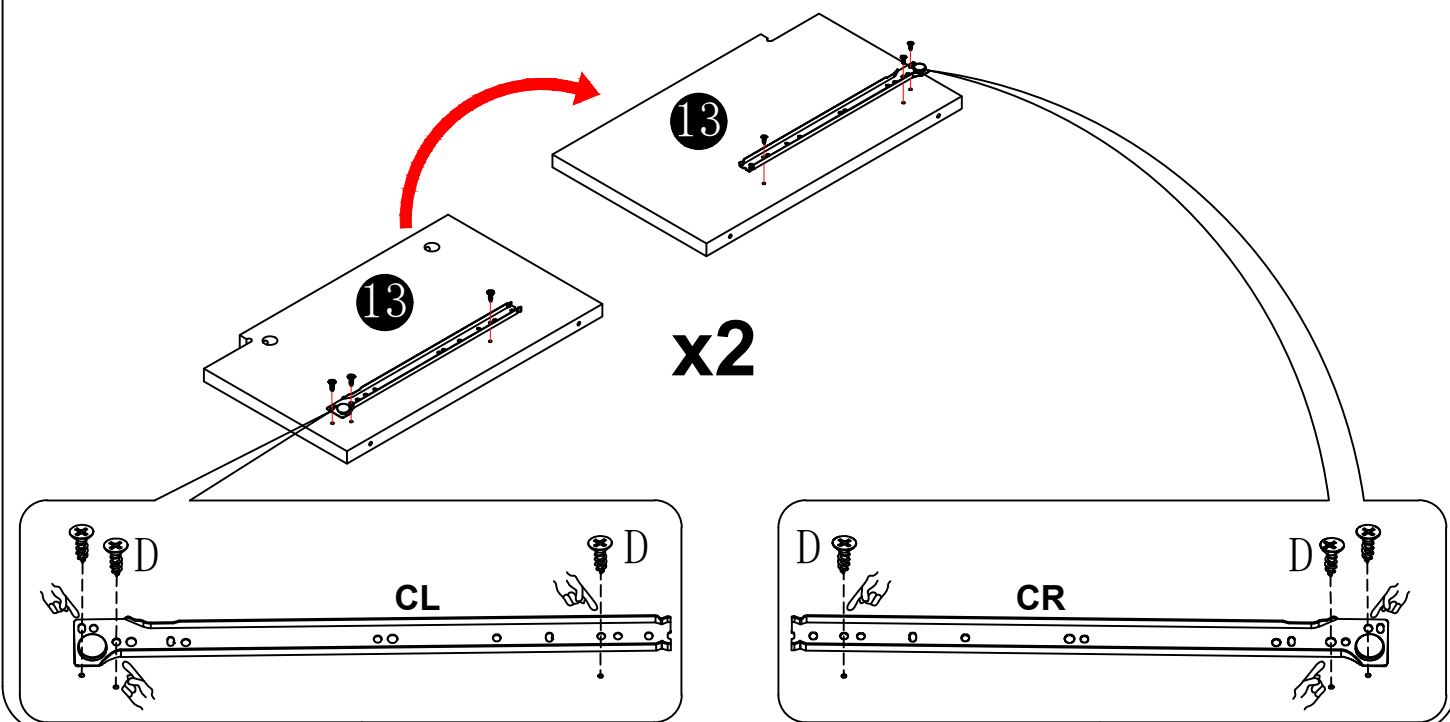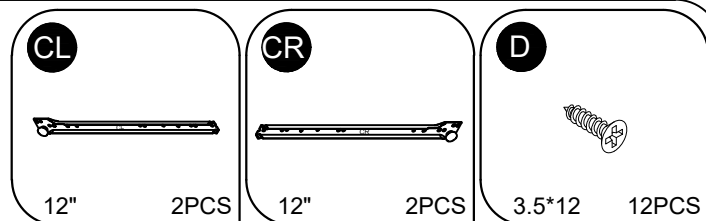

Step:13

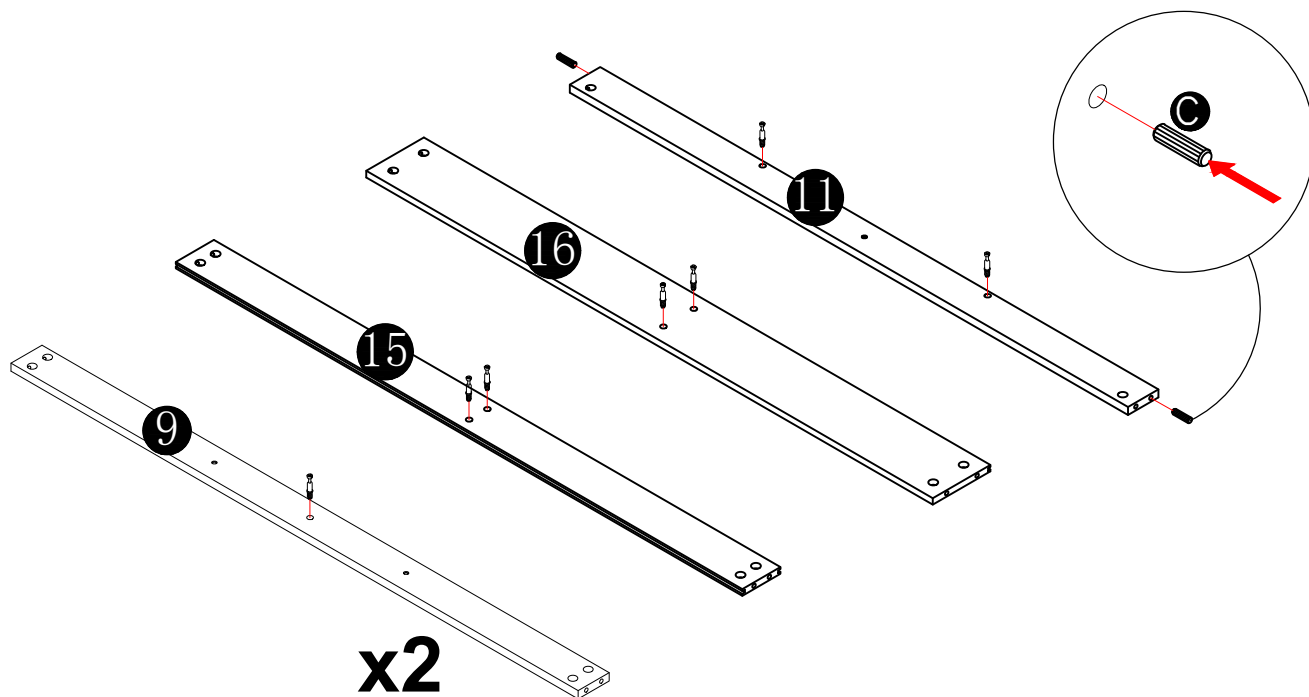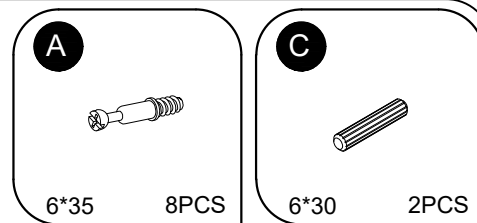


Step:14

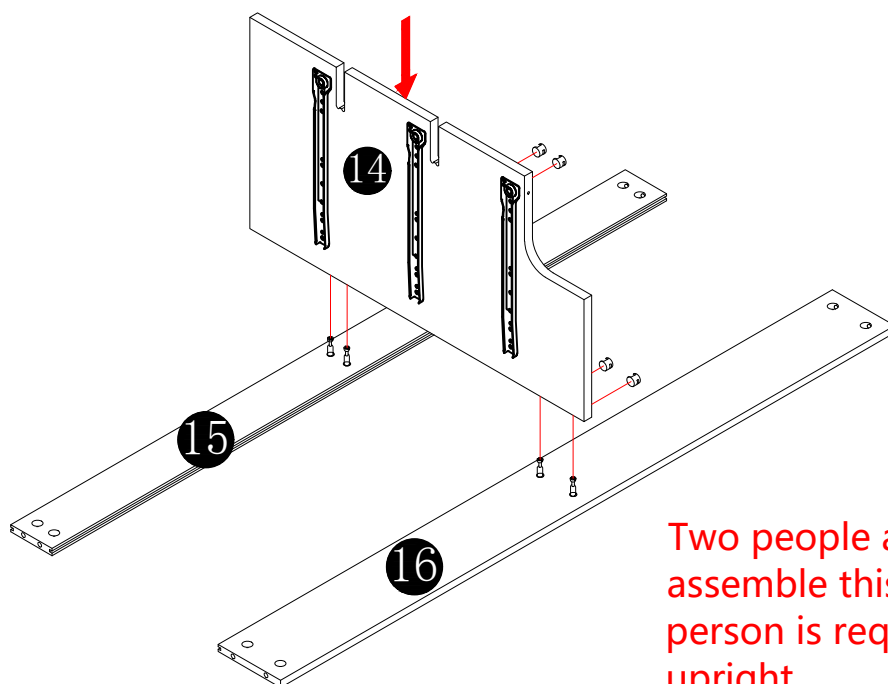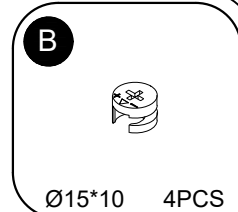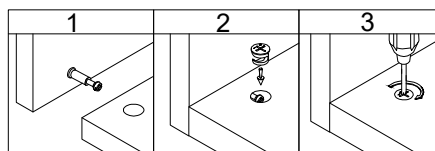

Two people are required to assemble this step, and one person is required to hold it upright


Step:15

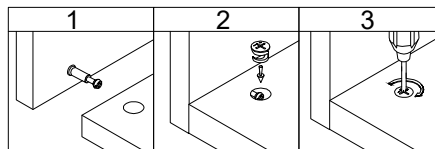

B




Ø15*10 4PCS

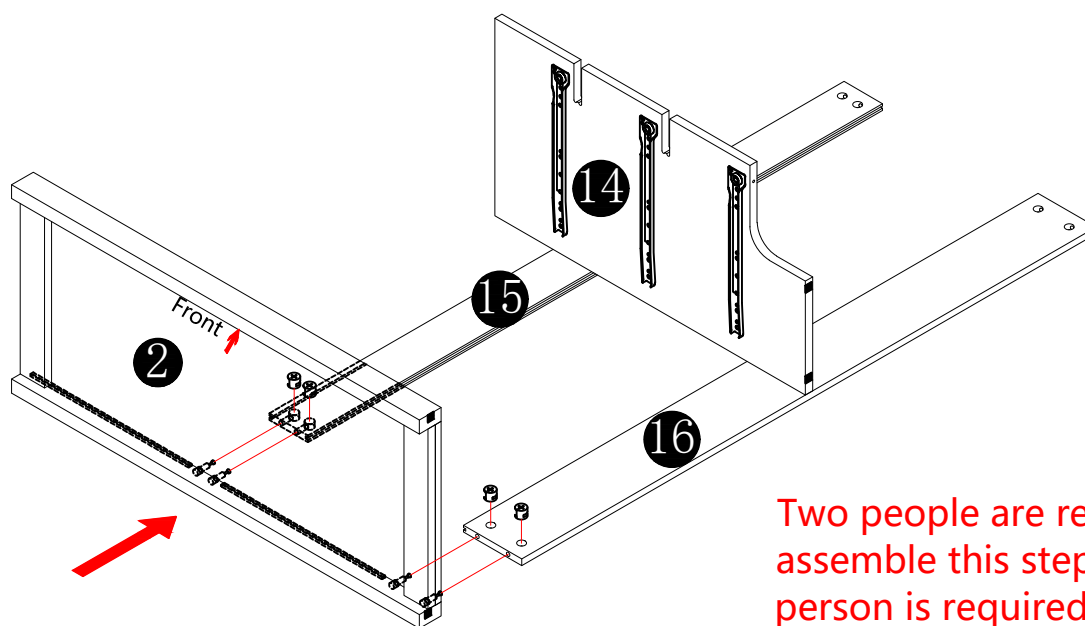

Two people are required to assemble this step, and one person is required to hold it upright


Step:16

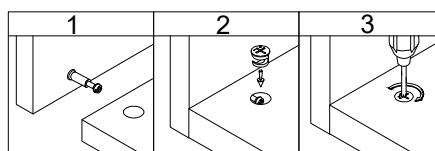





B



Ø15*10 2PCS



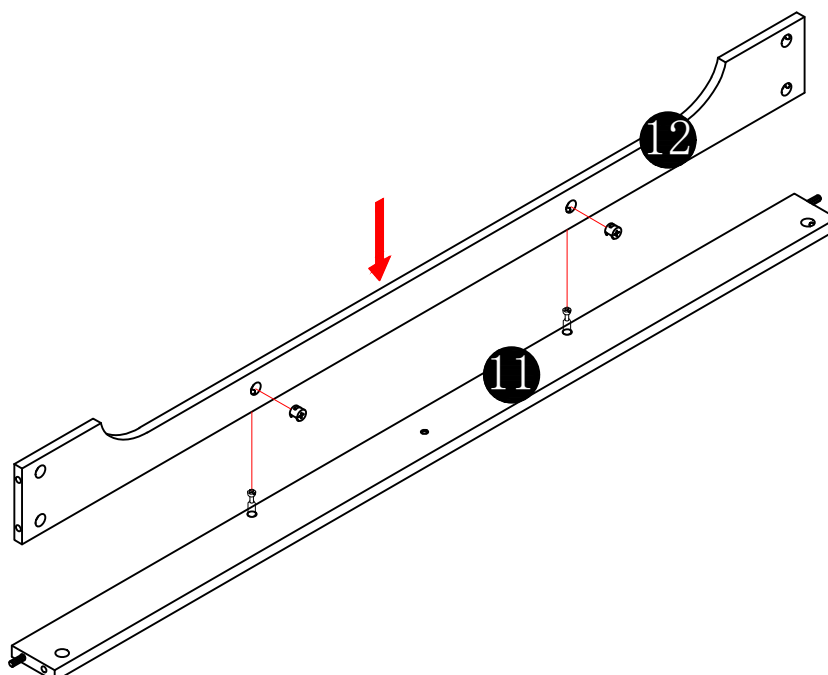


Step:17

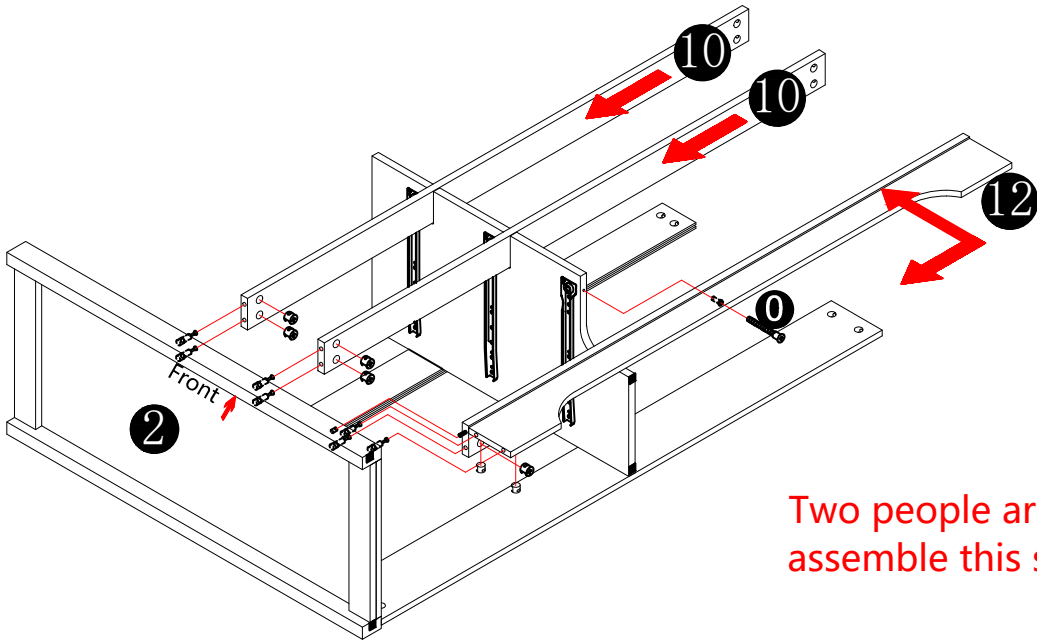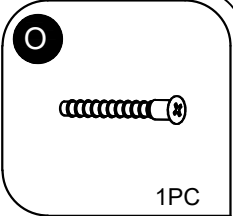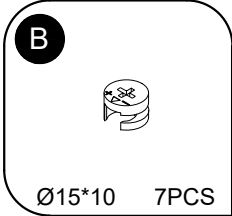
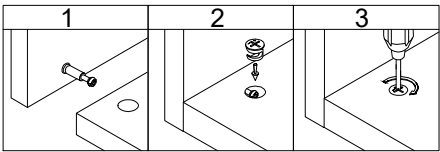


Two people are required to assemble this step





Step:18

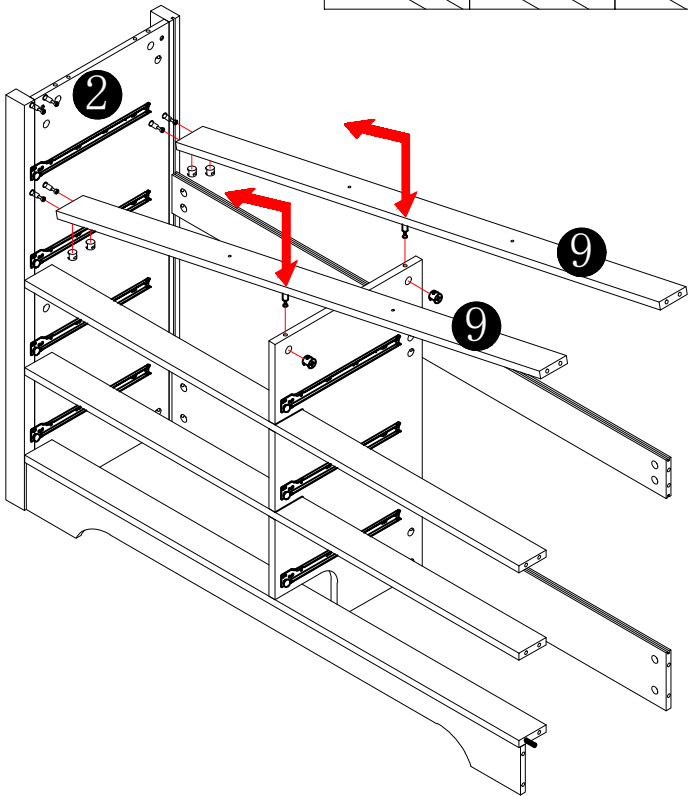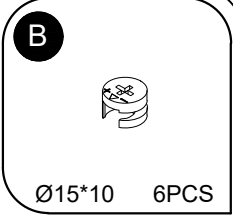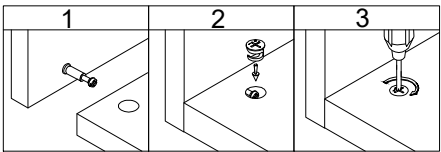


Step:19

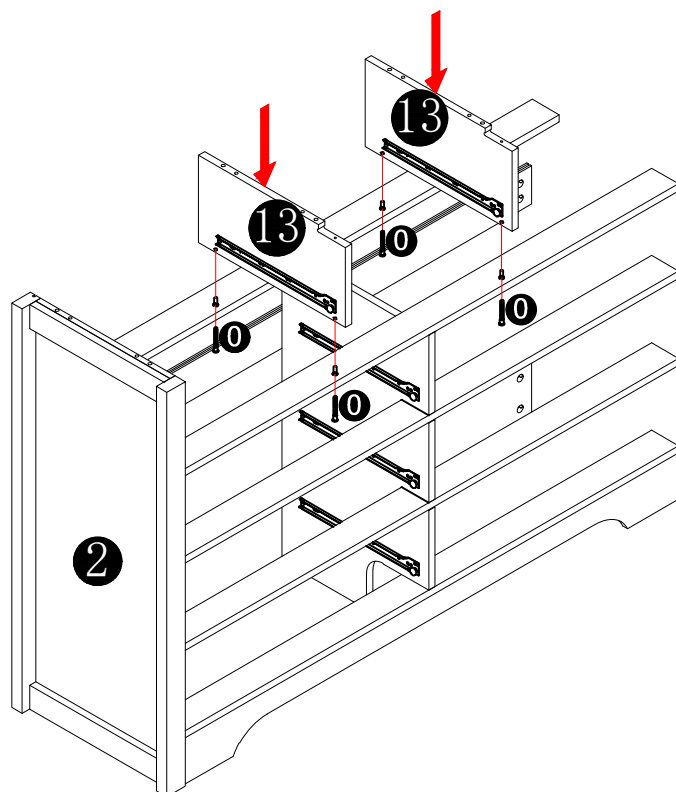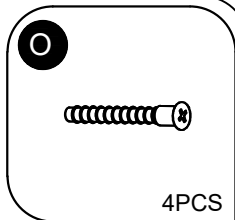


Step:20

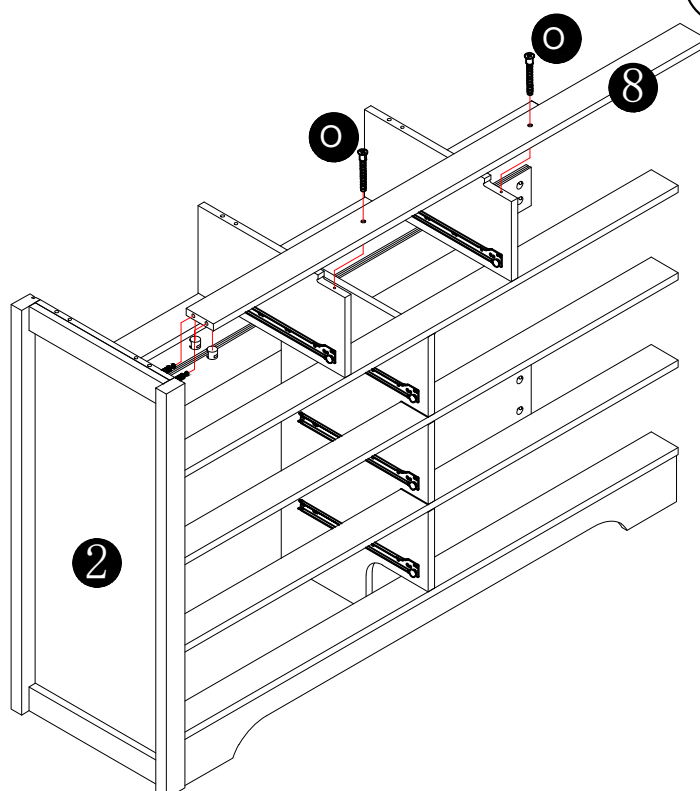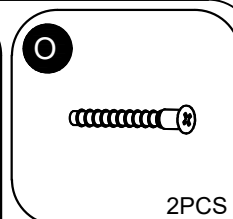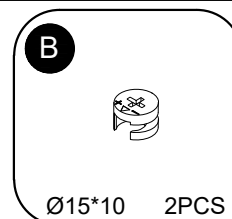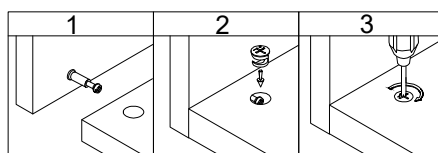

Step:21

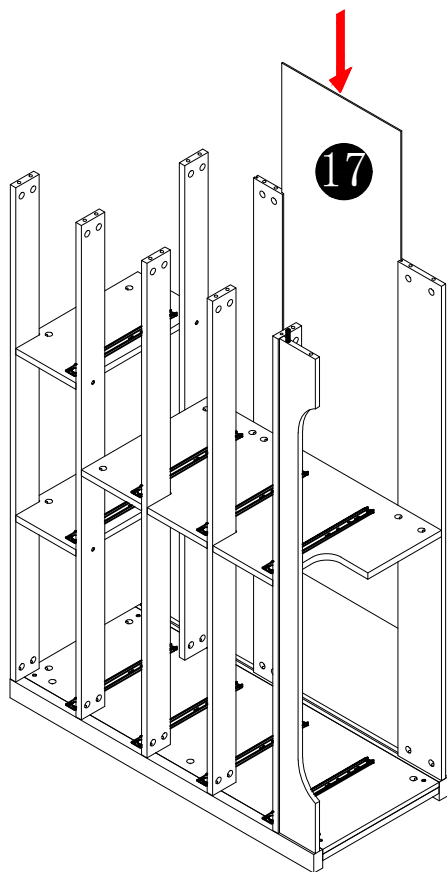


Step:22

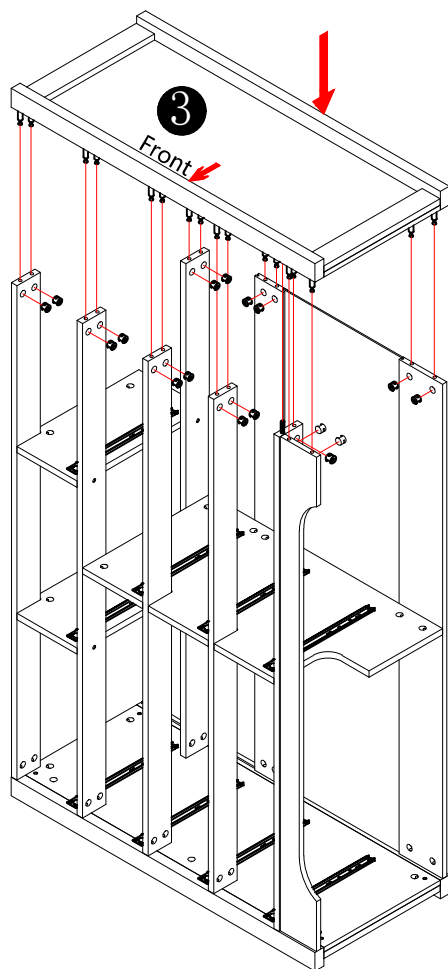



B





Ø15*10 17PCS

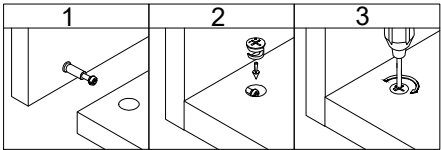




Step:23

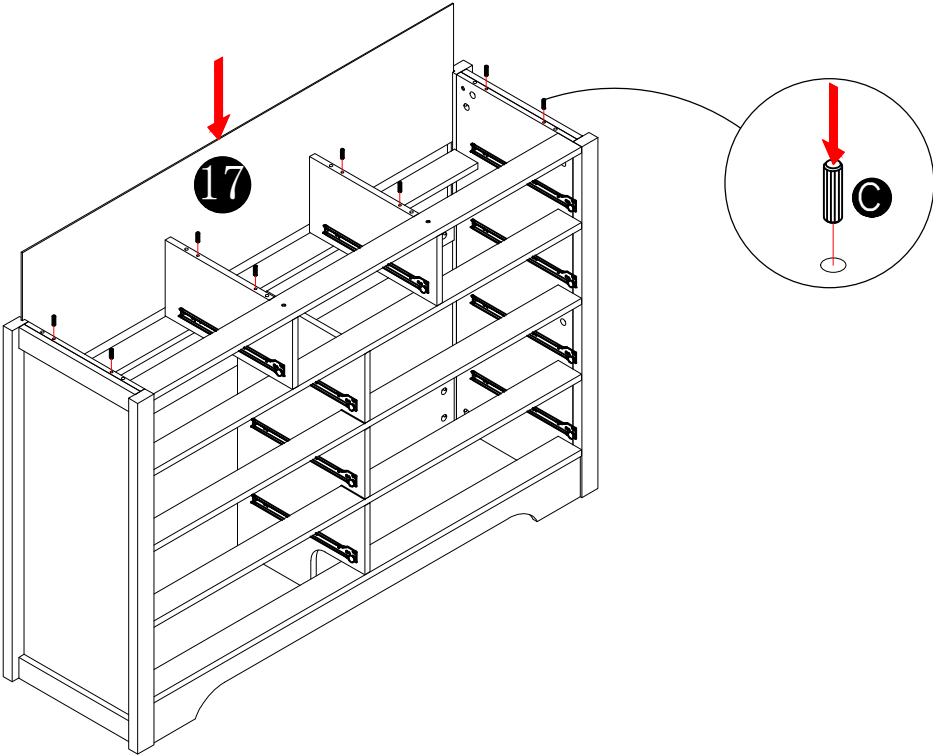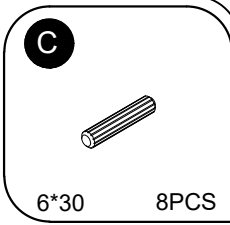




Step:24

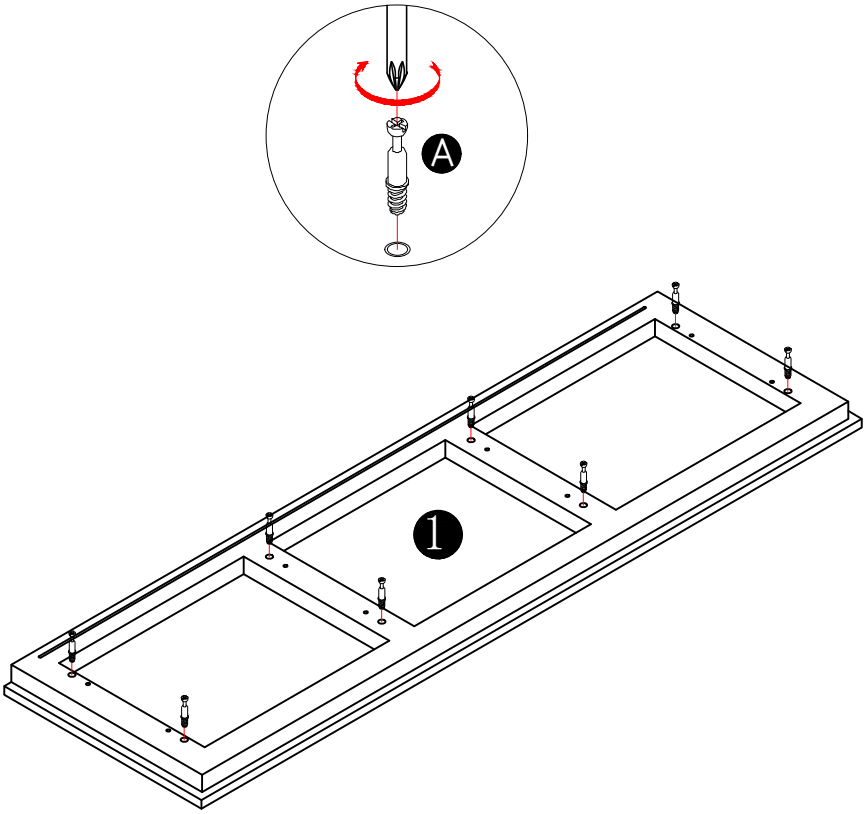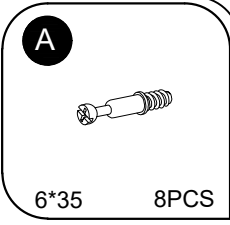

Step:25

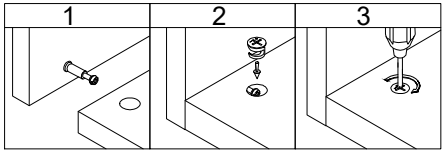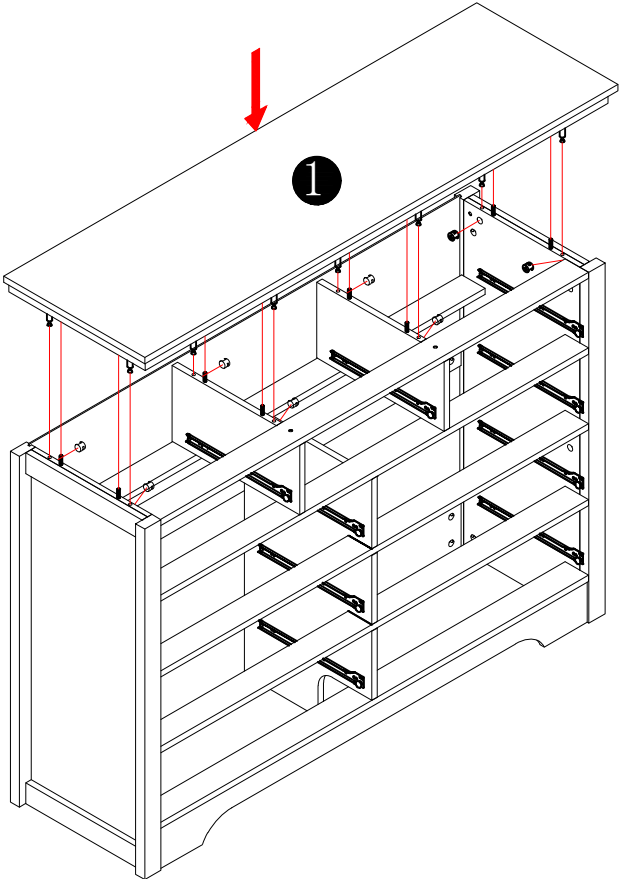
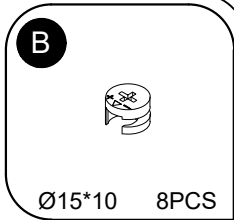


Step:26

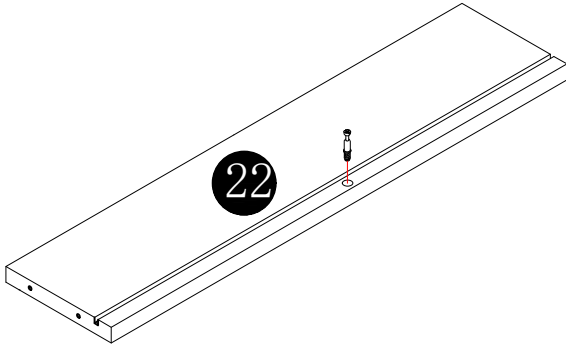
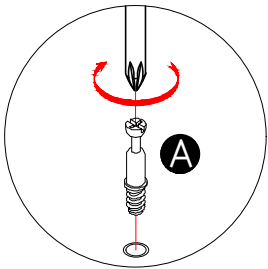
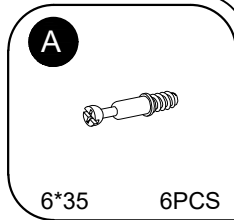


x6

Step:27

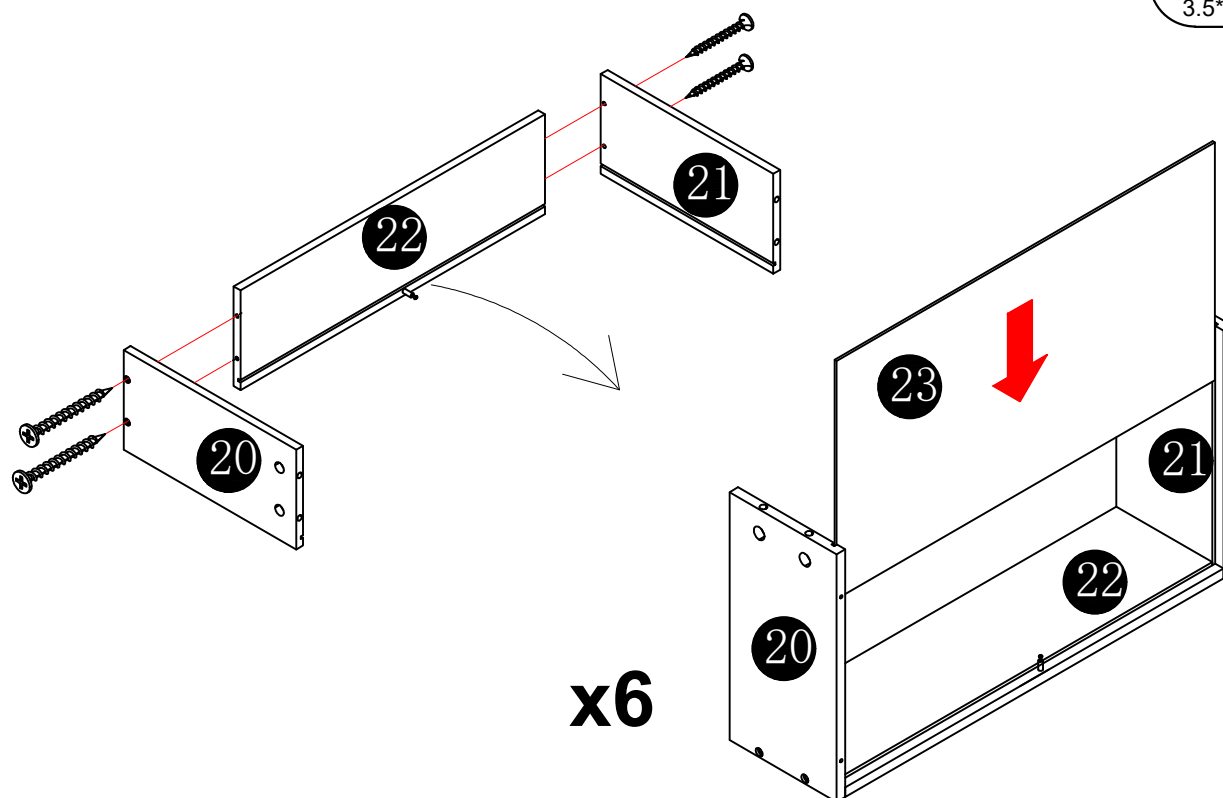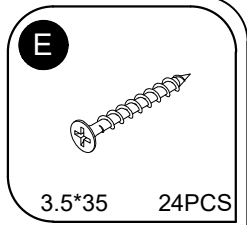


Step:28

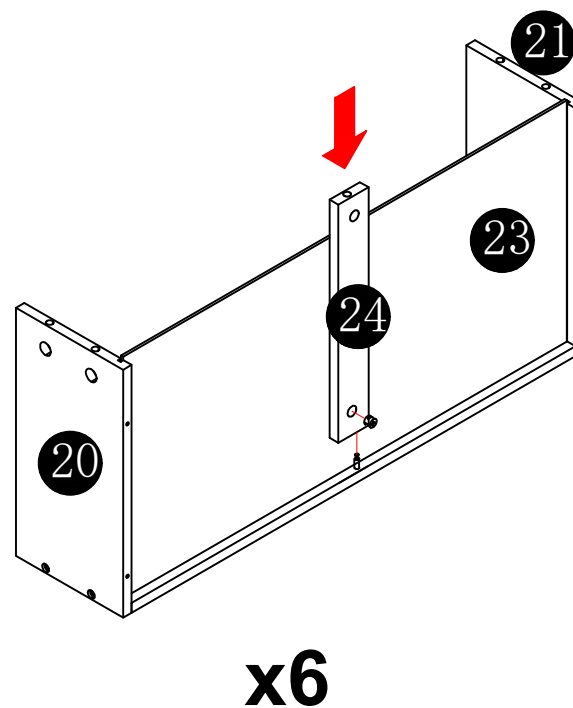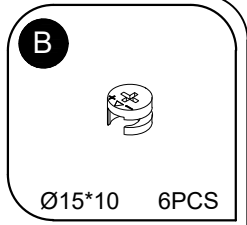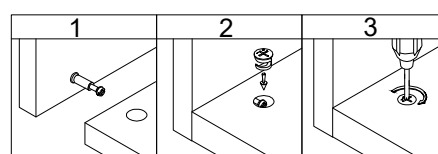

Step:29


A

6*35 30PCS

F

6PCS

G

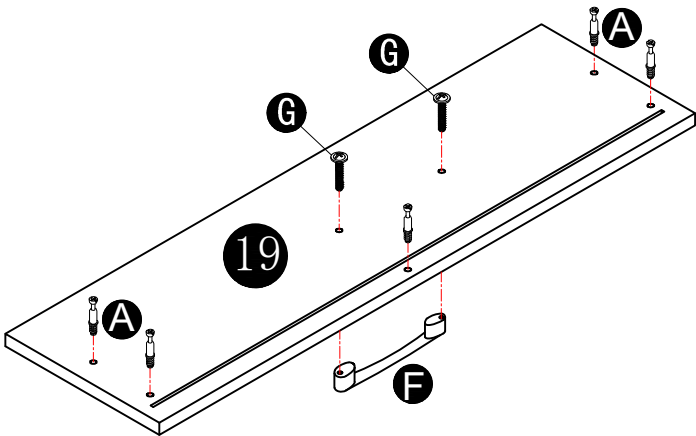12PCS





x6

Step:30



B

Ø15*10 30PCS



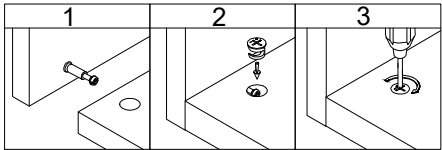
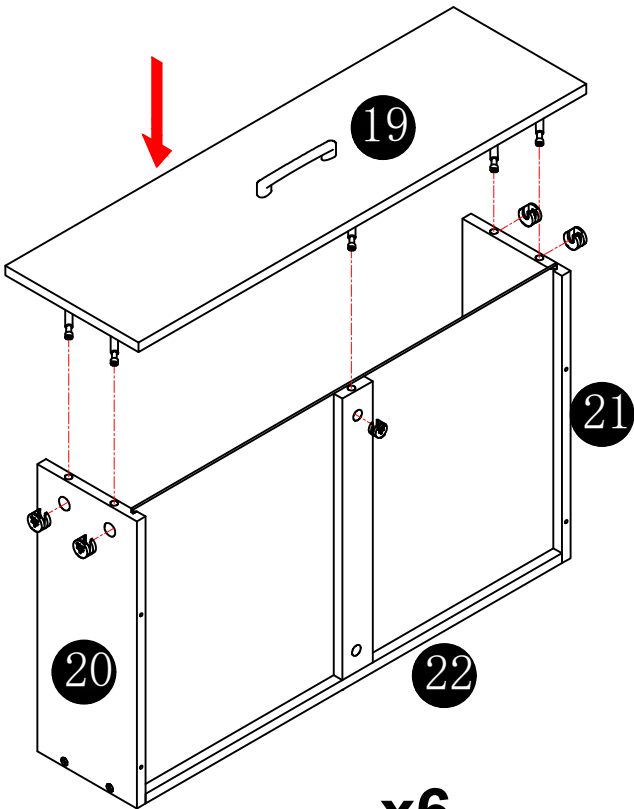


x6


Step:31

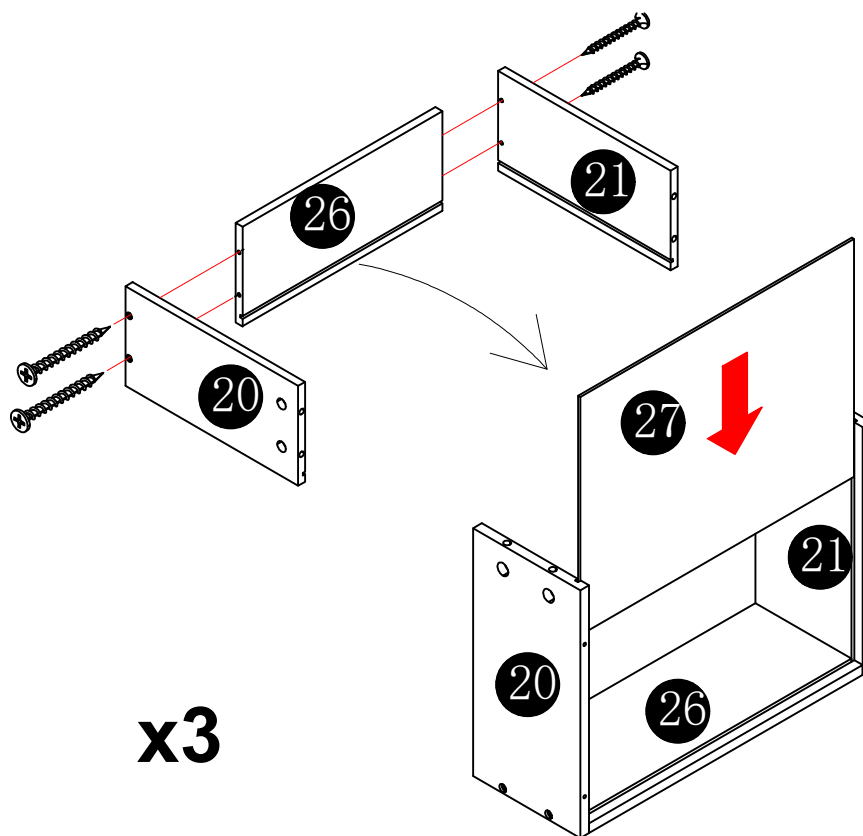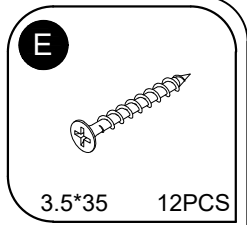

Step:32

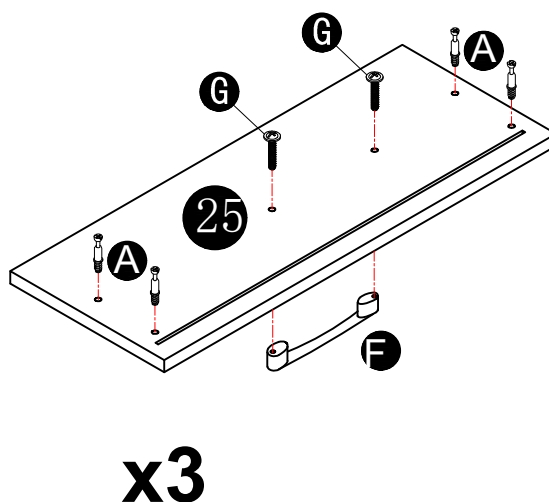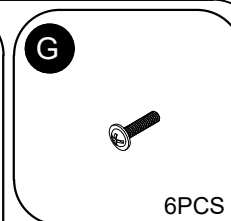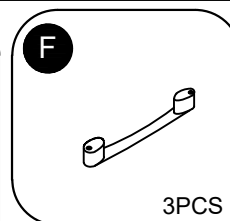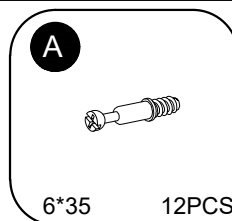


Step:33

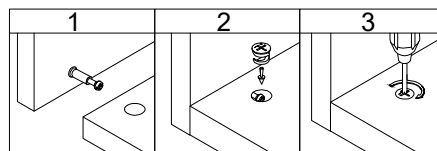

B




Ø15*10 12PCS

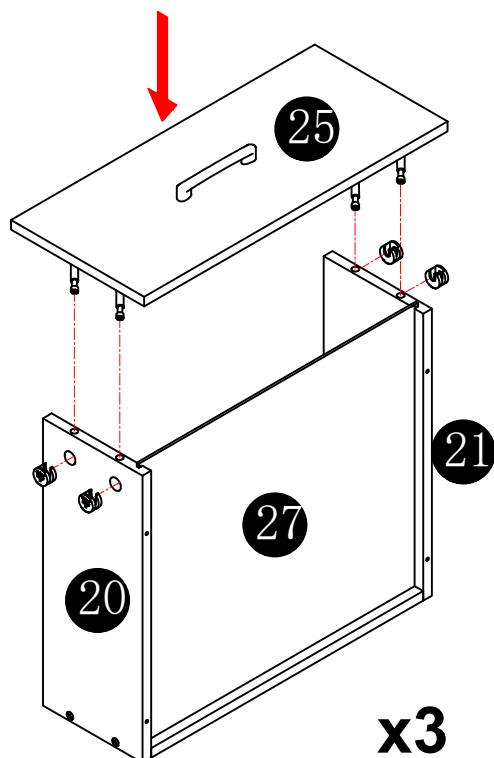

Step:34

DL



12" 6PCS

DR




12" 6PCS



D



3.5*12 24PCS




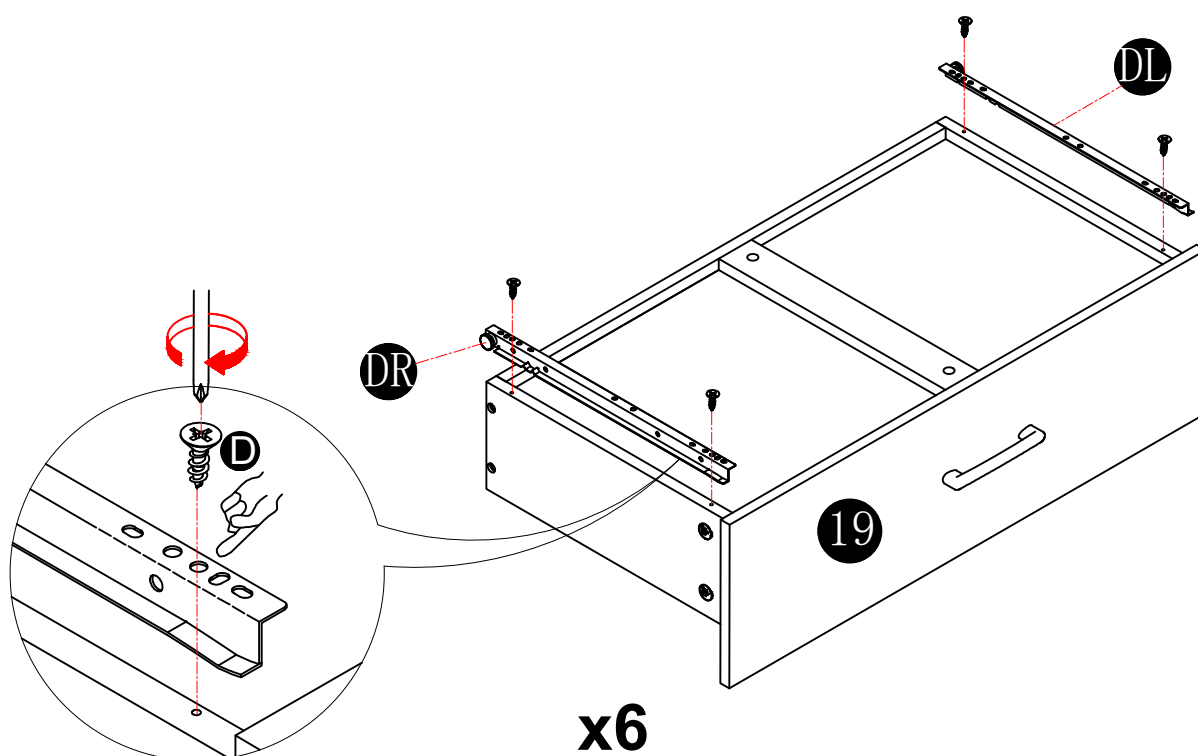


Step:35

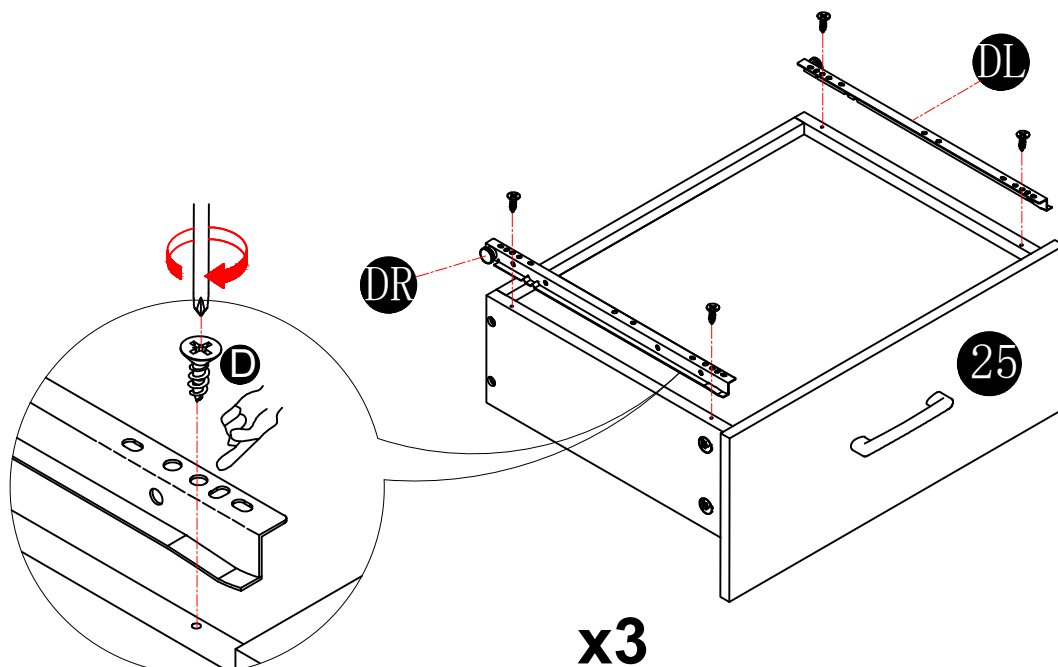
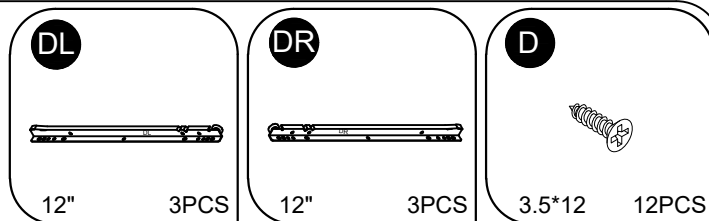


Step:36

x9

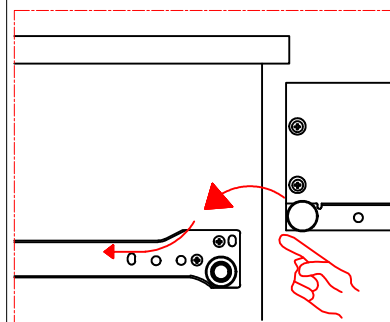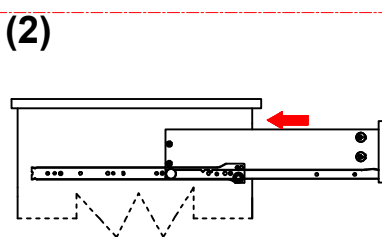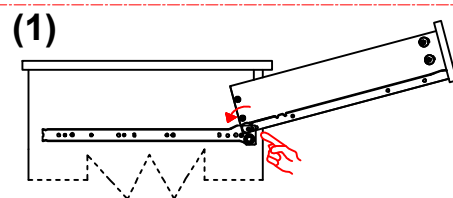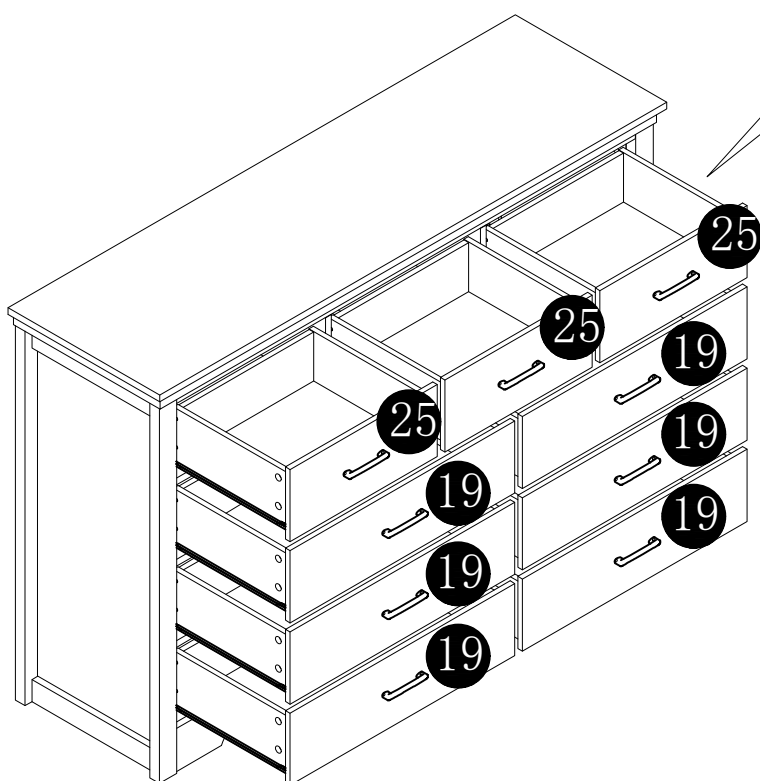

Step:37

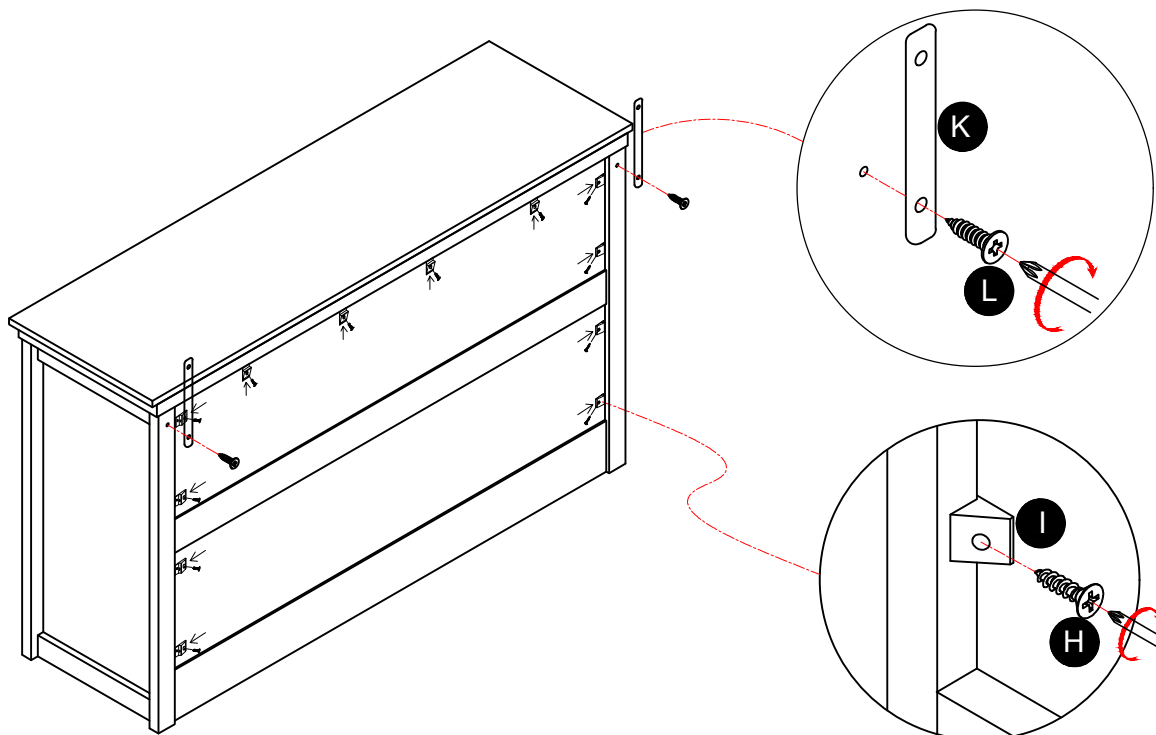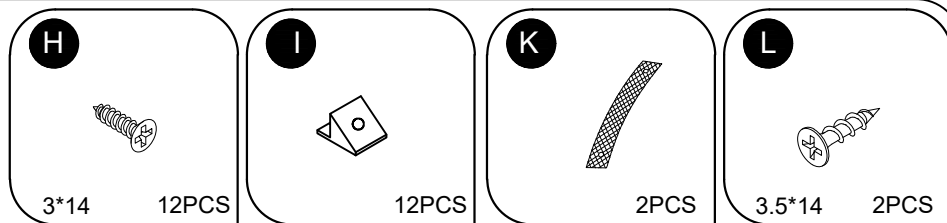

Step:38

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

