

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**215791Q(B1-B3)**  
***Queen Bed***

# ITEM: 215791Q(B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

25 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)

A HEADBOARD  
PANEL

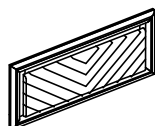

1PC

B LEFT HEADBOARD  
LEG (WITH "L" LABEL)




1PC

C RIGHT HEADBOARD  
LEG (WITH "R" LABEL)



1PC


D ADAPTER



1PC

### B2 (BOX 2)

E FOOTBOARD



1PC

F BED SLAT



4PCS

G BED SLAT SUPPORT  
WITH LEVELER



4PCS

H FOOTBOARD LEG



2PCS

### B3 (BOX 3)


I BED RAIL



2PCS

HB


215791Q(B1)  
FROM BOX 1  
HEADBOARD  
COMPLETE

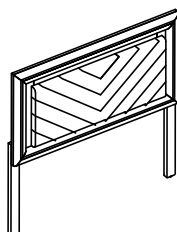

1PC

FB

215791Q(B2)  
FROM BOX 2  
FOOTBOARD  
COMPLETE

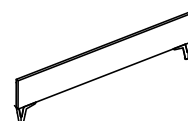

1PC

# ITEM: 215791Q(B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





### WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 215791Q(B1)

|   |                                                |                                                                                    |      |   |                                           |                                                                                      |       |
|---|------------------------------------------------|------------------------------------------------------------------------------------|------|---|-------------------------------------------|--------------------------------------------------------------------------------------|-------|
| 1 | <b>SMALL ALLEN WRENCH</b><br>(M4 x 65mm - BLK) |   | 1PC  | 3 | <b>LOCK WASHER</b><br>(1/4" - BLK)        |   | 6 PCS |
| 2 | <b>BOLT</b><br>(M6 x 30mm - BLK)               |  | 6PCS | 4 | <b>FLAT WASHER</b><br>(1/4" x 13mm - BLK) |  | 6 PCS |

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 215791Q(B2)

|   |                                              |                                                                                     |      |   |                                             |                                                                                       |      |
|---|----------------------------------------------|-------------------------------------------------------------------------------------|------|---|---------------------------------------------|---------------------------------------------------------------------------------------|------|
| 5 | <b>BIG ALLEN WRENCH</b><br>(M5 x 65mm - BLK) |  | 1PC  | 8 | <b>FLAT WASHER</b><br>(5/16" x 22mm - RBW)  |  | 4PCS |
| 6 | <b>BOLT</b><br>(M8 x 16mm - RBW)             |  | 4PCS | 9 | <b>FLAT HEAD SCREW</b><br>(M4 x 32mm - RBW) |  | 8PCS |
| 7 | <b>LOCK WASHER</b><br>(5/16" - RBW)          |  | 4PCS |   |                                             |                                                                                       |      |

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **215791Q(B1-B3)**


## ASSEMBLY INSTRUCTIONS



### STEP 1

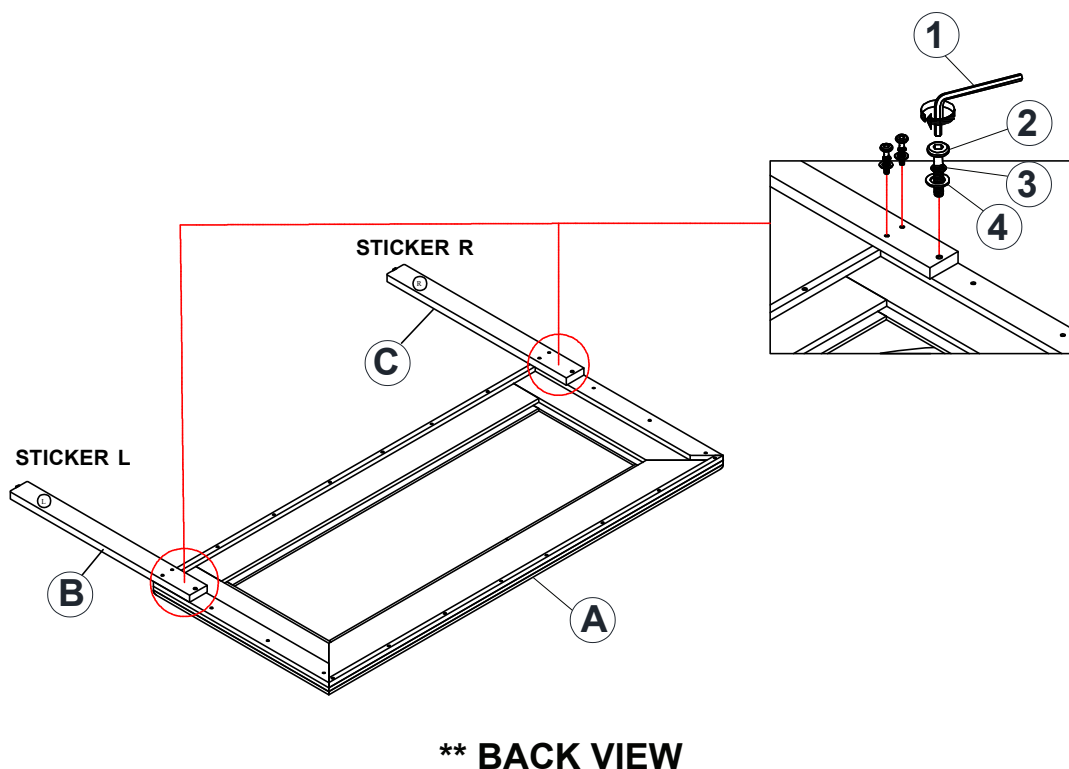


### STEP 2

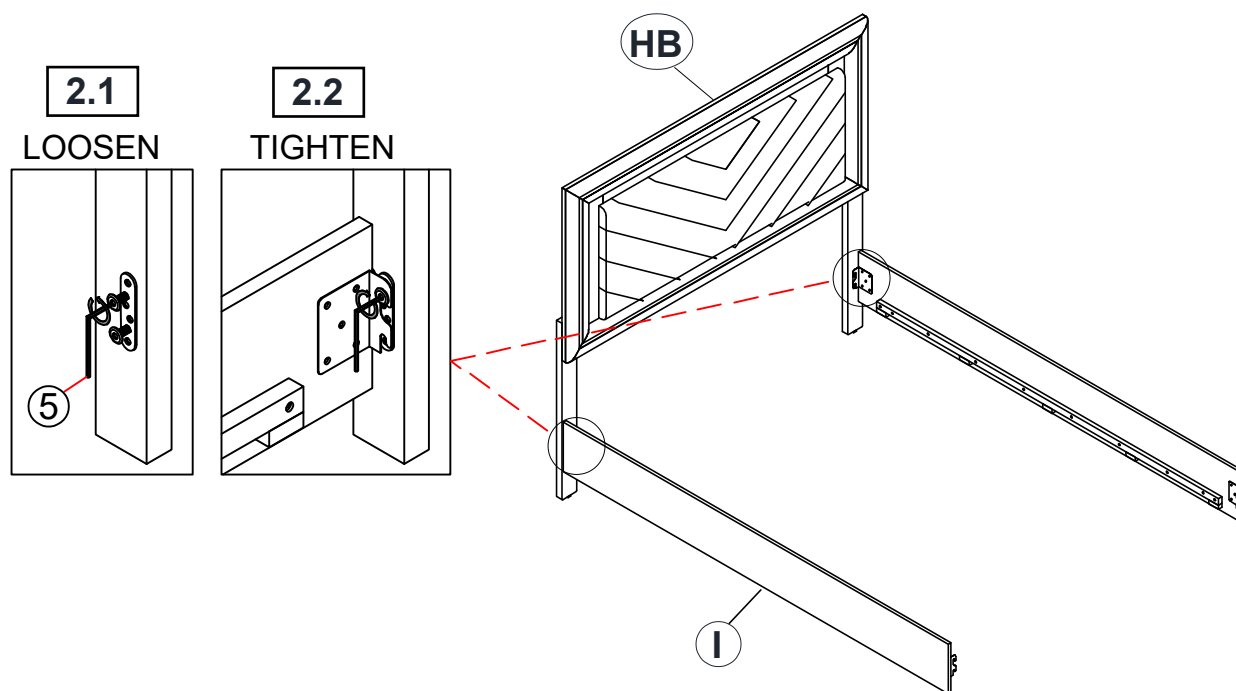


# ITEM: 215791Q(B1-B3)

## ASSEMBLY INSTRUCTIONS

### STEP 3

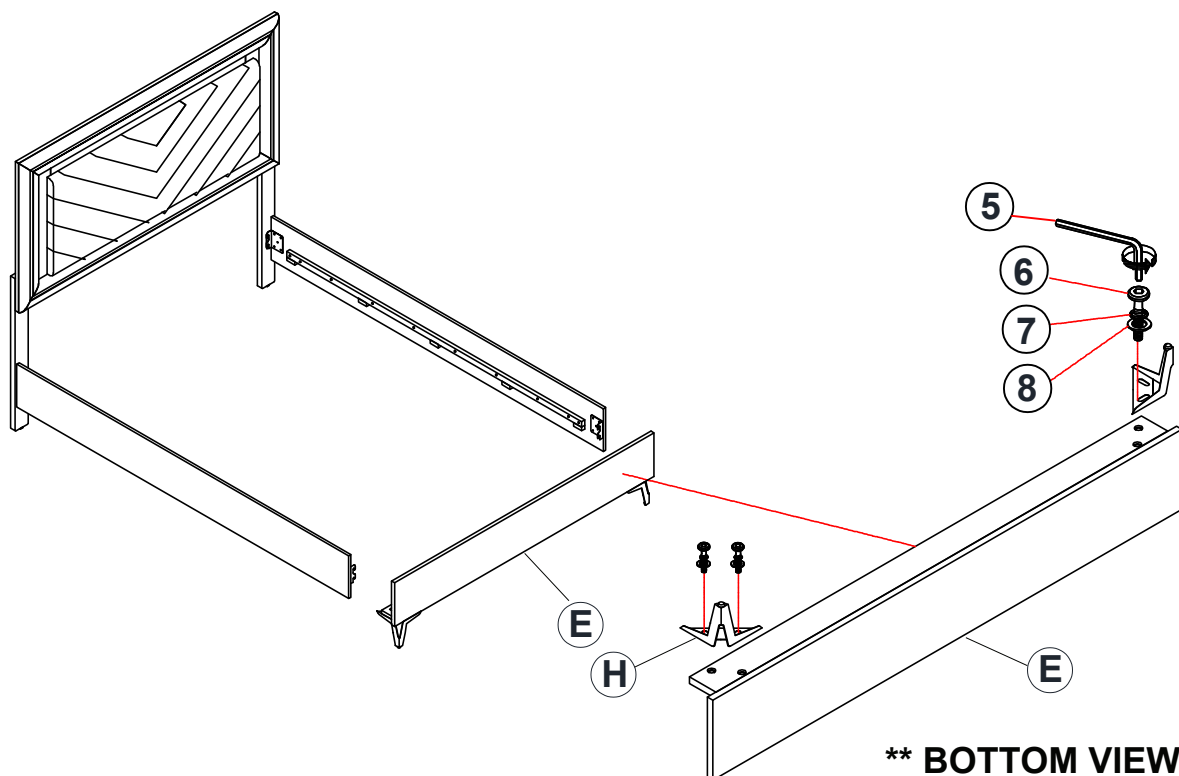

### STEP 4

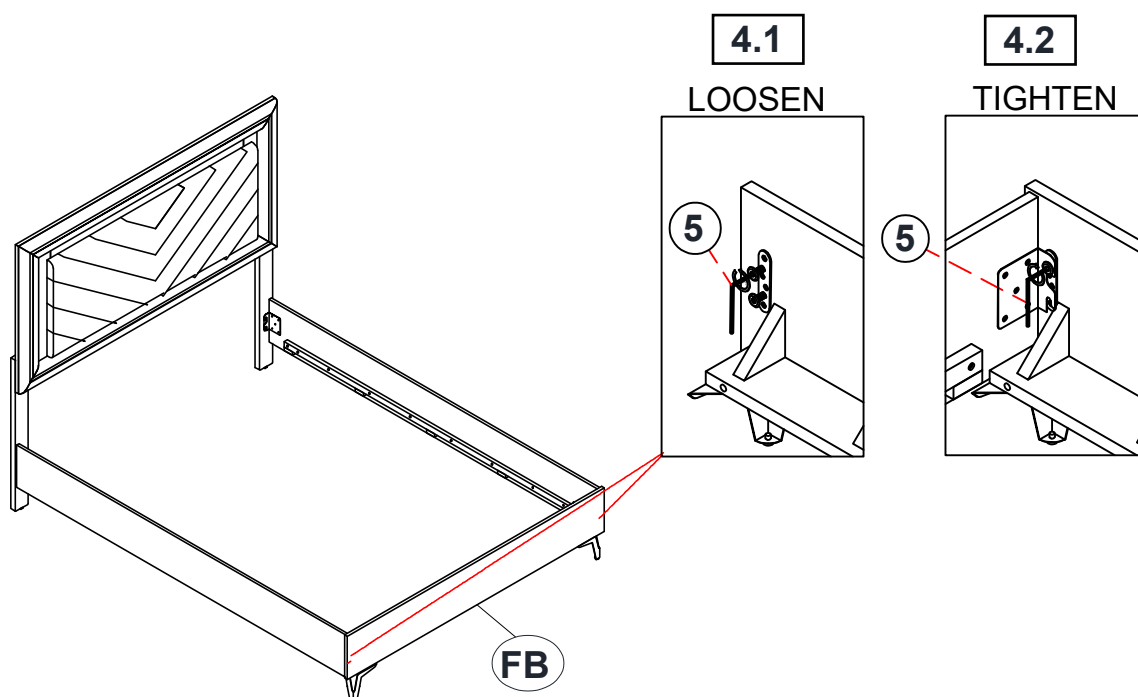


# ITEM: 215791Q(B1-B3)


## ASSEMBLY INSTRUCTIONS



### STEP 5

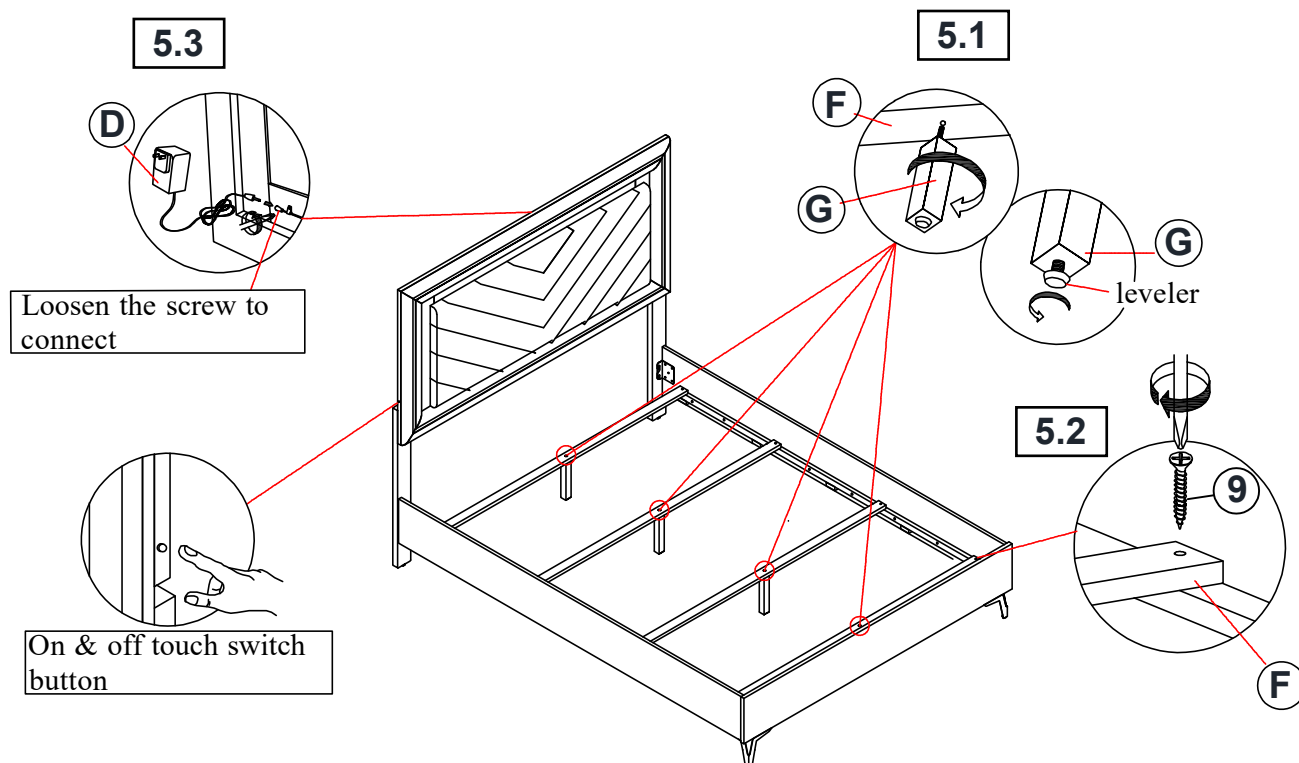


### STEP 6 COMPLETE

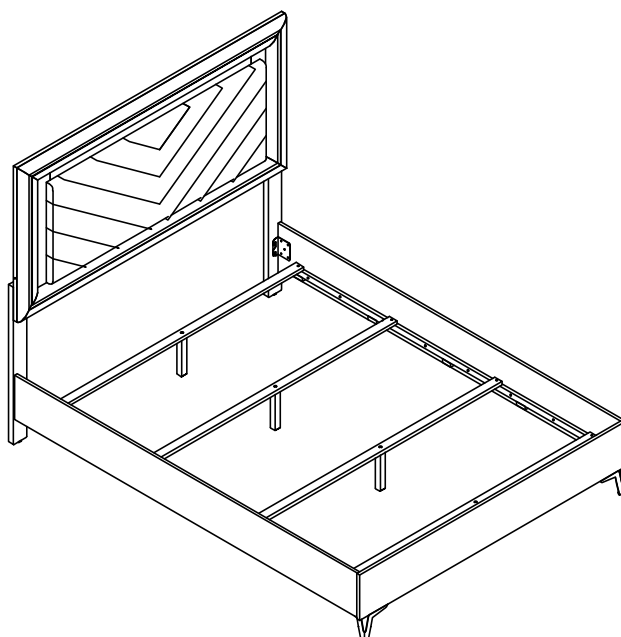

ITEM: **215791Q(B1-B3)**



Inner size: 60.50"W x 80.50"D

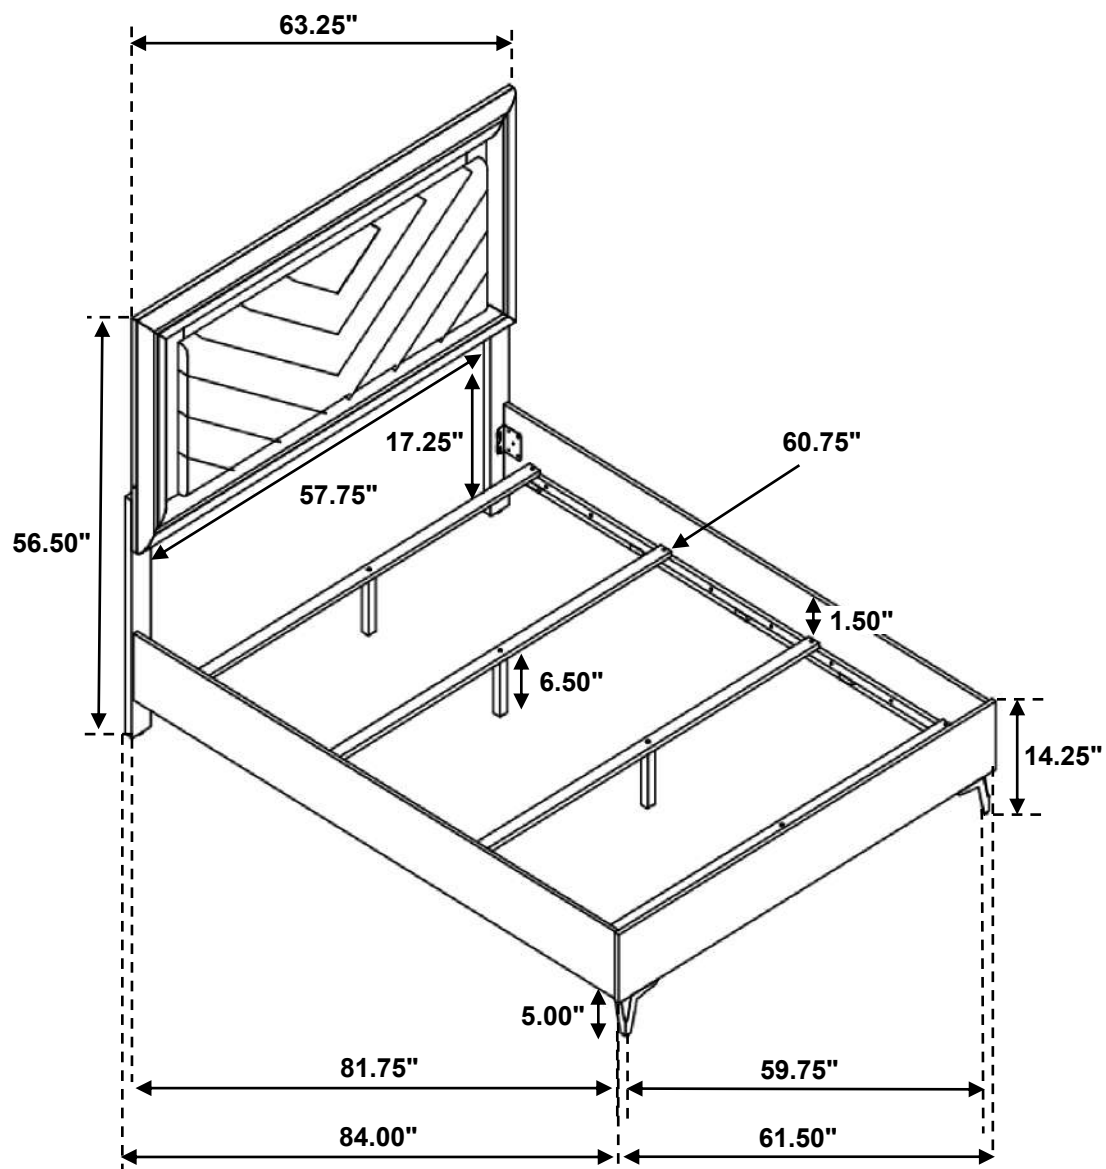

Note: Dimension tolerance  $\pm 5\%$

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**215792**  
***Nightstand***



ITEM: **215792**

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A NIGHTSTAND

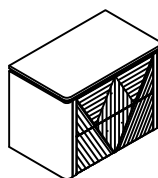

1PC

B LEG



4PCS


## HARDWARE IDENTIFICATION

1 ALLEN WRENCH  
(M5 x 65mm - BLK)



1PC

2 BOLT  
(M8 x 16mm - RBW)



8PCS

3 LOCK WASHER  
(5/16" - RBW)



8PCS

4 FLAT WASHER  
(5/16" x 22mm - RBW)



8PCS


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **215792**

## ASSEMBLY INSTRUCTIONS

### STEP 1

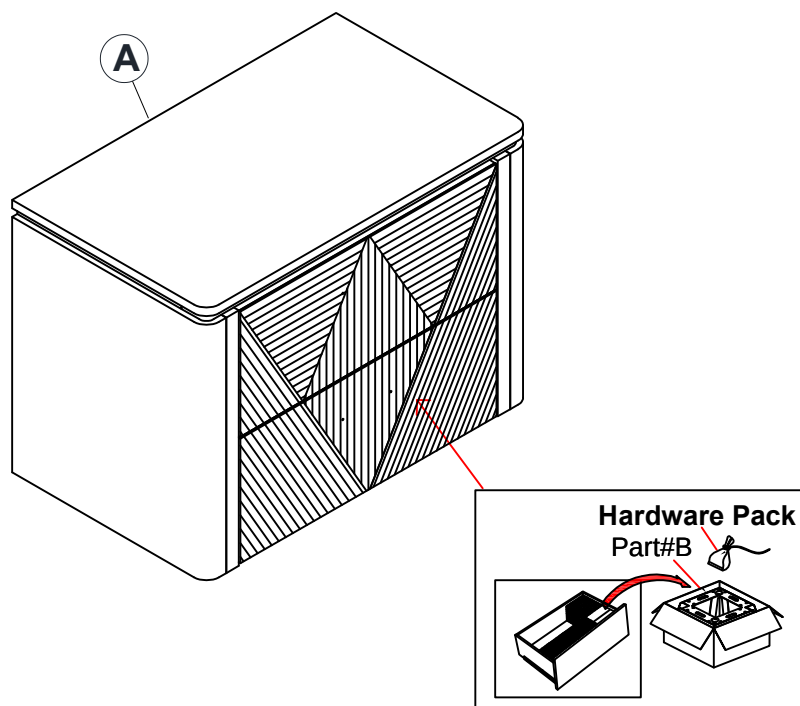

### STEP 2

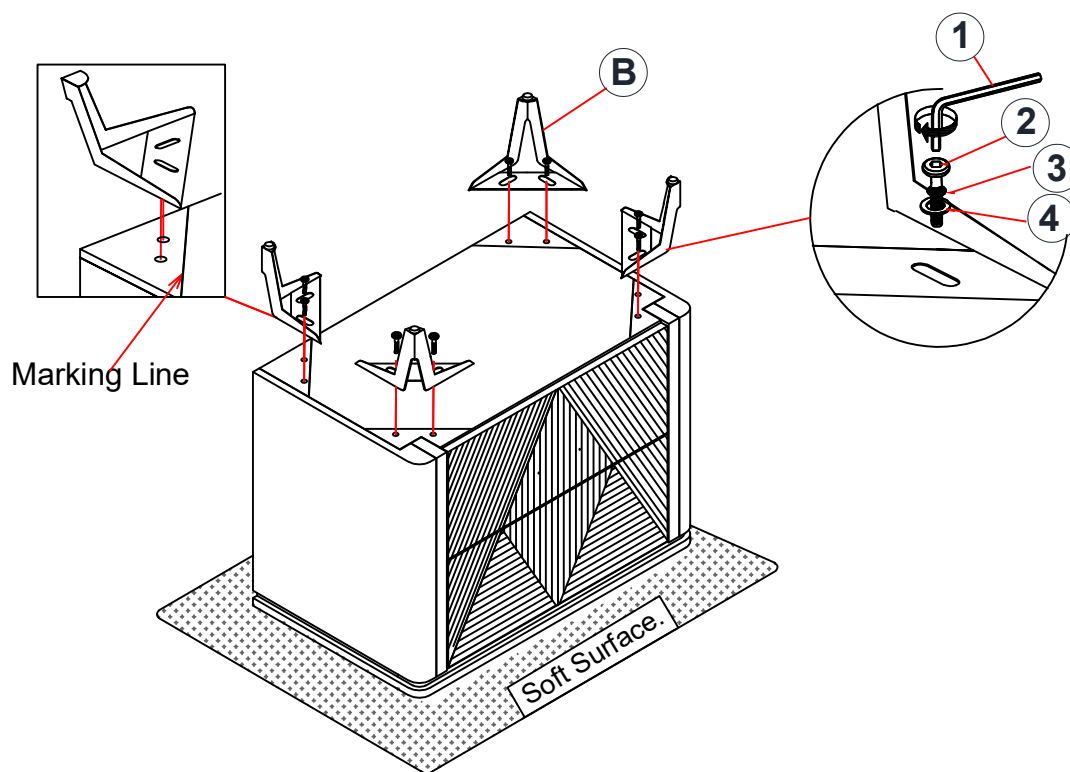


**\*BOTTOM VIEW**



ITEM: **215792**

## ASSEMBLY INSTRUCTIONS

### STEP 3

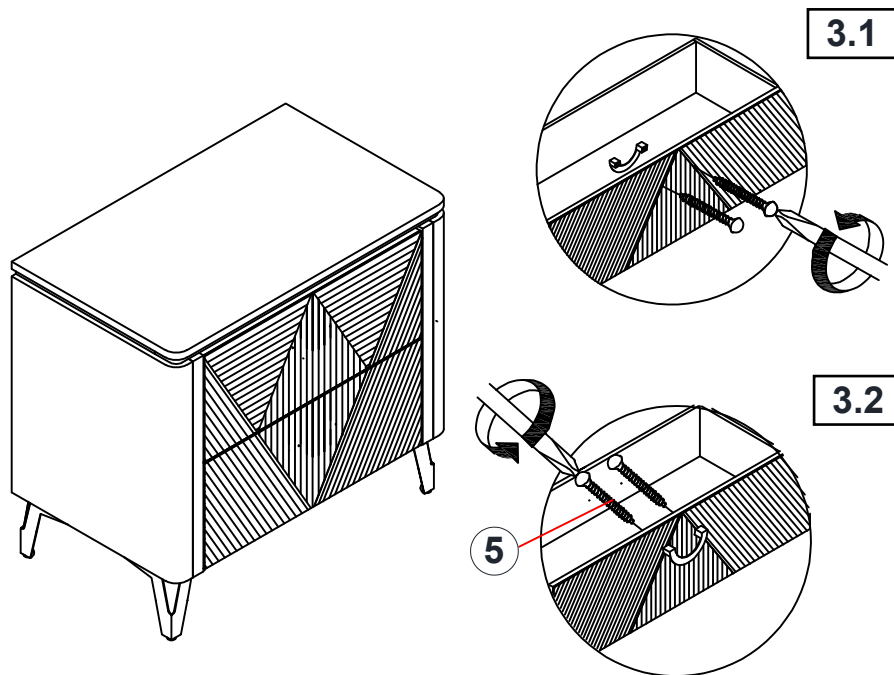


### STEP 4 **COMPLETE**

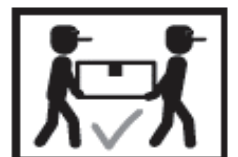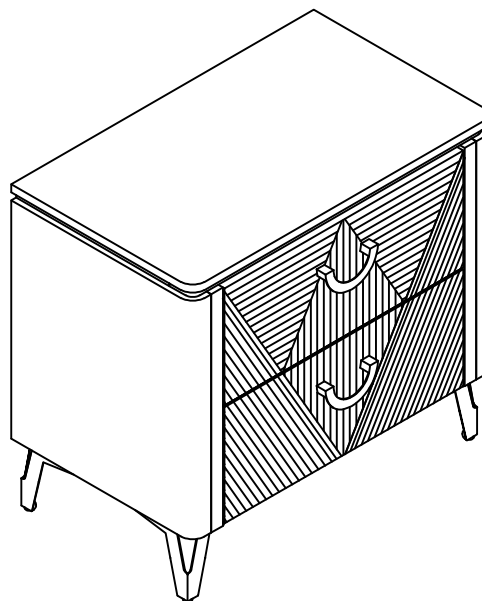

ITEM: **215792**



Inner Size of Drawer : 17.00"W X 13.25"D X 7.50"H X 0.25"T

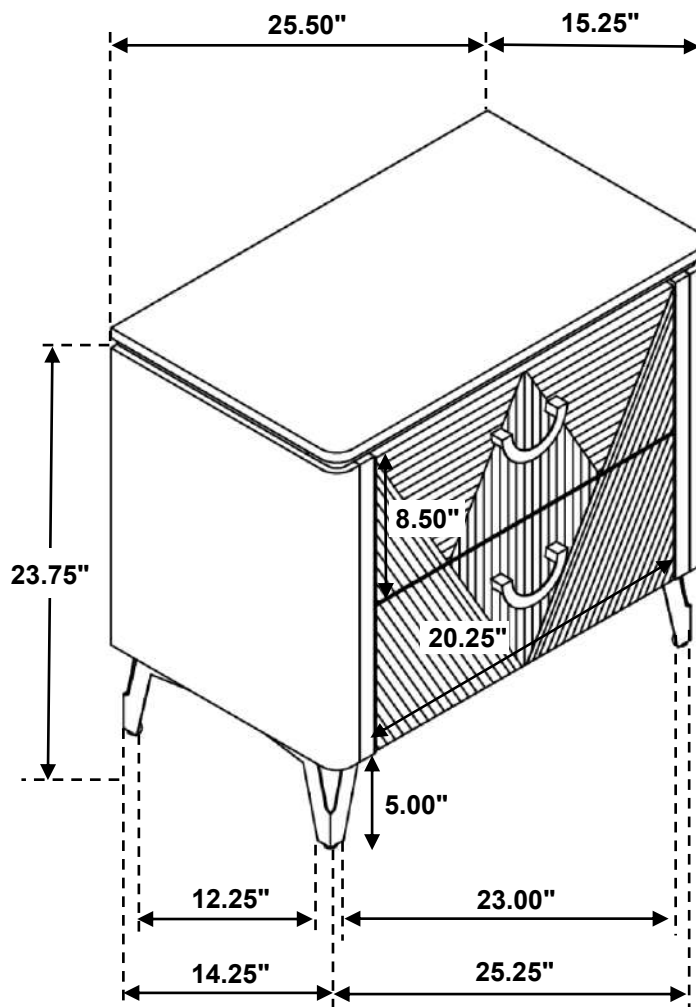

Note: Dimension tolerance  $\pm 5\%$

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**215793**  
**Dresser**

ITEM: **215793**

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A DRESSER

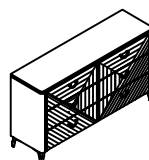

1PC

B LEG



4PCS

C CENTER SUPPORT LEG  
WITH LEVELER



1PC


## HARDWARE IDENTIFICATION

1 ALLEN WRENCH  
(M5 x 65mm - BLK)



1PC

2 BOLT  
(M8 x 16mm - RBW)



8PCS

3 LOCK WASHER  
(5/16" - RBW)



8PCS

4 FLAT WASHER  
(5/16" x 22mm - RBW)



8PCS

5 FLAT HEAD SCREW  
(M4 x 32mm RBW )



4PCS

6 WOOD DOWEL  
(Ø6 x 30mm )





2PCS


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **215793**  
**ASSEMBLY INSTRUCTIONS**  
**STEP 1**

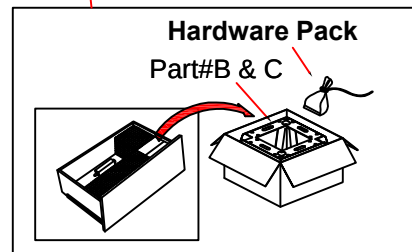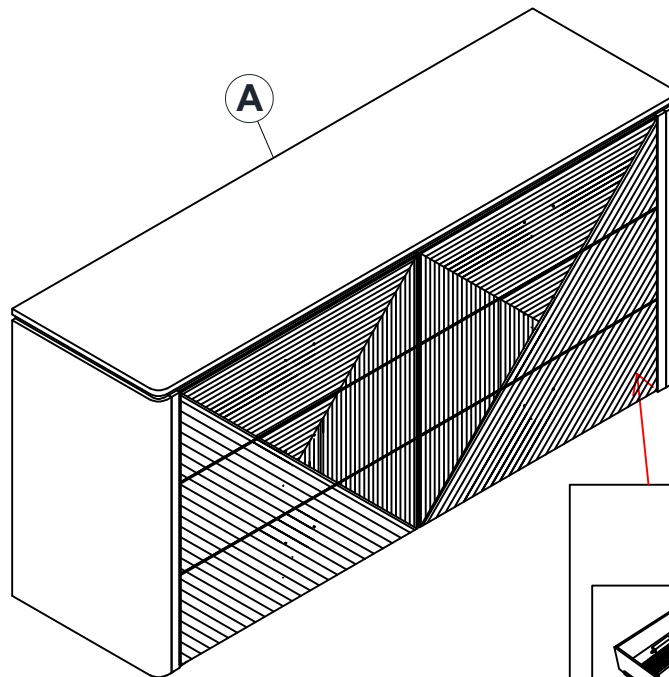


**STEP 2**

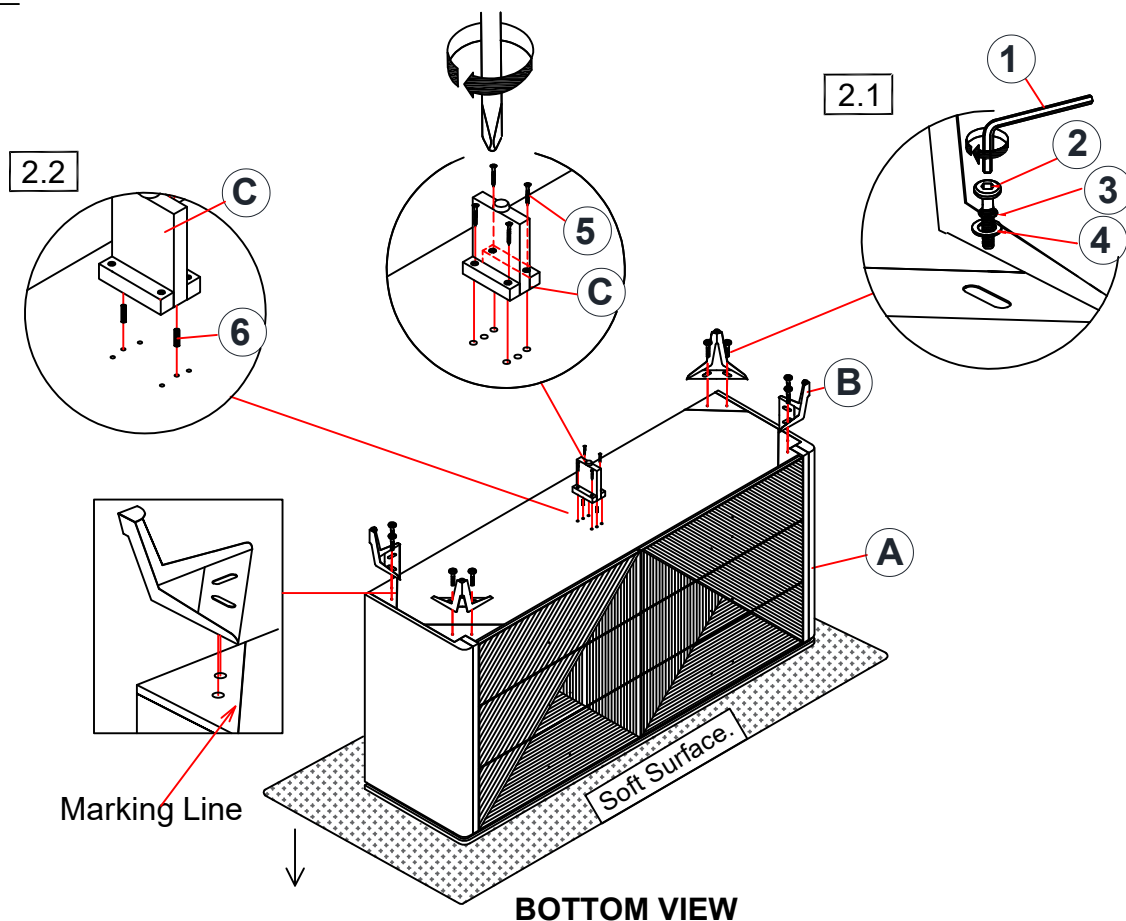


ITEM: **215793**

## ASSEMBLY INSTRUCTIONS


### STEP 3

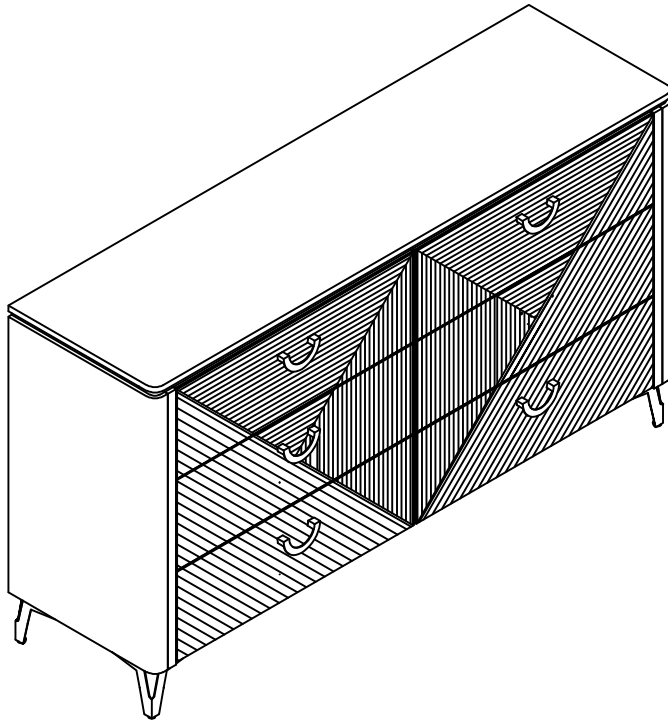


3.1

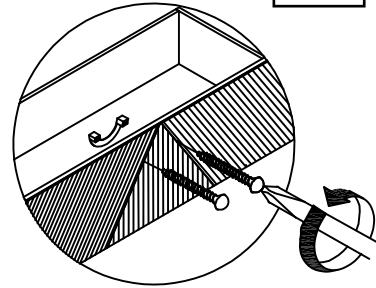

3.2

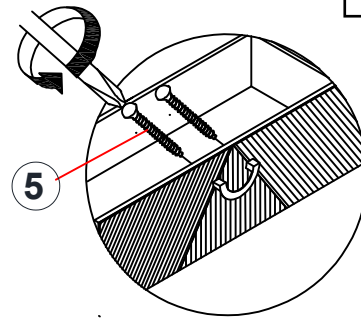

### **STEP 4** **COMPLETE**

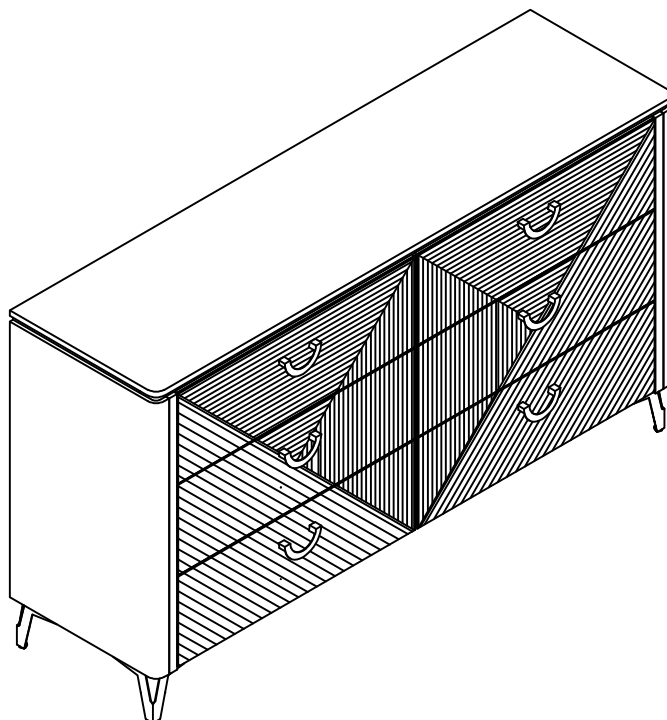



## ANTI-TIPPING INSTALLATION INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.




This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

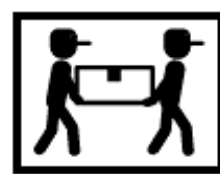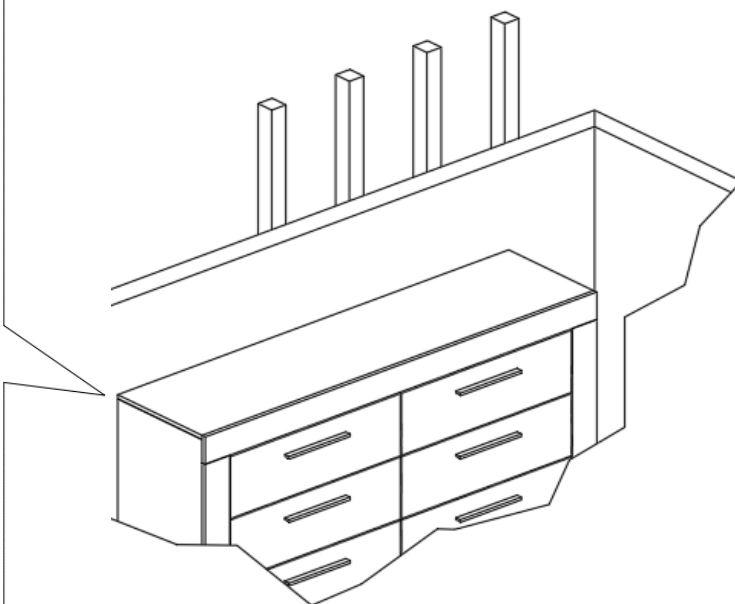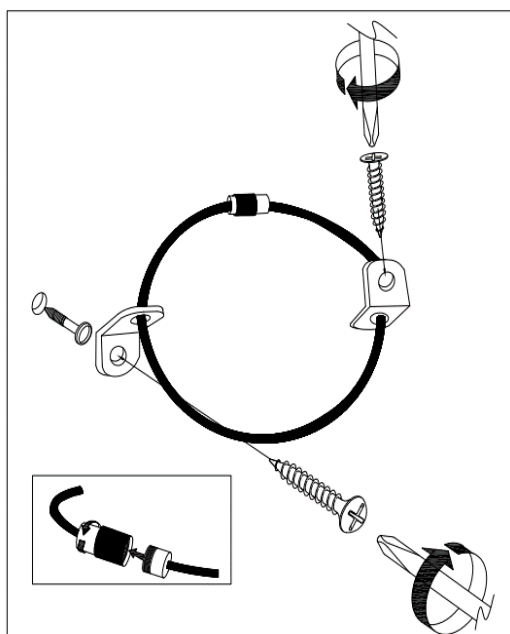

ITEM: **215793**




**Inner Size of Drawer : 27.25"W X 12.75"D X 5.25"H X 0.25"T**

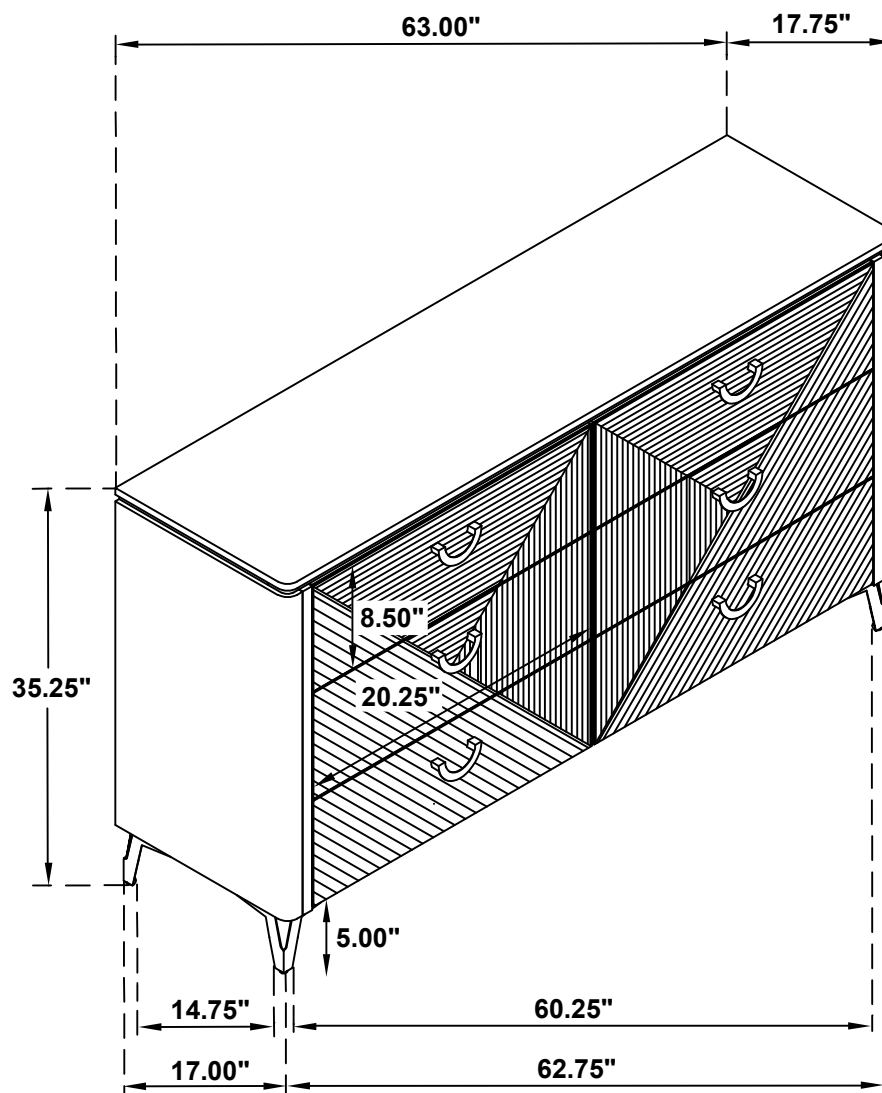

**Note : Dimension tolerance  $\pm 5\%$**

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

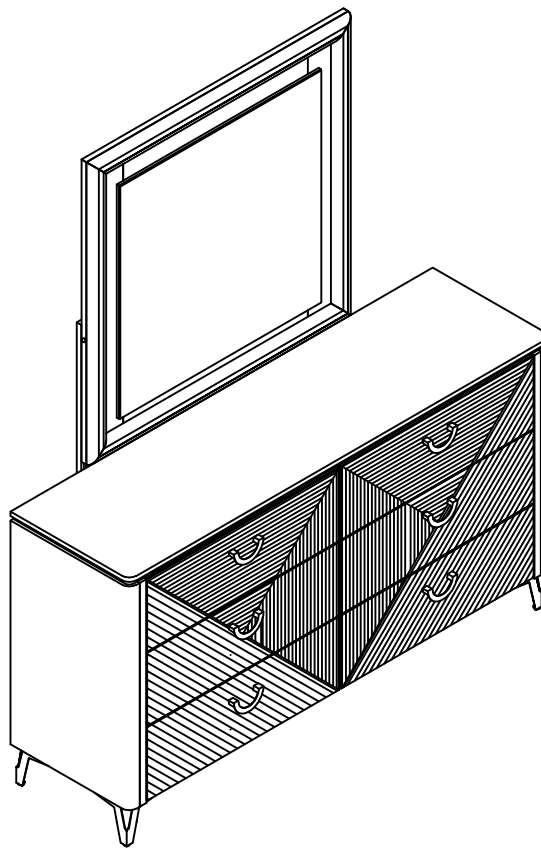

*Fine Furniture for every stage of life*

**215794**  
**Mirror**

ITEM: **215794**

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!




1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION
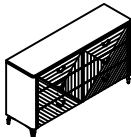
|   |                                        |                                                                                      |      |
|---|----------------------------------------|--------------------------------------------------------------------------------------|------|
| A | MIRROR                                 |     | 1PC  |
| B | MIRROR SUPPORT<br>(PACKED WITH MIRROR) |    | 2PCS |
| C | ADAPTER                                |  | 1PC  |
| D | DRESSER<br>(FROM BOX ITEM 215793)      |  | 1PC  |


## HARDWARE IDENTIFICATION

|   |                                    |                                                                                      |      |
|---|------------------------------------|--------------------------------------------------------------------------------------|------|
| 1 | ALLEN WRENCH<br>(M4 x 65mm - BLK)  |  | 1PC  |
| 2 | BOLT<br>(M6 x 35mm - BLK)          |   | 8PCS |
| 3 | LOCK WASHER<br>(1/4" - BLK)        |   | 8PCS |
| 4 | FLAT WASHER<br>(1/4" x 19mm - BLK) |   | 8PCS |


#### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **215794**  
**ASSEMBLY INSTRUCTIONS**  
**STEP 1**

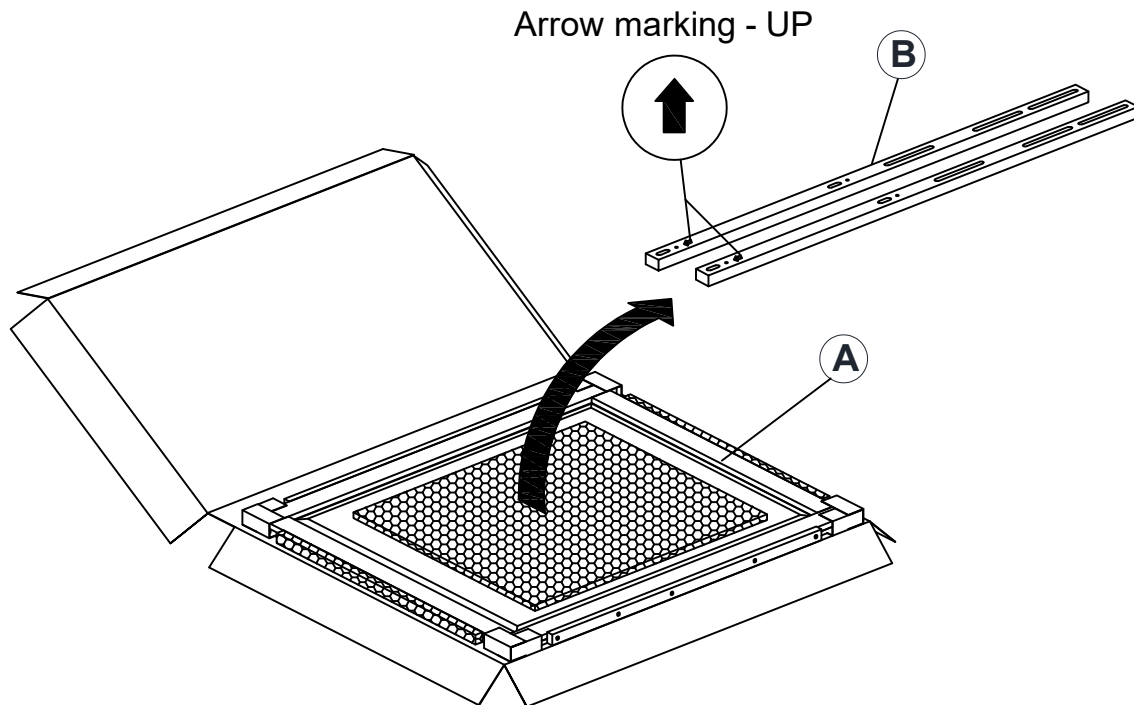


**STEP 2**


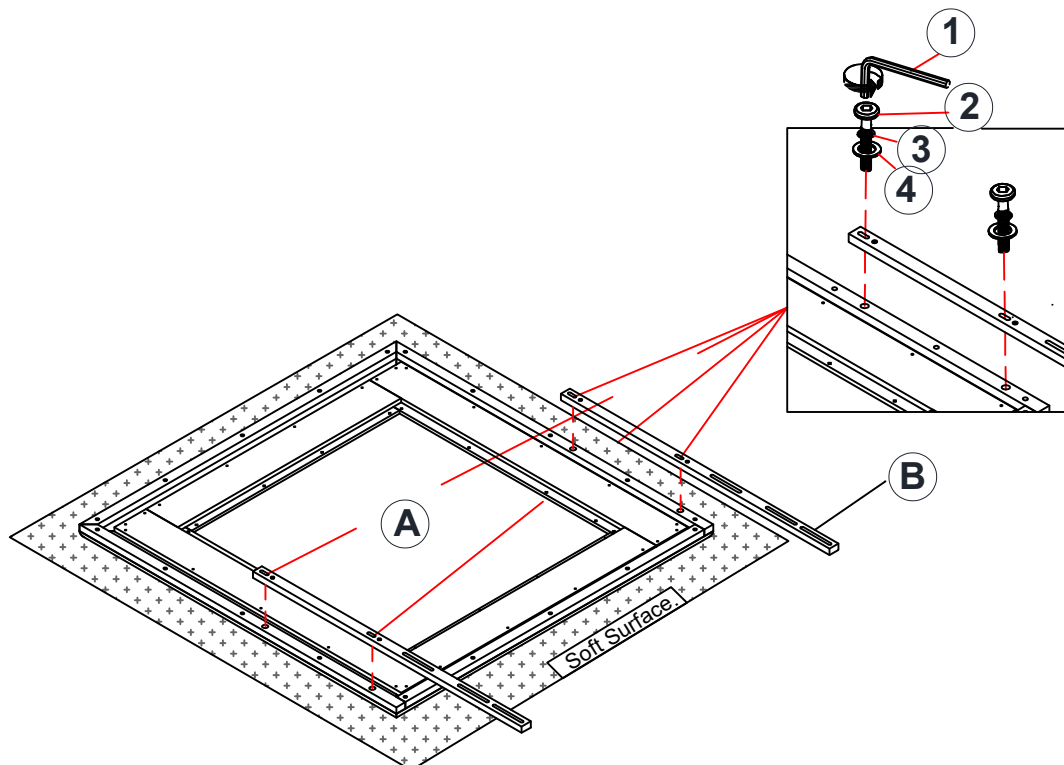


**\*BACK VIEW**


ITEM: **215794**  
**ASSEMBLY INSTRUCTIONS**  
**STEP 3**

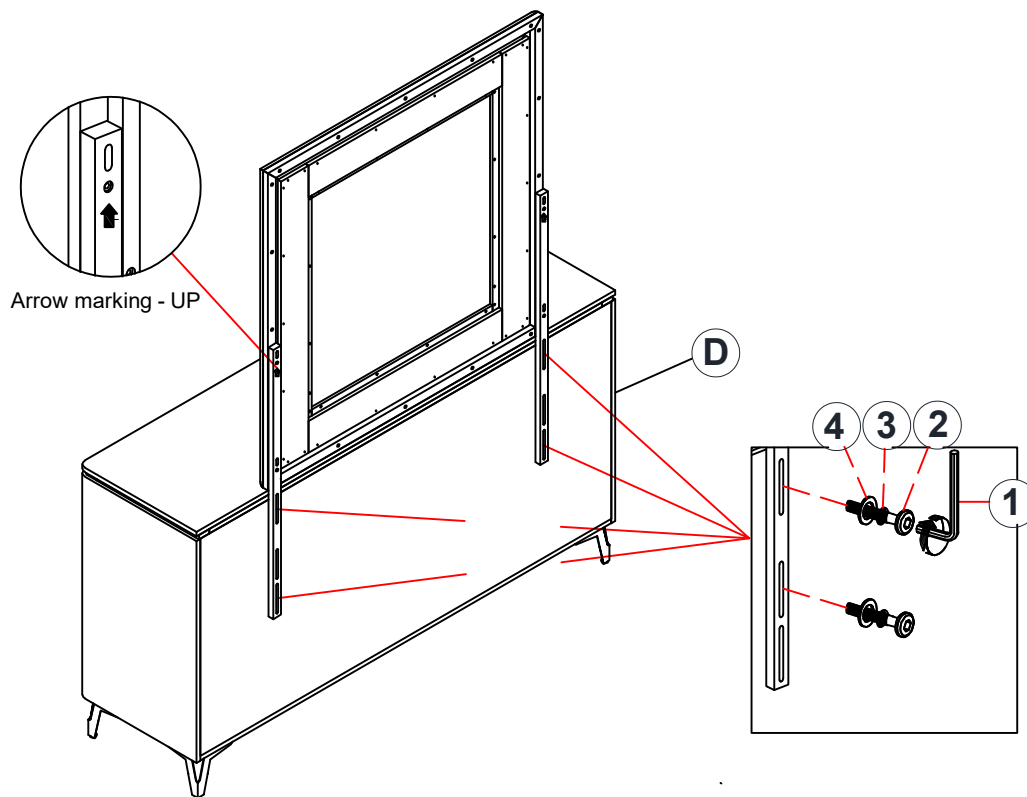

**STEP 4**  
**COMPLETE**

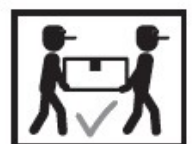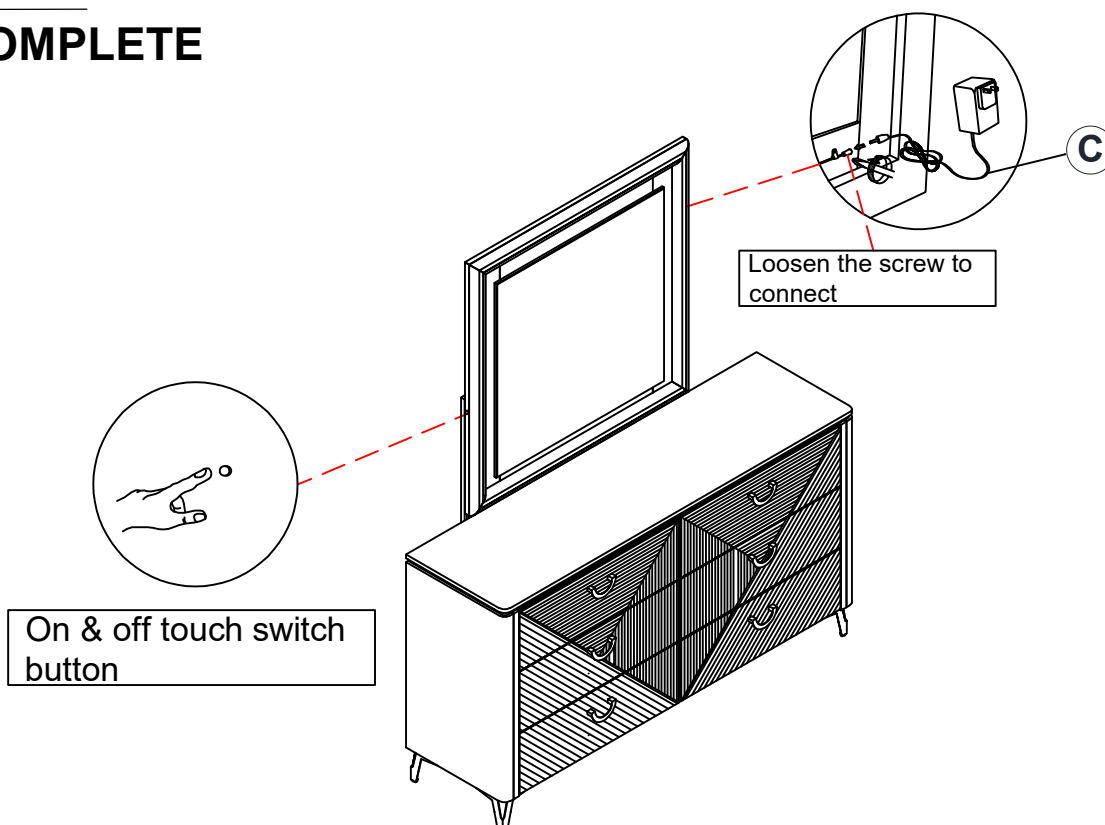

ITEM: **215794**

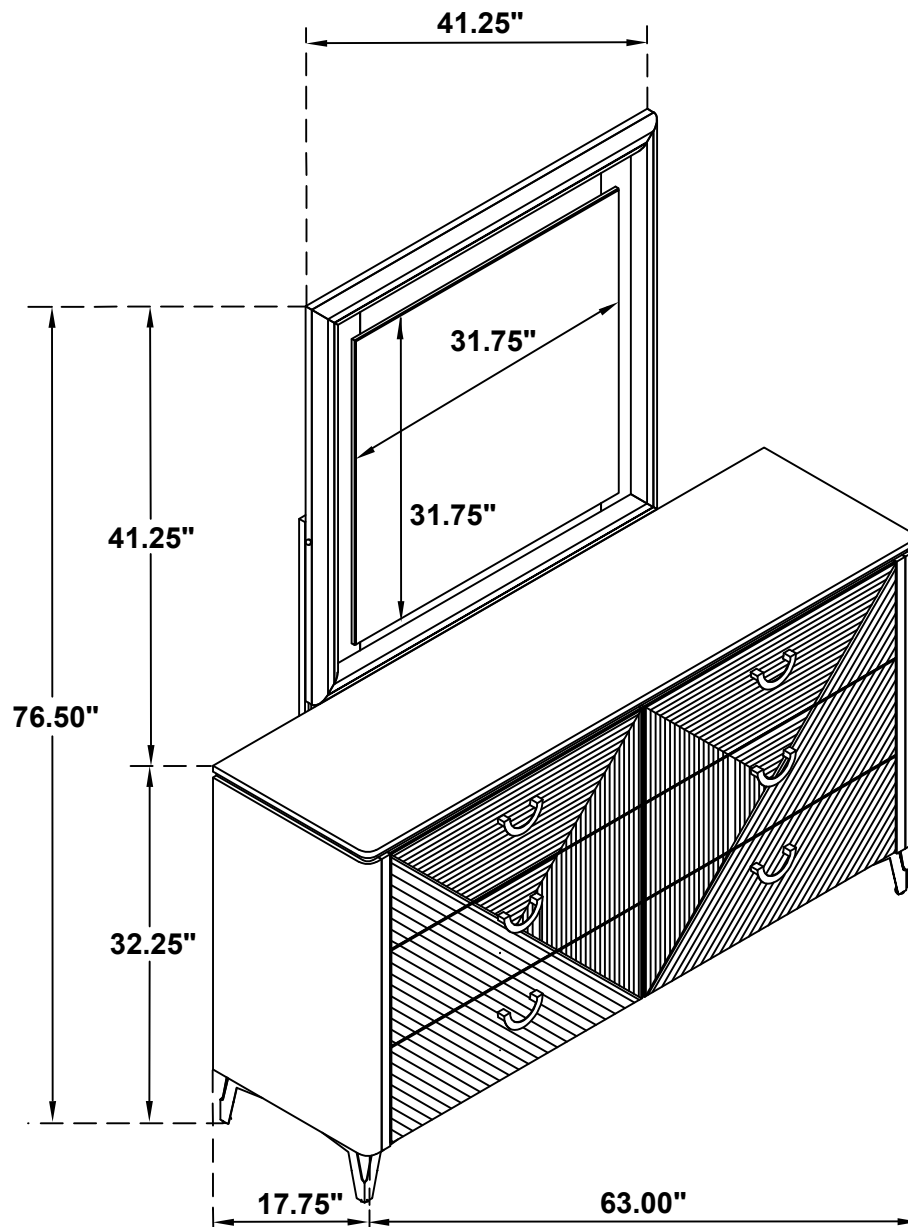

**Note : Dimension tolerance  $\pm 5\%$**

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**215795**  
**Chest**



ITEM: **215795**

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A CHEST



1PC

B LEG



4PCS


## HARDWARE IDENTIFICATION

1 ALLEN WRENCH  
(M5 x 65mm - BLK)



1PC

2 BOLT  
(M8 x 16mm - RBW)



8PCS

3 LOCK WASHER  
(5/16" - RBW)



8PCS

4 FLAT WASHER  
(5/16" x 22mm - RBW)




8PCS


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **215795**  
**ASSEMBLY INSTRUCTIONS**  
**STEP 1**

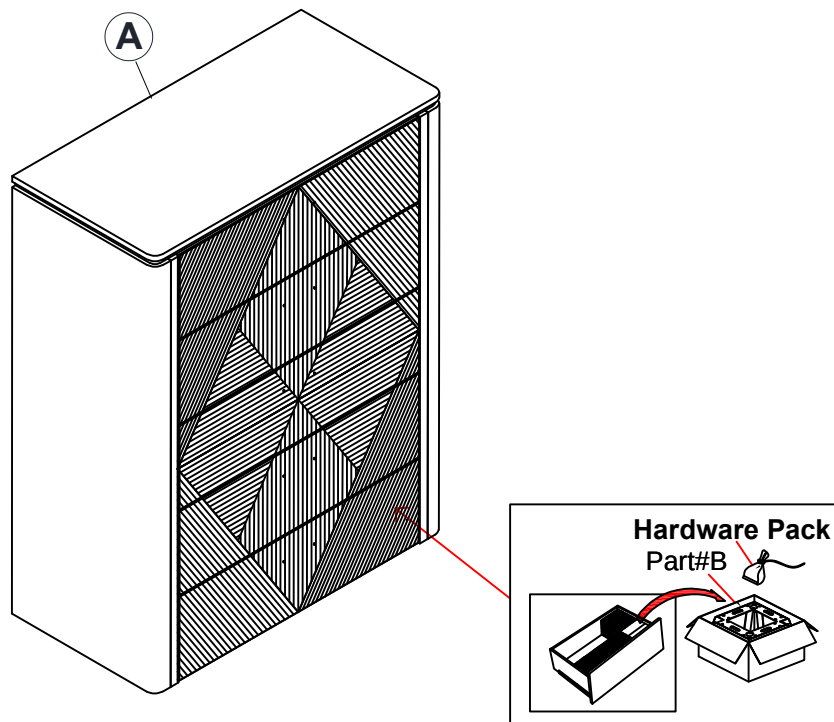

**STEP 2**

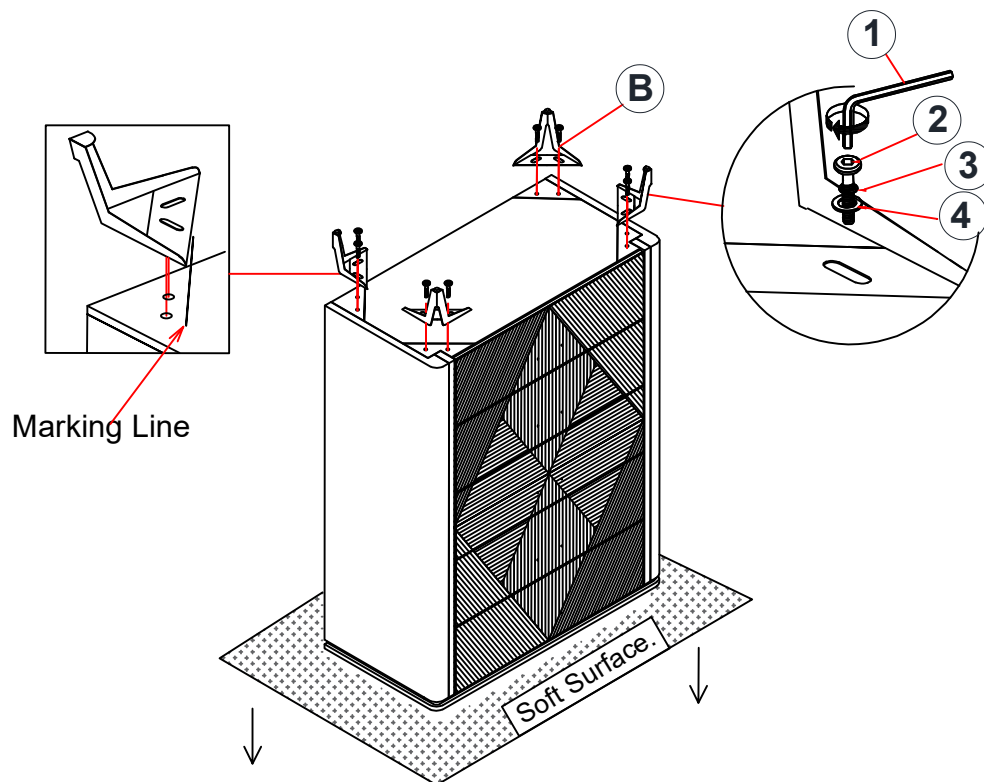


**\*BOTTOM VIEW**


ITEM: **215795**

## ASSEMBLY INSTRUCTIONS


### STEP 3

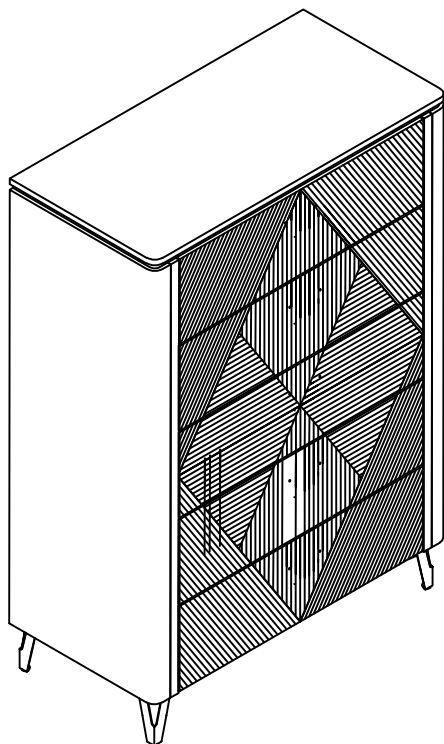


3.1

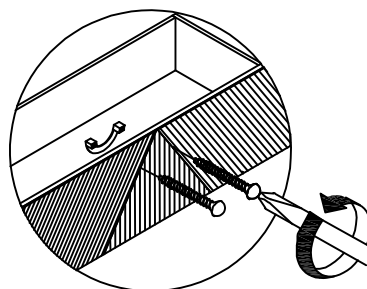

3.2

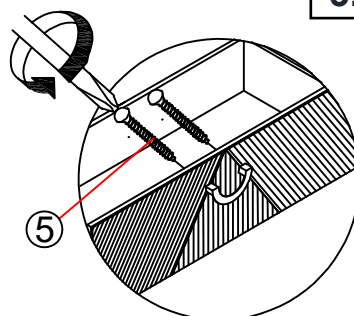

### STEP 4 **COMPLETE**

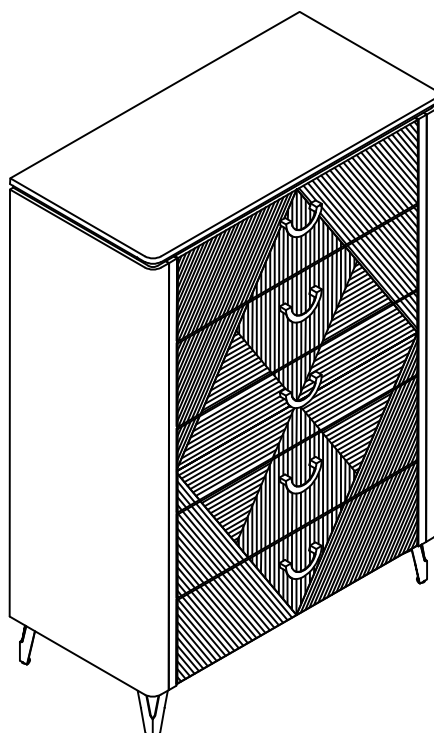

## ANTI-TIPPING INSTALLATION INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

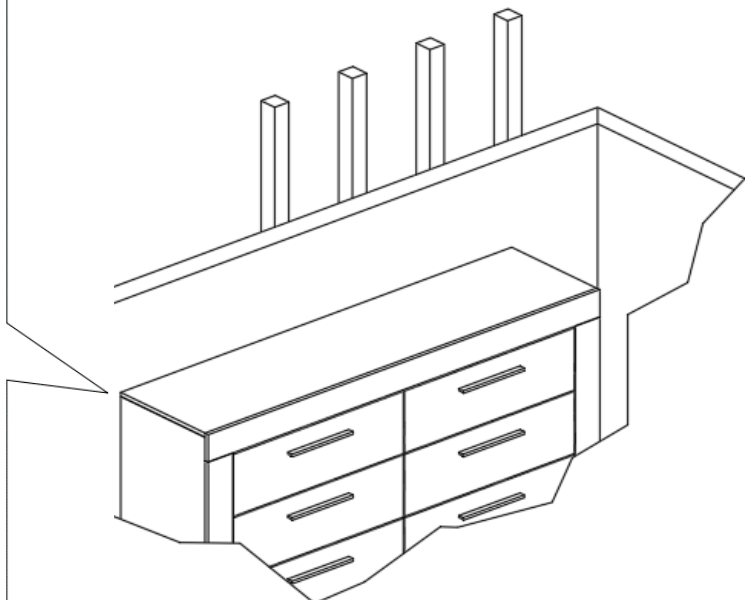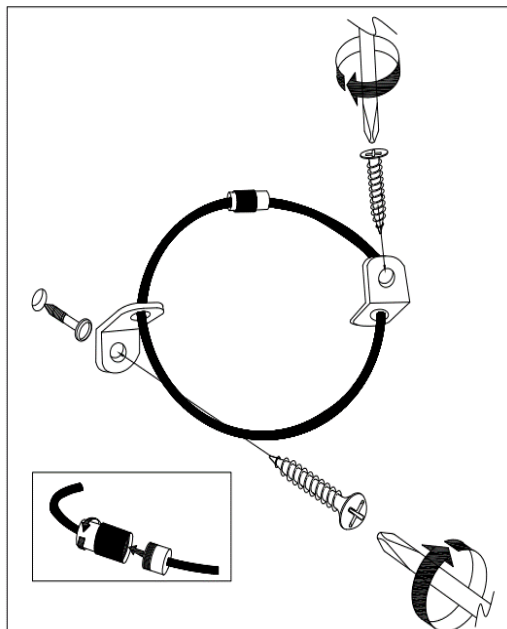

ITEM: **215795**



Inner Size of Drawer : 27.25"W X 12.75"D X 5.25"H X 0.25"T

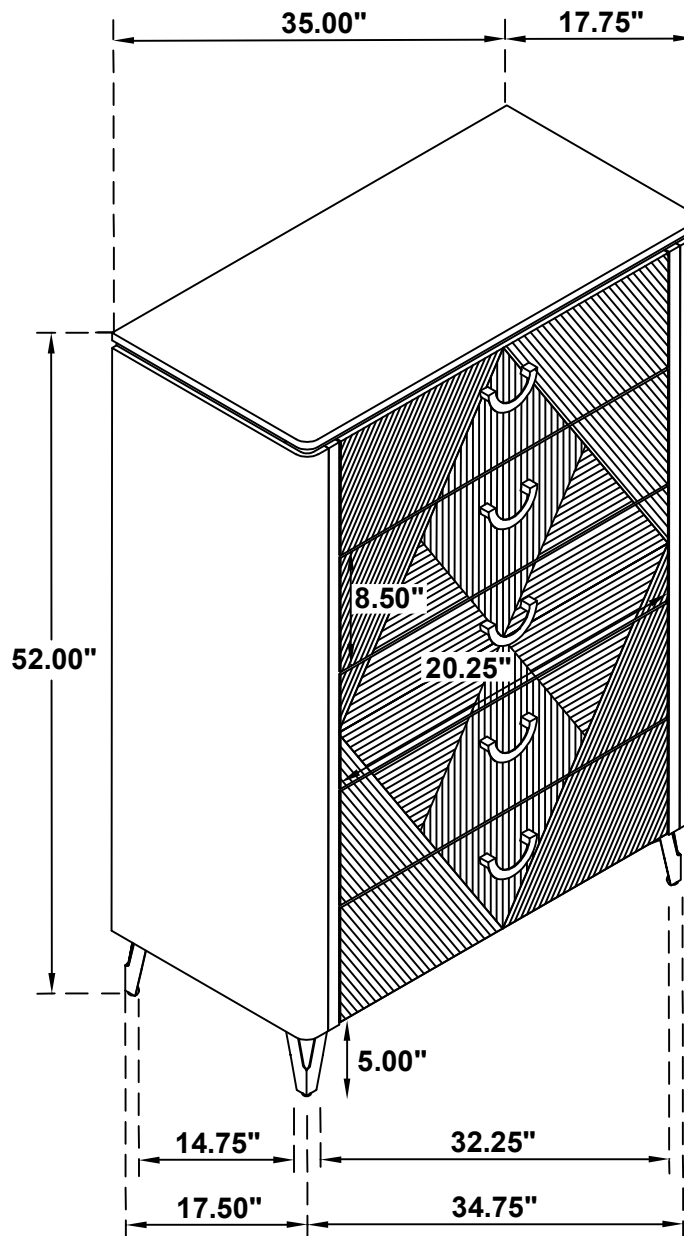

Note : Dimension tolerance  $\pm 5\%$