


3. Install Canopy


Install the Canopy (A) onto the Mounting Bracket (AA) with the Knurled Nut (HH).

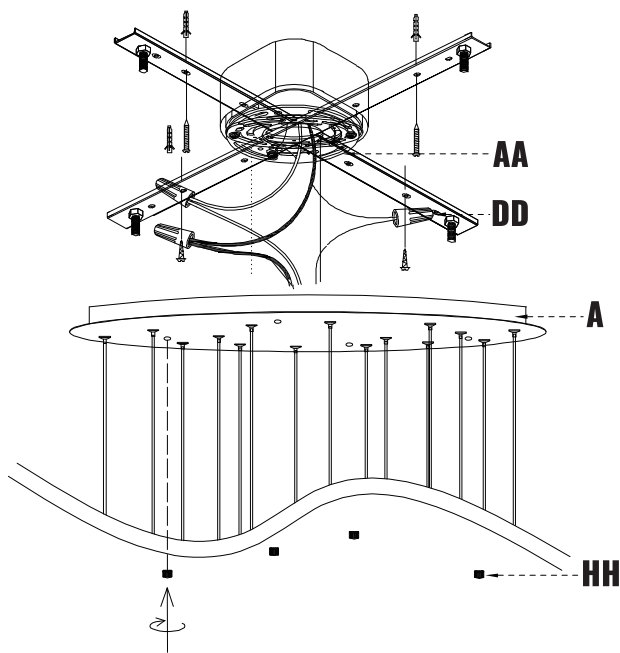

INSTALL THE LIGHT SOURCES AND LAMPSHADES


4. Install the Light Source

Connect the String Light (D) to the LED Array (H).
The wire can be adjusted to your preferred length.

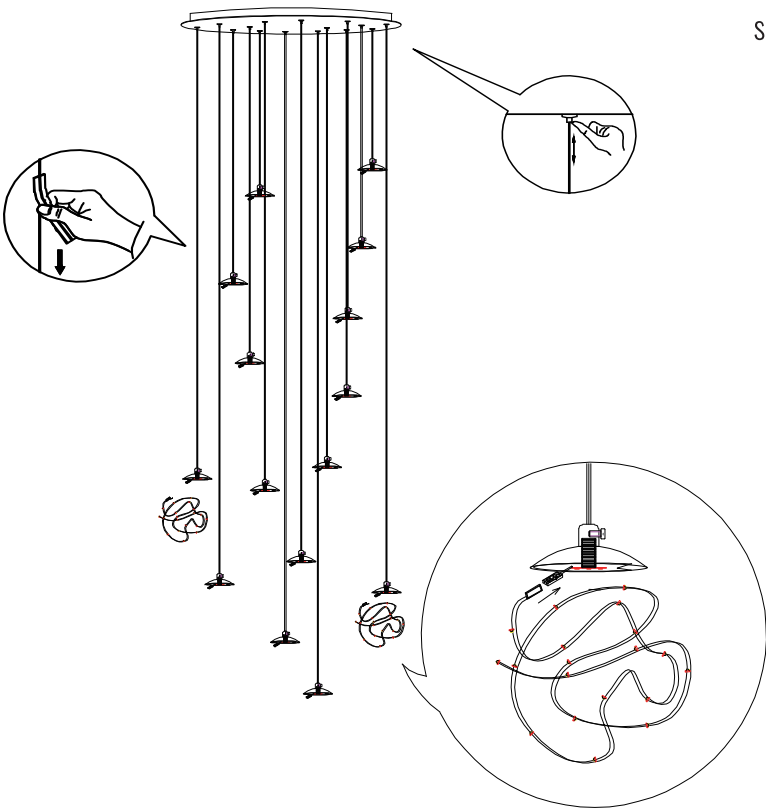

5. Install the Glass Shade


Place the LED Array (H) slantwise into the glass cover, cover the Decorative Flying Saucer Cover (G) with the glass cover, then tighten the Outgoing Line Locking Piece (F), and gently press the Plastic Screw (E) against the wire in sequence at the end to prevent the lampshade from tilting.

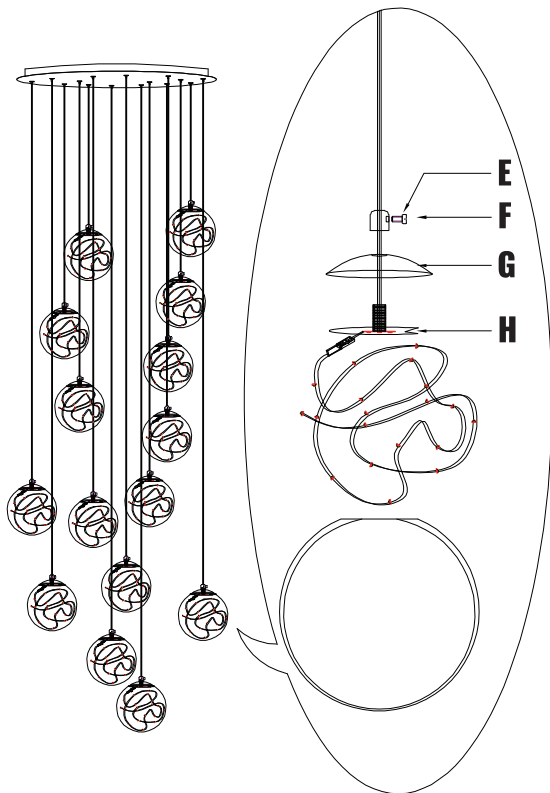

INSTALLATION
MANUAL

CHANDELIER

Model NO.:YXP-5011G-2415

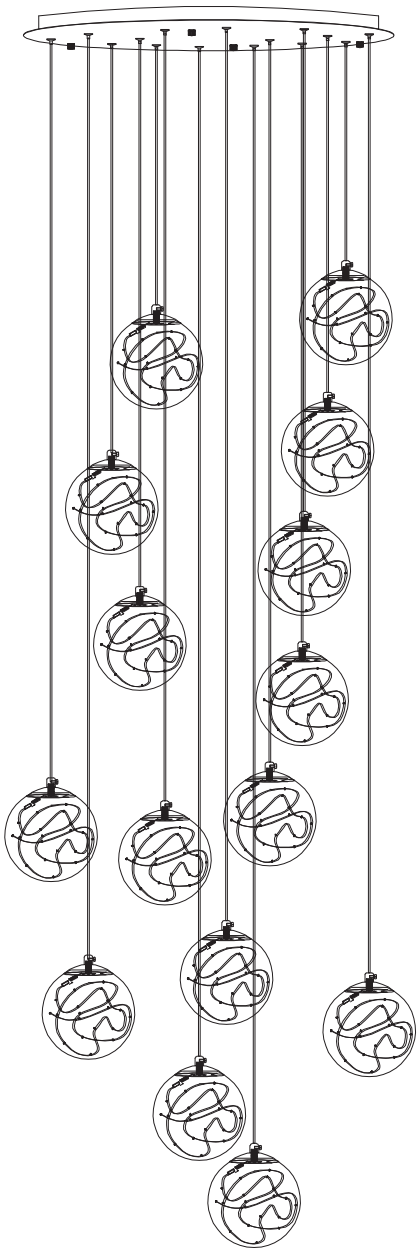


TOOLS REQUIRED




Ladder



Pliers

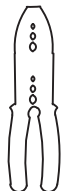


Wire Strippers


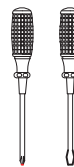


Screwdrivers

PACKING LIST

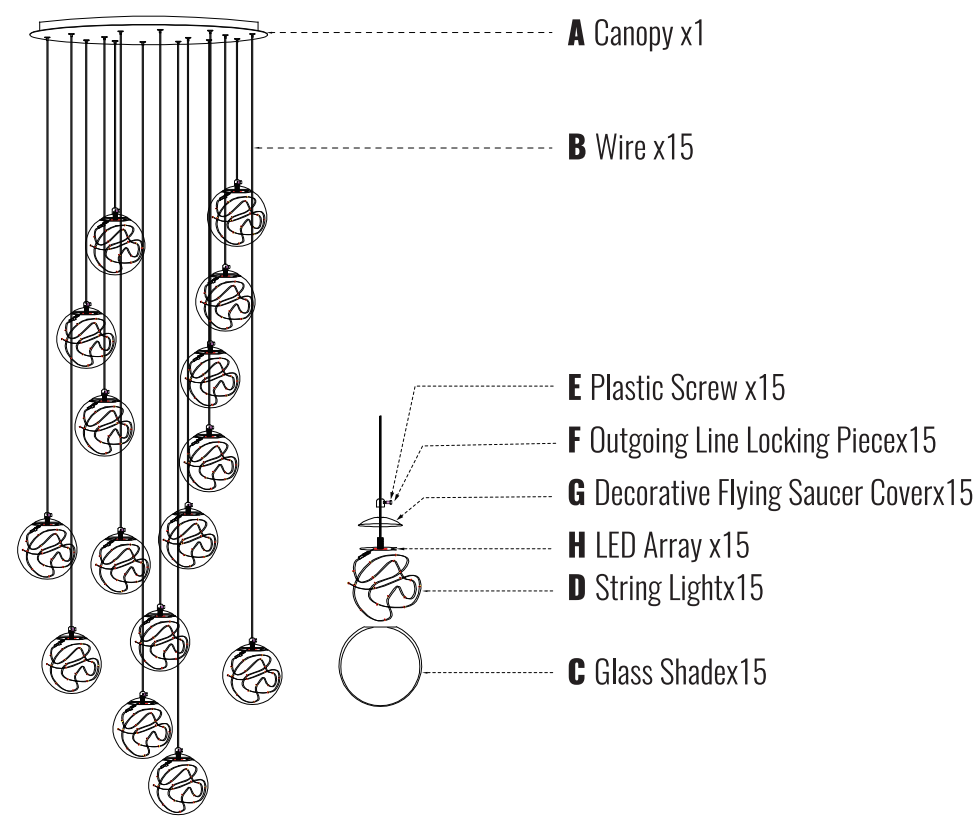

INSTALLATION KIT

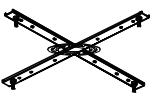AA  Mounting Bracket	1X	BB  Ground Screw	1X	CC  Outlet Box Screw	2X	DD  Wire Nut	3X	EE  Plastic Anchor	4X
FF  Wood Screw	4X	GG  Flat Washer	2X	HH  Knurled Nut	4X	II  M5 Screw	4X	JJ  Hex Nut	4X
KK  Glove	1X								

Note:

1. BB/II/JJ have been pre-installed on AA, AA/HH have been pre-installed on Canopy (A).


2. Some extra hardware may be included. The quantity listed above is the number required for installation.

MOUNTING AND WIRE

1. Install the Mounting Bracket

Step 1: Loosen the Knurled Nut (HH) from the Canopy (A), and take out the Mounting Bracket (AA).

Step 2: Take off the screws from the outlet box, and secure the Mounting Bracket (AA) onto the box with the screws taken off or Outlet Box Screw (CC) and Flat Washer (GG).

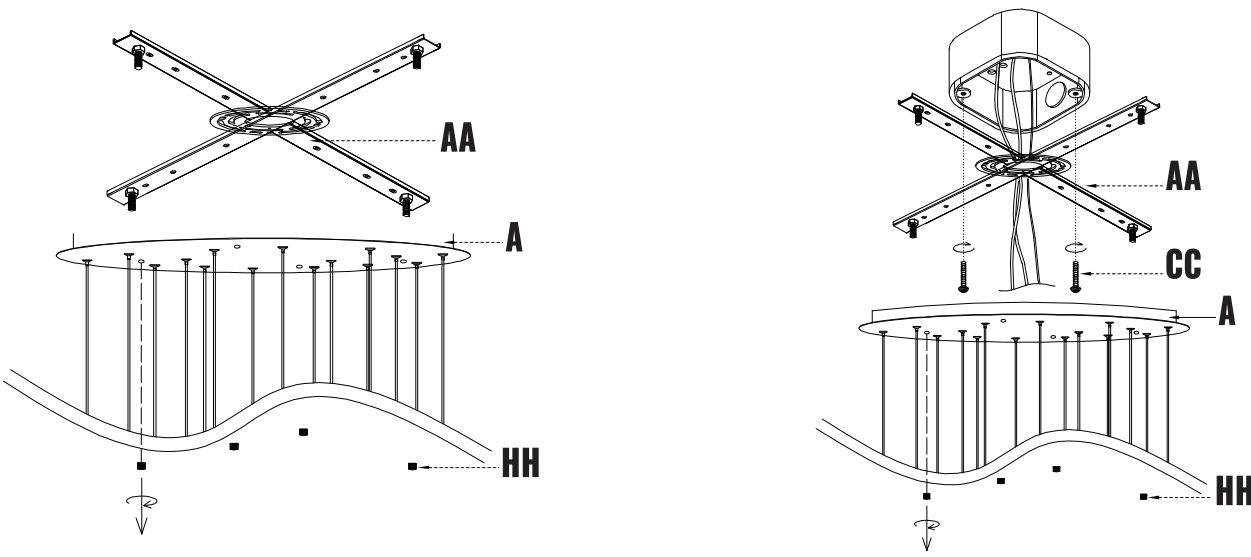

2. Connect the Wires

Step 1: Wrap the ground wire from the outlet box around the Ground Screw (BB) on the Mounting Bracket (AA), and then connect the ground wire from the fixture to the ground wire from the outlet box.

Step 2: Connect the wires with the Wire Nut (DD) from the fixture to the house supply wires, neutral (white) to neutral wire, and hot (black) to hot wire.

Step 3: Spread apart the wires so that the hot wires are on one side of the outlet box and the neutral wires are on the other.

