JAMIE YOUNG Co

CORONET Wall Sconce in Taupe

4CORO-SCTA

SAFETY, INSTALLATION & CARE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

We strongly recommend that all direct-wired lighting products be installed by a licensed electrician.

Two people may be required for installation. DO NOT EXCEED the rated bulb wattage. Keep flammable materials away from bulb. This light fixture is shipped with all internal wiring intact. Do not open the product or alter the wiring in any manner.

Installation requires an electrical junction box in the ceiling sufficient to support the weight of the light fixture. This fixture weighs: 8.4Kg/12.8lbs.

WARNING: Be certain that the power to the electrical junction box is turned off at the circuit breaker before installation. Turning the power off at a light switch is not sufficient to prevent electrical shock.

CAUTION:
Prior to installation, locate ALL PARTS INCLUDED before disposing of packaging materials.

Tools Required for Installation (Not Included):

Screwdriver	Pliers
Electrical Tape	Adjustable Wrench
Wire Cutters	

Note: Additional wiring supplies may be required.

Parts Required (not included):

Part	Qty.	Description
A.	1	Ceiling Outlet Junction Box
B.	1	Ground Junction Box Wire
C.	1	Hot Junction Box Wire
D.	1	Neutral Junction Box Wire

Parts Included/Referenced (See Figure 1):

Part	Qty.	Description	Part	Qty.	Description
E.	1	Mounting Plate	N.	1	Light Bulb (Not Included)
F.	2	Mounting Screws	O.	1	Ground Screw
G.	1	Backplate	P.	1	Sconce Body
H.	3	Wire Connectors	Q.	2	Screws
I.	1	Ground Wire	R.	7	Rubbers
J.	1	Hot Fixture Wire	S.	7	Decorative Nuts
K.	1	Neutral Fixture Wire			
L.	7	The Glass			
M.	7	The Glass			

Important Safety Instructions:

For your safety, use of a two-person installation team is strongly recommended.

This product must be installed in accordance with the applicable installation codes by a person familiar with the construction and operation of the product and the hazards involved.

This fixture has been rated for up to One (1) 60W-Max Type B light bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

This fixture is meant for indoor use in dry locations only.

CORONET Wall Sconce in Taupe

4CORO-SCTA

SAFETY, ASSEMBLY, CARE, AND TROUBLESHOOTING

Installation Procedure (See Figure 1):


1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Carefully unpack all fixture parts and hardware and lay them out on a clean work surface.
3. Use wire strippers to prepare the ends of the two wires so that there is about 1/2" of exposed wire for the Wire Connectors (H).
4. Carefully inspect the fixture wires. The Neutral Fixture Wire (K) is white. The Hot Fixture Wire (J) is black, and the Ground Wire (I) is green.
5. Attach the Ground Wire (I) from the fixture to the Ground Junction Box Wire (B); it usually has green insulation around it or is bare wire. Fasten them together with a Wire Connector (H) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. If your Junction Box (A) does not have a Ground Junction Box Wire (B), insert the Ground Screw (O) into the Mounting Plate (E) where it's marked "Ground", and wrap the fixture's bare ground wire around the Ground Screw (O). Tighten the screw to clamp the Ground Junction Box Wire (B) between the Ground Screw (O) head and the Mounting Plate (E). It is imperative that the Junction Box (A) in your home be properly grounded.
6. Connect the Neutral Fixture Wire (K) to the Neutral Junction Box Wire (D); it usually has white insulation around it. Fasten them together with a plastic Wire Connector (H) and wrap the connection with electrical tape. Make sure that no wire strands are exposed.
7. Connect the Hot Fixture Wire (J) to Hot Junction Box Wire (C); it usually has black insulation around it. Fasten them together with a plastic Wire Connector (H) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
8. Gently tuck the wire connections neatly into the Junction Box (A).
9. Fix Mounting Plate (E) to Junction Box (A) with Mounting Screw (F).
10. Fix Backplate (G) to Mounting Plate (E) with Screw (Q).
11. Install Light Bulb (N) (Not Included) on the socket and put the glass(L) (M) on the Sconce Body(P) with Rubbers(R) and decorative nuts(S) according to the illustration.
12. Restore power to Junction Box (A) and test the fixture.


JAMIE YOUNG Co

CORONET Wall Sconce in Taupe

4CORO-SCTA

Installation Procedure (Figure 1):

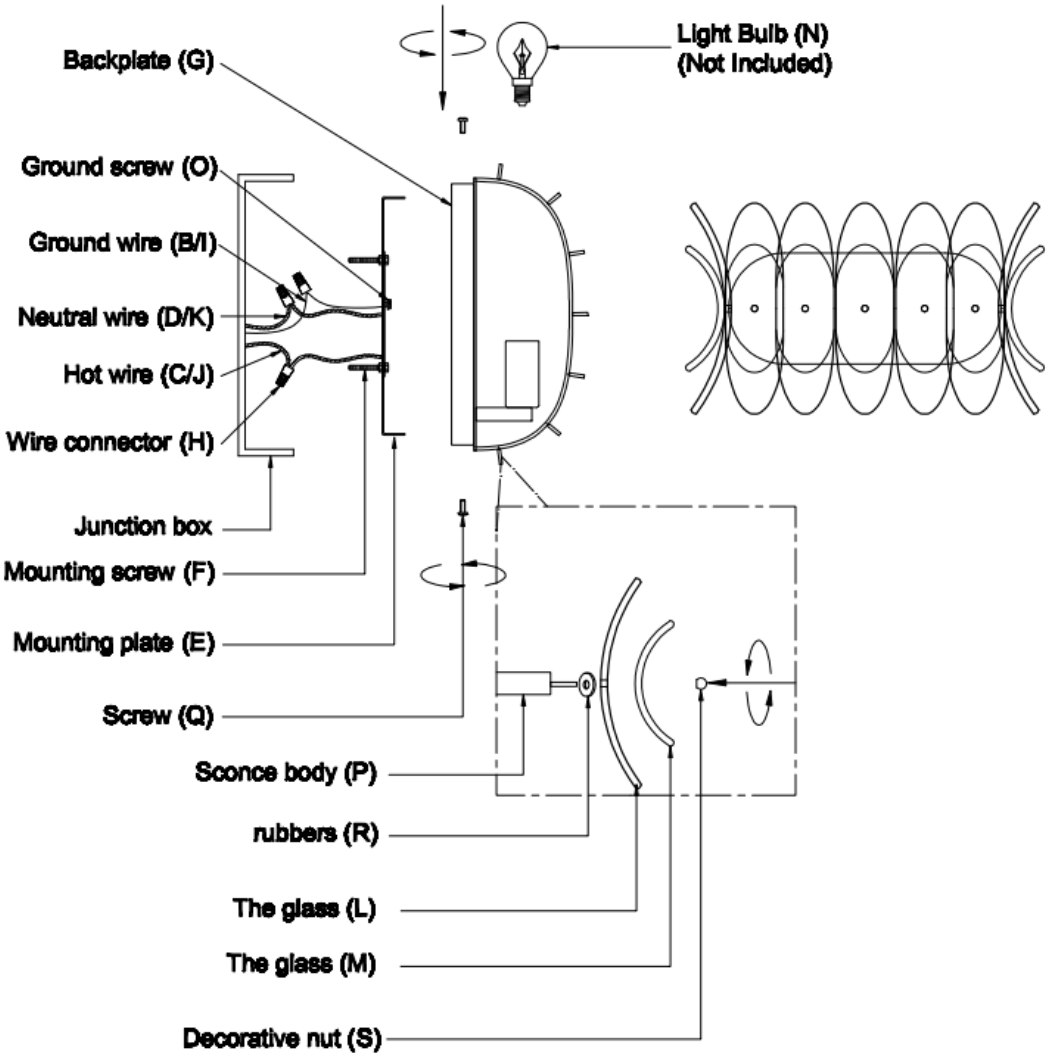

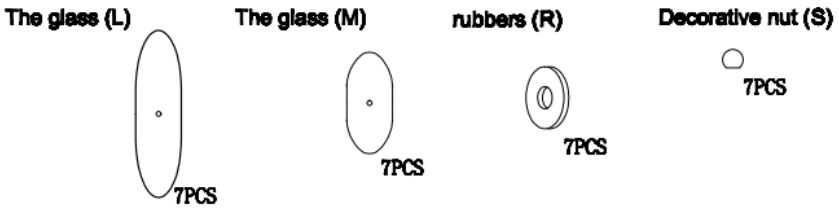

CARE & CLEANING:

To clean, wipe the fixture ONLY with a soft, dry cloth.

SAVE THESE INSTRUCTIONS