



Installation Instruction

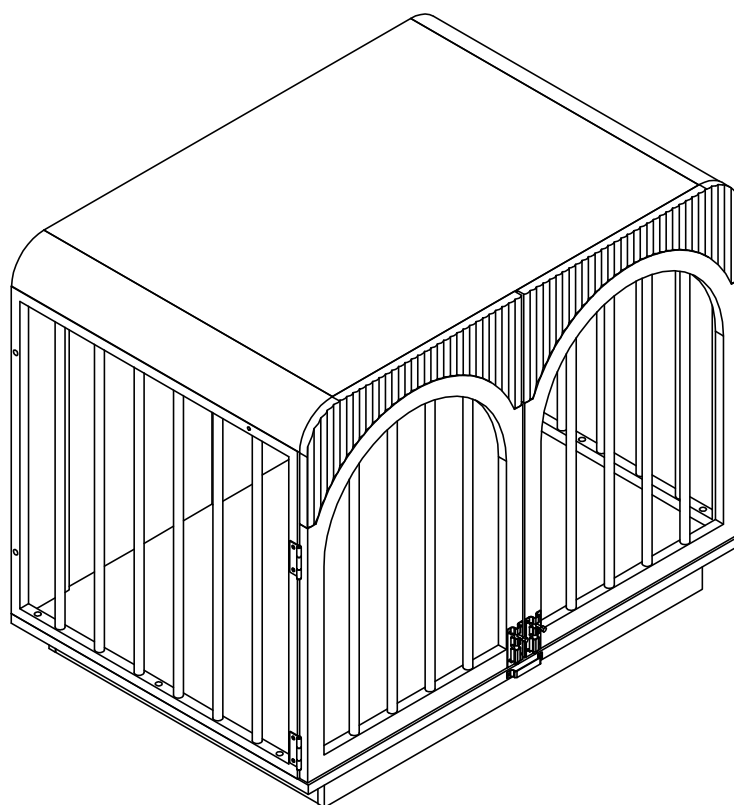


Assembling

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation

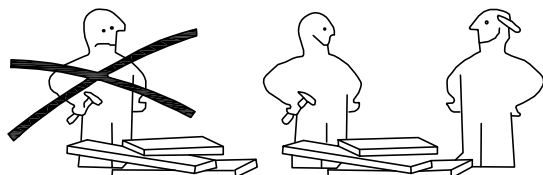


What' included

Code	Description	Qty
A	Cam Bolt M6X35MM	26
B	Cam Lock15X9MM	26
C	Wooden Dowel M8X30MM	18
D	Screw M4X40MM	7
E	Screw M7X50MM	4
F	Hole position sticker	26
G	The back button	12
H	Screw M6X24MM	12
I	Mats	8
J	Anchor	2
K	Screw M3.5X14MM	22
L	Wrench M4X90MM	1
M	Iron guard plate	1
N	Iron buckle	2
O	Arc-shaped iron sheet	2
P	Screw M3.5X14MM	2
Q	Cam Bolt M4X10MM	8
R	Nylon Strap	2
S	Phillips screwdriver	1
T	Stopper	1

The Hardwares


Ⓐ




Ⓑ




Ⓒ



Ⓓ




Ⓔ



Ⓕ



Ⓖ



Ⓗ



Ⓘ




Ⓙ



Ⓚ




Ⓛ



Ⓜ



Ⓝ



Ⓞ




Ⓟ



Ⓠ




Ⓡ



Ⓢ



Ⓣ




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully)

Included Accessories


Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Curved strip	2
4	Front and rear support rods	2
5	Left and Right support rods	2
6	Left back support plate	1
7	Right back support plate	1
8	Back support plate	1
9	Backboard	2
10	Support plate	1
11	Left iron frame	1
12	Right iron frame	1
13	Left door	1
14	Right door	1

The Accessoriess

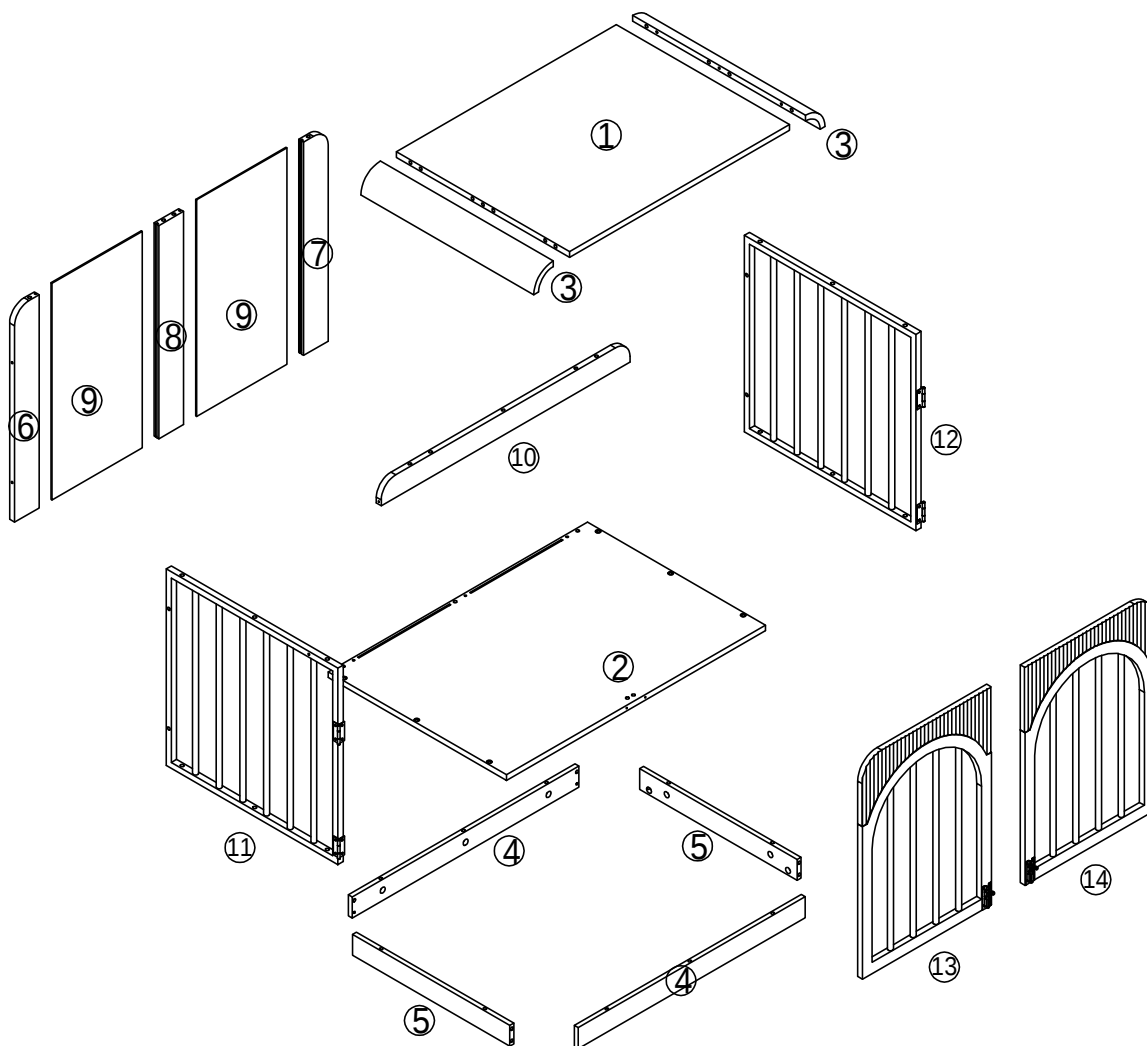


HARDWARE USAGE GUIDE

Hidden Cam Bolt/Cam Lock Usage Instructions

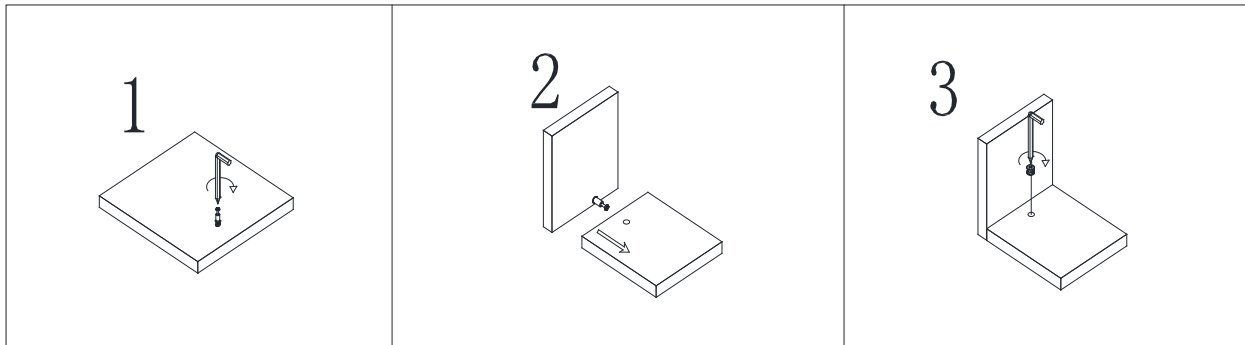


Step 1




Cam Bolt

Turn the Cam Bolt until the shoulder is firmly against the part.

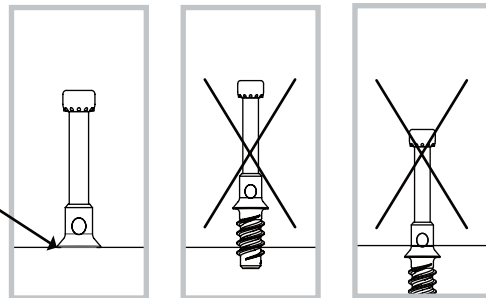


Step 2

Connect the two plates at 90 degrees.

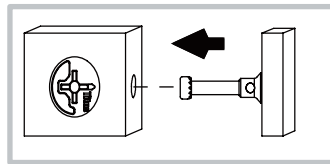


Step 3.1

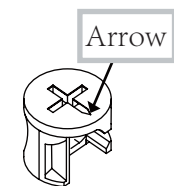


Cam Lock

Push the cam lock into the part. The arrow must point directly toward the hole on the board's edge (see diagram).

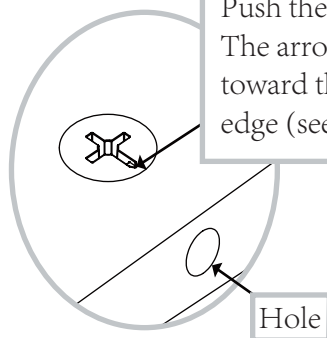

Step 3.2



Install the cam lock nut and fix it by rotation.

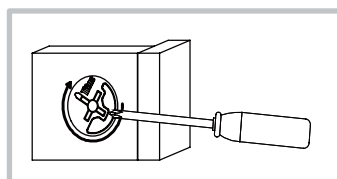


Step 1






Pay attention to the orientation of the holes in frame 11 and frame 12.

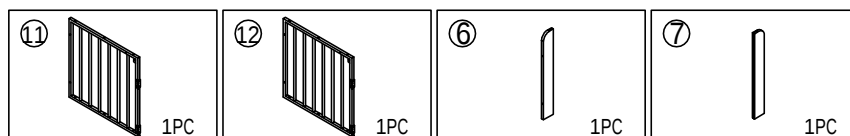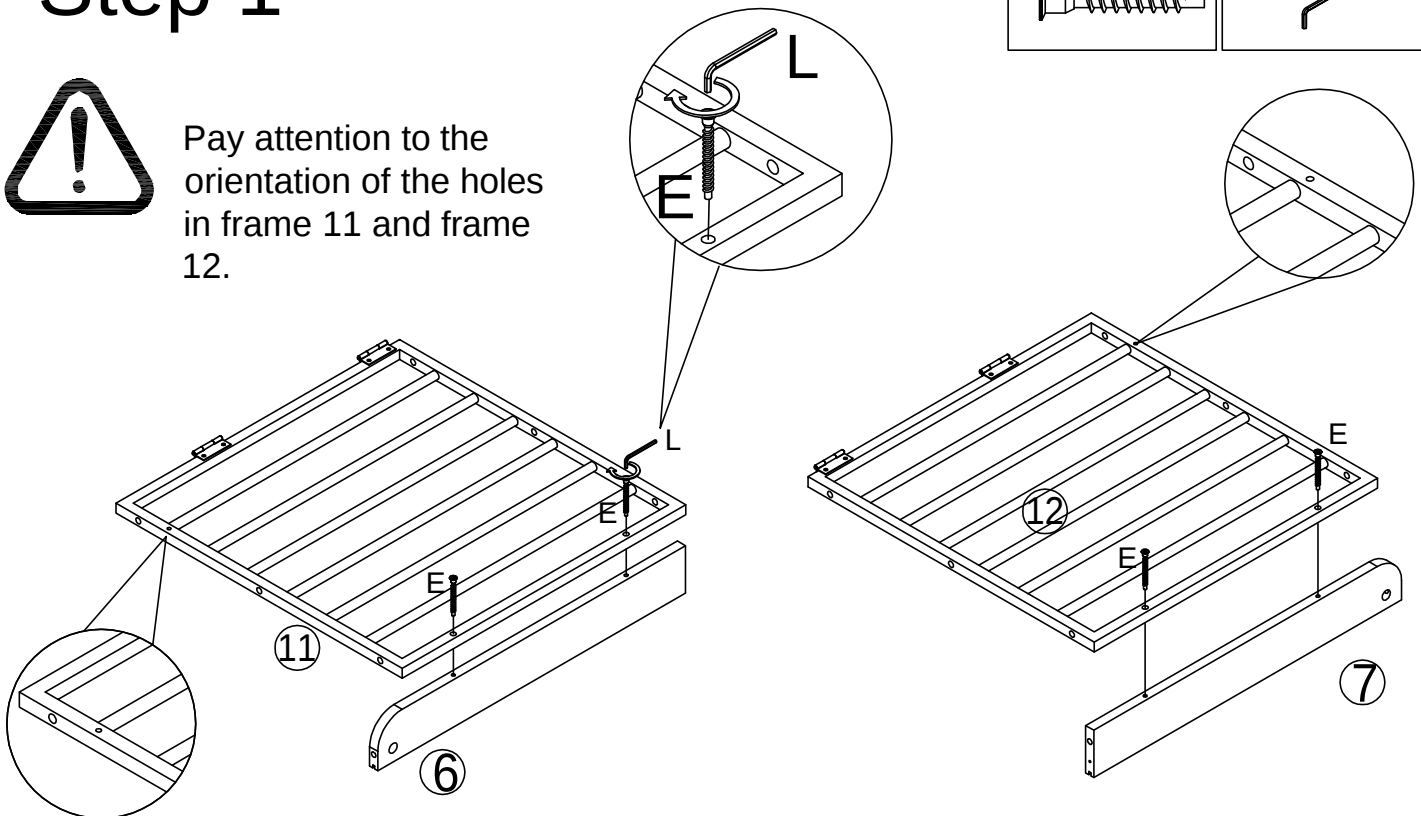



Step 2

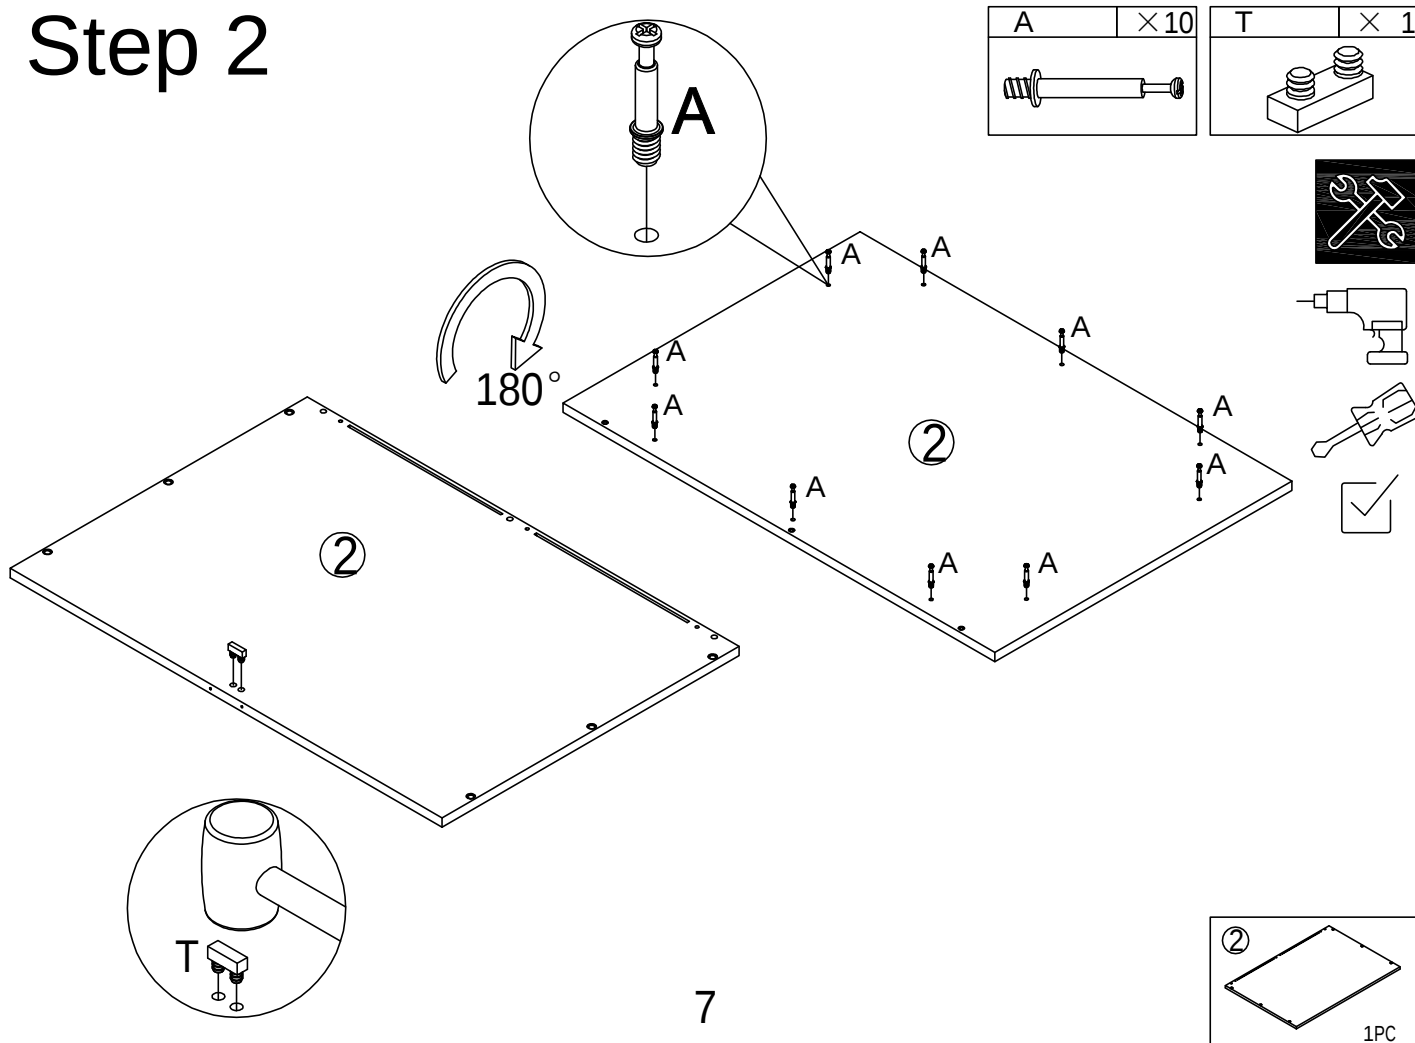


Step 3

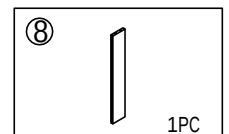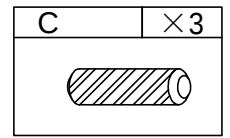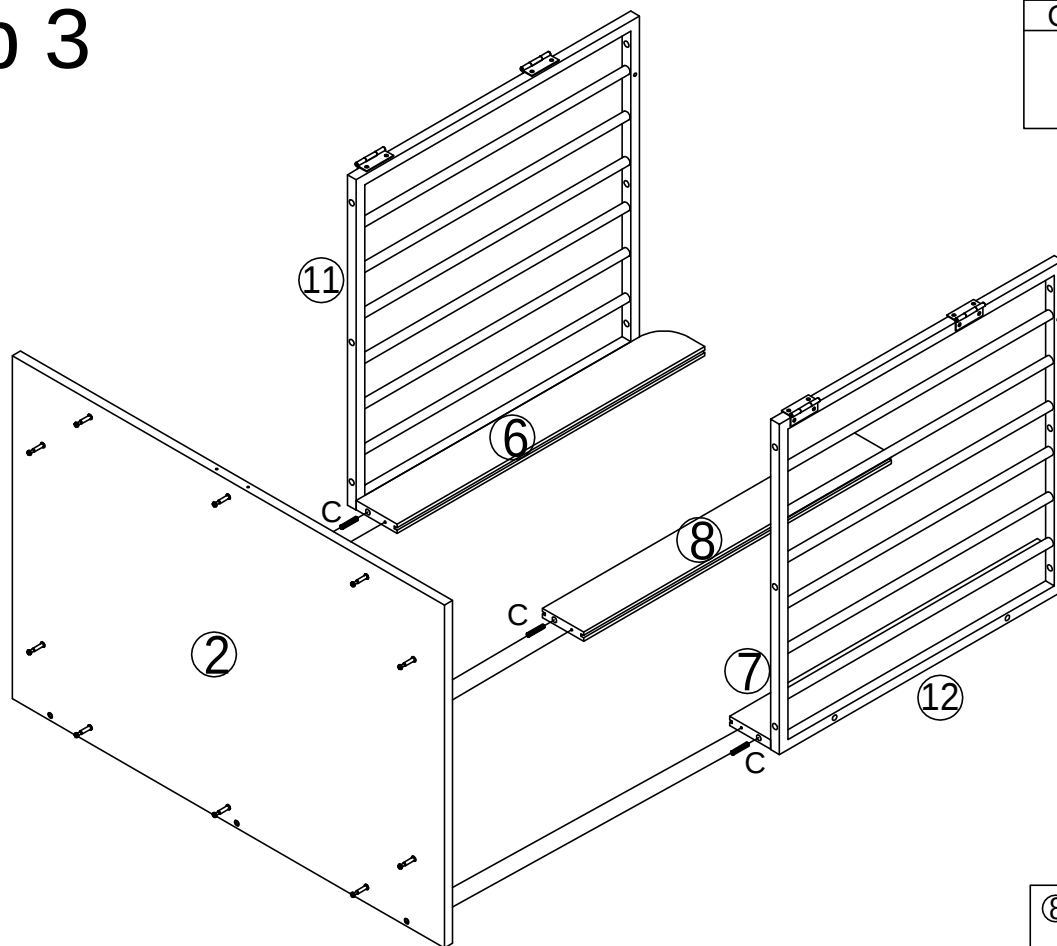



Step 4

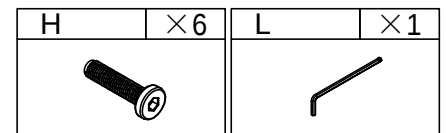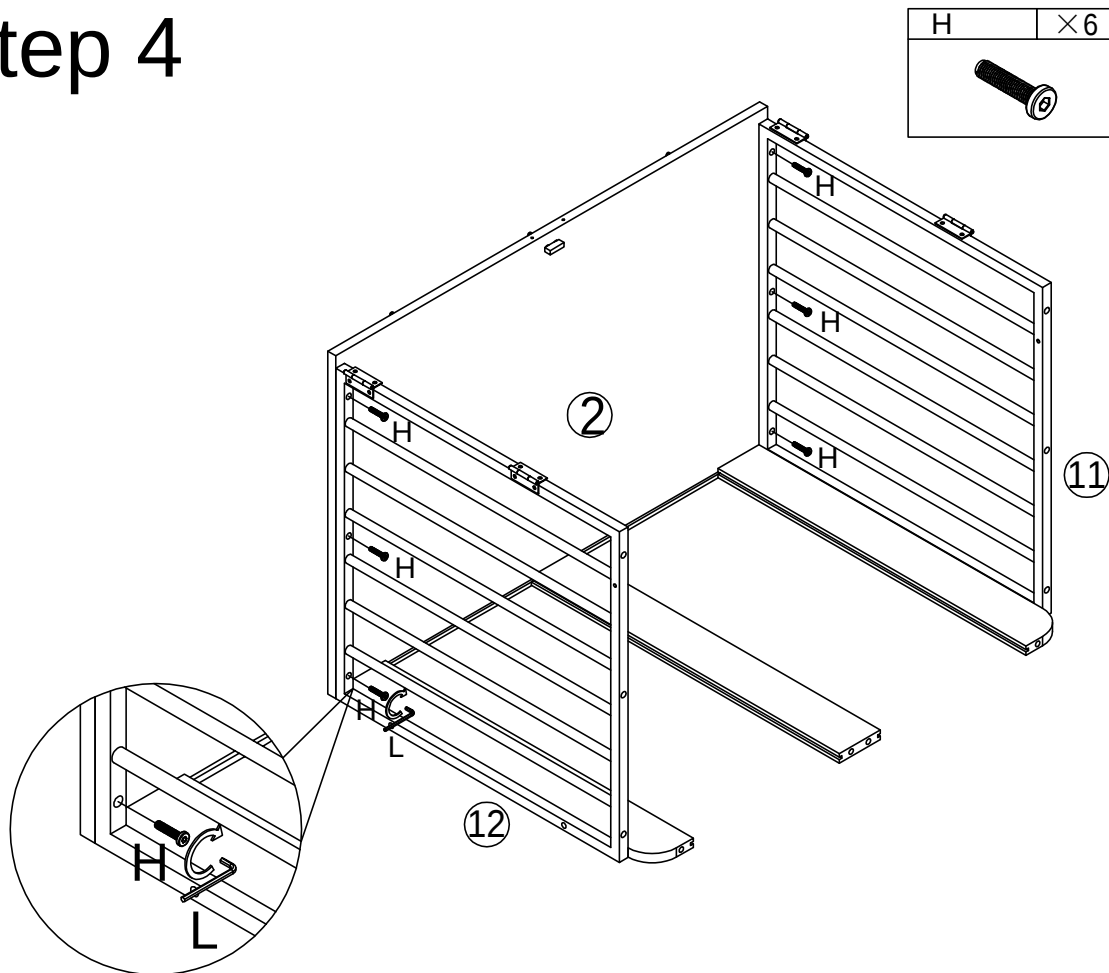

Step 5

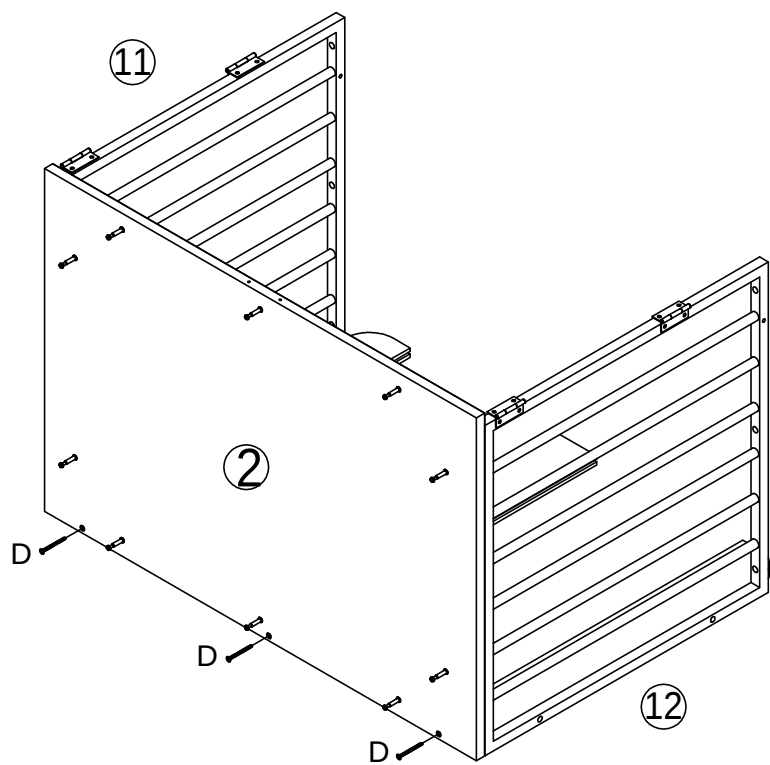


D	×3
---	----












Step 6


A	×4	B	×4	C	×4	F	×4
---	----	---	----	---	----	---	----




I	×8
---	----

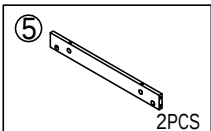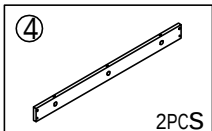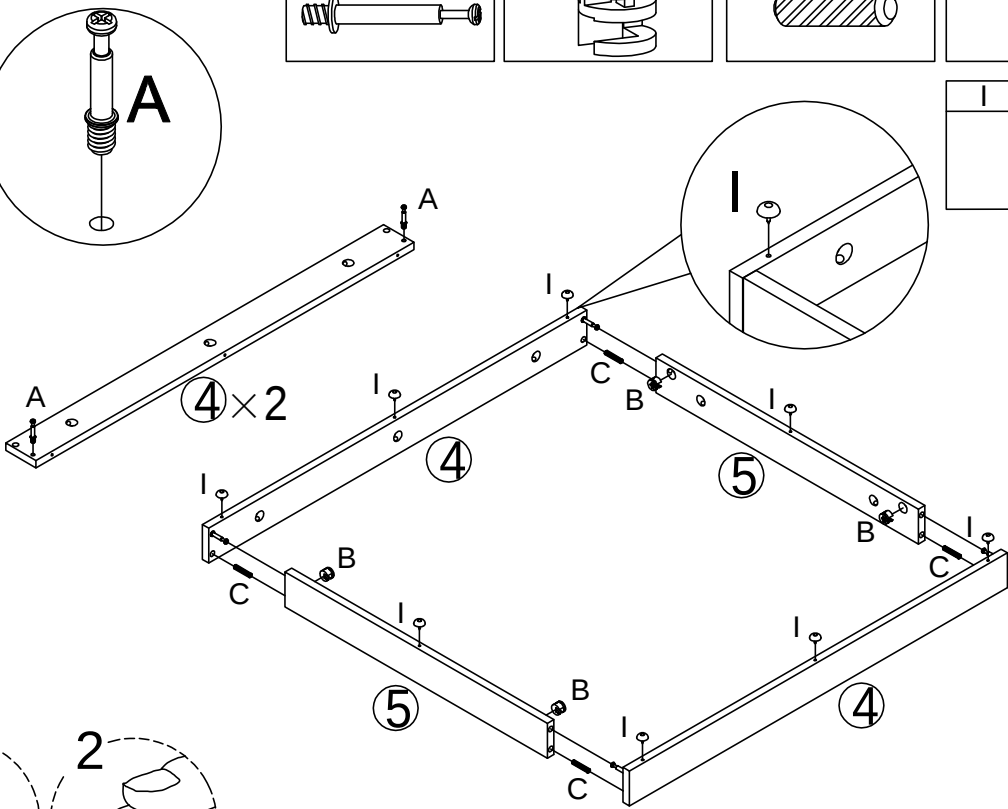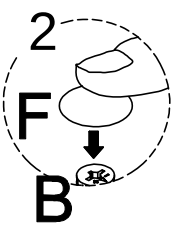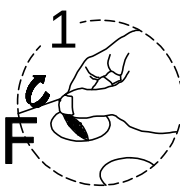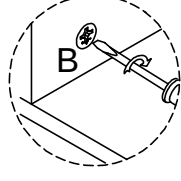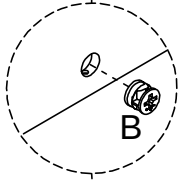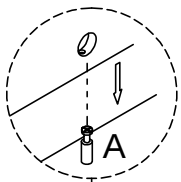



Step 7

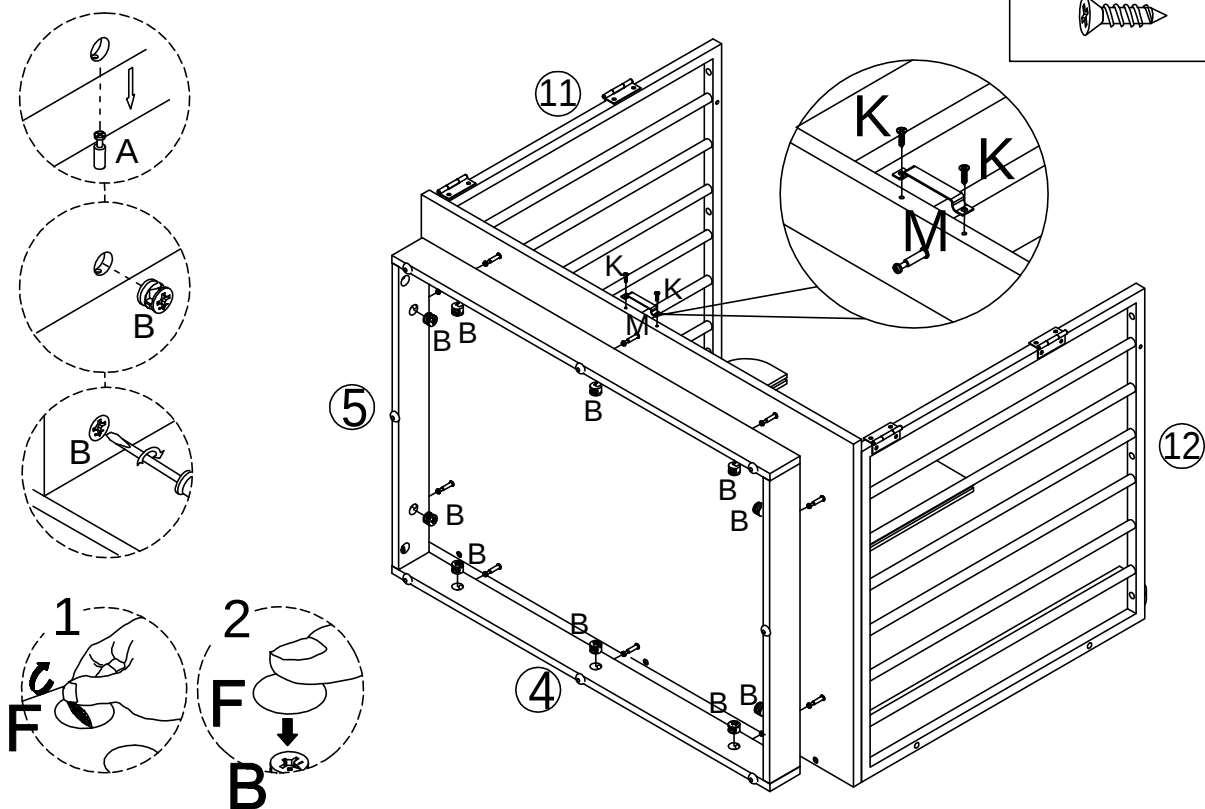



Step 8

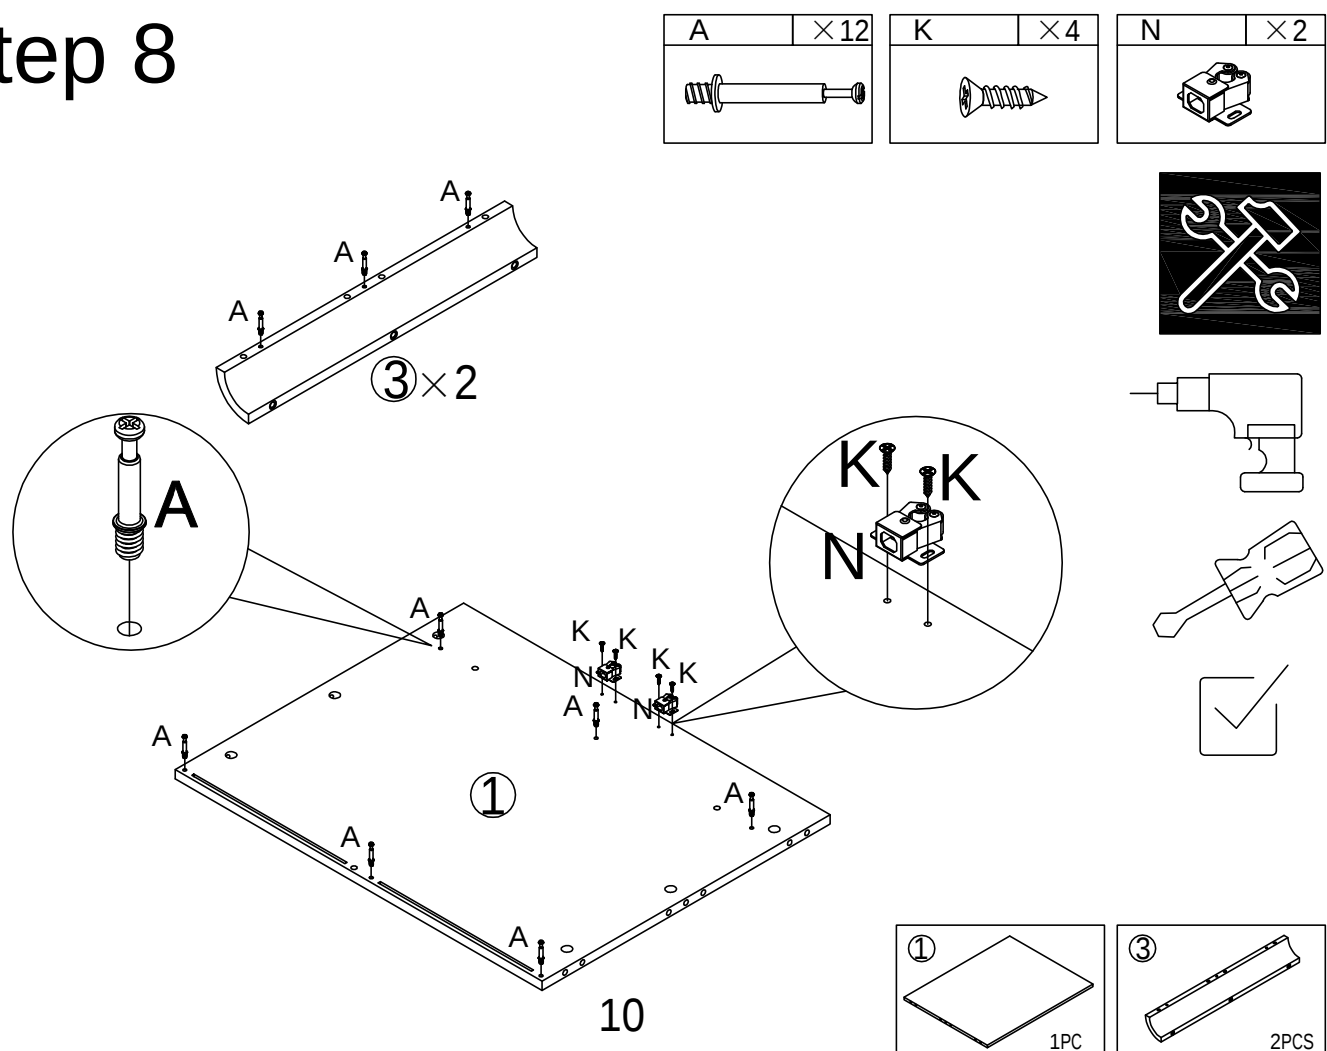




Step 9

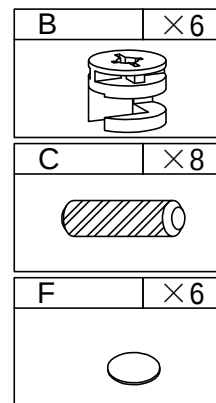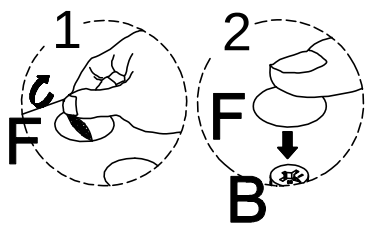



Step 10

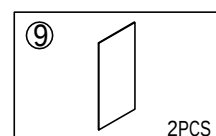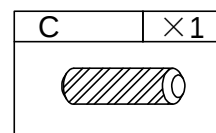




Step 11

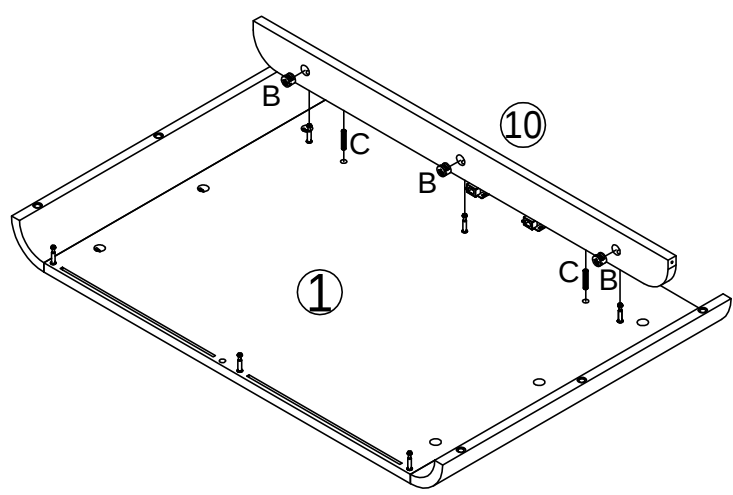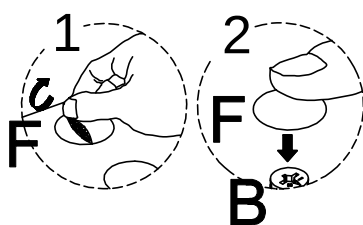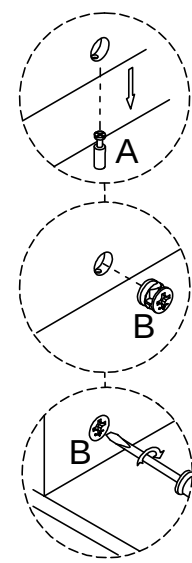

B	×3
	
C	×2
	
F	×3
	

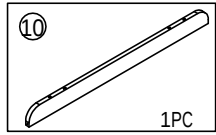


Step 12

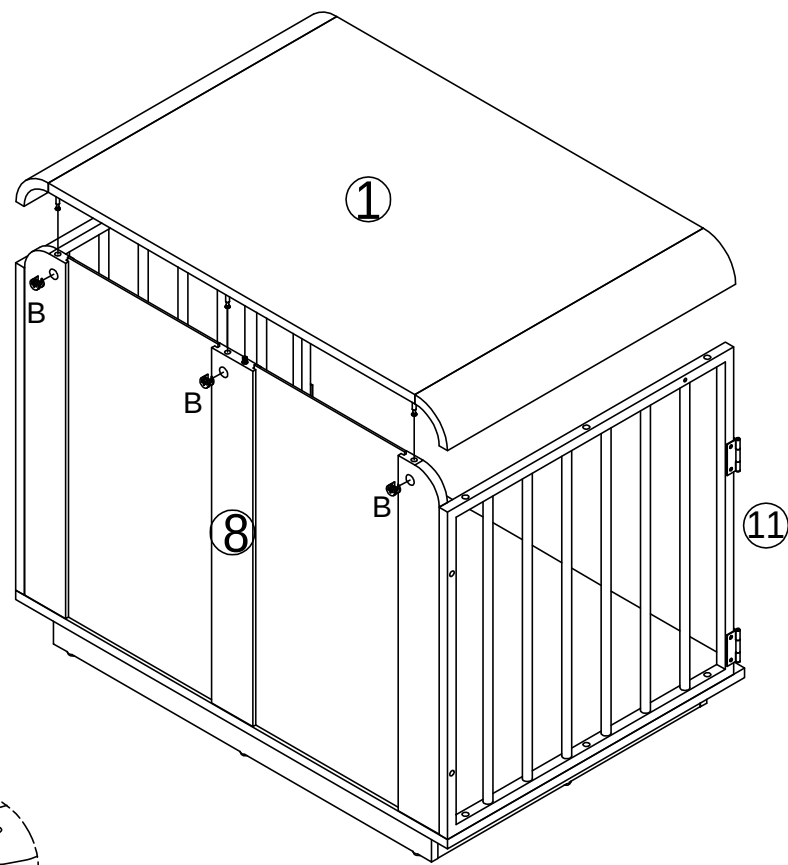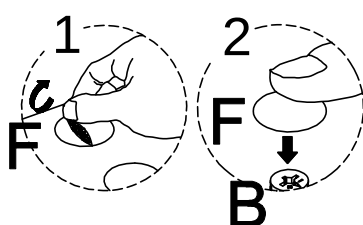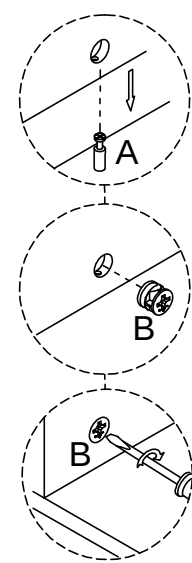


B	×3
	
F	×3
	



Step 13

H	×6	L	×1
			

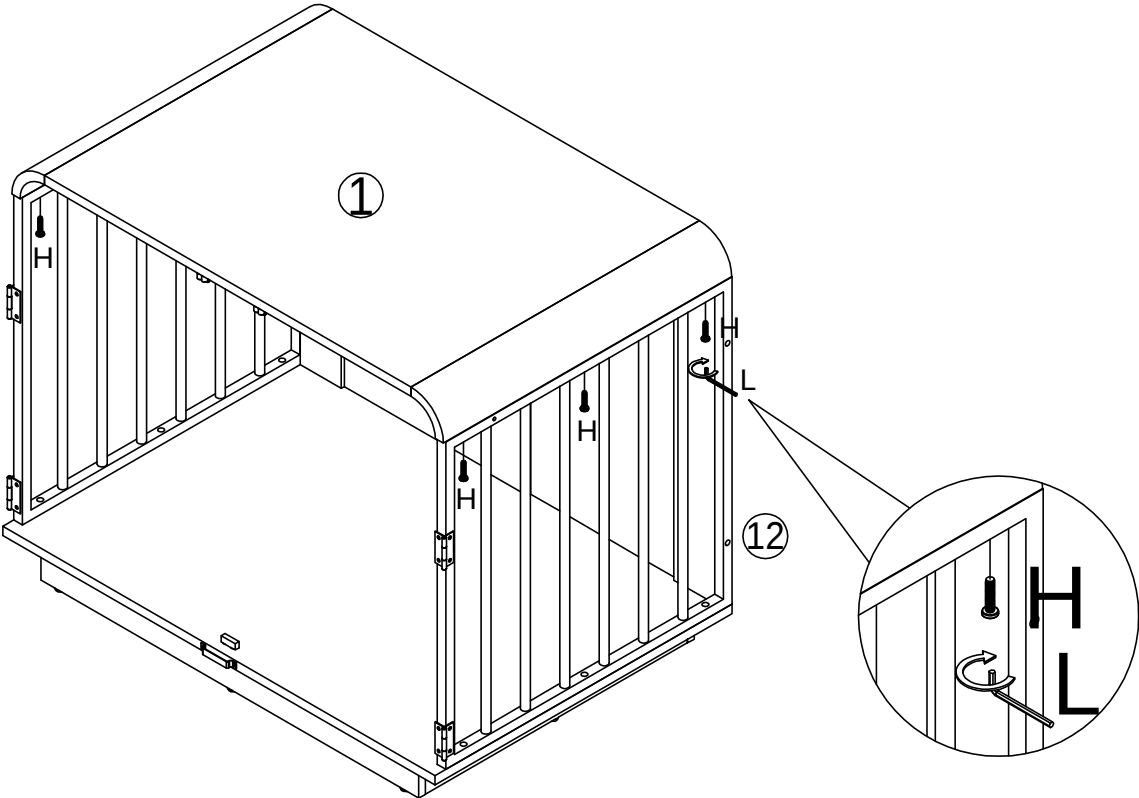


Step 14

D	×2
	

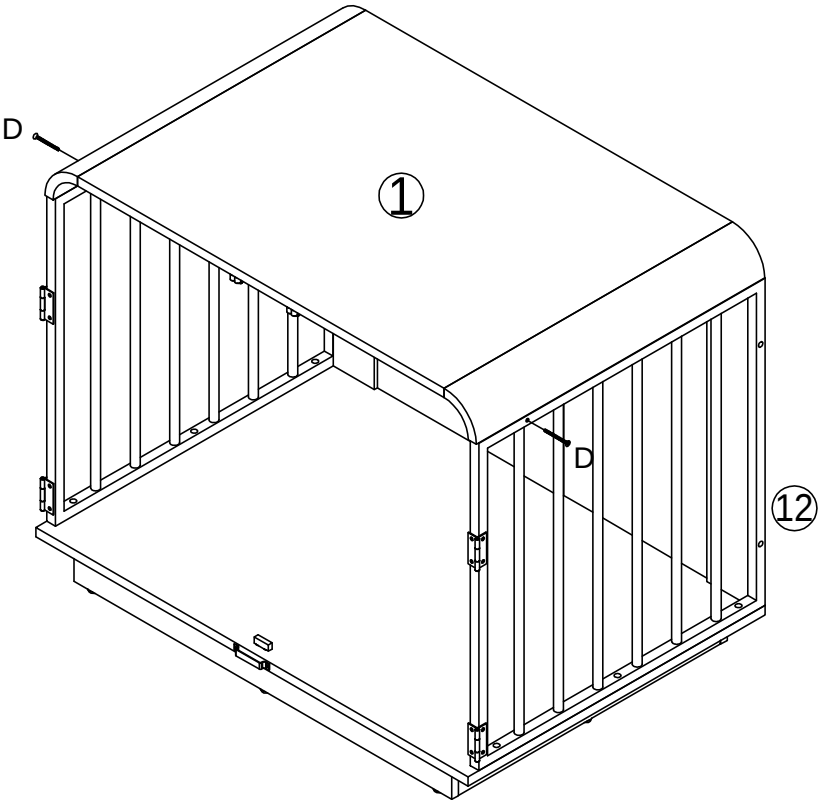

Step 15


K	×4	O	×2
			

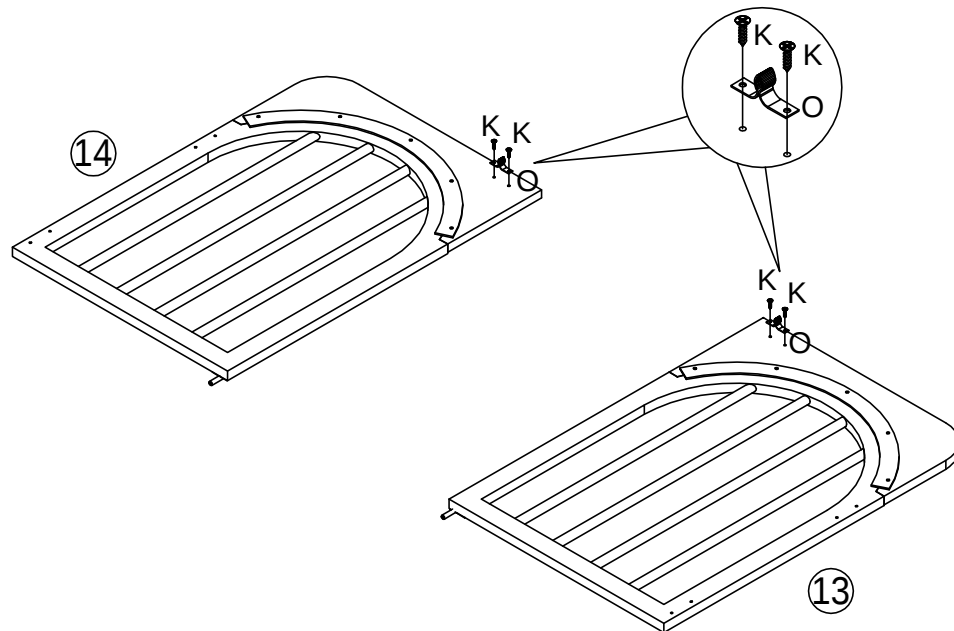

13	1PC	14	1PC
			



Step 16

Q	×4
	




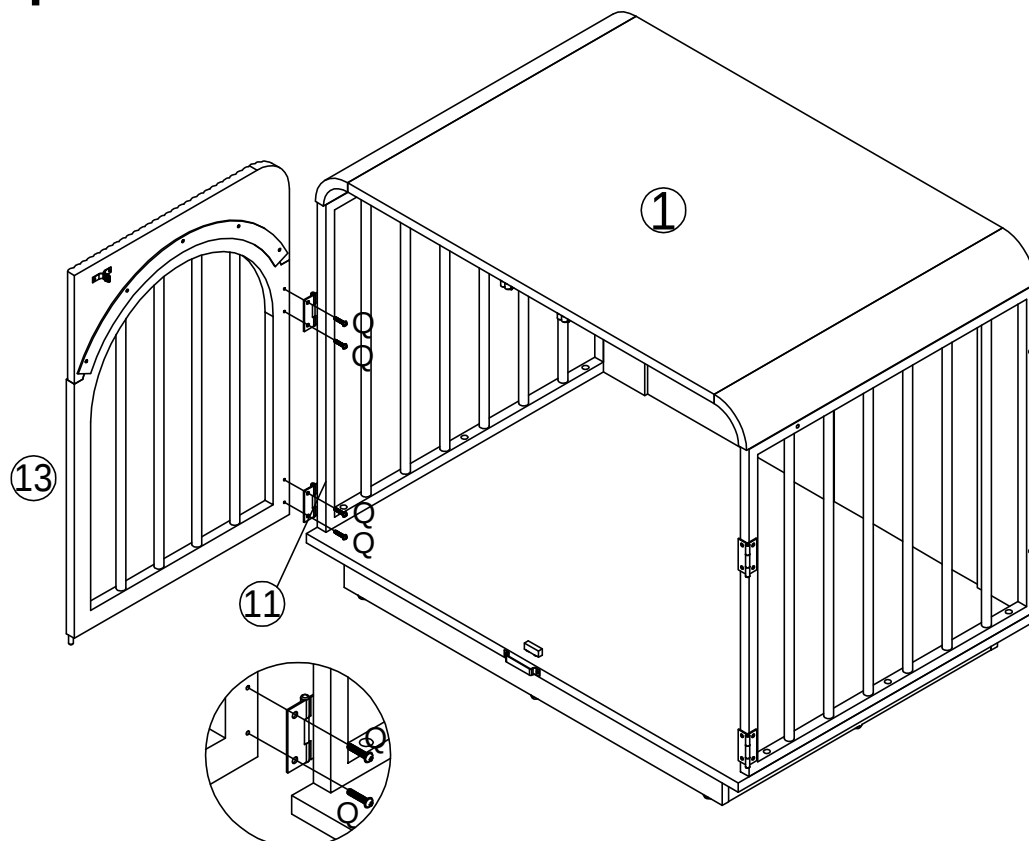


Two people working
can install it more easily.


Step 17

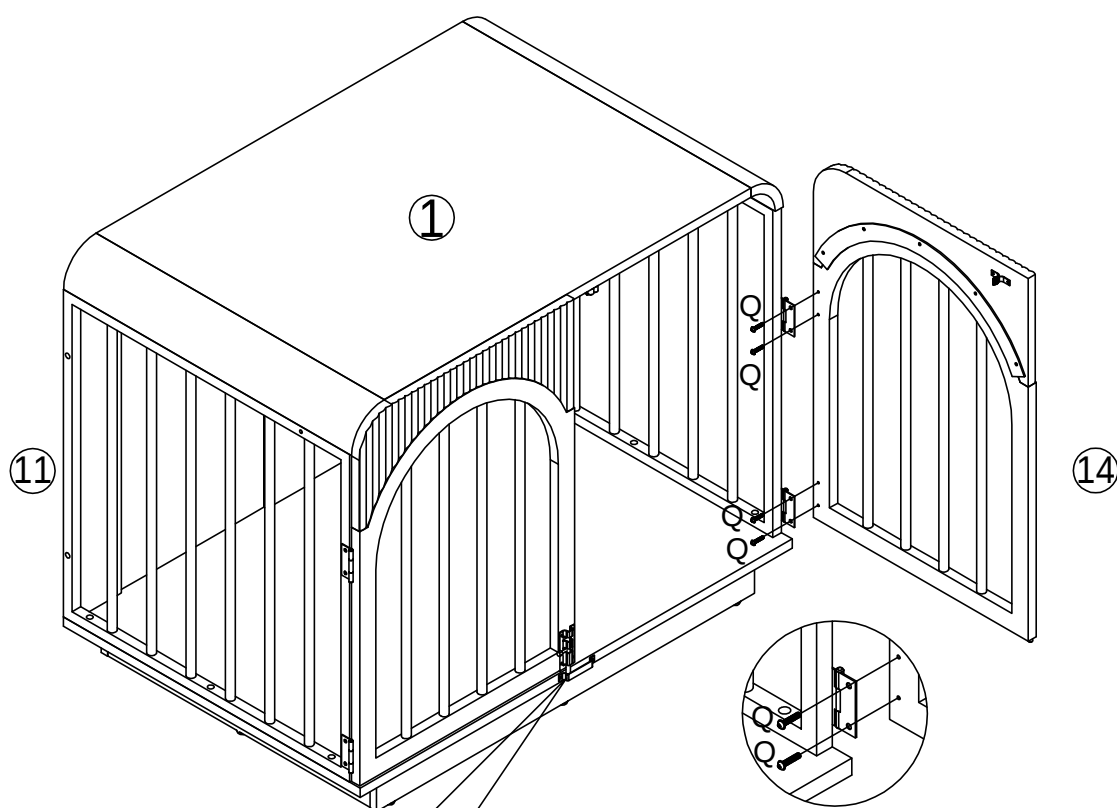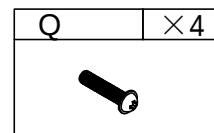


Two people working
can install it more easily.

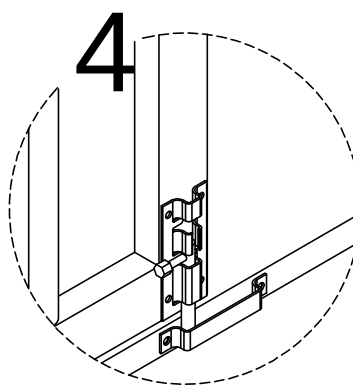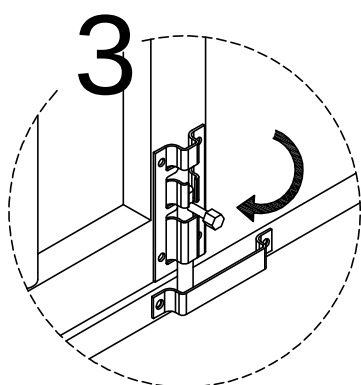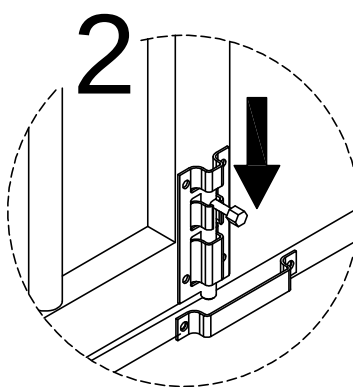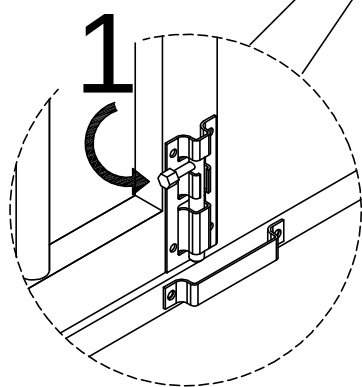


Step 18



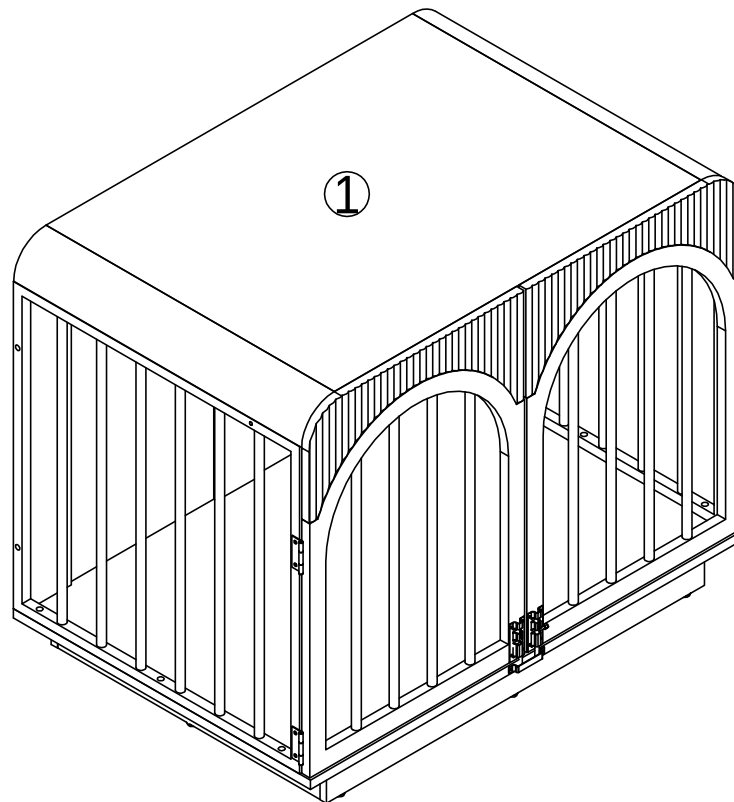


Step 19

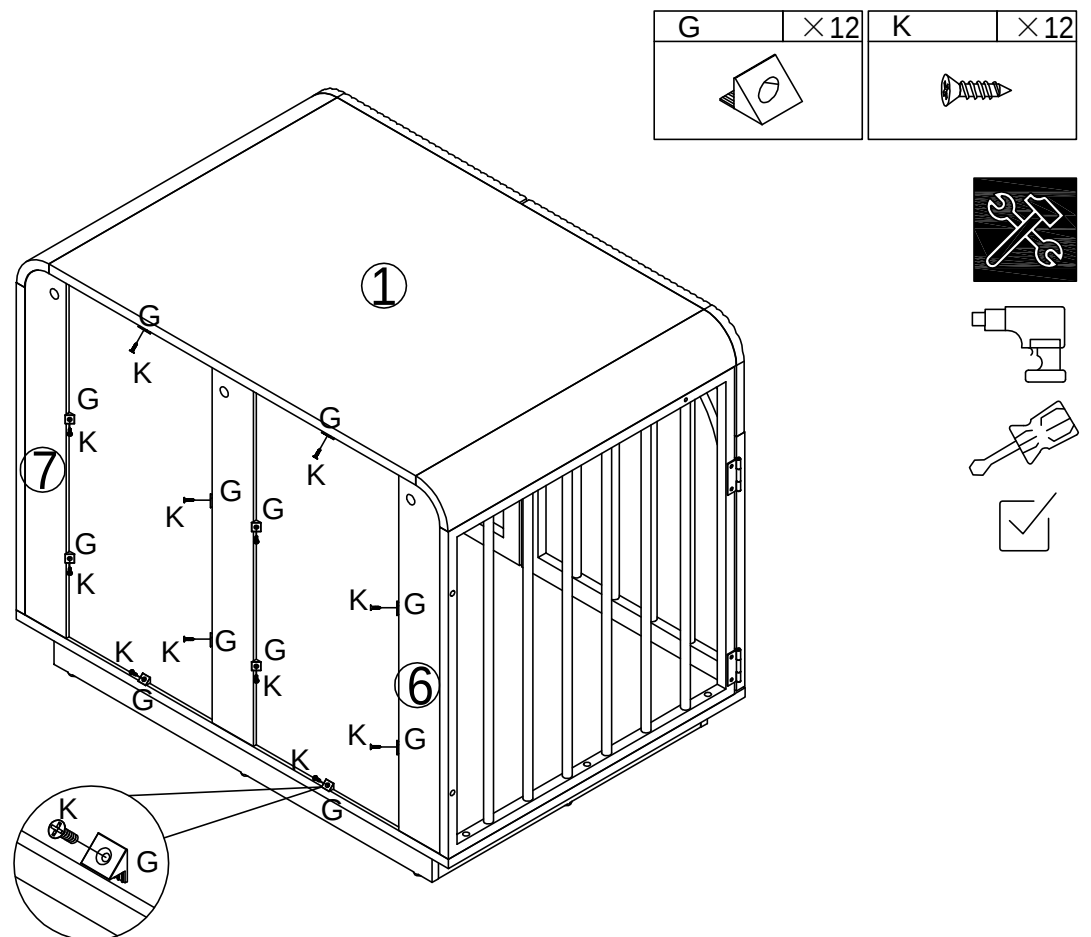

Step 20

P	×2	R	×2
			

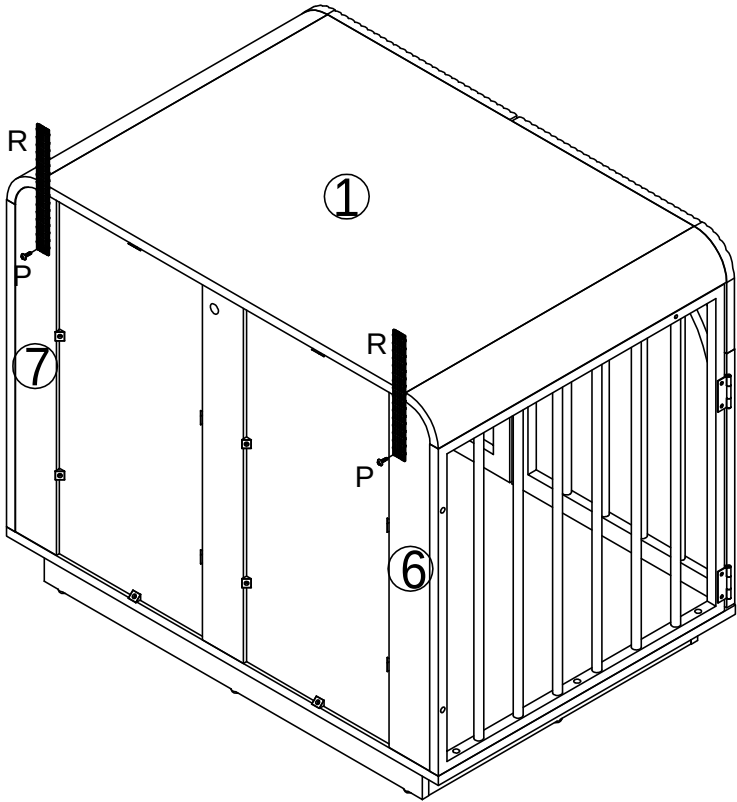

Step 21

D	×2	J	×2
