


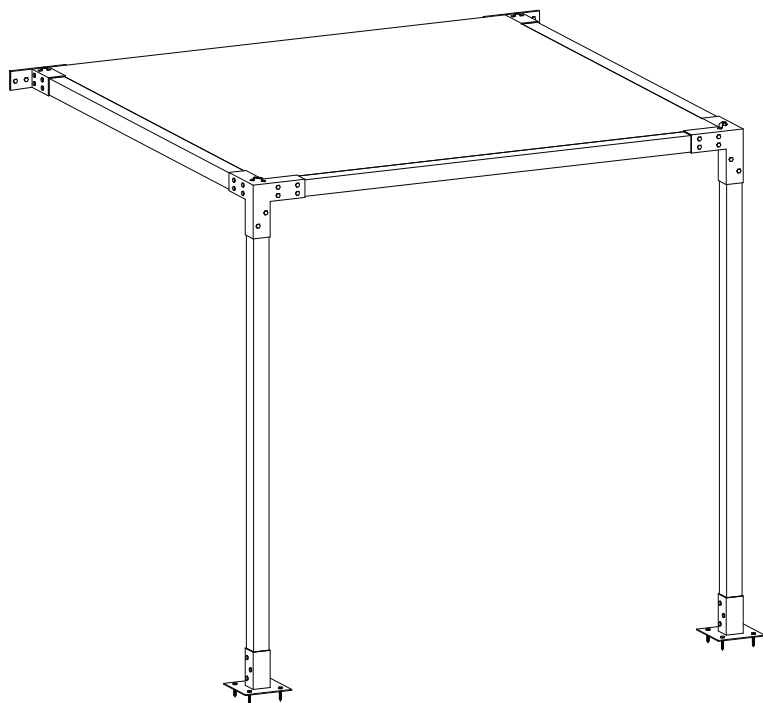

Wall Mount PERGOLA BRACKETS KIT

Assembly Instructions

Lumber Not included


PARTS LIST

NO.	PART	DESCRIPTION	QTY	IMAGE
1	A	3 Ways corner bracket	2	
2	B	Wall mount	2	
3	C	Post base	2	
4	D	Lag bolt M6x40 mm	96+2	
5	E	Lag bolts M8x80	8	
5	F	Expansion anchor	8	
6	G	Wood drill bit M4	1	
7	H	Wood drill bit M6	1	
8	I	Masonry drill bit M8	1	
9	J	Hex Socket 10 mm	1	

Required additional items:


- 5 pcs 4x4 lumber Actual size 3.5x3.5 inches.
Recommended to use vertical post as 8ft long.
- Top shade: Purchased separately and available at EZ Shades store:

Tools will make your life easier:

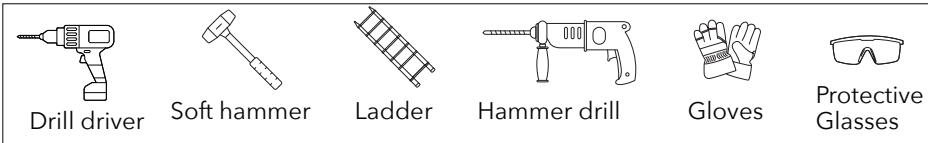


INSTALLATIONS


Step-1

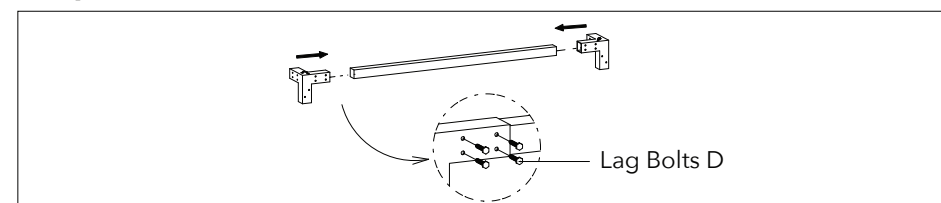


Step-2

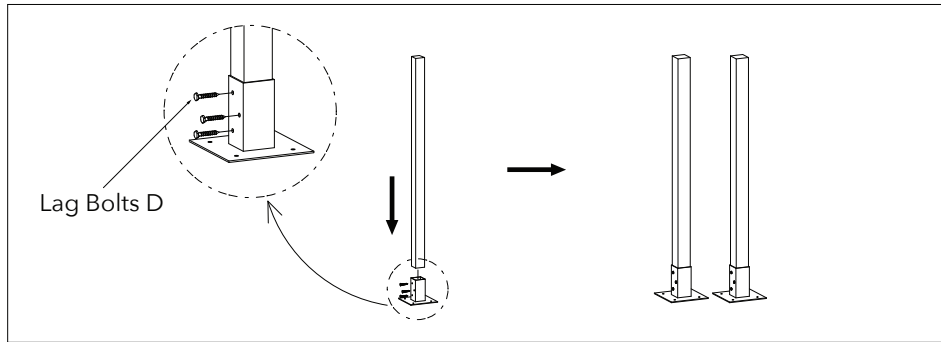


Step-3

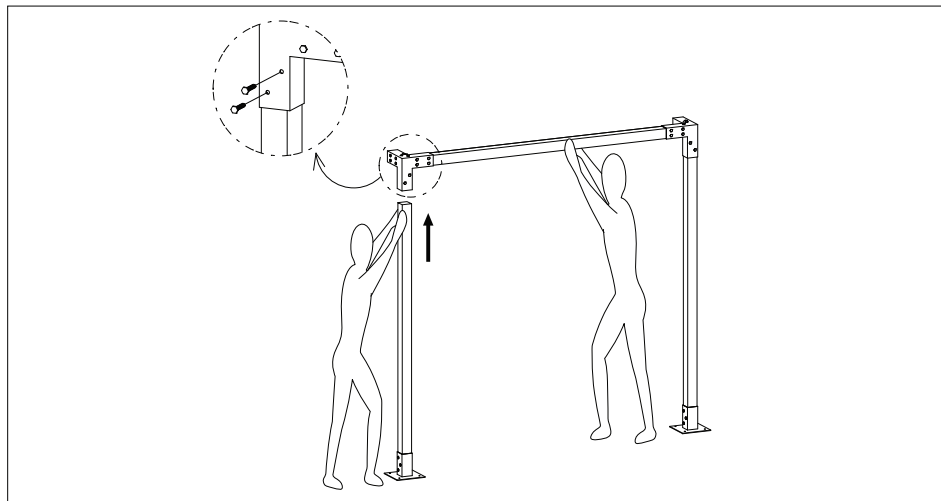

Step-4

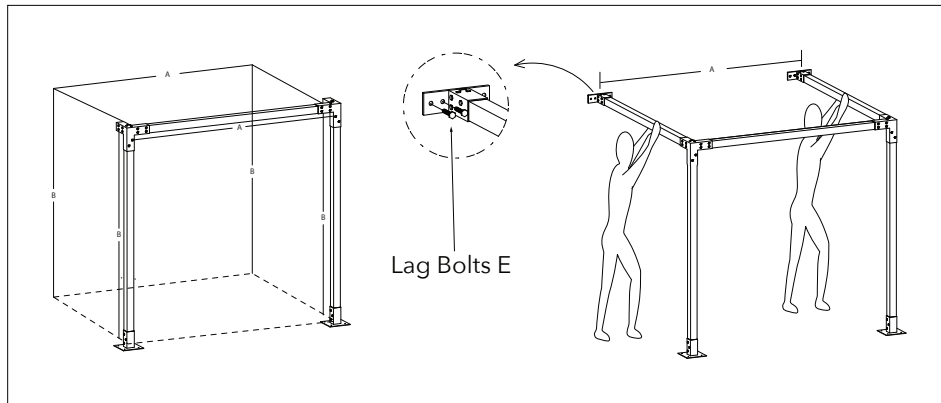

Step-5

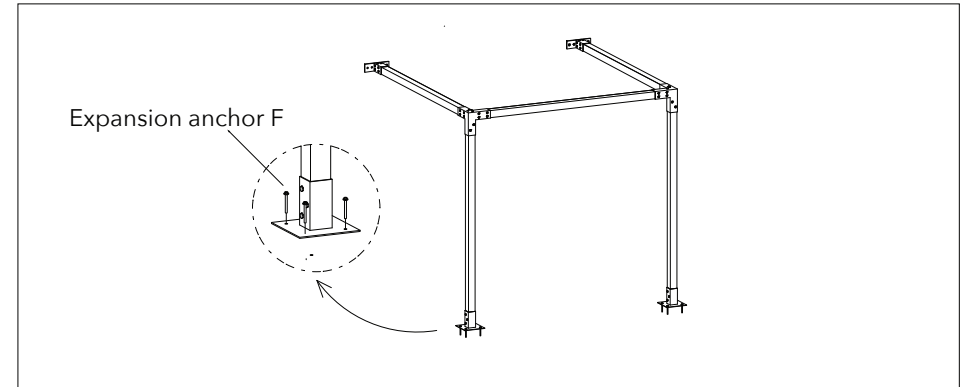

Step-6

