


# Assembly Instructions

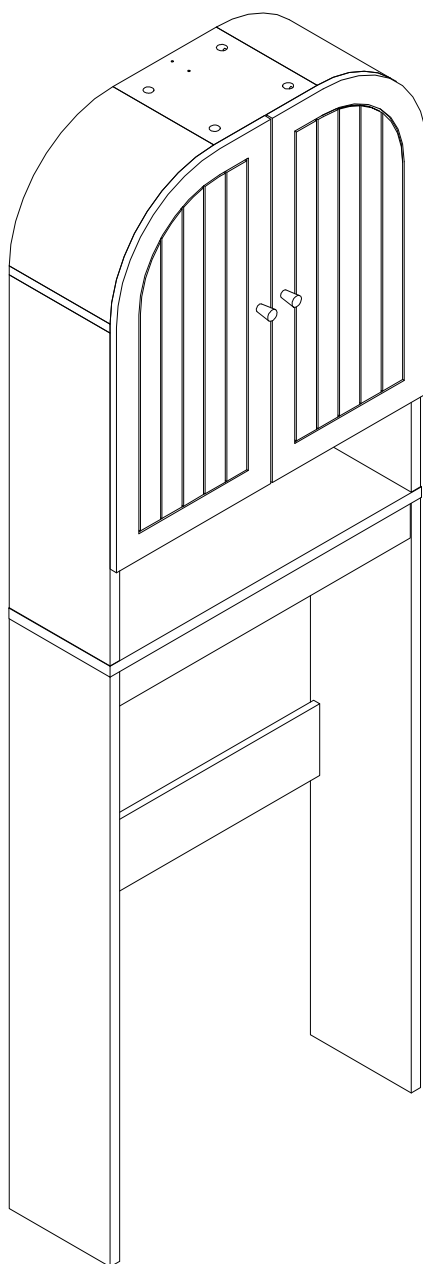


# Before Assembly

## Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

## QUICKFIT

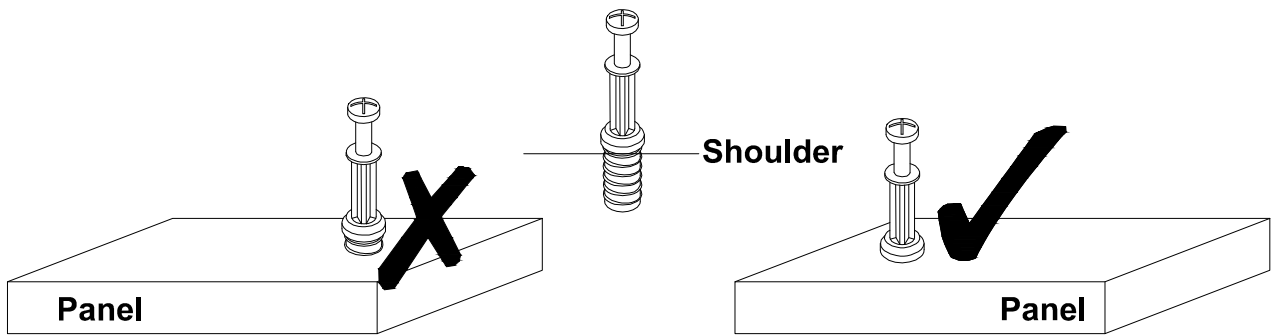

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


## CAM LOCK

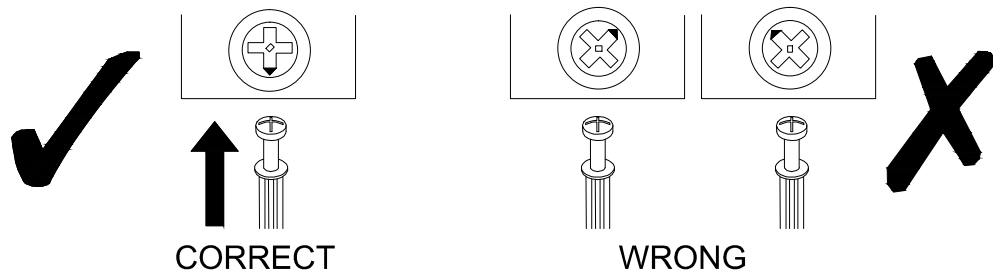

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT


Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.







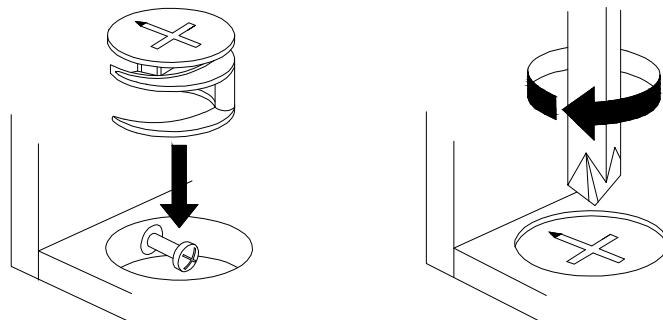


Turn cam lock clockwise to tighten.


# Product structure

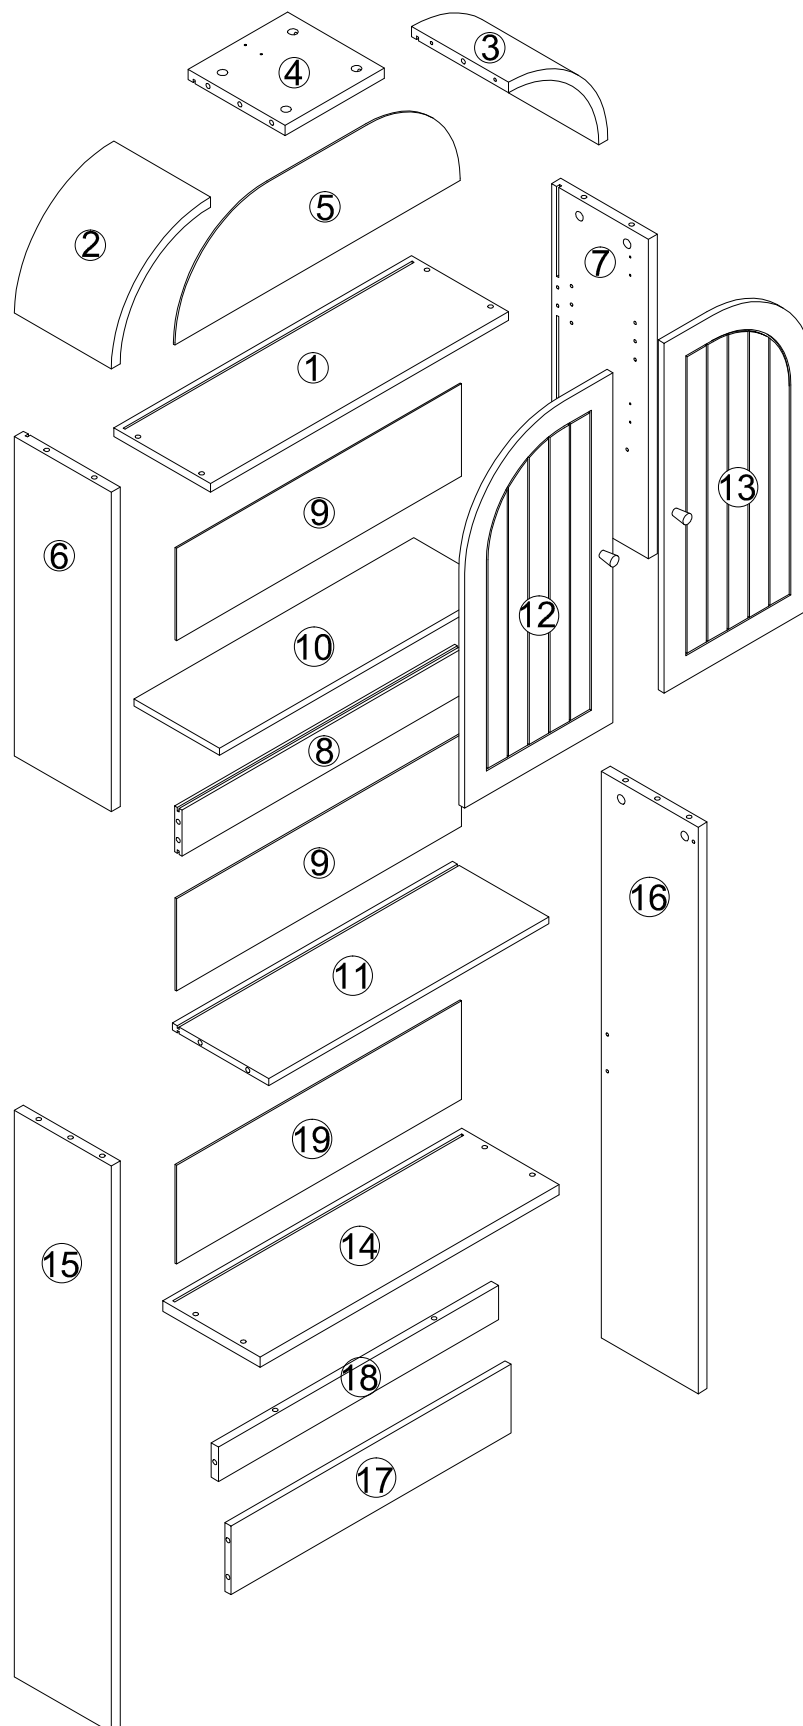

# Part List

|                                                                                                                                                  |                                                                                                                                                      |                                                                                                                                            |                                                                                                                                           |
|--------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| <b>No. A</b><br>Quantity:28 Pcs<br>Cam Lock Dowel<br>8*28mm<br> | <b>No. B</b><br>Quantity:28 Pcs<br>Cam<br>φ15<br>                   | <b>No. C</b><br>Quantity:28 Pcs<br>Sticker<br>Ø20<br>    | <b>No. D</b><br>Quantity:4 Pcs<br>Dowel<br>8*30mm<br>  |
| <b>No. E</b><br>Quantity:4 Pcs<br>Straight Bend Door Hinge<br>  | <b>No. F</b><br>Quantity:24 Pcs<br>Screw<br>M3.5*12mm<br>           | <b>No. G</b><br>Quantity:2 Pcs<br>Handle<br>Ø20*23mm<br> | <b>No. H</b><br>Quantity:2 Pcs<br>Screw<br>M4*18mm<br> |
| <b>No. I</b><br>Quantity:4 Pcs<br>Foot Pad<br>Ø15<br>         | <b>No. J</b><br>Quantity:4 Pcs<br>Shelf Support<br>M5*15mm<br>    | <b>No. K</b><br>Quantity:8 Pcs<br>Screw<br>M6*40mm<br> | <b>No. L</b><br>Quantity:1 Pc<br>Allen Key<br>4#<br> |
| <b>No. M</b><br>Quantity:15 Sets<br>Plastic Wedge<br>         | <b>No. N</b><br>Quantity:1 Sets<br>Hardware anti-falling belt<br> |                                                                                                                                            |                                                                                                                                           |


# STEP 1

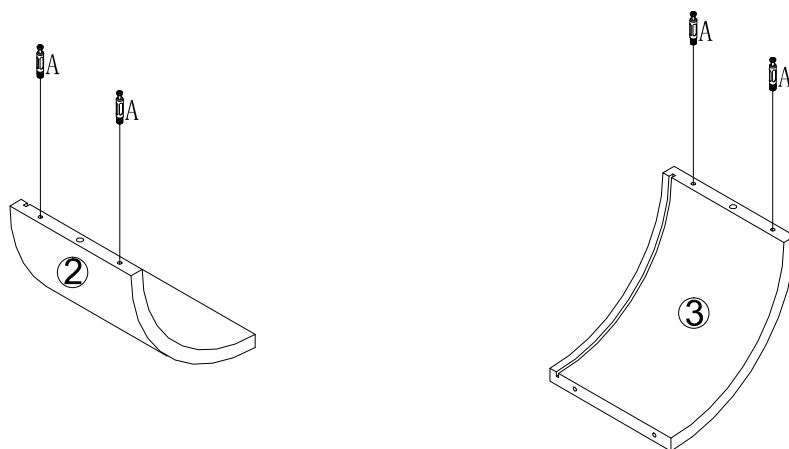

No. A  
Quantity: 4 Pcs  
8\*28 mm



# STEP 2

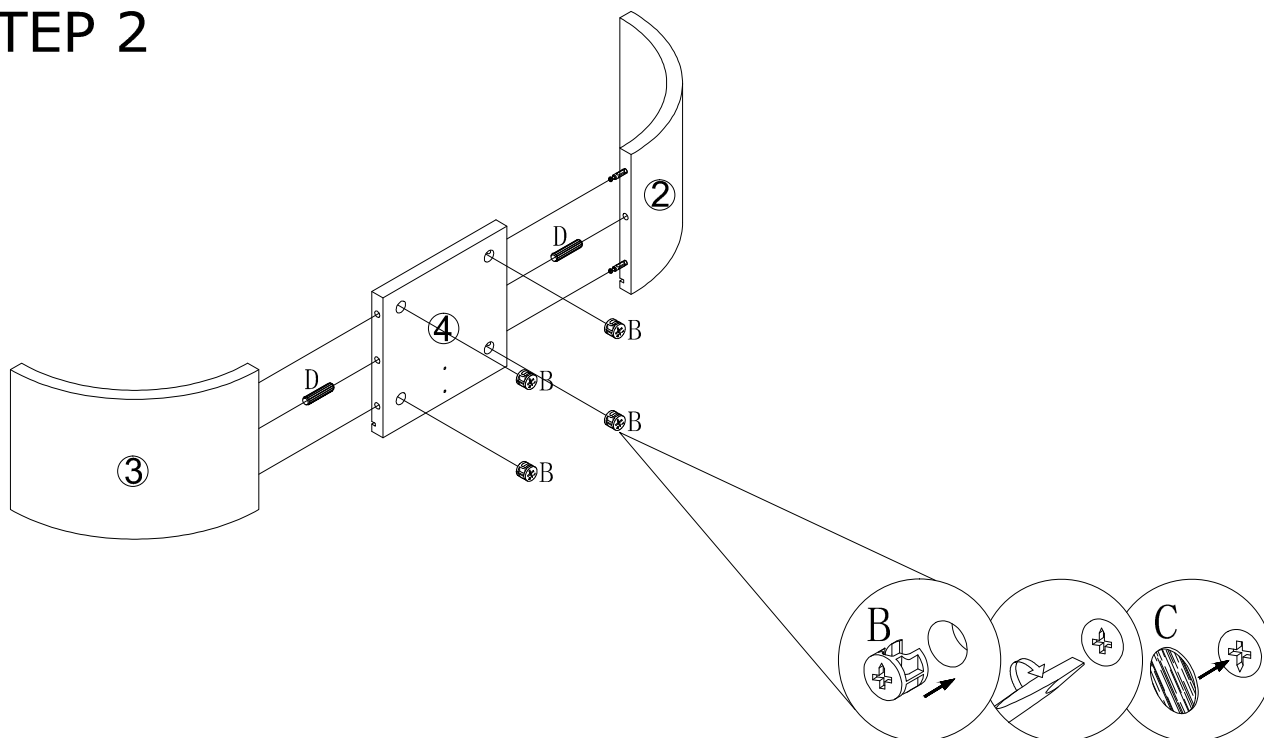


No. B  
Quantity: 4 Pcs  
Ø15




No. C  
Quantity: 4 Pcs  
Ø20




No. D  
Quantity: 2 Pcs  
8\*30mm




## STEP 4

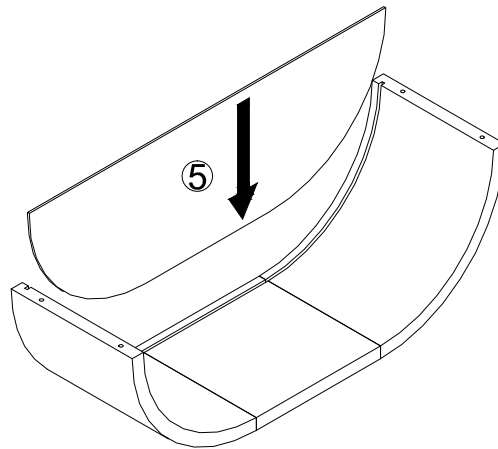


## STEP 4

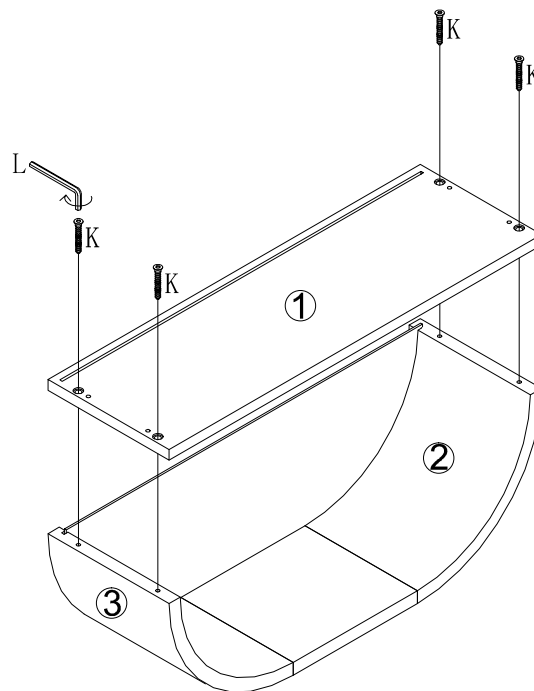


## STEP 5

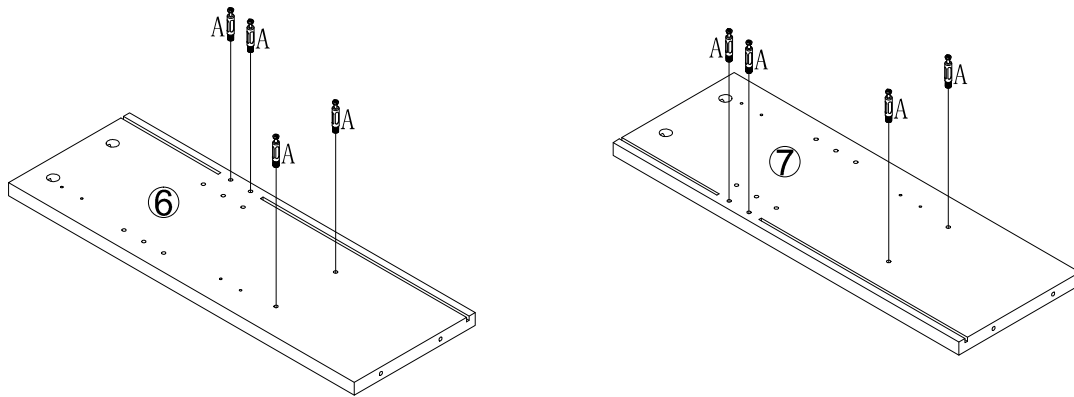

No. A  
Quantity: 8 Pcs  
8\*28 mm



## STEP 6

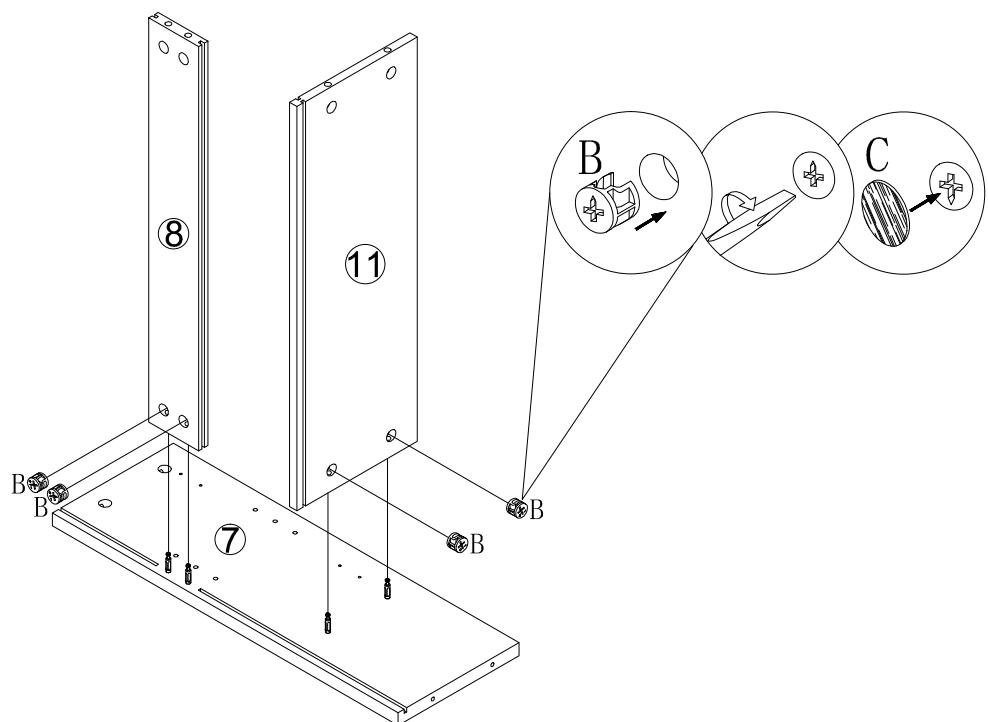


No. B  
Quantity: 4 Pcs  
Ø15




No. C  
Quantity: 4 Pcs  
Ø20



## STEP 7

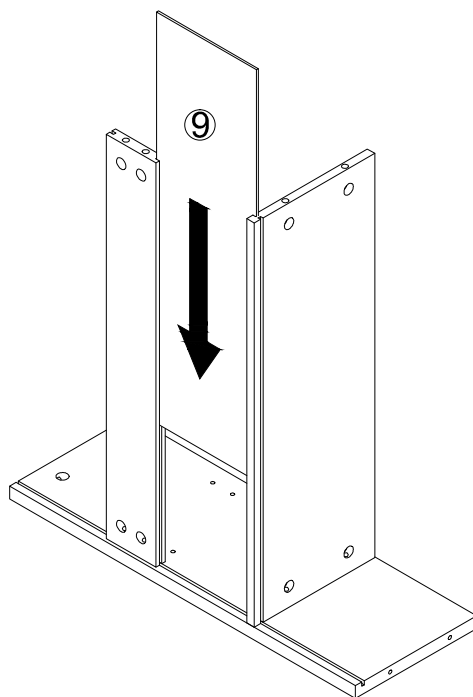

## STEP 8

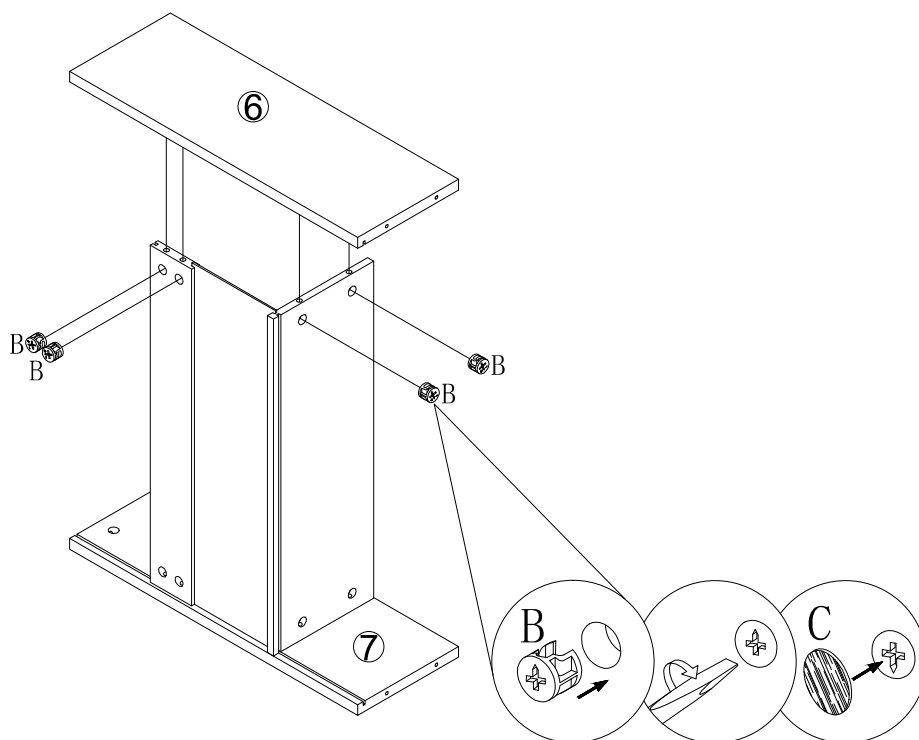


No. B  
Quantity: 4 Pcs  
Ø15




No. C  
Quantity: 4 Pcs  
Ø20




## STEP 9

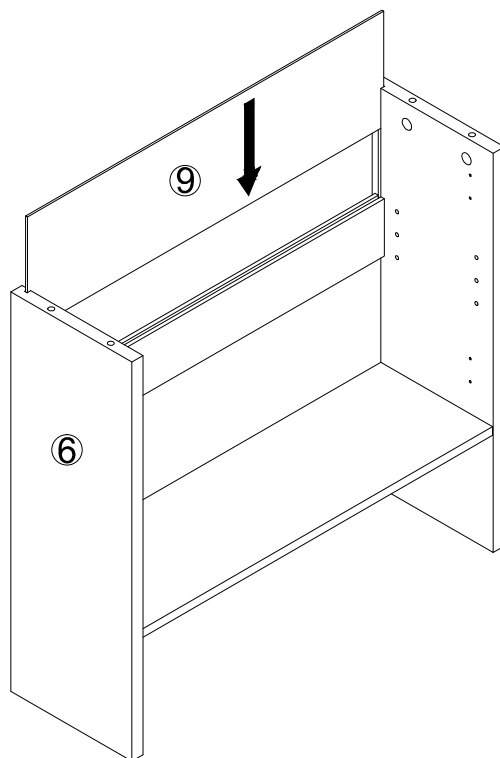

## STEP 10

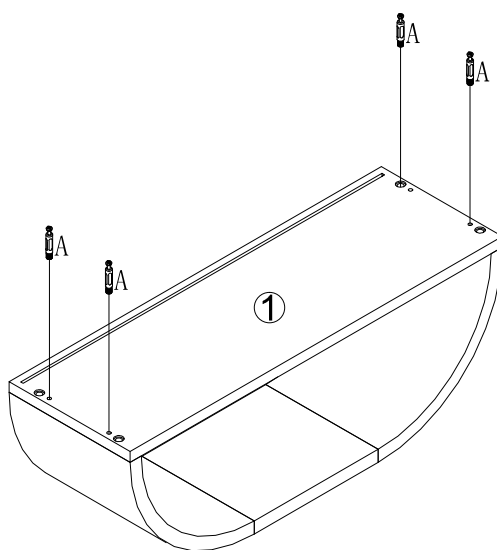

No. A  
Quantity: 4 Pcs  
8\*28 mm




## STEP 11


No. B  
Quantity: 4 Pcs  
Ø15



No. C  
Quantity: 4 Pcs  
Ø20

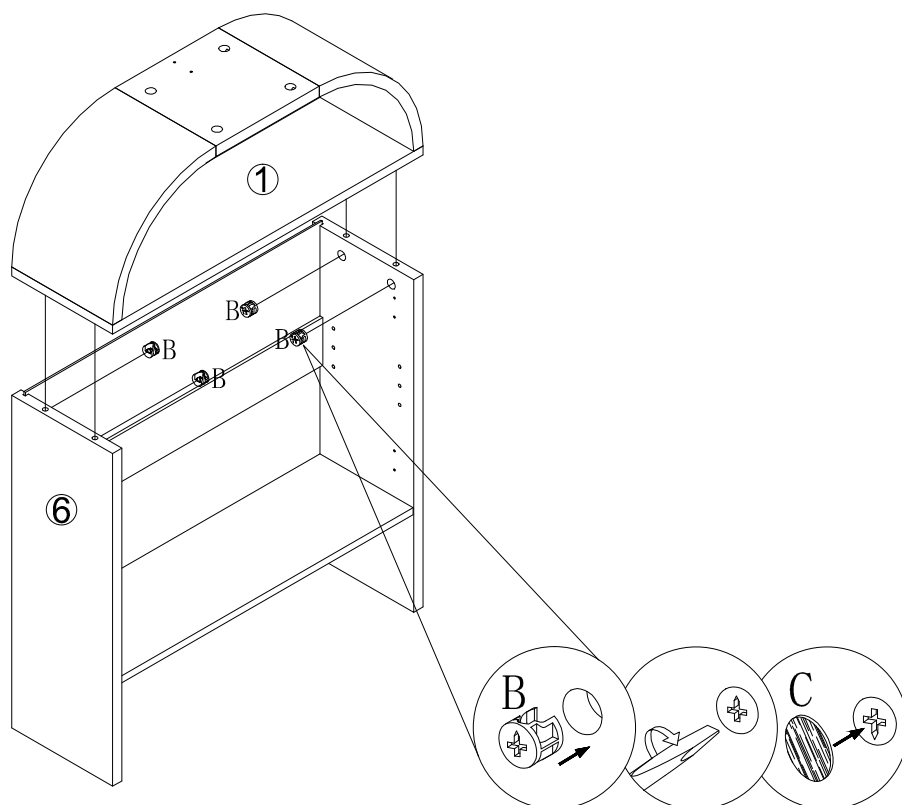

## STEP 12

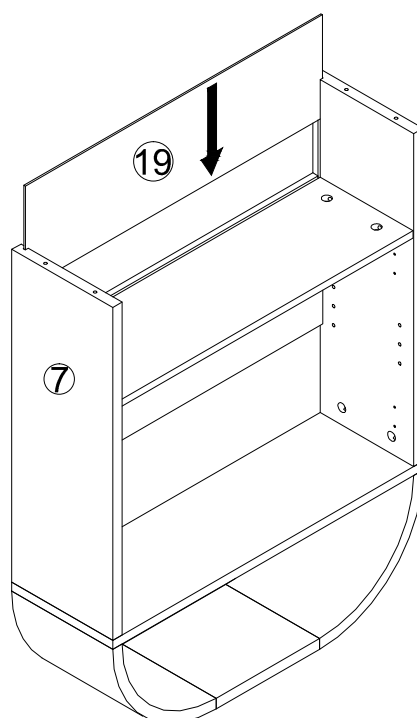


## STEP 13


No. K  
Quantity: 4 Pcs  
M6\*40mm




No. L  
Quantity: 1 Pc  
4#

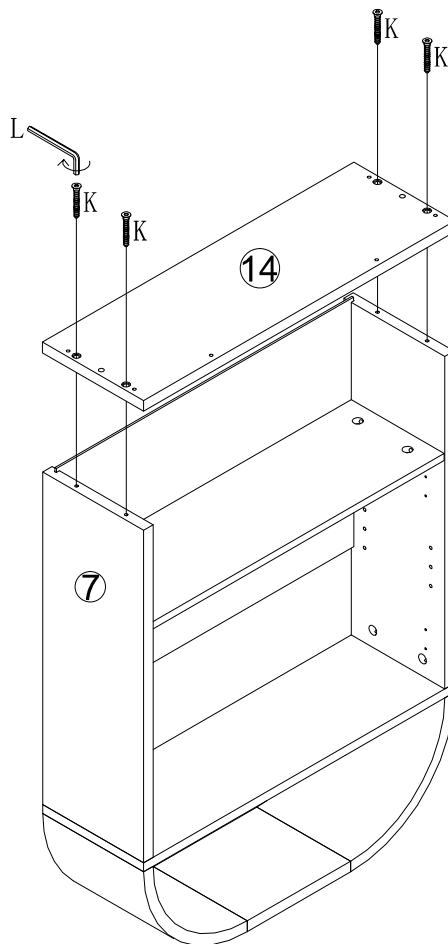

## STEP 14

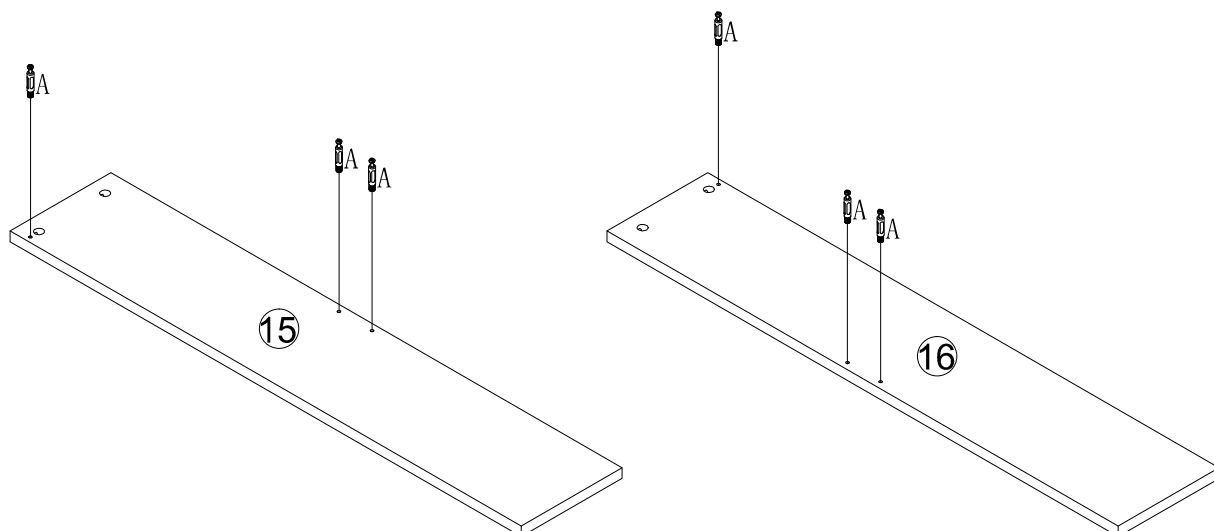

No. A  
Quantity: 6 Pcs  
8\*28 mm




## STEP 15

No. B  
Quantity: 3 Pcs  
Ø15



No. C  
Quantity: 3 Pcs  
Ø20

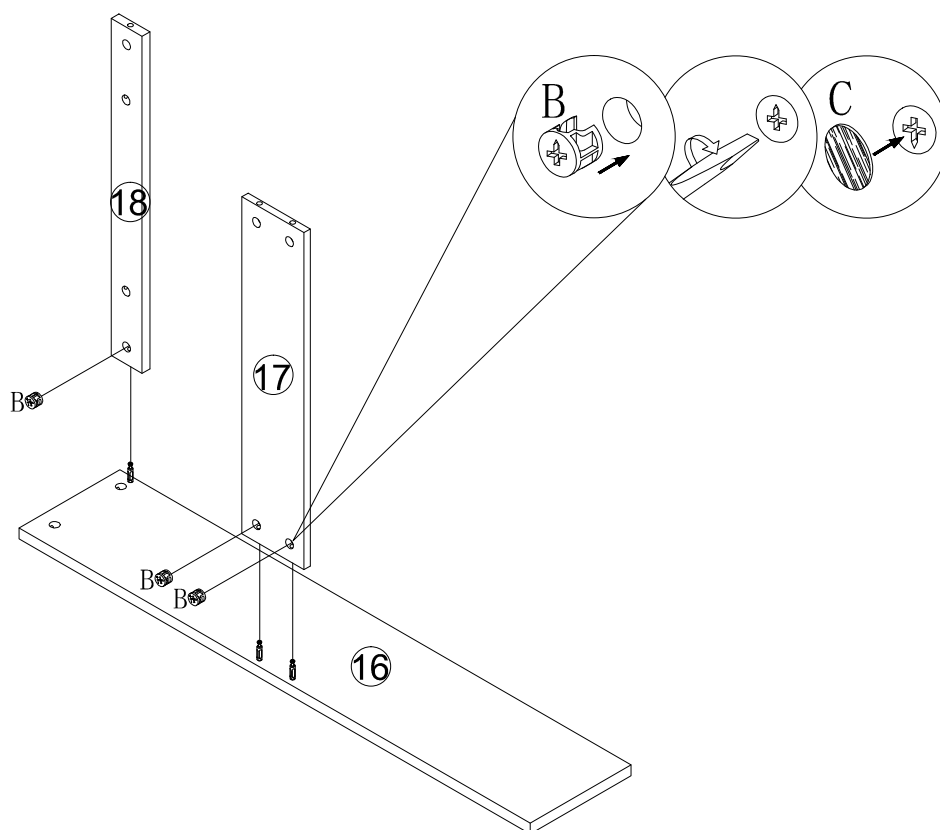


## STEP 16


No. B  
Quantity: 3 Pcs  
Ø15



No. C  
Quantity: 3 Pcs  
Ø20

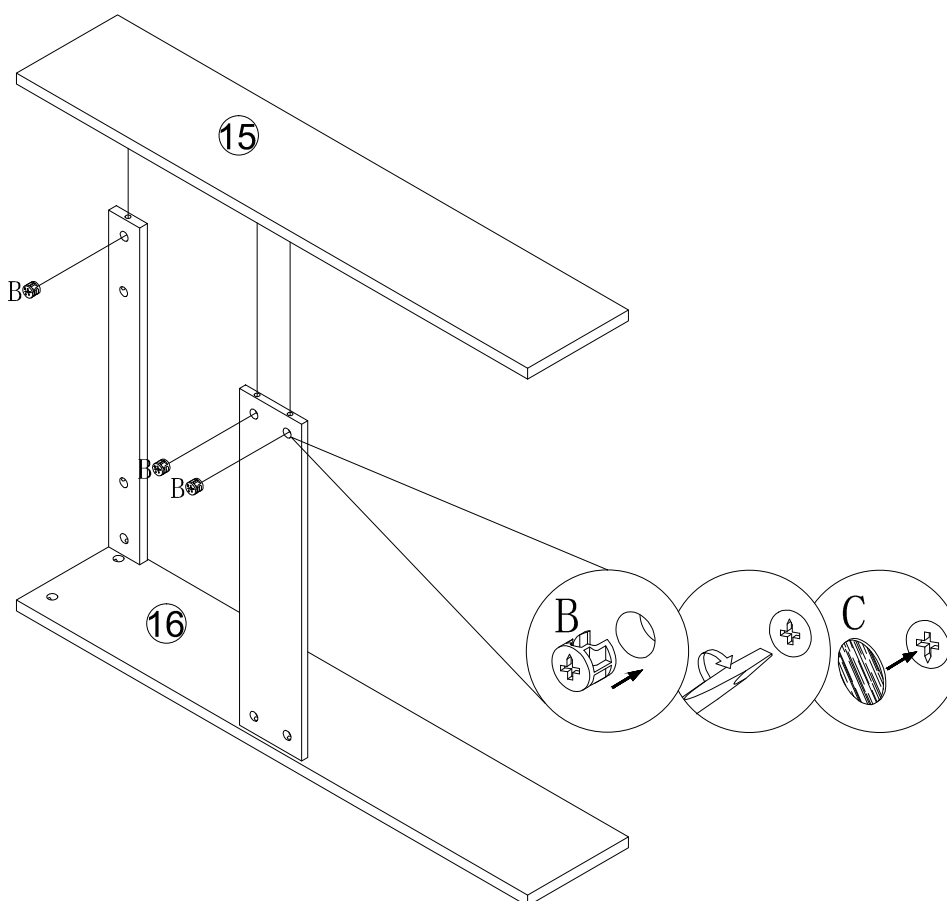


## STEP 17

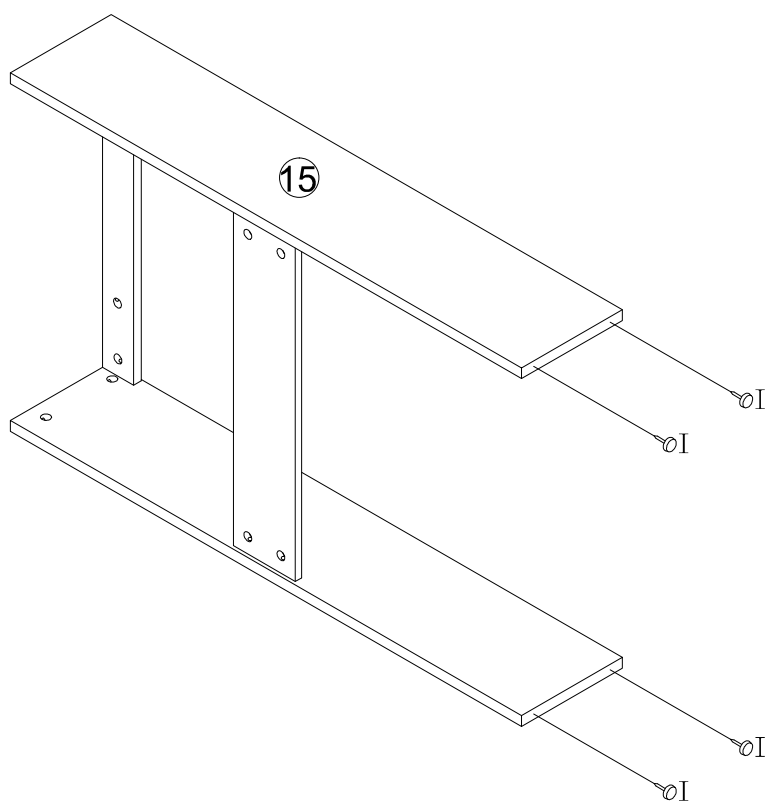


No. I  
Quantity: 4 Pcs  
Ø15



## STEP 18

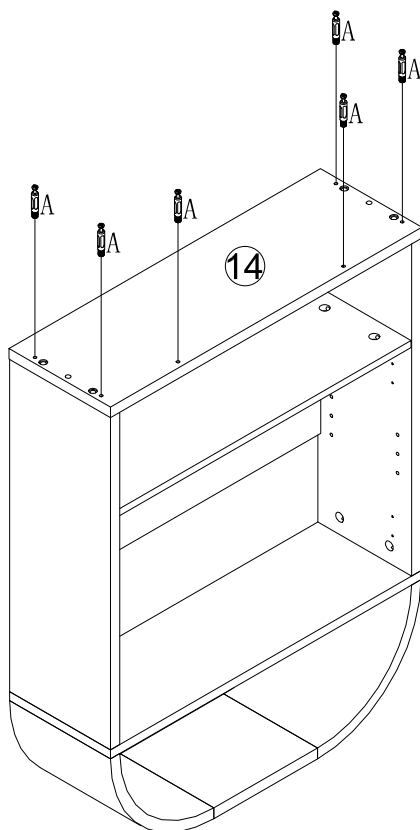

No. A  
Quantity: 6 Pcs  
8\*28 mm



## STEP 19



No. B  
Quantity: 6 Pcs  
Ø15



No. C  
Quantity: 6 Pcs  
Ø20




No. D  
Quantity: 2 Pcs  
8\*30mm

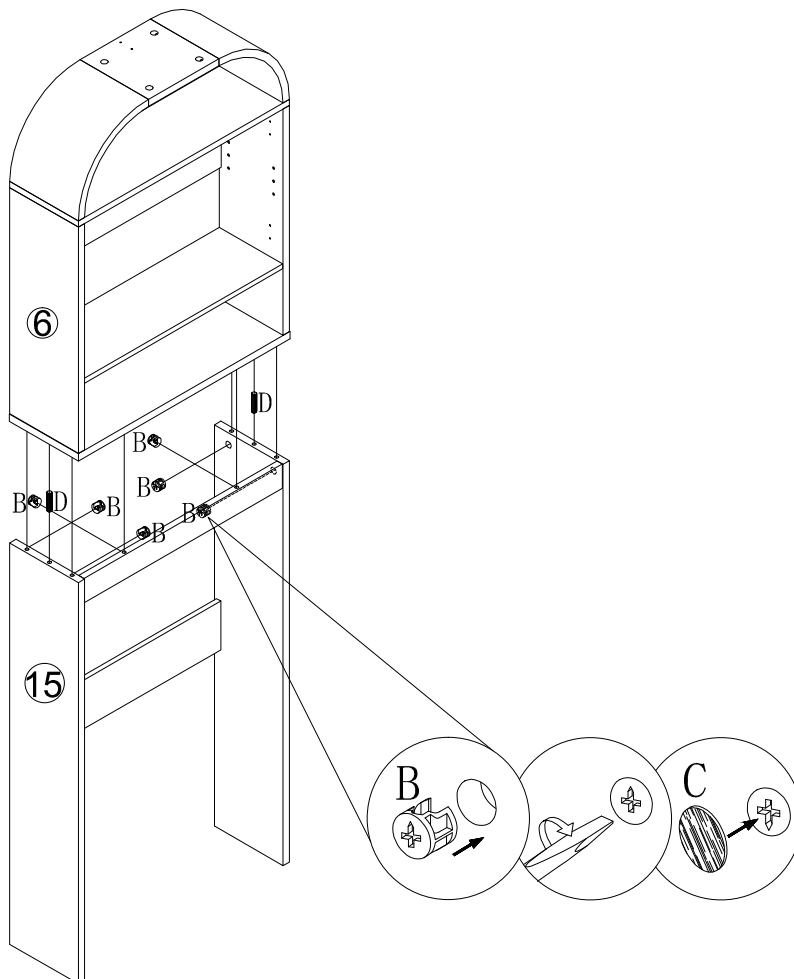


## STEP 20

No. J  
Quantity: 4 Pcs  
M5\*15mm

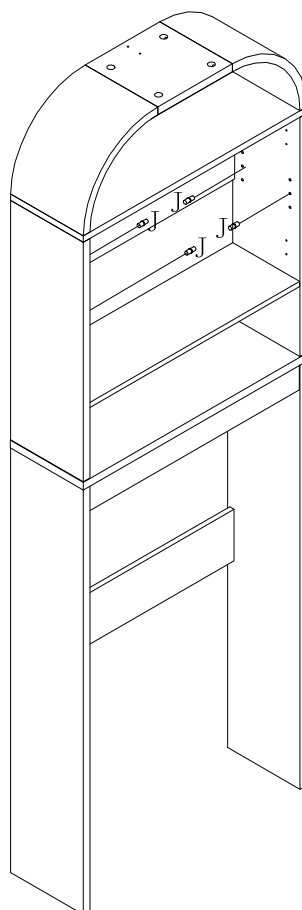


## STEP 21

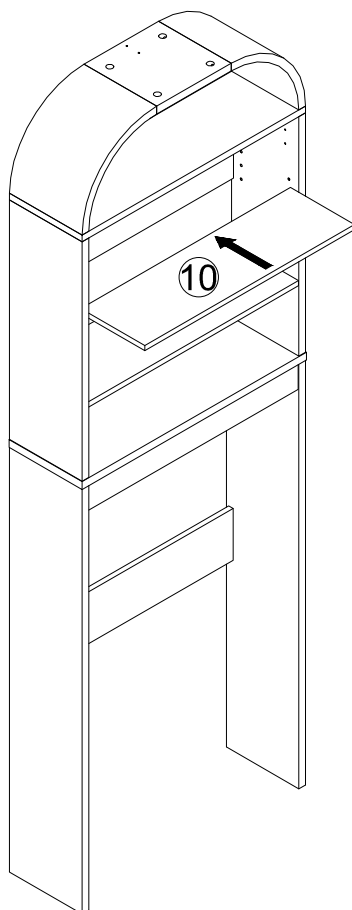

## STEP 22

No. E  
Quantity: 4 Pcs




No. F  
Quantity: 8 Pcs  
M3.5\*12mm




No. G  
Quantity: 2 Pcs




No. H  
Quantity: 2 Pcs  
M4\*18mm

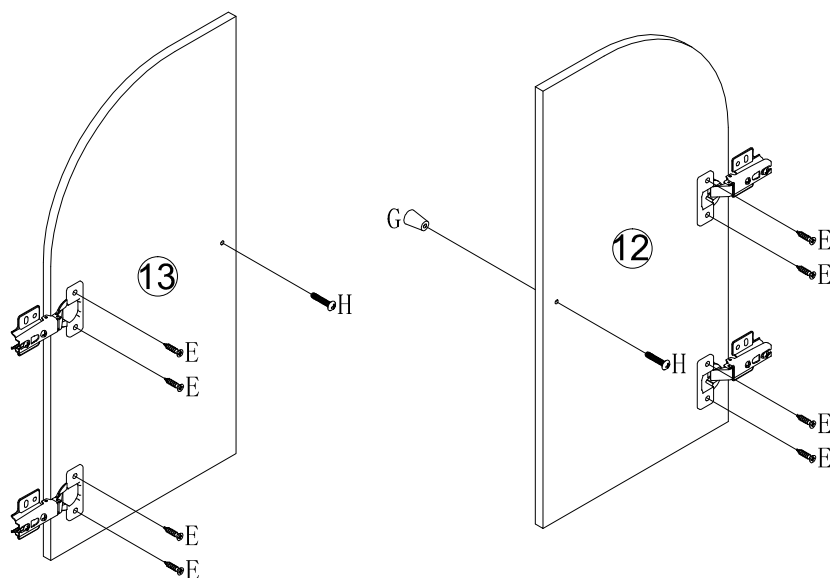




## STEP 23

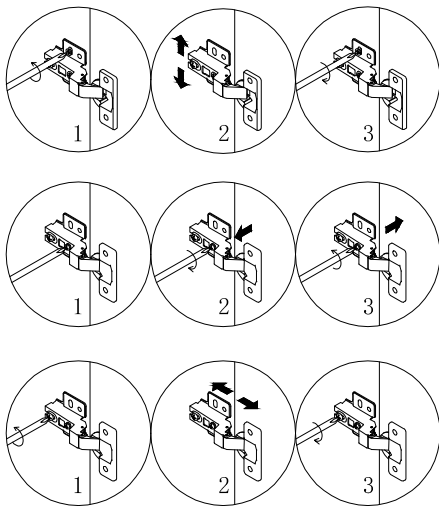

No. F  
Quantity: 16 Pcs  
M3.5\*12mm


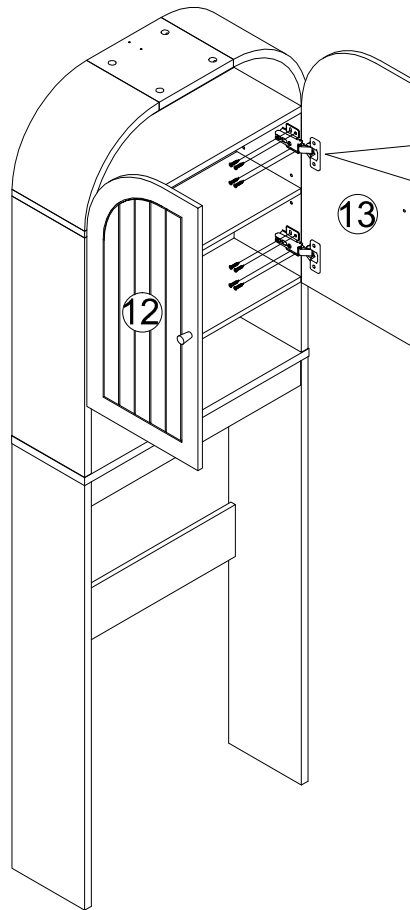


First align the pilot holes and tighten the two screws inside.

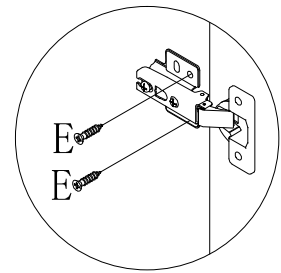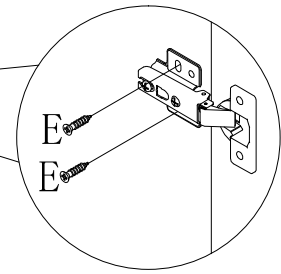

After adjusting the gap of the cabinet door evenly, then fix the two screws on the front side.

## STEP 24





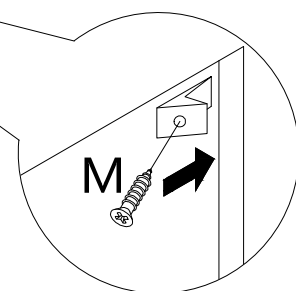
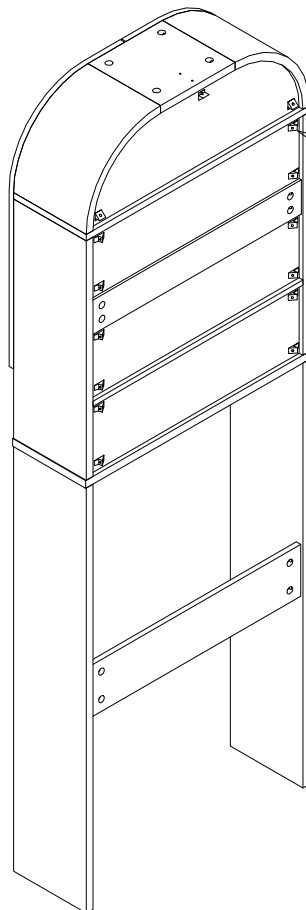


Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.


No. M  
Quantity: 15 Sets



## STEP 25

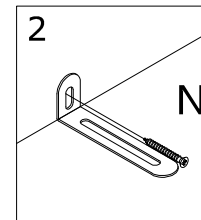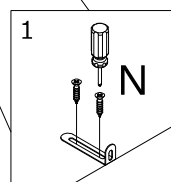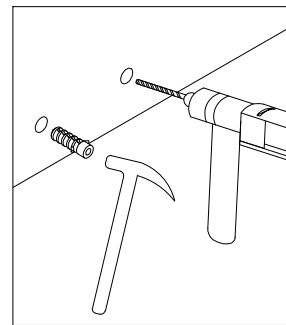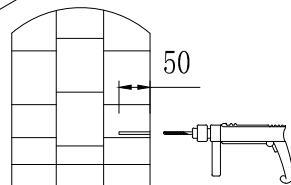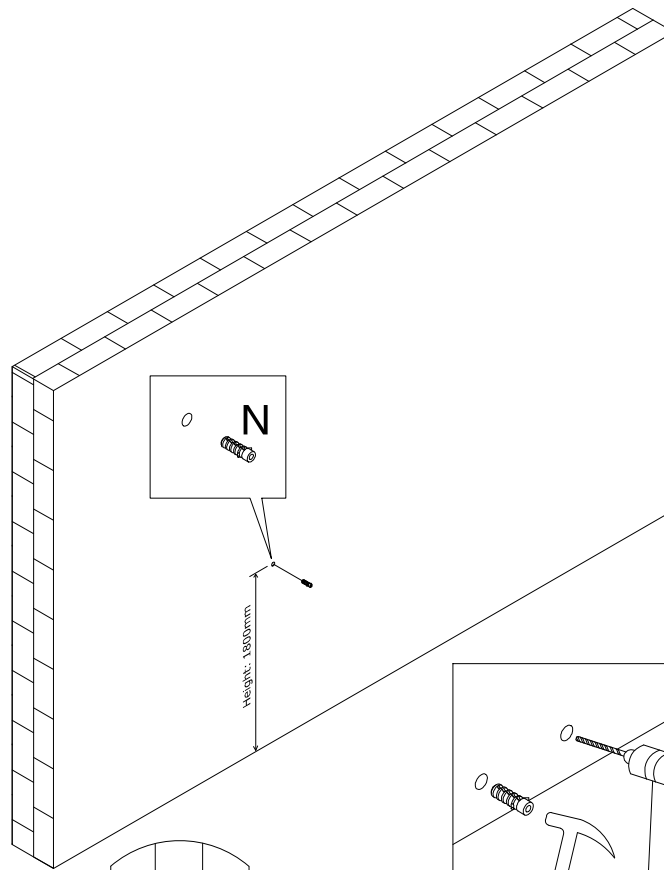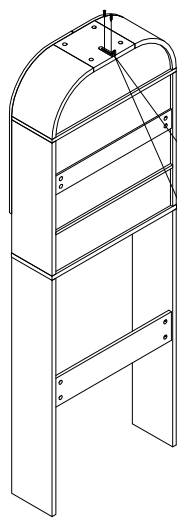

No. N  
Quantity:1 Sets

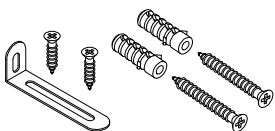

**Note:**  
Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.