


Assembly Instructions

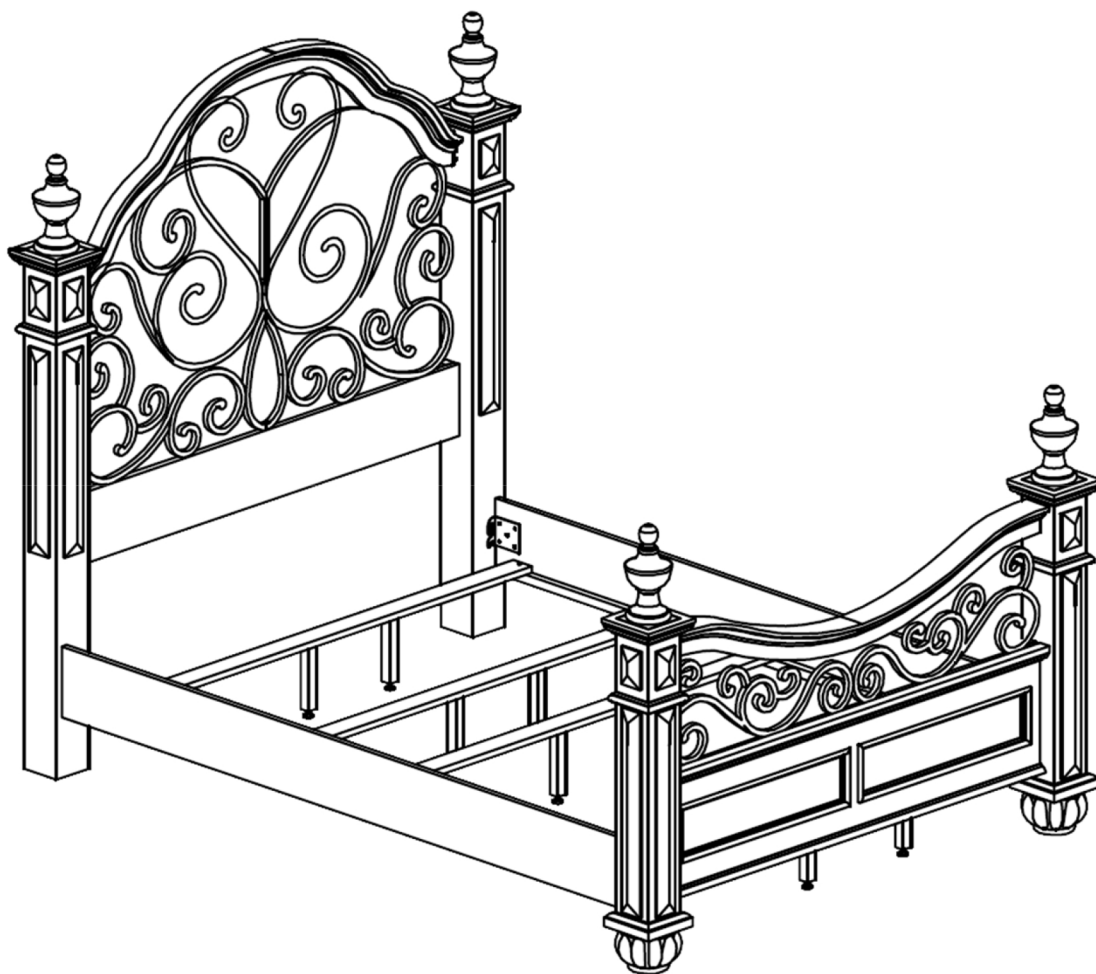

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.


EASY



DIFFICULT

Tools Required for Assembly:

Allen Wrench

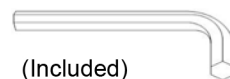

(Included)

Phillips Screwdriver



(Not Included)




2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

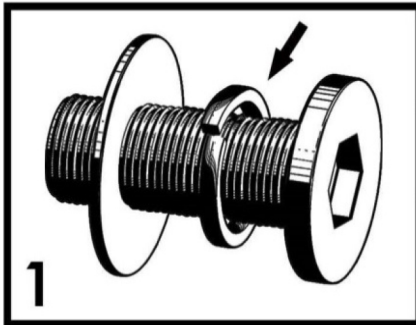


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

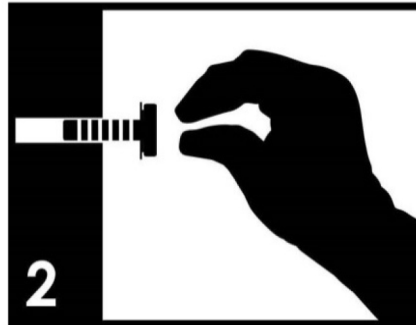


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

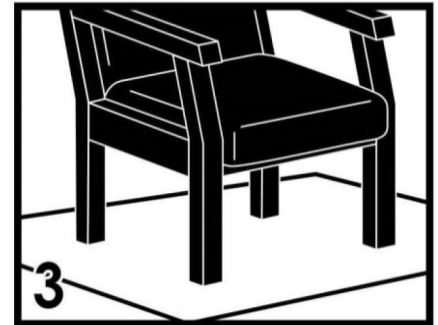


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

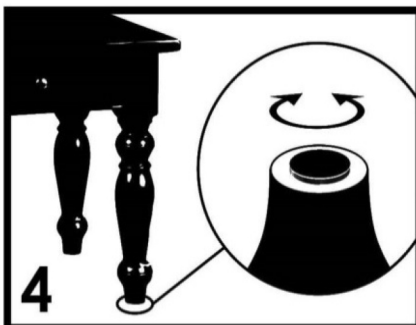

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

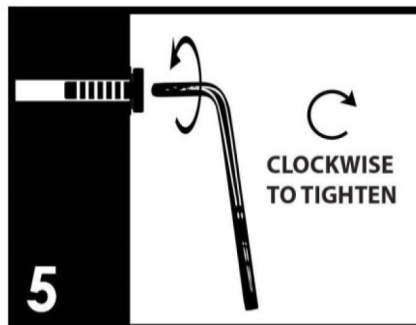

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

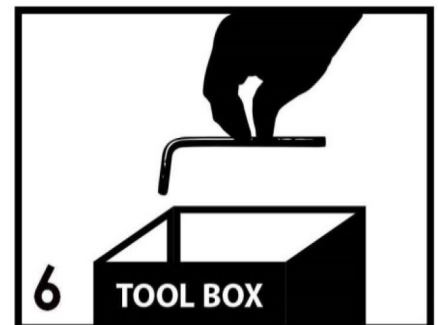

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Before you begin, please read Page 2 of
"Assembly and Care Advice".


And remember, do not tighten until each step
is completed or instructed.

MD

Parts List



#1 x 1 pc
Left Headboard Post



#2 x 1 pc
Right Headboard Post




#3 x 1 pc
Headboard



#4 x 1 pc
Footboard



#5 x 2 pcs
Footboard Leg



#6 x 2 pcs
Side Rail



#7 x 4 pcs
Finial



#8 x 4 pcs
Slat



#9 x 8 pcs
Slat Support Leg

Hardware List



#A x 6 pcs
Bolt 1/4"x1-3/4"




#B x 14 pcs
Lock Washer




#C x 14 pcs
Flat Washer




#D x 1 pc
Allen Wrench




#E x 8 pcs
Screw 1-1/4"




#F x 4 pcs
Screw 5/8"



#G x 8 pcs
Bolt 5/16"x1"

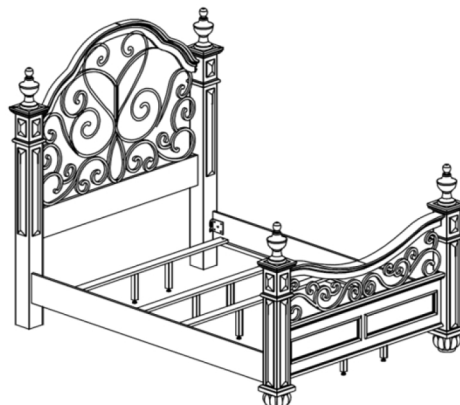


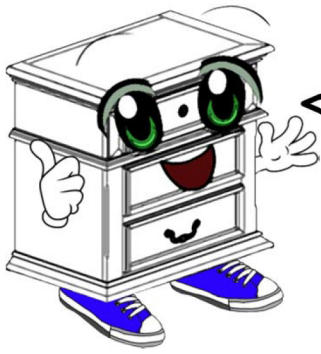

Due to the size and/or weight of this product, it is highly recommended that the assembly should be done near the area of its intended location. Make sure you have enough space to move around during the assembly. ALWAYS have at least two people to help with transporting and assembling of the product and to avoid any potential injury and/or damage.




Align the threaded end of the footboard leg (#5) with the pre-drilled hole on the bottom of the footboard (#4) and tighten by hands until secured. Repeat for the other footboard leg (#5).

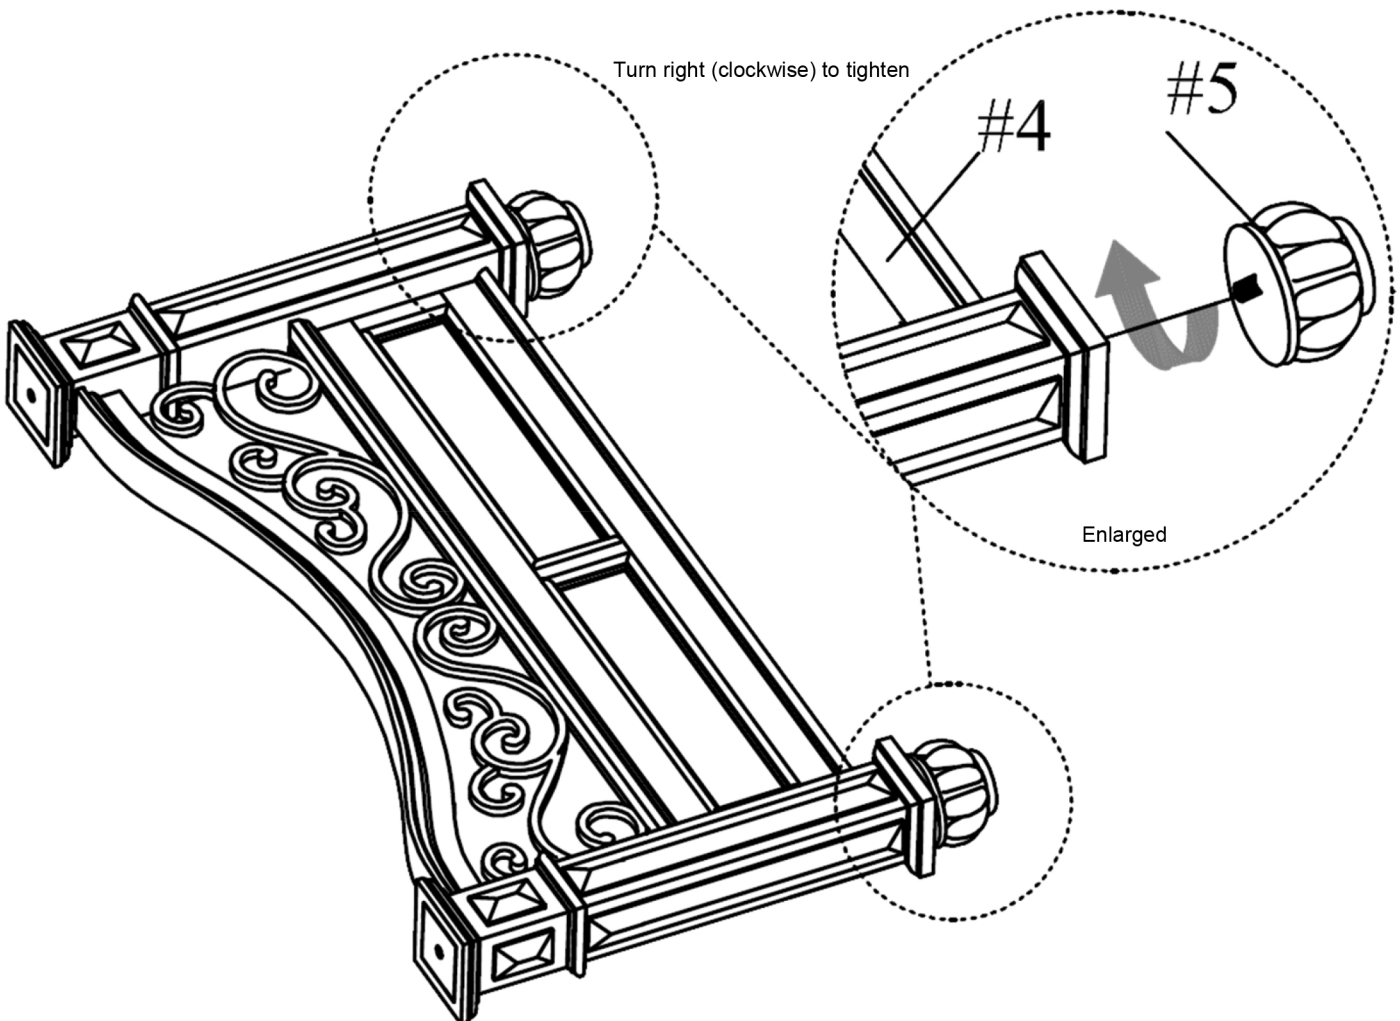



- I. Align the left and right headboard posts (#1 & #2) with the headboard (#3).
- II. Prepare 6 bolt assemblies by inserting FIRST the lock washer (#B) onto the bolt (#A) and then the flat washer (#C) onto the SAME bolt (#A), in that order.
- III. Insert two bolt assemblies through the top holes of the headboard (#3) and secure those bolts using the Allen wrench (#D) to lock them in with the left and right headboard posts (#1-#2).
- IV. Insert 4 bolt assemblies through the bottom holes of the headboard (#3) and secure those bolts using the Allen wrench (#D) to lock them in with the left and right headboard posts (#1-#2).
- V. Insert 4 screws (#F) through middle area of the headboard (#3) and secure those screws using a Phillips screwdriver to lock them in with the left and right headboard posts (#1-#2).

#A x 6 pcs
#B x 6 pcs
#C x 6 pcs
#F x 4 pcs

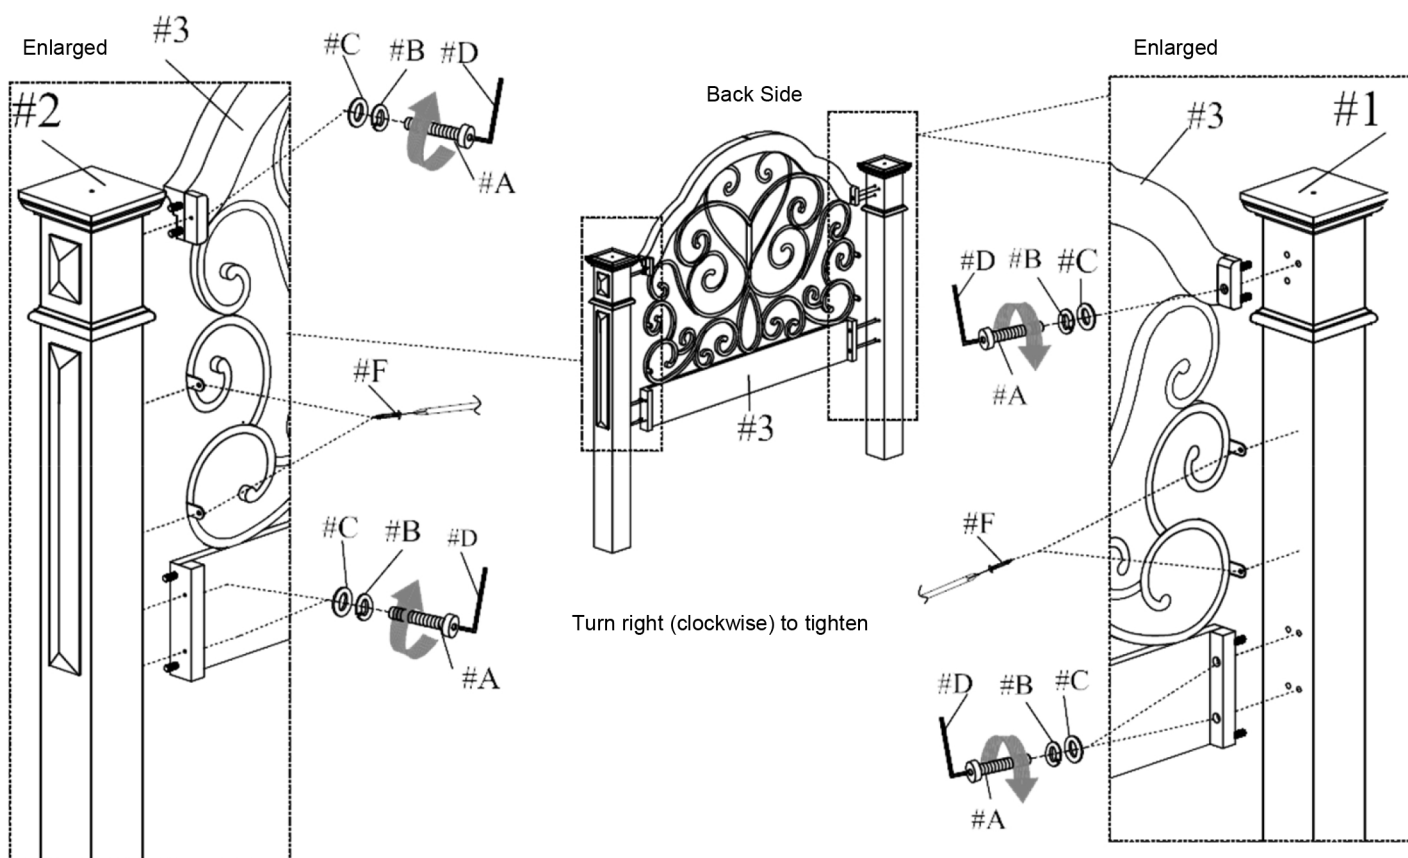


Note: Right and left are determined by standing in FRONT of the completed bed.




- I. Prepare 4 bolt assemblies by inserting FIRST the lock washer (#B) onto the bolt (#G) and then the flat washer (#C) onto the SAME bolt (#G), in that order.
- II. Insert the 4 bolt assemblies through the pre-drilled holes of the left and right headboard posts (#1-#2) using the Allen wrench (#D) but expose about ½" of the bolt's thread in order to mount the side rail brackets onto the bolts (#G).
- III. Mount the brackets of the side rails (#6) onto the bolts of the left and right headboard posts (#1 & #2). Make sure both the washers are in the front of the brackets. Use the Allen wrench (#D) to tighten the bolts with the two parts together.
- IV. Repeat the process I through III above to assemble the other ends of the side rails (#6) onto the footboard (#4).

#B x 8 pcs
#C x 8 pcs
#G x 8 pcs

Turn right (clockwise) to tighten

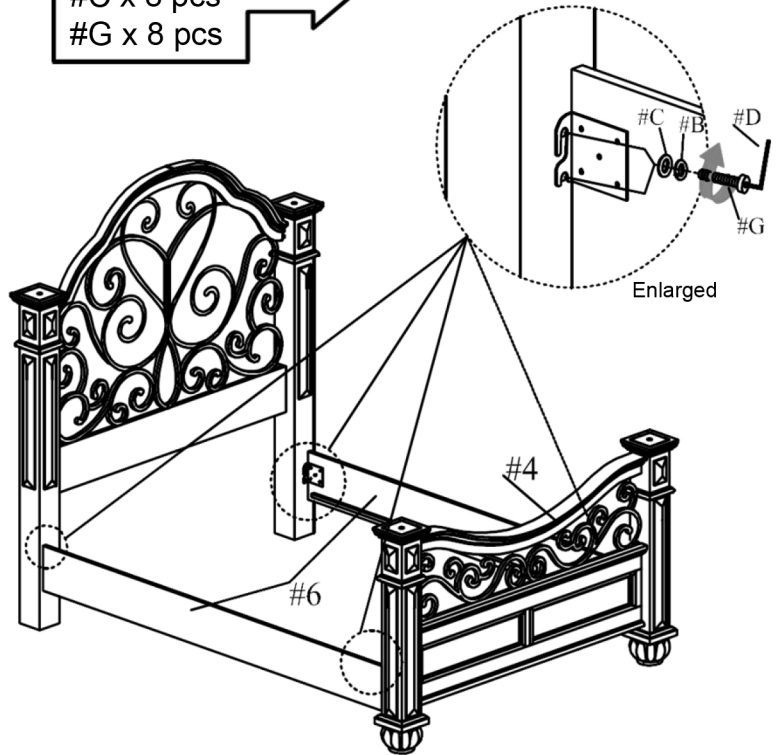


Align the threaded end of the finials (#7) with the pre-drilled holes on top of the left and right headboard posts (#1 & #2) AND on top of the footboard (#4) and tighten by hand until secured.

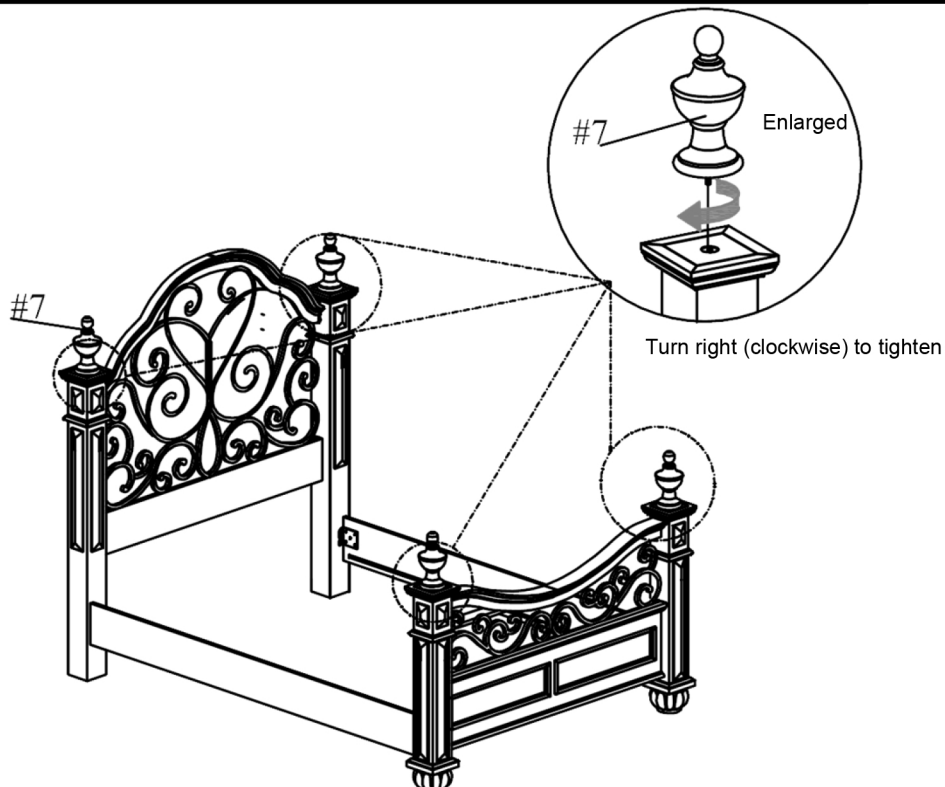




Each slat (#8) has two slat support legs (#9). Align the threaded end of the slat support legs (#9) with the pre-drilled holes of the slat (#8) and tighten by hand until secured. Repeat the process for attaching the remaining 6 slat support legs (#9) onto the slats (#8).

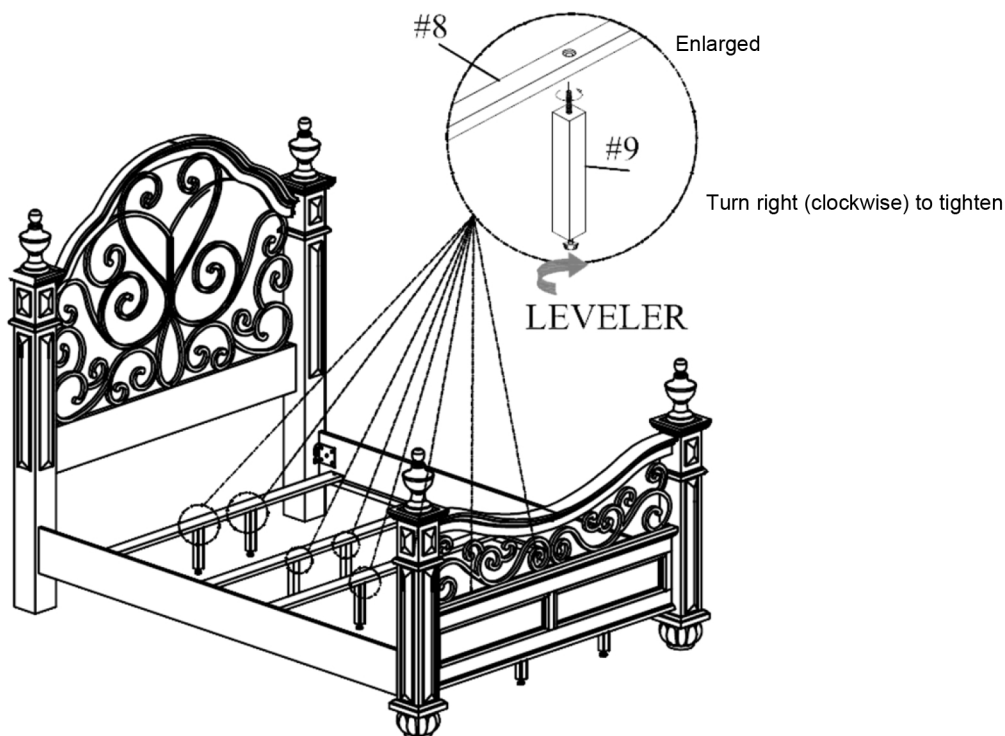

Align the ends of the 4 assembled slat (#8) with the pre-drilled holes on each side of the side rails (#6). Secure two wood screws (#E) for each slat (#8) by using a Phillips screwdriver to tighten them down to the side rails (#6).

#E x 8 pcs

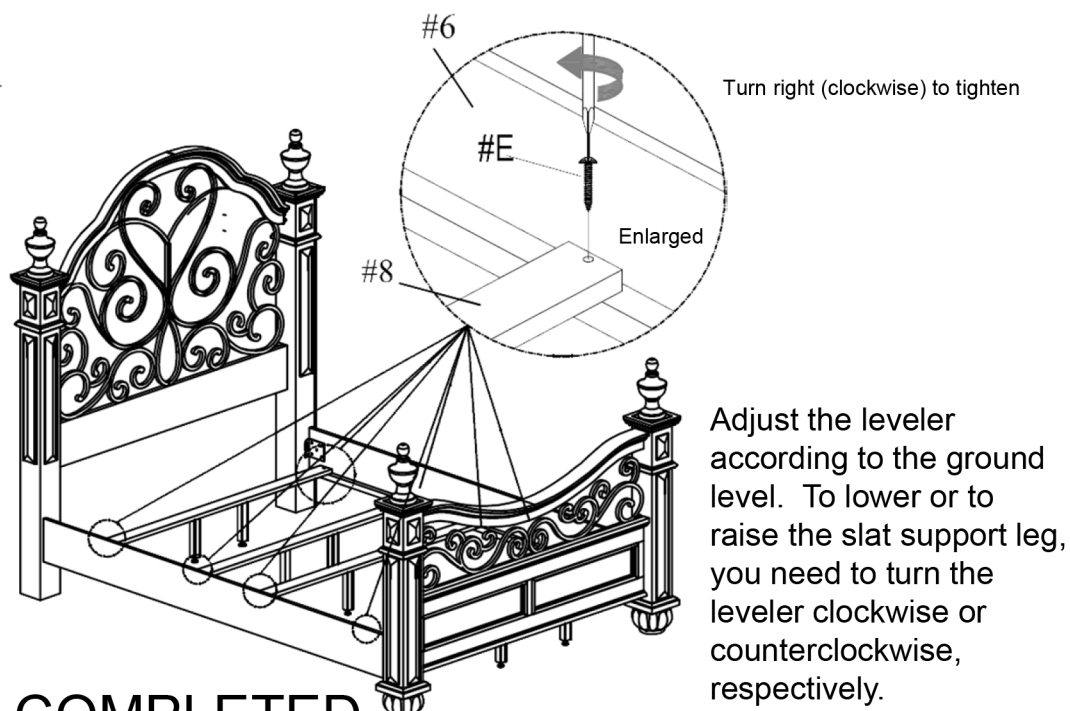

ASSEMBLY IS COMPLETED